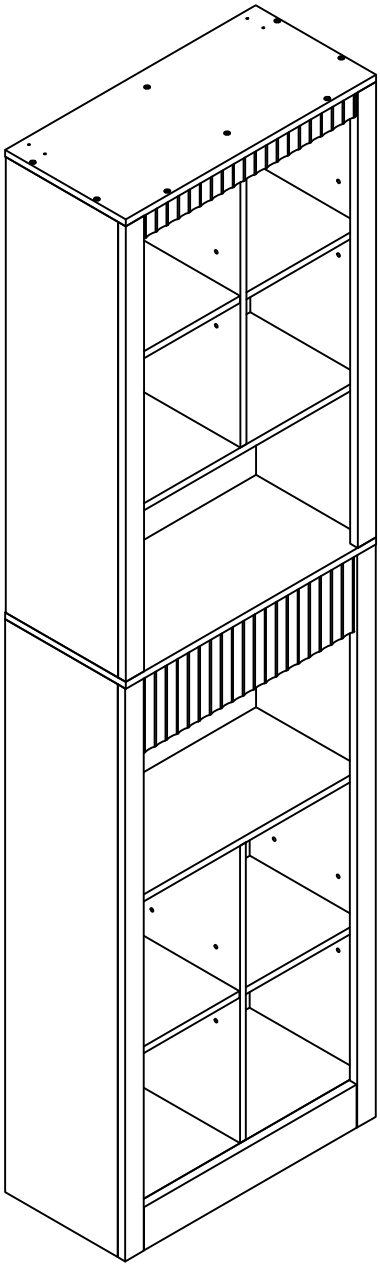
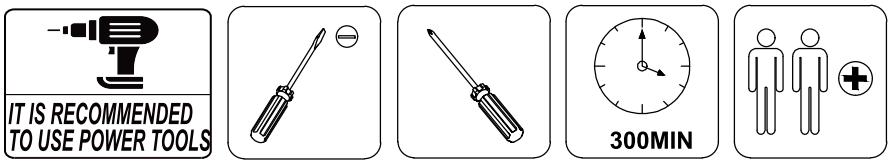
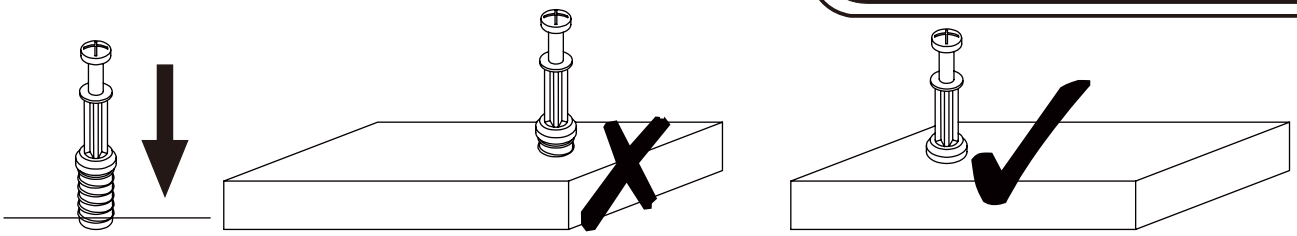
Please note: Items cannot be returned once assembled

Installation & Assembly

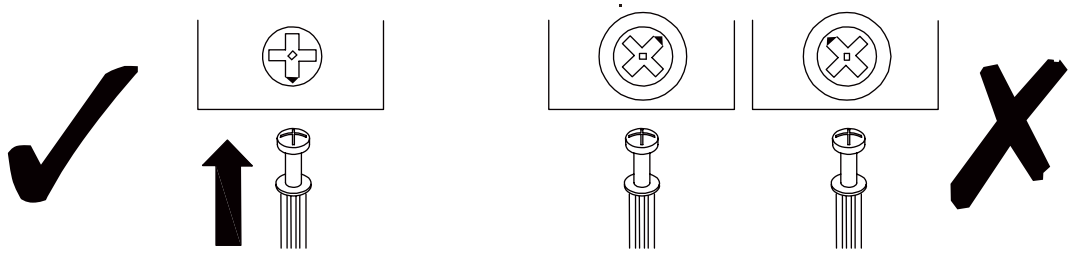




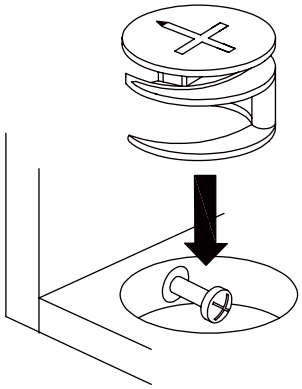
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



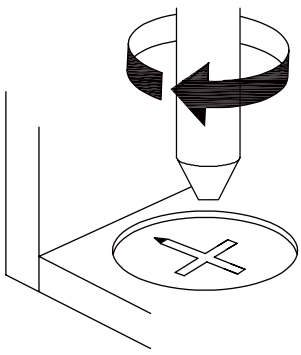
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.



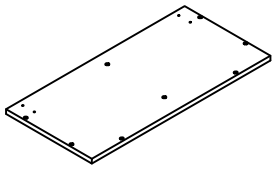

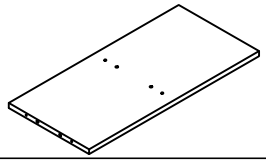
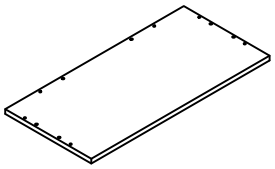
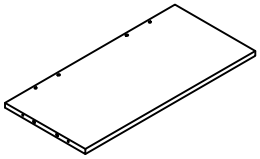
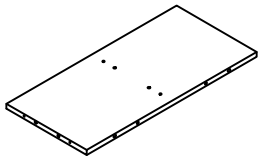
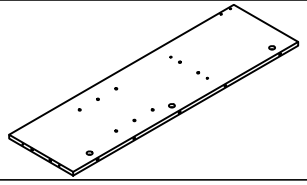
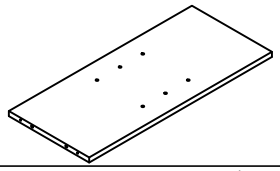
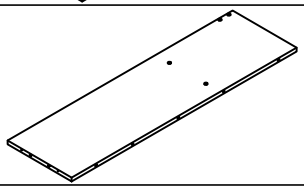
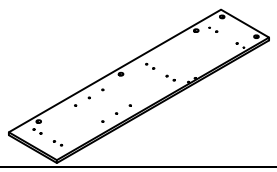
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

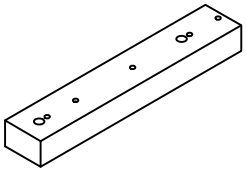
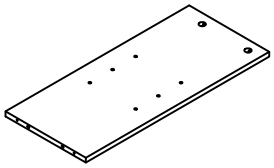
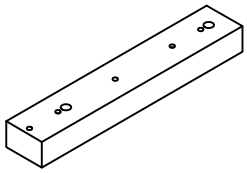
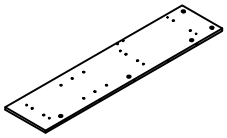
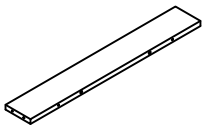

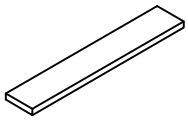
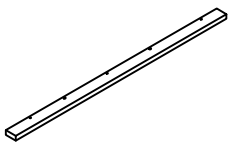
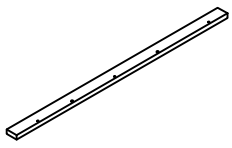
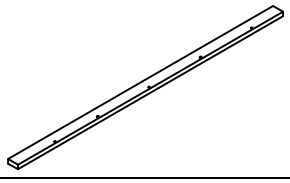


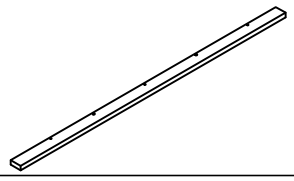
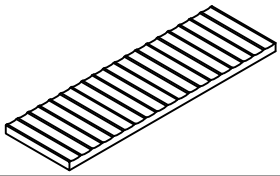
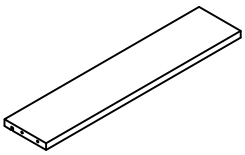
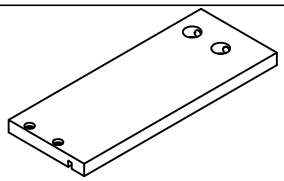
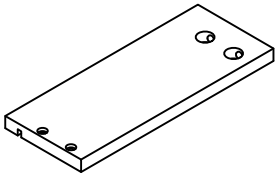
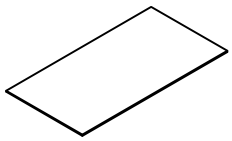
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

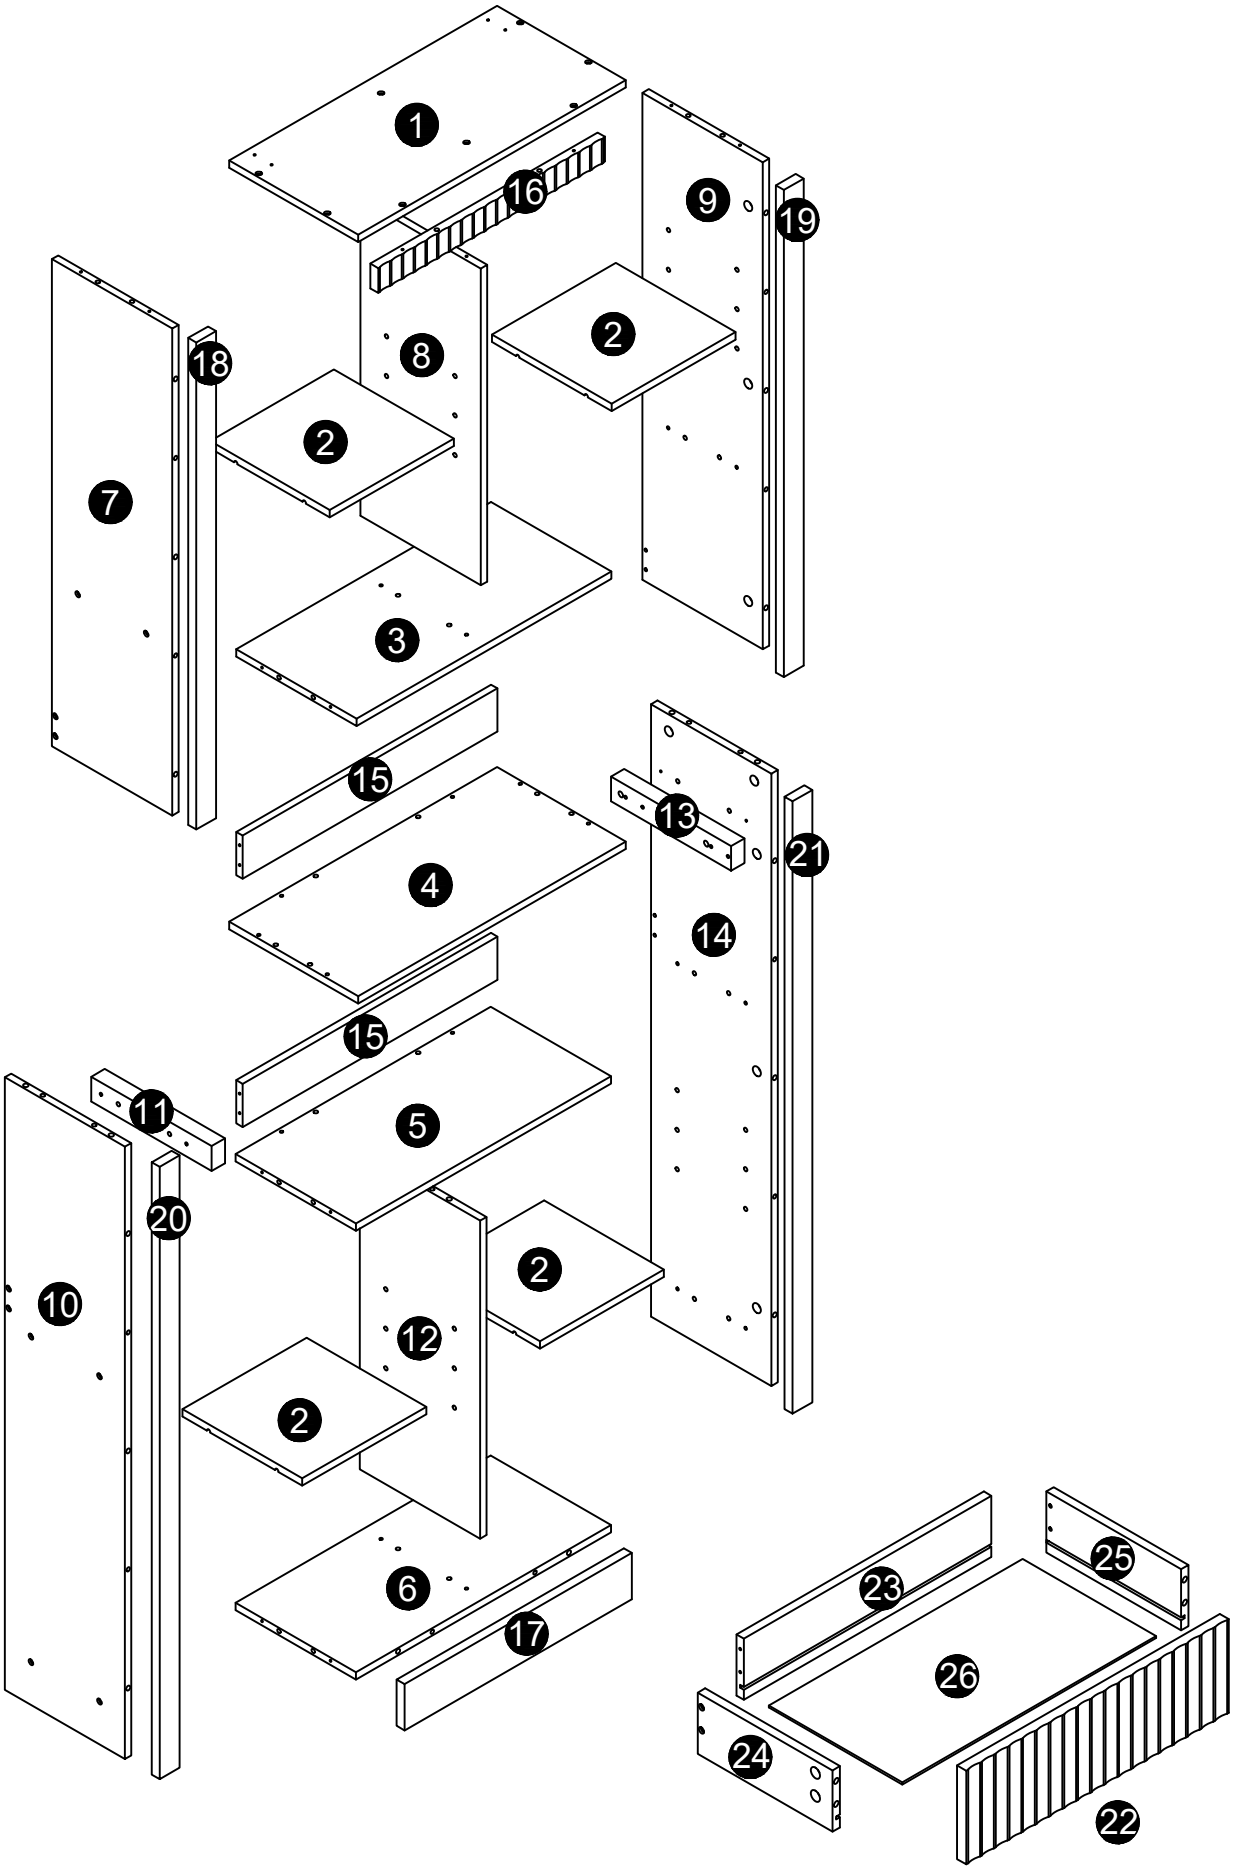


EN_ Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x4	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x2	
⑯		x1	
⑰		x1	
⑱		x1	
⑲		x1	
⑳		x1	

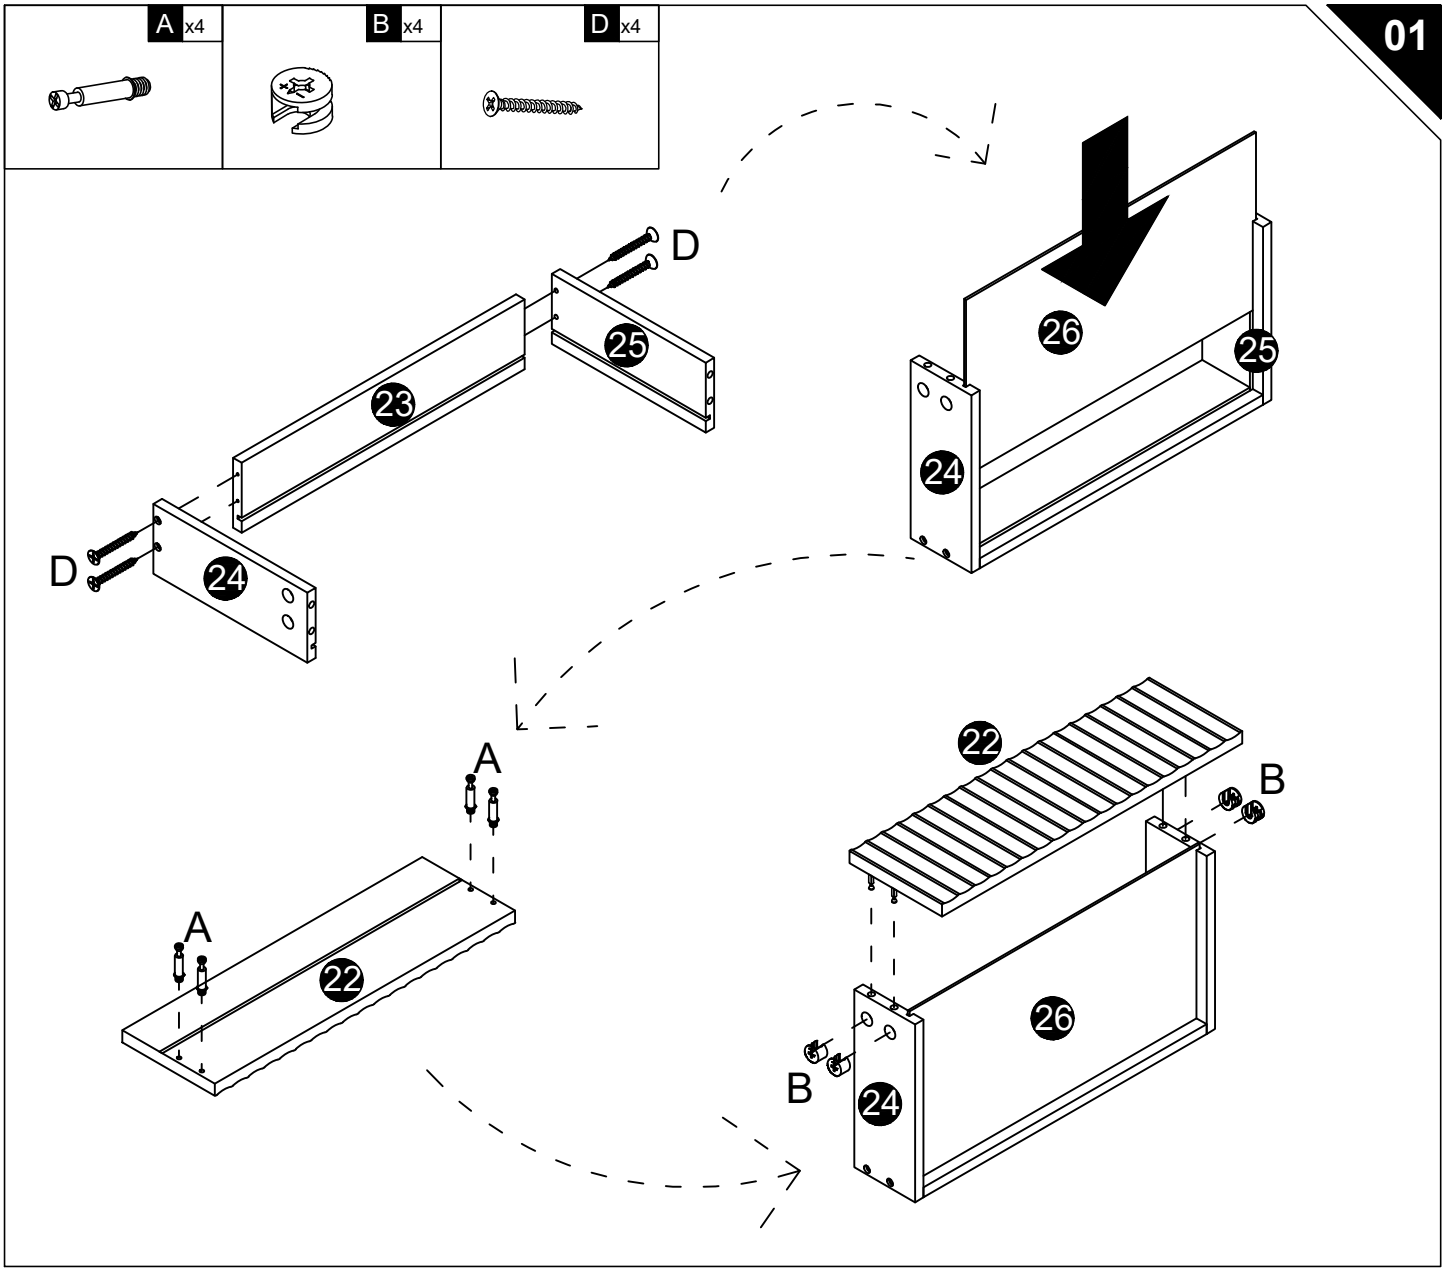
NO.	PARTS	QTY	SPARE
㉑		x1	
㉒		x1	
㉓		x1	
㉔		x1	
㉕		x1	
㉖		x1	


1
16
9
19
2
8
18
2
7
3
15
13
21
4
14
15
11
5
20
2
10
12
2
6
17
25
23
26
24
22

HARDWARE


A x24 Ø6x35mm +2(spare)	B x24 Ø15x10mm +2(spare)	C x52 Ø6x30mm +3(spare)	D x44 Ø4x35mm +3(spare)	E x5 Ø3.5x12mm +1(spare)	F x4 Ø4x30mm
G x1	H x2	I x2 I-1 I-2	J x34 +3(spare)	K x2 Ø6x30mm K-1 K-2	L x16
M x4					

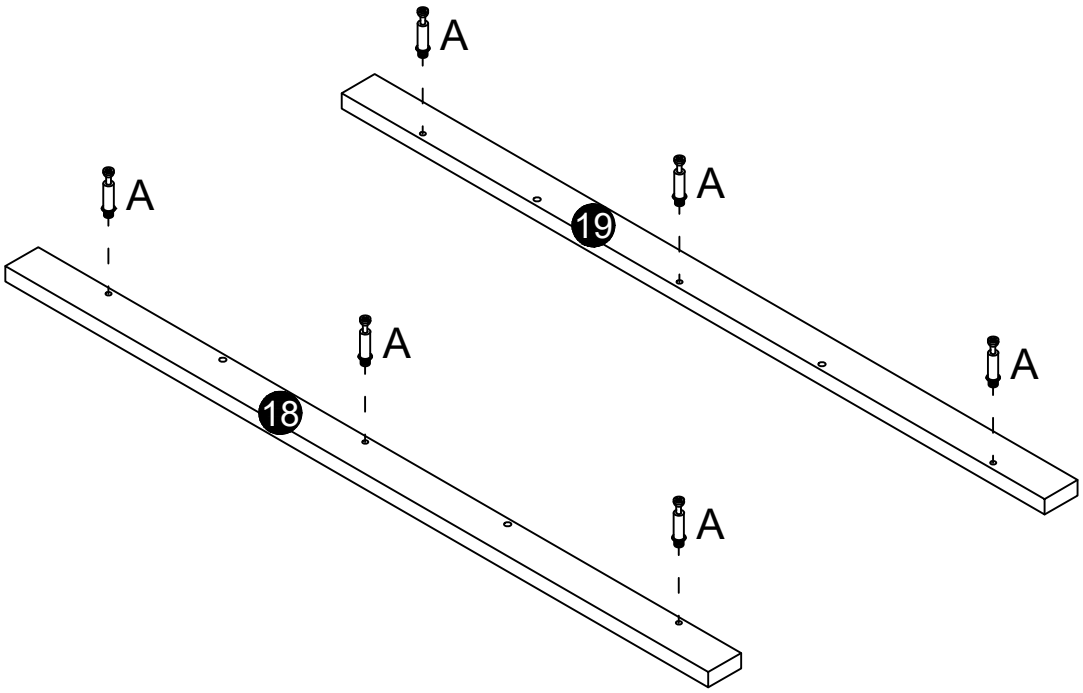
01



02

A x6





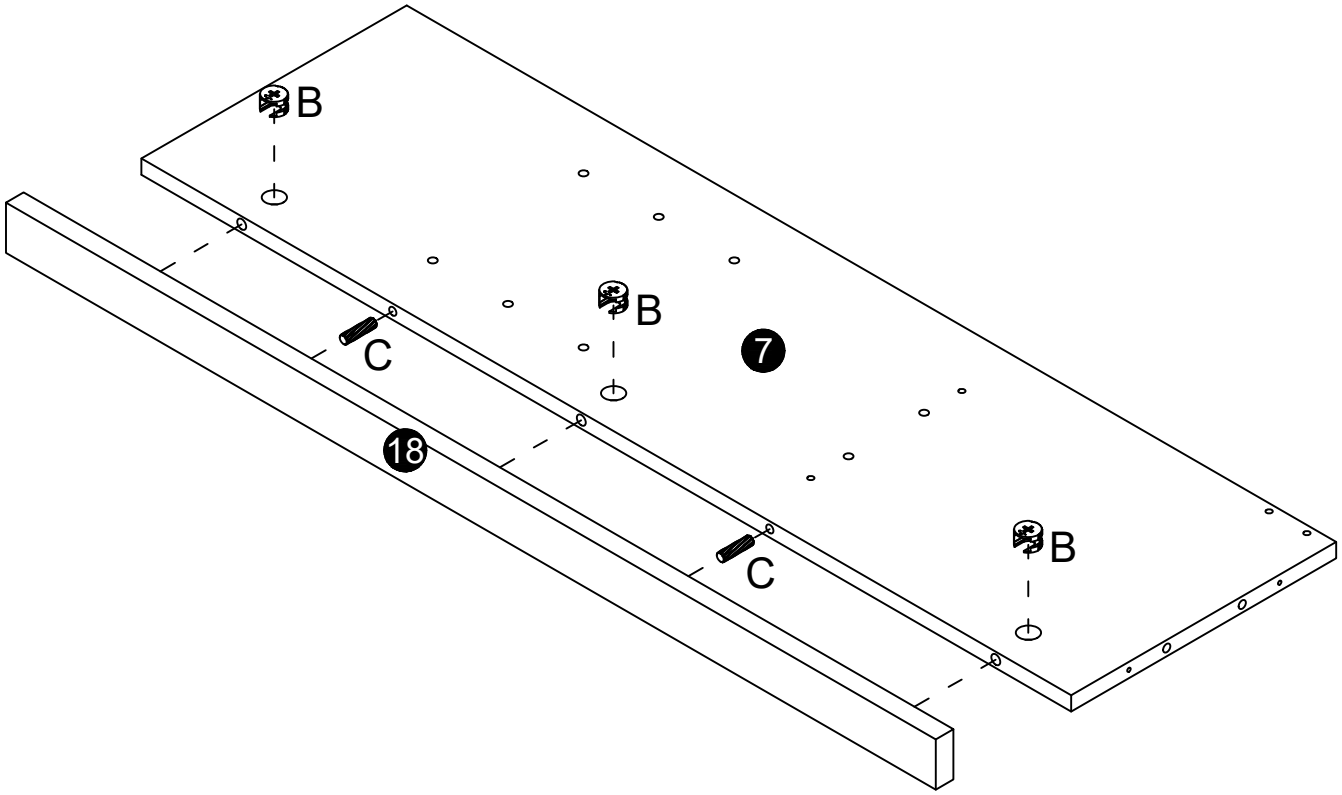
03

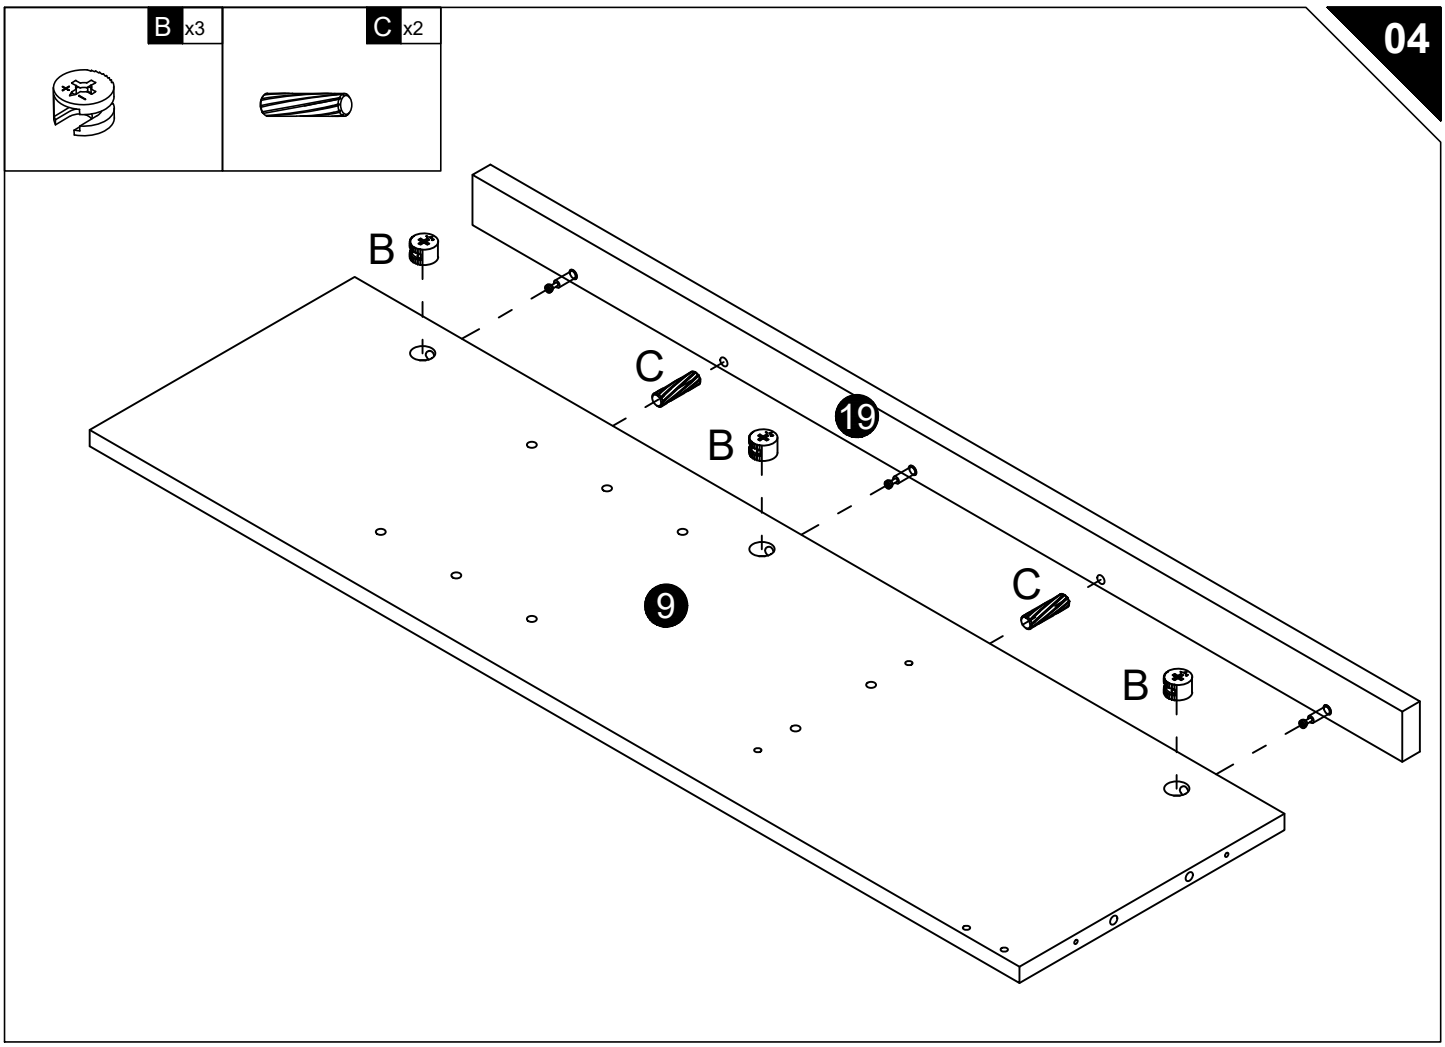
B x3

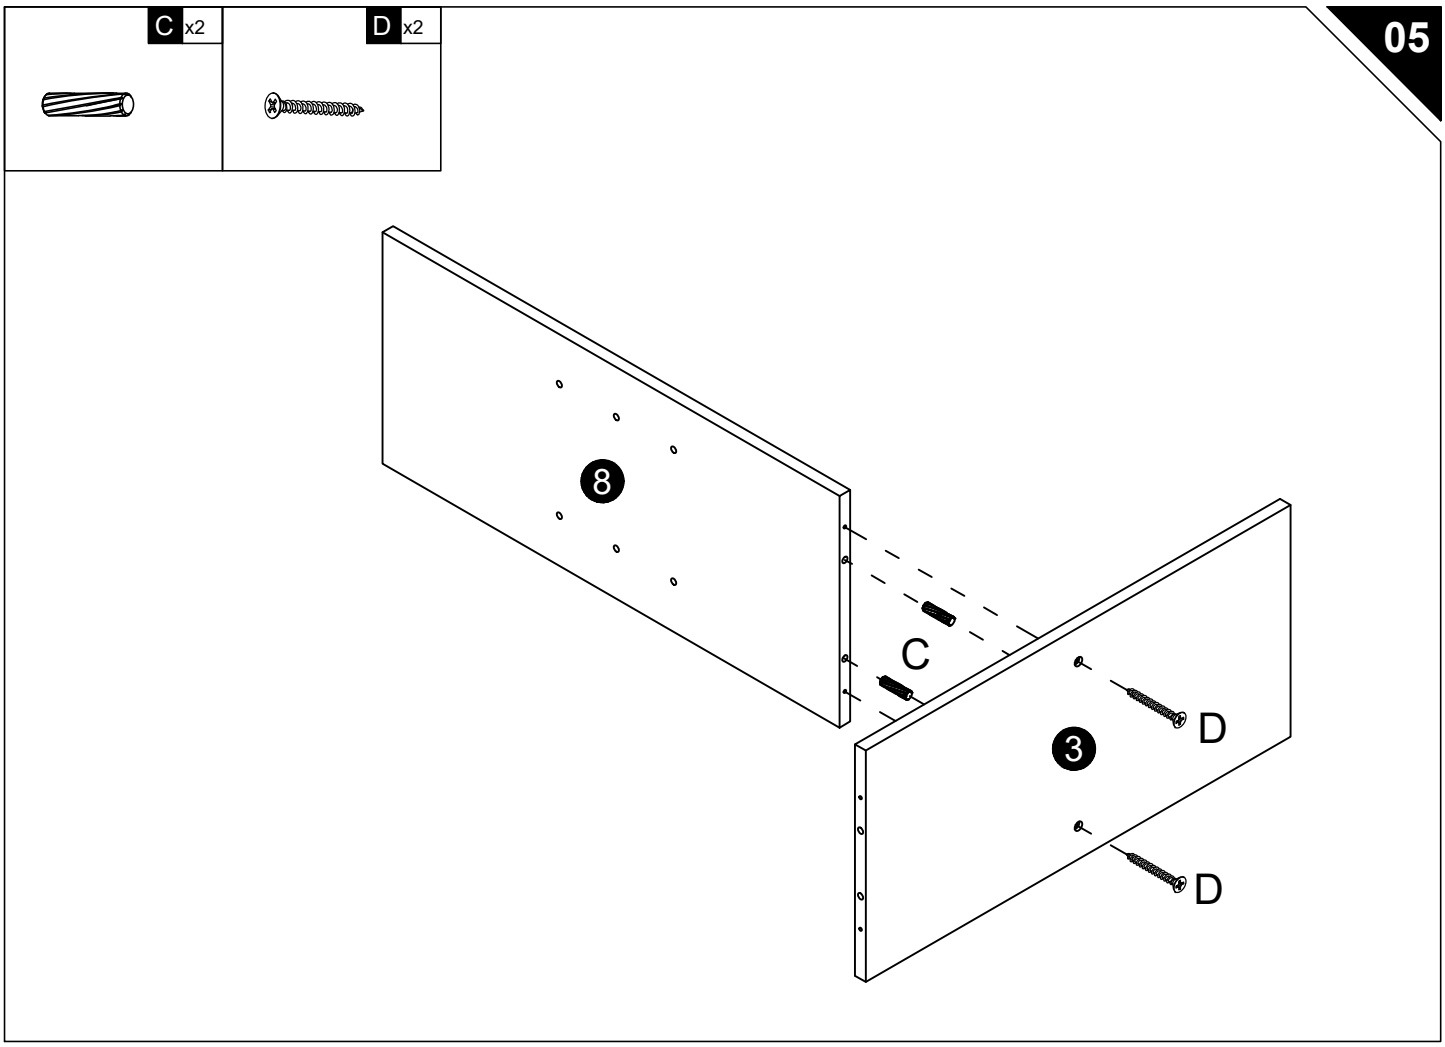


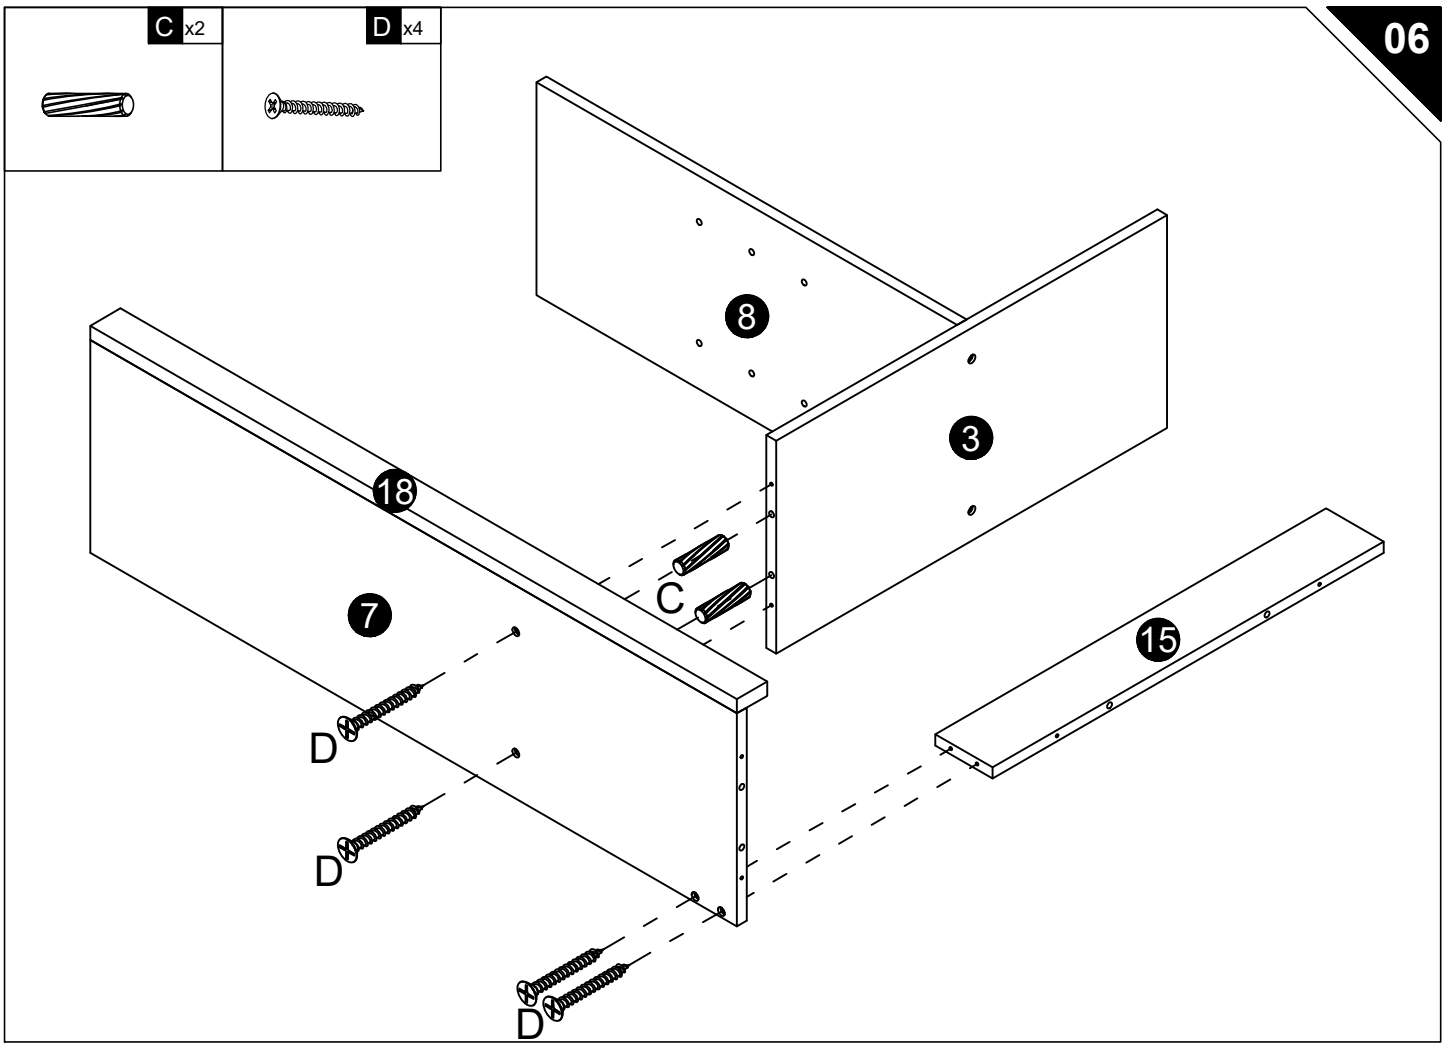
C x2

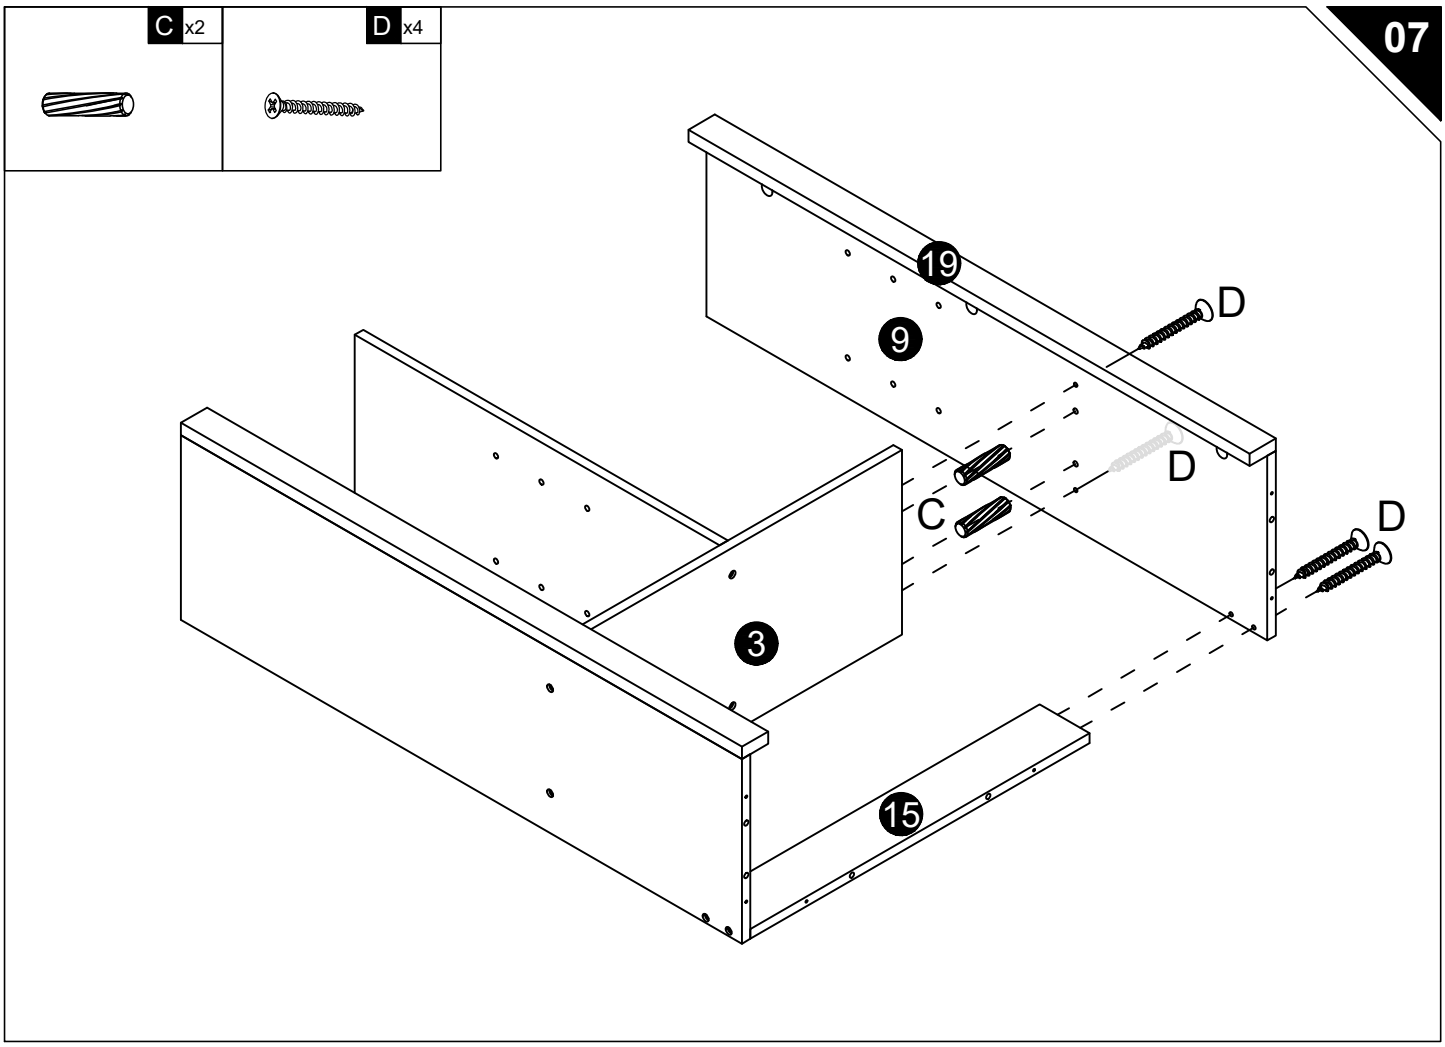





04
B x3
C x2
B
C
19
B
C
9
B


05
C x2
D x2
8
C
D
3
D

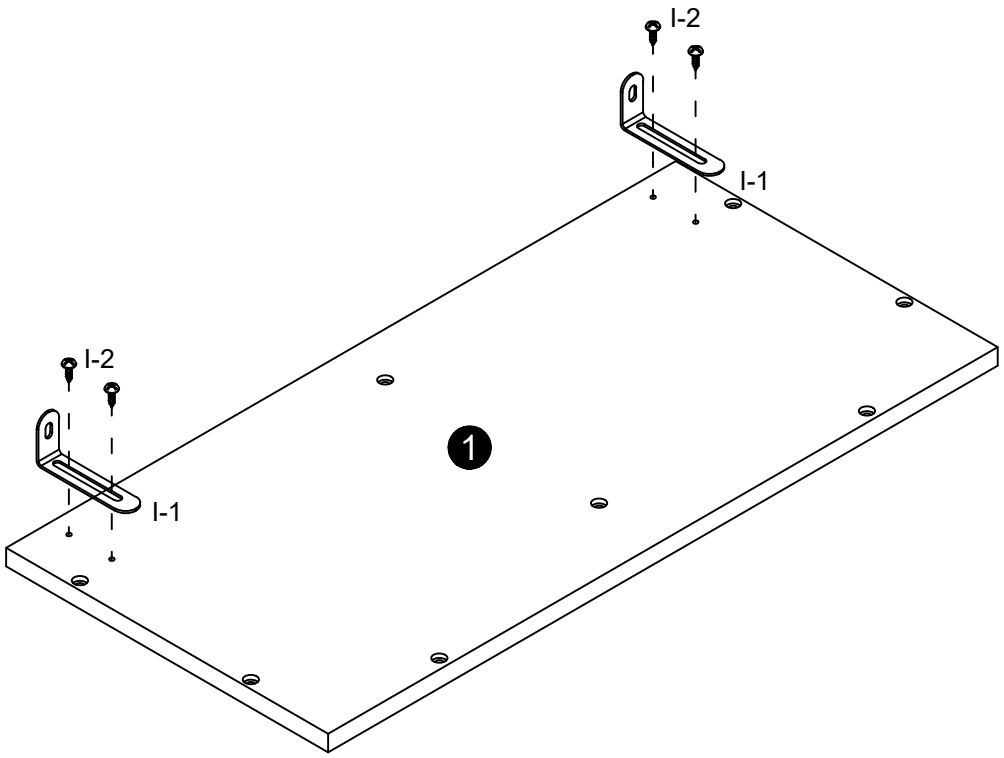

C x2
D x4
06
8
3
18
C
7
15
D
D
D


C x2
D x4
07
19
D
9
D
C
D
3
15

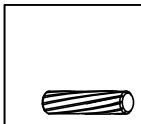
I x2




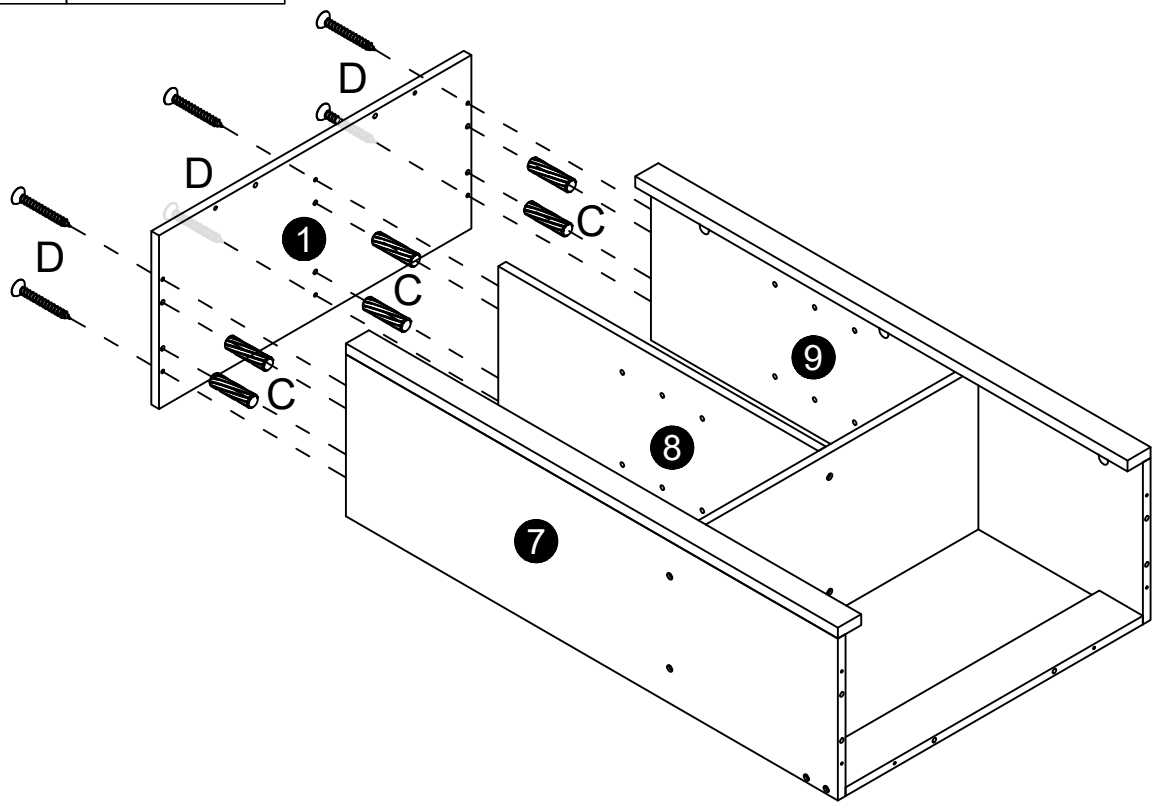
I-1 I-2



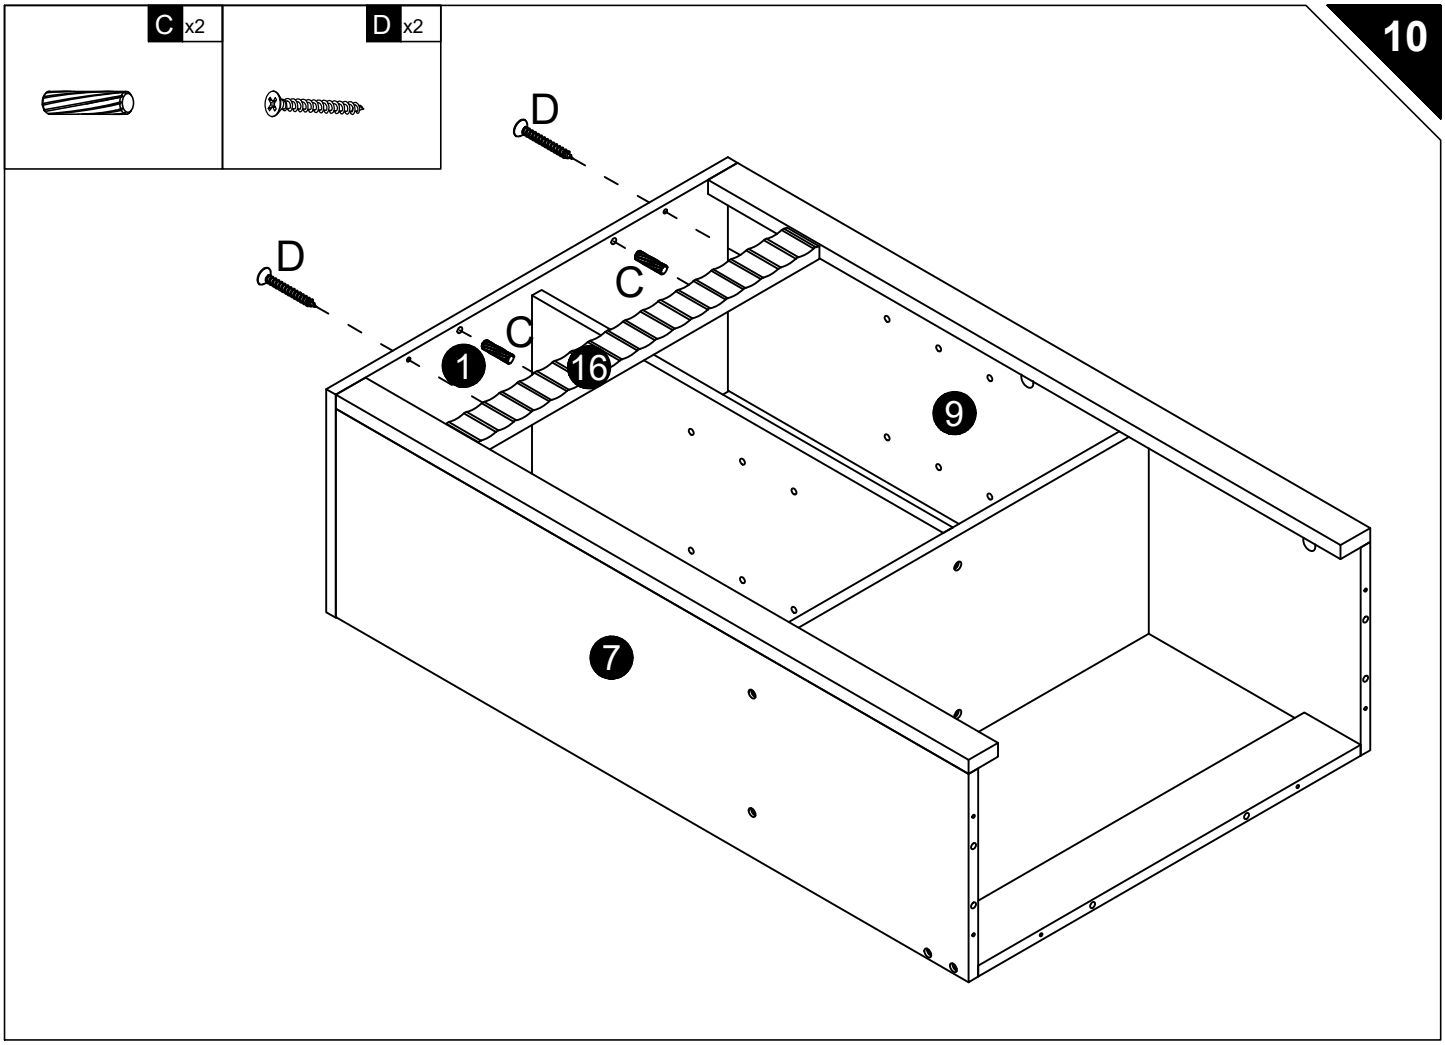
C x6 D x6



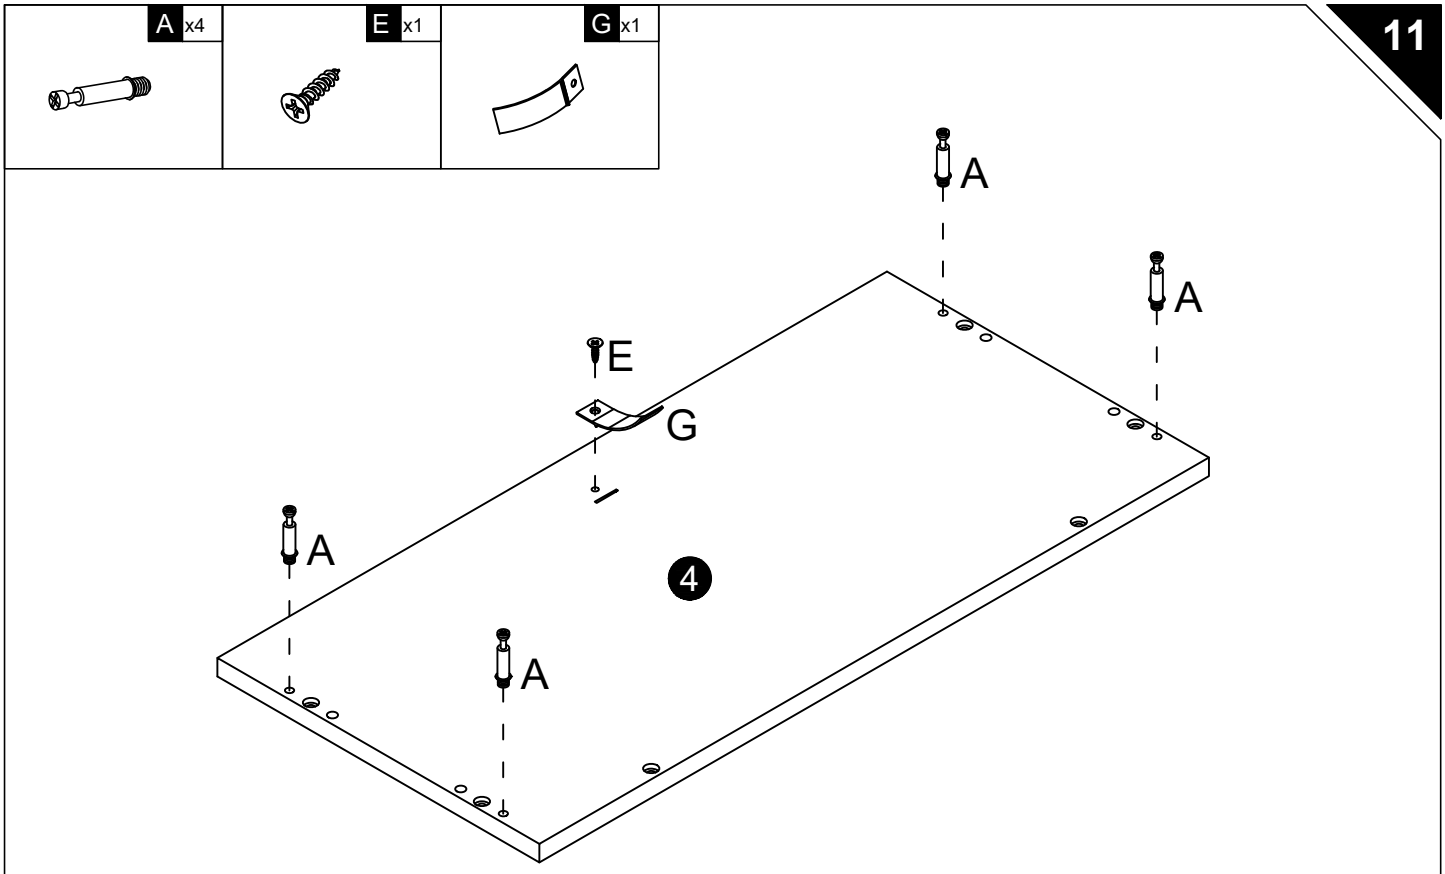




10



11



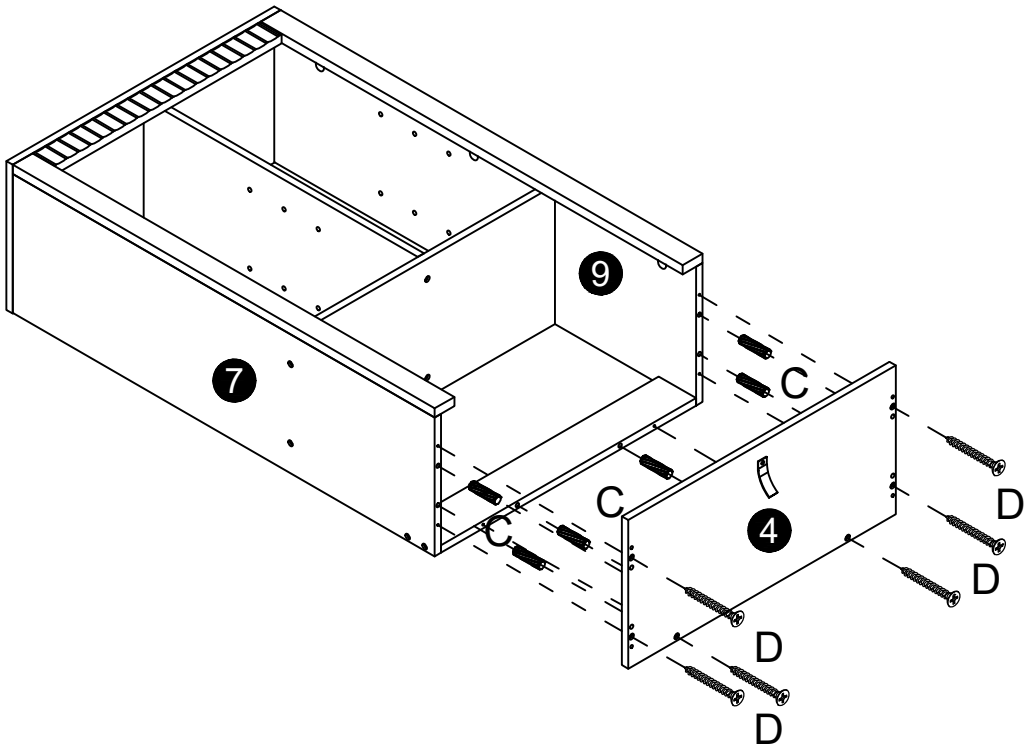
C x6




D x6



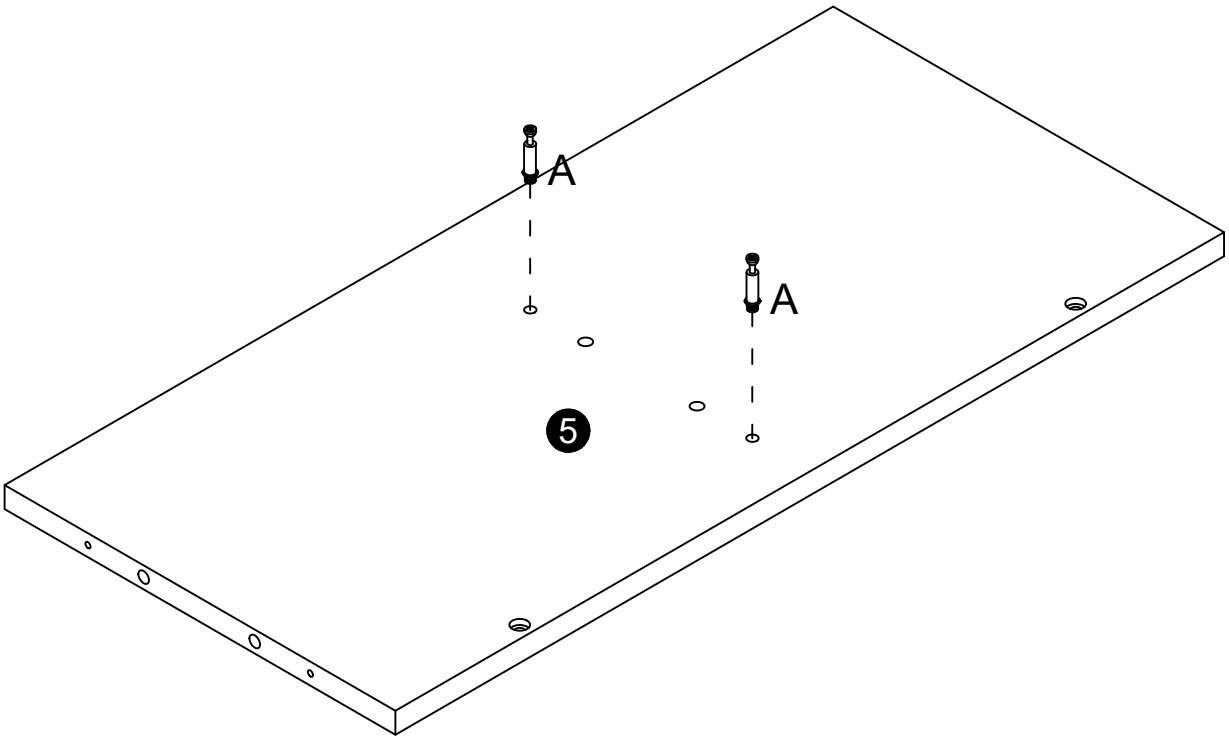
12



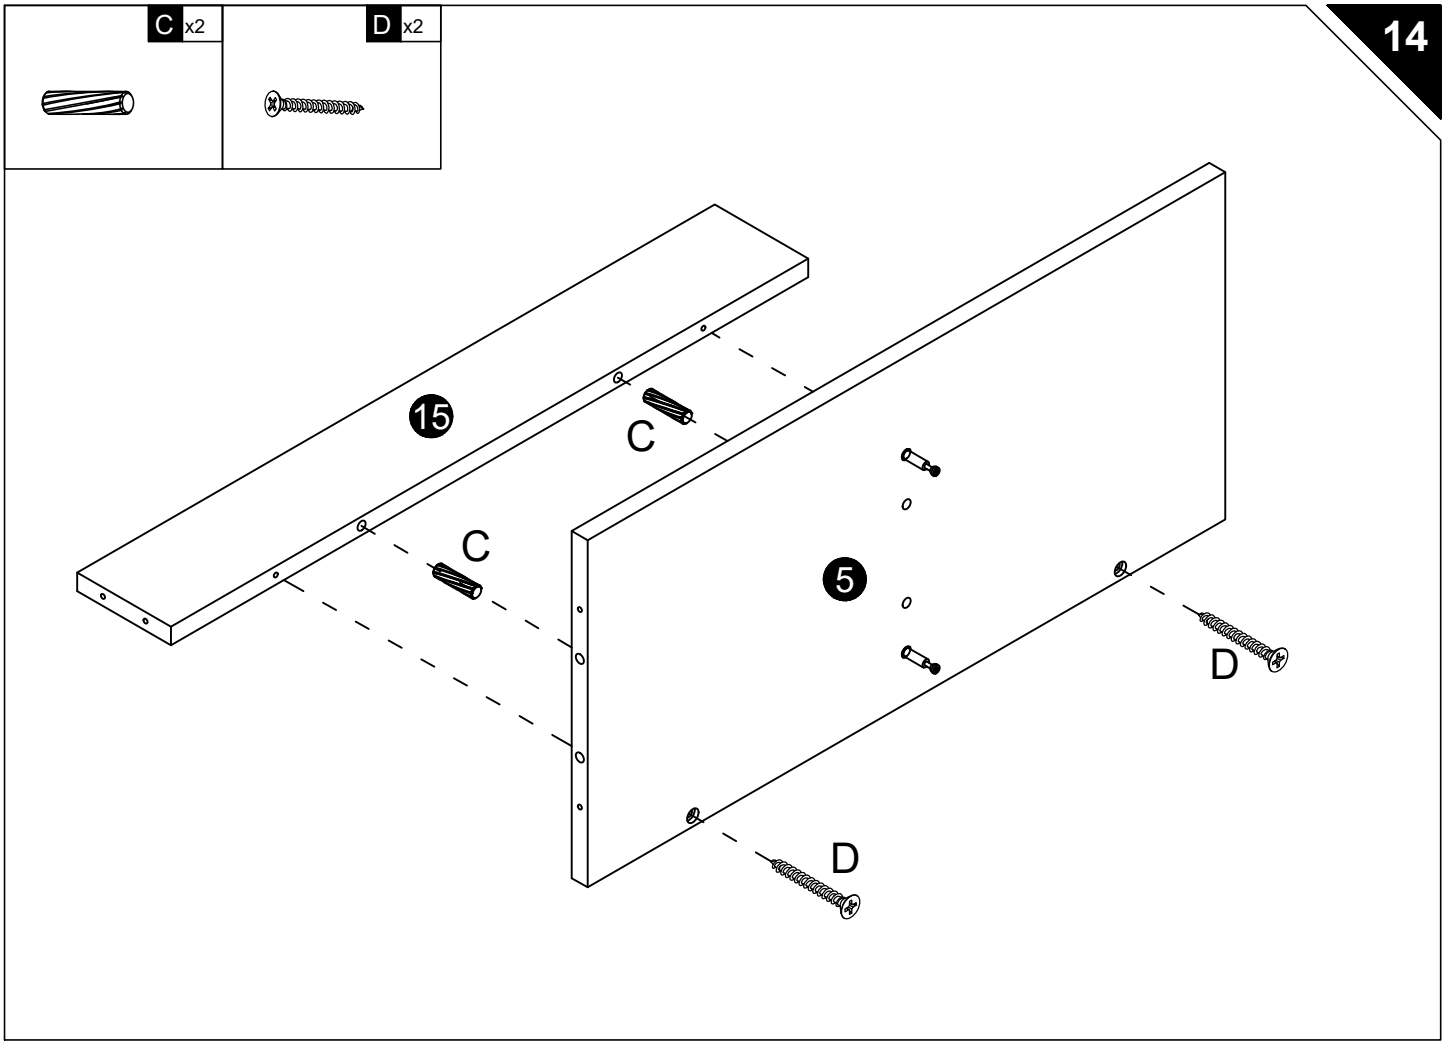
A x2



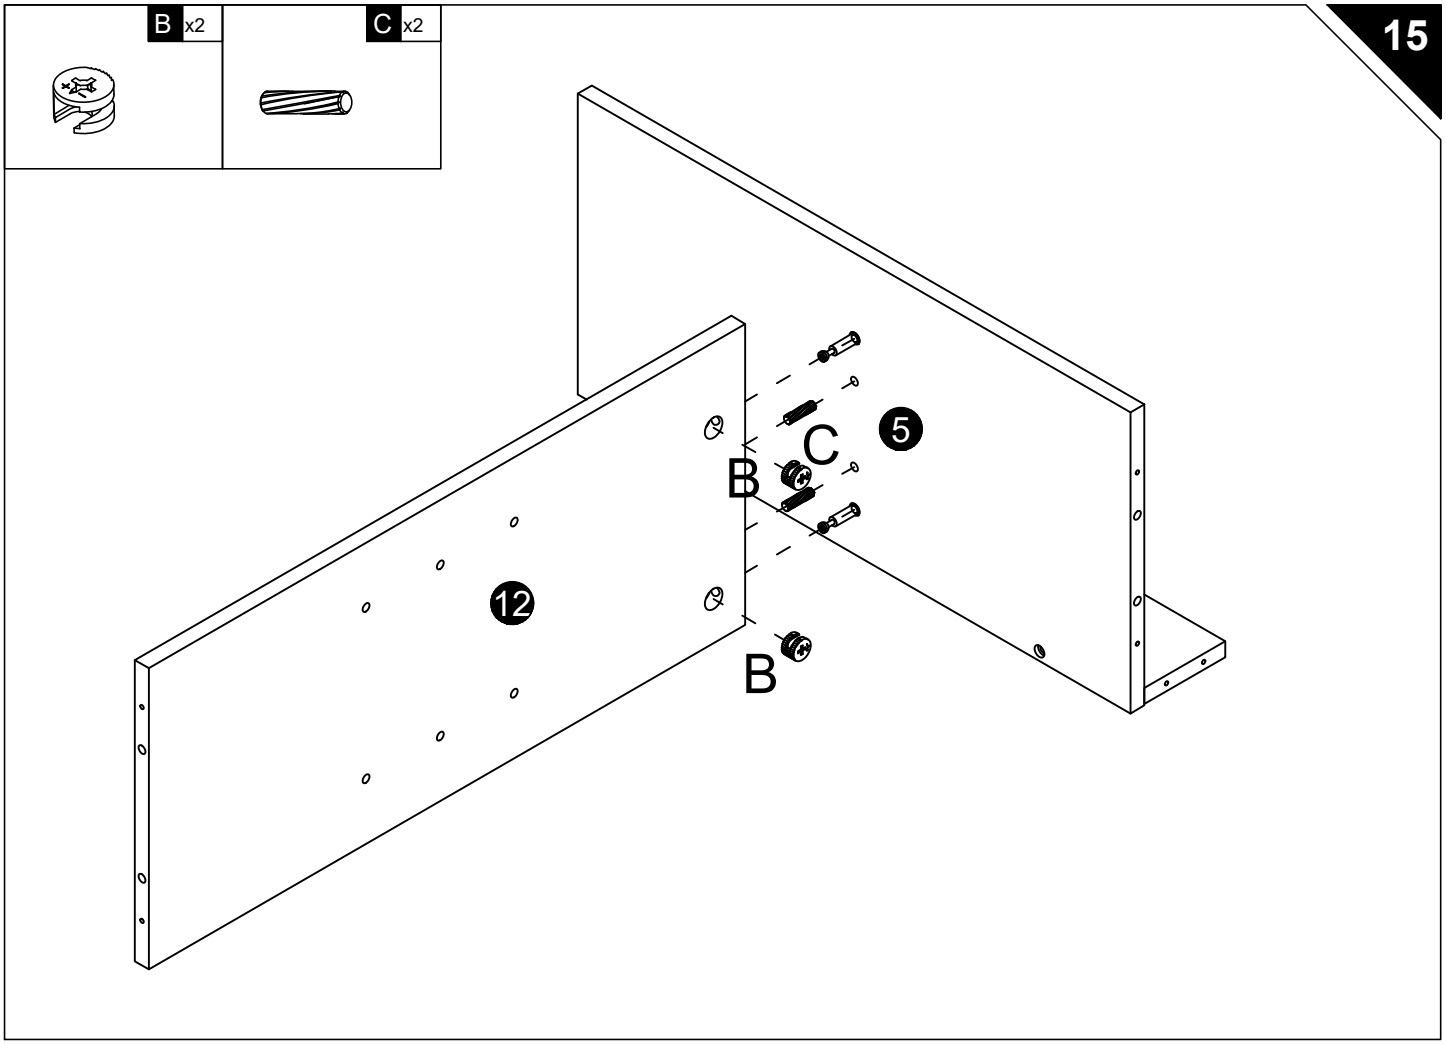
13



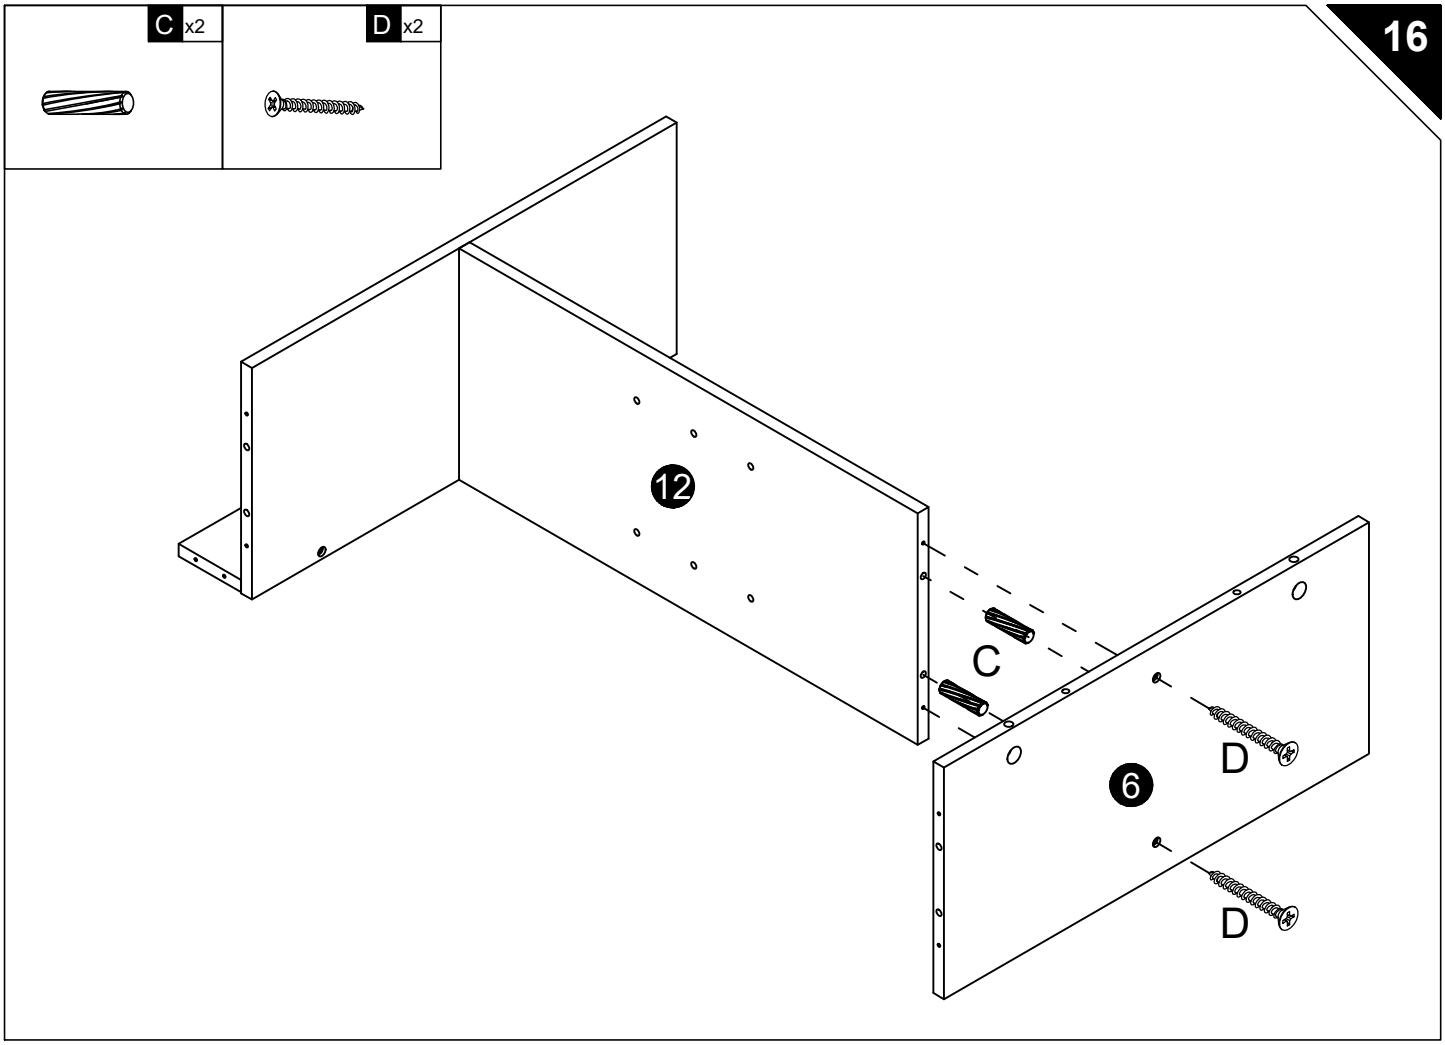
14



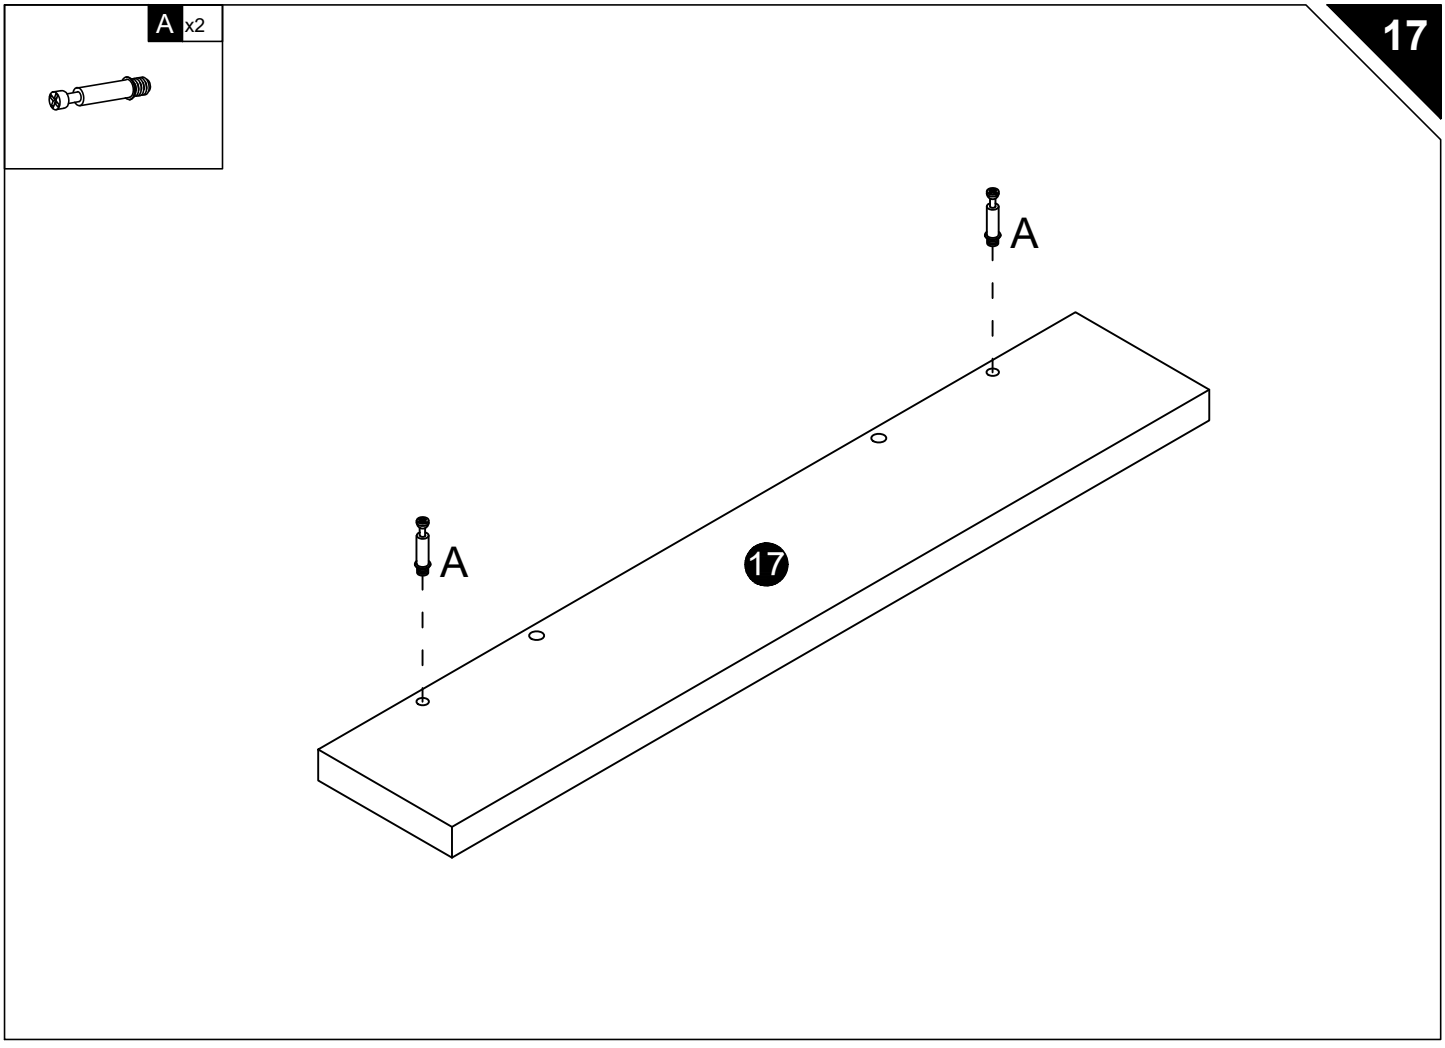
15



16



17

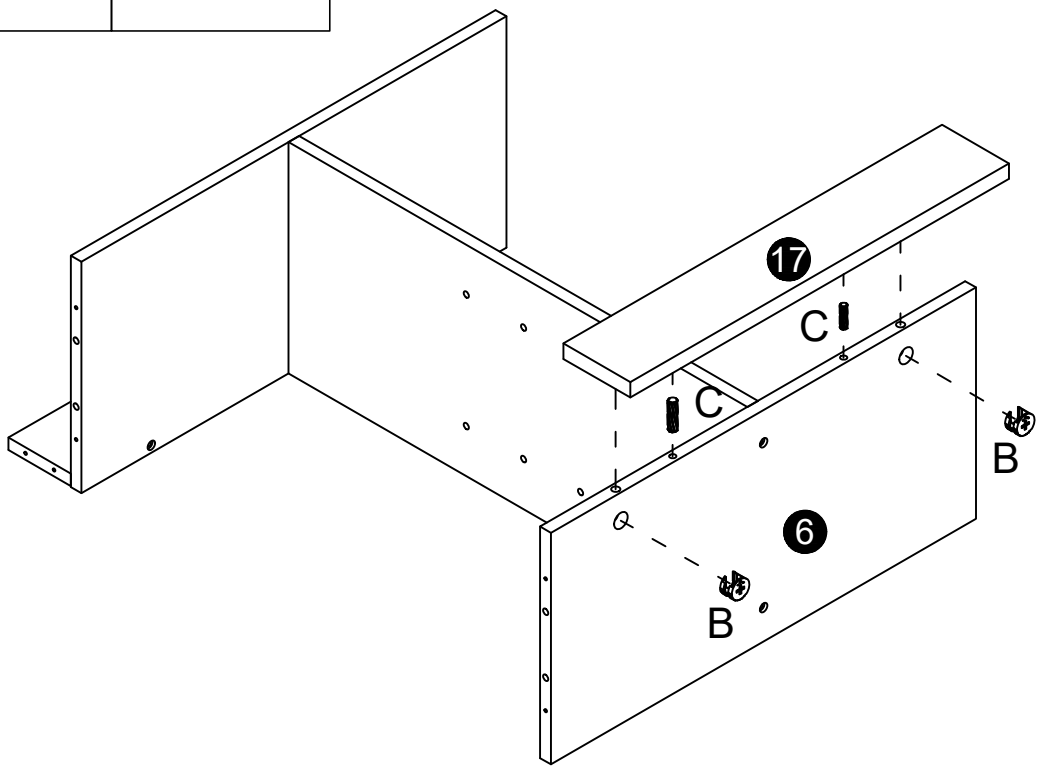


B x2




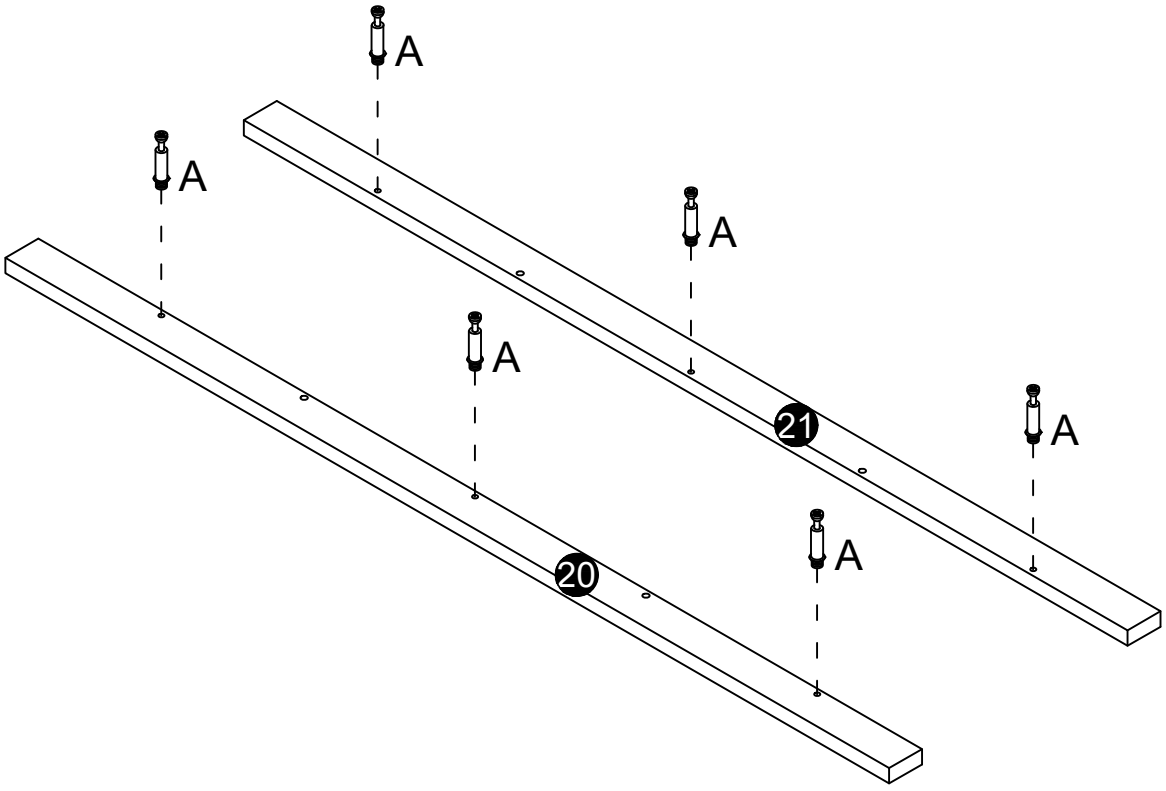
C x2

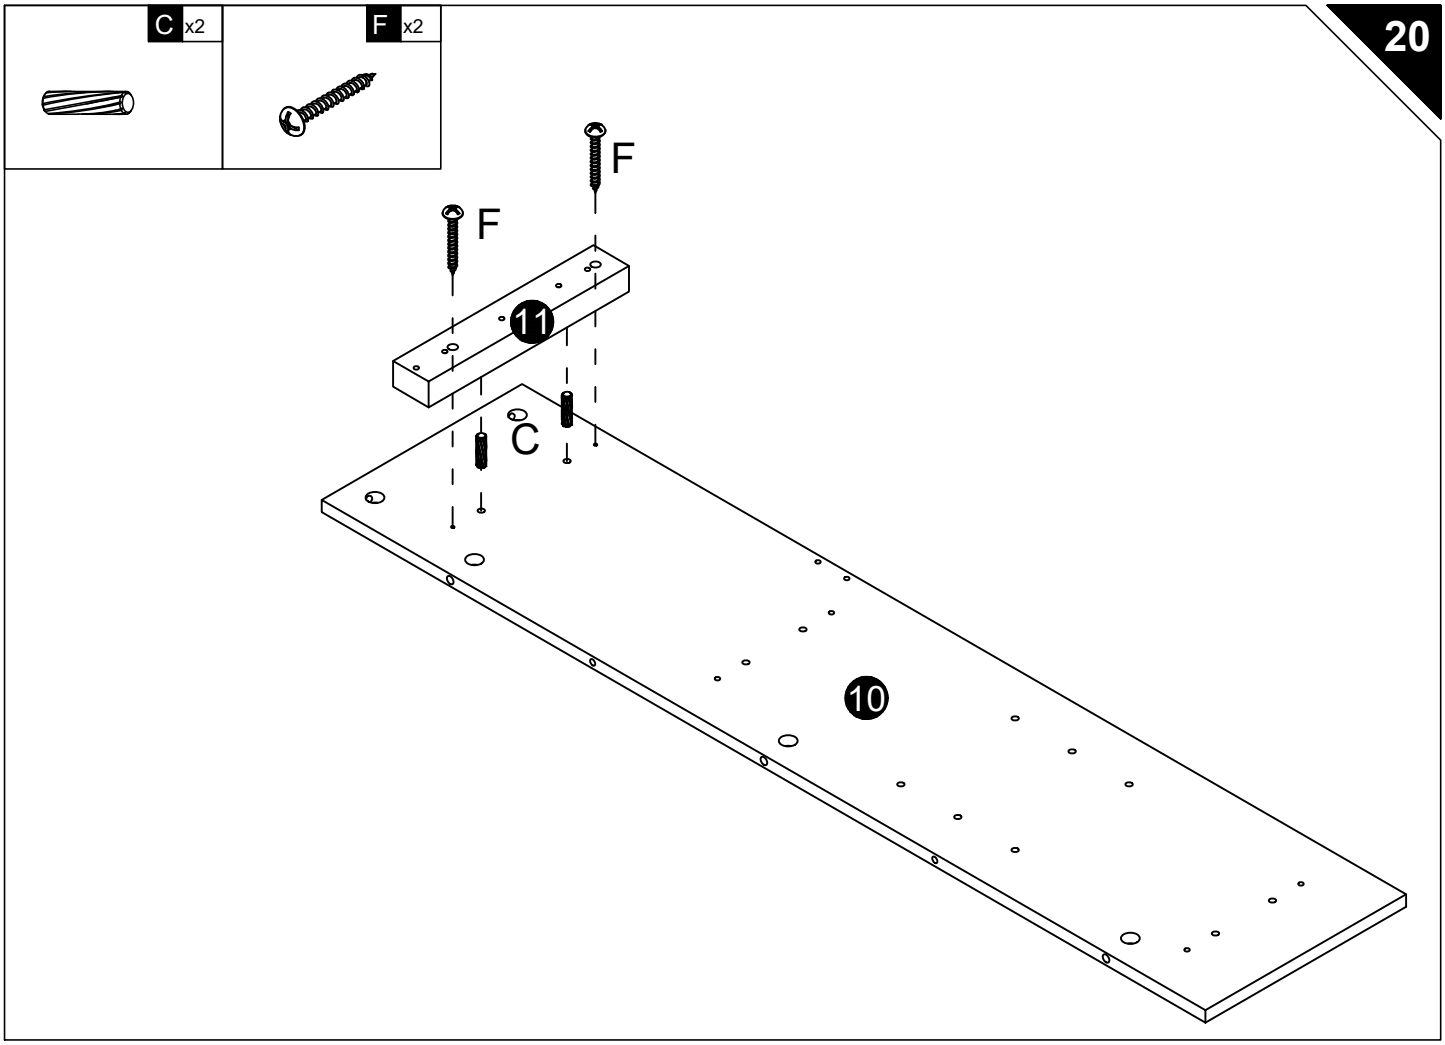


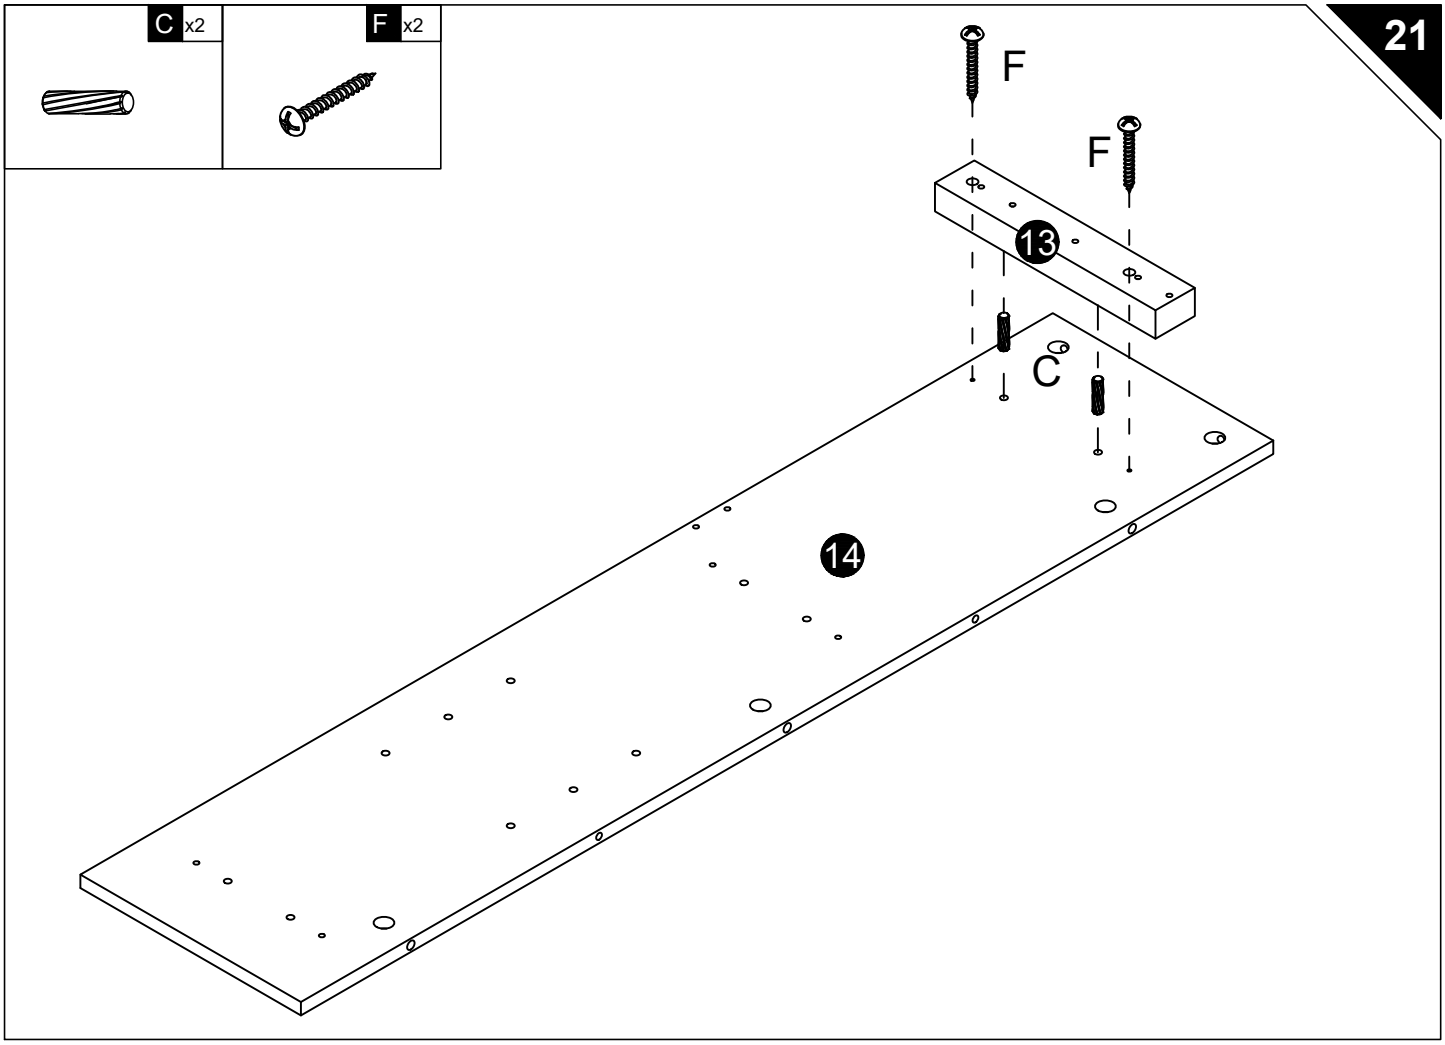


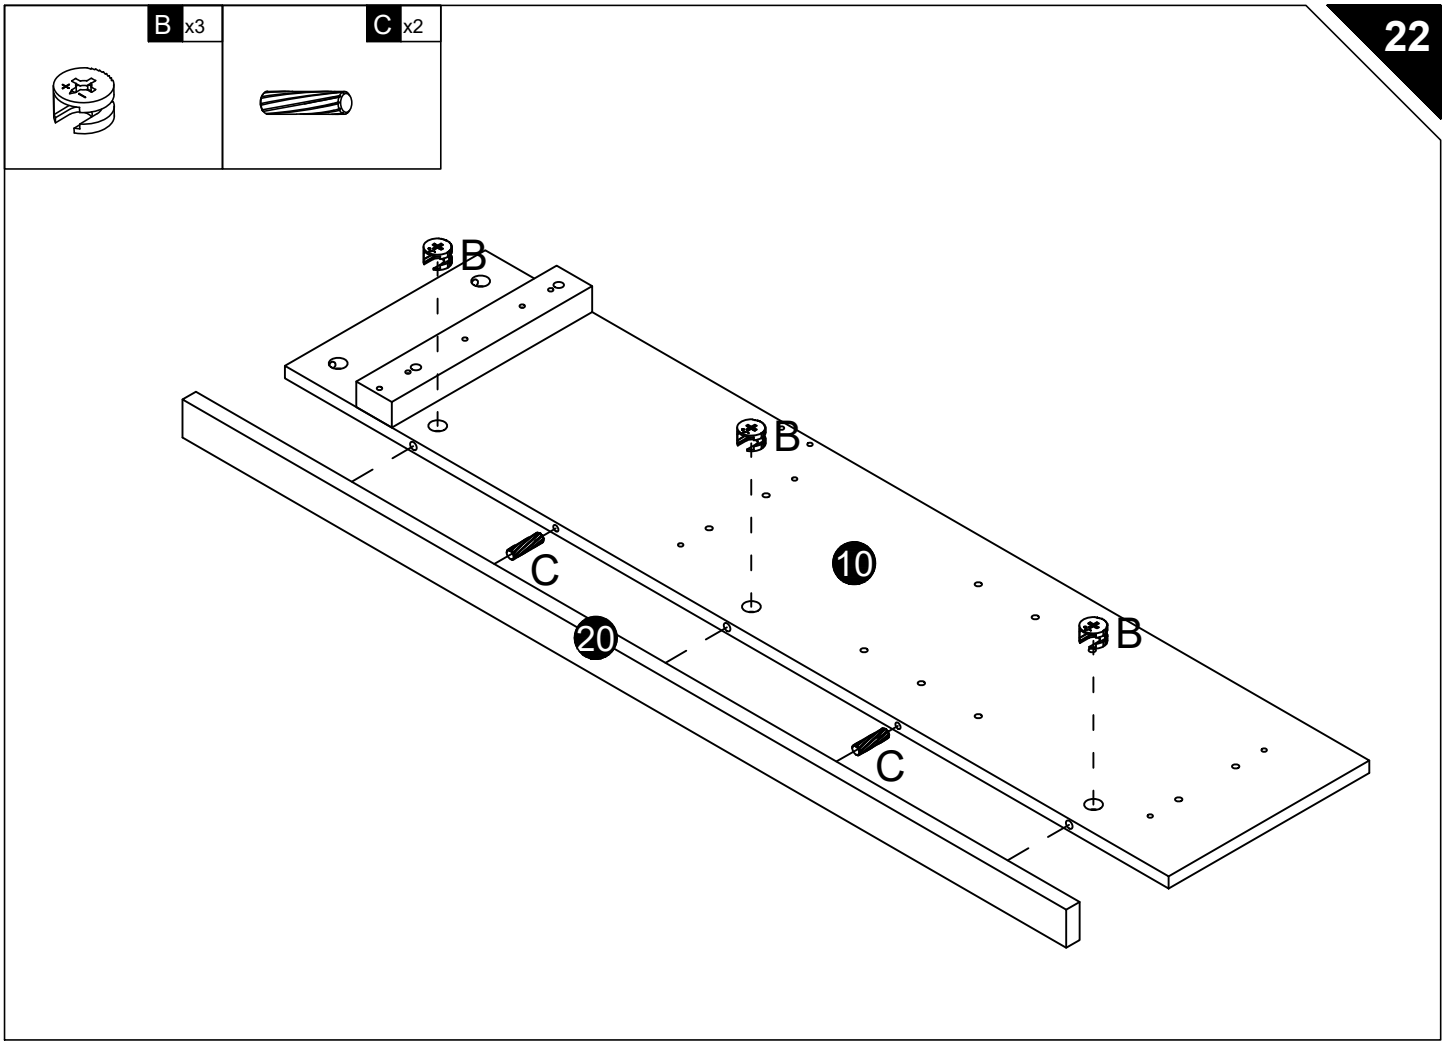
A x6

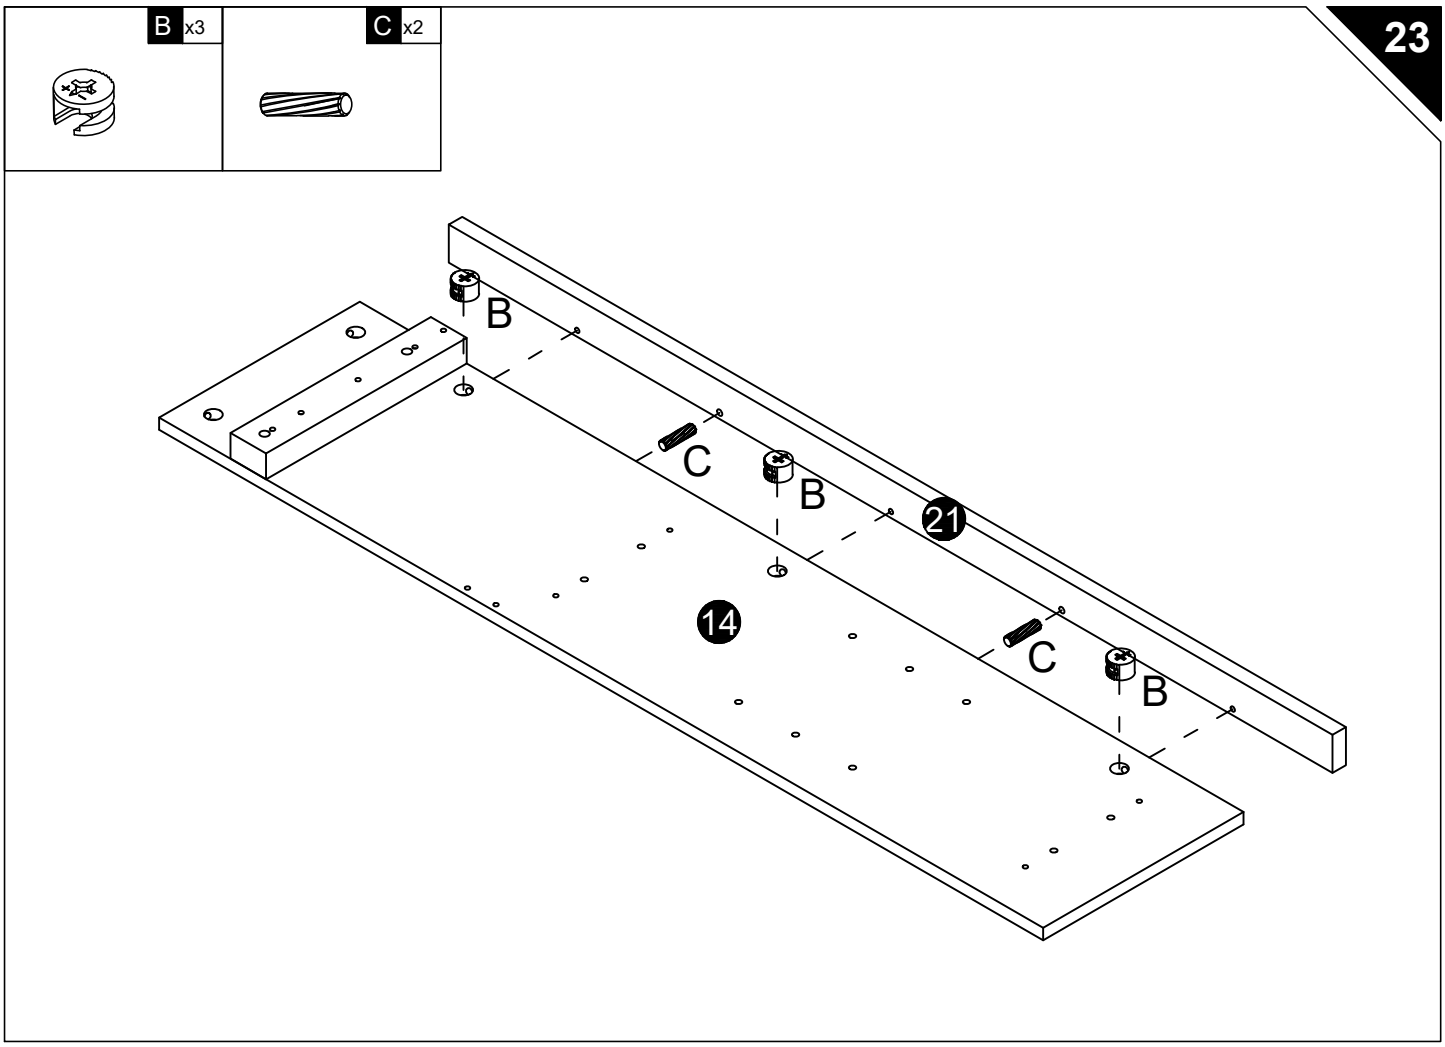


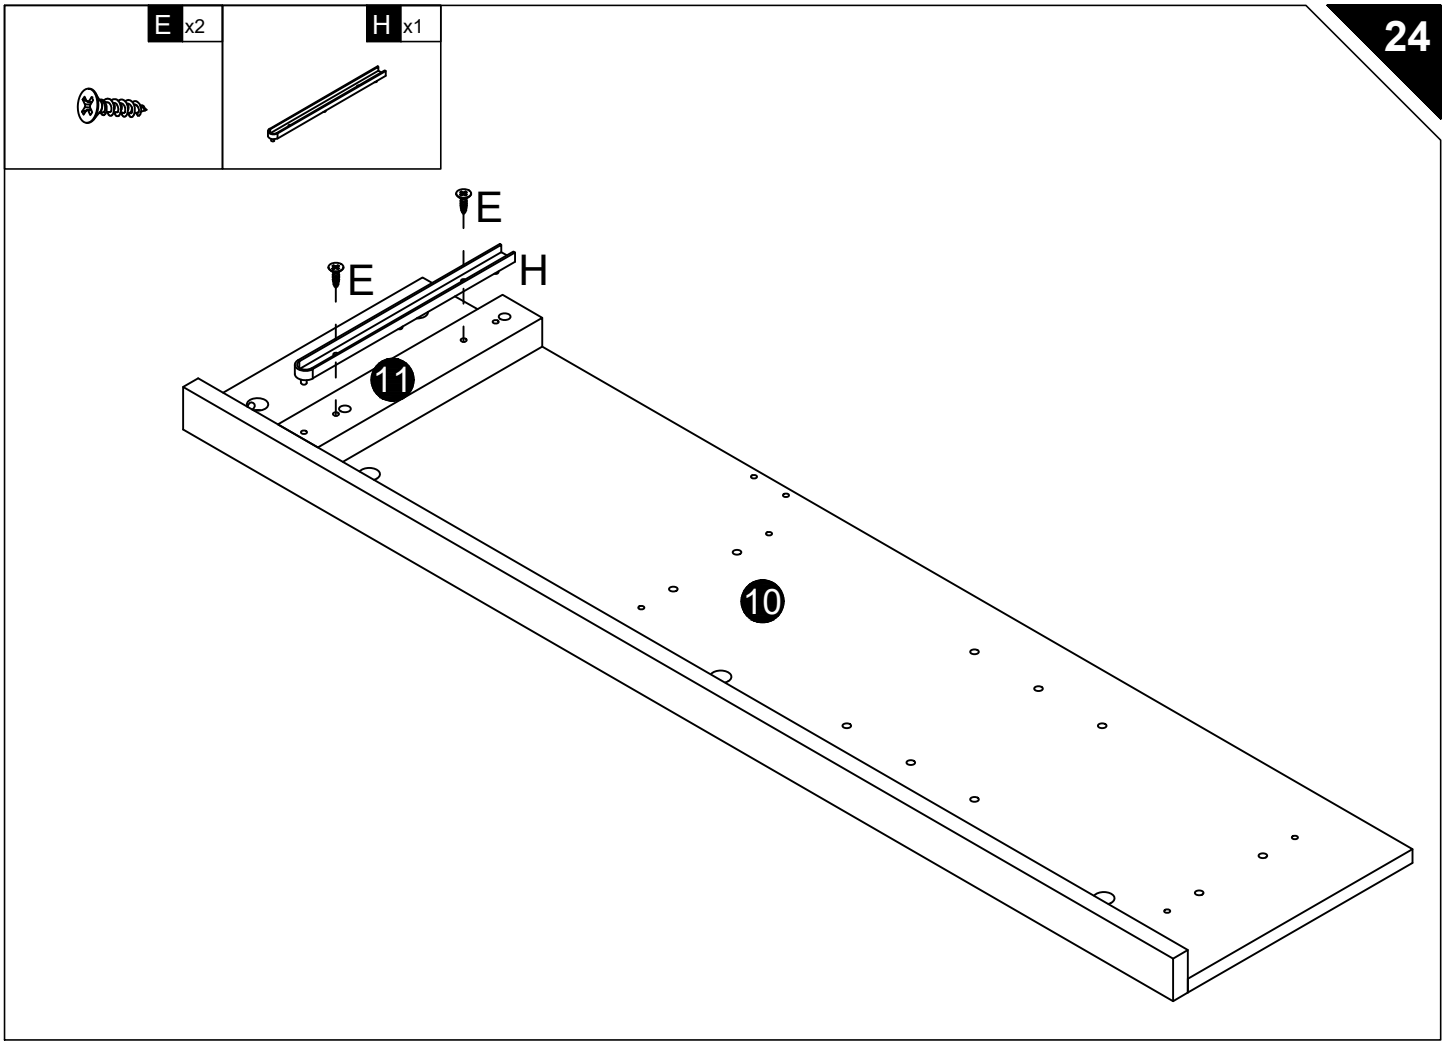


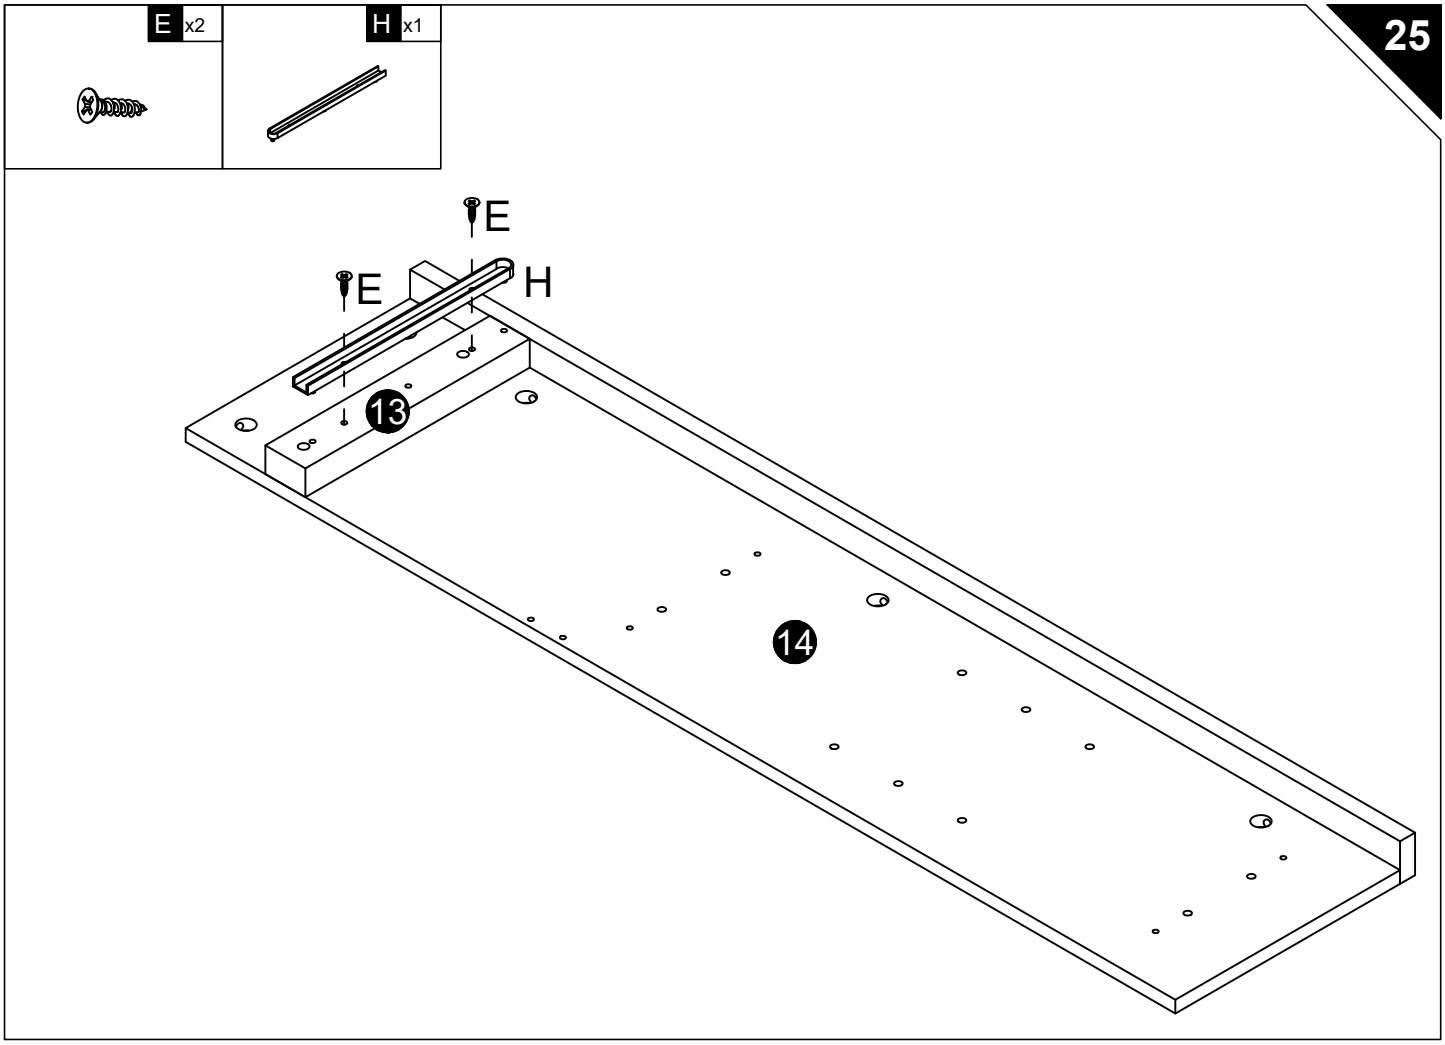

20
C x2
F x2
F
F
11
C
10

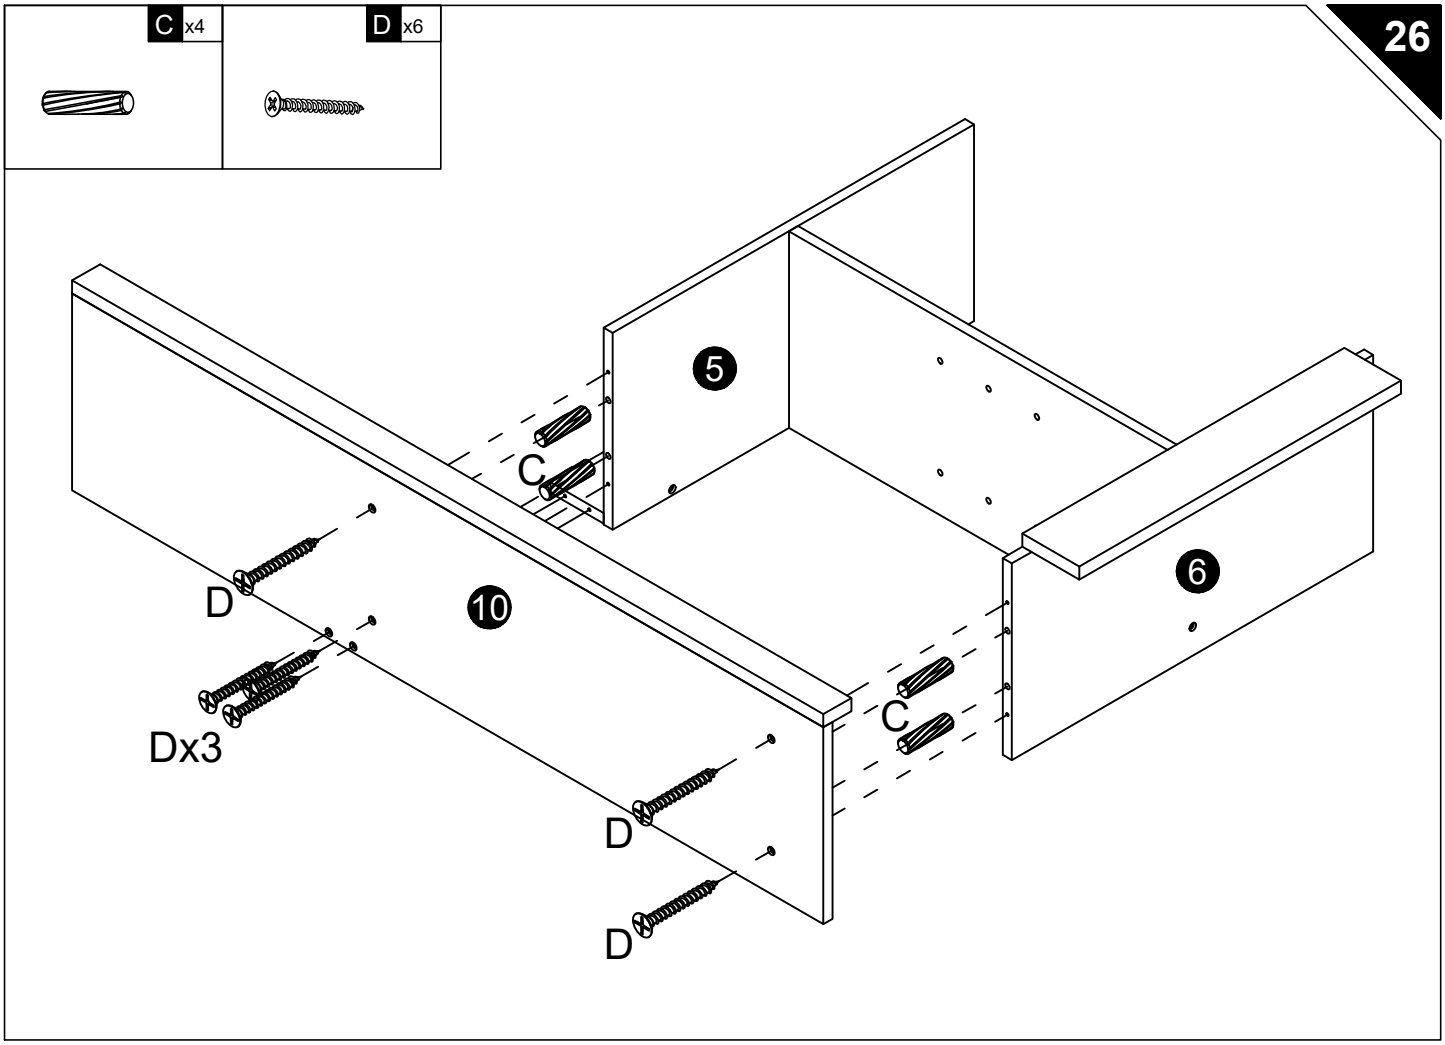

21
C x2
F x2
F
F
13
C
14

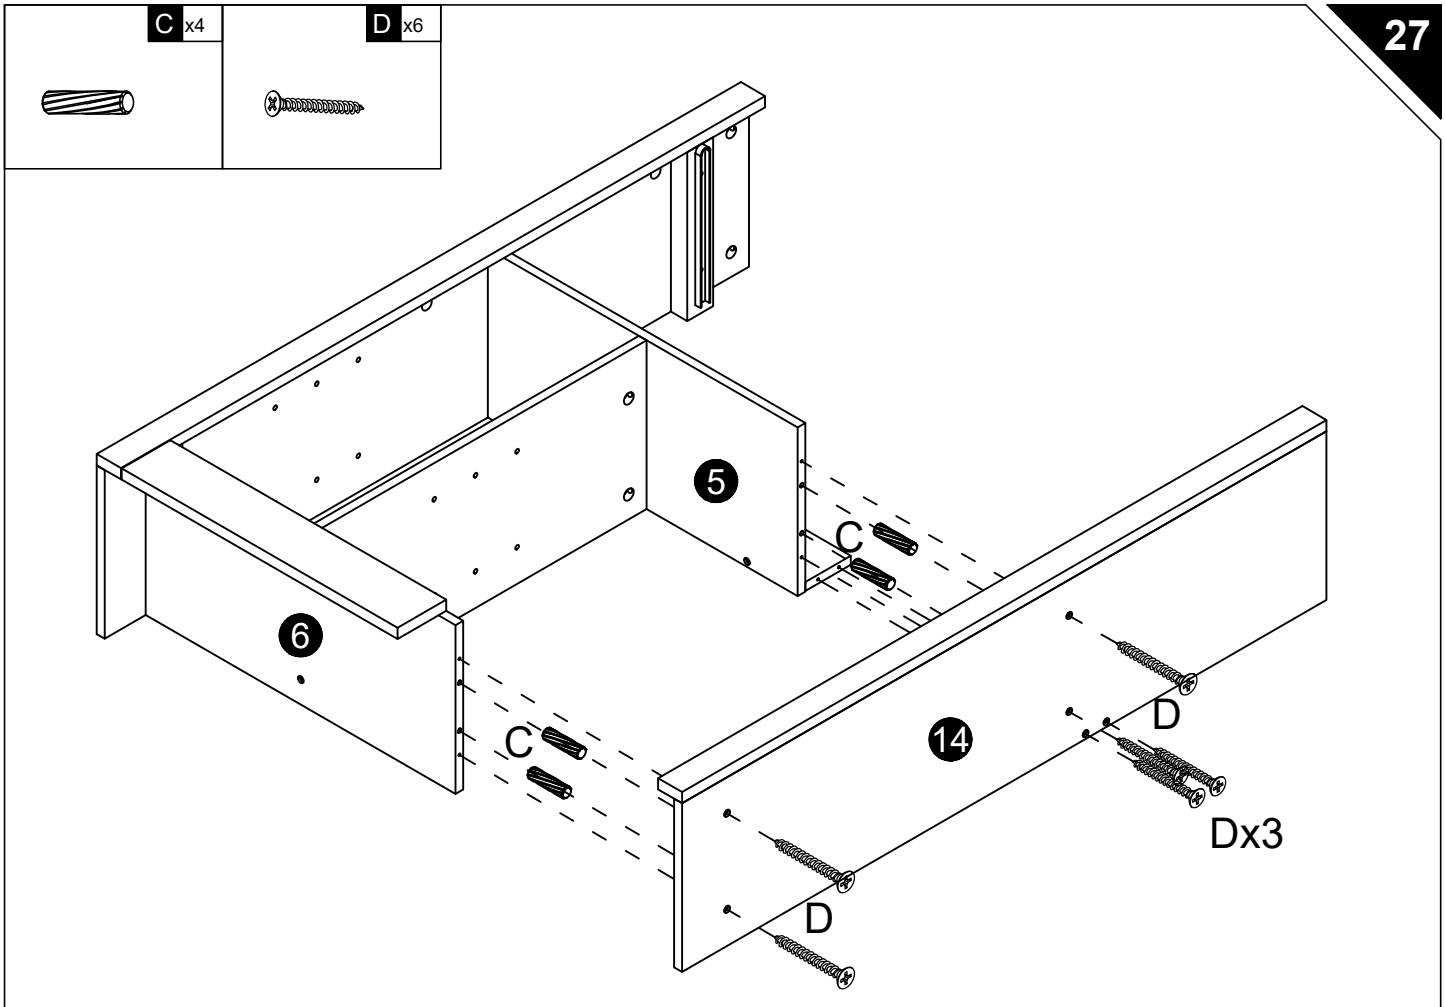

B x3
C x2
B
B
B
C
C
10
20

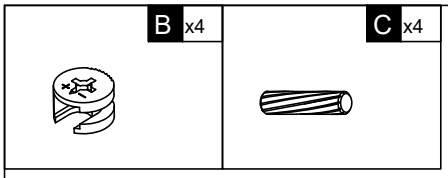

B x3
C x2
B
C
B
21
14
C
B

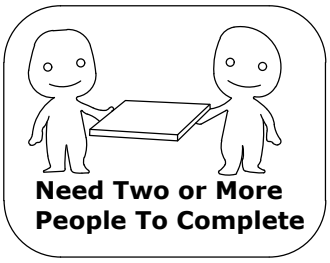

E x2
H x1
E
E
H
11
10

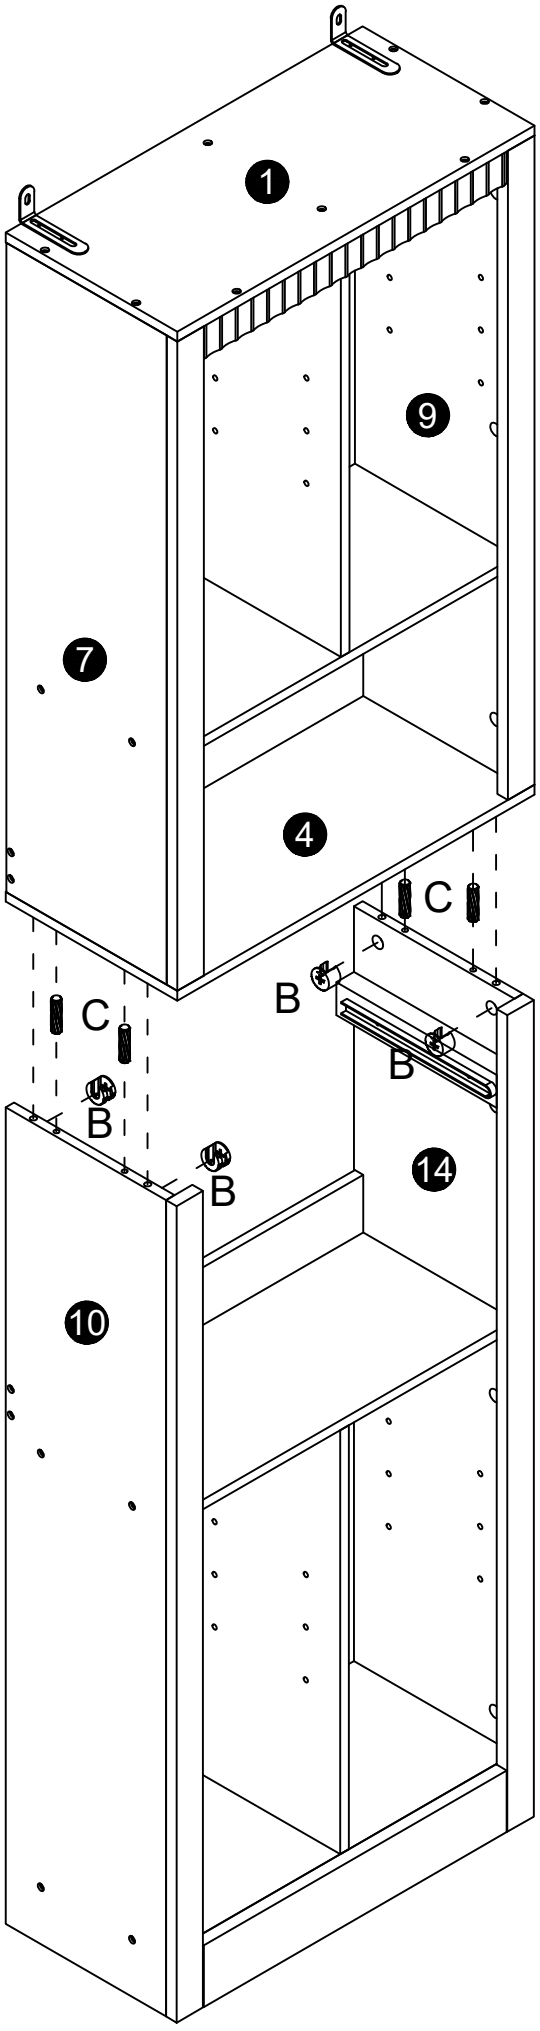

E x2
H x1
E
E
H
13
14

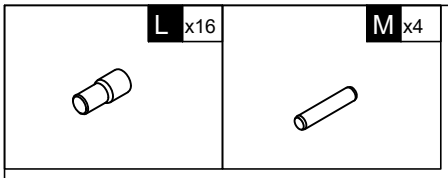

C x4
D x6
5
C
6
10
D
C
Dx3
D
D


C x4
D x6
5
C
6
C
14
D
Dx3
D

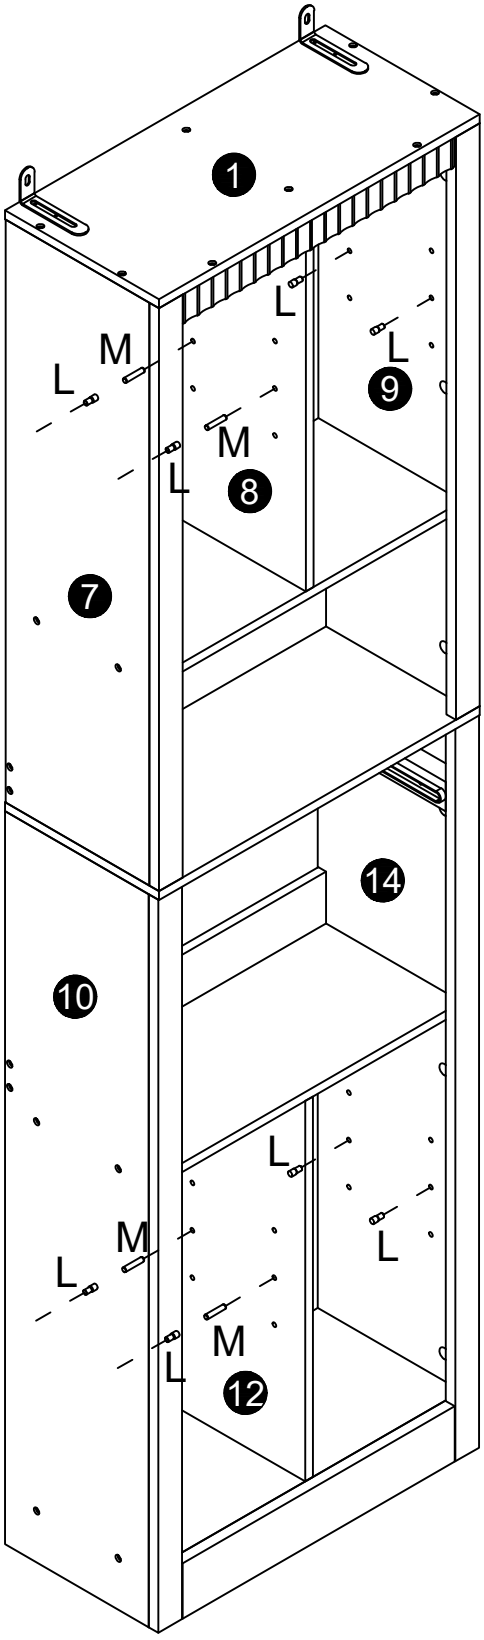

B x4
C x4

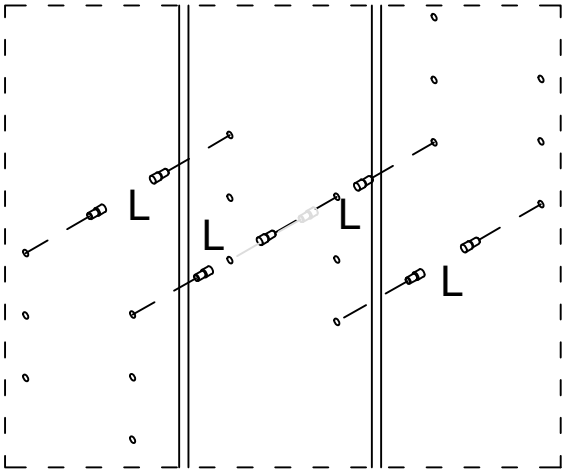

Need Two or More
People To Complete

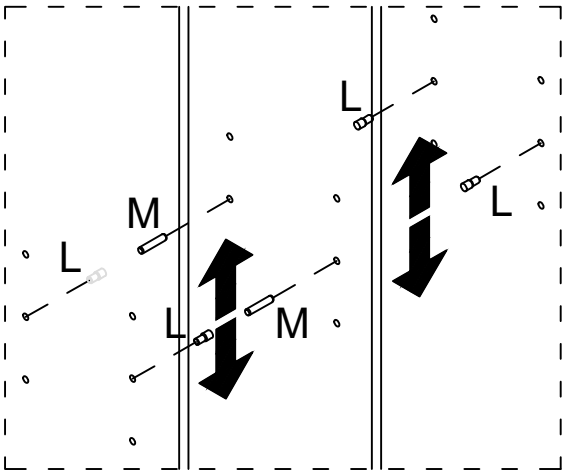

1
9
7
4
C
B
C
B
B
B
14
10

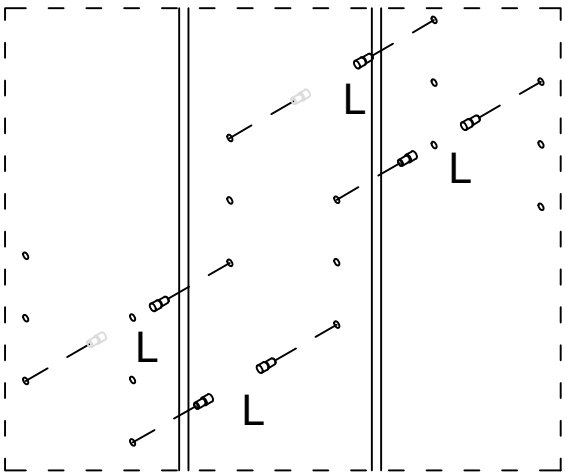


There are three installation schemes for part L and part M.
Please select your preferred scheme for installation.

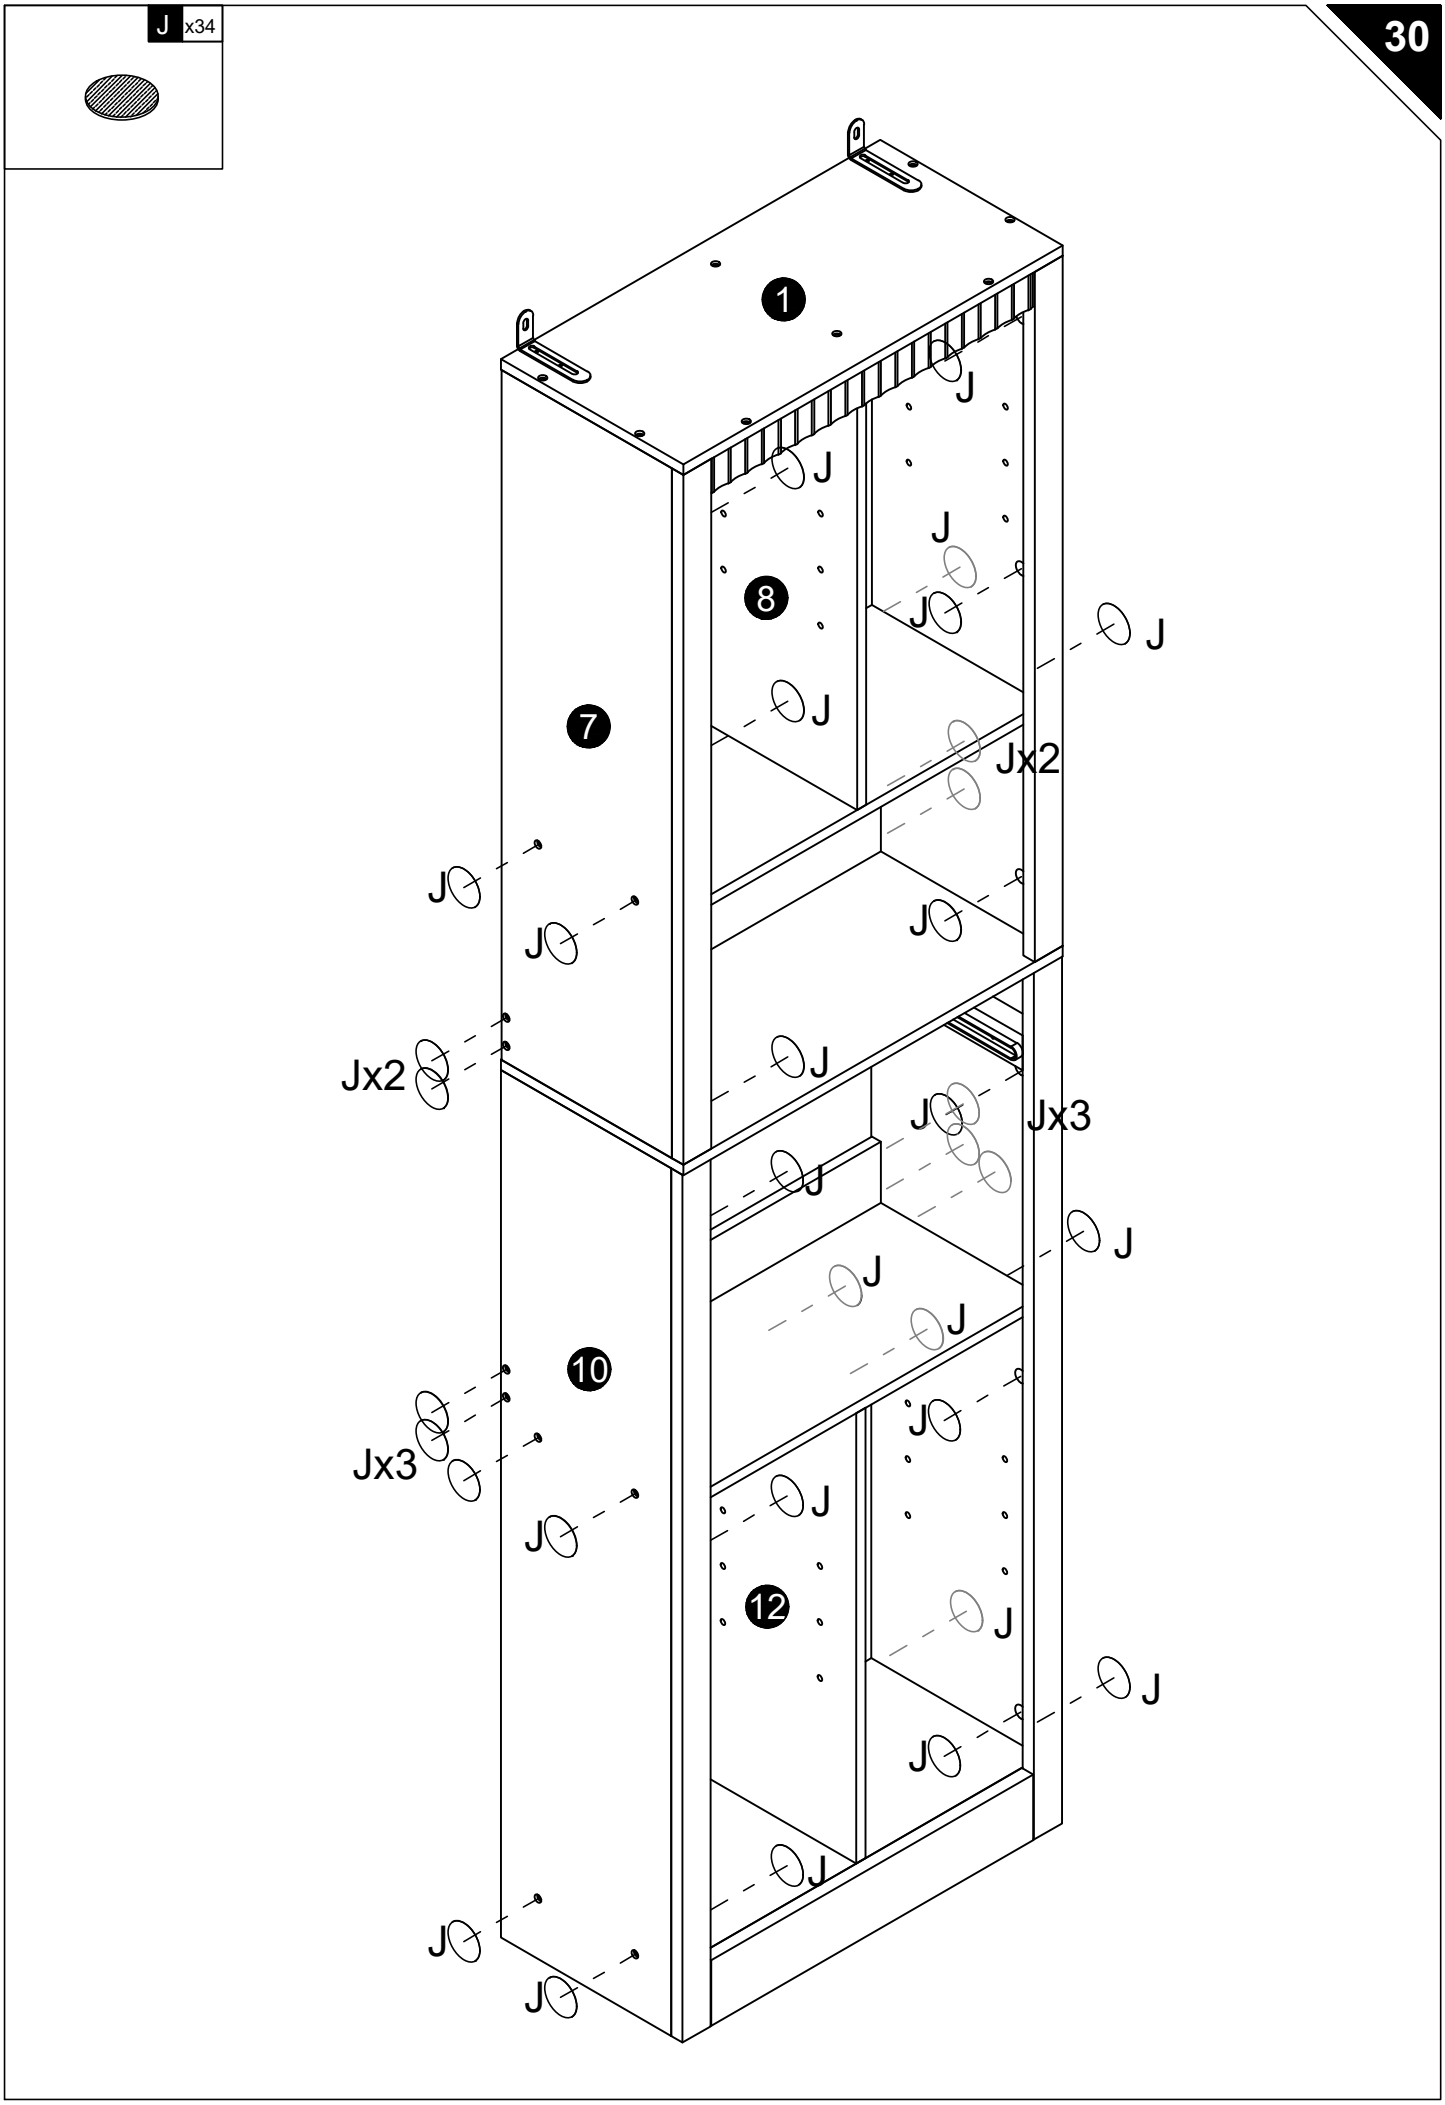


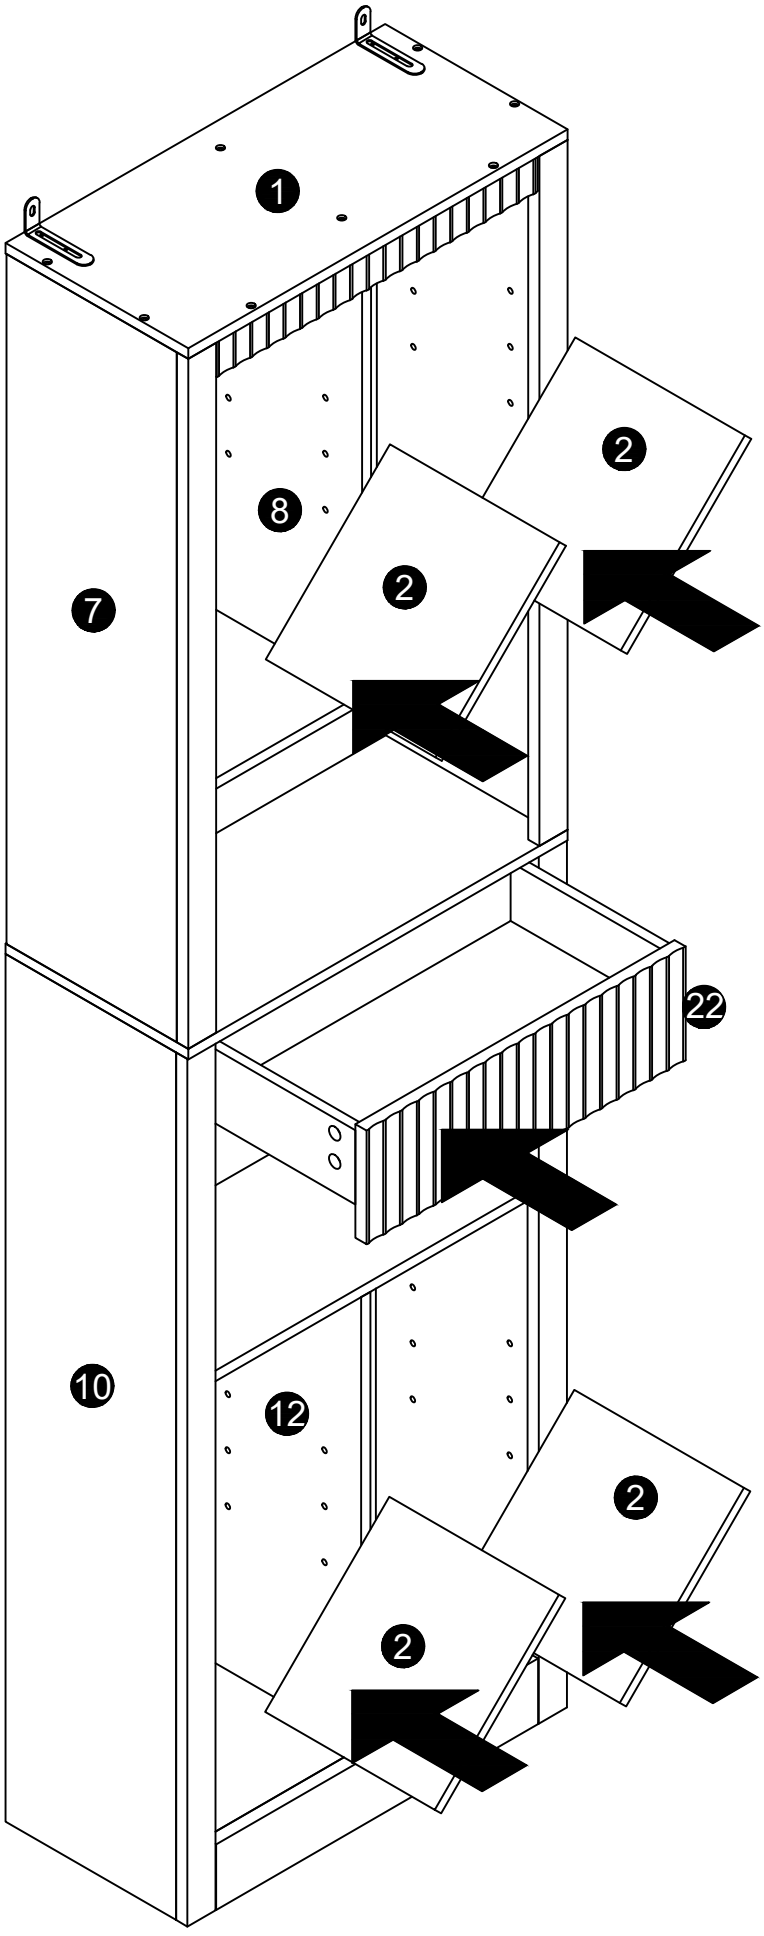






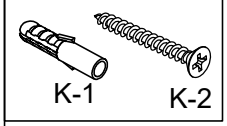
J x34

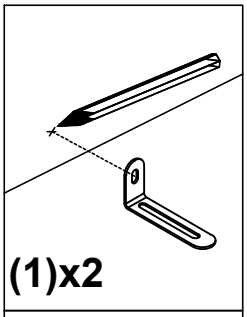



1
2
8
2
7
22
10
12
2
2

Done

K x2





(1)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

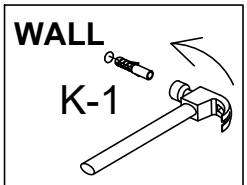
WALL



(2)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

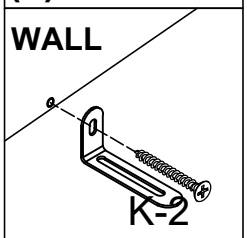
WALL



(3)x2

Then,put the expansion bolt into the hole

WALL



(4)x2

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

