JAMIE YOUNG Co

ORACLE SCONCE
4ORAC-ALAB
SAFETY, INSTALLATION & CARE INSTRUCTIONS

SAVE THESE INSTRUCTIONS
IMPORTANT SAFETY INSTRUCTIONS
READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING

We strongly recommend that all the direct-wired lighting products must be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the Wall sufficient to support the weight of the light fixture. This fixture weighs : 02.200 KGS / 04.850 LBS



WARNING : Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.

CAUTION : Prior to installation, locate All INCLUDED PARTS before disposing of packaging materials.

Tools Required for Installation :	
Screw Driver	Pliers
Electrical Tape	Wire Connectors
Wire cutters	Adjustable Wrench

Parts not included but required :	
A.	Wall Outlet Junction Box
B.	Ground Junction Box wire
C.	Hot Junction Box wire
D.	Neutral Junction Box wire

Parts Included / Referenced (See Figure 1) :	
E.	Wall Light Cord
F.	Mounting Bracket
G.	Mounting Screws
H.	Ground Screw
I.	Ground Wire
J.	Hot Fixture Wire
K.	Neutral Fixture Wire
L.	Wire Connectors
M.	Canopy
N.	Canopy Screws
O.	Alabaster Disc x 2
P.	Silicon Washer
Q.	Brass Screw
R.	Bulb (not included)


JAMIE YOUNG Co

ORACLE SCONCE
4ORAC-ALAB
SAFETY, INSTALLATION & CARE INSTRUCTIONS

Installation Procedure (Refer to Figure on Pg. 3) :

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
3. Determine the desired lighting fixture suspension length from the wall, allowing 6" of extra cord length for the Wall Outlet Junction Box (A) wire connections as noted below.
4. Adjust the Wall Fixture power cord from the canopy (M) based on the measurement taken in above step.
5. If needed, cut off any extra length of wire cord cable (E). When cutting the power cord, be sure to cut it so that it is at least 6" long inside the Wall Outlet Junction Box (A). To prepare the cut power cord for the installation process, use wire strippers to prepare the ends of the two wires so that there is about 1/2" of exposed wire for the Plastic Wire Connectors (L).
6. Gently pull existing Ground (B), Hot (C), and Neutral (D) Junction Box wires down from the Wall Junction Box (A) and allow them to hang.
7. Carefully inspect the Wall Sconce Ficture Wires. The Neutral Wire is marked as with N Sticker, Hot Fixture Wire is marked with L sticker and Ground wire is marked with Earthing Logo Sticker
8. Attach the Ground Wire (I) from the fixture to the Ground Junction Box wire (B), it usually has green insulation around it or is bare wire. Fasten them together with a wire connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Wall Outlet Junction Box (A) does not have a Ground Junction Box wire (B), insert the Ground Screw (H) into the mounting bracket (F) and wrap the fixture's Green Ground Wire around the Green Screw (H). Tighten the screw to clamp the Ground Junction Box wire (B) between the Ground Screw (H) head and the mounting bracket (F). It is imperative that the Wall Junction Box (A) in your home be properly grounded.
9. Connect the Neutral wire (K) to the neutral junction box wire (D). Fasten them together with a plastic wire connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
10. Connect the Hot wire (J) to Hot junction box wire (C). Fasten them together with a plastic wire connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
11. Gently tuck the wire connections neatly into the Wall Outlet Junction Box (A).
12. Attach the Mounting Bracket (F) to the Wall Junction Box (A) using the Mounting Screws (G). Tighten screws with a screw driver until secure.
13. Slide the Canopy (M) towards Wall Junction Box (A). Match Holes of Mounting Bracket (F) and Canopy (M) and tighten with Canopy Screws (N) through Screw Driver.
14. Insert 2xE12 25W TYPE A incandescent bulb (not included). Do not exceed the specified wattage.
15. Align each Alabaster Holes (O) with Lamp Body Holes and tighten it with the help of Brass Screw (Q), make sure to add Silicon Washer (P) on Brass Screw Thread to avoid scratches on Alabaster.
16. Restore Power to Wall Outlet Junction Box (A) and Test the Fixture.

CARE AND CLEANING : To clean, wipe the light fixture ONLY with a soft, dry cloth.

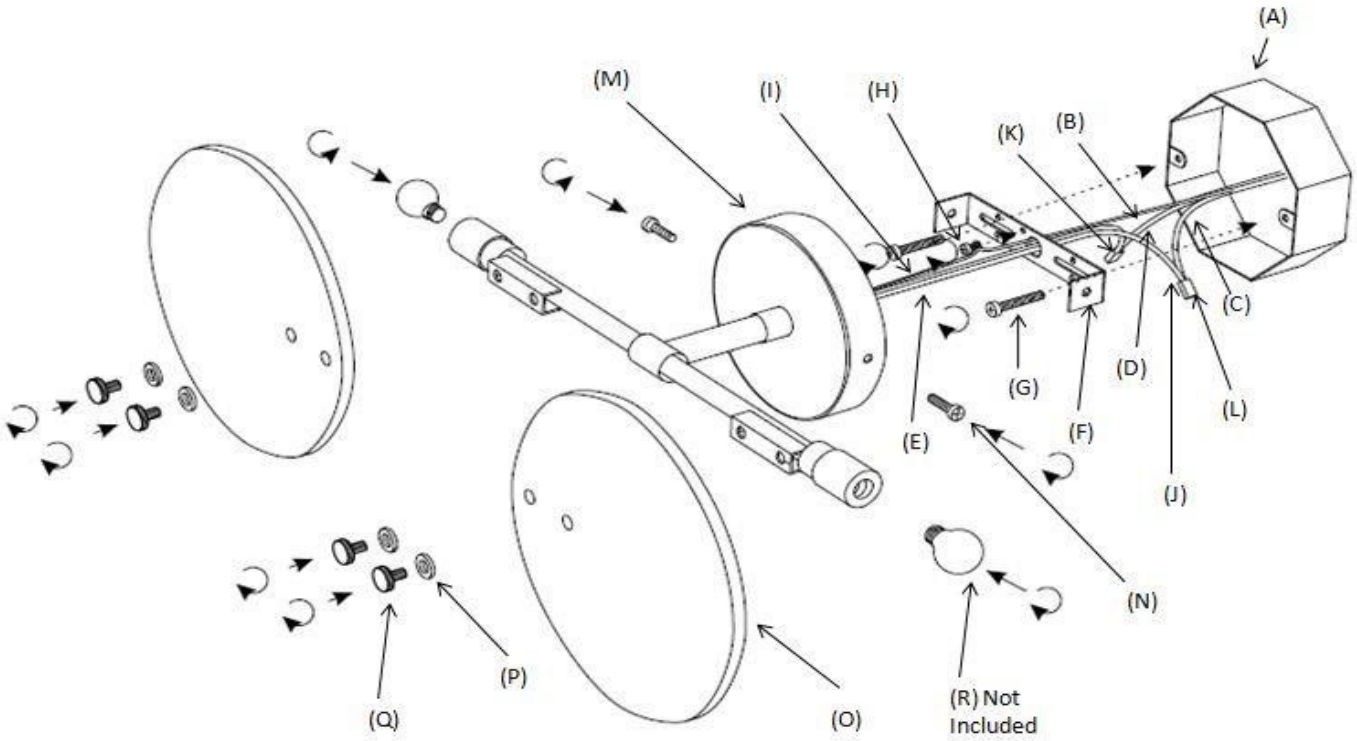

Assembled View

