


NIGHTSTAND

Assembly Manual

KJW.TNS006

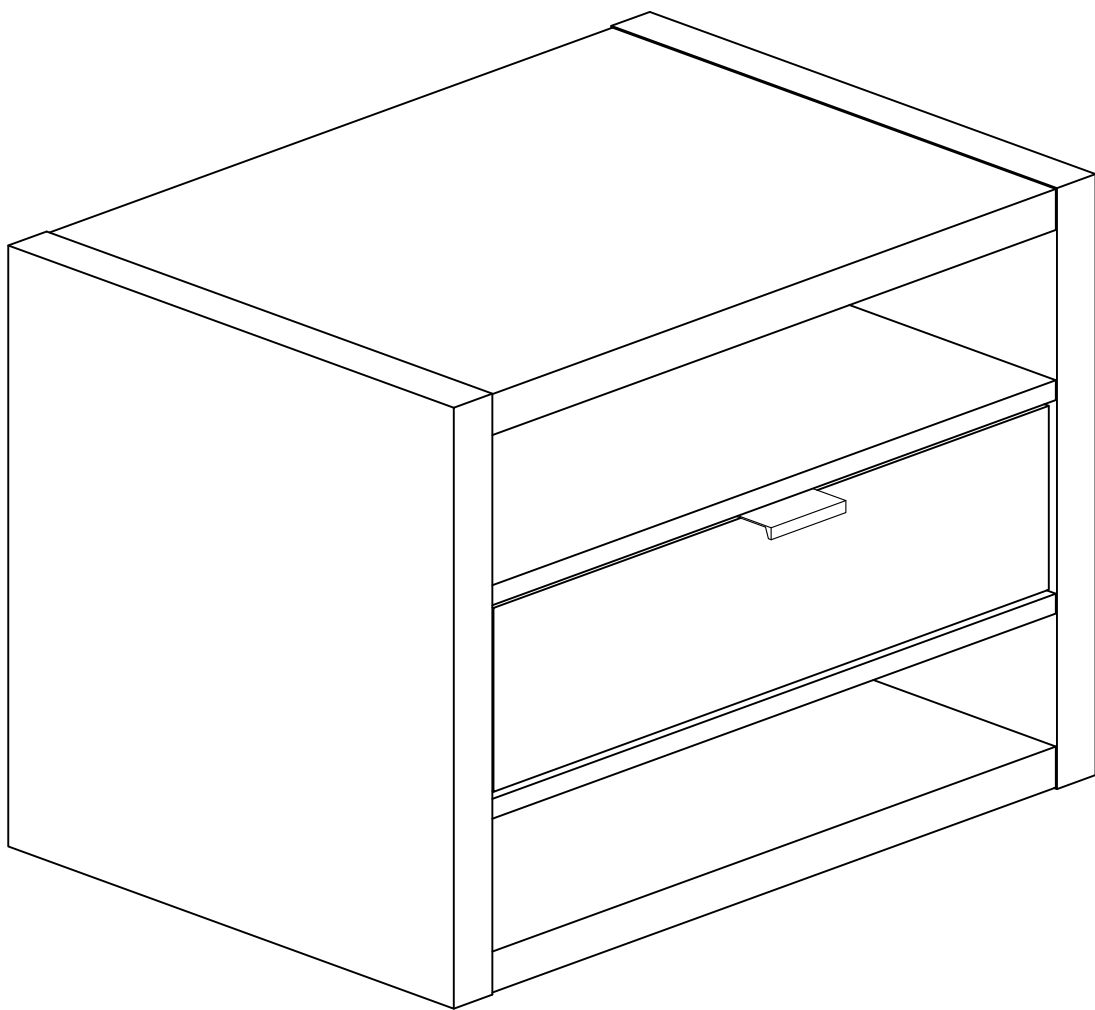

CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

ASSEMBLY INSTRUCTIONS

1. Read these instructions carefully and keep them for future reference.
2. Refer to the parts inventory for guidance, and ensure you have all pieces before starting.
3. When assembling, place all parts on a soft, clean, and flat surface (e.g., a carpet) to prevent scratches.




TIME




2 OF
PEOPLE






Structural integrity is only guaranteed if all bolts are installed and properly tightened.

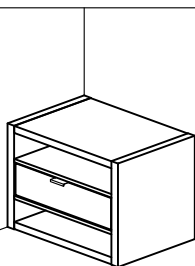













**PLACE THE BACK AGAINST
THE WALL**

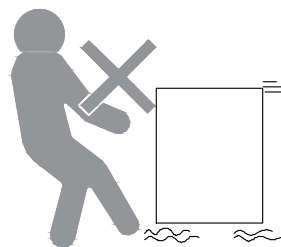

**DO NOT DRAG NIGHTSTAND,
ALWAYS LIFT BEFORE MOVING**

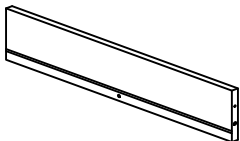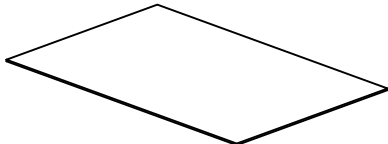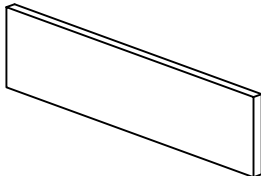1.DRAWER BACK ×1 	2.DRAWER SIDE (LEFT) ×1 	3.DRAWER SIDE (RIGHT) ×1 
4.DRAWER PANEL ×1 	5.DRAWER HEAD ×1 	6.DRAWER SUPPORT ×1 




Please read through the instructions below to familiarize yourself with the parts and steps before assembly.
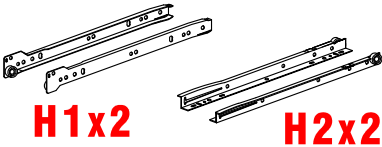
<p>7.SIDE PANEL (LEFT) ×1</p> 	<p>8.SIDE PANEL (RIGHT) ×1</p> 	<p>9.MIDDLE UP ×1</p> 
<p>10.MIDDLE DOWN ×1</p> 	<p>11.BACK PANEL ×1</p> 	<p>12.TOP/BOTTOM PANEL ×2</p> 
<p>A.CAMLOCK ×20</p> 	<p>B.CAMLOCK BOLT ×20</p> 	<p>C.WOOD DOWEL M8 X 25MM ×16</p> 
<p>D.PVC L HANDLE ×1</p> 	<p>E.CB SCREW M3.5 X 16MM ×22</p> 	<p>F.CB SCREW M4 X 38MM ×2</p> 
<p>G.PVC NAIL PIN 5/8 ×4</p> 	<p>H.DRAWER SLIDE 12" ×1 (SETS)</p> 	<p>J.WOOD DOWEL M6 X 30MM ×4</p> 

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Before you begin:

1. Check if you have received all parts using the diagram on this page. Do not start the assembly process until all parts are present.
2. Do not discard any of the packaging until you are certain that you have all the necessary parts for the assembly.

K.CORNER L BRACKET x4 	Not Included  Phillips Head Screwdriver	Not Included  Hammer
--	--	---


Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Before you begin:

1. Check if you have received all parts using the diagram on this page.
Do not start the assembly process until all parts are present.
2. Do not discard any of the packaging until you are certain that you have all the necessary parts for the assembly.


ASSEMBLY INSTRUCTIONS

- 1 Please lay all parts on a soft and smooth surface to assemble.

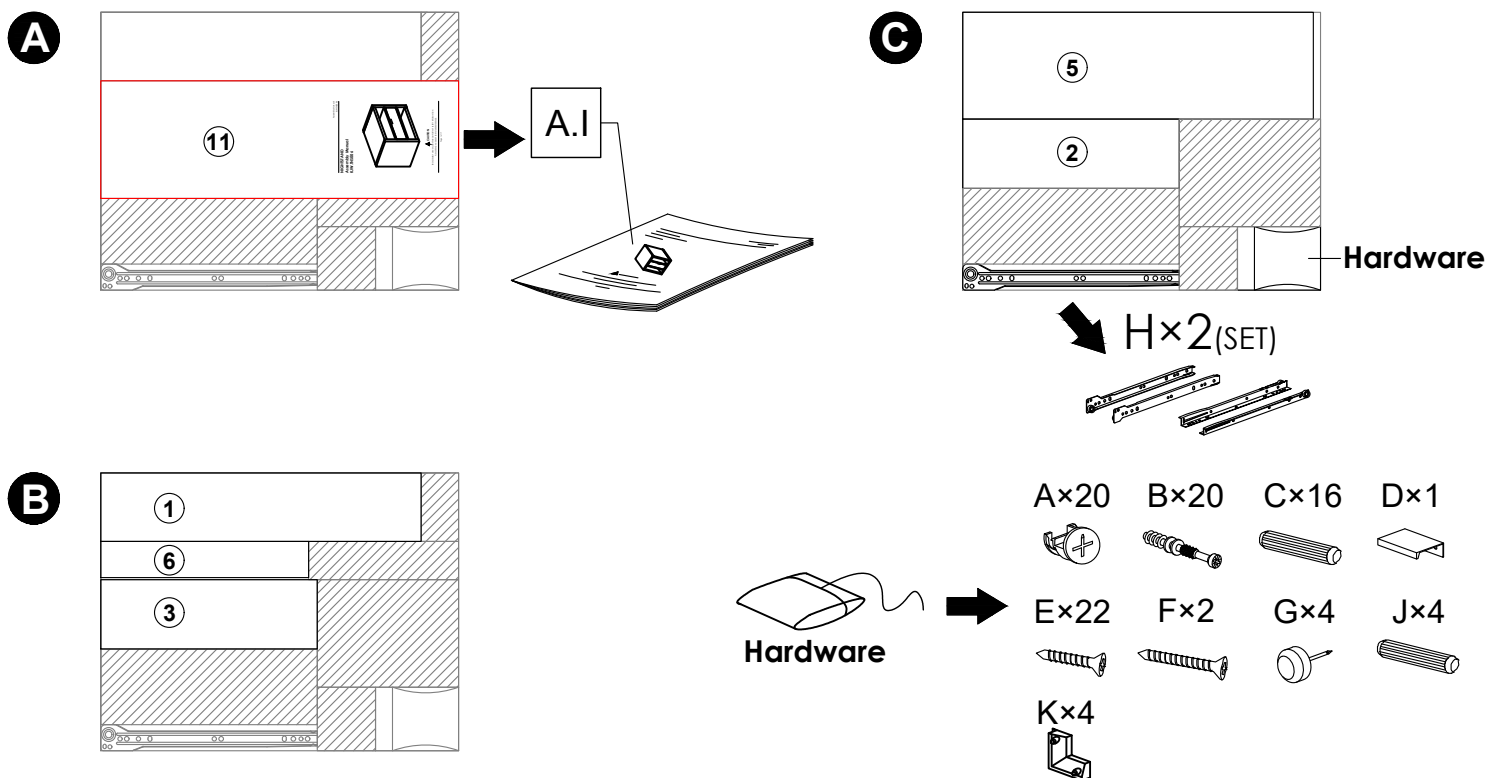


ASSEMBLY INSTRUCTIONS


D

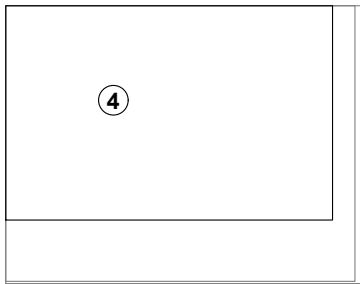



G

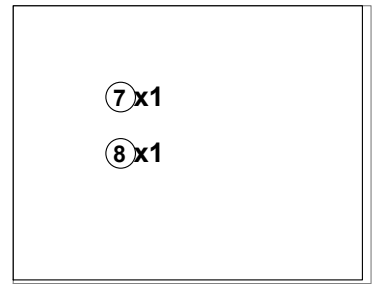

E

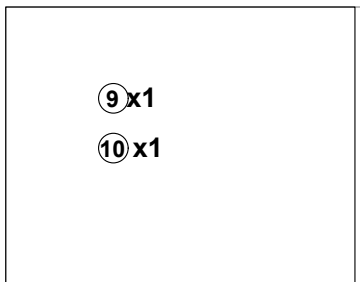


F

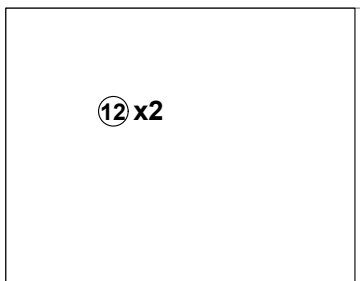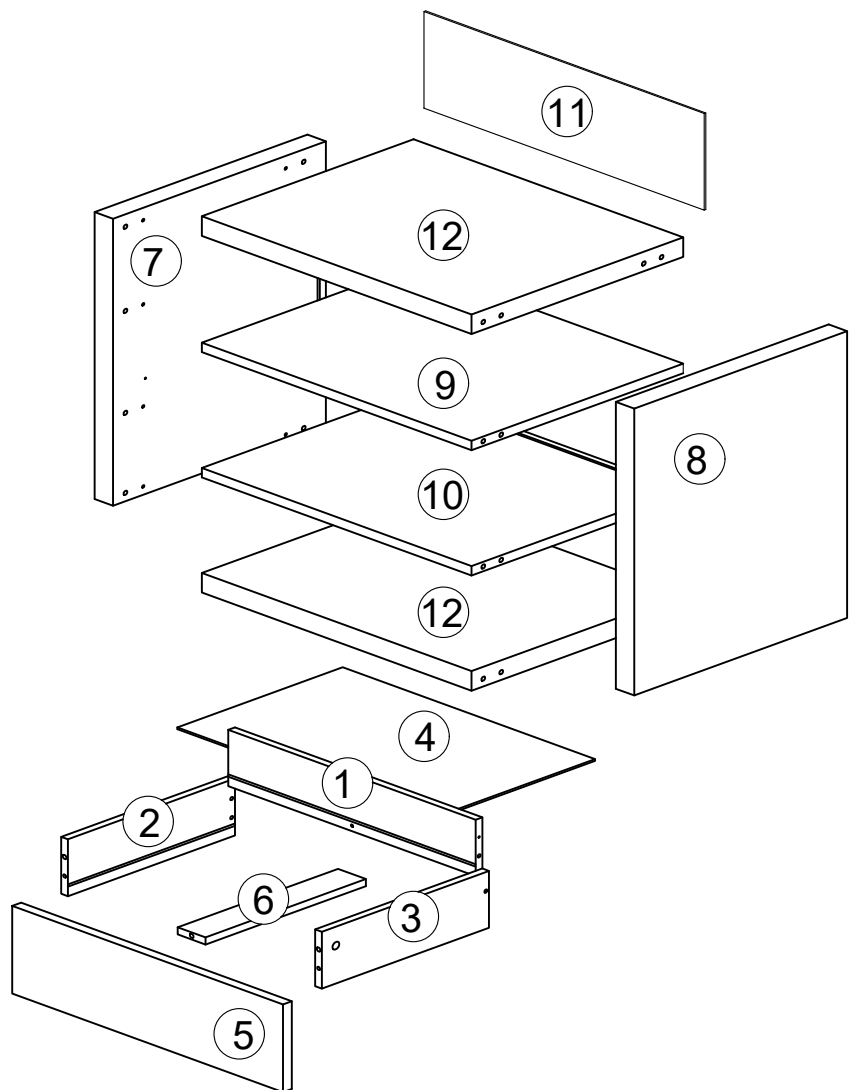

ASSEMBLY INSTRUCTIONS


- 2** Insert Wood Dowel M6 X 30MM (J) to drawer back (1), drawer side (left) (2) and drawer side (right) (3).

Note: Please Fully Insert the wood dowel

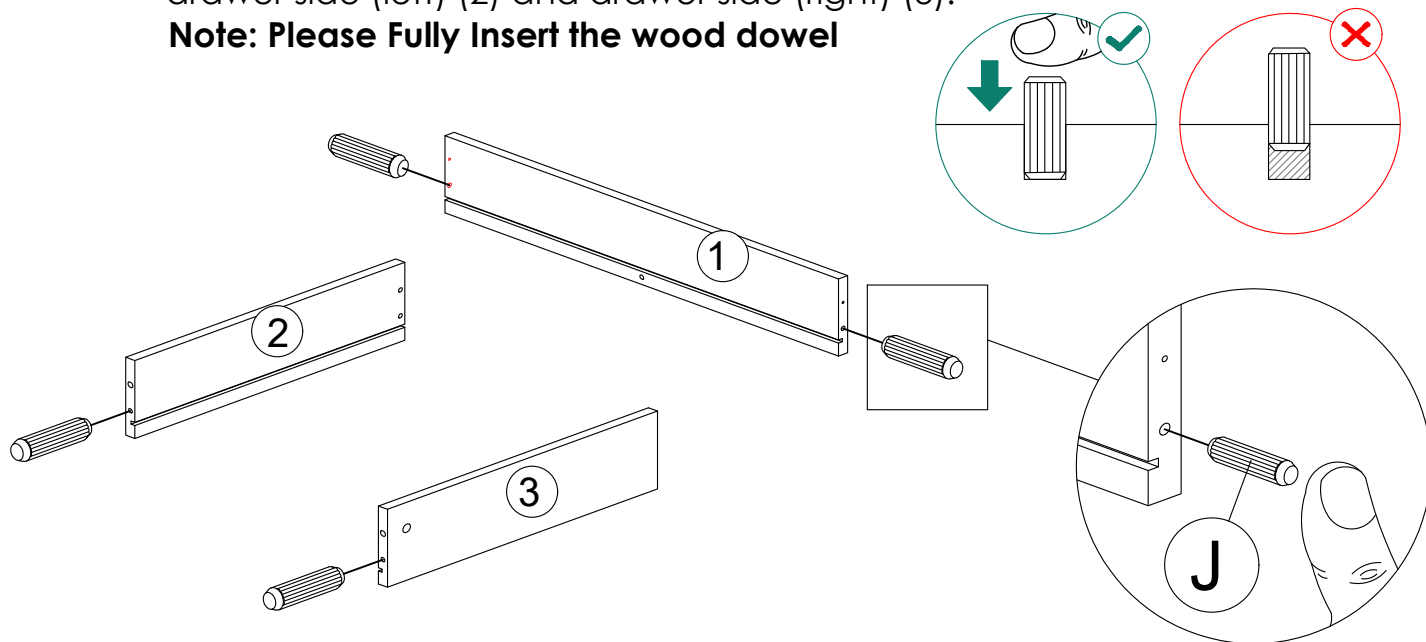


- 3** Insert the Camlock Bolt (B) to drawer head (5) & drawer back (1), using Phillips Head Screwdriver (Not Included). **Fully tighten.**

Note: Please fully tighten the camlock bolts.

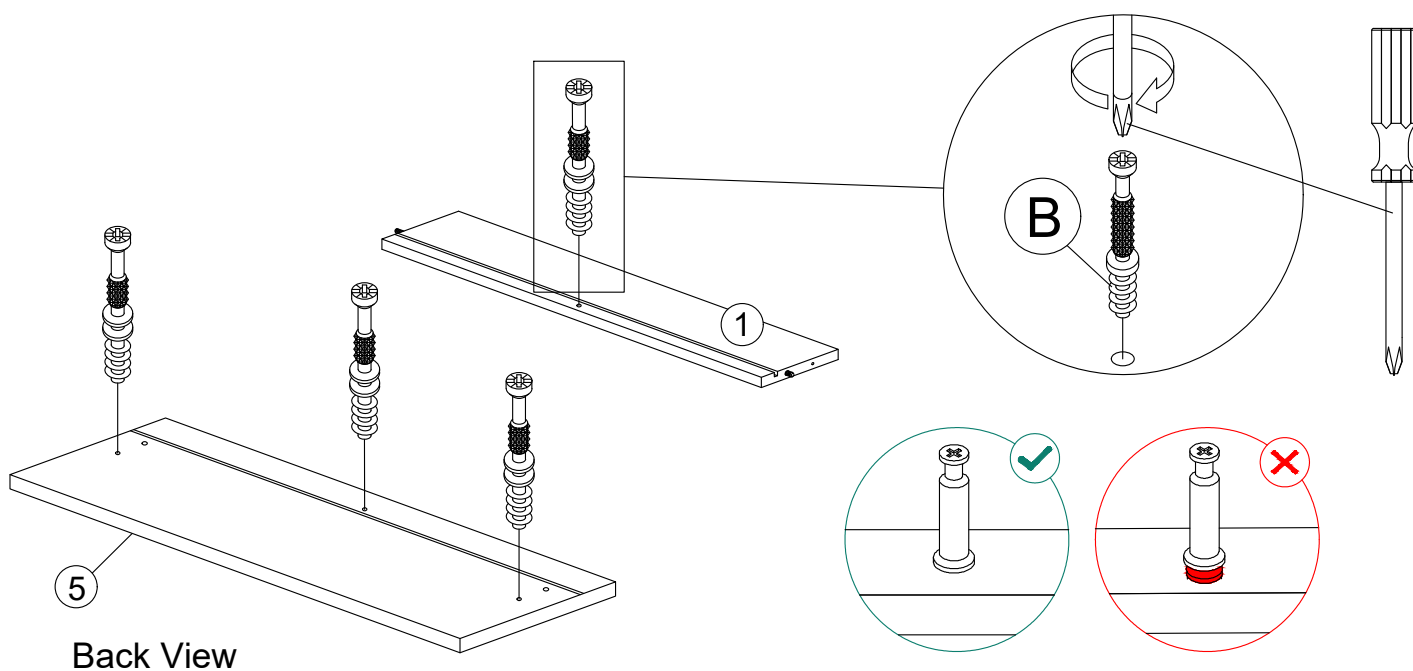

ASSEMBLY INSTRUCTIONS


- 4** Insert Camlock (A) to drawer side (left) (2), drawer side (right) (3) & drawer support (6)

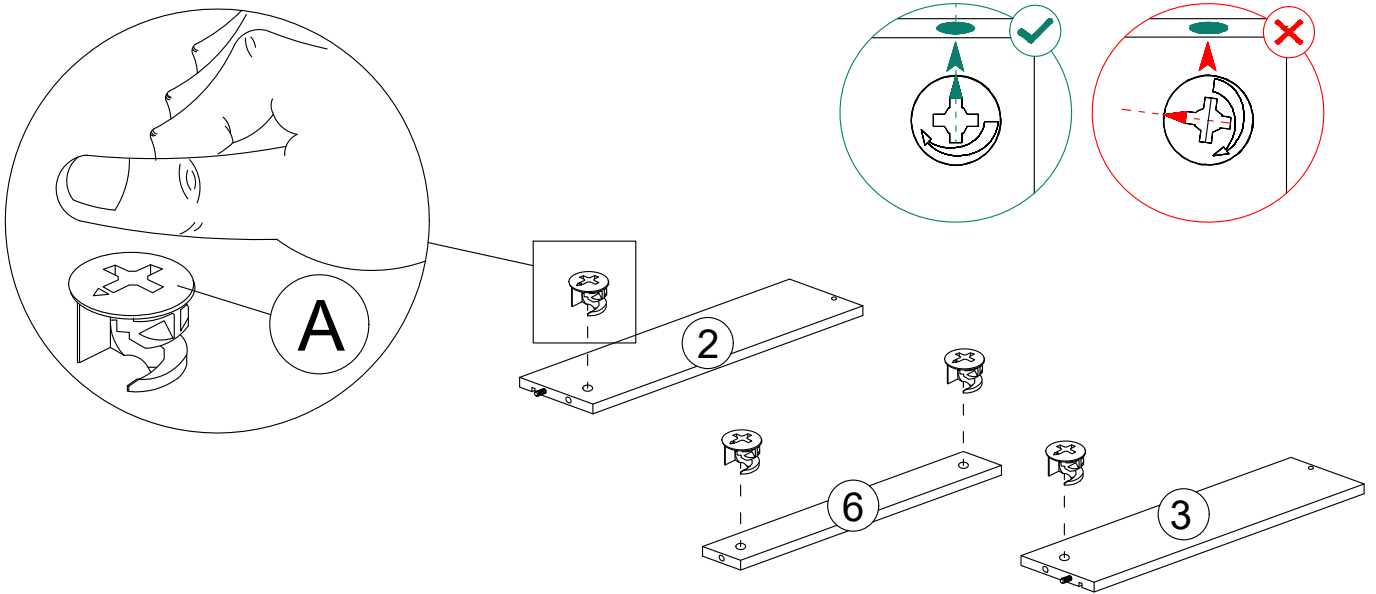

- 5** Attach the assembled drawer side (left) (2) and drawer side (right) (3) to the drawer back (1), using the CB Screw M4 X 38MM (F) and a Phillips Head Screwdriver Attach assembled drawer support (6) to the drawer back (1), using a Phillips Head Screwdriver (Not Included). Tighten Camlock (A) clockwise.


Note: Please fully tighten the screws.

Note: Please rotate 60-Degrees to lock.

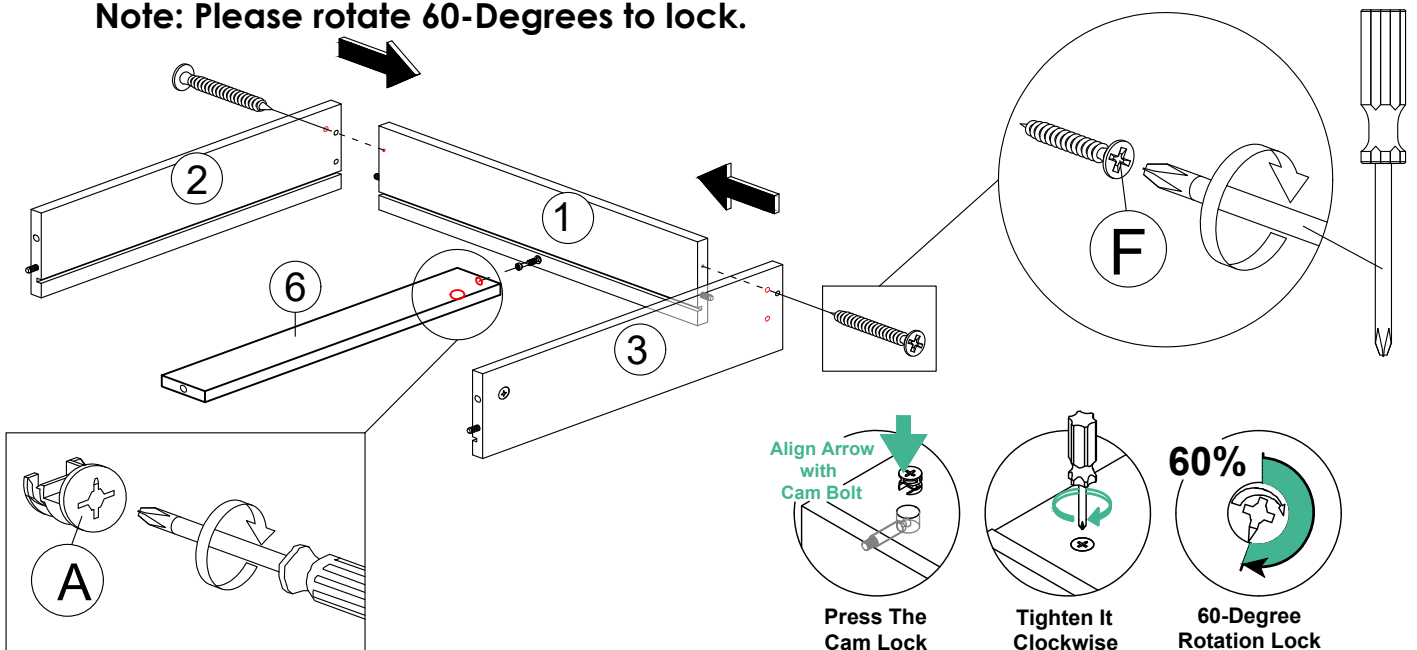


ASSEMBLY INSTRUCTIONS

- ⑥ Insert the drawer panel (4) to the drawer side (left) (2) and the drawer side (right) (3). until drawer back (1).

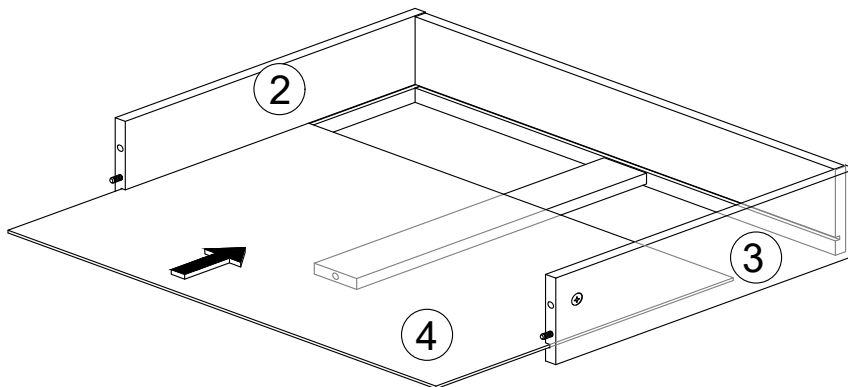

- ⑦ Attach Assembled drawer head (5) to drawer side (left) (2), drawer side (right) (3) & drawer support (6), using Phillips Head Screwdriver (Not Included). Tighten Camlock (A) clockwise.


Note: Please rotate 60-Degree to lock.

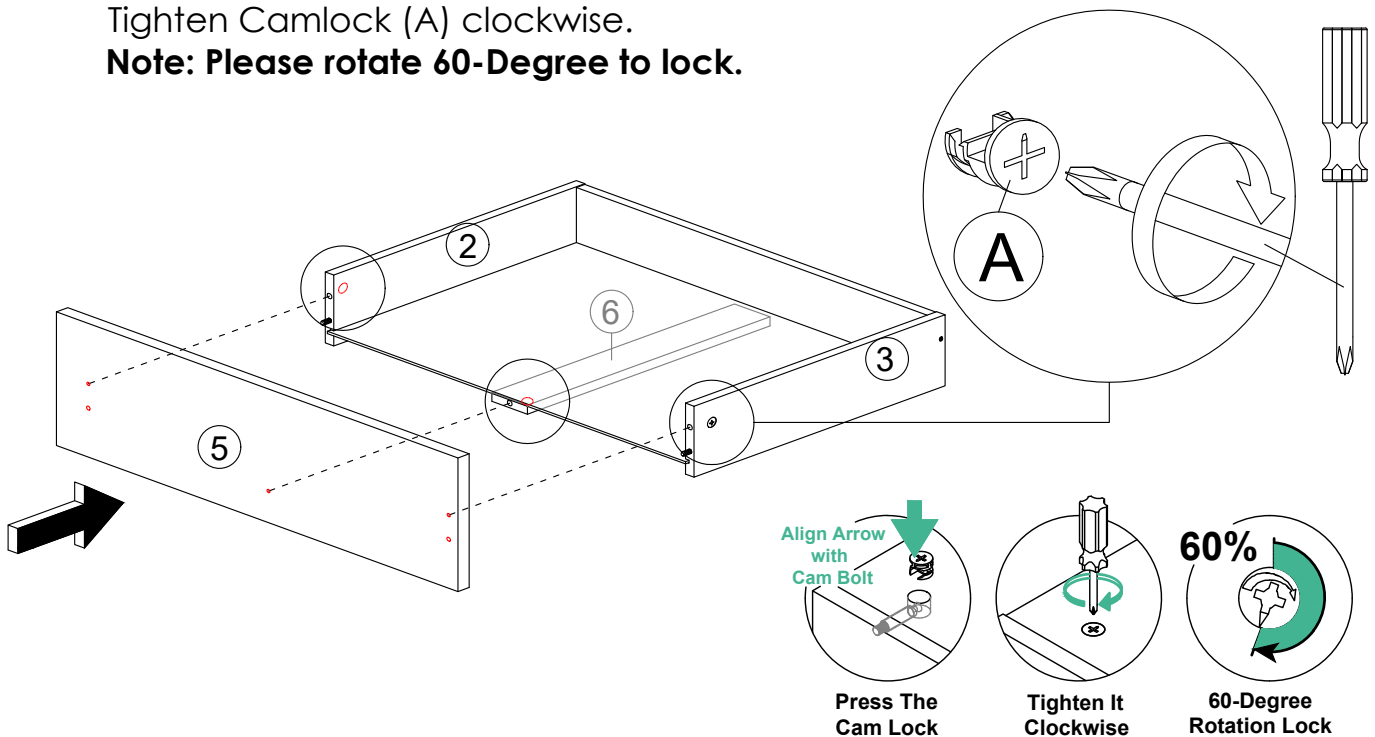

ASSEMBLY INSTRUCTIONS

- 8 Place the Drawer Slide 12" x2(H2) to the bottom of drawer side (left/right) that has been assembled in step 7, using CB Screw M3.5 X 16MM (E) and Phillips Head Screwdriver (Not Included). **Fully tighten.**


Note: Repeat the step to the second drawer.

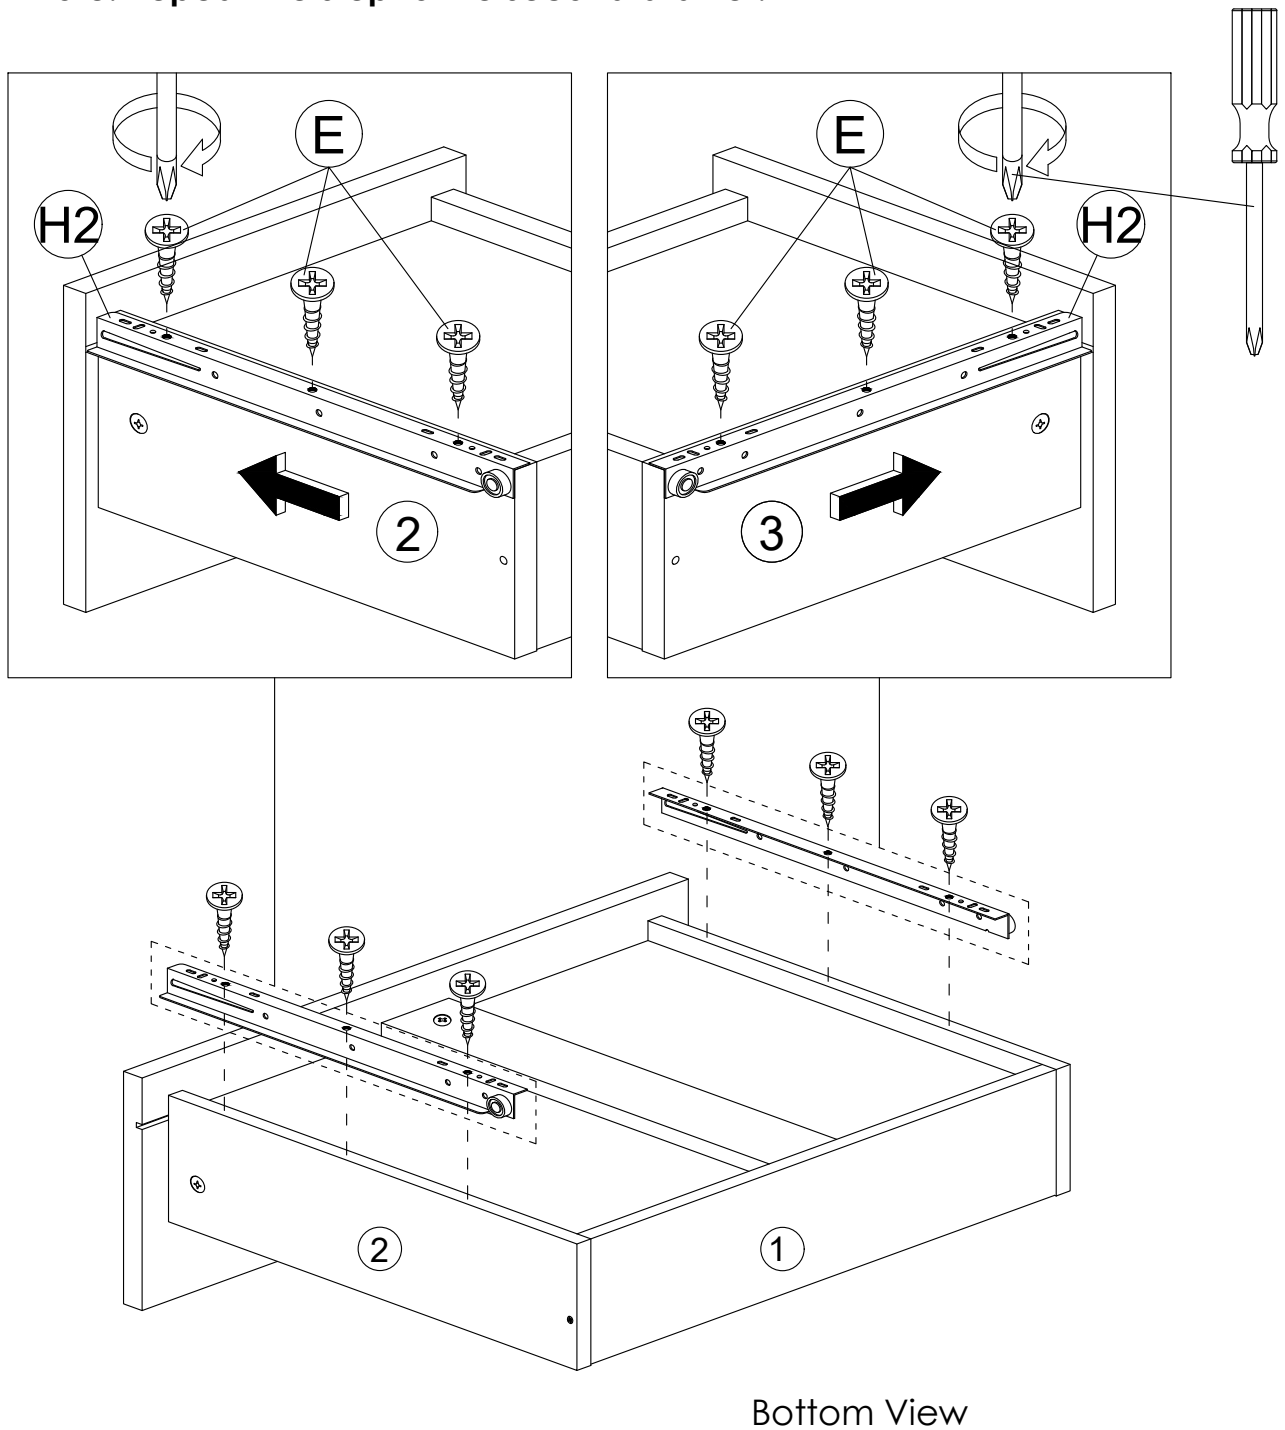

Bottom View


ASSEMBLY INSTRUCTIONS

- 9 Place the PVC L Handle (D) to drawer head (5), using CB Screw M3.5 X 16MM (E) and Phillips Head Screwdriver (Not Included). **Fully tighten.**

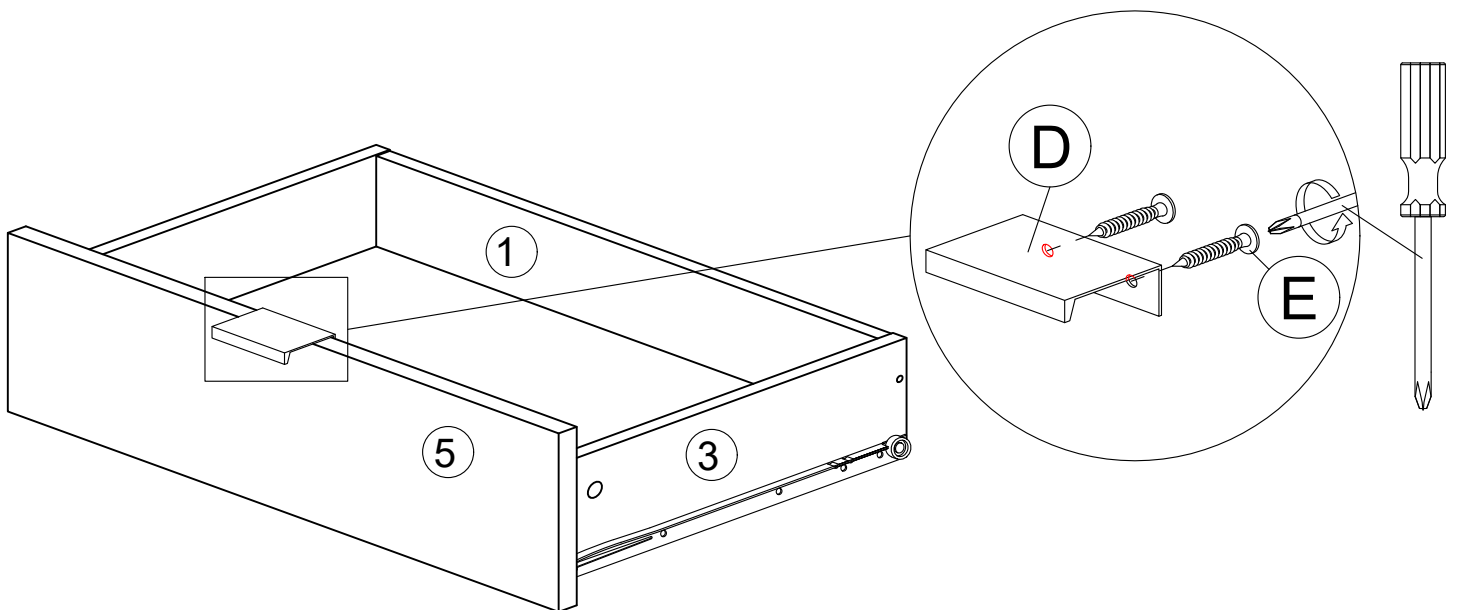


- 10 Insert the Camlock Bolt (B) to side panel (left) (7), side panel (right) (8), using Phillips Head Screwdriver (Not Included). **Fully tighten.**

Note: Please fully tighten the camlock bolts.

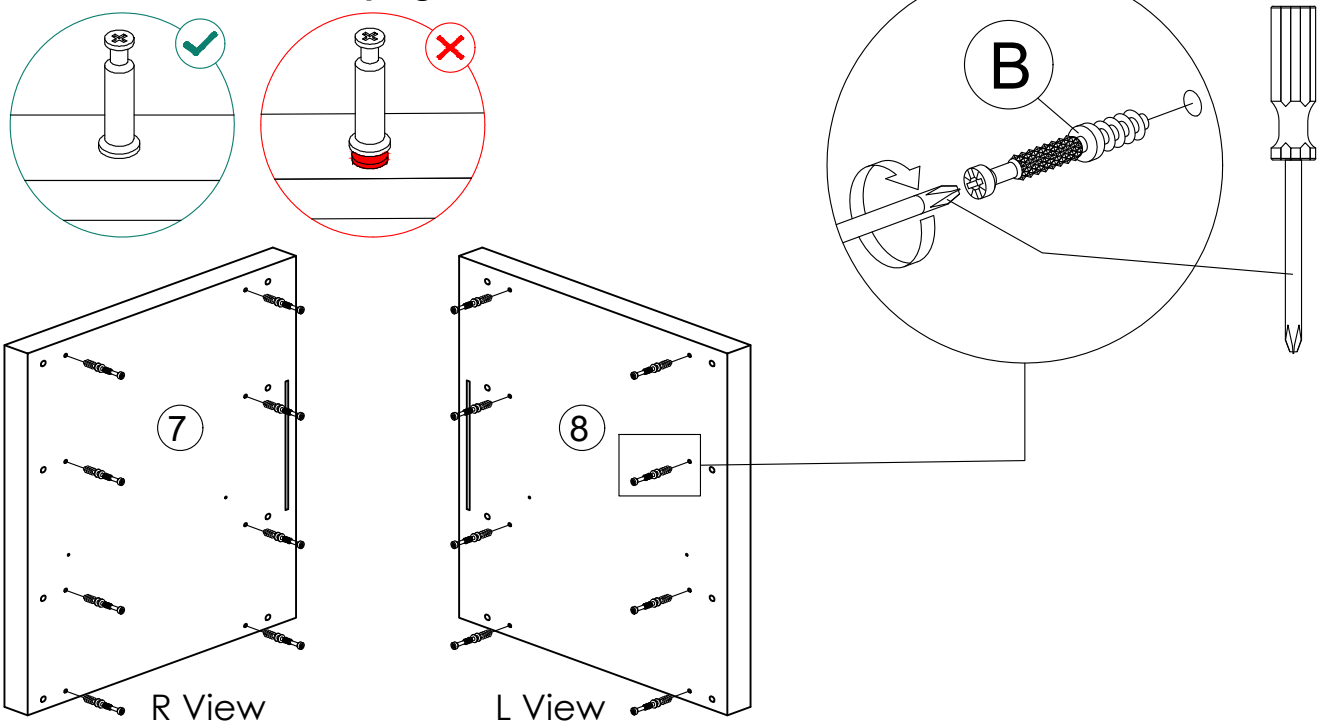


ASSEMBLY INSTRUCTIONS

- 11** Place the Drawer Slide 12" (H1) to side panel (left) (7) and side panel (right) (8), using CB Screw M3.5 X 16MM (E) and Phillips Head Screwdriver (Not Included). **Fully tighten.**

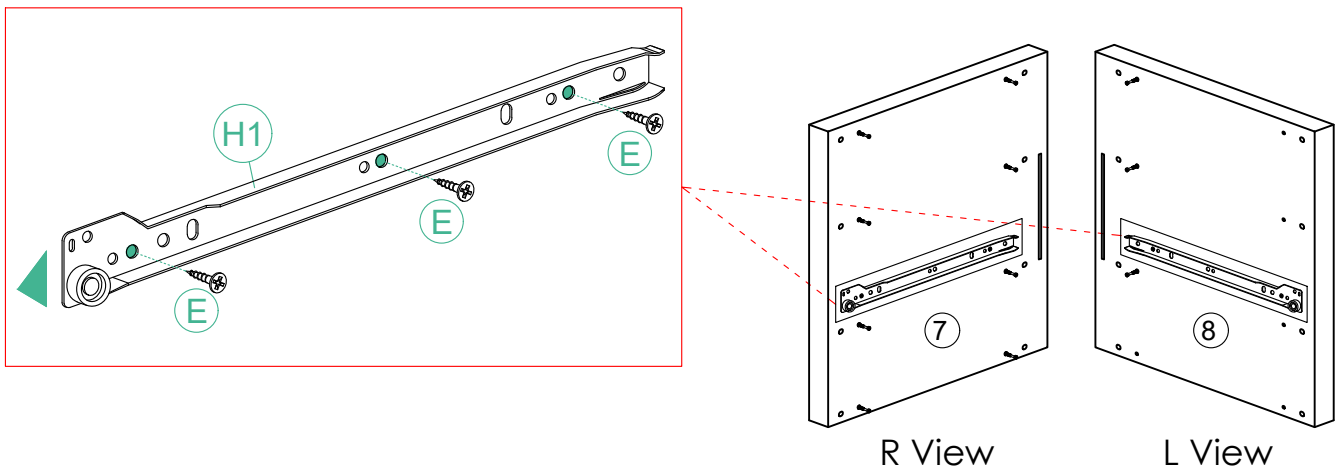


- 12** Insert Wood Dowel M8 X 25MM (C) to middle up (9), middle down (10), top panel (12) and bottom panel (12).

Note: Please Fully Insert the wood dowel

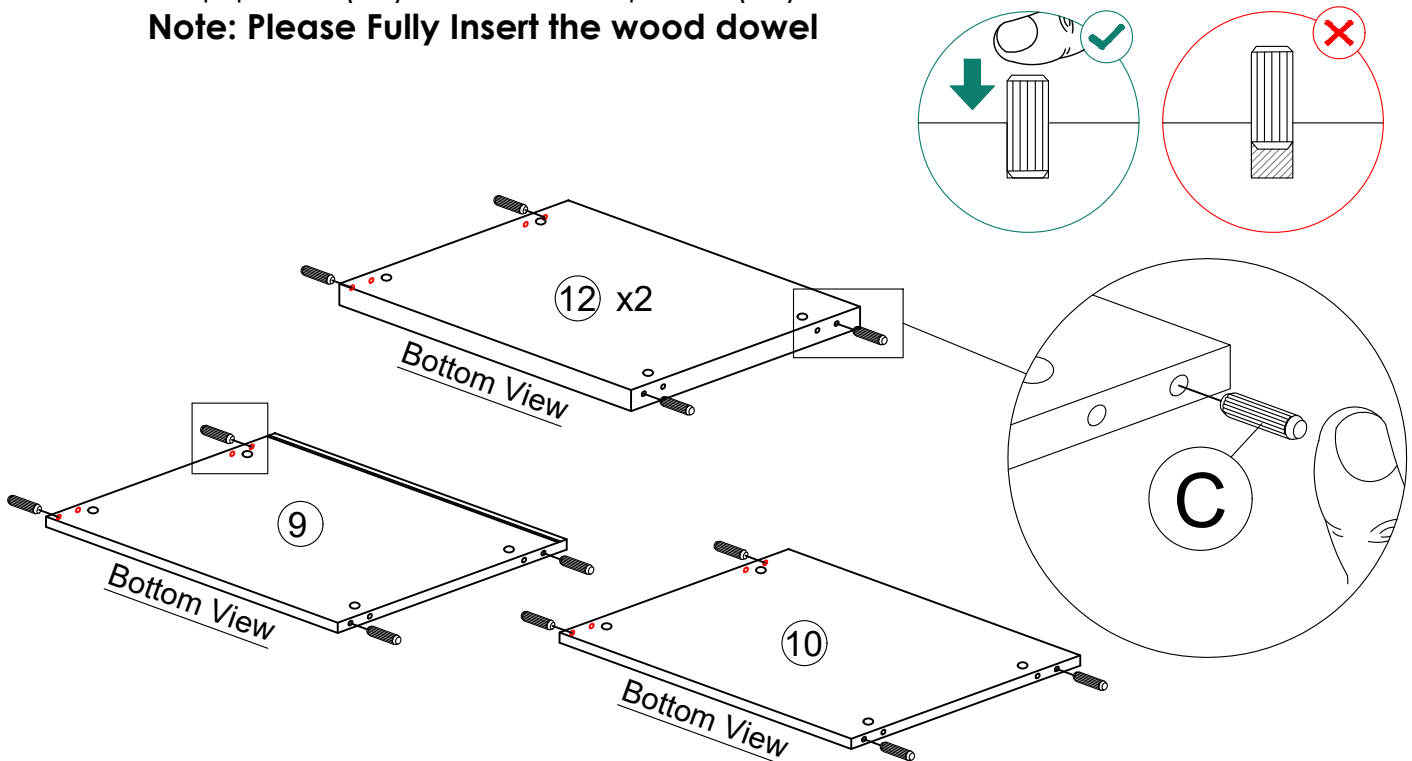


ASSEMBLY INSTRUCTIONS

- 13** Insert Camlock (A) to middle up (9), middle down (10), top panel (12) and bottom panel (12).

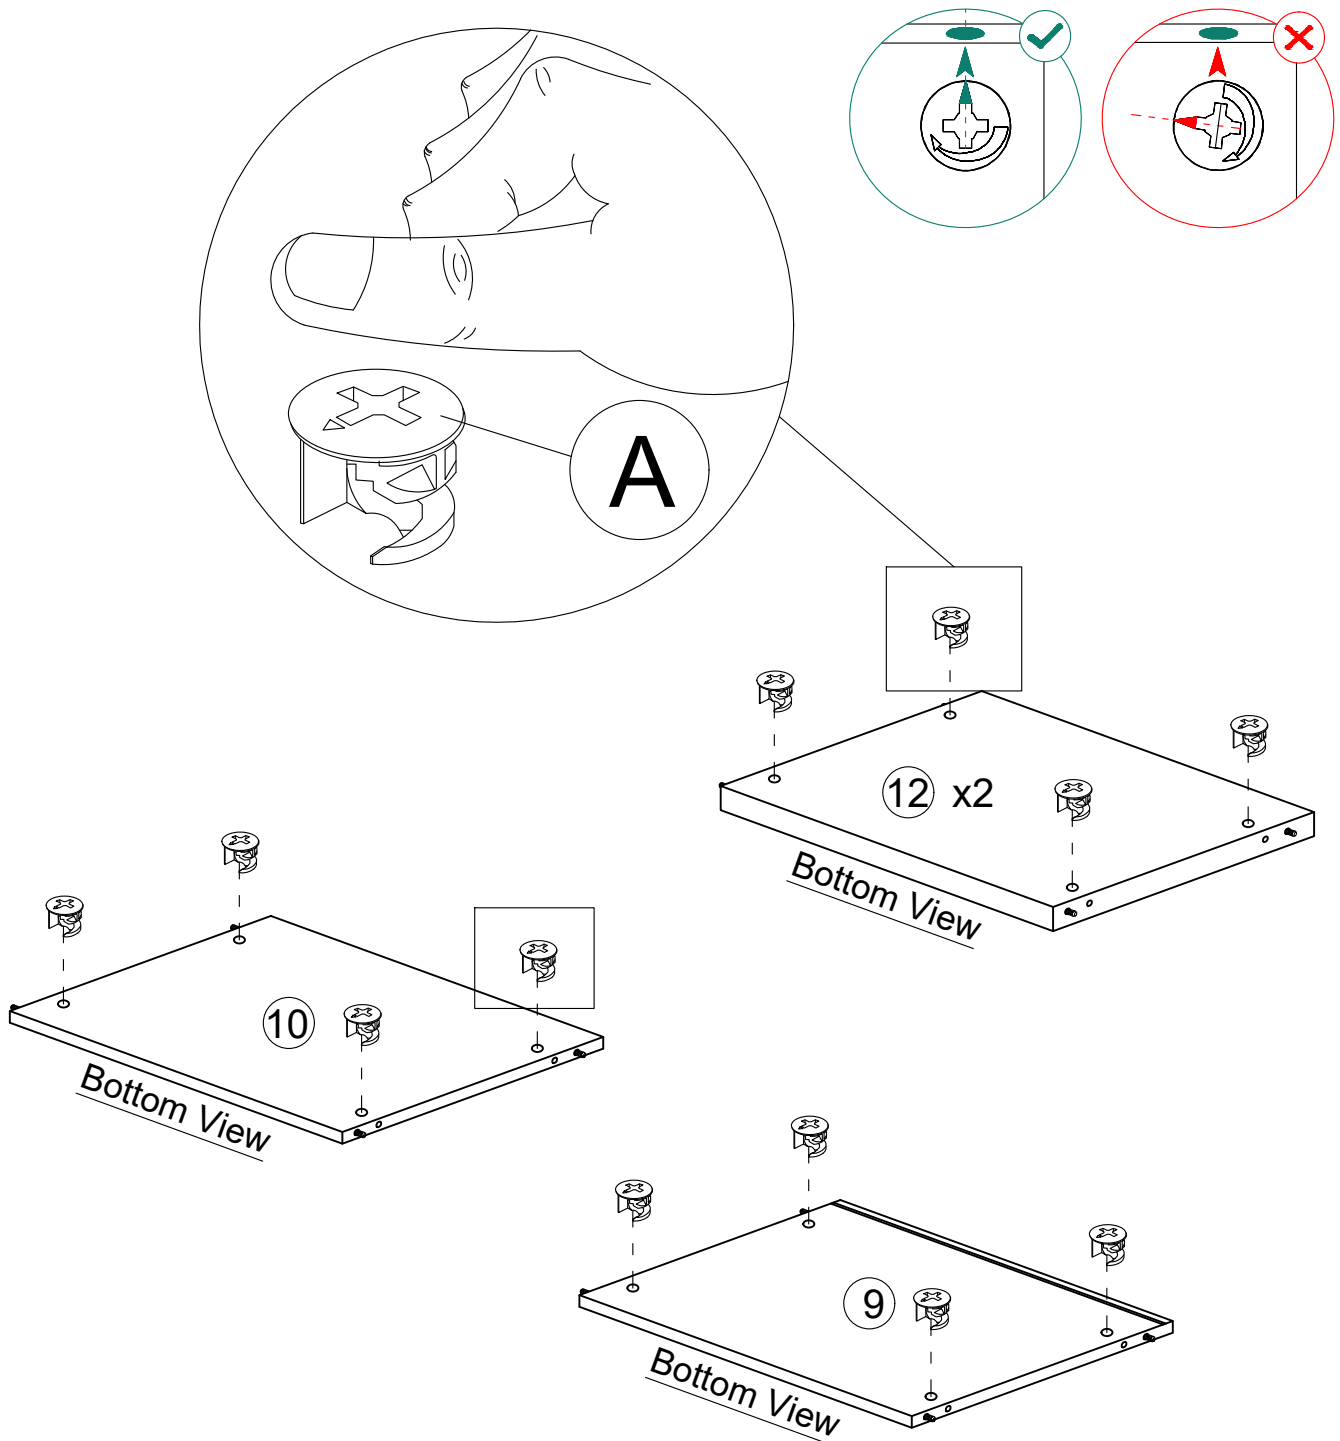


ASSEMBLY INSTRUCTIONS

- 14** Attach Assembled top panel (12), bottom panel (12) to Side Panel (left) (7) using Phillips Head Screwdriver (Not Included). Tighten Camlock (A) clockwise.
Note: Please rotate 60-Degree to lock.

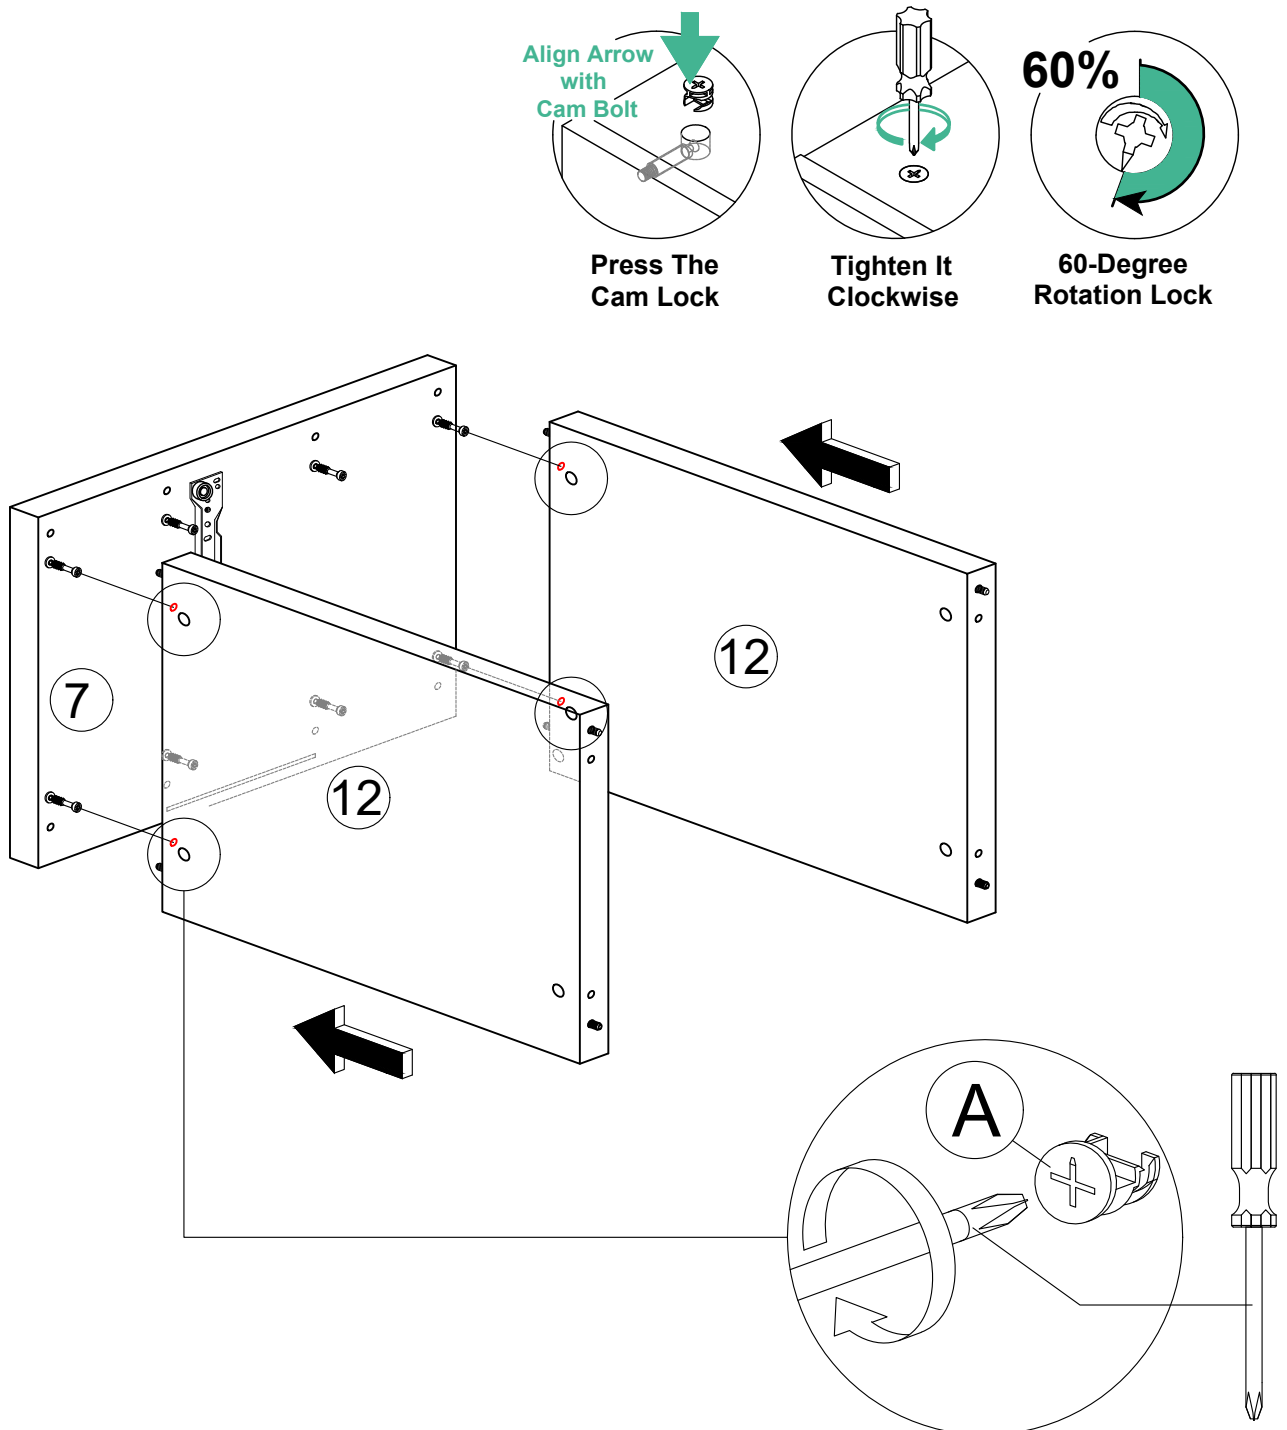


ASSEMBLY INSTRUCTIONS

- 15** Attach Assembled middle up (9) & middle down (10) to side panel (left) (7), using Phillips Head Screwdriver (Not Included). Tighten Camlock (A) clockwise.
Note: Please rotate 60-Degree to lock.

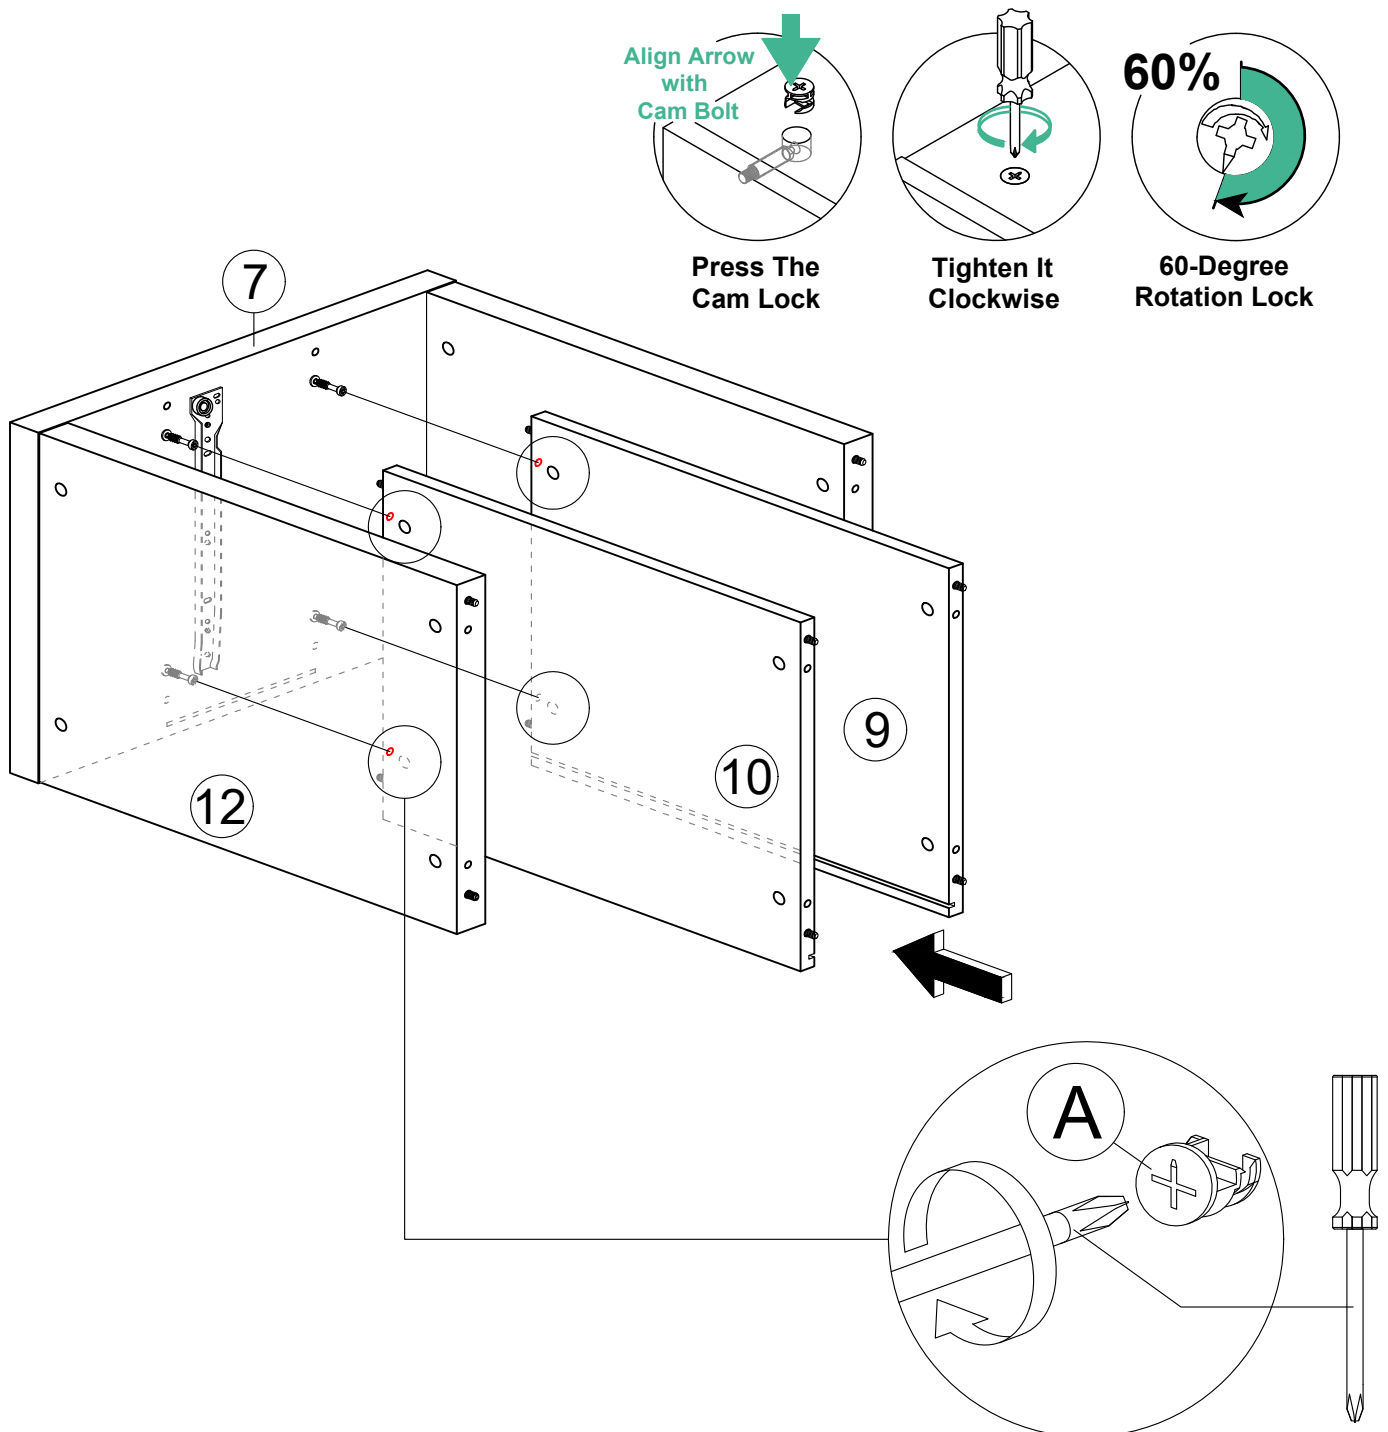


ASSEMBLY INSTRUCTIONS

- 16** Slot-in back panel (11) to middle up (9) and middle down (10) until side panel left (7).

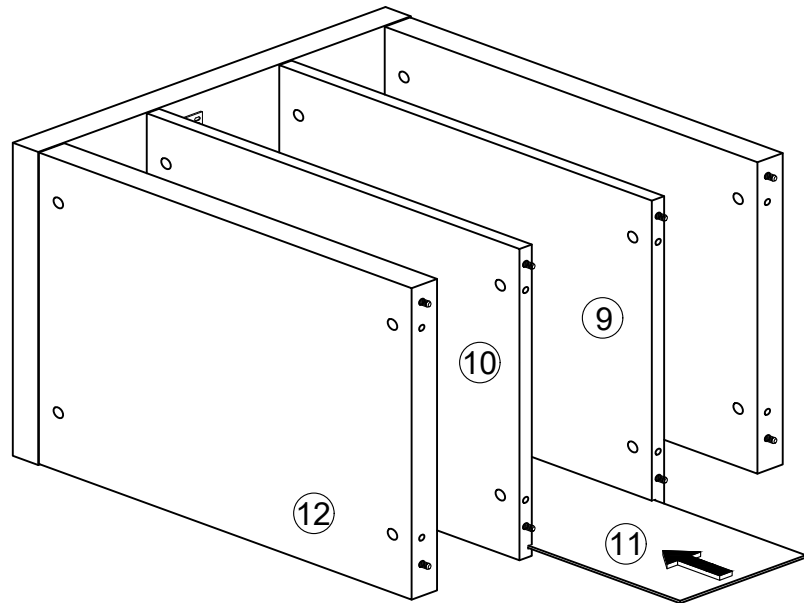


- 17** Attach Assembled side panel right (8) to top panel (12), middle up (9), middle down (10) & bottom panel (12), using Phillips Head Screwdriver (Not Included). Tighten Camlock (A) clockwise.

Note: Rotate the camlock 60-Degrees to lock.

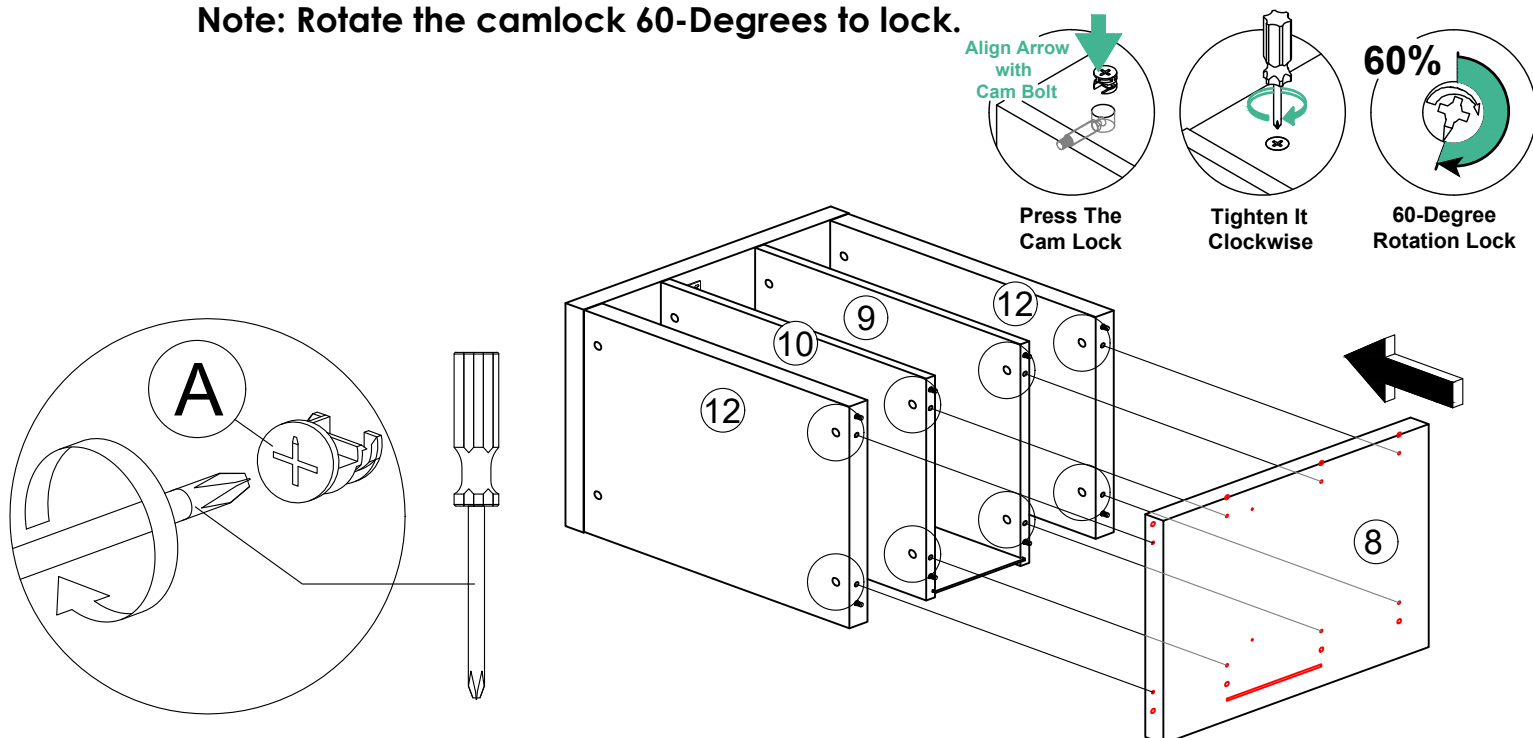


ASSEMBLY INSTRUCTIONS

- 18** Install the L brackets (K) at the four corners of the back panel (11), using CB Screw M3.5 X 16MM (E) and Phillips Head Screwdriver (Not Included).
Fully tighten.


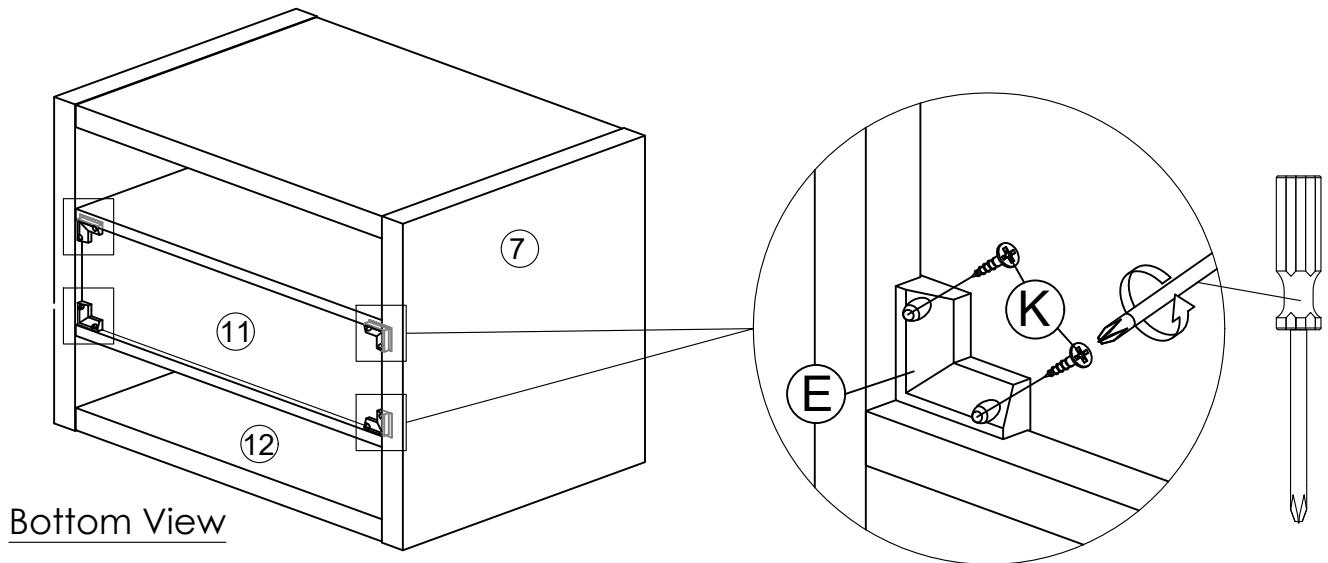


- 19** Install the PVC Nail Leg (G) at the bottom of the side panel (7) & (8), using Hammer (Not Included).

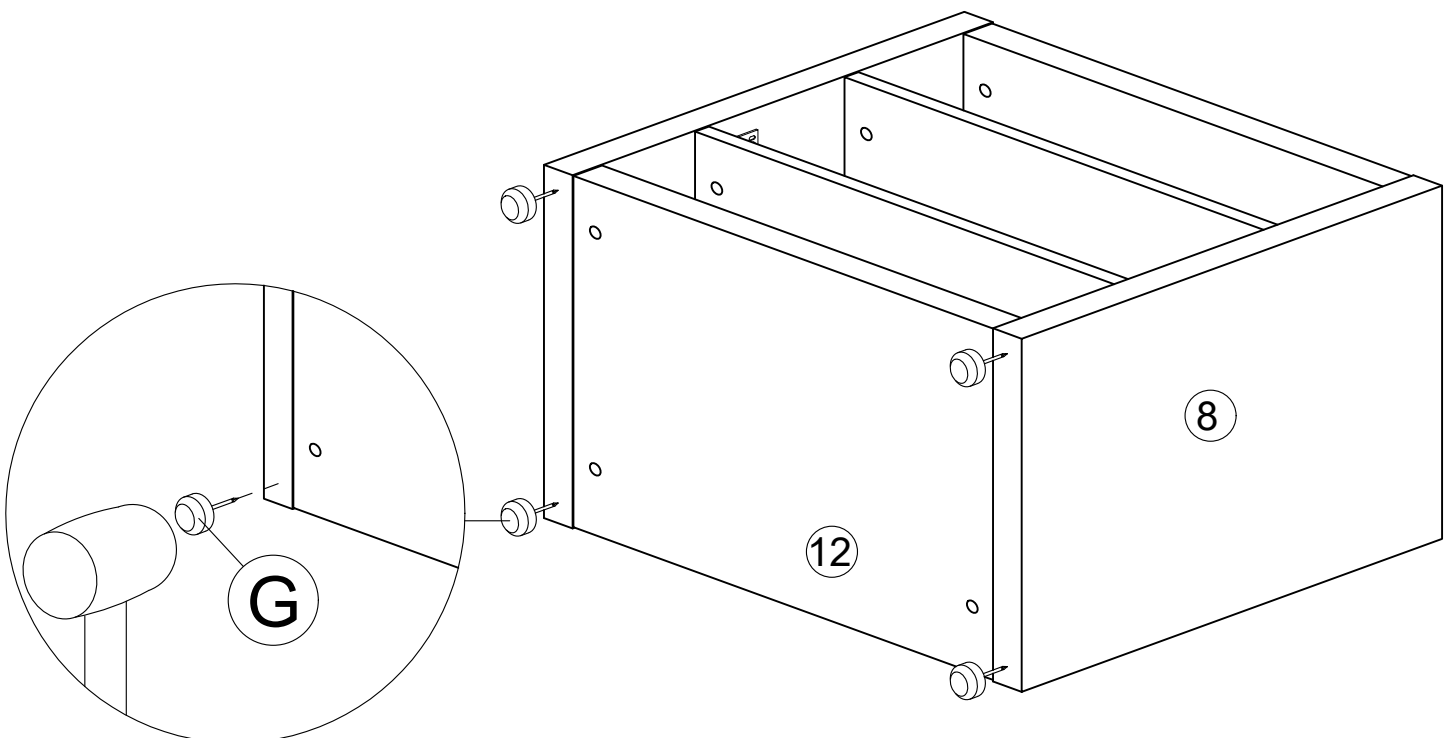


ASSEMBLY INSTRUCTIONS

- 20** Place the drawer between the left (7) and right (8) side panels and secure it in position.

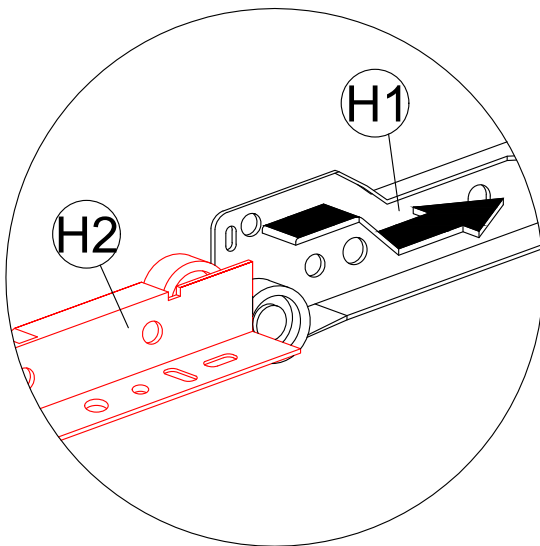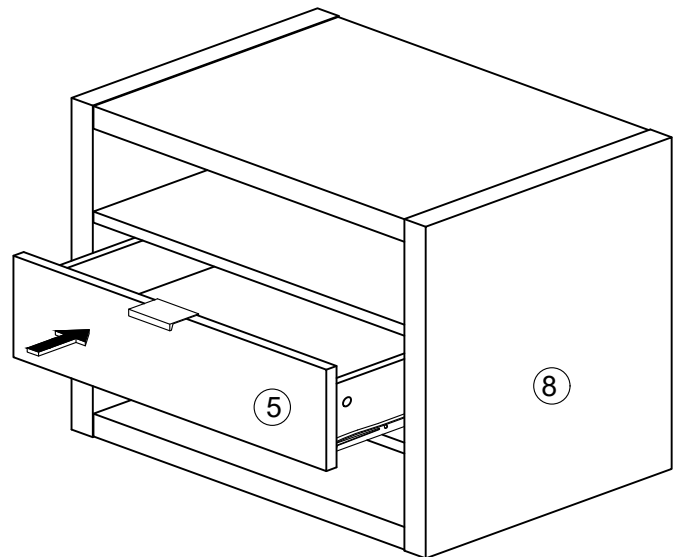

- 21** Assembled Completed. Enjoy.

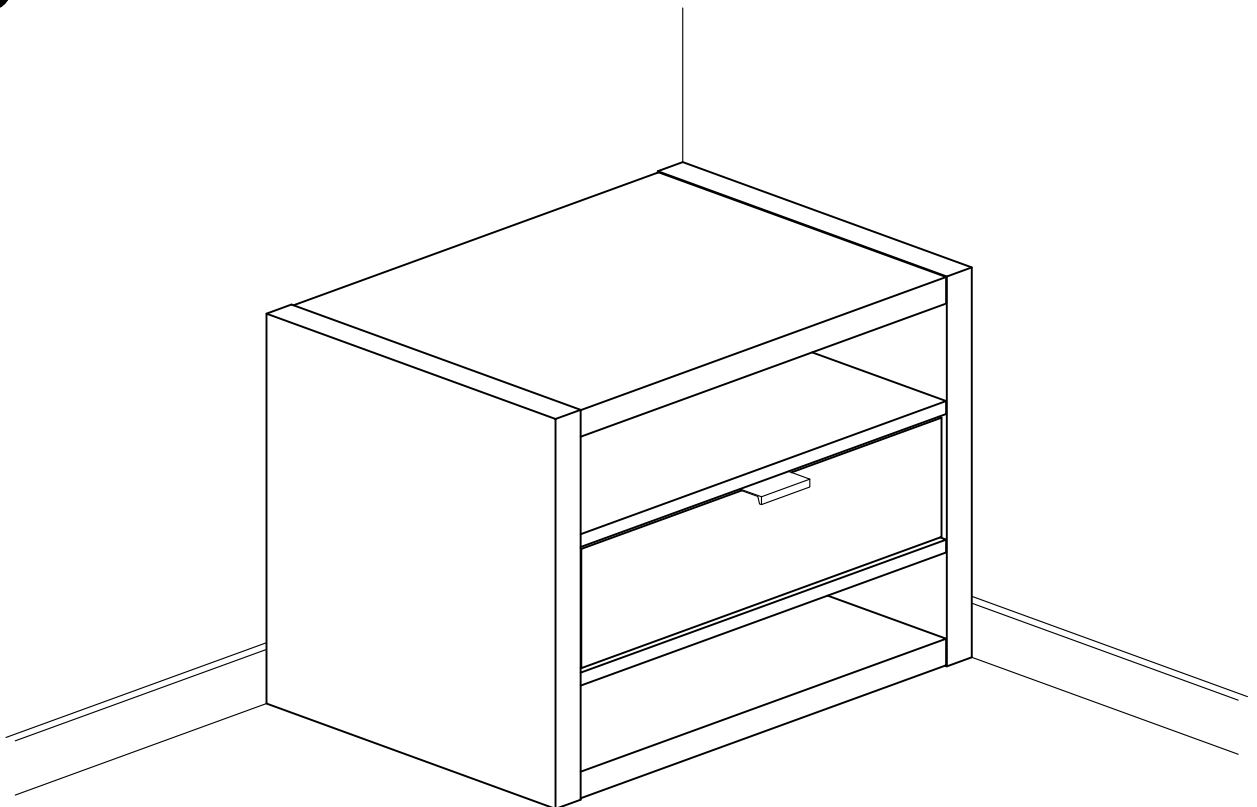

Design Exquisite Furniture For Your Home

PRODUCT WARRANTY

- 1-year limited on cover against splitting, peeling, and/or tearing.
- 1-year limited on internal and external frame structure.

Contact us:

We make all efforts to guarantee that the products you receive are in excellent condition. If there are any parts missing or damaged, the Customer Service Team will be happy to provide free replacements for you. We have professional warehouses where the current inventory of parts is enough so that they will arrive in your hands as fast as possible.

Assistance with assembly or product details is available; don't hesitate to get in touch with us to get priority service.

Our E-mail address: CS.furniture@outlook.com.



CS.furniture@outlook.com