



ASSEMBLY INSTRUCTIONS

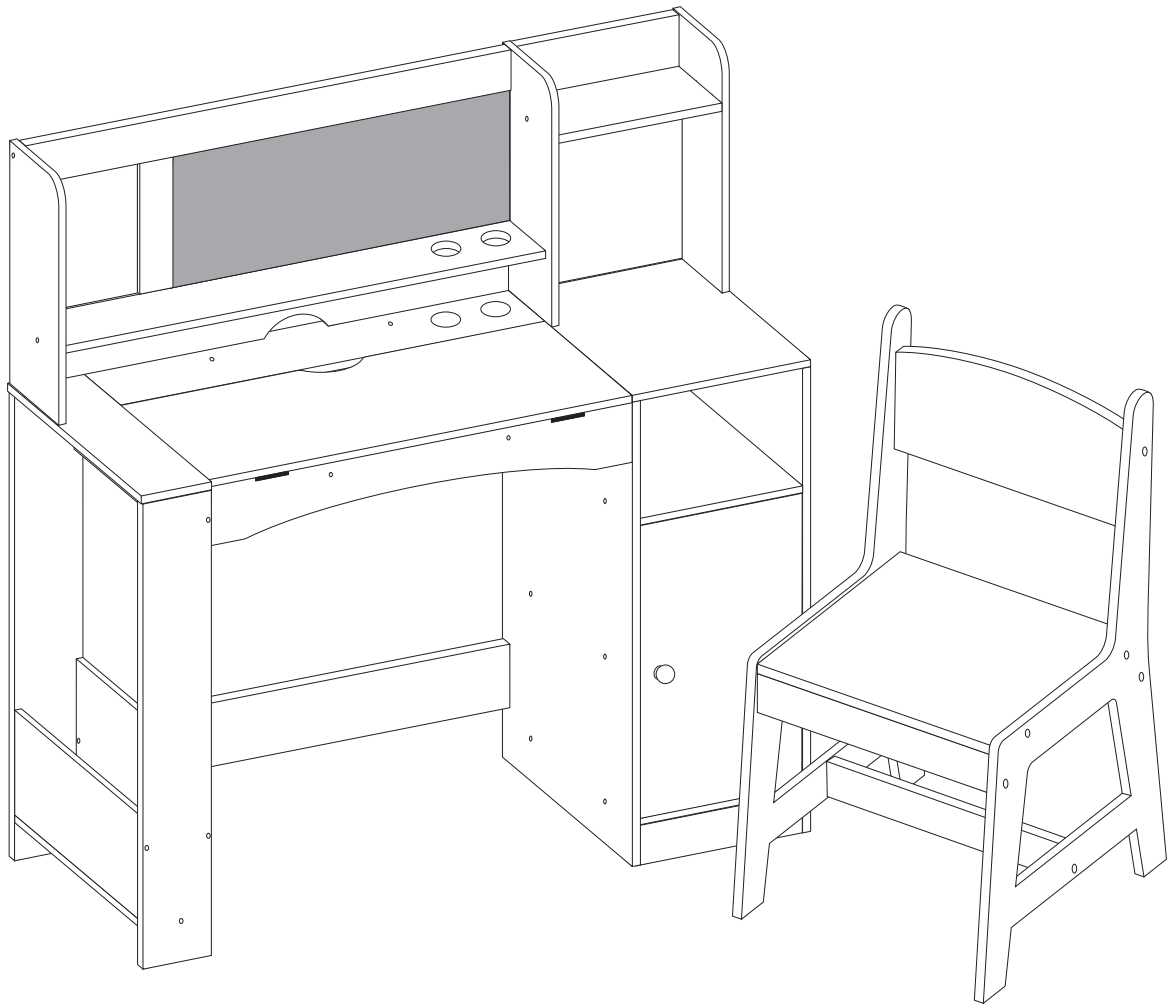


If you have any question about the installation, please do not hesitate to contact us, we will reply to you within 24 hours and do our best to help you solve all problems.


Before You Start

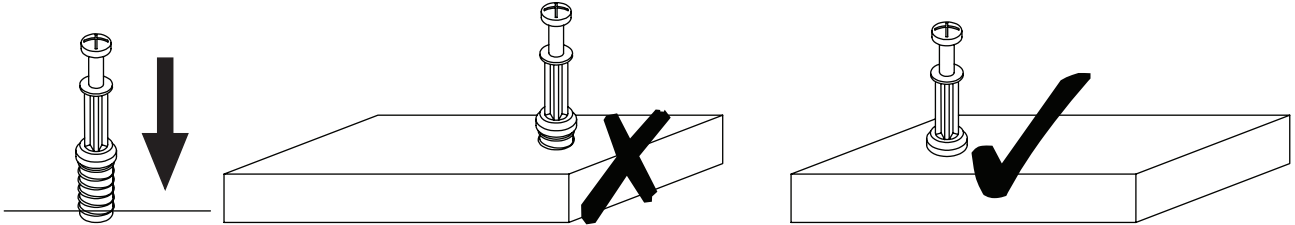


QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

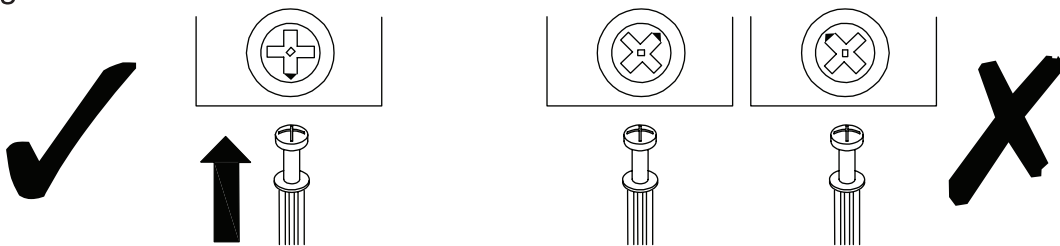

CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

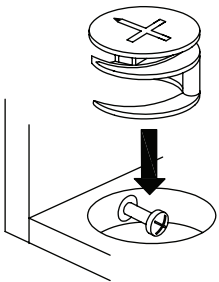

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

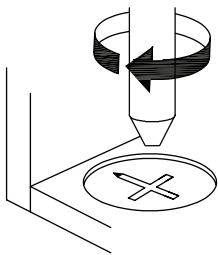

Turn cam lock clockwise to tighten.




⚠ WARNING
CHOKING HAZARD-
Small parts. Not for children under 3 yrs.









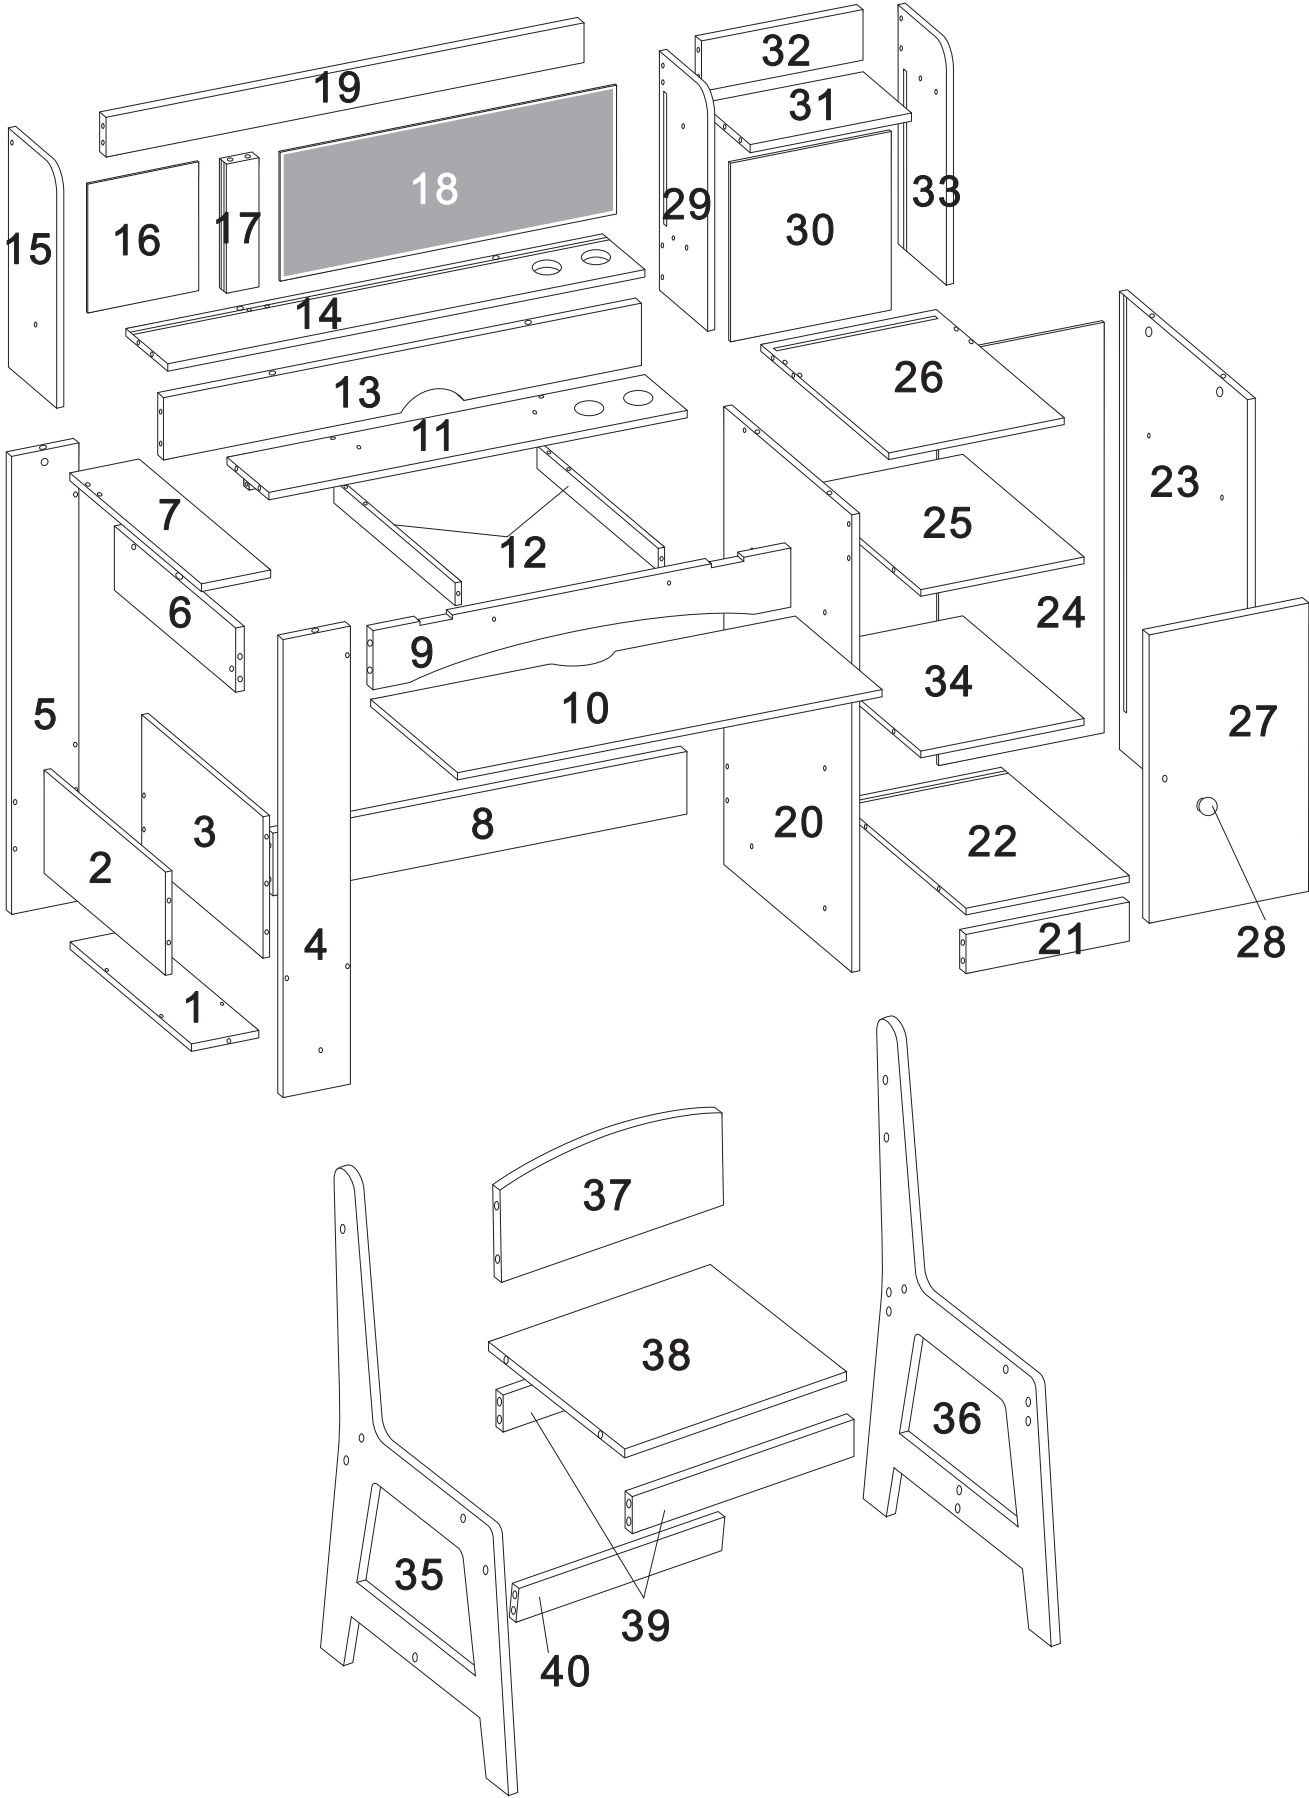
















































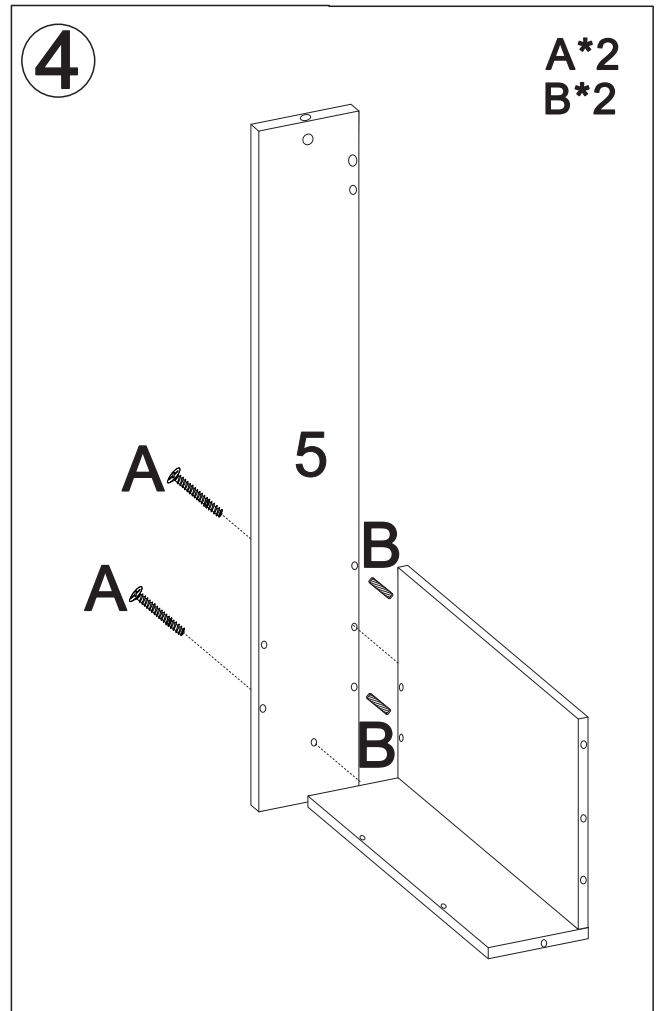
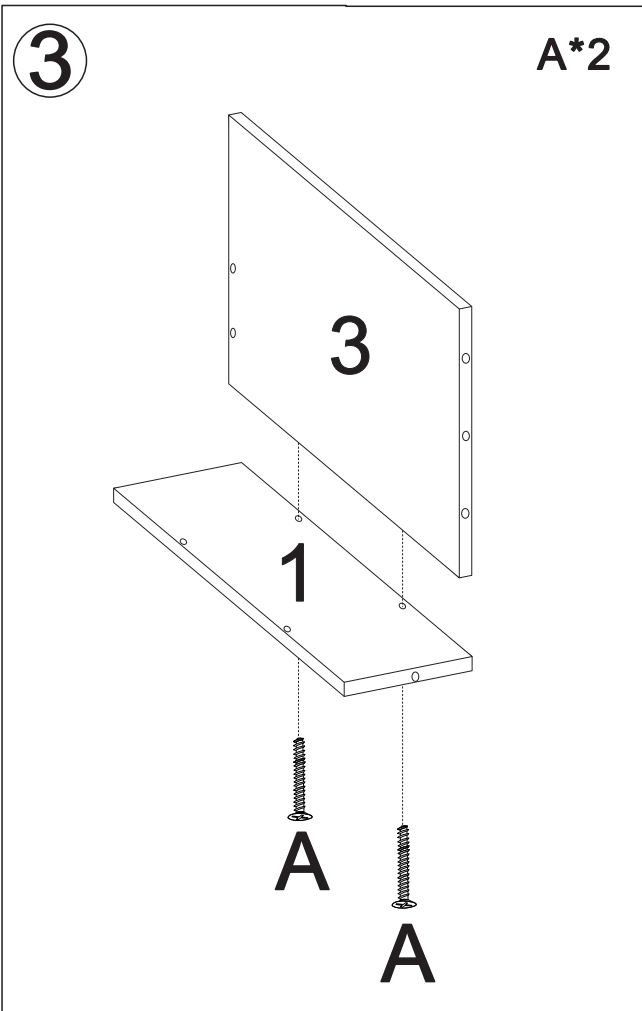
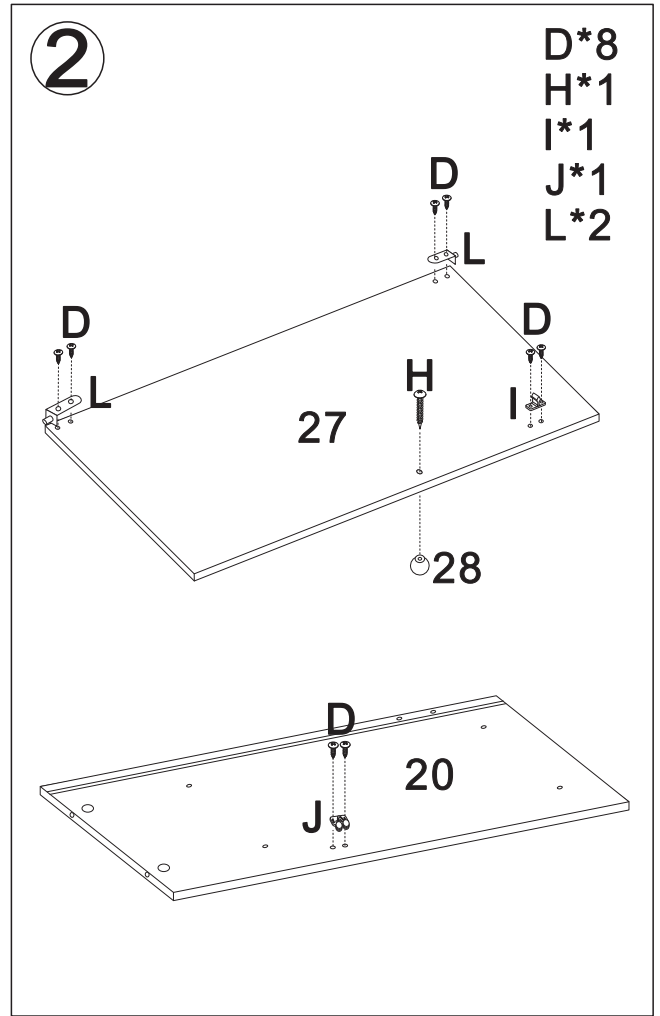
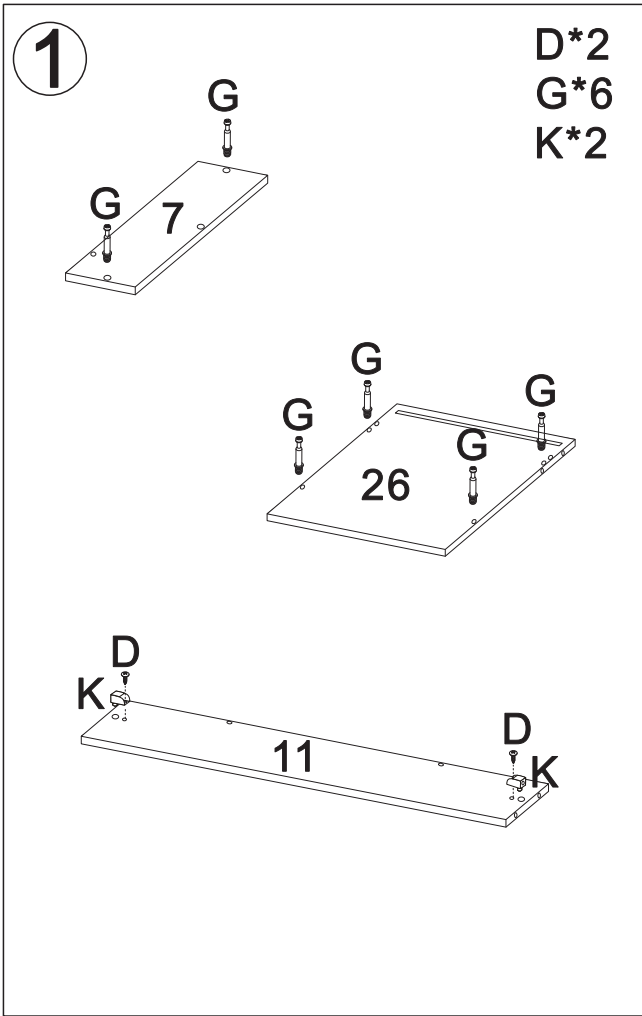
WARNING:
Assembly by an adult





EXPLODED DRAWING




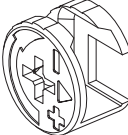





Part List

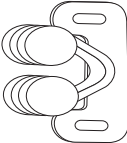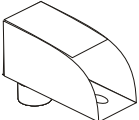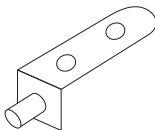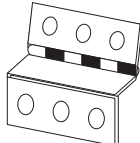
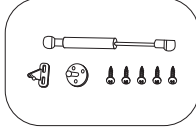
 1: 1pc	 2: 1pc	 3: 1pc	 4: 1pc	 5: 1pc	 6: 1pc	
 7: 1pc	 8: 1pc	 9: 1pc	 10: 1pc	 11: 1pc	 12: 2pcs	
 13: 1pc	 14: 1pc	 15: 1pc	 16: 1pc	 17: 1pc	 18: 1pc	
 19: 1pc	 20: 1pc	 21: 1pc	 22: 1pc	 23: 1pc	 24: 1pc	
 25: 1pc	 26: 1pc	 27: 1pc	 28: 1pc	 29: 1pc	 30: 1pc	
 31: 1pc	 32: 1pc	 33: 1pc	 34: 1pc	 35: 1pc	 36: 1pc	
 37: 1pc	 38: 1pc	 39: 2pcs	 40: 1pc	 Ø5x40mm A: 59pcs +6(spare)	 Ø6x30mm B: 50pcs +5(spare)	 Ø4x35mm C: 2pcs
 Ø3x8mm D: 10pcs +1(spare)	 Ø4x12mm E: 20pcs +2(spare)	 F: 6pcs	 G: 6pcs	 Ø4x25mm H: 1pc	 I: 1pc	
 J: 1pc	 K: 2pcs	 L: 2pcs	 M: 2pcs	 N: 1pc	 O: 1pc	





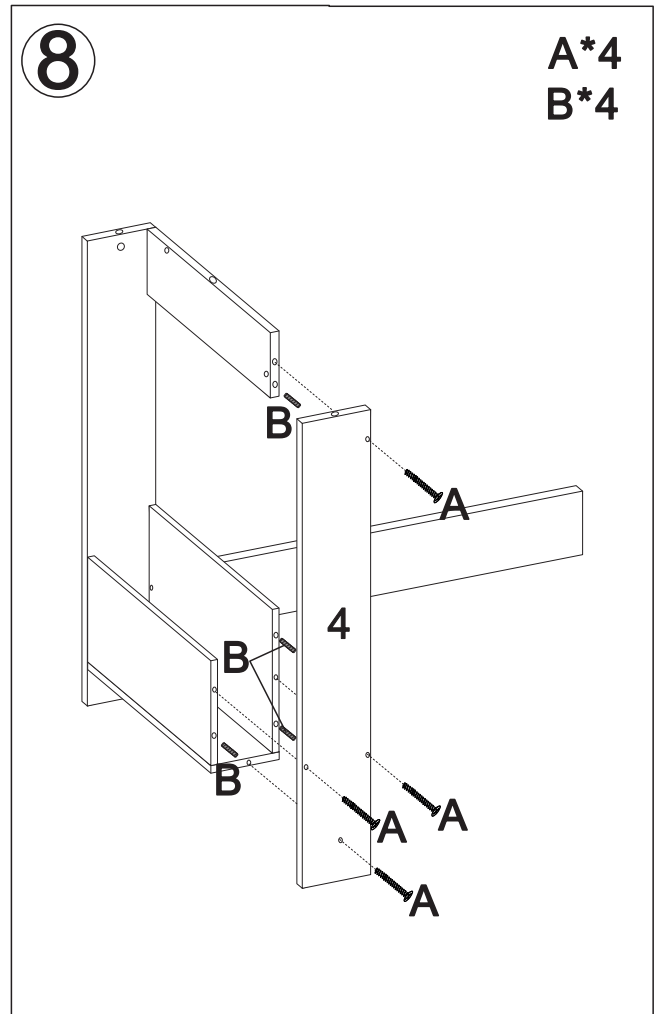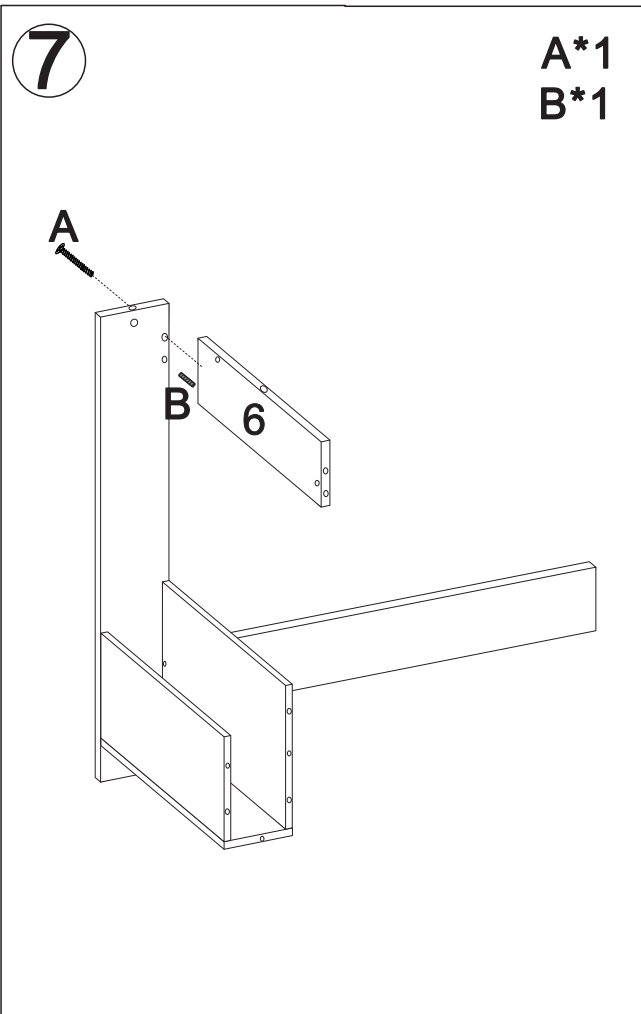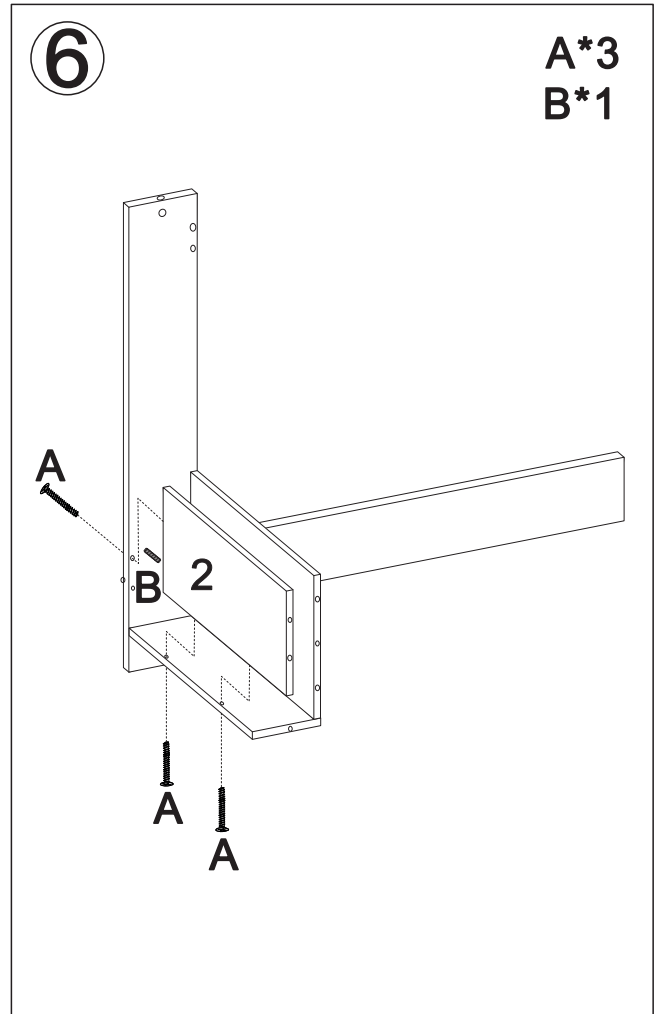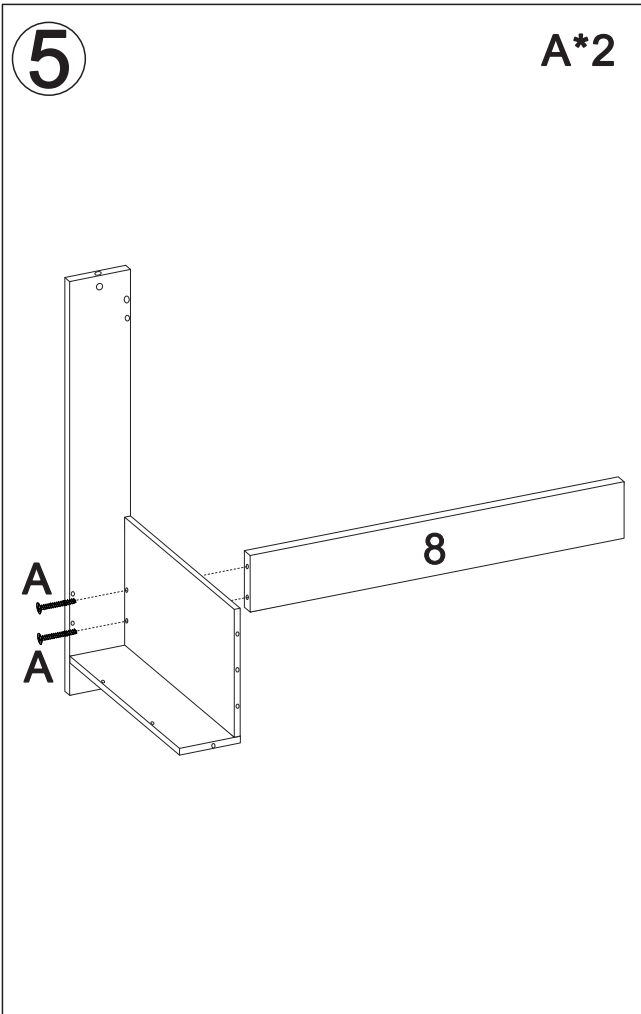

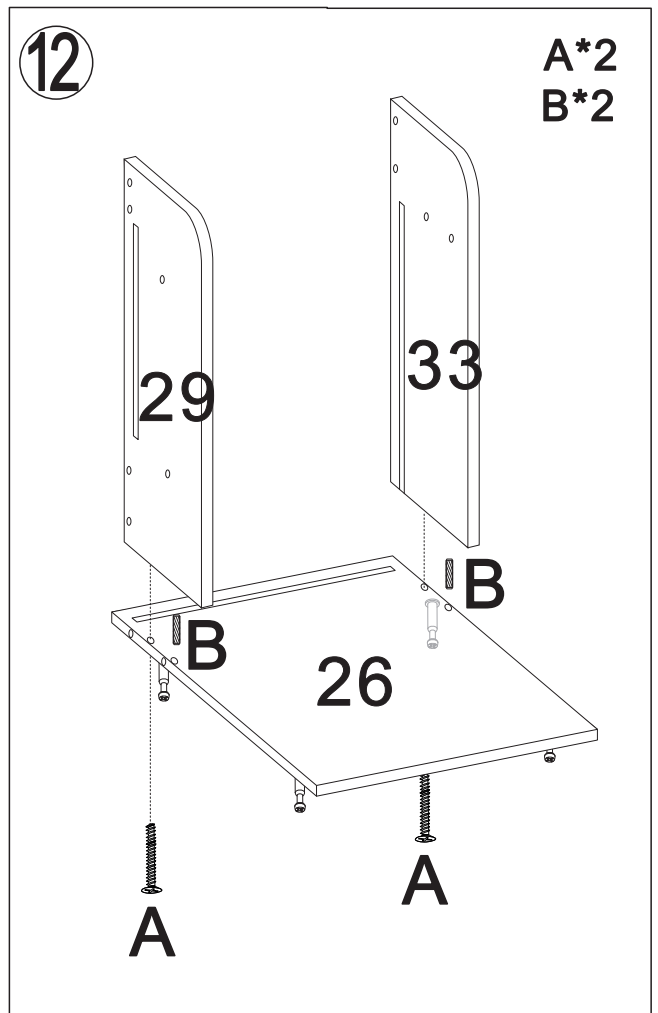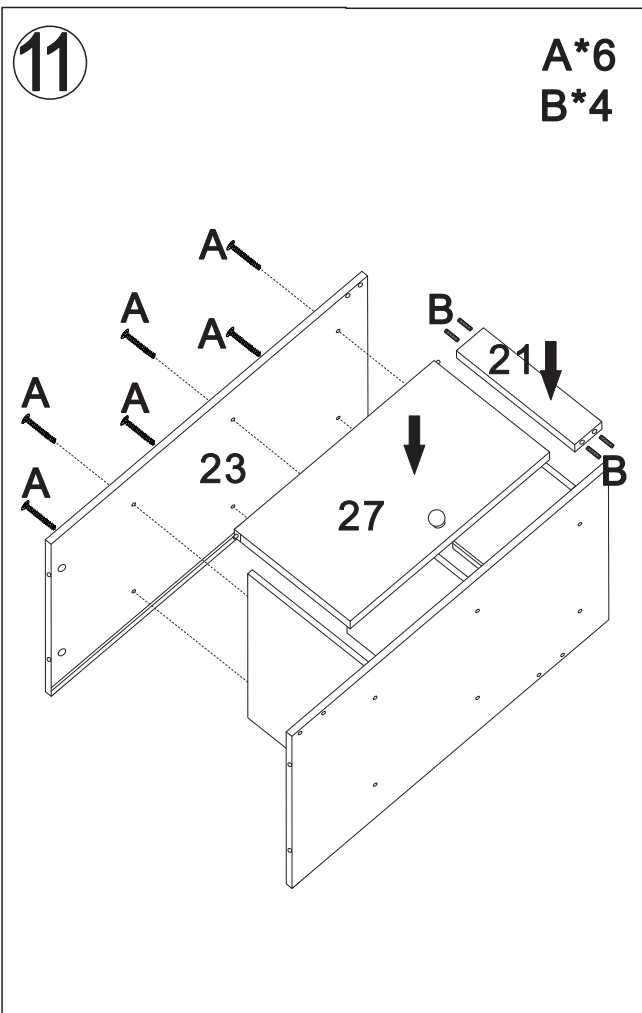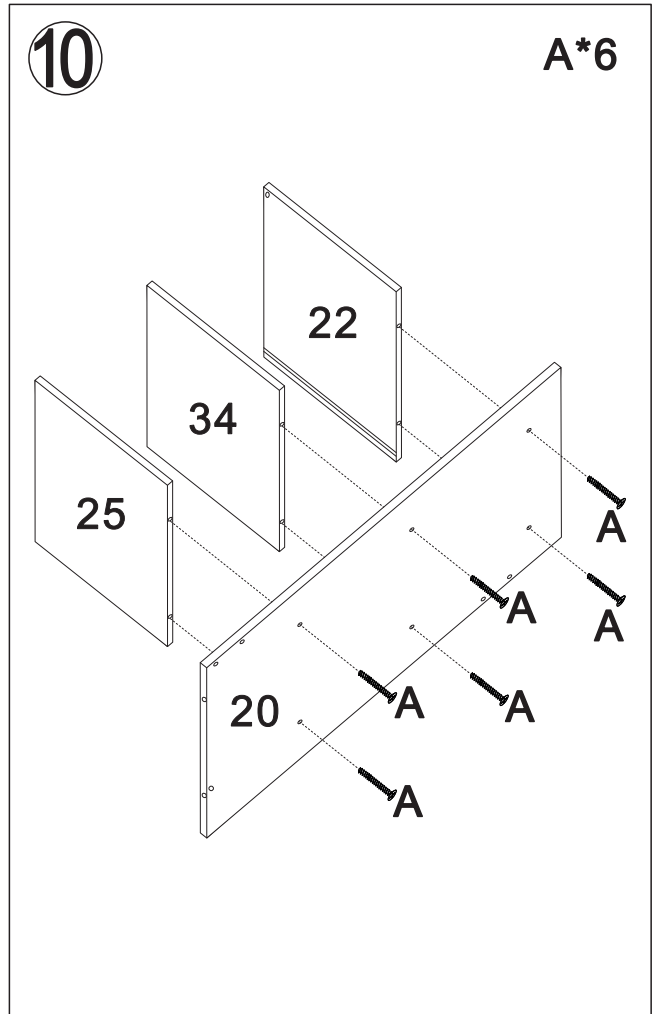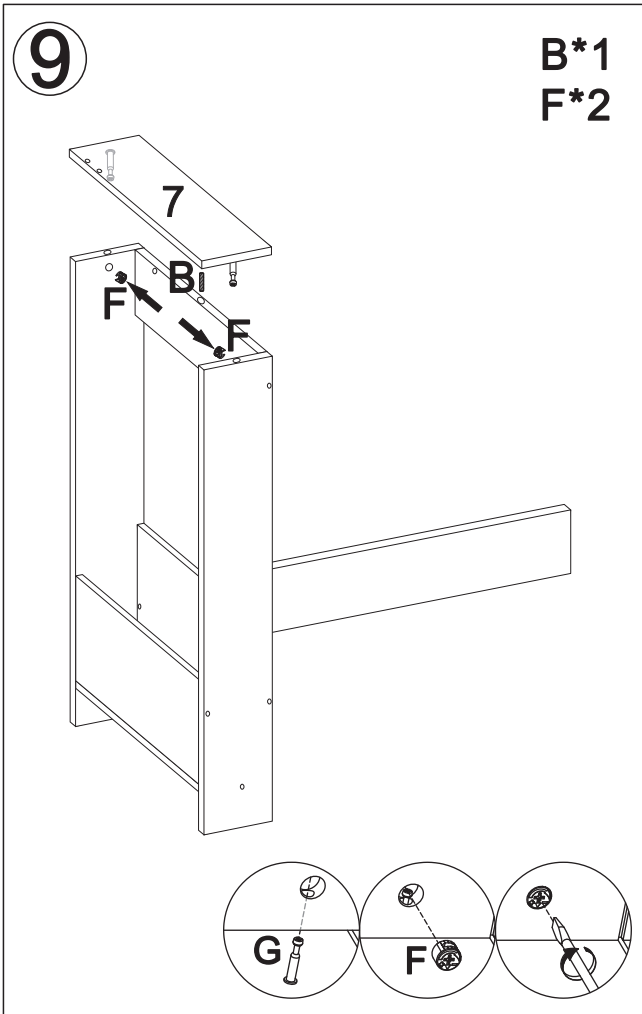


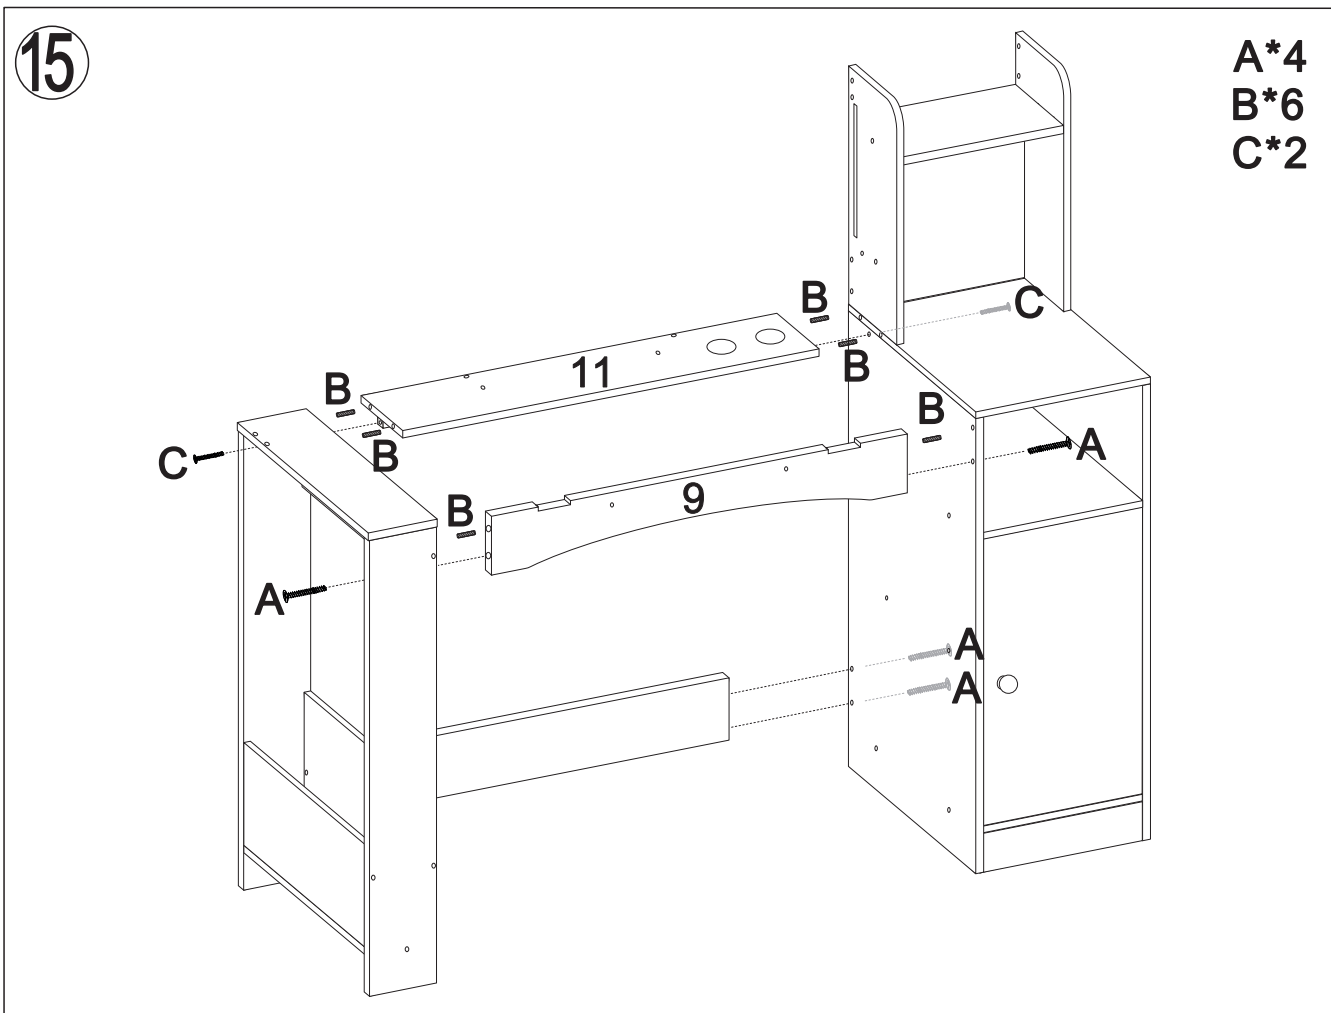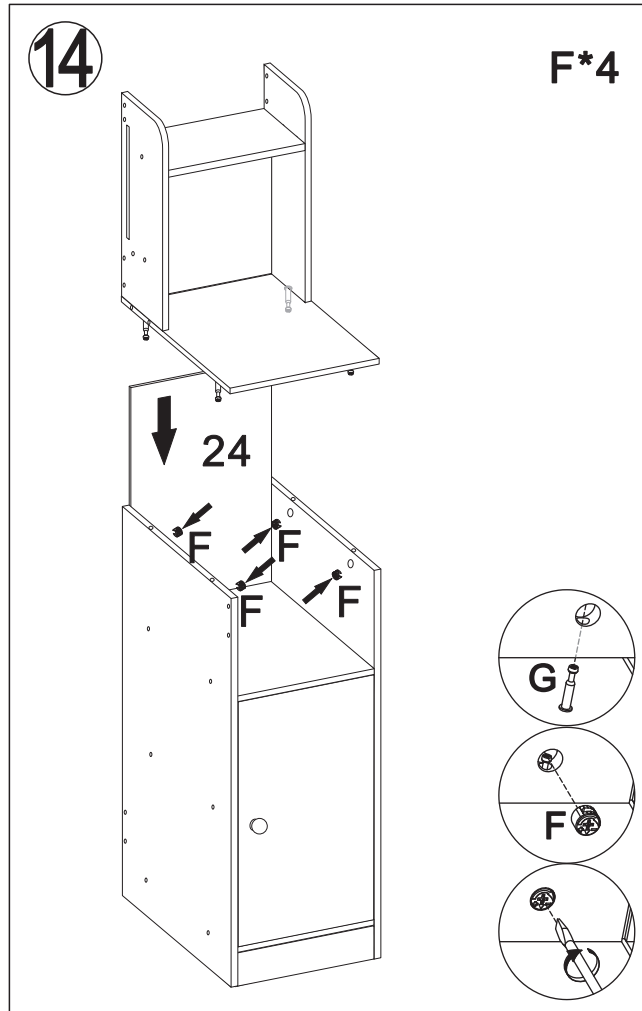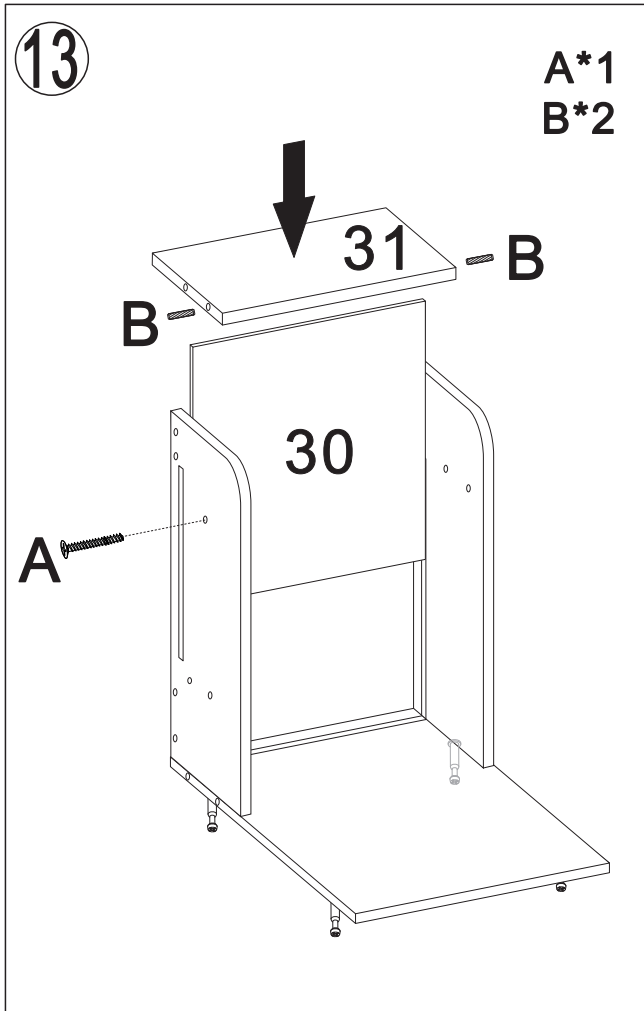

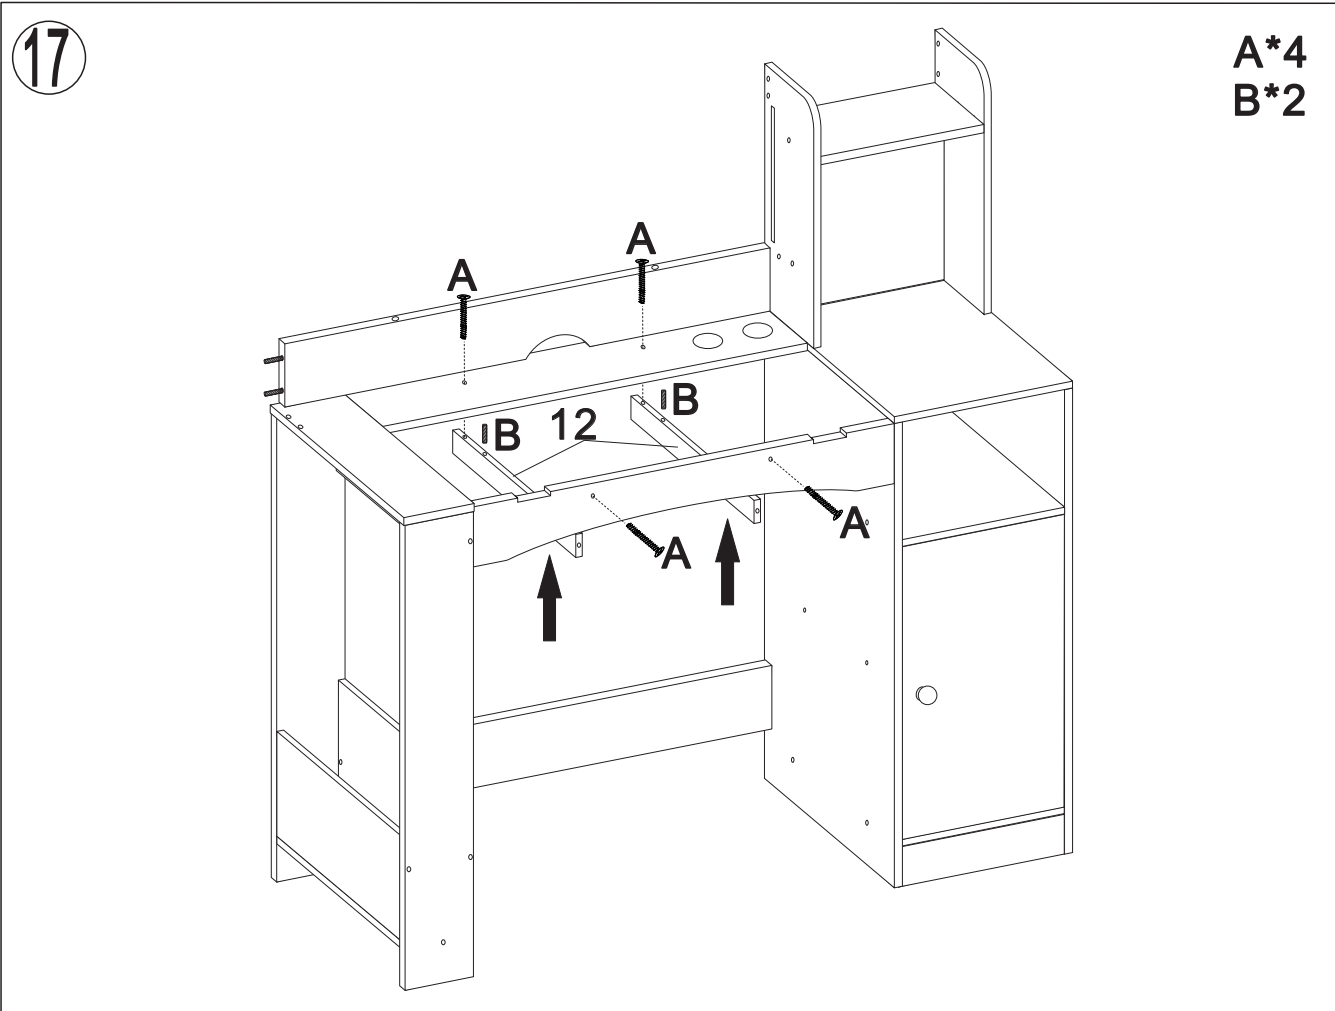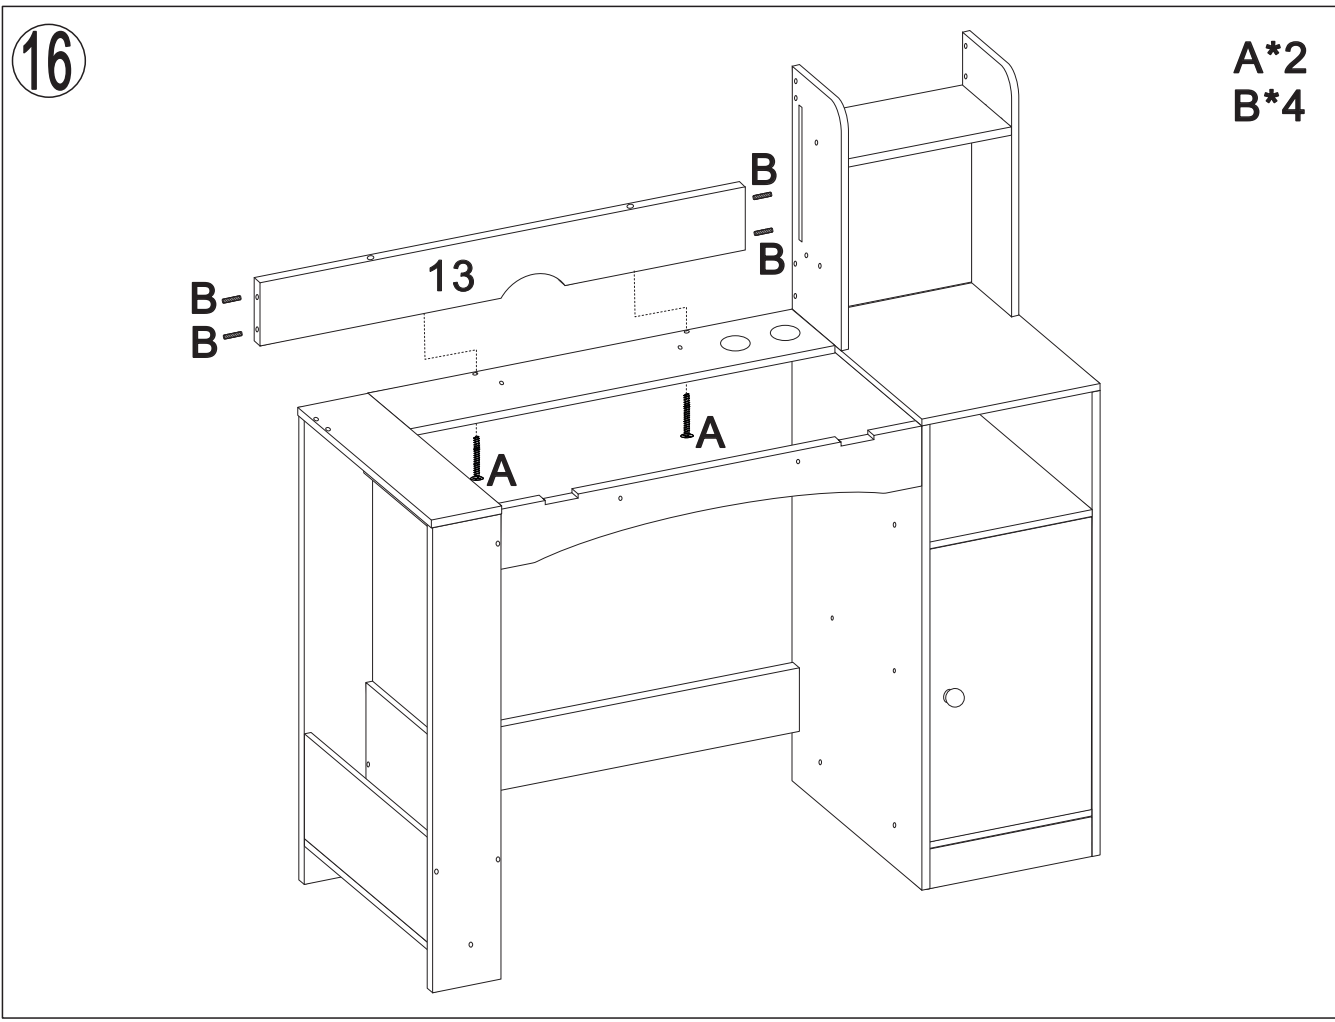

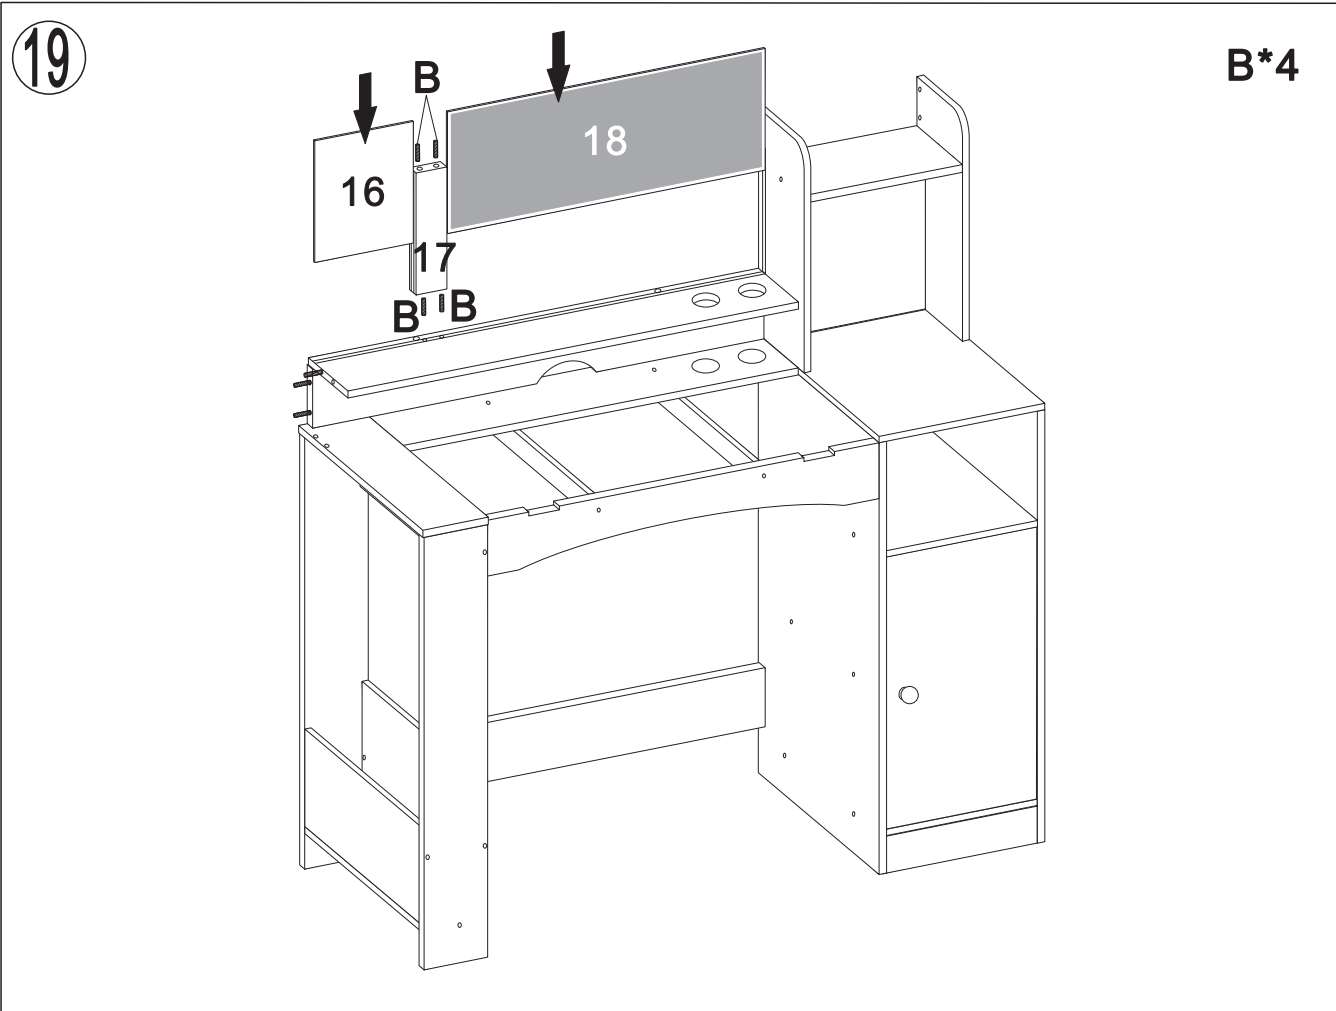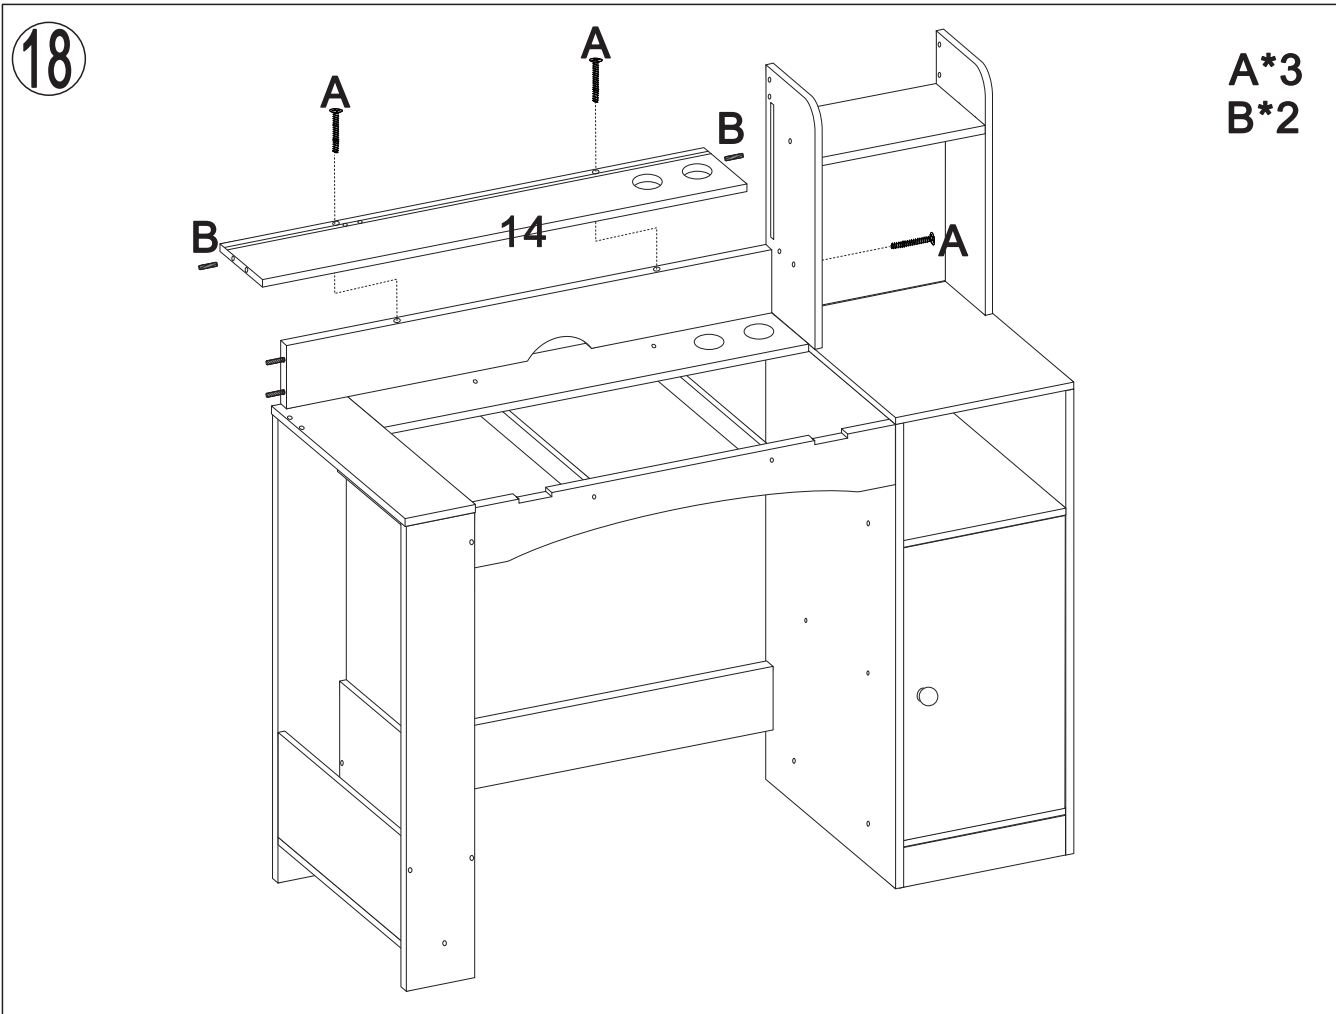


20

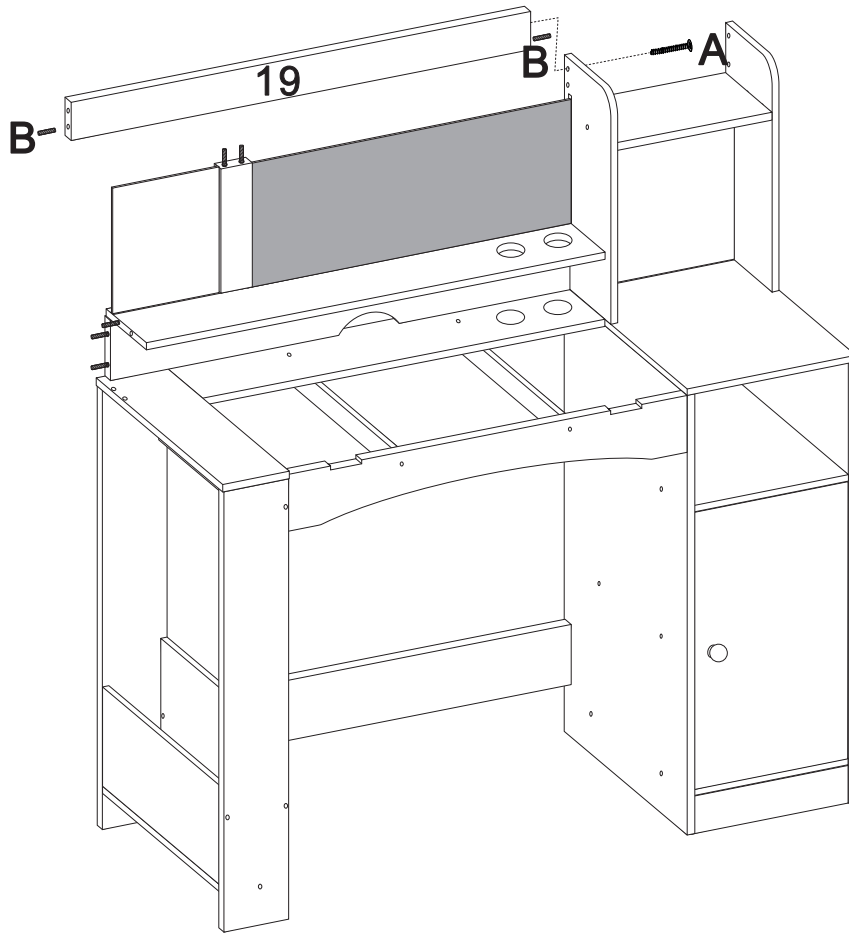



A*1
B*2

21

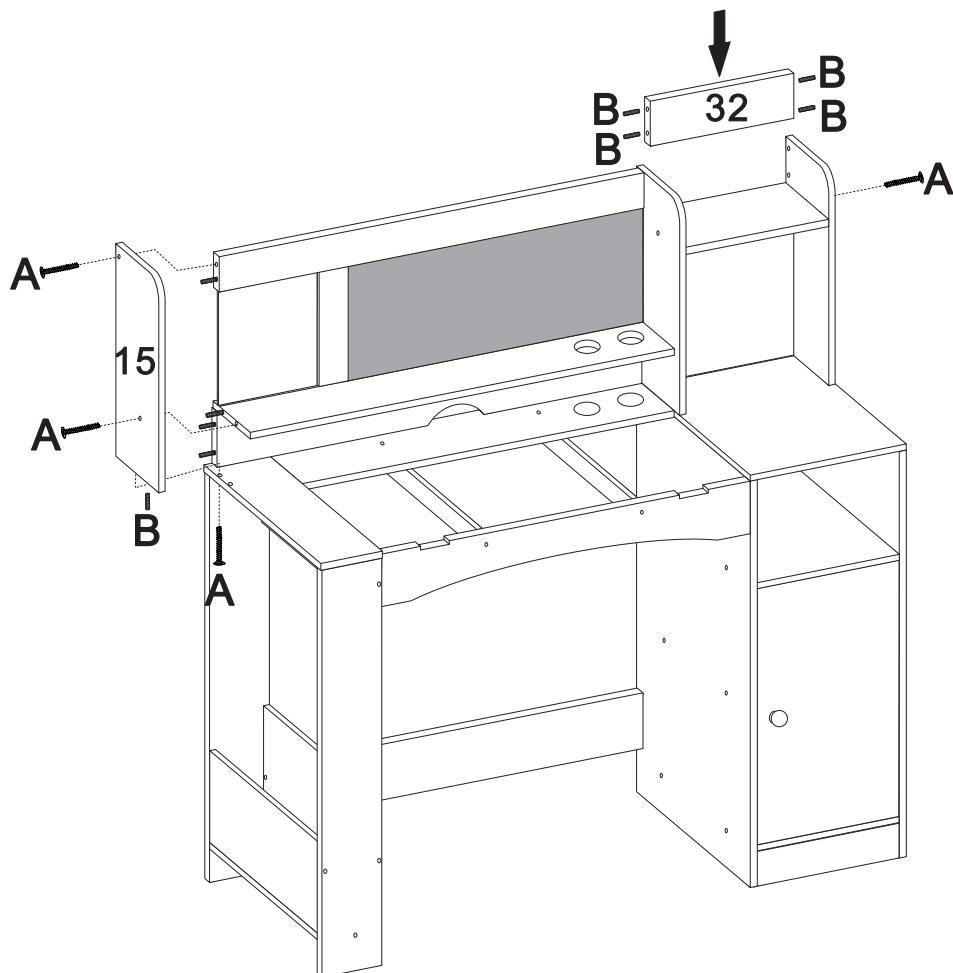

A*4
B*5


22

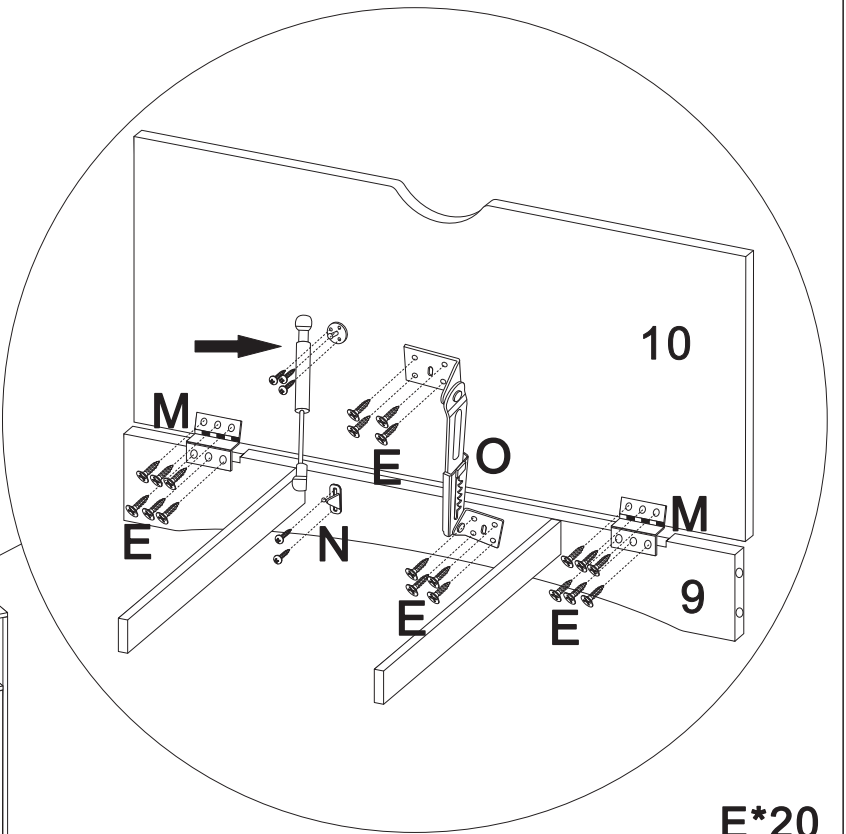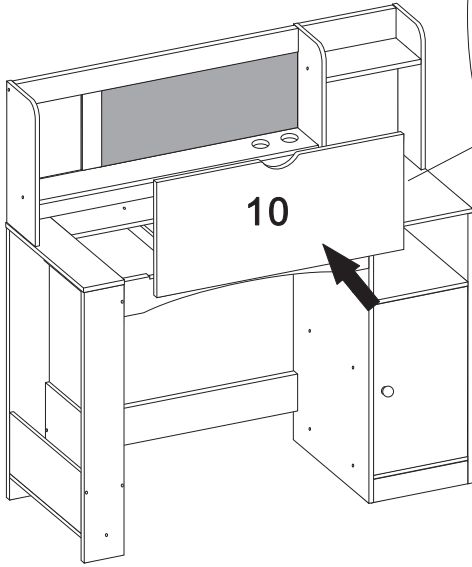

E*20
M*2
N*1
O*1

23

A*6
B*4

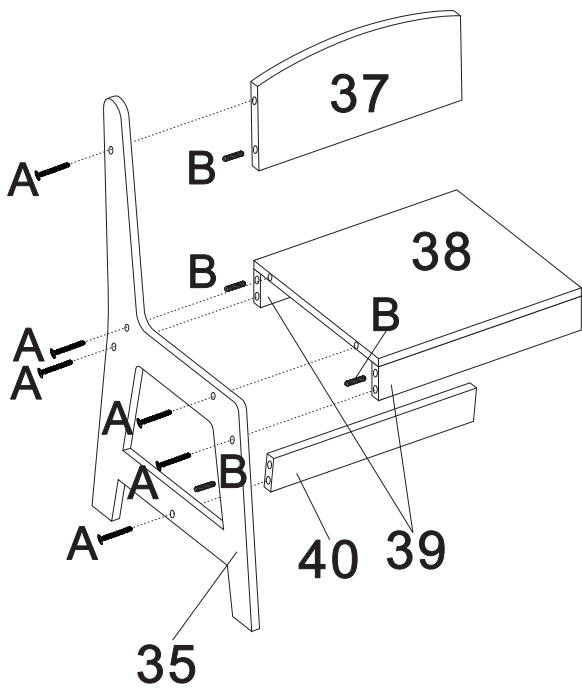

24

A*6
B*4

