

Installing Your New Framed Mirror

Tools Required

- Hammer
- Drill with 1/4" and 3/16" drill bits
- Phillips head screwdriver
- Level



Step 1

Inspect frame and mirror for any damages or manufacturer defects


Step 2

Locate all hardware. Installed on the back of the frame, there should be:

- 2 hangrails, one on the width side and one on the height side
- 2 security brackets on the bottom of the frame
- 4 L brackets, one on each corner

Hanging hardware will be packaged separately and taped to the inside of the box. It should include:

- 2 hangrails
- 12 screws with wall anchors
- 2 T-bolts with wall anchors
- 1 security wrench (1 wrench per order)

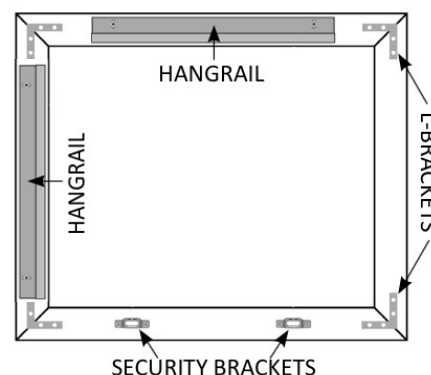

Step 3

For best results, always install frame into one or more wall studs. When a stud is not available, use provided wall anchors.

Choose your desired orientation and match the length of the hangrail on the frame to one of the included hangrails. Install hangrail at the desired height, with the screw holes facing downward. Use wall anchors if necessary.

Step 4

Hang the frame onto the wall by interlocking the hangrails into each other

Step 5

With the frame hanging on the wall and level, apply slight pressure to the bottom of the frame where the security brackets are installed. **DO NOT PRESS ON MIRROR.** This slight pressure will make an indentation on the wall where the security bracket opening rests on the wall.

Remove the framed mirror and set aside.

Step 6

Install the blue wall anchors in the middle of the security bracket indentation on the wall.

Step 7

Insert the T-Bolt into the blue wall anchor, leaving approximately 3/8" off the wall and in a horizontal position. There should be no thread visible.

Step 8

Place the framed mirror back on to the wall, allowing the T-Bolt to enter the security bracket. Using the security wrench provided, reach behind the frame and locate the T-Bolt. Turn the bolt 90-degrees, locking the frame onto the wall.

