


2-DRAWER MOBILE FILE CABINET

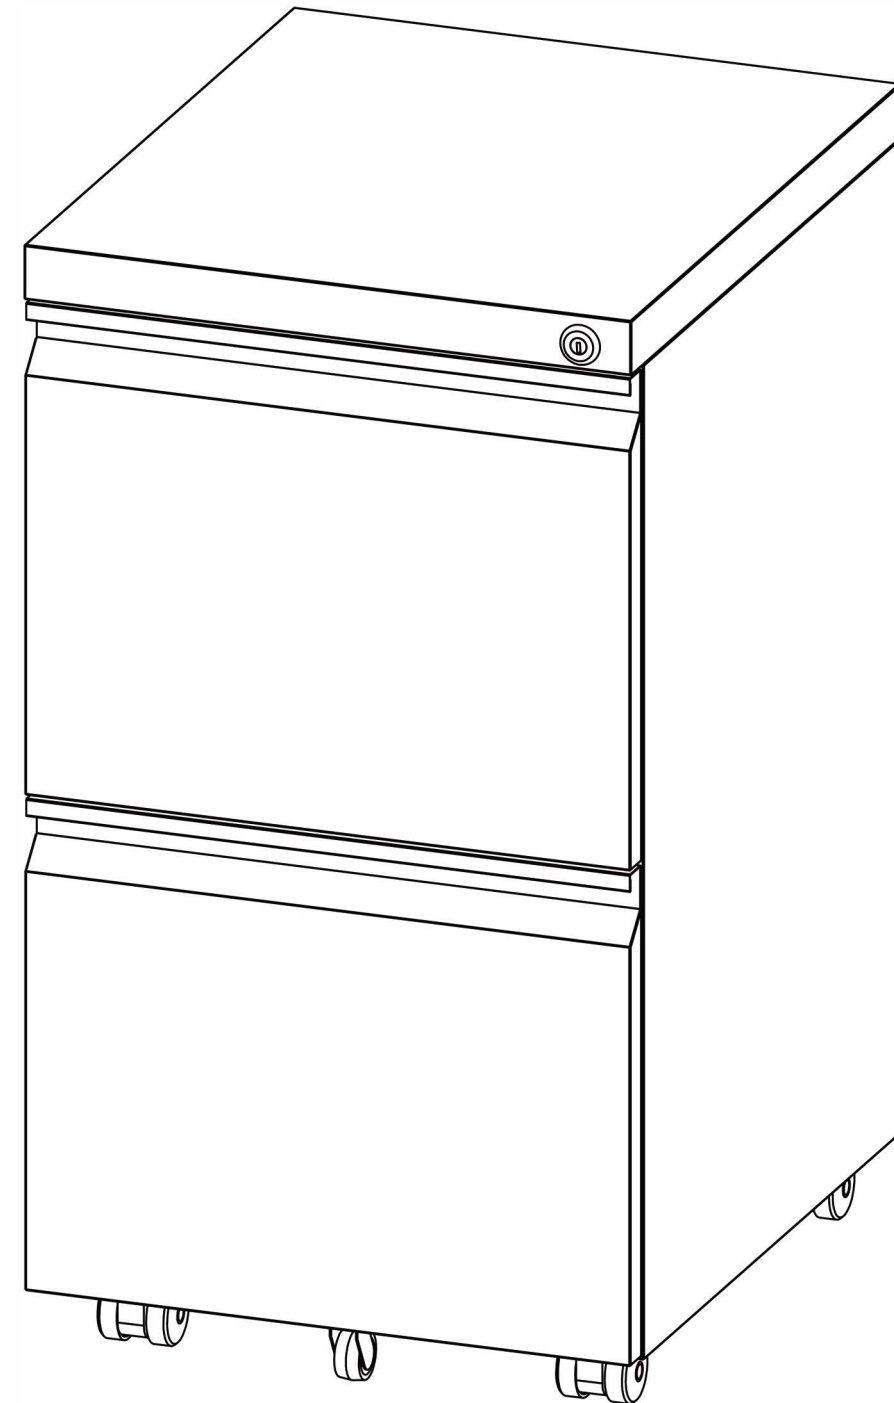

Installation Video














⚠ Attention:If you notice any fingerprints on the surface please know that they were left there during manual lifting. Simply clean the surface using a cloth and rubbing alcohol.



1. Gather and organize all required parts before assembling.

1. Gather and organize all required parts before assembling.


Tools Required For Assembly

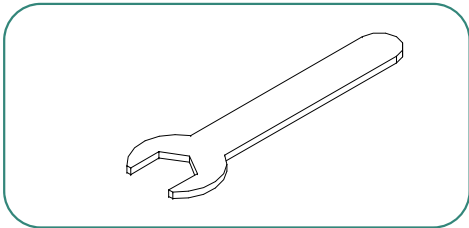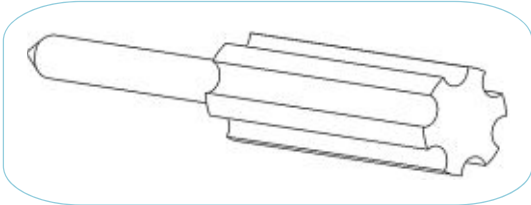

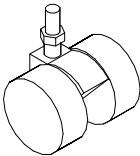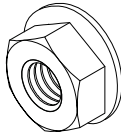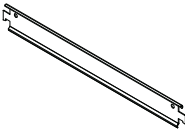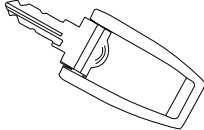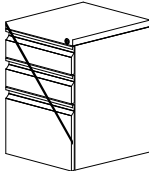
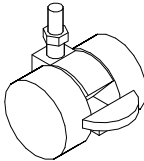
Item NO.	Reference Image	Qty.	Item NO.	Reference Image	Qty.
a		X4	f rear wheel		X2
b		X4	h		X2
c		X1	i		X2
d middle wheel		X1	j		X1
e front wheel		X2			

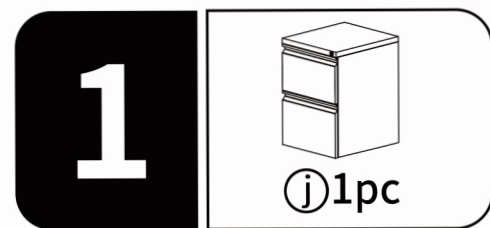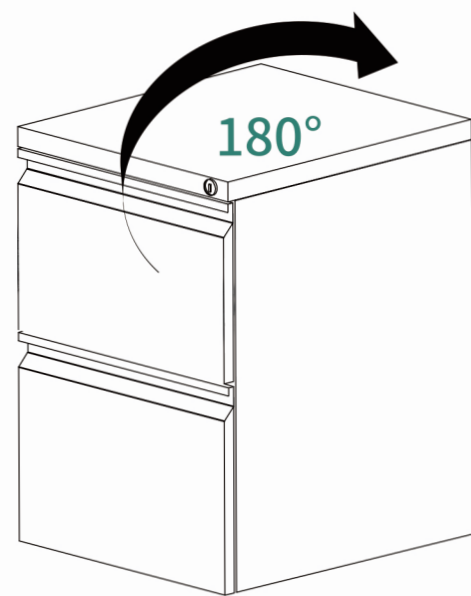





Unlock to open the bottom drawer

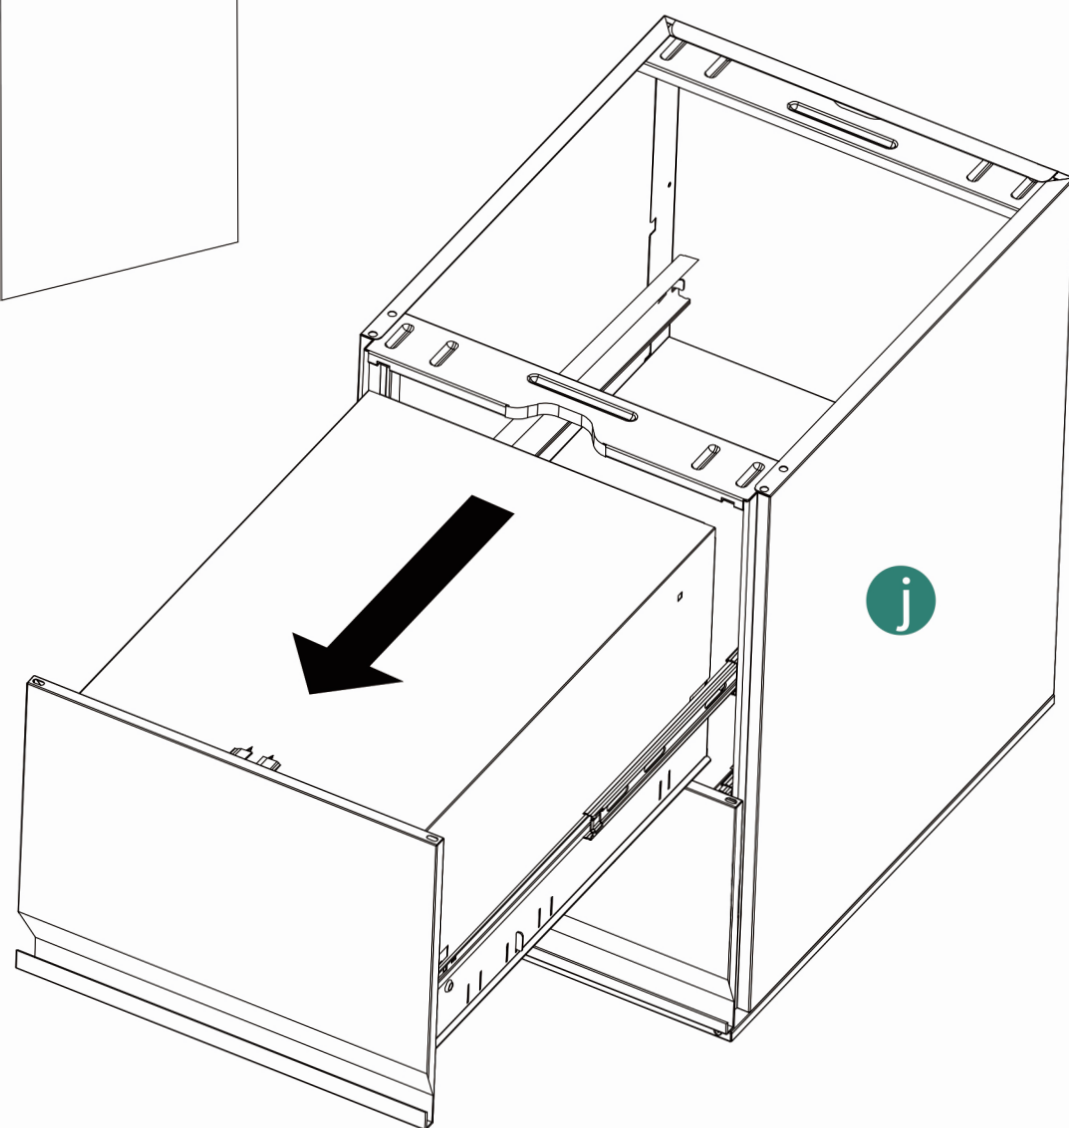



3

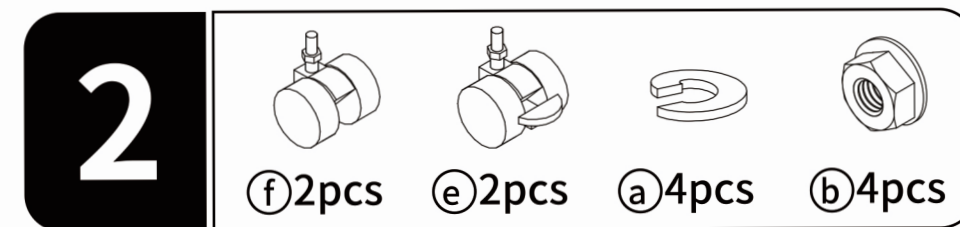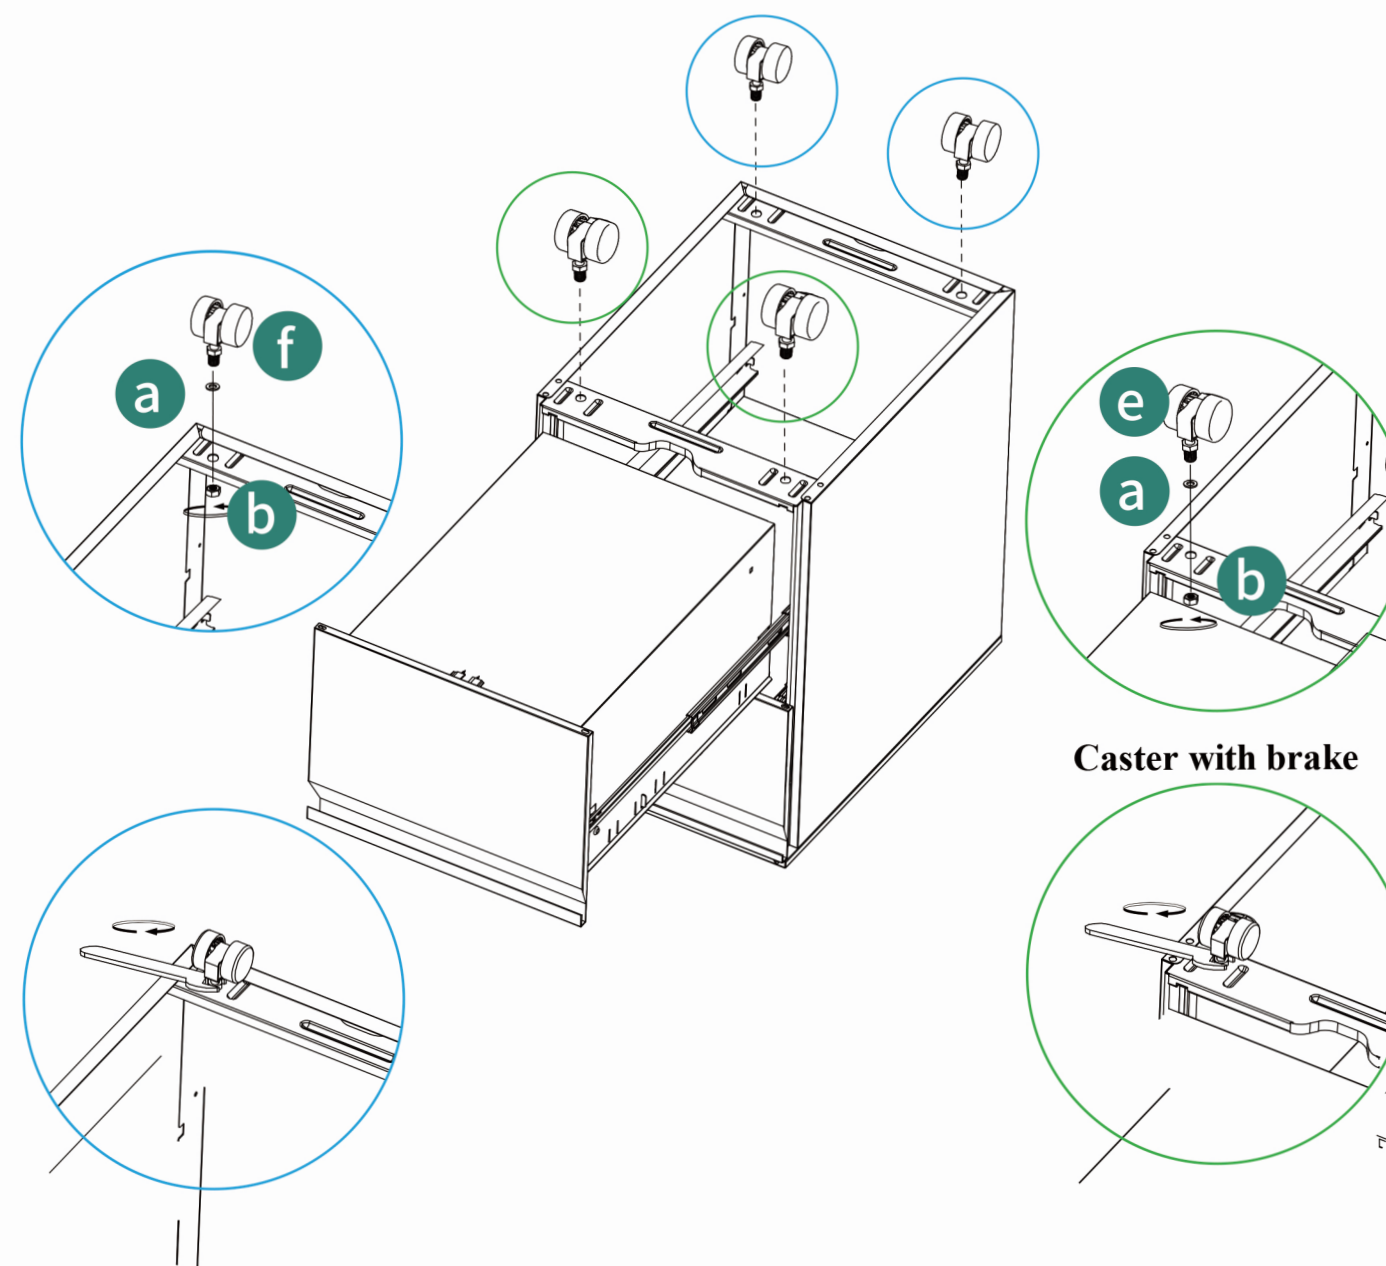


4

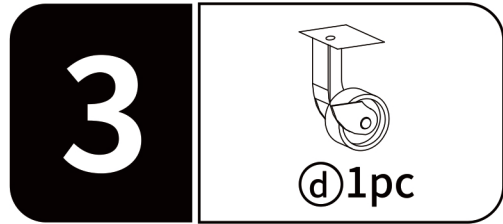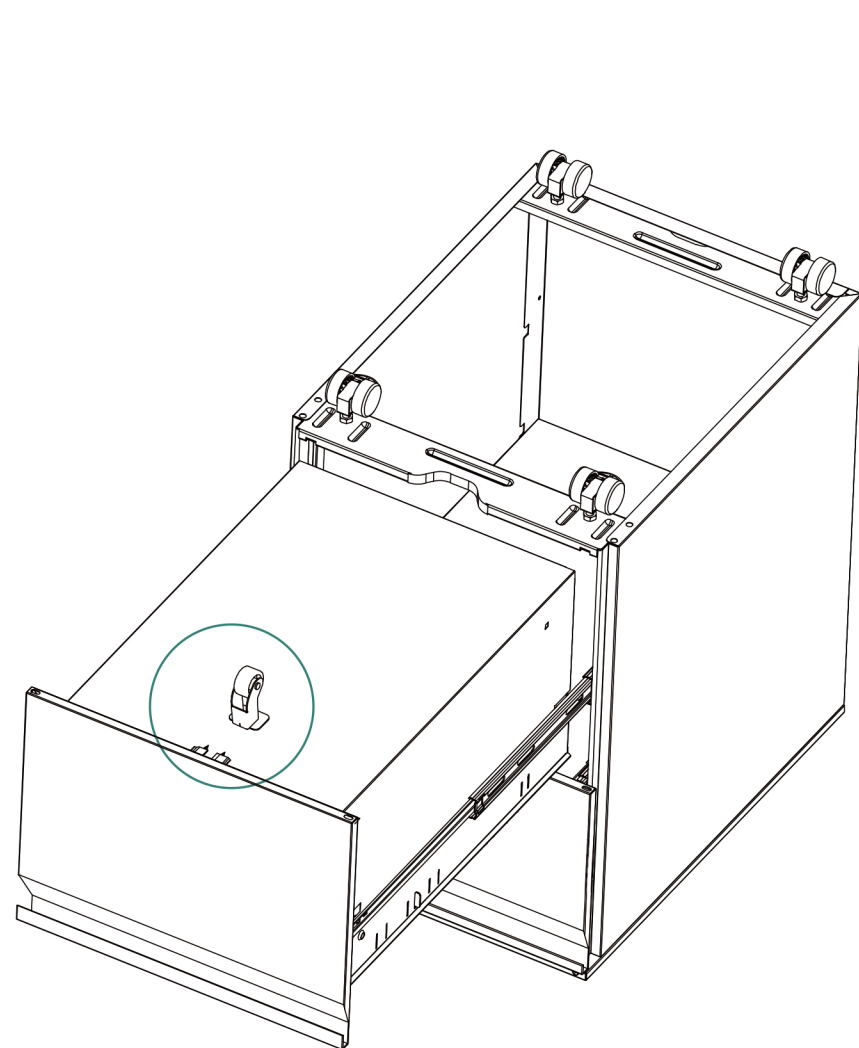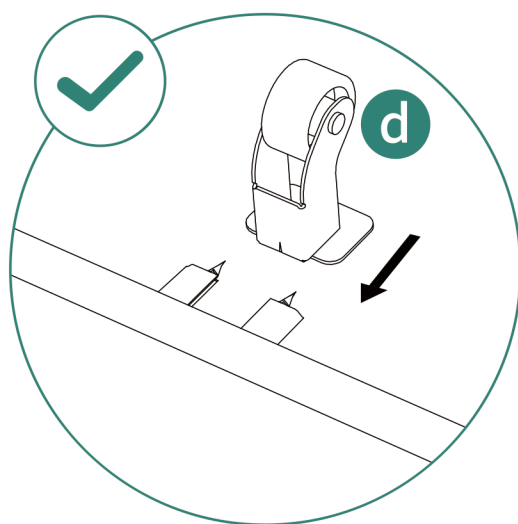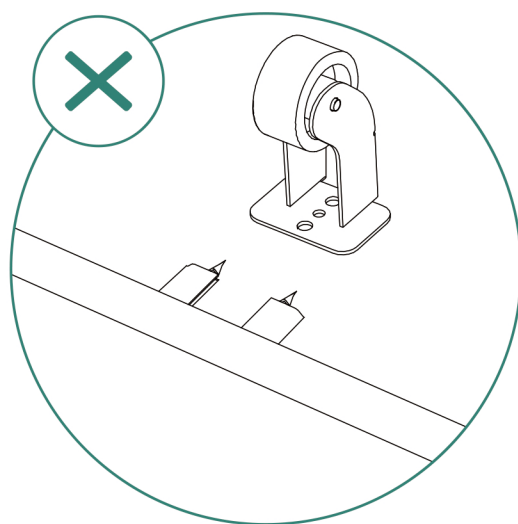


5

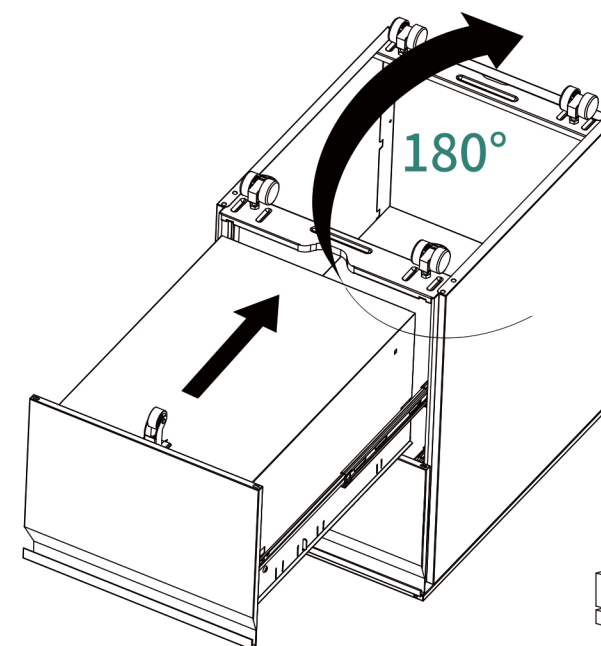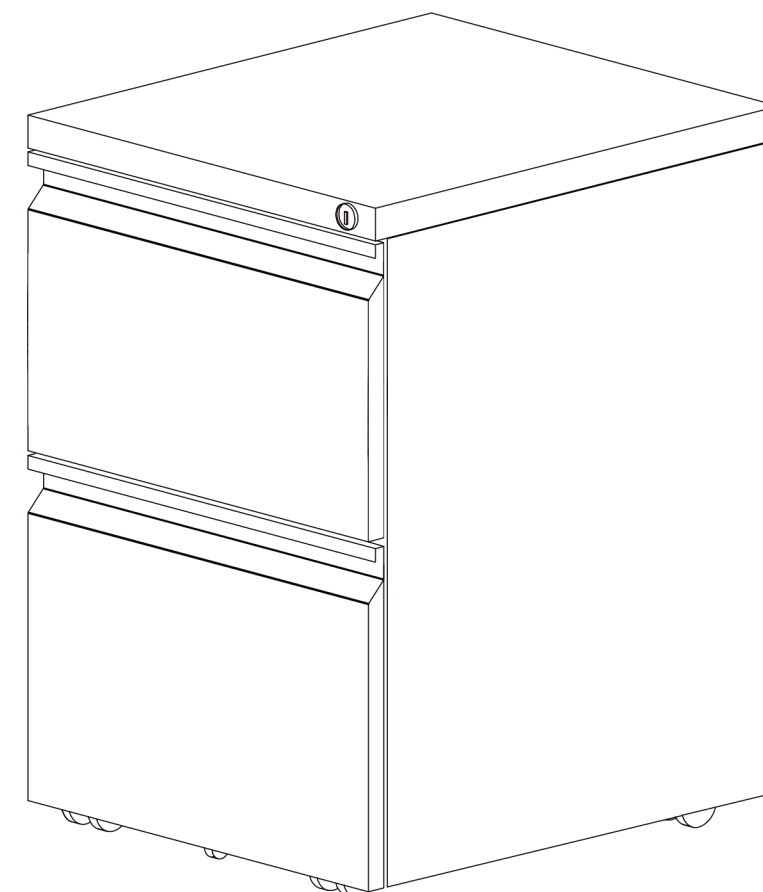


6


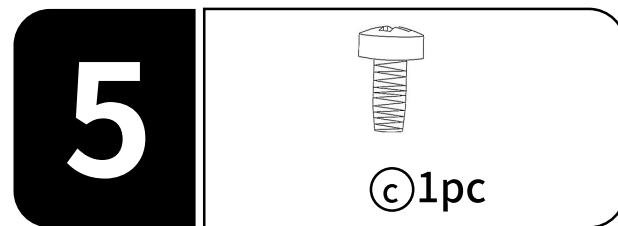


Open the bottom drawer, install the screw, and fix the anti-tip wheel (d) in place.

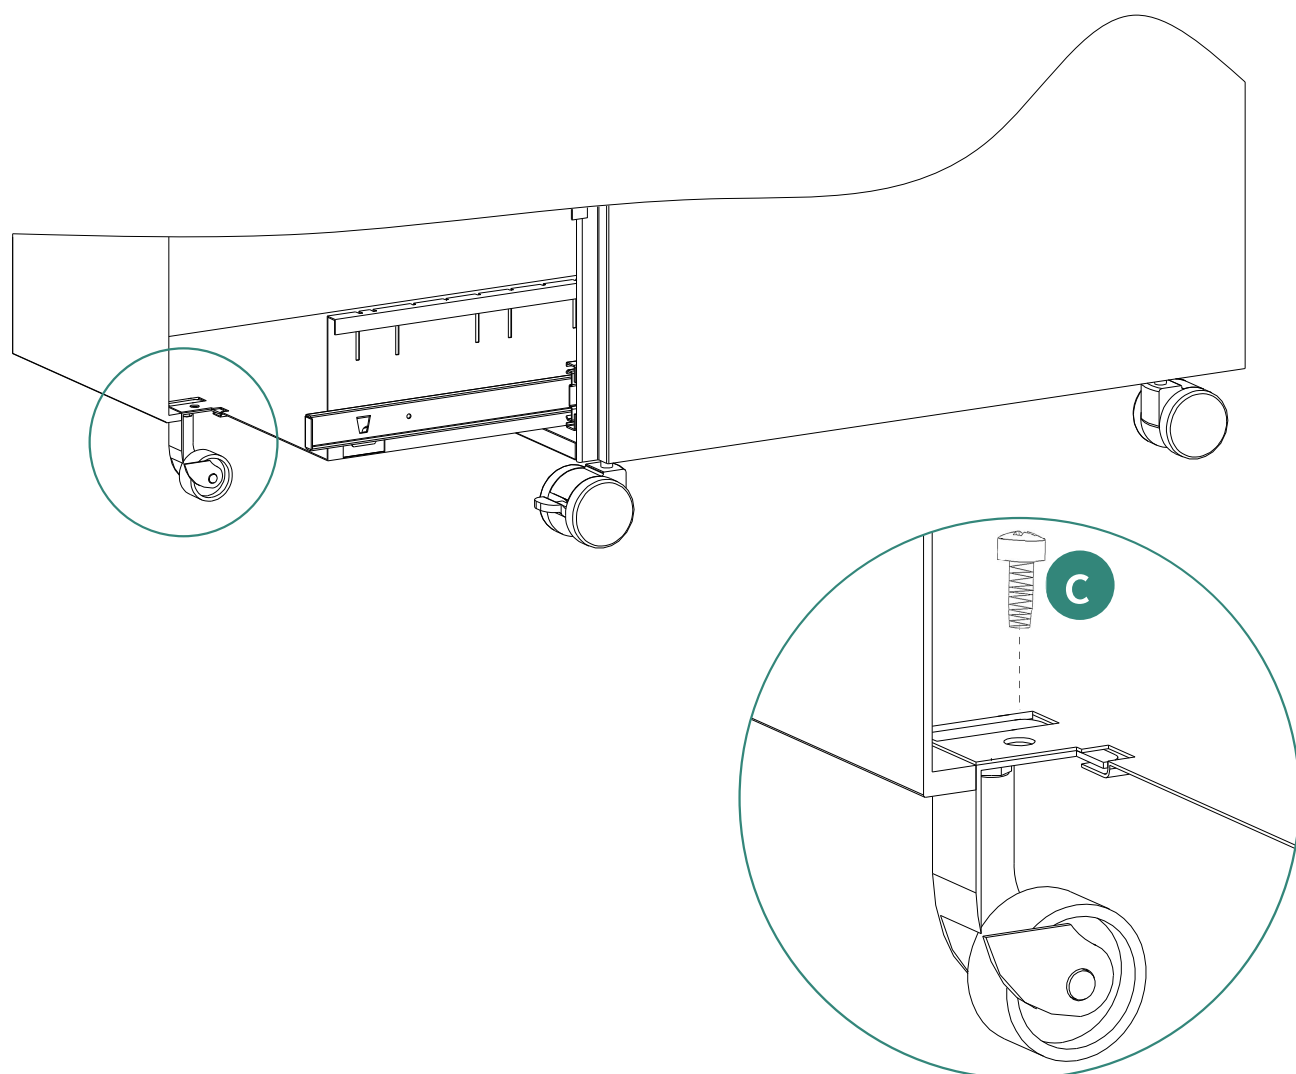


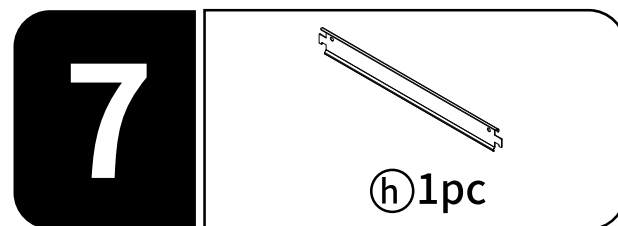


Lifting the hanging file bar slightly prior to removal makes removing or replacement easier.

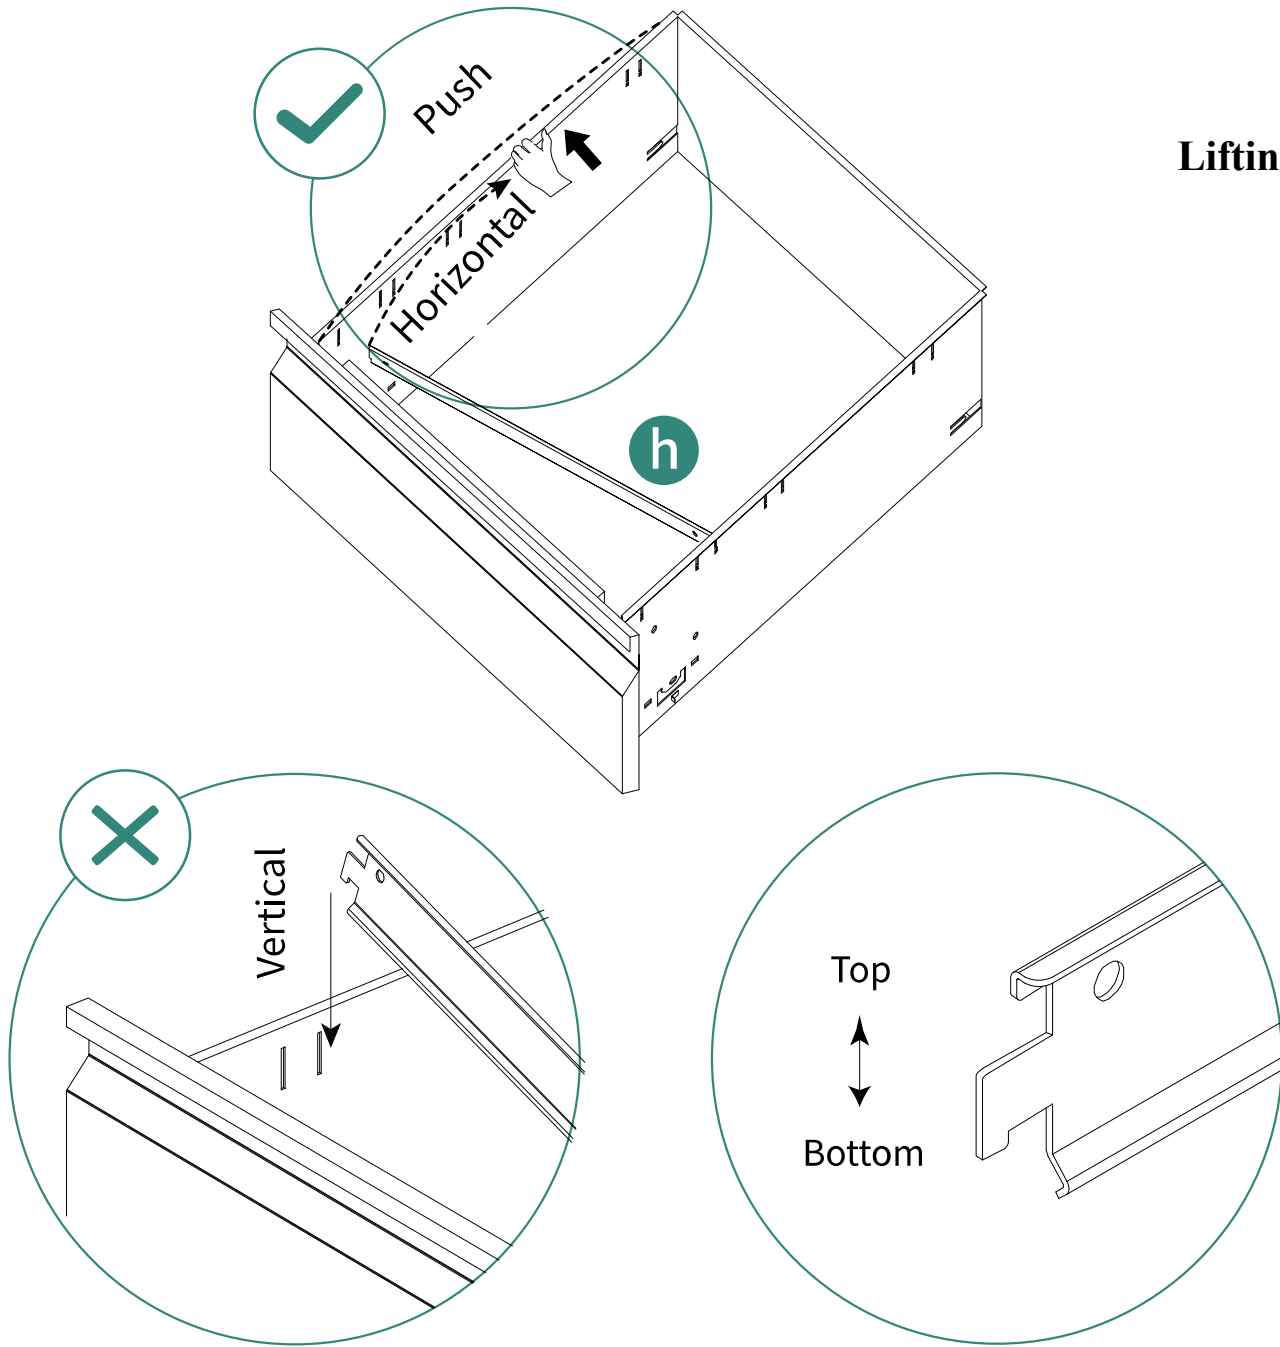
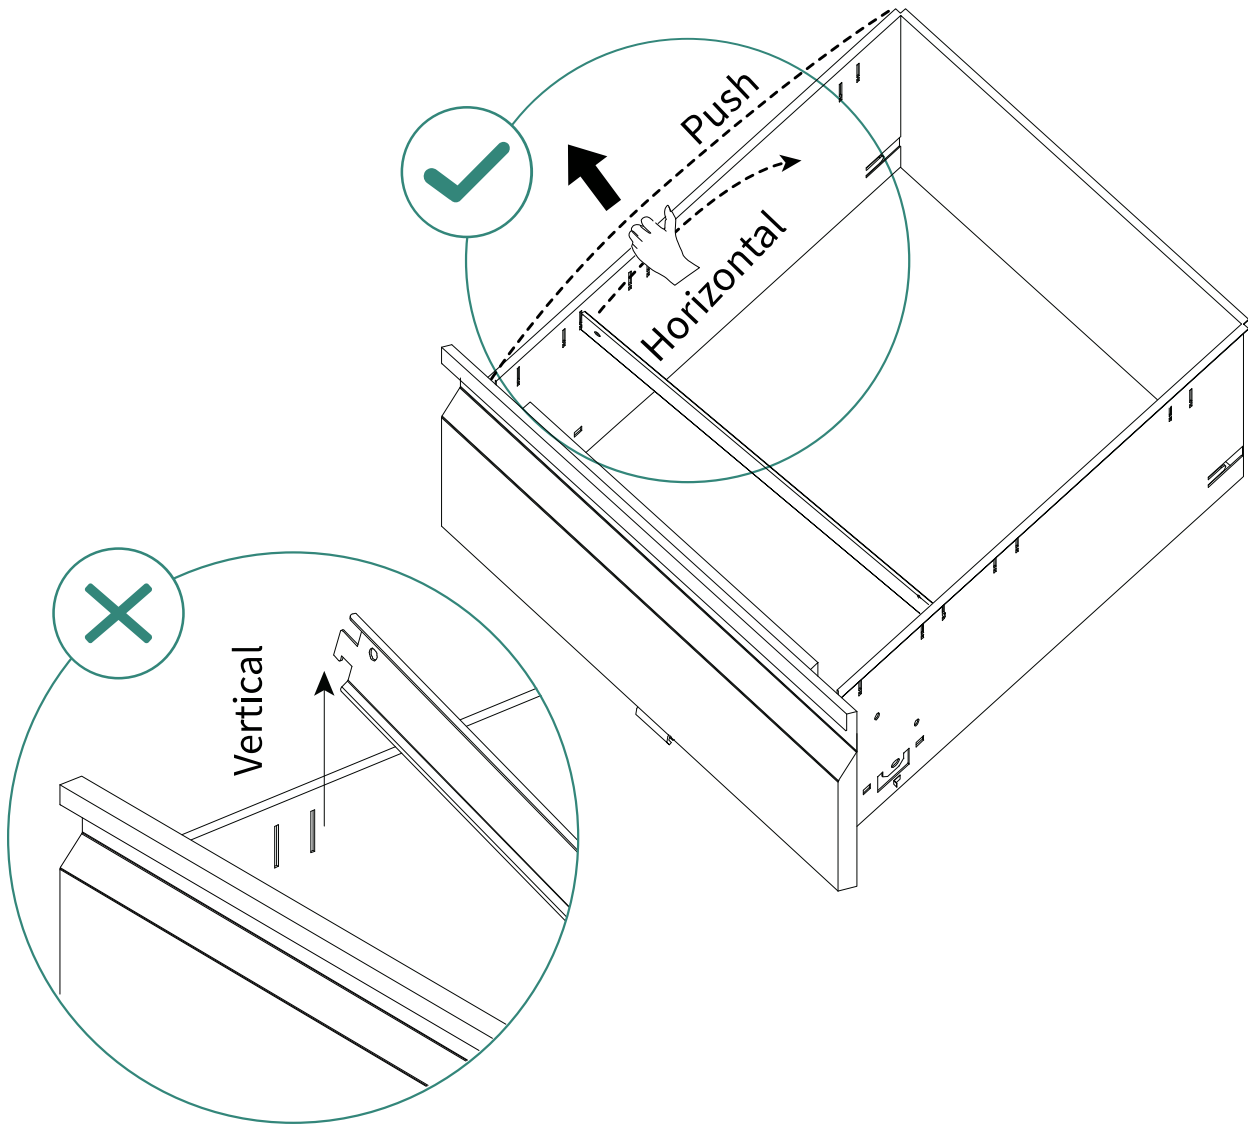


Tips: 3 options available (Letter size, Legal size, A4 size)



Hanging file bar position 1 – for Letter size file folders.

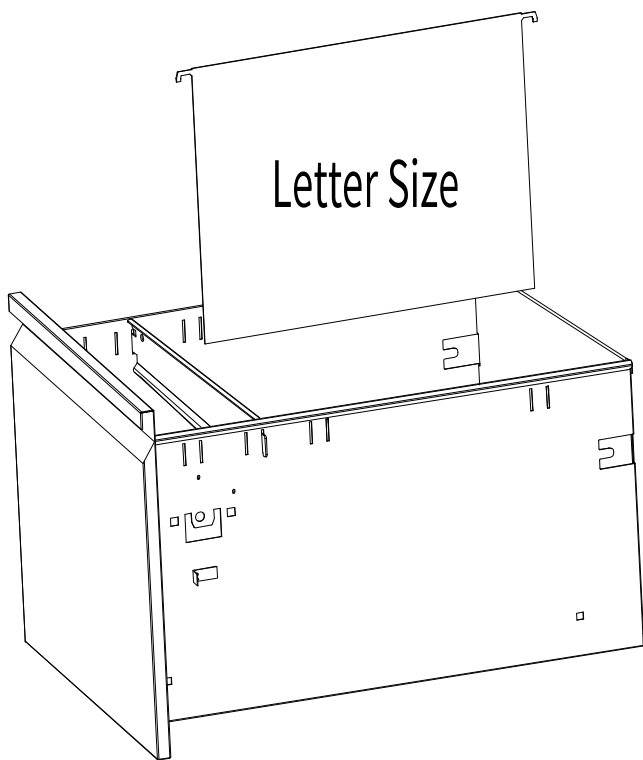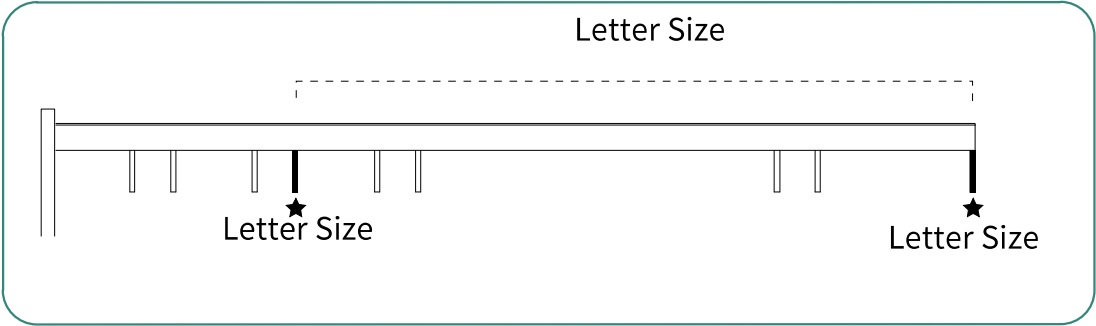


Hanging file bar position 2 – for A4 size file folders.

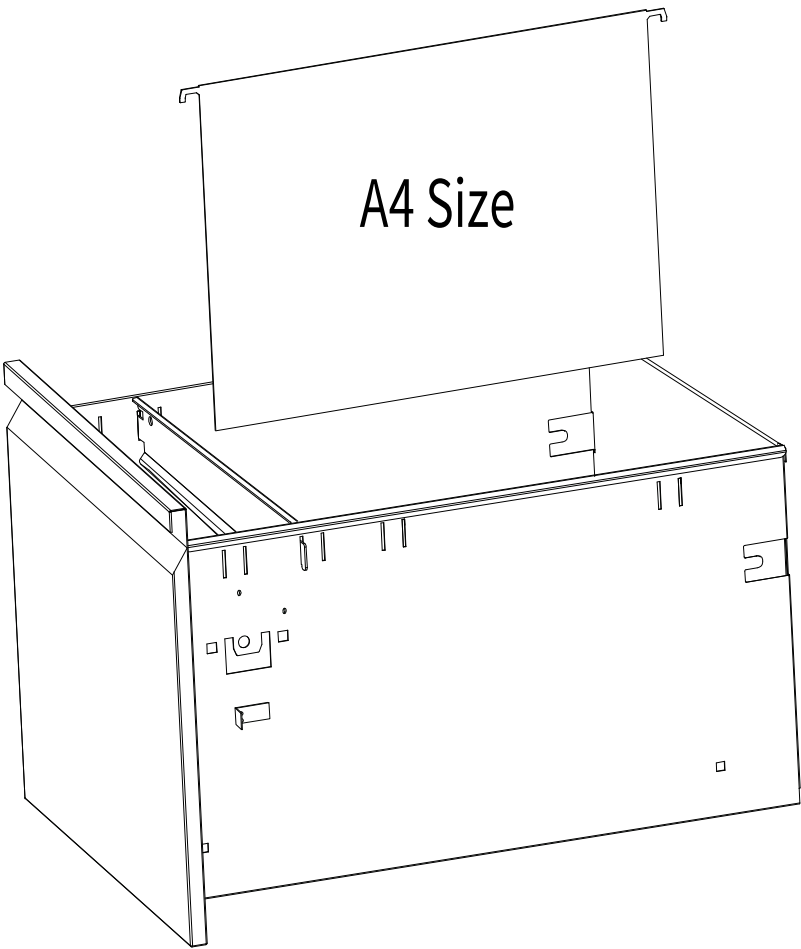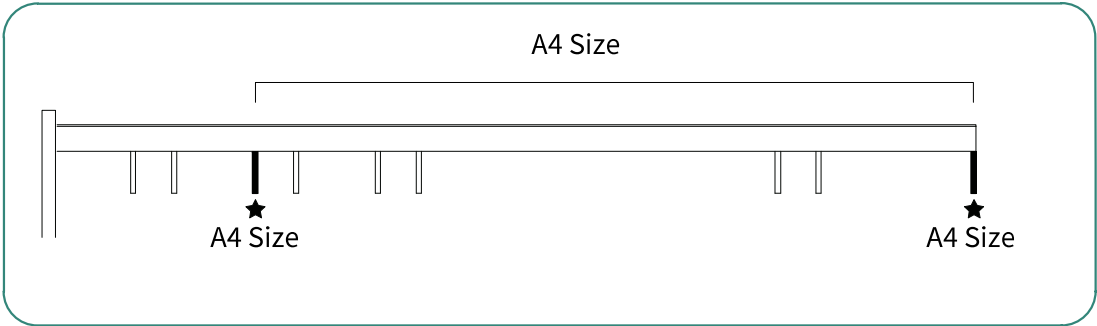

Hanging file bar position 3 – for Legal size file folders.

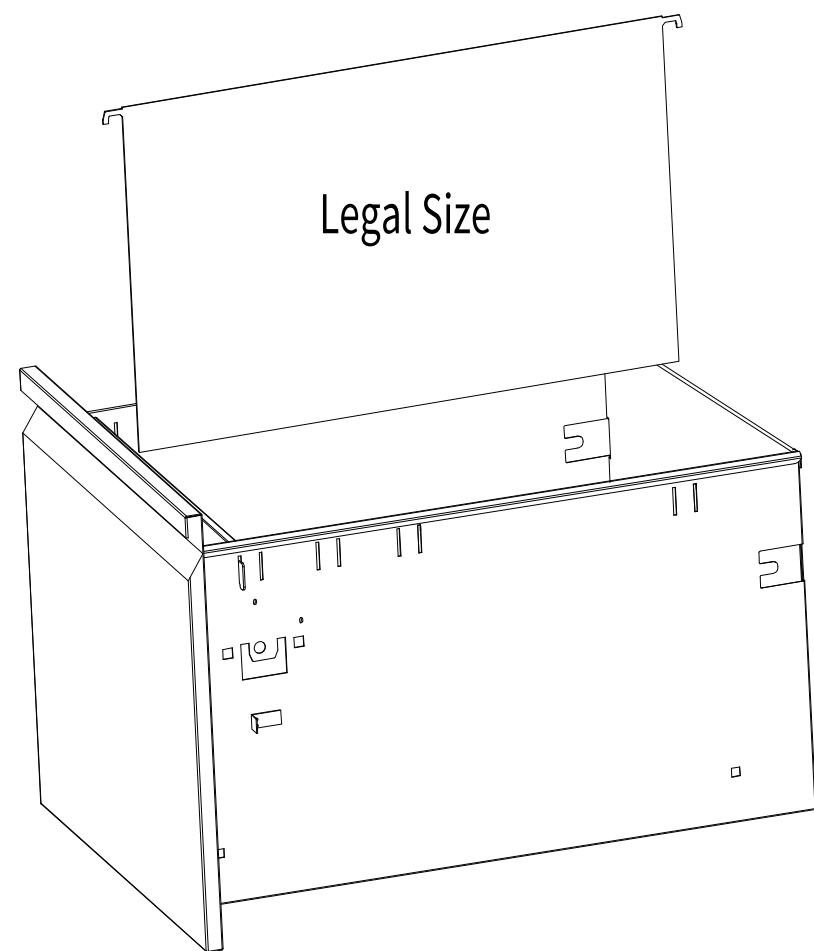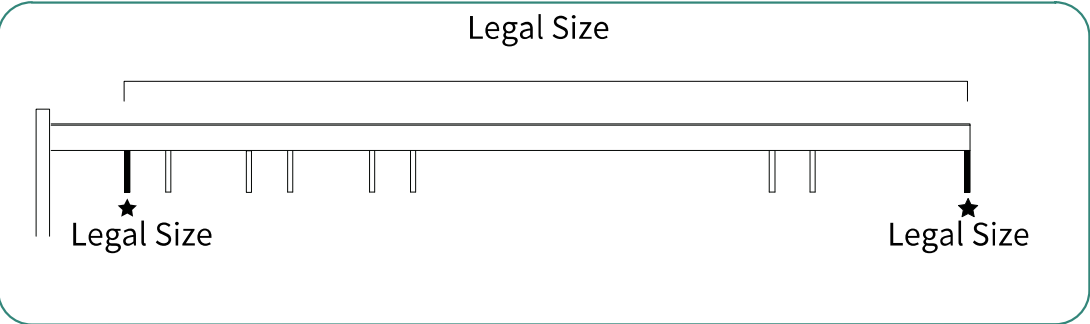

Does not include hanging file bar - for A4 size file folders.

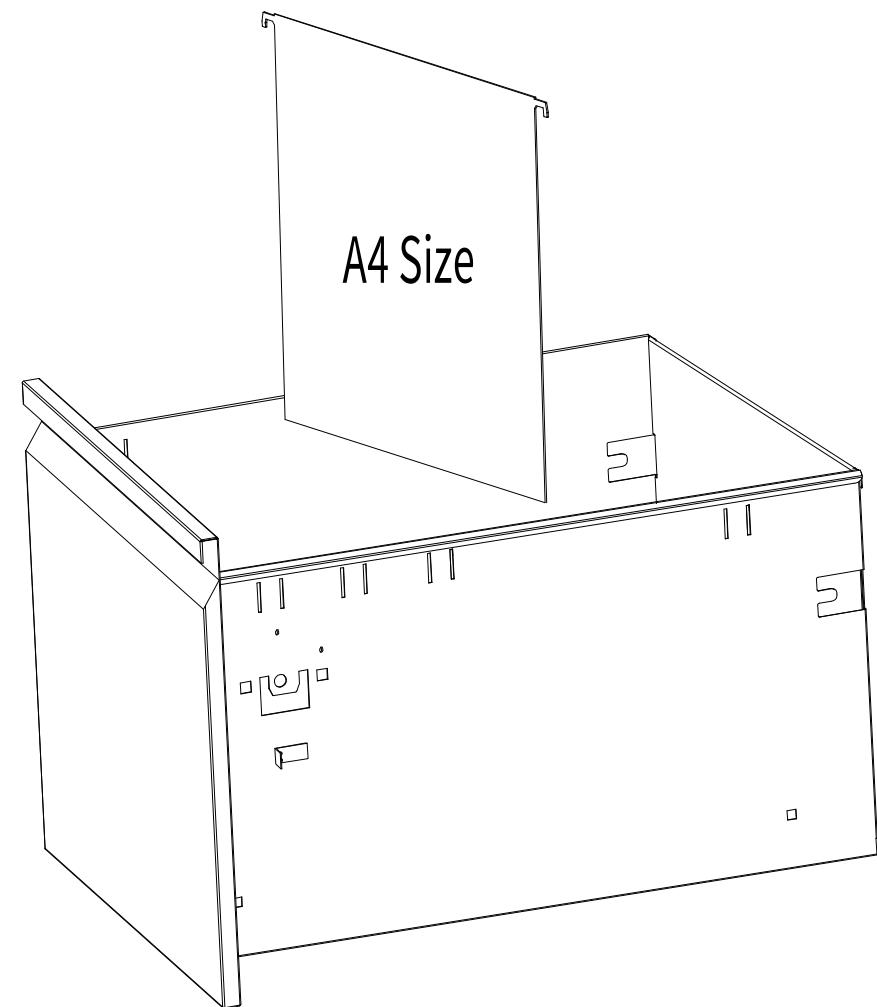

Installation Completed