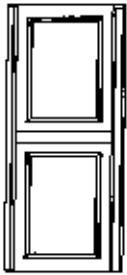


(QUEEN BED)

ASSEMBLY INSTRUCTION

MODEL : G9800-QB-FB


10-MAY-14

NO	PART LIST	QTY
FOOT BOARD		
1		1pc
LEG		
2		2pcs
CROWNNY		
3		1pc

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm	2PCS
B.	70mm Bolt	2PCS
C.	35mm Bolt	4PCS
D.	Allen Key	1PC
E.	Wood Button M15x9mm	2PCS

STEP 1

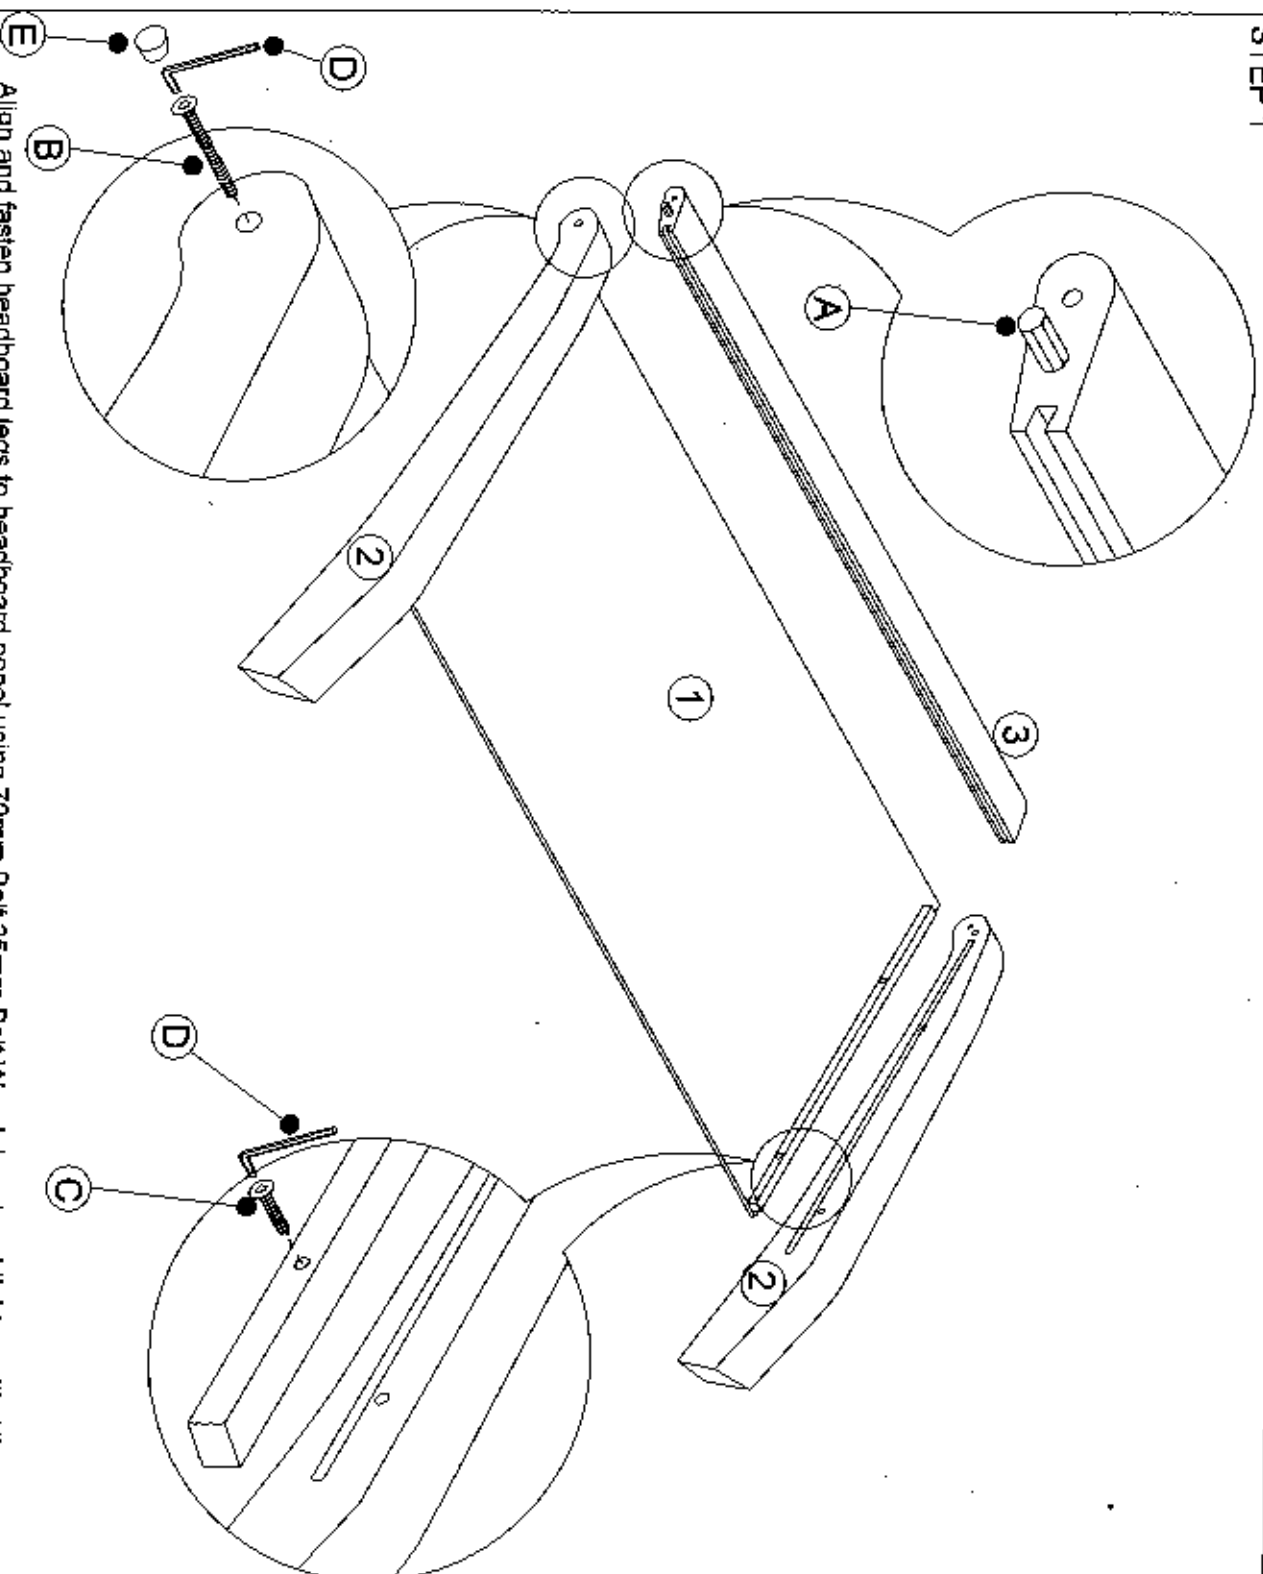

Align and fasten headboard legs to headboard panel using 70mm Bolt, 35mm Bolt, Wood dowel and tighten with Allen Key.

(QUEEN BED)

ASSEMBLY INSTRUCTION


MODEL : G9800-QB-HB

STEP 1

NO	PART LIST	QTY
1	HEAD BOARD	1pc
2	LEG	2pcs
3	SUPPORT PANEL	1pc

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	26mm Bolt $\varnothing 26mm$	6PCS
B.	70mm Bolt $\varnothing 70mm$	2PCS
C.	35mm Bolt $\varnothing 35mm$	2PCS
D.	Allen Key	1PC
E.	Wood Dowel M8 x 30mm	4PCS
F.	Wood Bottom M15 x 9mm	2PCS

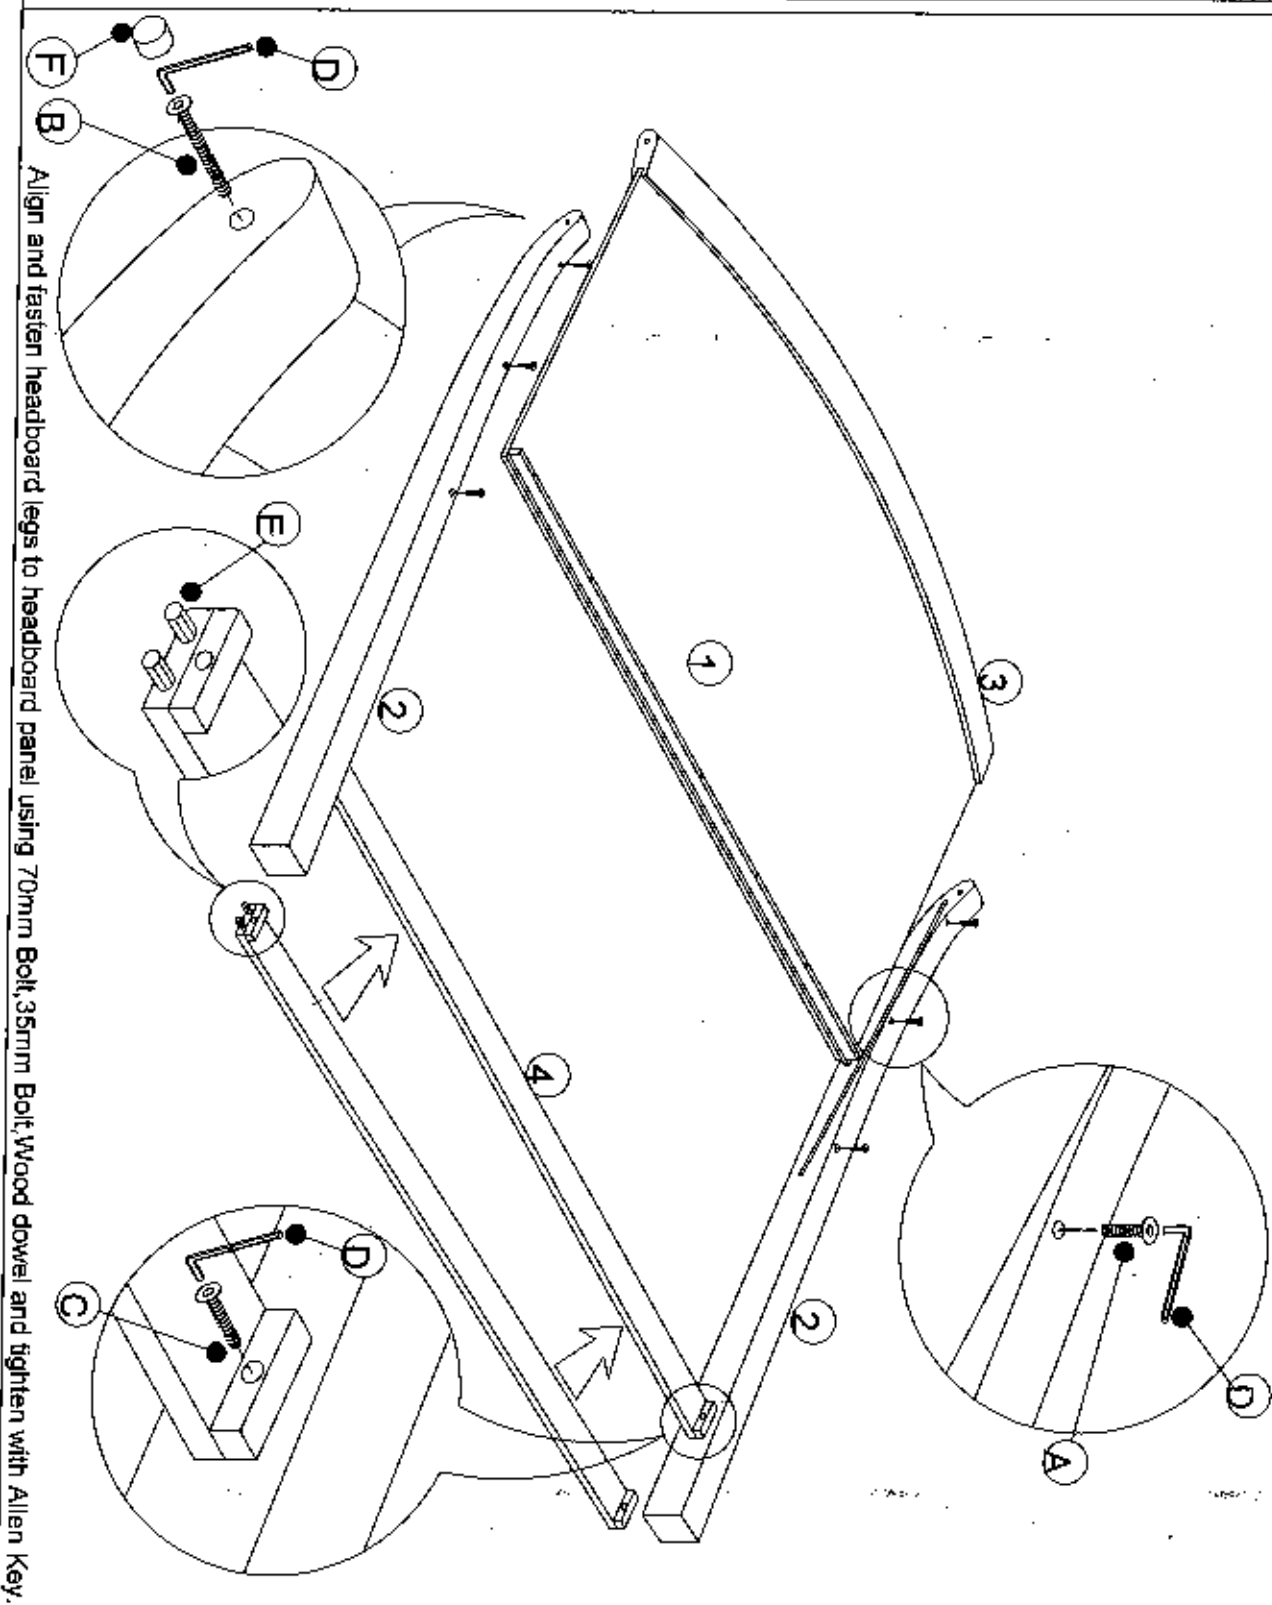

Align and fasten headboard legs to headboard panel using 70mm Bolt, 35mm Bolt, Wood dowel and tighten with Allen Key.

(QUEEN BED)


ASSEMBLY INSTRUCTION

MODEL : G9800-QB-SR

NO	PART LIST	QTY
1	HEAD BOARD	1pc
2	FOOT BOARD	1pc
3	SIDE RAIL	2pos
4	SLAT	3pcs
5	SLAT SUPPORT	3pcs
NO	HARDWARE PART 3	QTY
A	SCREW M4 X 32mm	6pcs
B	ADJUSTER M8 X 23mm	3pcs
C	SCREW M8	6pcs
D	35mm BOLT	3pcs
E	ALLEN KEY	1pc


STEP 1

Attach the bed rails to Head Board and tighten with screw driver (not included).

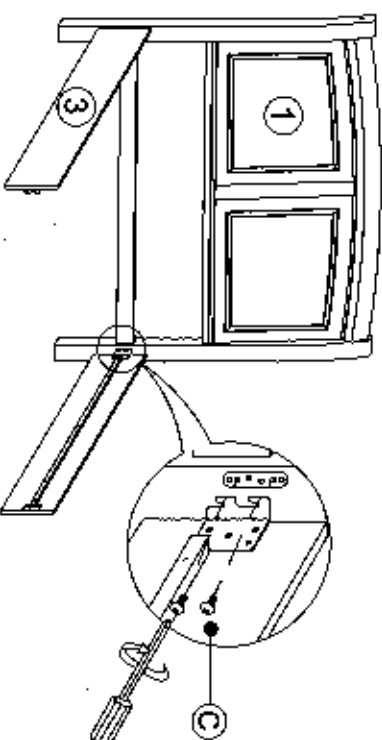


STEP 2

Repeat Step 1 to joint Foot Board.

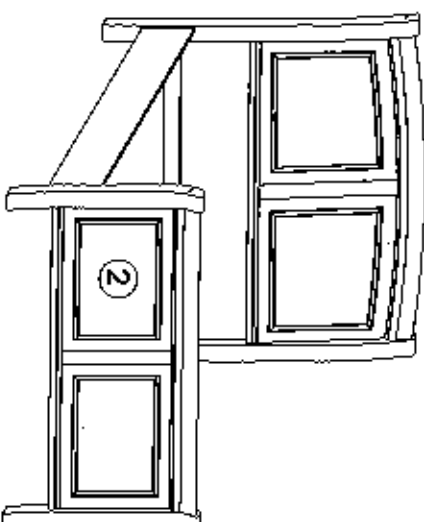


STEP 3

Align and fasten bed slats support to bed slat using 35mm Bolt and tighten with Allen Key. Align & fasten bed slat to bed rails using screw and tighten with screw driver (not included).

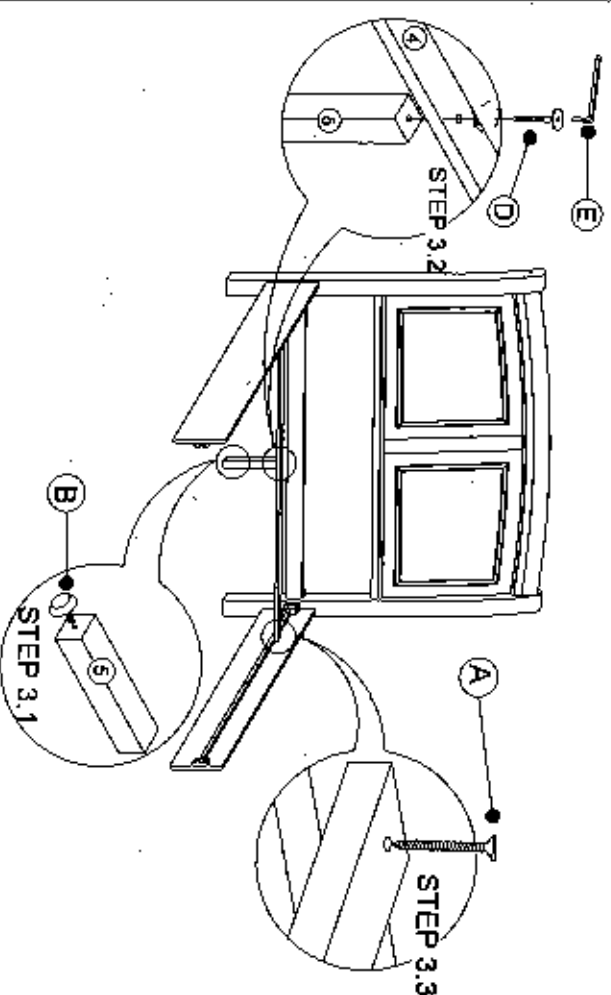

STEP 4

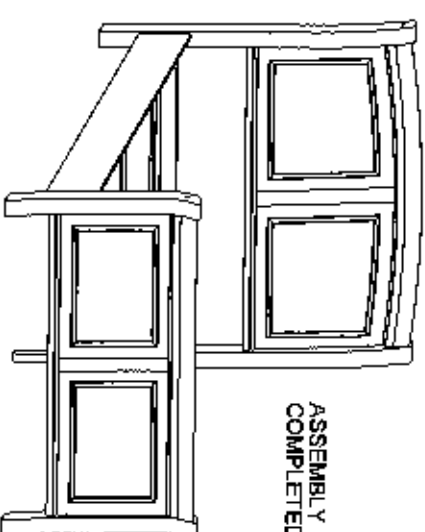

ASSEMBLY
COMPLETED

* TOTAL SLAT : 3PCS (WITH JOBC HOLE) + 3PCS (SLATS SUPPORT)