



STEP 1

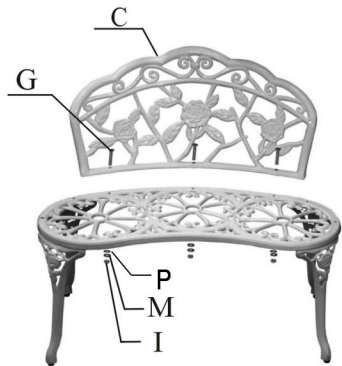

STEP 3

STEP 2

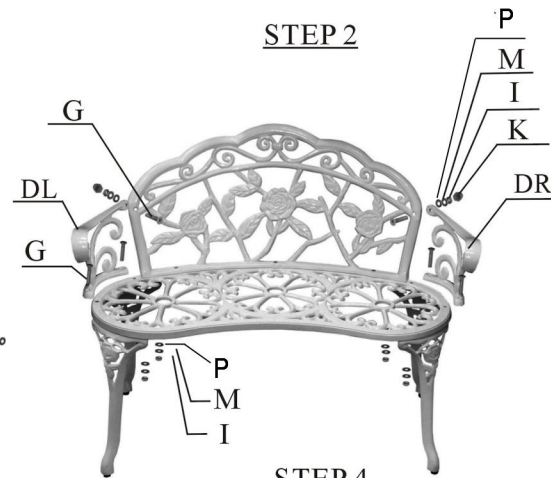

STEP 4



COMPLETED

Please read the following instructions carefully prior to assembly. To prevent the paint from being scratched, we would suggest assembling your Garden Bench on a soft ground. Please note the roughness you might find on the surface of your Garden Bench is the natural finish of cast metal material.

Tools Required: Hex. Key Wrench(Provided)



PART LIST

A	Seat Plate	1PC	H	M8 Nut	8PCS
B	Chair Leg	4PCS	I	M6 Nut P	9PCS
C	Backrest	1PC	K	Plastic Cap	2PCS
DL	Left Armrest	1PC	L	Φ8 Washer	8PCS
DR	Right Armrest	1PC	M	Φ6 Washer	9PCS
E	M8 X 35 Bolt	8PCS	N	Φ8 spring washer	8PCS
G	M6 X 35 Bolt	9PCS	P	Φ6 spring washer	9PCS

ASSEMBLY STEPS

NOTE: Leave bolts half-tightened on the bench during assembly until unit is assembled, then finish tightening bolts .

STEP 1: Screw 8 M8X35 bolts (E) into seat plate (A).

STEP 2: Attach one of chair legs (B) to seat plate (A) with 2 Φ8 washers (L), 2 Φ8 spring washers (N) and 2 M8 nuts (H). Repeat this procedure for assembling the rest of 3 chair legs(B).

STEP 3: Attach backrest (C) to seat plate (A) with 3 M6X30 bolts(G), 3Φ6 spring washer (P), 3 Φ6 washers (M) and 3 M6 Nuts (I).

STEP 4: Attach left armrest (DL) to seat plate (A) with 2 M6X30 bolts (G), 2Φ6 spring washer (P), 2 Φ6 washers (M) and 2 M6 nuts (I), then assemble left armrest (DL) to backrest (C) with M6X30 bolt (G). 6Φ6 spring washer (P), Φ6 washer (M) and M6 lock nut (I). Repeat this procedure for the right armrest (DR). Tighten all nuts. Then cover M6 locknuts (I) with plastic caps (K).