



ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

BUFFET/DESSERTERTE

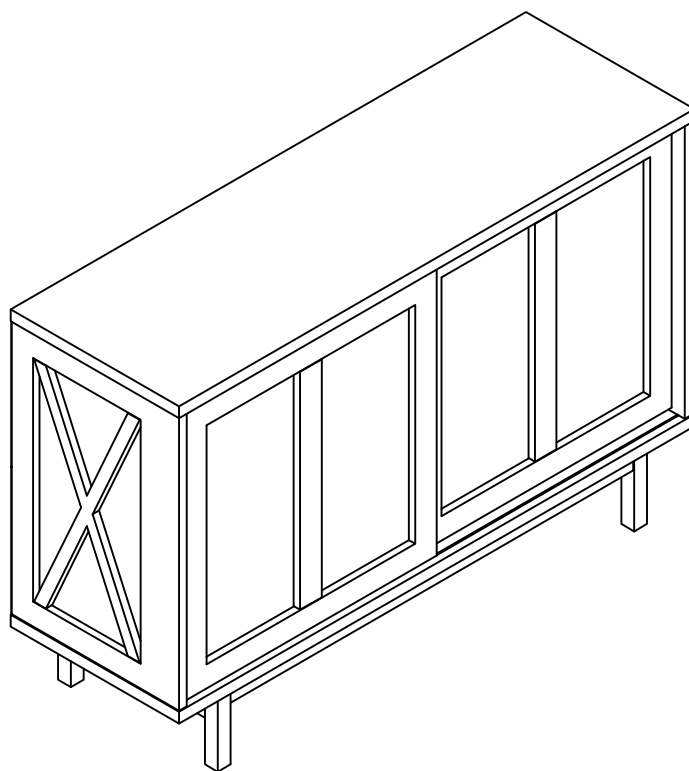

PARTS IDENTIFICATIONS / IDENTIFICATION DES PIECES






BUFFET/DESSERTS

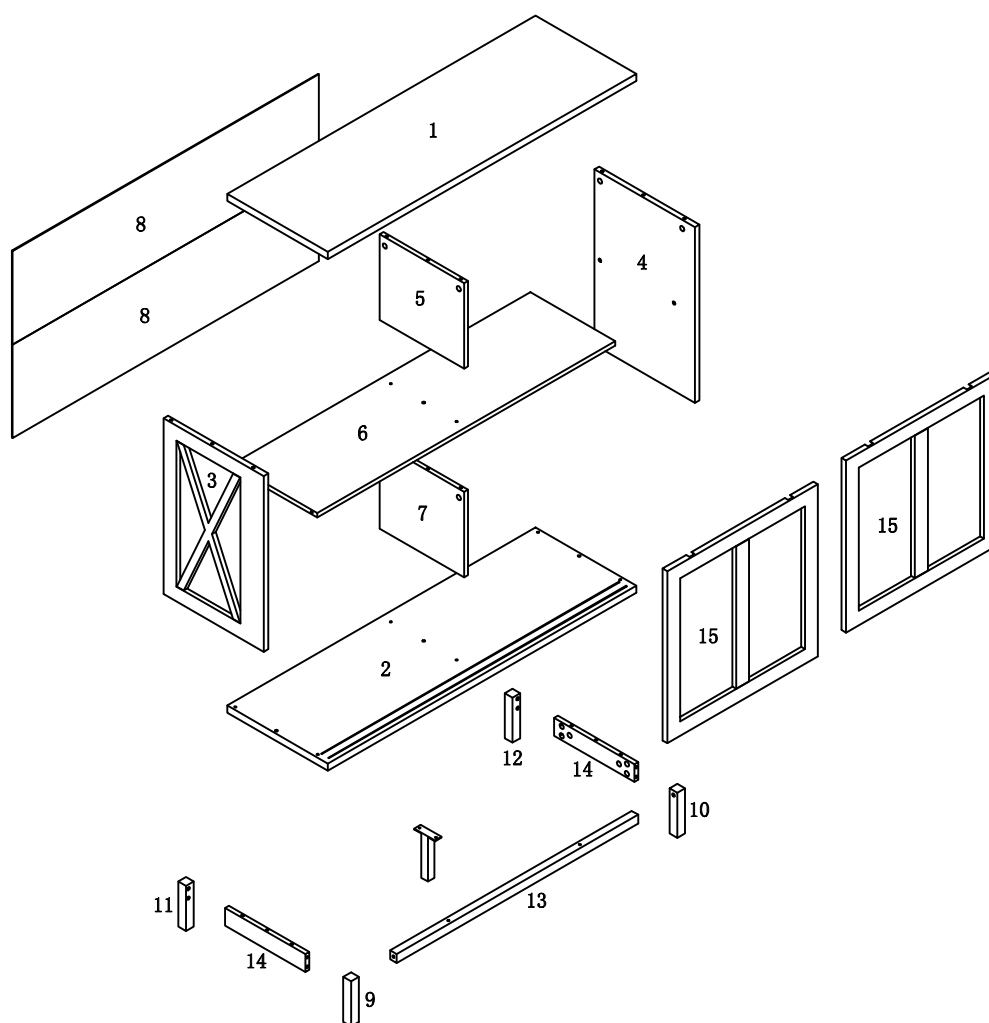


(1)	1pc	(7)	1pc	(13)	1pc
(2)	1pc	(8)	2pcs	(14)	2pcs
(3)	1pc	(9)	1pc	(15)	2pcs
(4)	1pc	(10)	1pc		
(5)	1pc	(11)	1pc		
(6)	1pc	(12)	1pc		

HARDWARE IDENTIFICATIONS/ IDENTIFICATION DU KIT D'ASSEMBLAGE

BUFFET/DESSERT


A		L29	26pcs
B		ø15	26pcs
C		ø8x25	10pcs
D		ø4x40	10pcs
E		M6x12	2pcs
F		ø13	8pcs
G		ø22	26pcs
H		ø16	4pcs
I			40pcs
J		80×25×152	1pc
K		197×5×1	1pc
L		ø4x25	1pc
M		ø5x40	1pc
N		ø8 x 40	1pc
O		12×12×1	2pcs
P		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

BUFFET/DESSERT

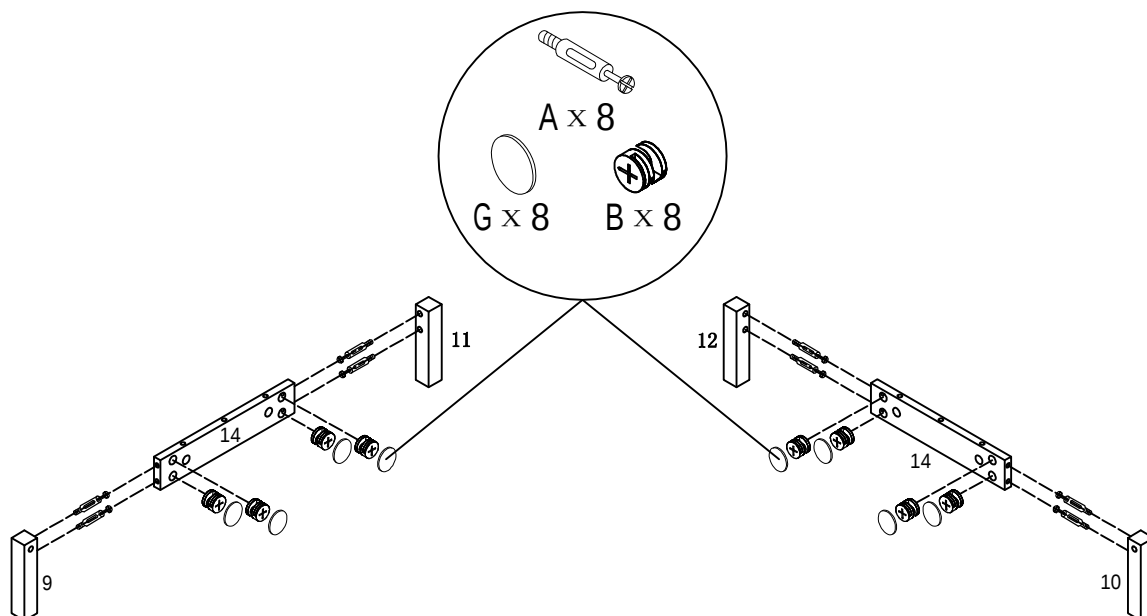


STEP 1 / ETAPE 1

STEP 2 / ETAPE 2

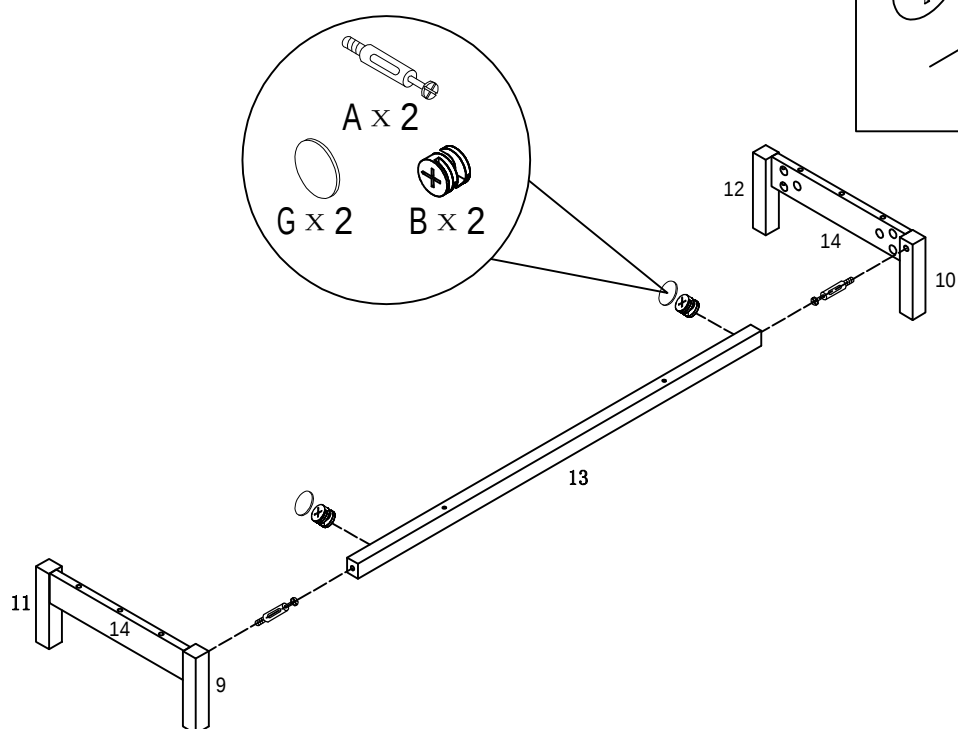


BUFFET/DESSERTS

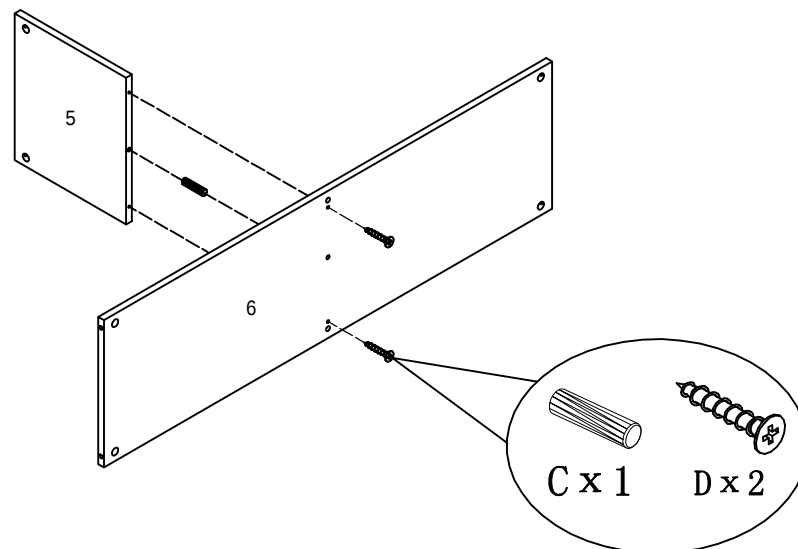


STEP 3 / ETAPE 3

STEP 4 / ETAPE 4

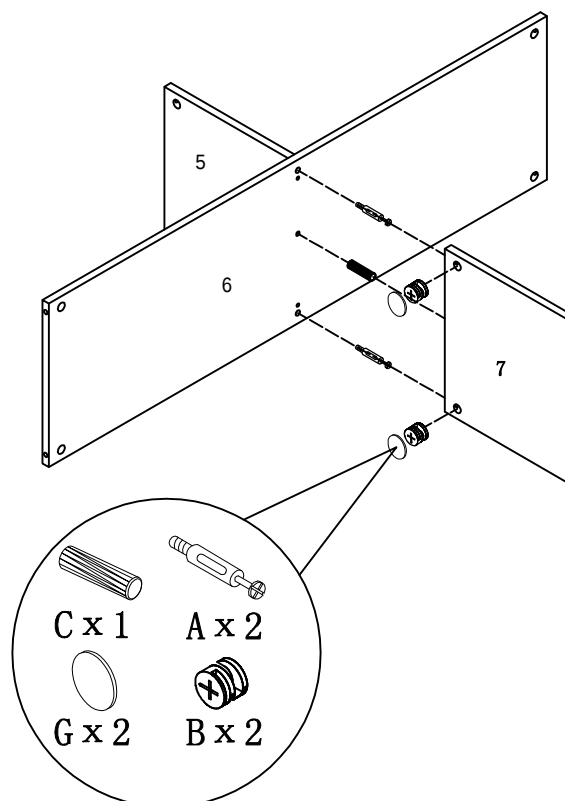


BUFFET/DESSERT

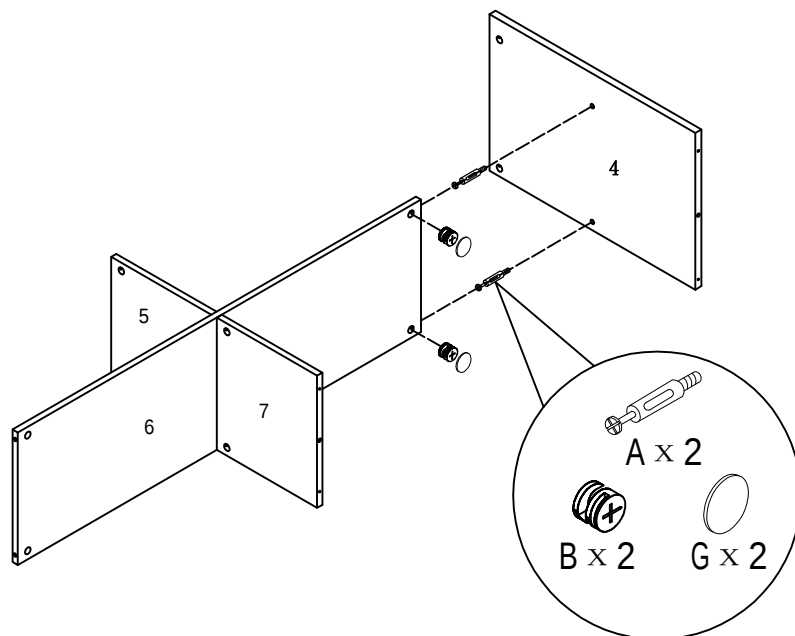


STEP 5 / ETAPE 5

STEP 6 / ETAPE 6

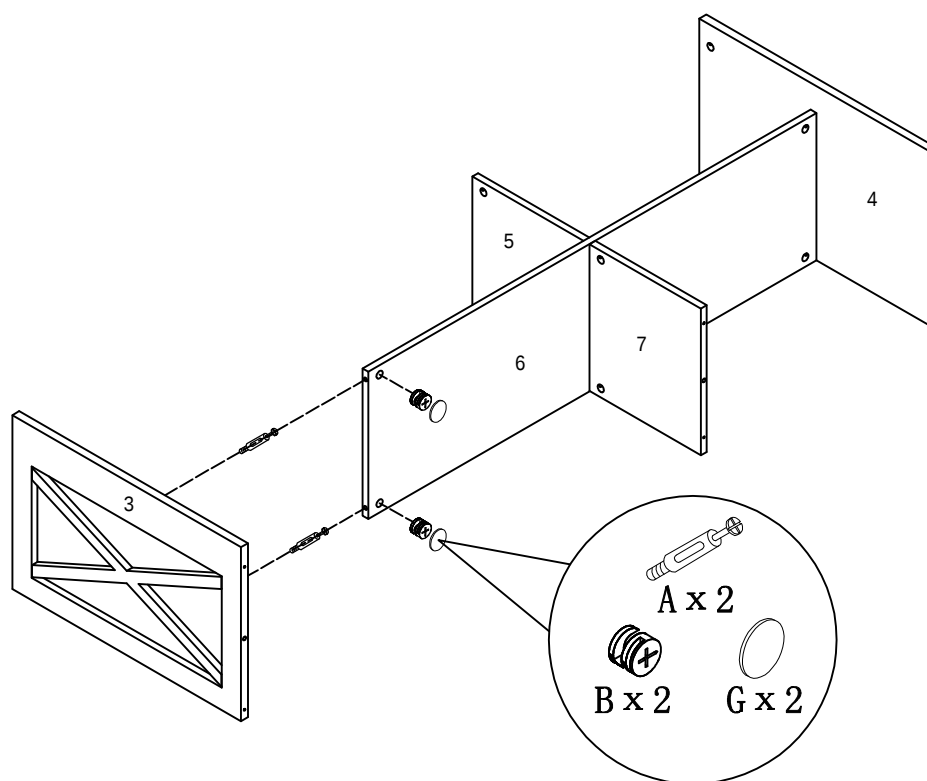


BUFFET/DESSERTS

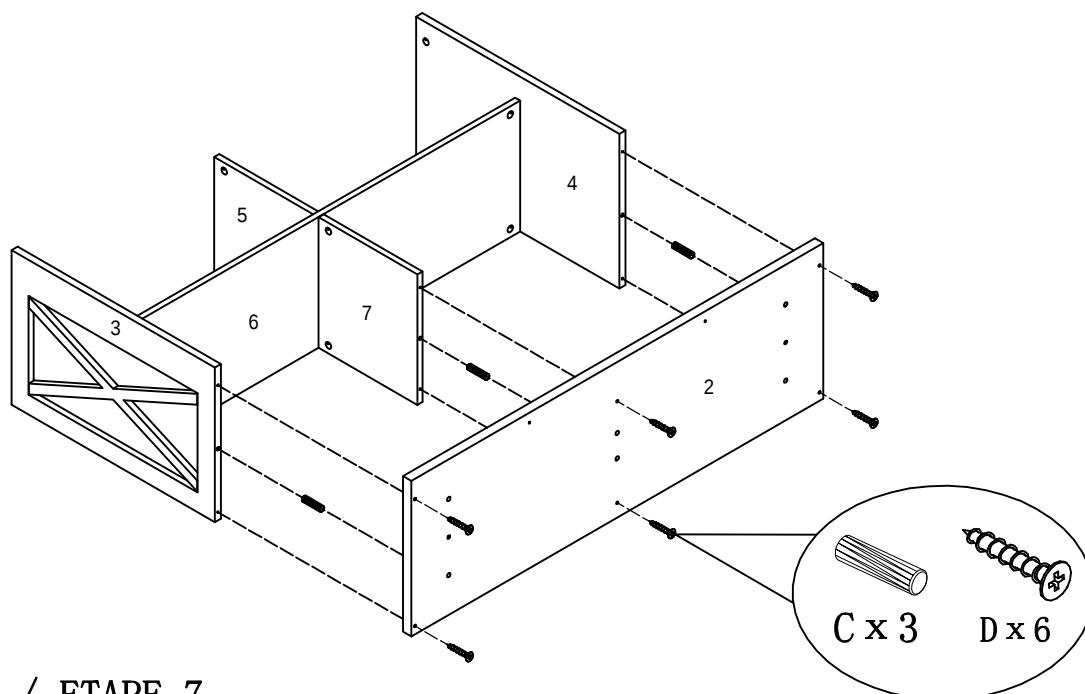


STEP 7 / ETAPE 7

STEP 8 / ETAPE 8

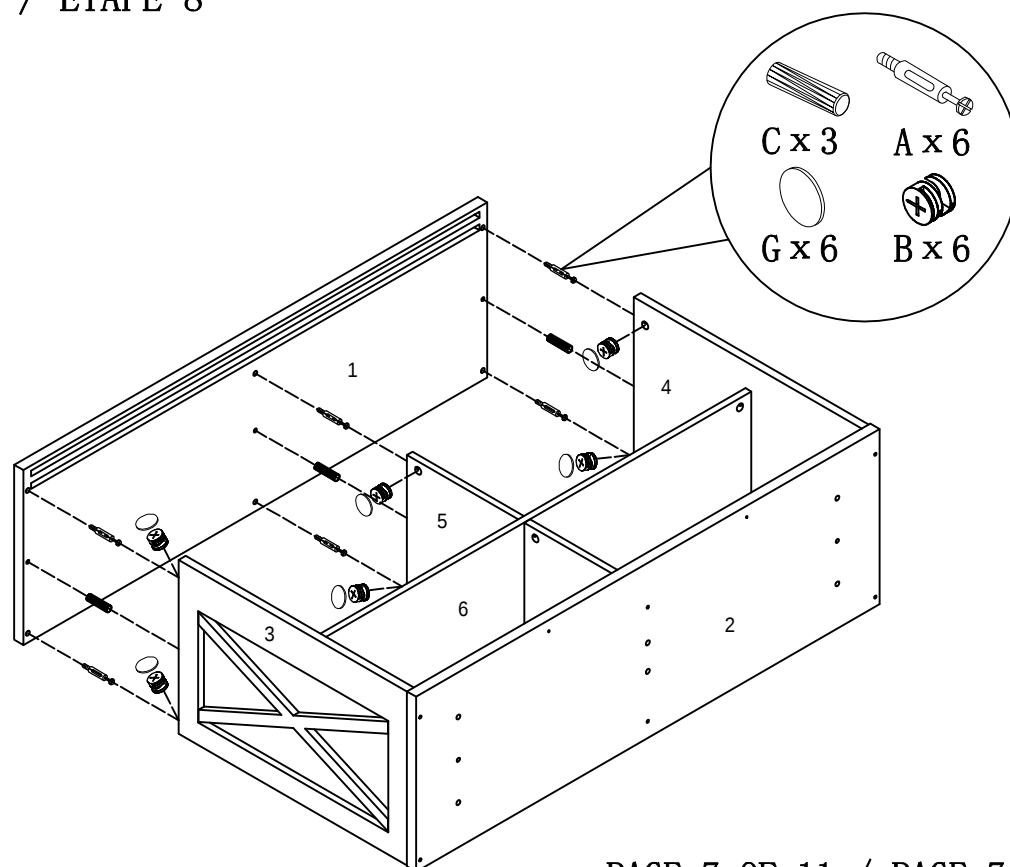


BUFFET/DESSERTS

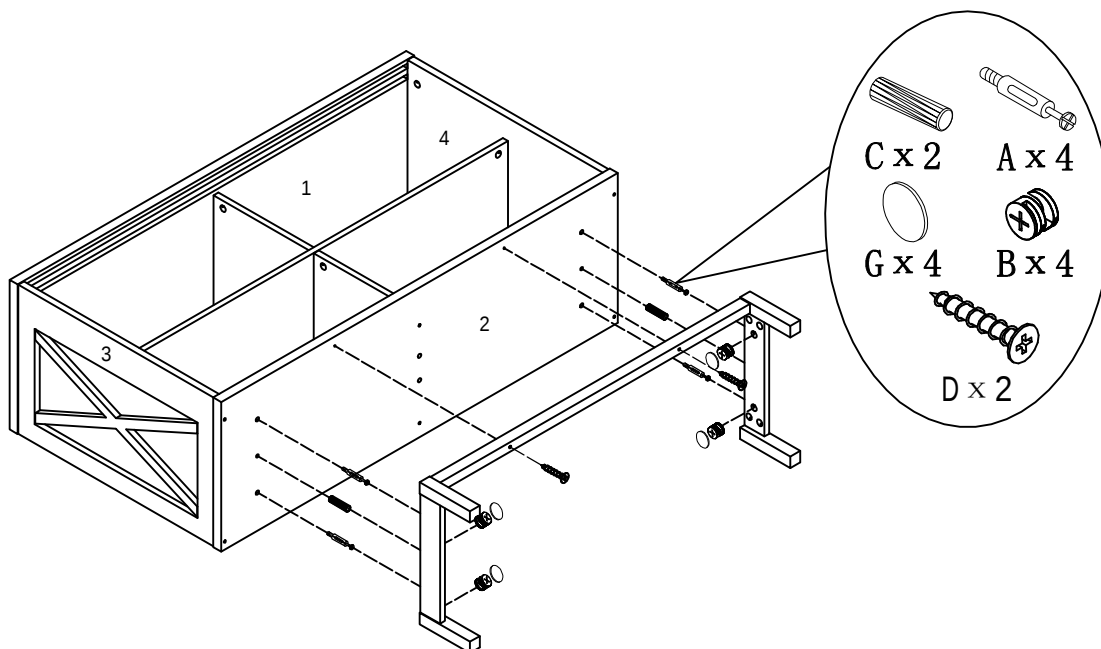


STEP 9 / ETAPE 9

STEP 10 / ETAPE 10

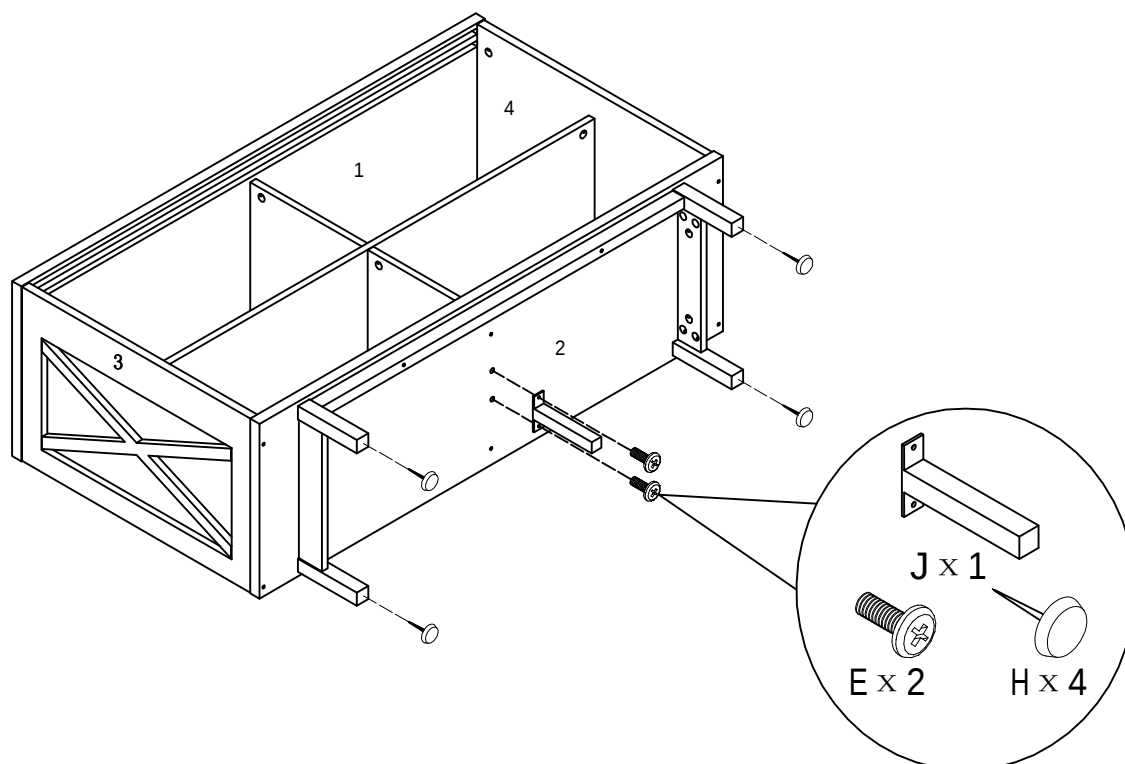


BUFFET/DESSERTTE

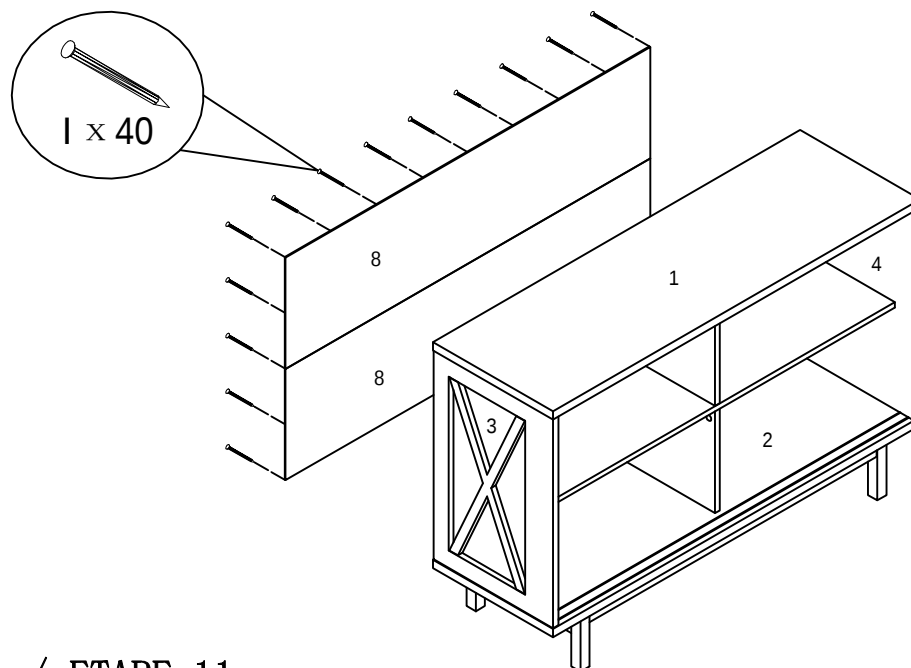


STEP 11 / ETAPE 11

STEP 12 / ETAPE 12

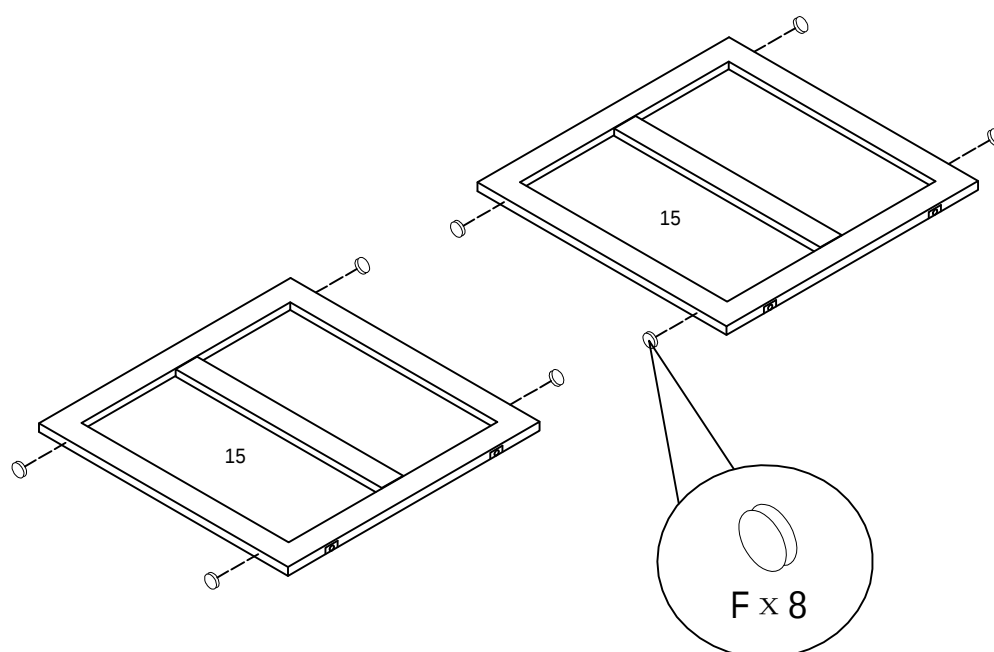


BUFFET/DESSERTTE

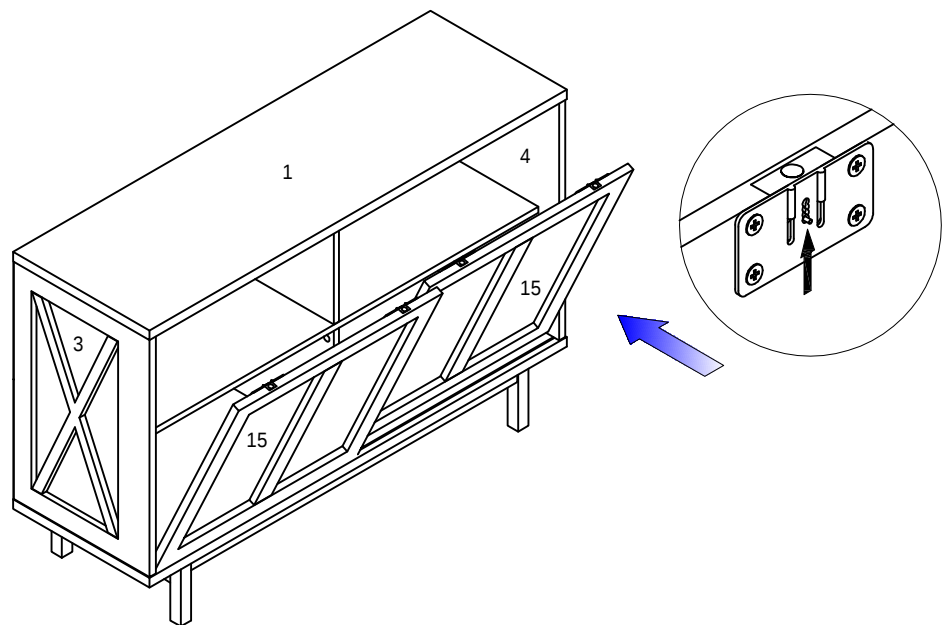

STEP 13 / ETAPE 13

STEP 14 / ETAPE 14

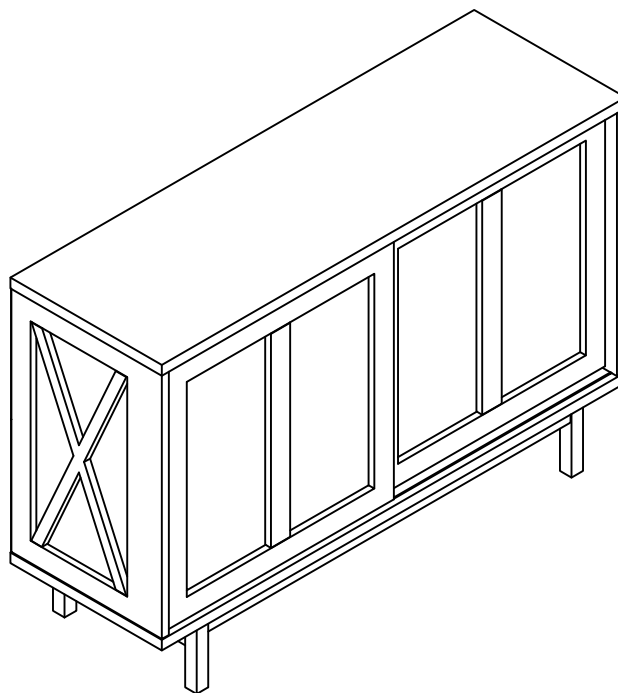


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

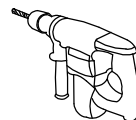


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1 / ETAPE 1

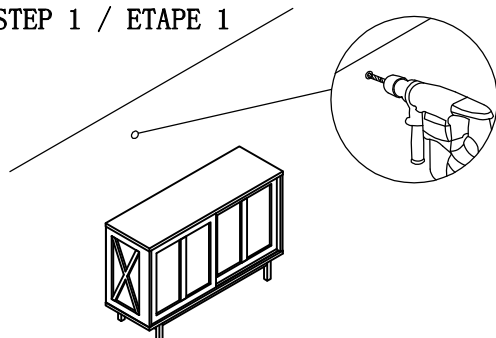


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2 / ETAPE 2

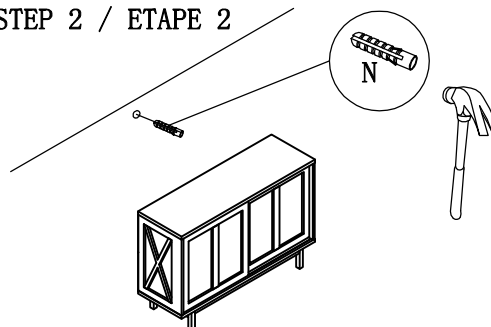


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3 / ETAPE 3

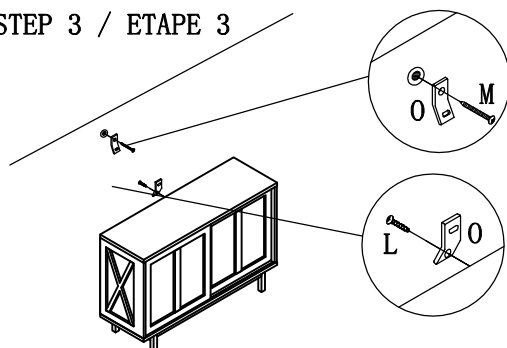

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4 / ETAPE 4

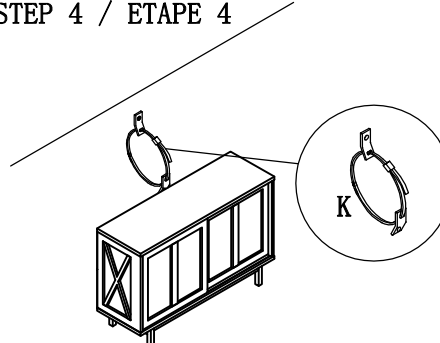

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.