


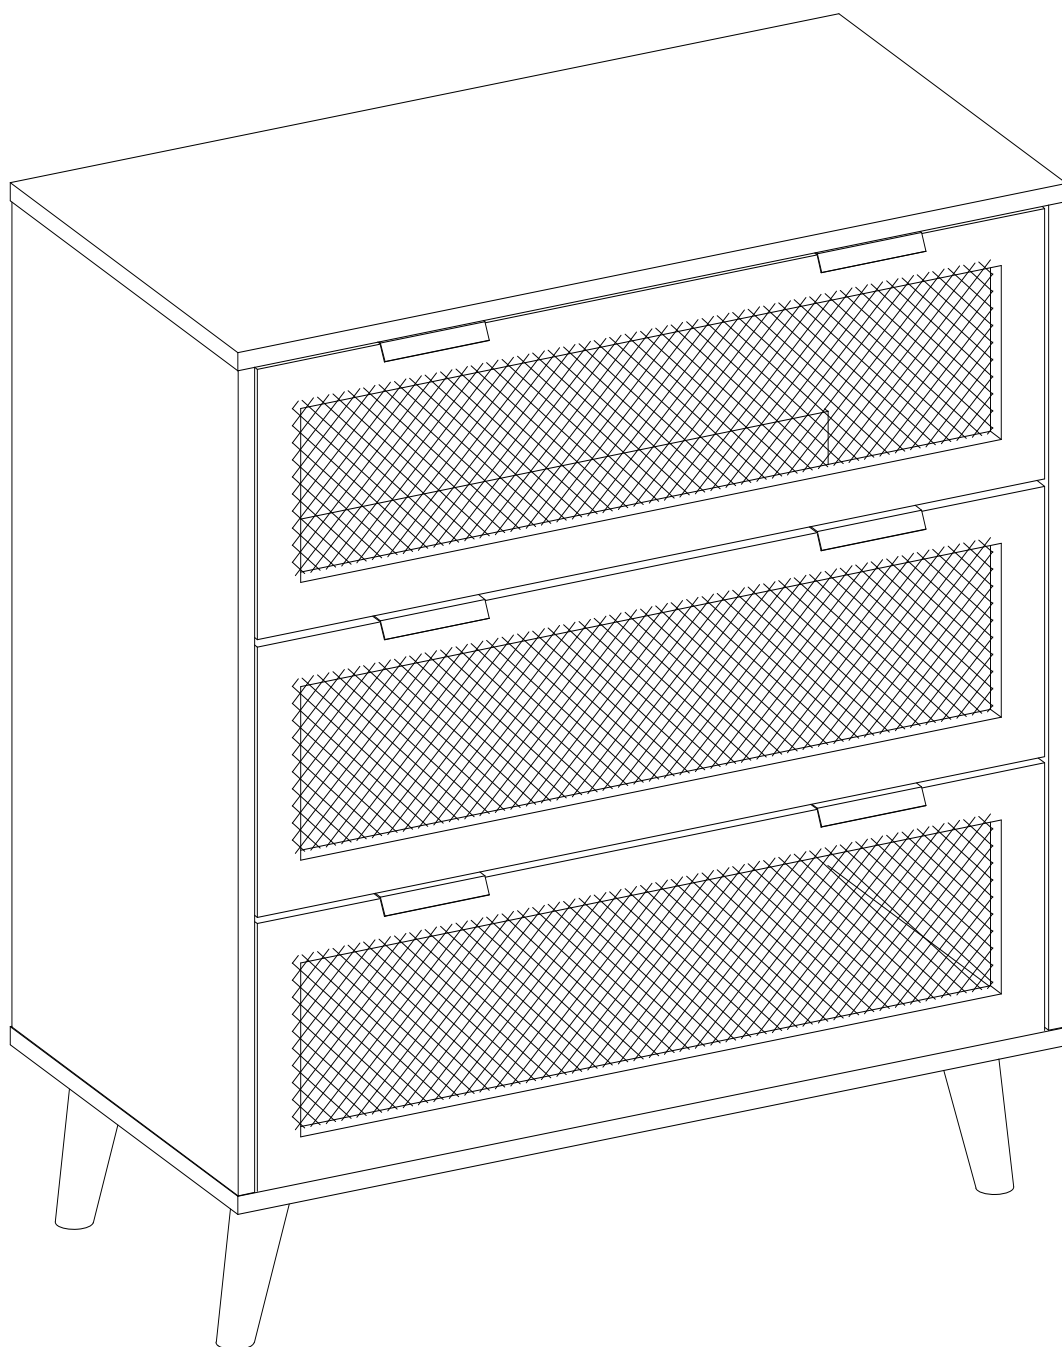

USER'S MANUAL

List

Part I. Product structure

Product assembly completion drawing-----	1
Component hardware details -----	3
Product explosion-----	4

Part II. Assembly steps

Assembly steps-----	5-12
Good job -----	13

Hardware List

Ⓐ



5*35mm

(26pcs)

Ⓑ



15*12mm

(26pcs)

Ⓒ



8*30mm

(24pcs)

Ⓓ



4*35mm

(16pcs)

Ⓔ



3.5*14mm

(48pcs)

Ⓕ



(4pcs)

Ⓖ



4*15mm


(20pcs)

Ⓕ



(4pcs)

Ⓖ

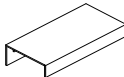

(6pcs)

Ⓖ



(2pcs)



CL*3



CR*3



DL*3



DR*3

Panel List

① *1

② *1

③ *1

④ *1

⑩ *3

⑨ *3

⑧ *3

⑤ *1

⑫ *3


⑬ *1

⑥ *2


⑦ *3

⑪ *3


Product explosion

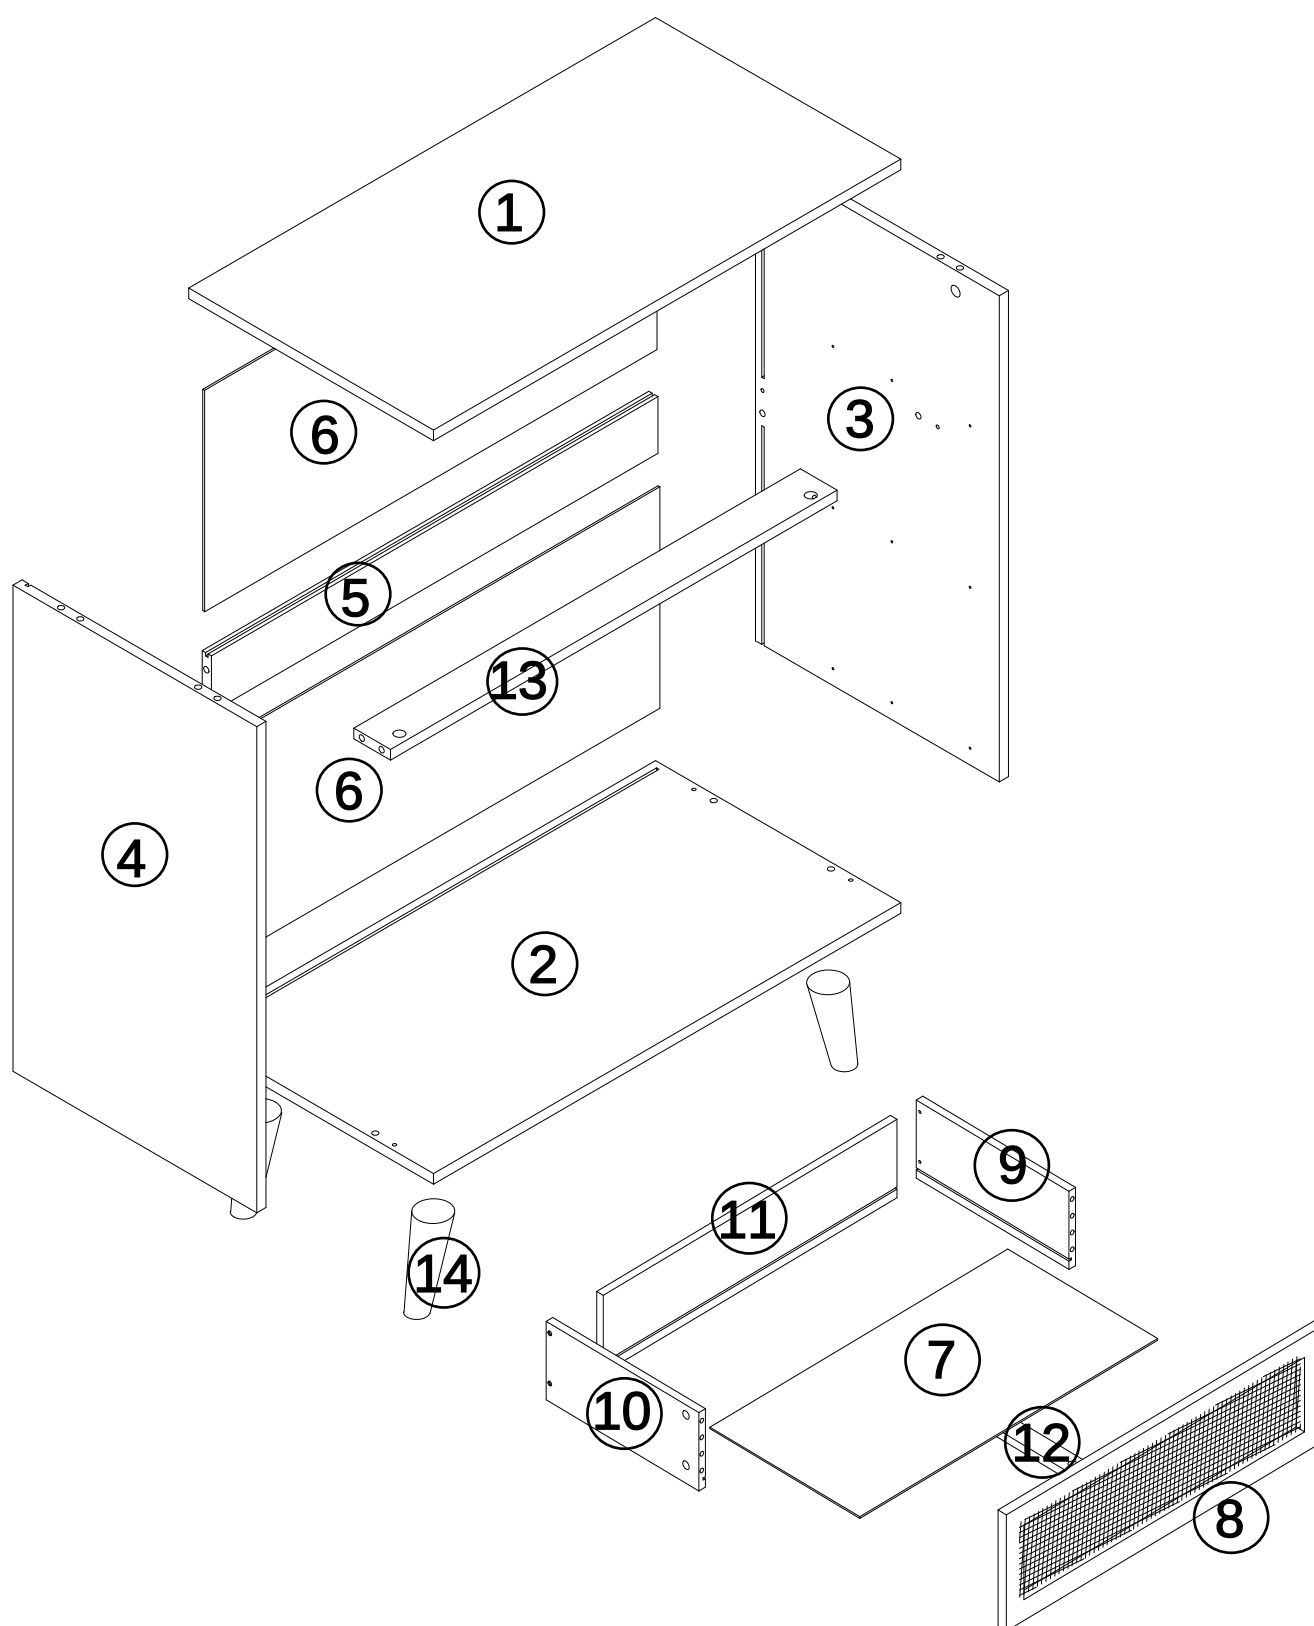




Step 1

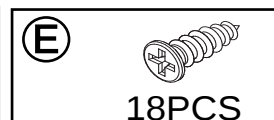




Note: The screws for this step are screws E.

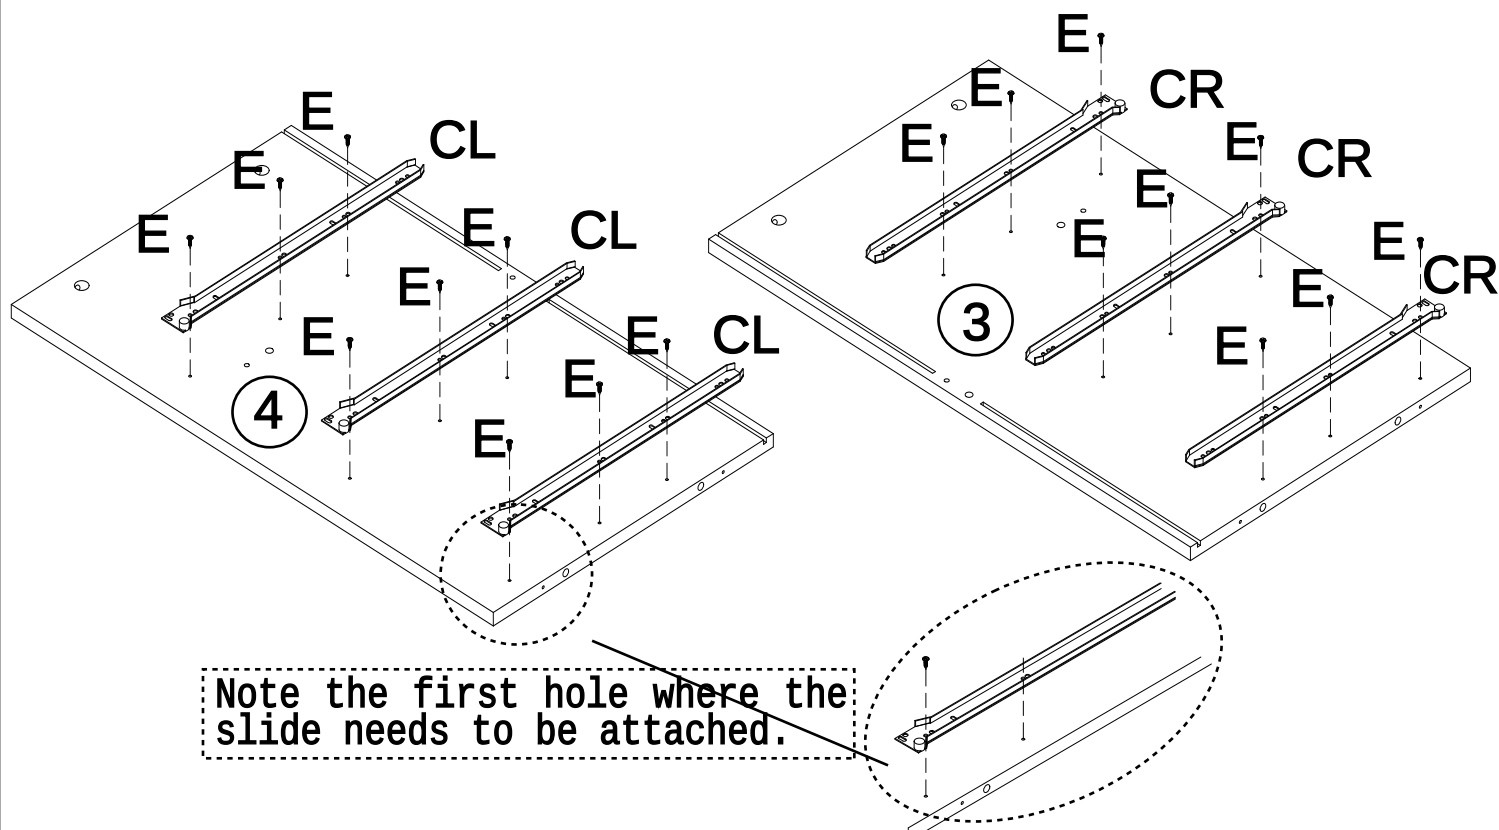




Step 2

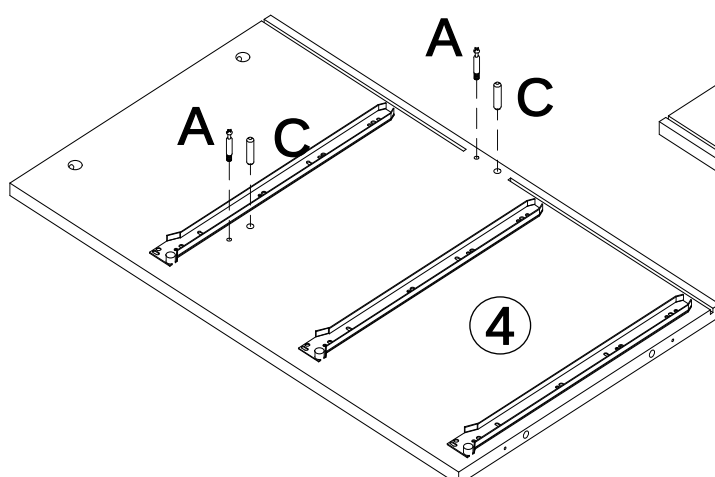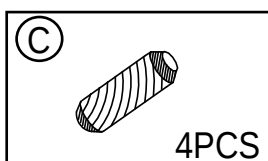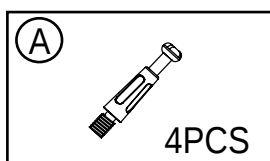






Step 3

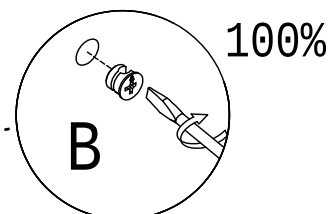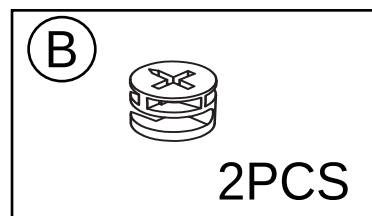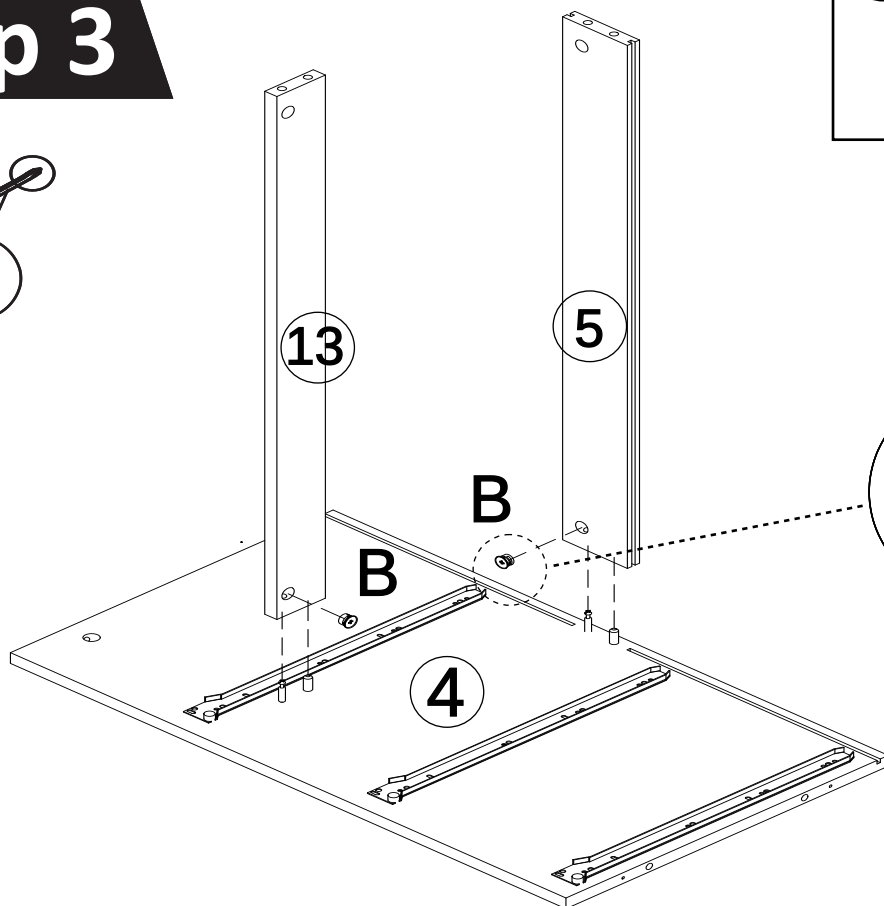


Step 4

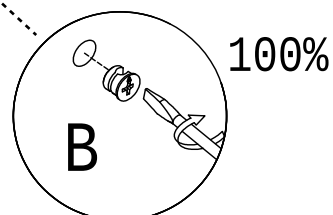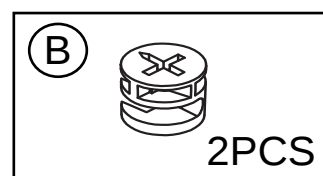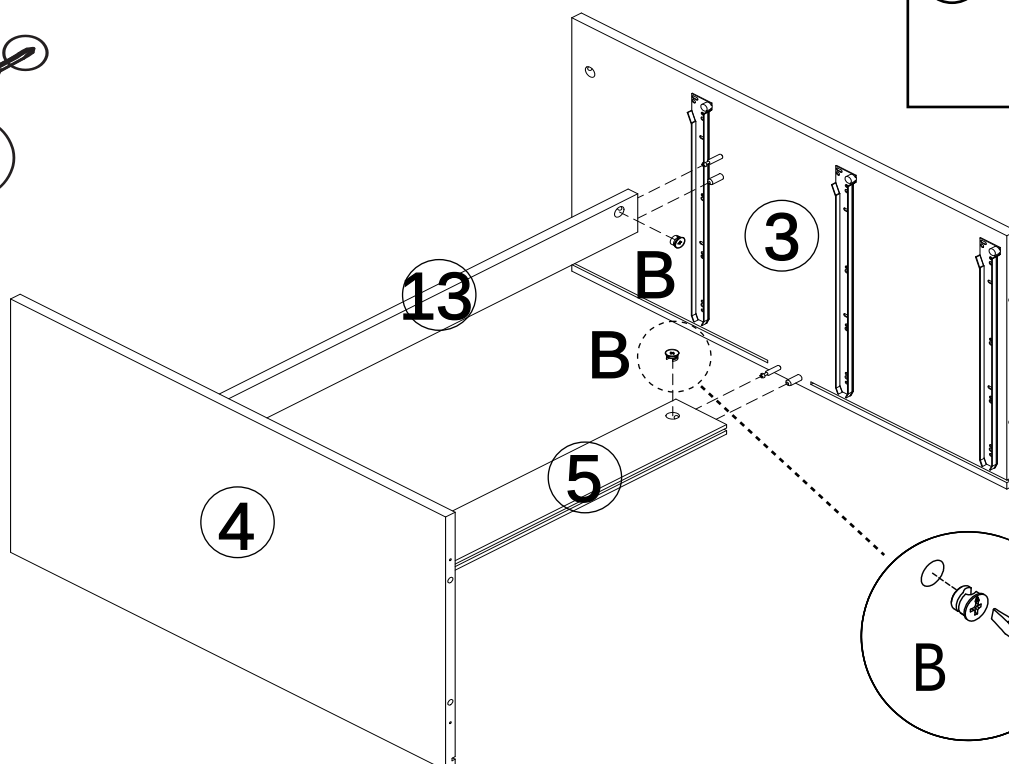





Step 5

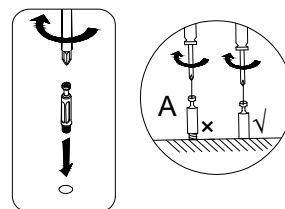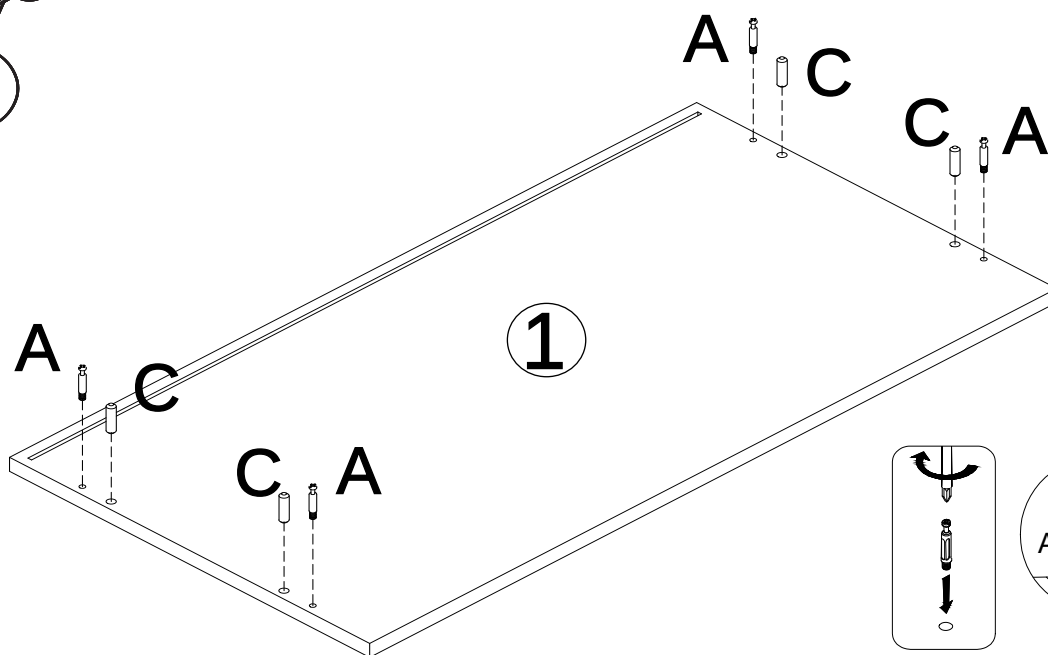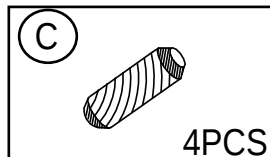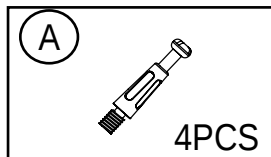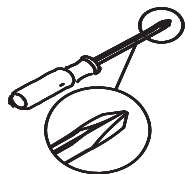





Step 6

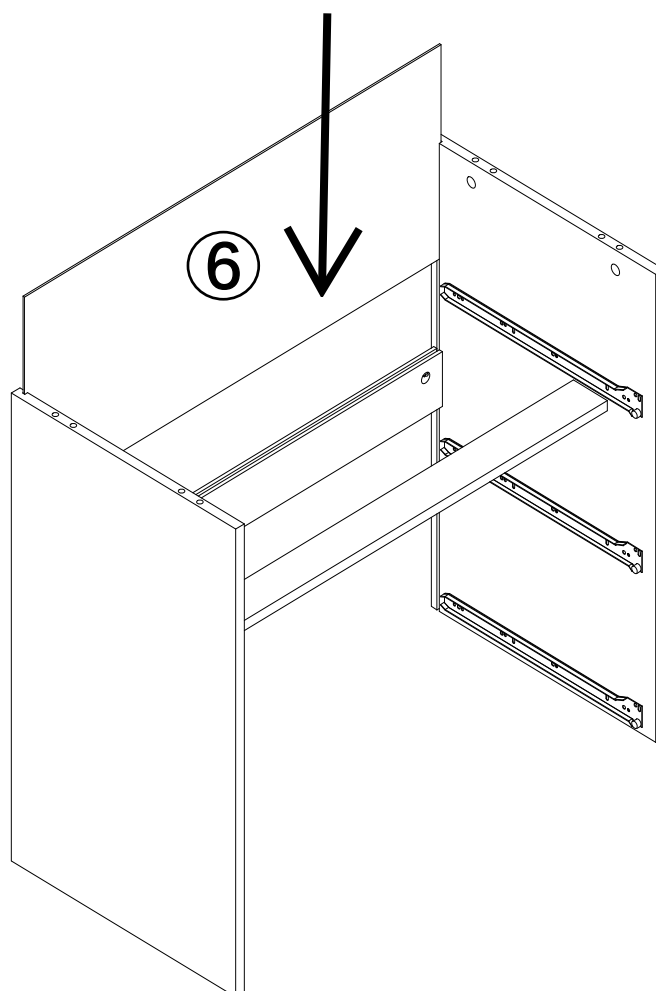





Step 7

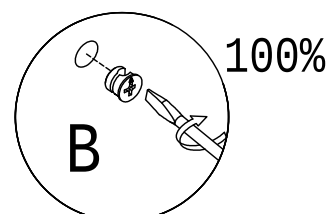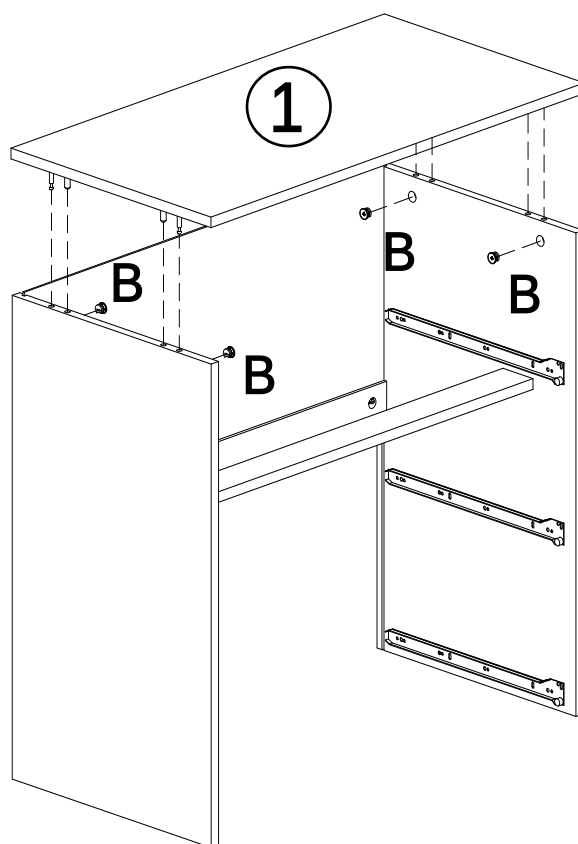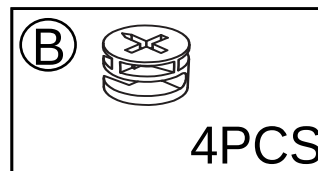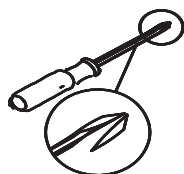



Step 8

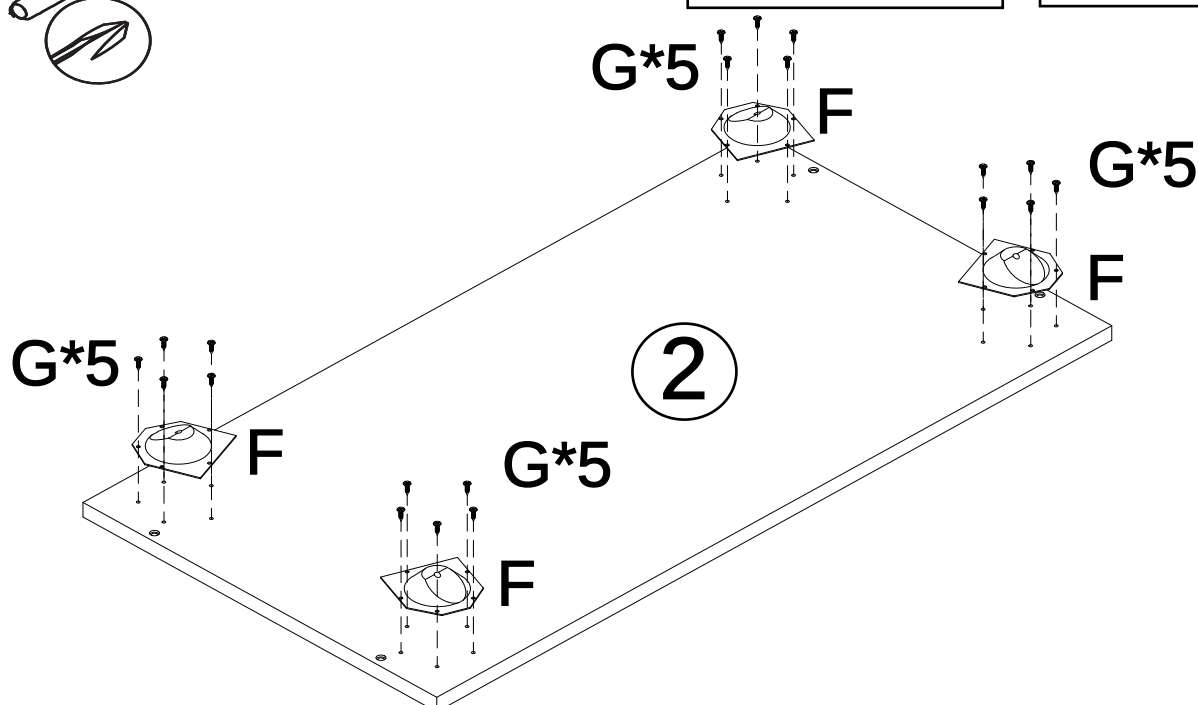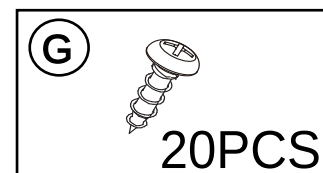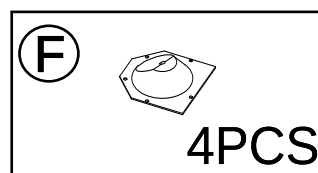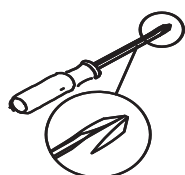

Step 9

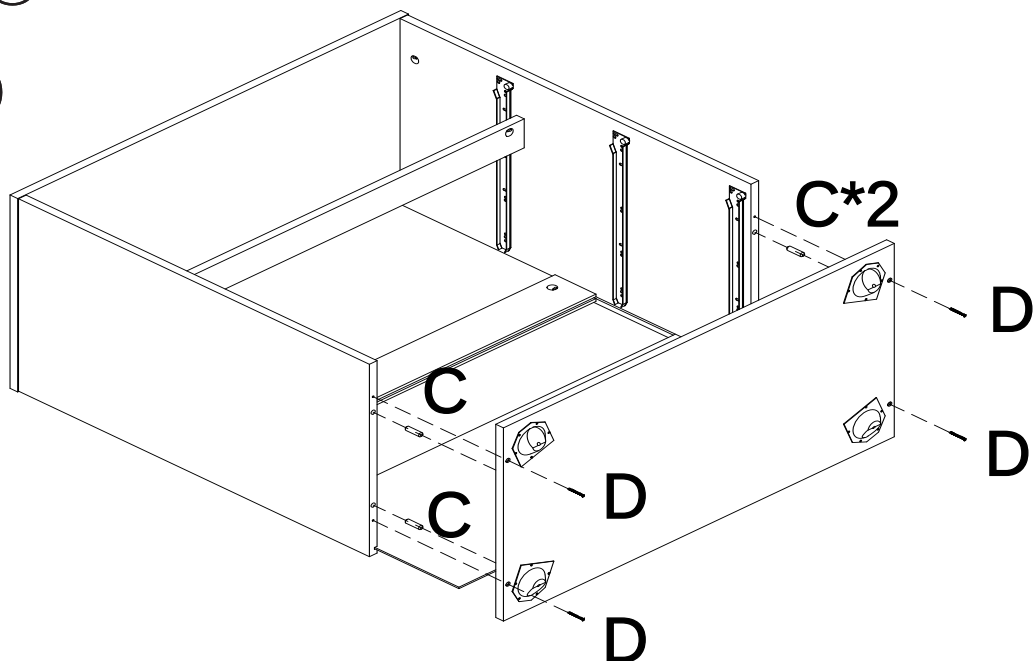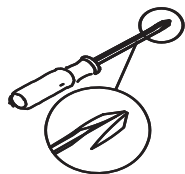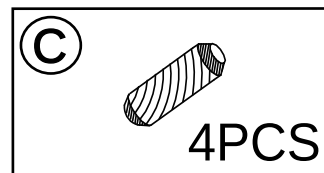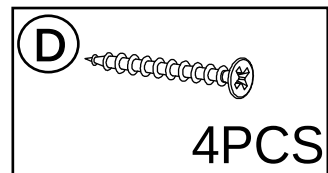

Step 10

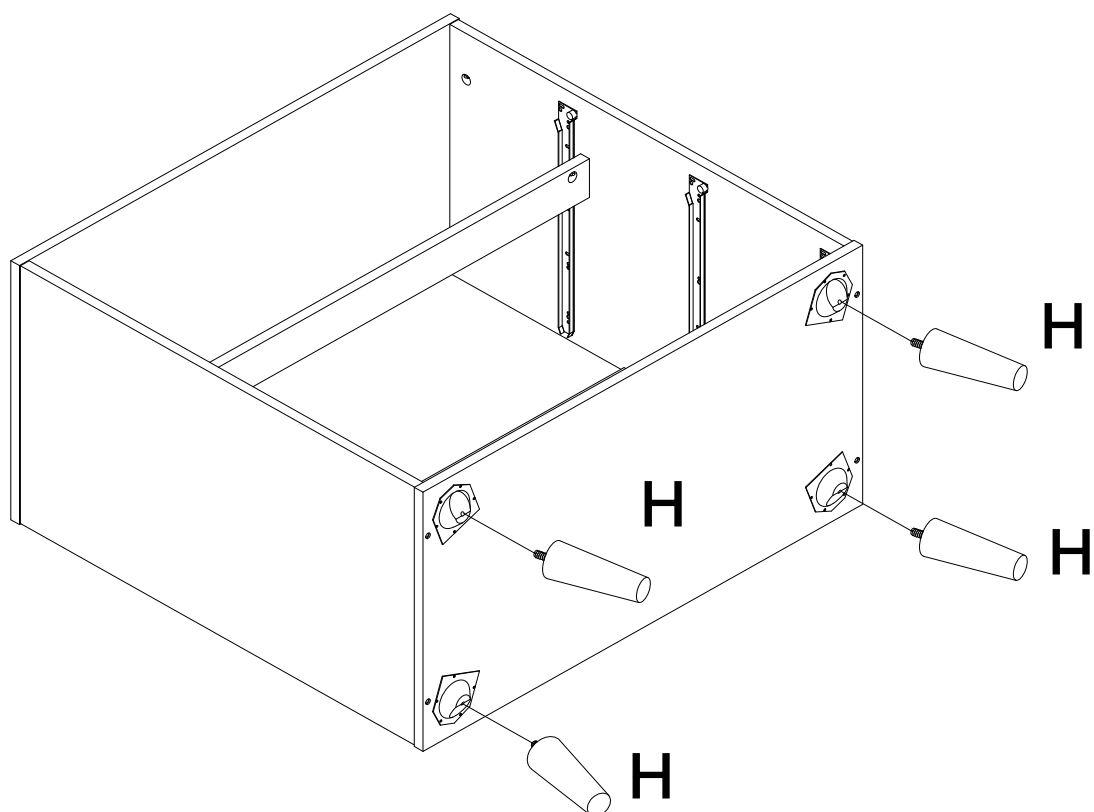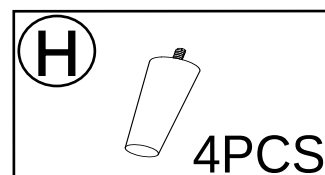

Step 11

Ⓐ




18PCS

Ⓒ



12PCS

Ⓘ



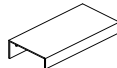


6PCS

Ⓔ



12PCS

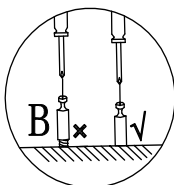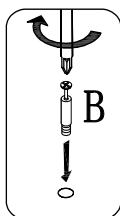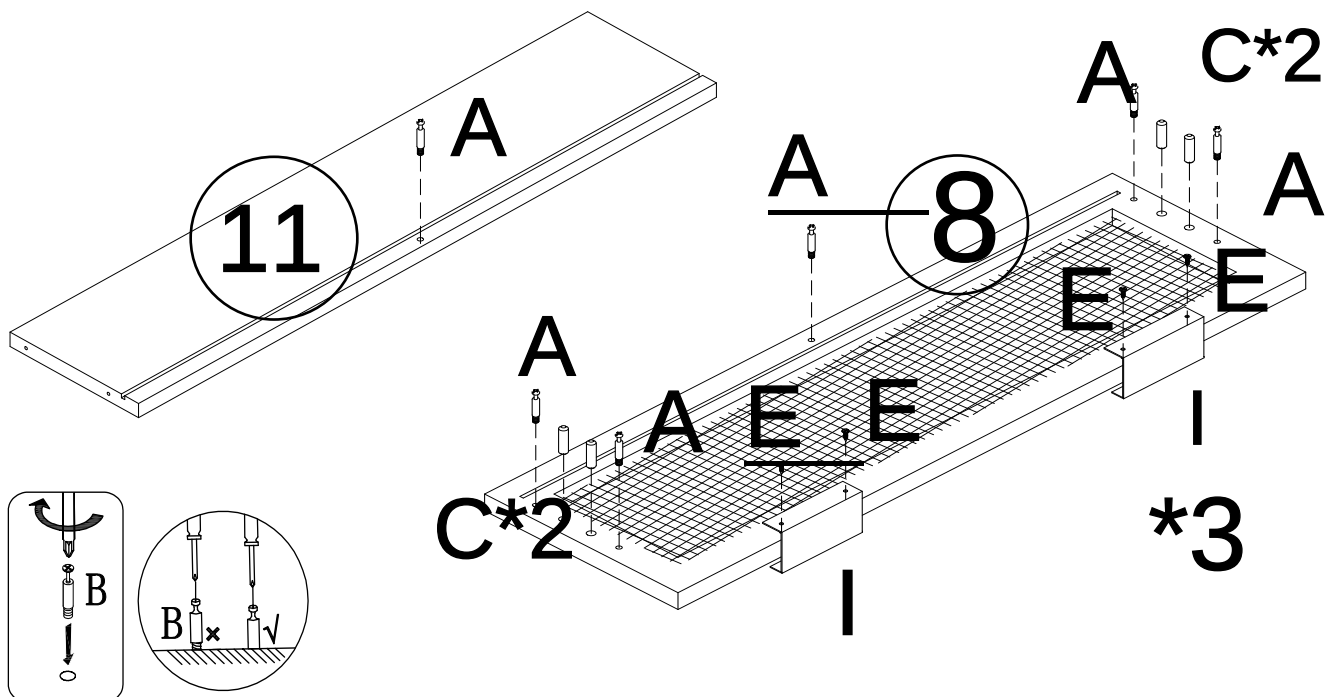


Step 12

Ⓓ





12PCS



Note: The screws for this step are screws D.

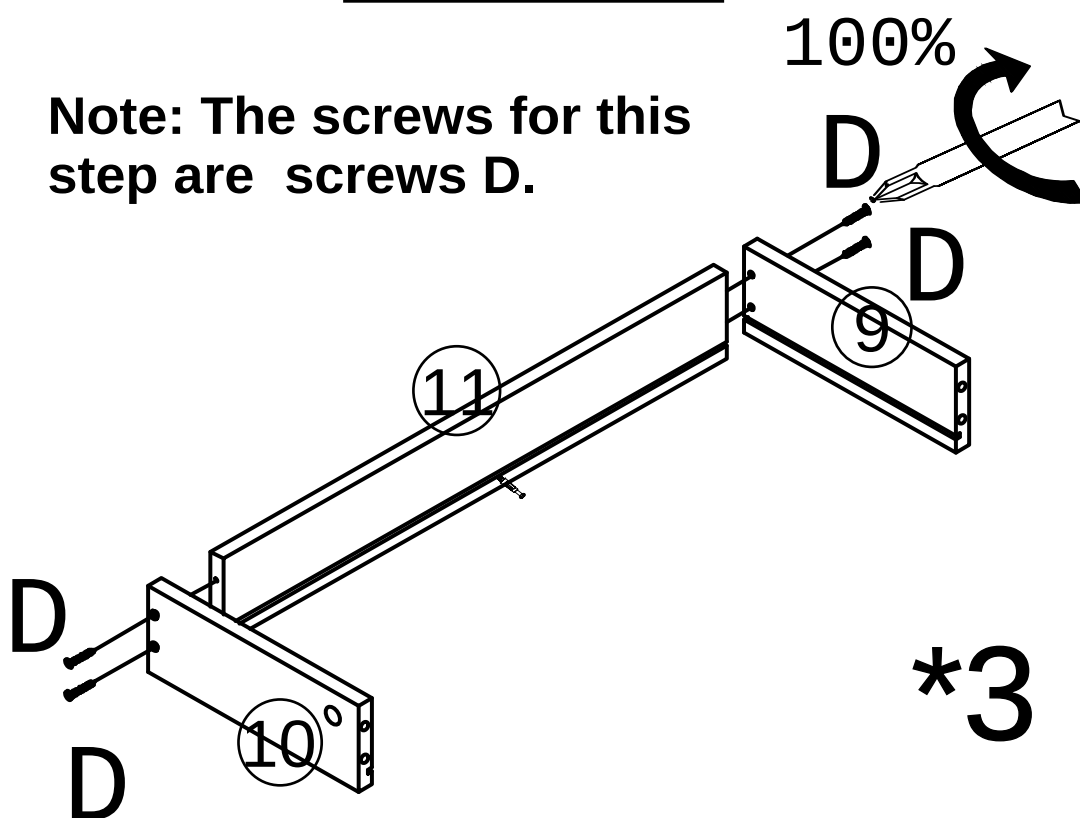

Step 13



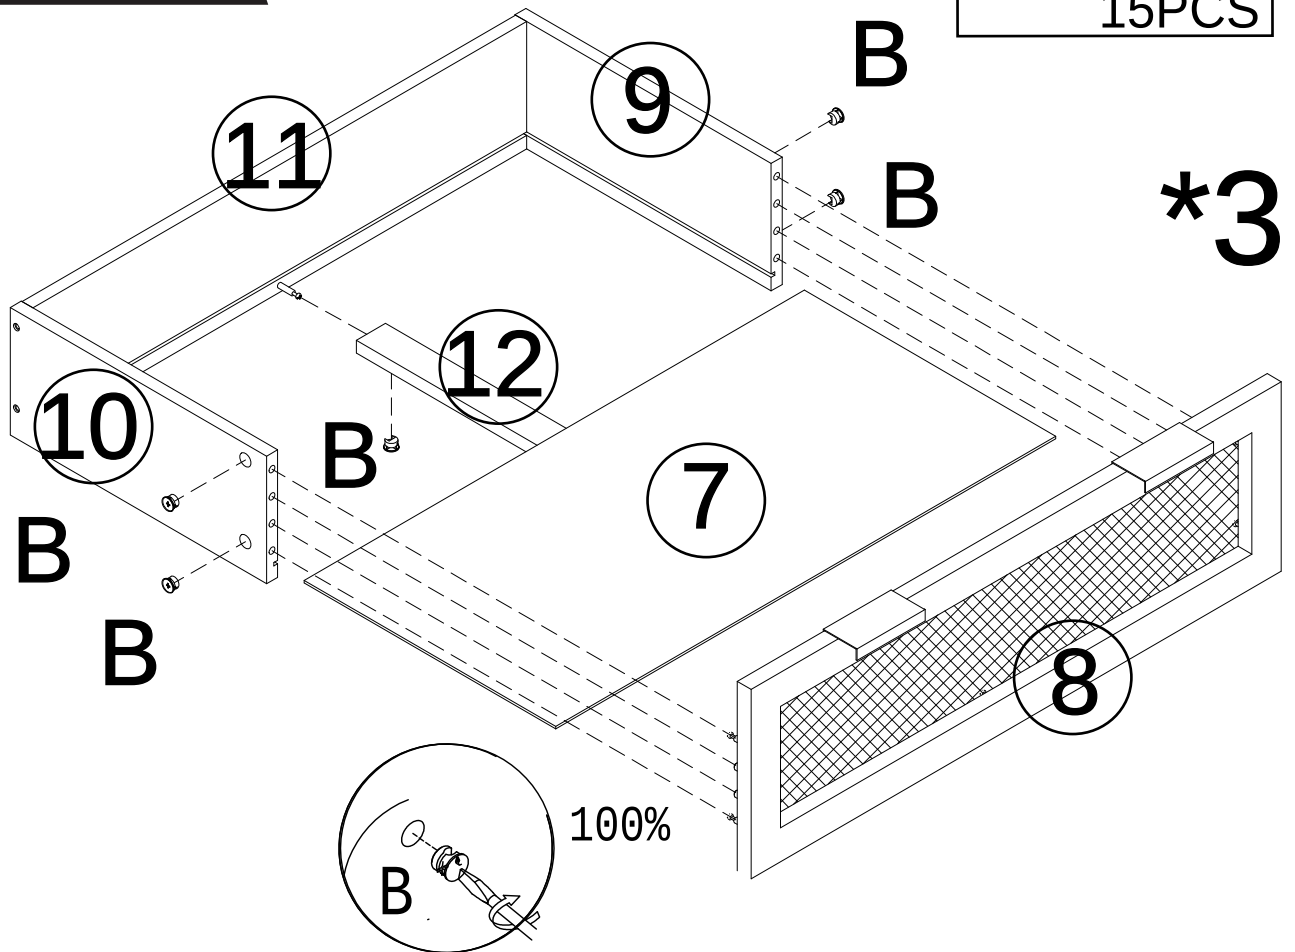
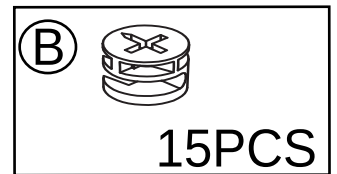


Step 14


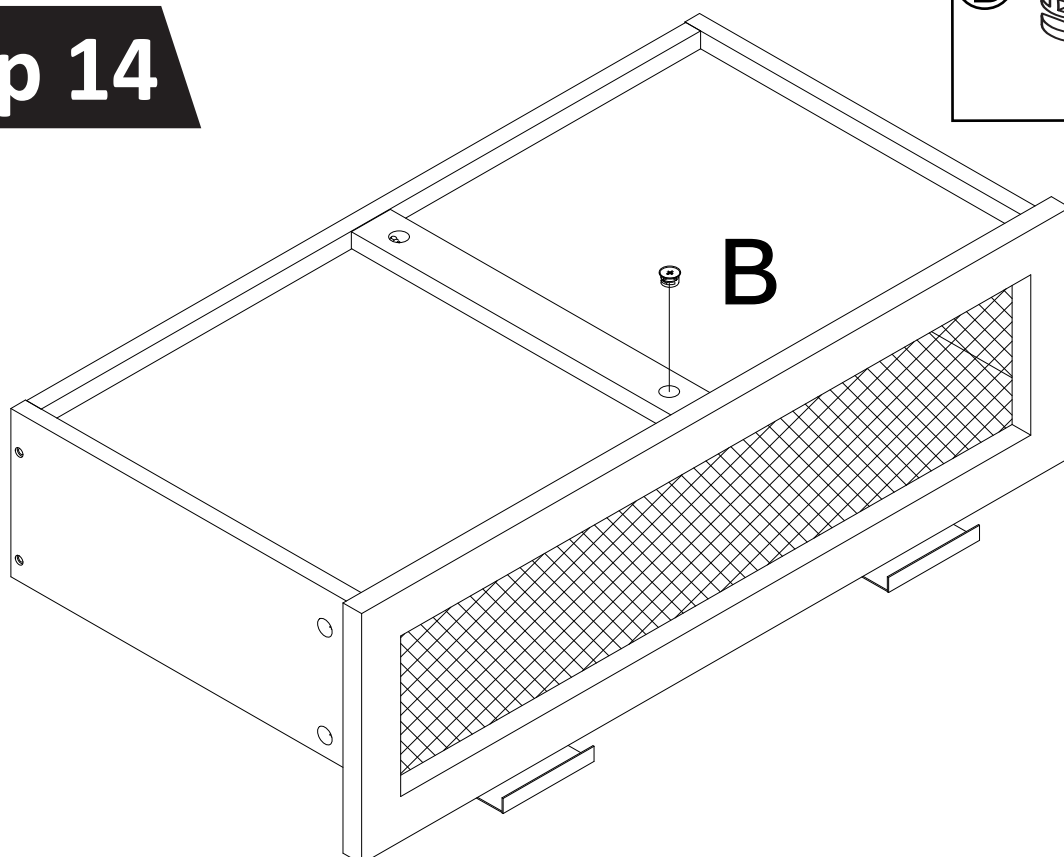
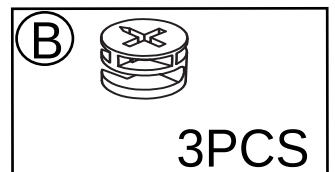


***3**

Step 15

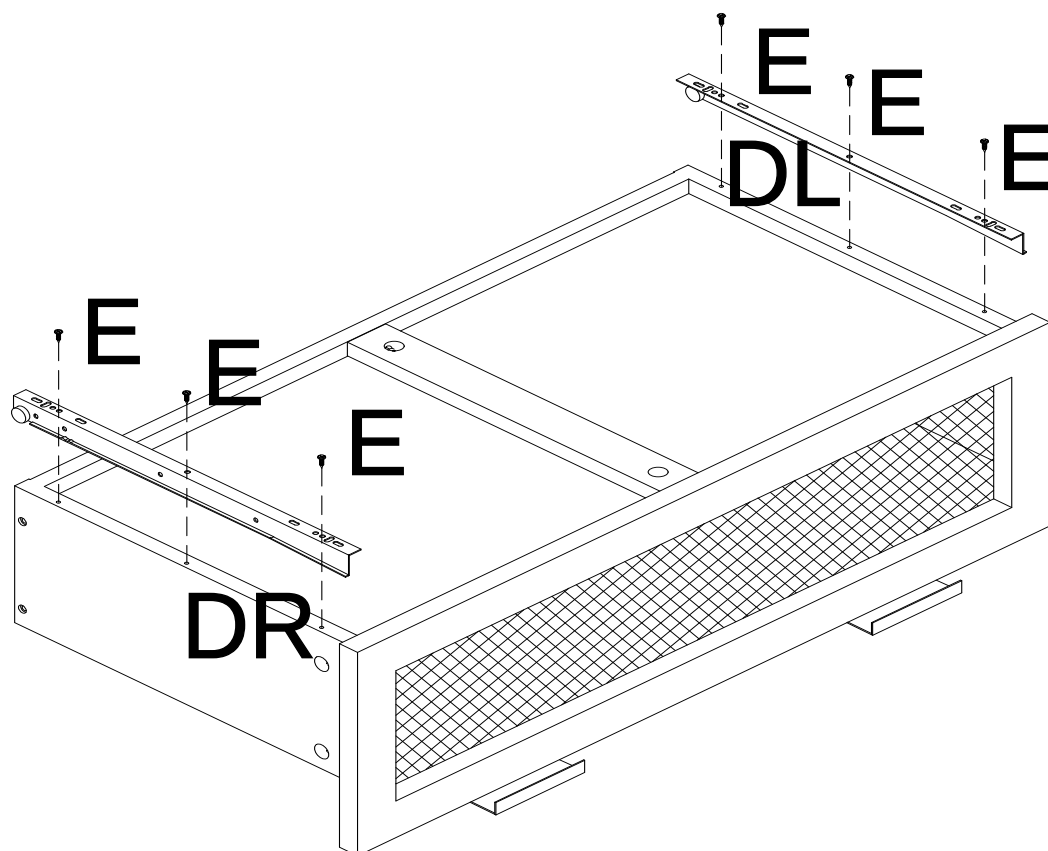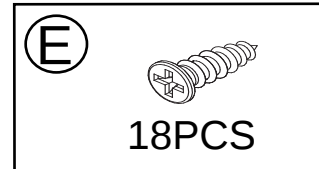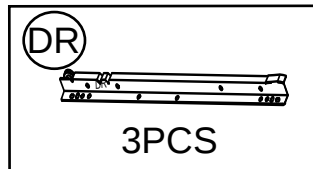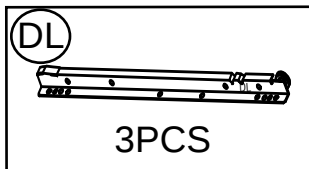




Step 16

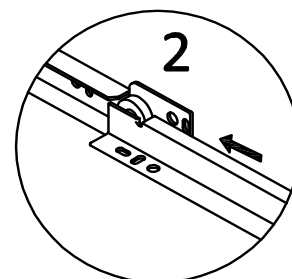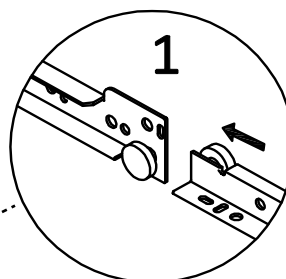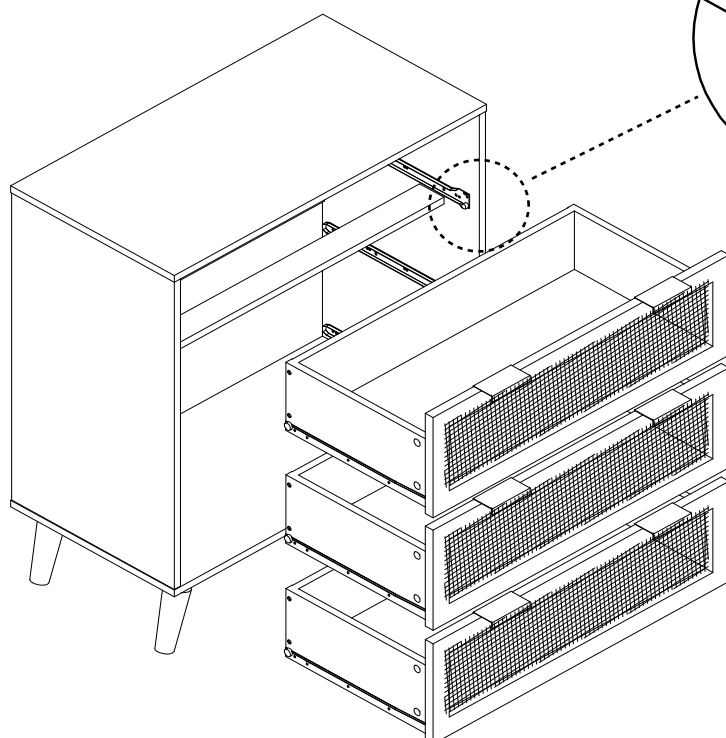

If all drawers are not smooth, there are several solutions:

1. Place the item on a flat ground to adjust and make sure it remains stable.
2. Check that all the screws in the slide rail are tightened.
3. Check whether the No. 13 plate of the middle pull bar is well connected.

Step 17

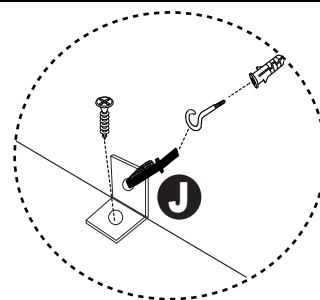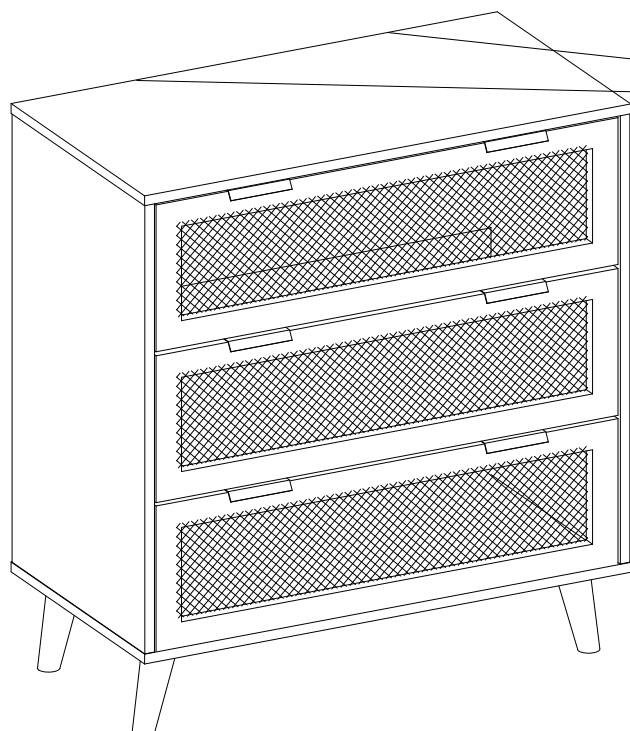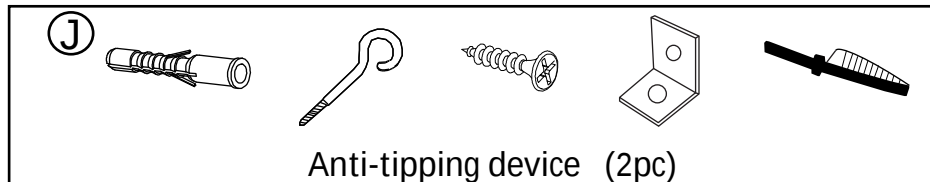

1. Connect the bracket to the unit as shown using the short screw.
2. Drill a hole slightly smaller than the plastic anchor into the drywall and gently tap the plastic anchor into the hole.
3. Insert the eyelet screw into the plastic anchor and fasten the unit to the wall using a cable tie.

Great job. You're done!