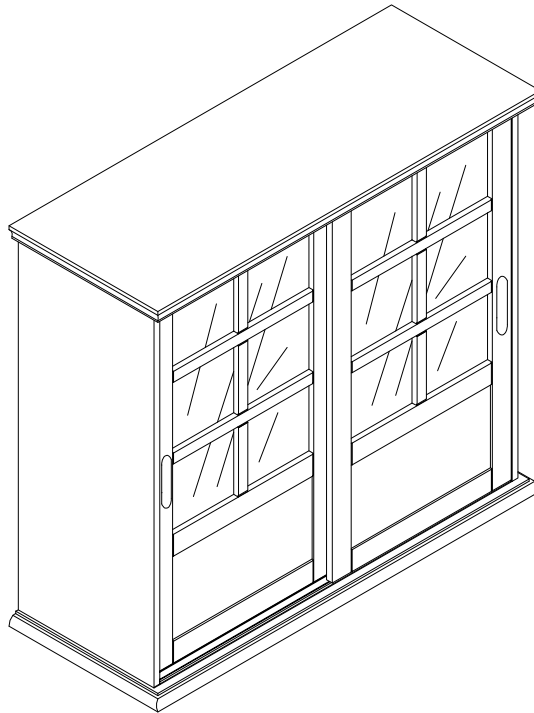


ASSEMBLY INSTRUCTIONS

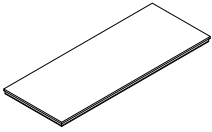


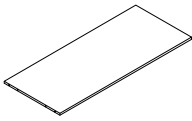
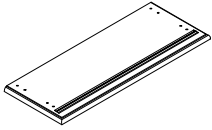
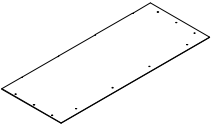
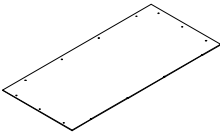

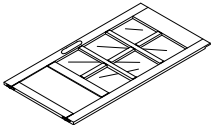
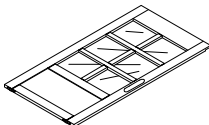
Curio






NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Part List

A. Quantity of 1  Top Panel	B. Quantity of 1  Side Panel (Left)	C. Quantity of 1  Side Panel (Right)	D. Quantity of 1  Divider
E. Quantity of 1  Bottom Panel	F. Quantity of 1  Back Panel	G. Quantity of 1  Back Panel	H. Quantity of 2  Adjustable Shelf
I. Quantity of 1  Door (Left)	J. Quantity of 1  Door (Right)		

Hardware List

(1) Quantity of 12  Wood Dowel	(2) Quantity of 12  Cam-bolt	(3) Quantity of 12  Cam-Lock	(4) Quantity of 8  Shelf Support
(5) Quantity of 24  Screw	(6) Quantity of 1  Glue		

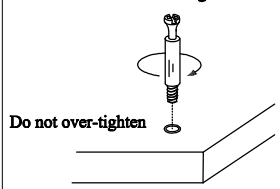
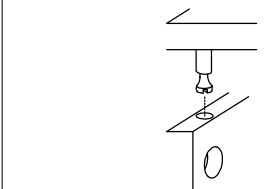
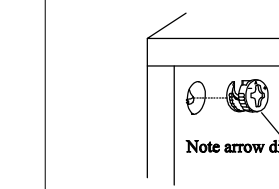
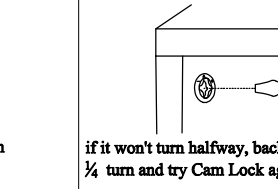
Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:


1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

To use Cam Locks:

1. Insert Cam Pin until snug 	2. Set boards together 	3. Insert Cam Lock 	4. Turn Cam Lock clockwise (half a turn) 
--	---	---	---

STEP 1


- | | | |
|---|---|------|
| ① |  | 4pcs |
| ② |  | 4pcs |

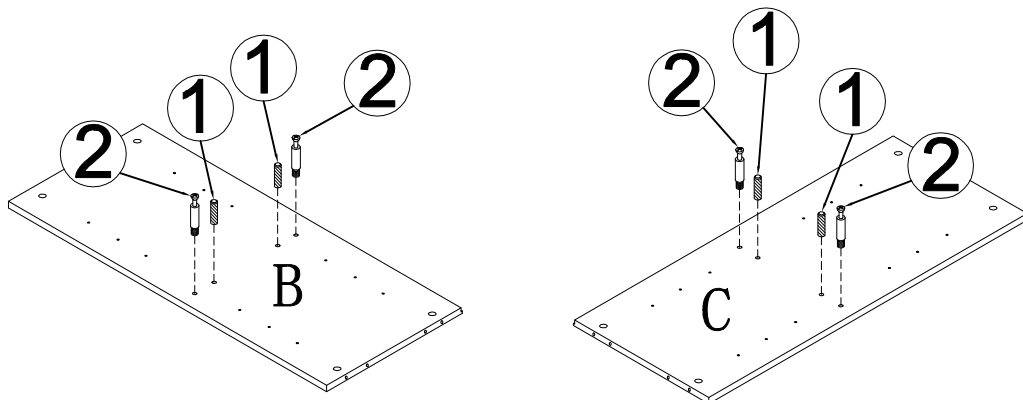

Insert Wood Dowels (1) and Cam-bolts (2) into the holes on Side Panels (B&C), then tighten Cam-bolts (2).

STEP 2

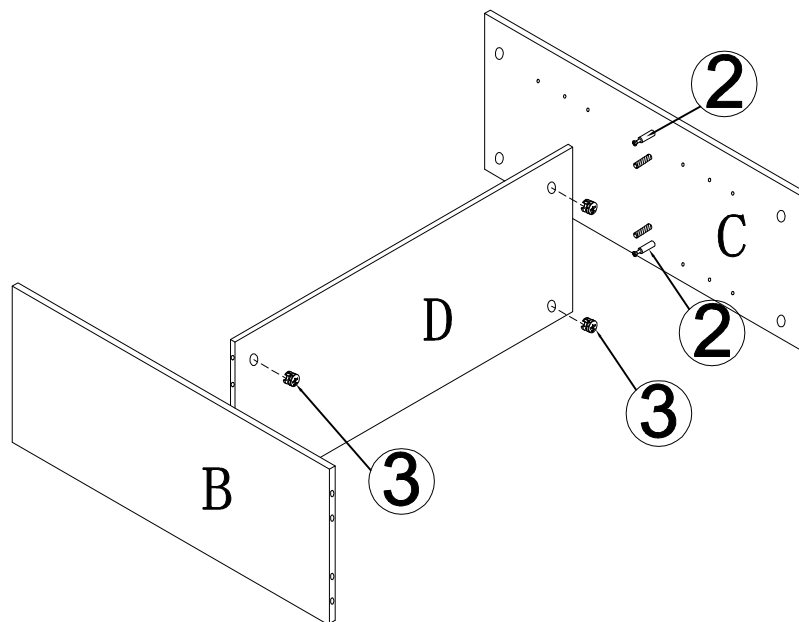
③  4pcs



Attach Side Panels (B&C) to Divider (D), then using Cam-locks (3) to catch inserted Cam-bolts (2) on Side Panels (B&C).


STEP 3

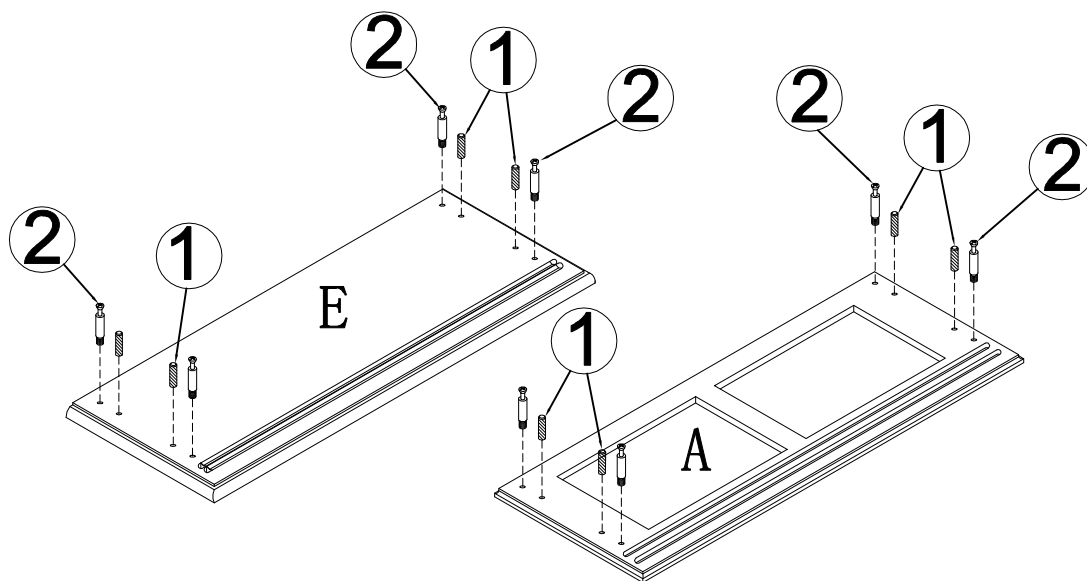①  8pcs
②  8pcs



Insert Wood Dowels (1) and Cam-bolts (2) into the holes on Top Panel (A) and Bottom Panel (E), then tighten Cam-bolts (2).

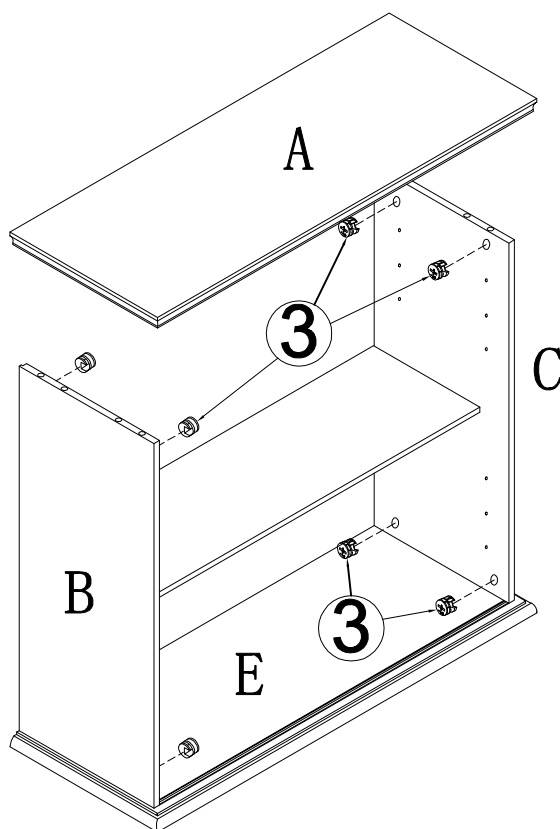STEP 4




3



8pcs

Attach Bottom Panel (E) and Top Panel (A) to Side Panels (B & C), then using Cam-locks (3) to catch inserted Cam-bolts (2) on Top Panel (A) and Bottom Panel (E).

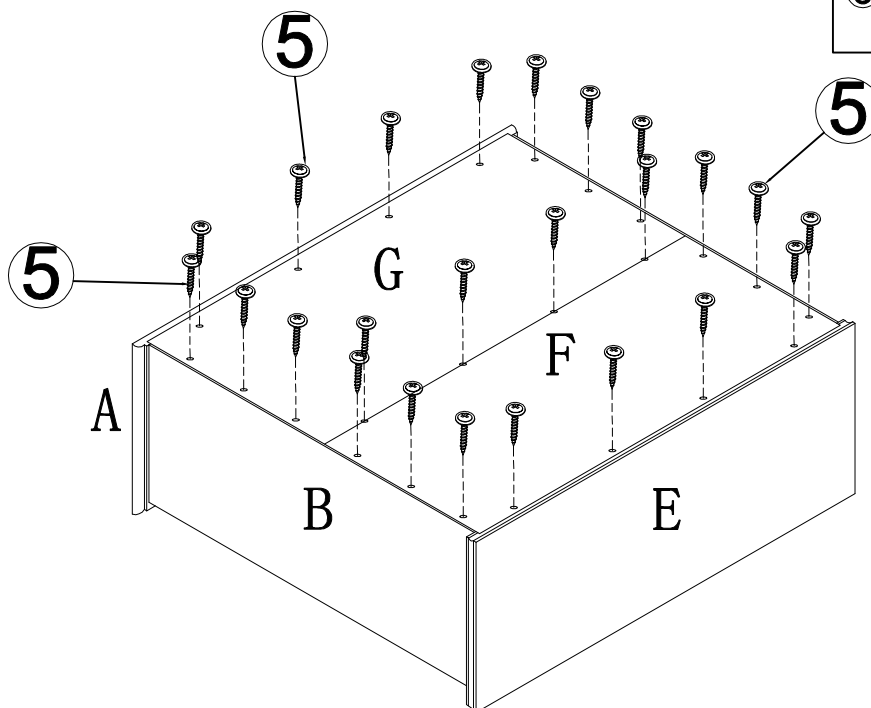STEP 5




5



24pcs

Attach Back Panels (G & F) to the back of this unit using Screws (5).

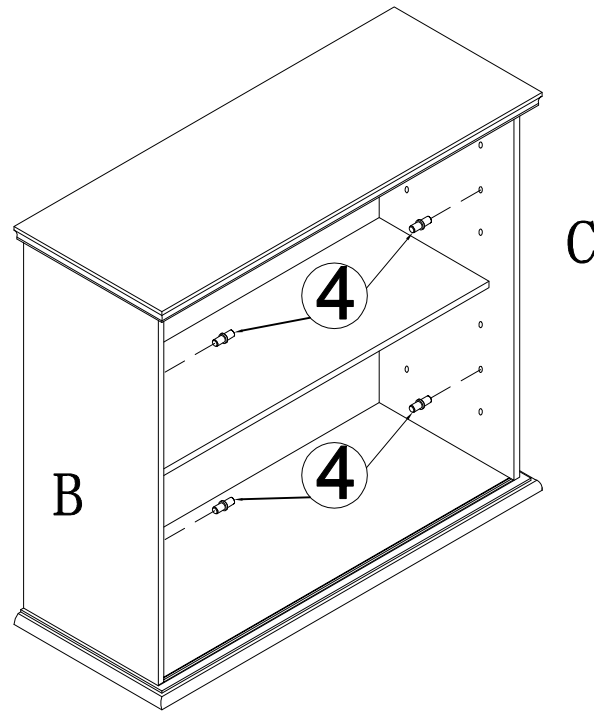
STEP 6



④ 8pcs


Insert Shelf Supports (4) into the holes on Side Panels (B&C) .

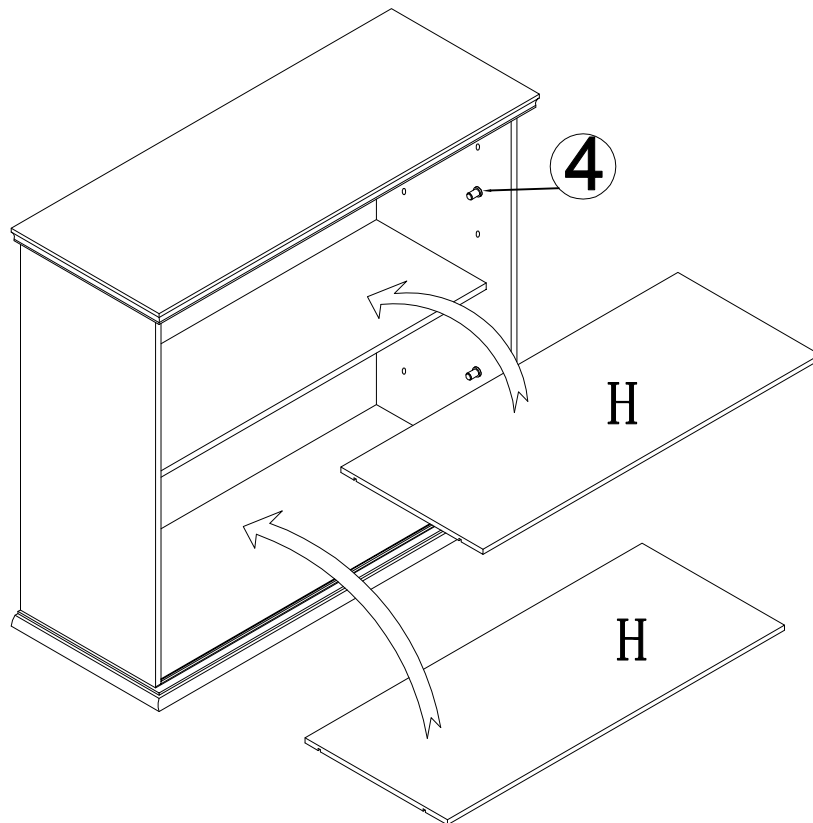STEP 7



Place Shelves (H) on the top of Shelf Supports (4).

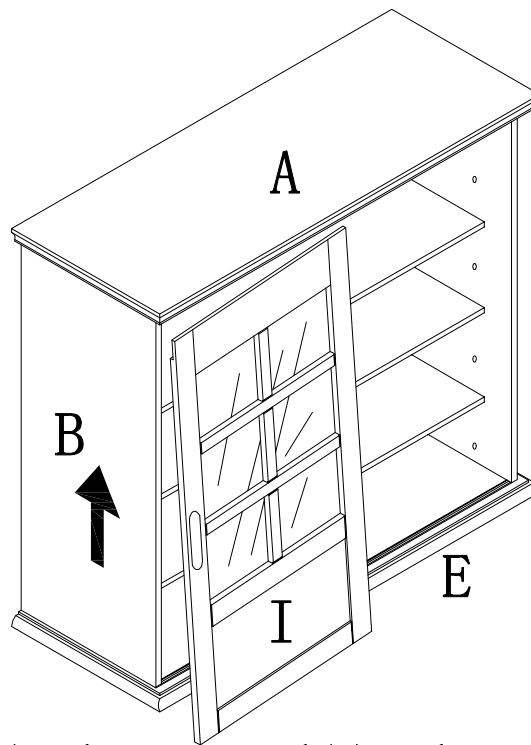
STEP 8



Insert Door (I) to Top Panel (A) and Bottom Panel (E) as above drawing shown.

NOTE: Please make sure to slightly incline the door so that the groove on top of the door can catch the glide on top panel.

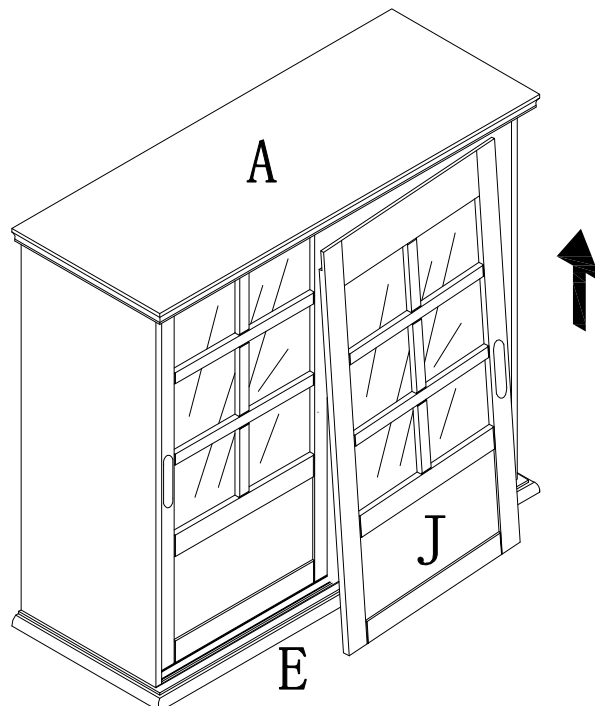STEP 9



Repeat step 8 to assemble the other Door (J).