

















Chest

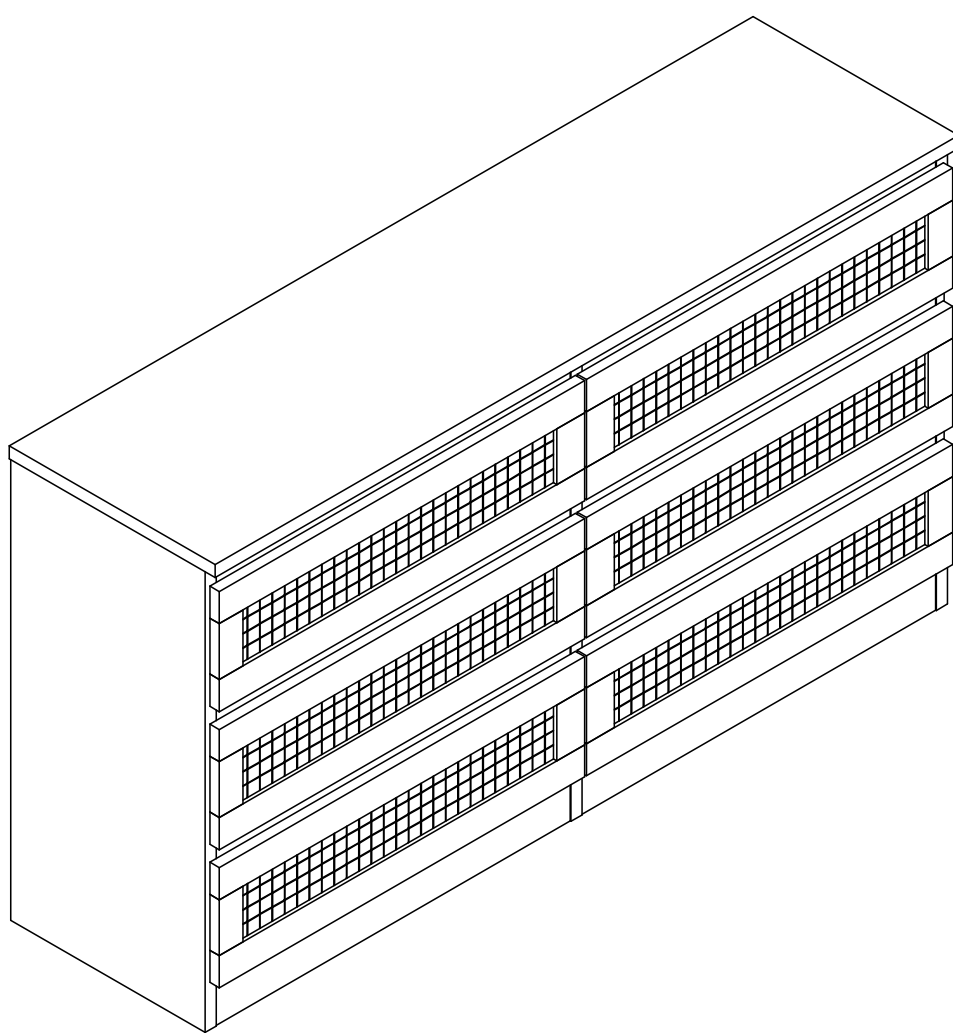


BOARD IDENTIFICATION

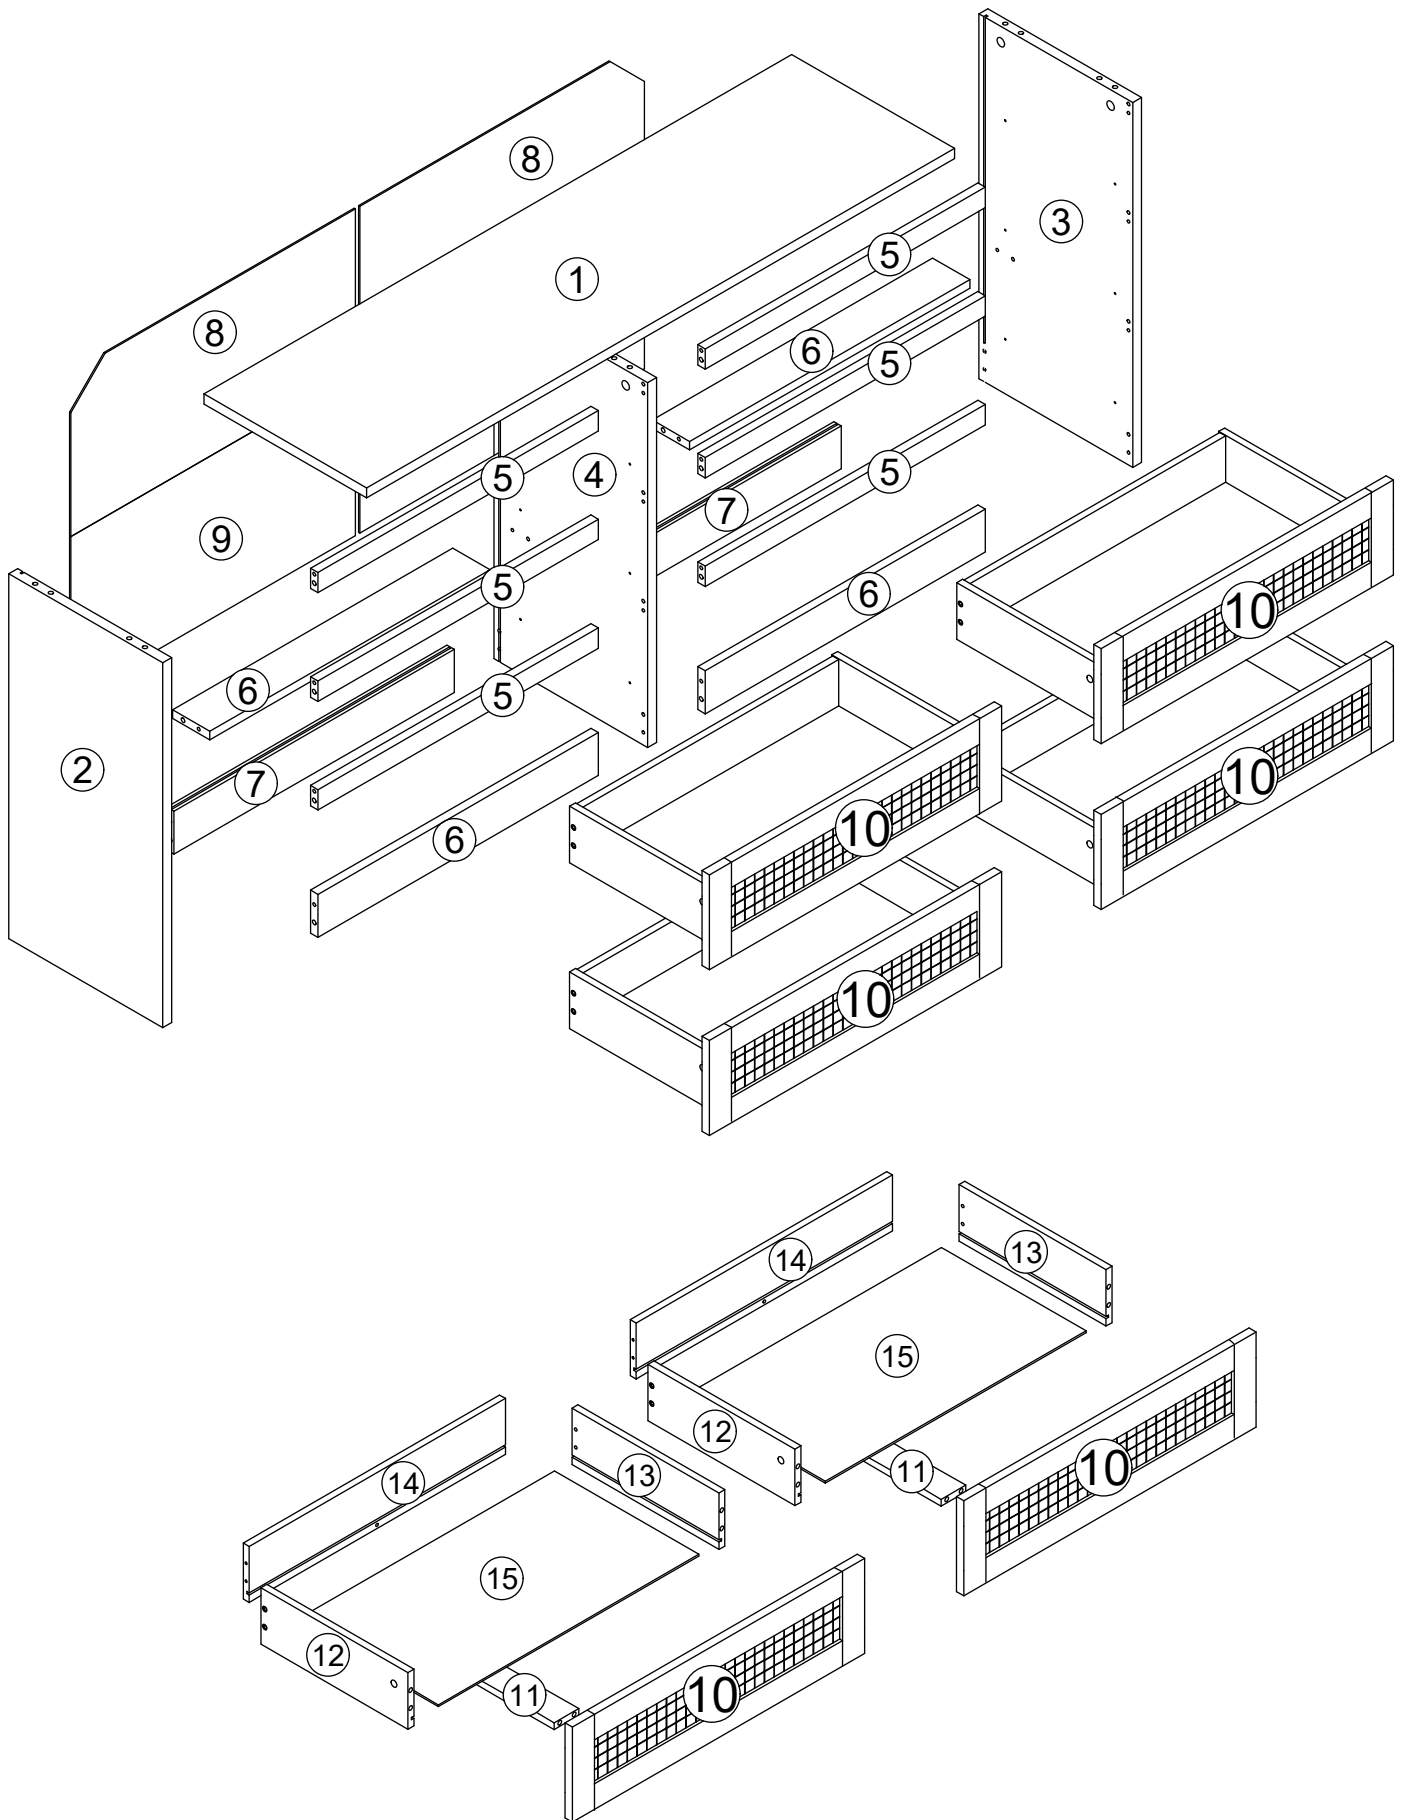


BOARD IDENTIFICATION

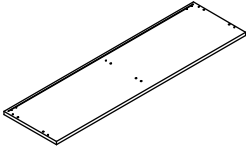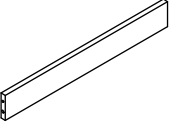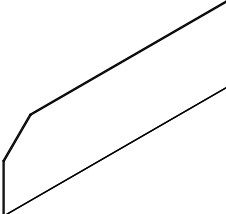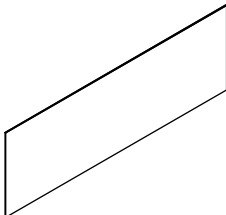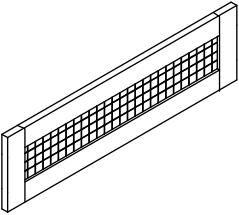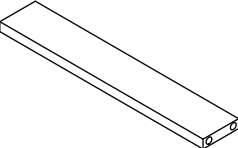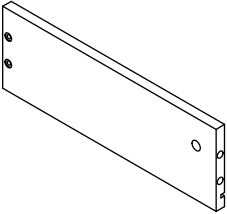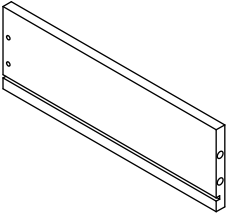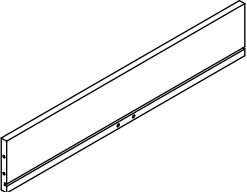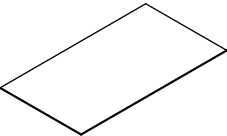				
① 1X	② 1X	③ 1X	④ 1X	⑤ 6X
				
⑥ 4X	⑦ 2X	⑧ 2X	⑨ 2X	⑩ 6X
				
⑪ 6X	⑫ 6X	⑬ 6X	⑭ 6X	⑮ 6X


BOARD IDENTIFICATION

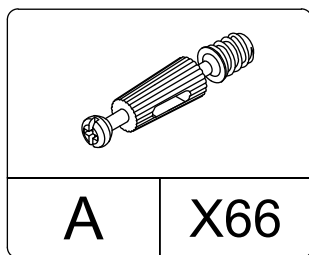


Cam Screws
Ø6X40

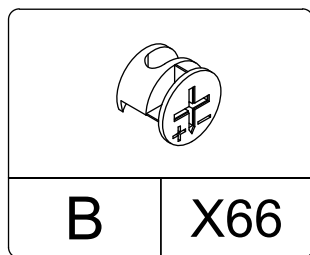


Cam lock
Ø15X9

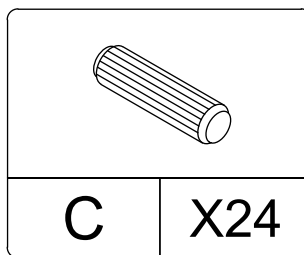


WoodDowel
Ø8X40

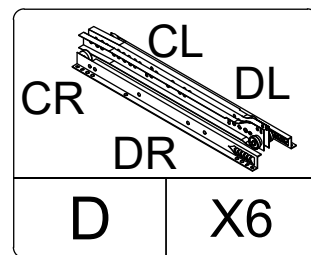


Bottom-Mount Drawer Slide Kit
Detachable
Symmetrical parts

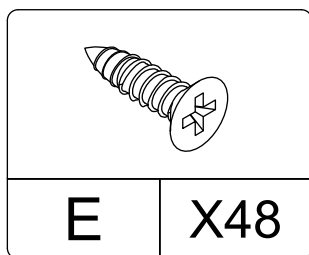


Self-tapping screws
Ø3.5X12

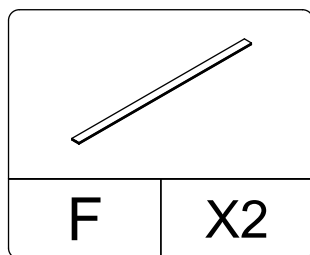


Clip Strip

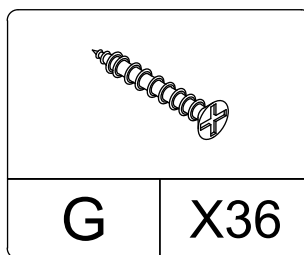


Self-tapping screws
Ø4X40

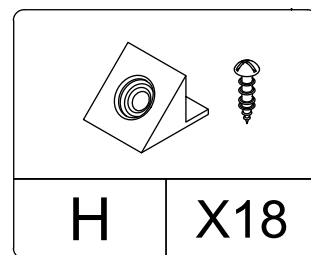


Back plate buckle

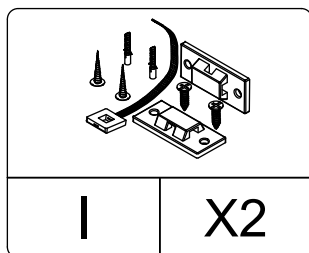


Anti-inverted
parts

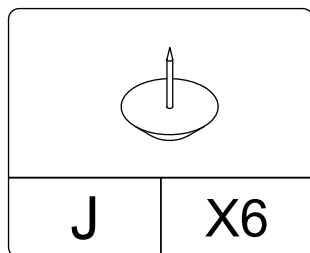





Foot nail

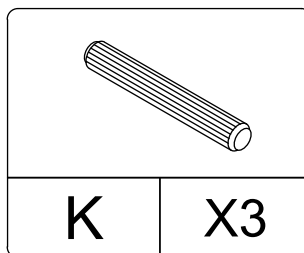

WoodDowel
Ø8X50







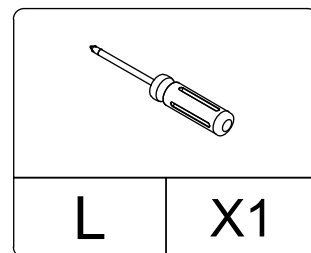


Screwdriver

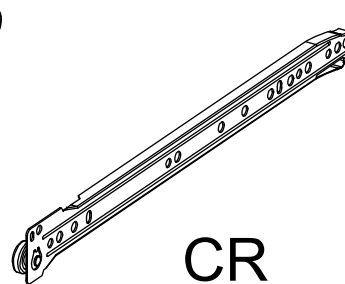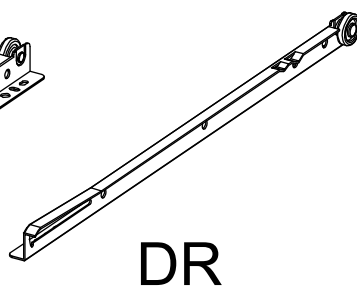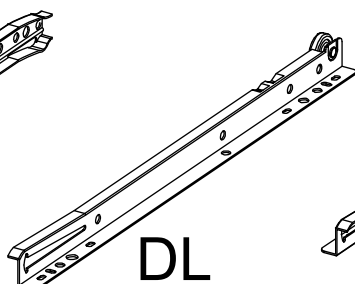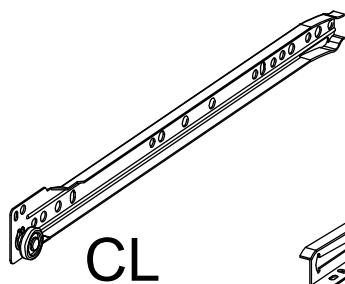

IMPORTANT PRECAUTIONS




Use Cam Screws 、 Cam Lock Nuts、

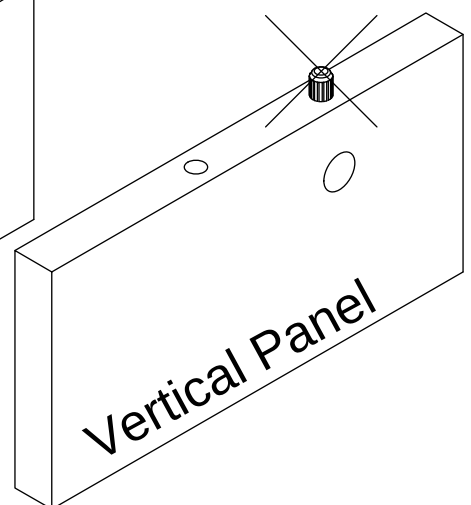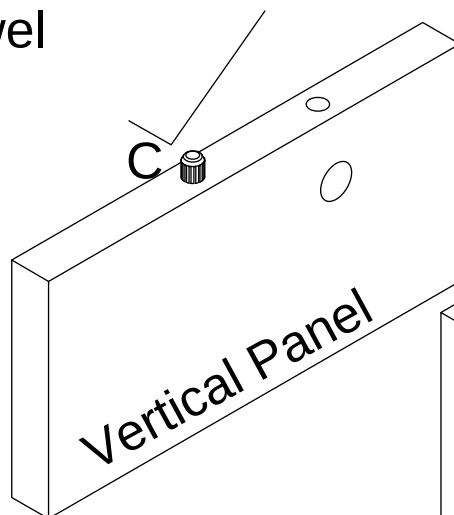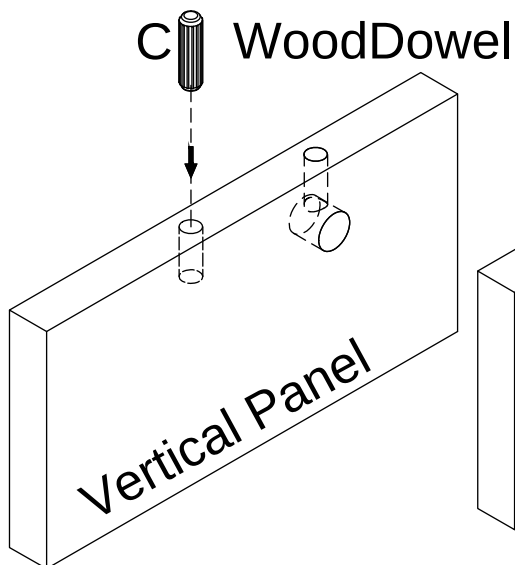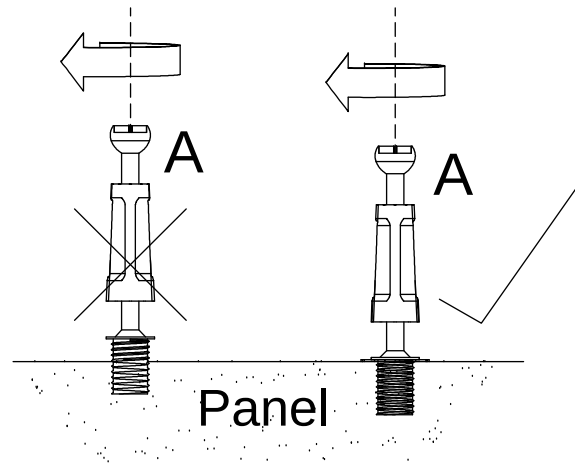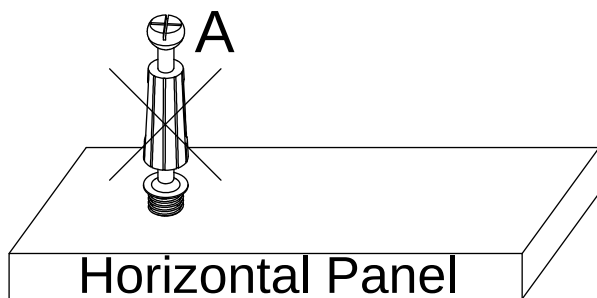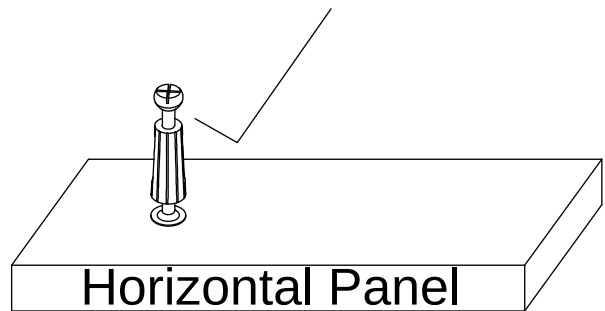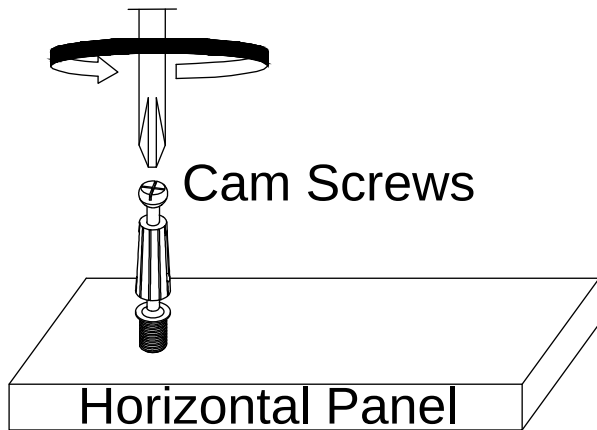


BOARD IDENTIFICATION

IMPORTANT PRECAUTIONS

Use Cam Screws 、 Cam Lock Nuts、 Dowel Kit(B)


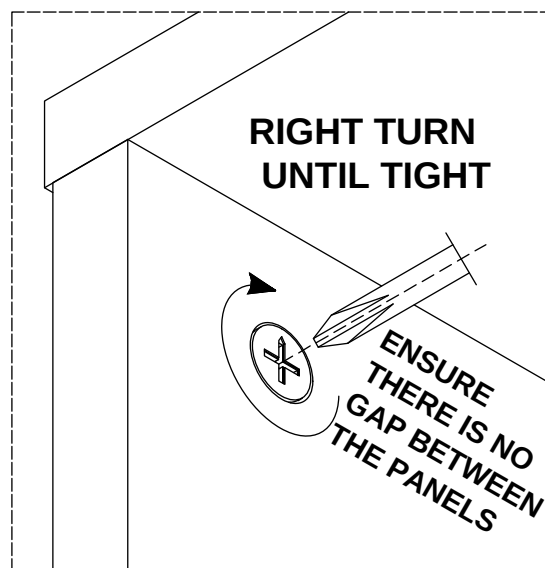
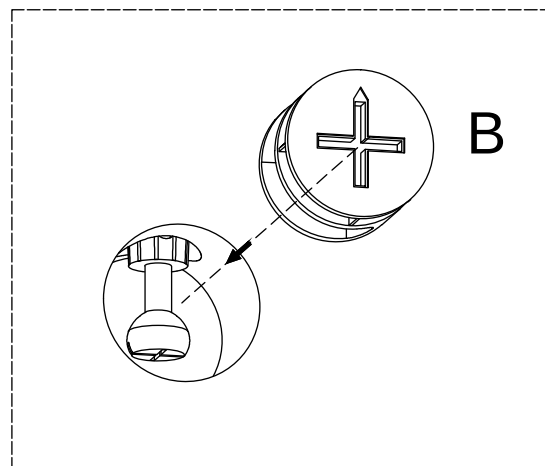
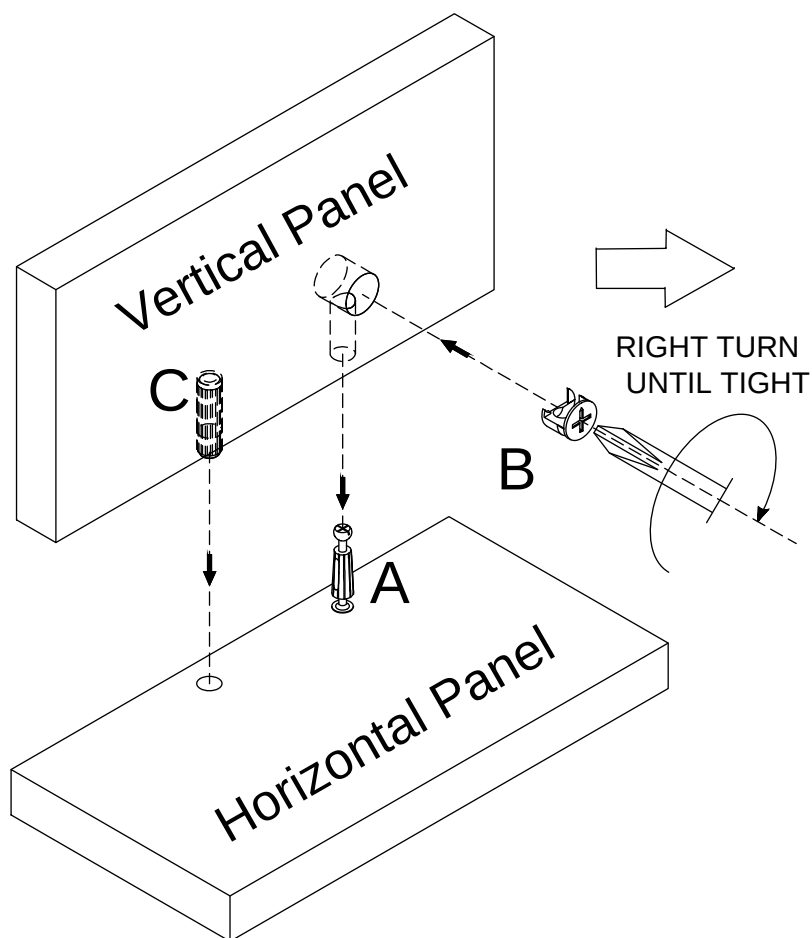


ENSURE THERE IS NO GAP BETWEEN THE PANELS



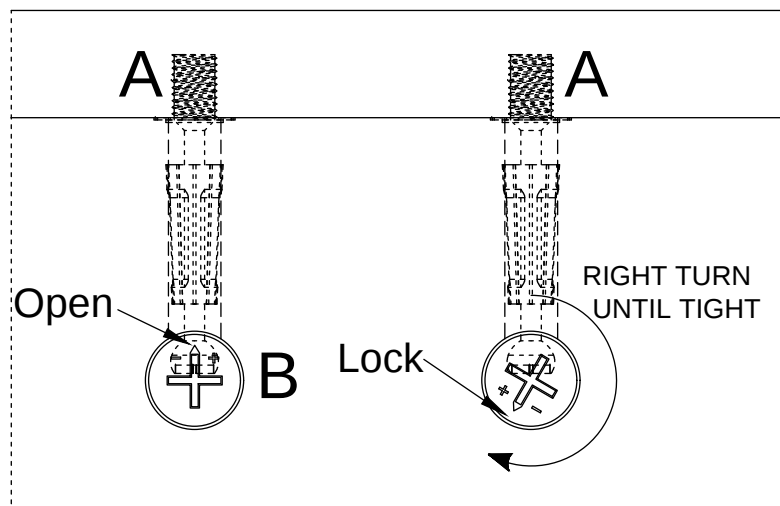


INSTALLATION STEPS

STEP1:

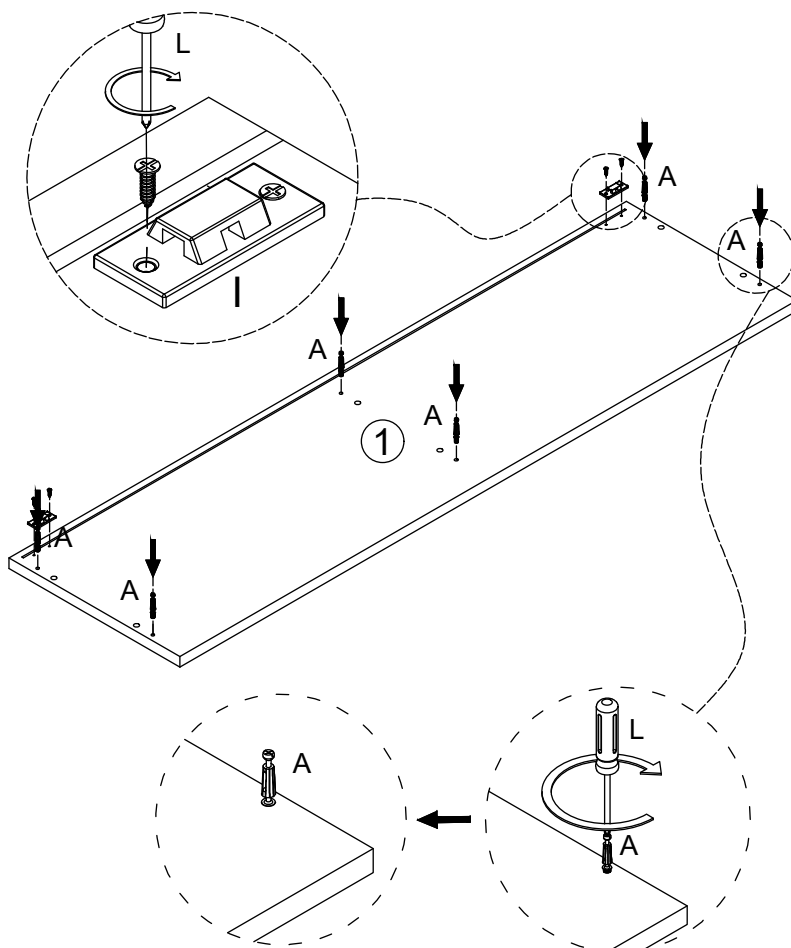
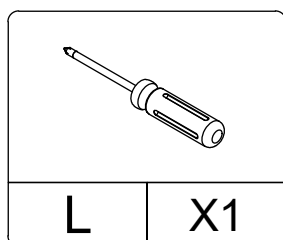
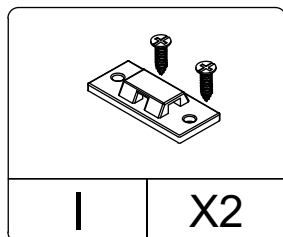
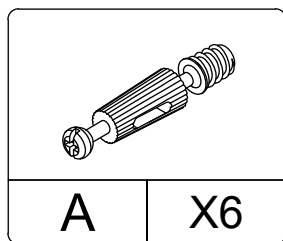


STEP2:




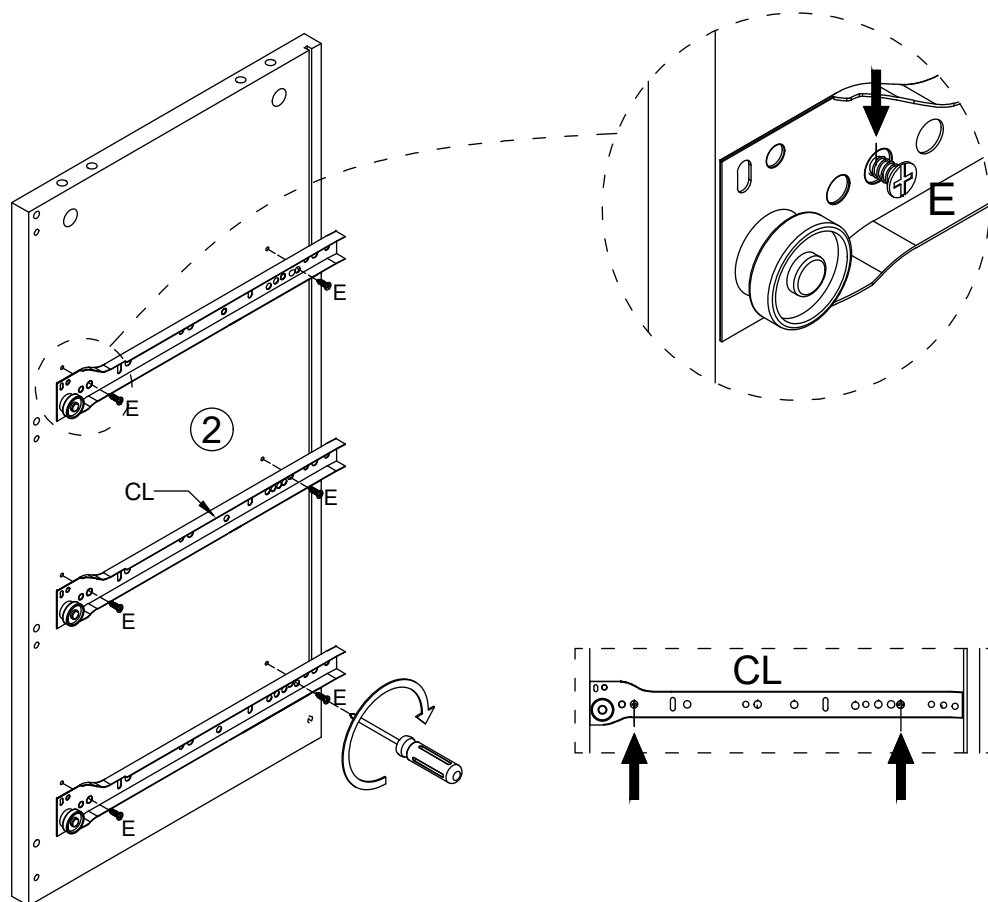
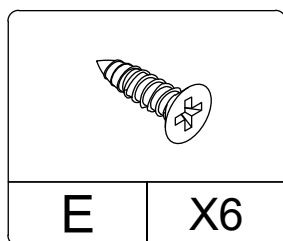
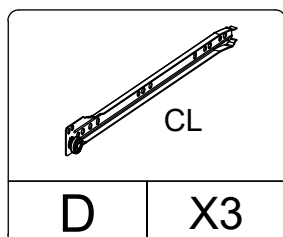


INSTALLATION STEPS

STEP3:


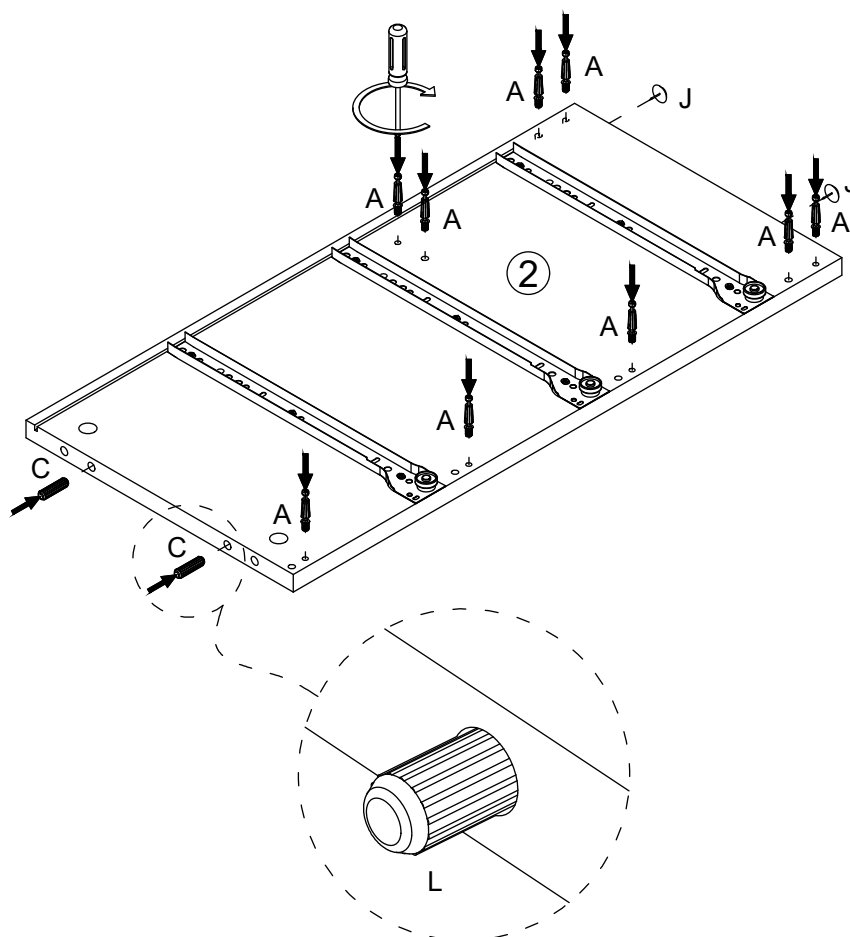
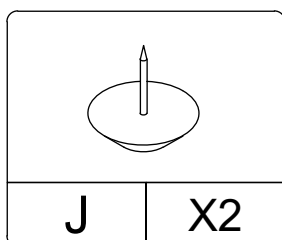
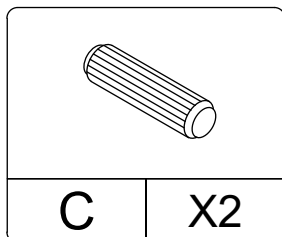
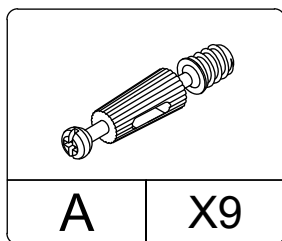


STEP4:

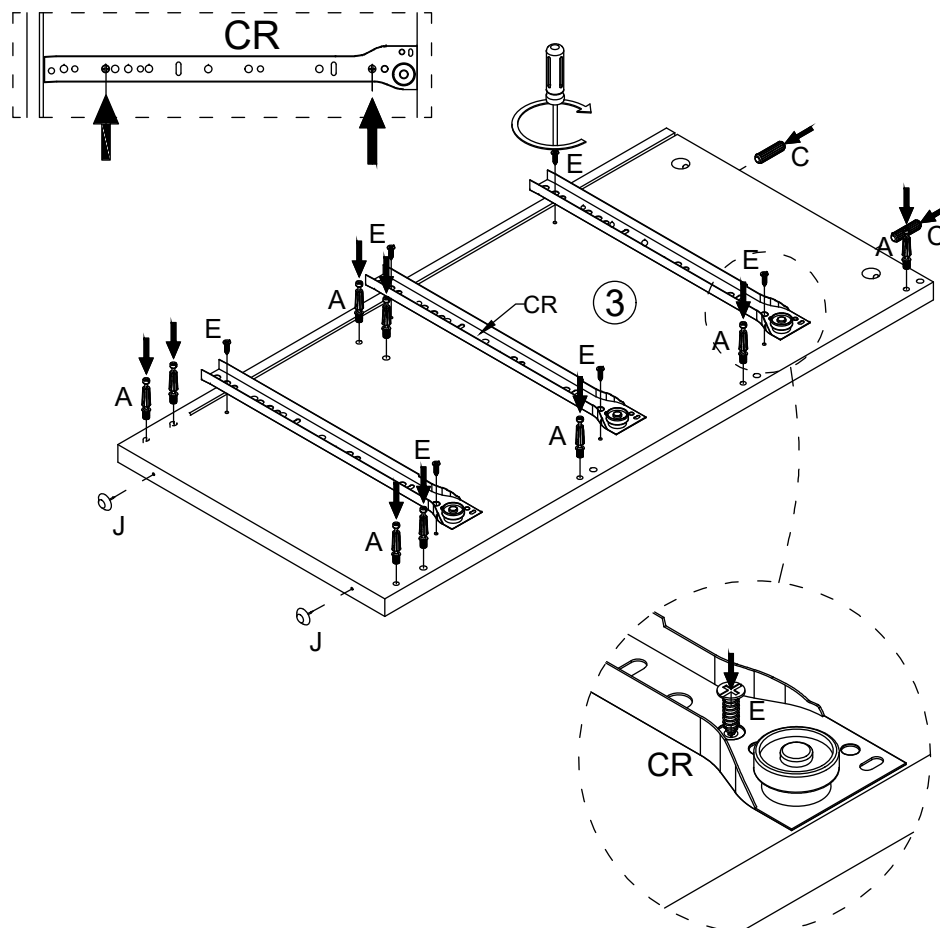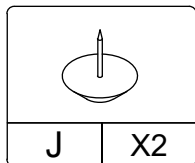
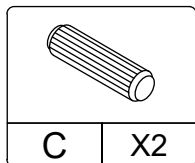
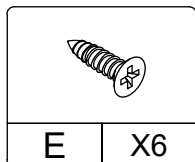
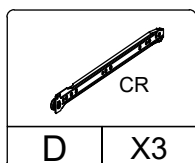
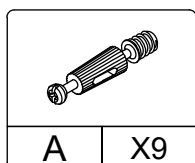


INSTALLATION STEPS

STEP5:

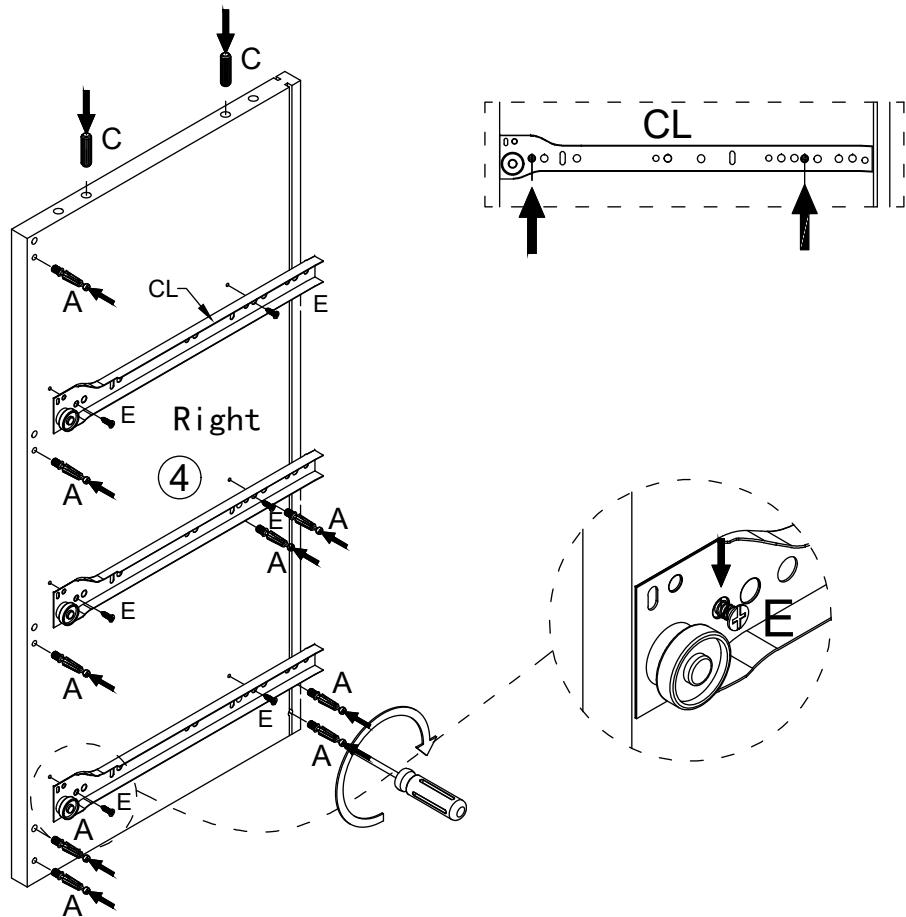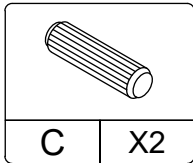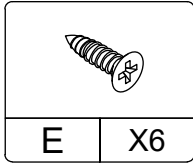
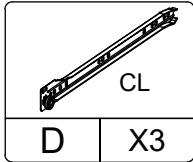
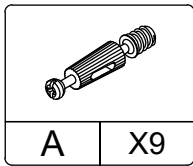


STEP6:

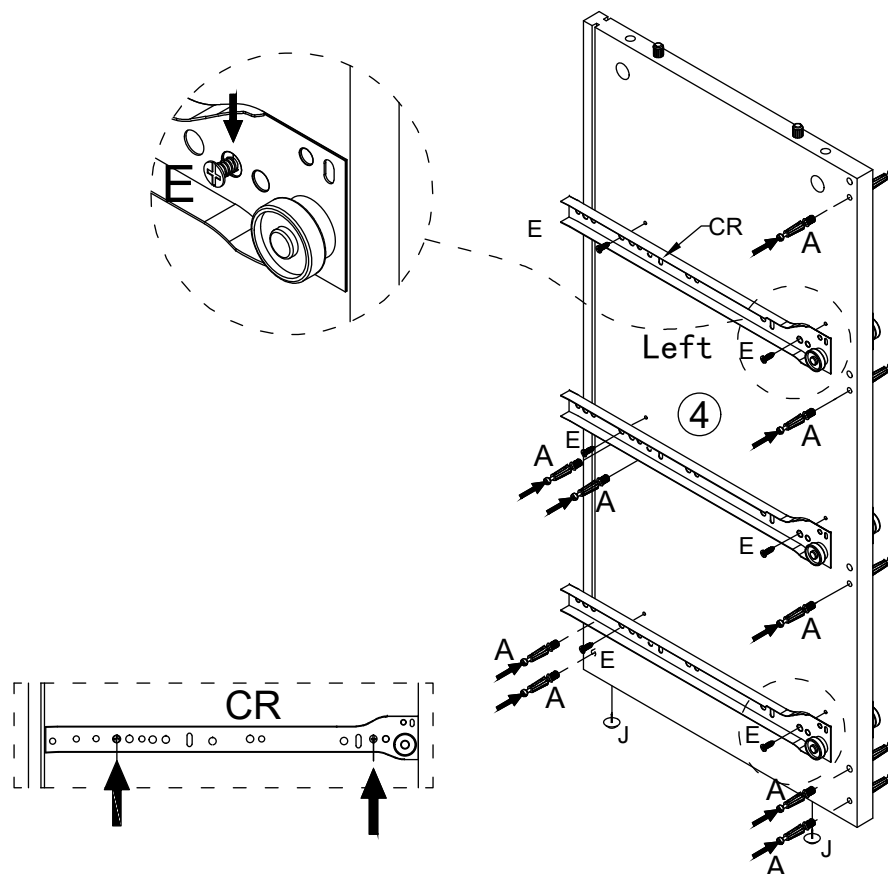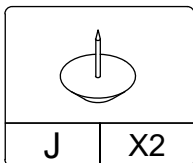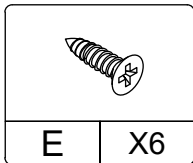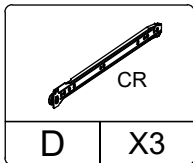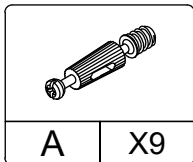


INSTALLATION STEPS

STEP7:

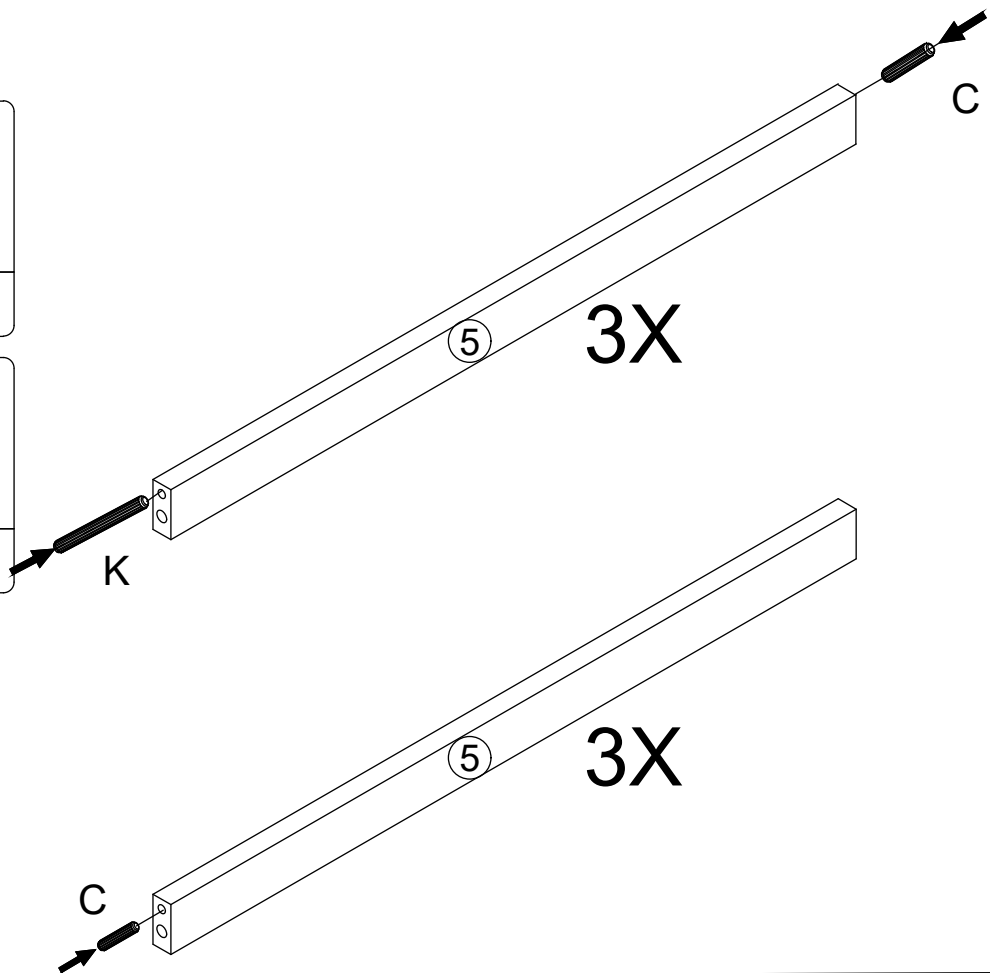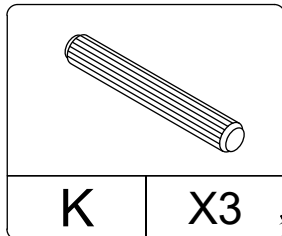
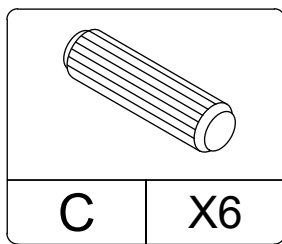


STEP8:

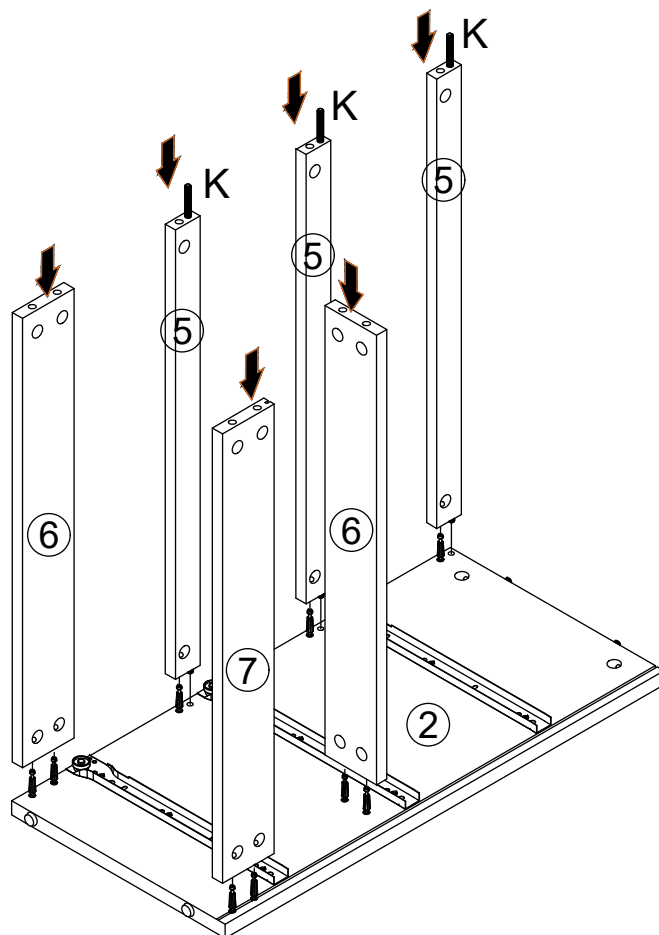


INSTALLATION STEPS

STEP9:

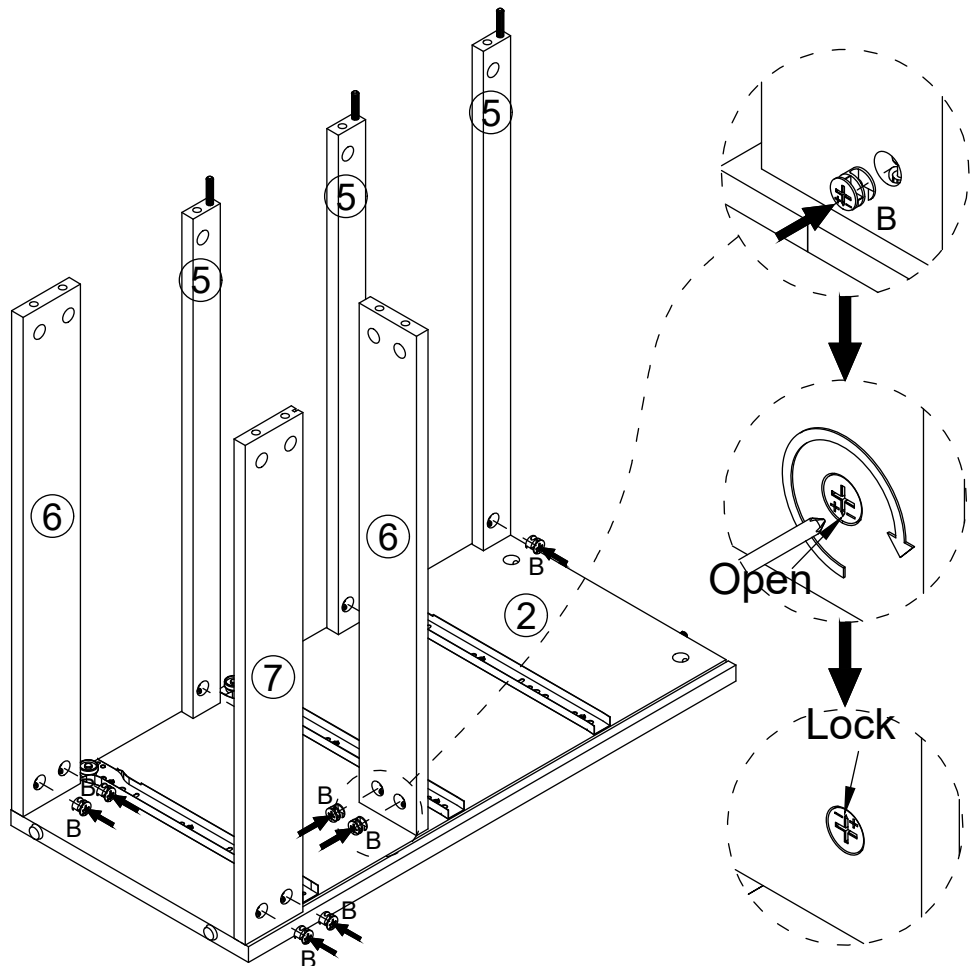
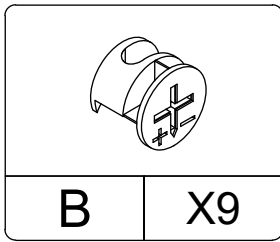


STEP10:


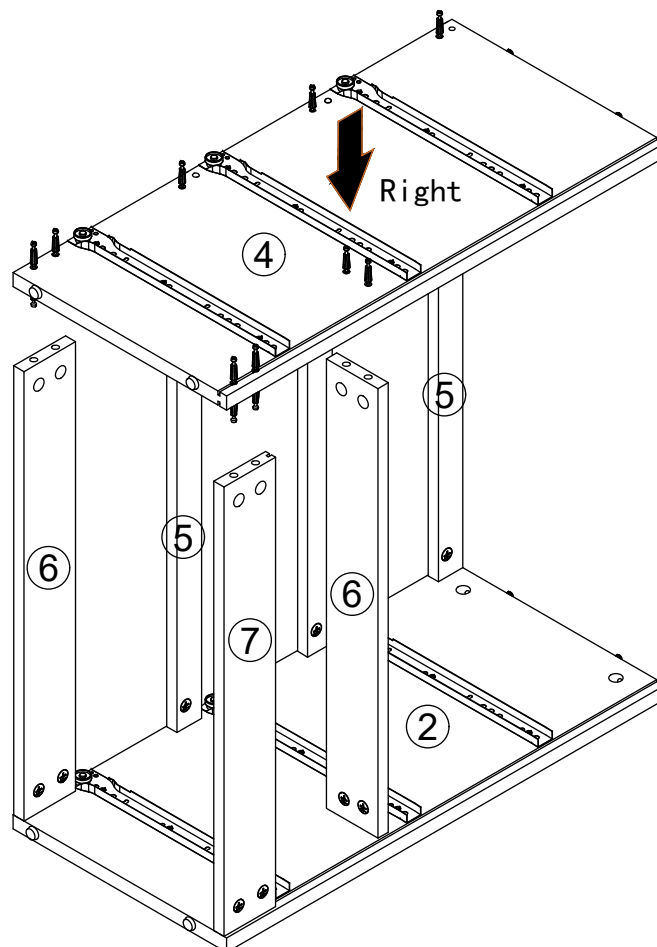


INSTALLATION STEPS

STEP11:

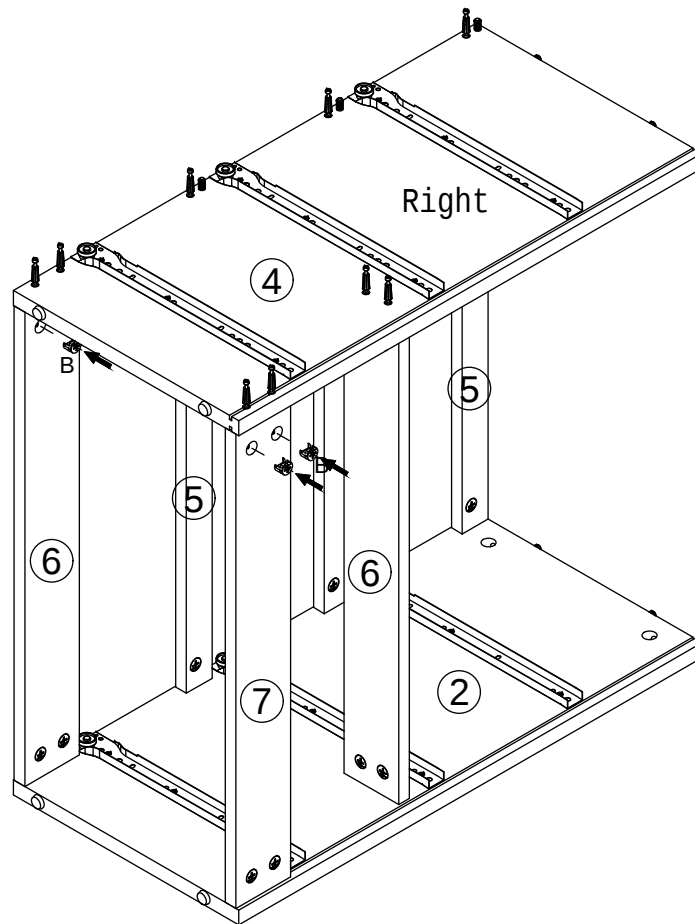
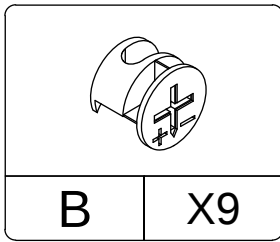


STEP12:

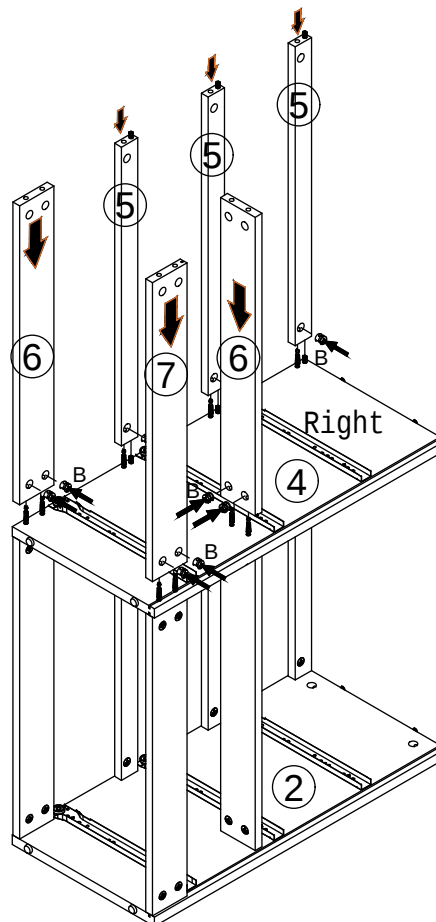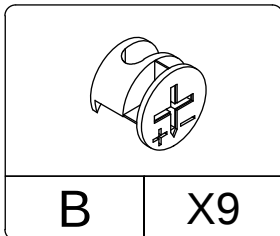


INSTALLATION STEPS

STEP13:

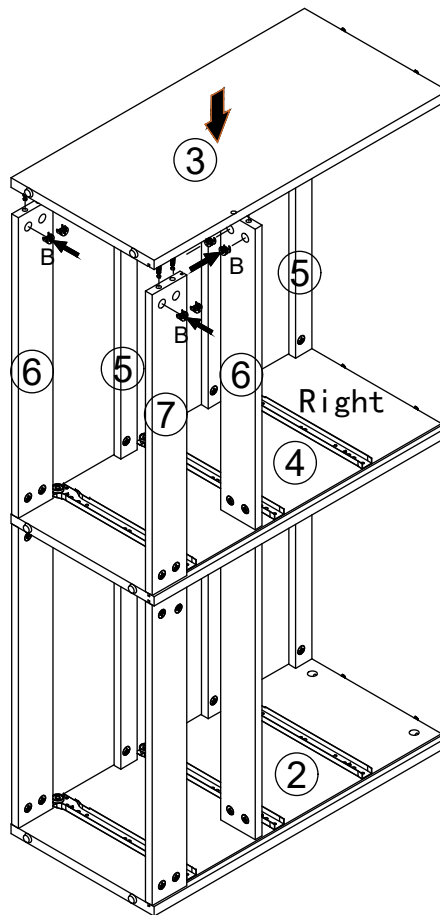
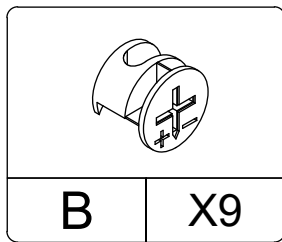


STEP14:


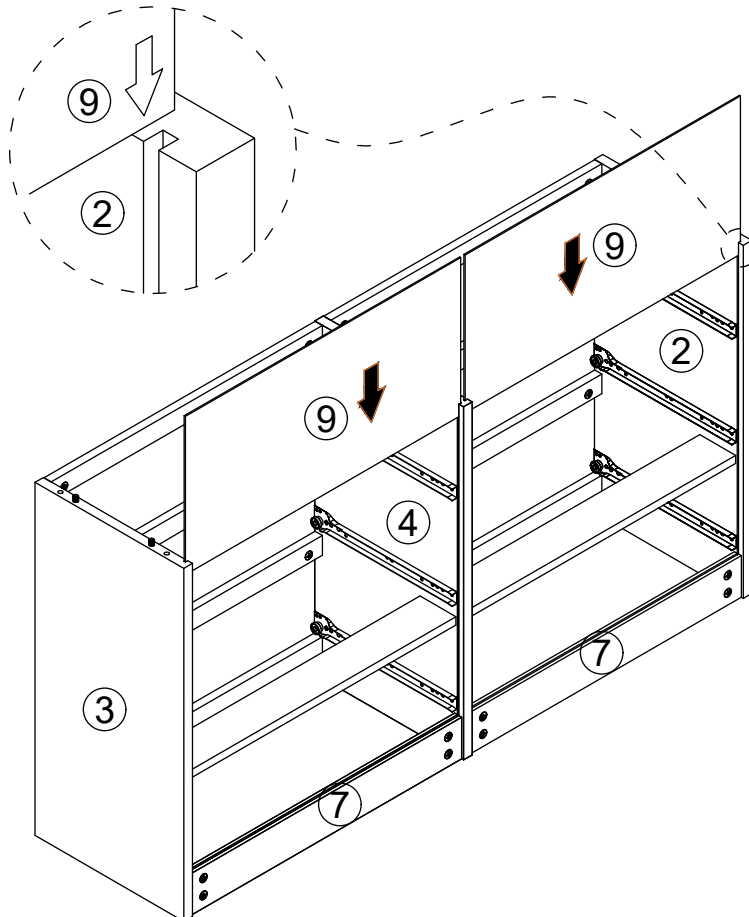


INSTALLATION STEPS

STEP15:

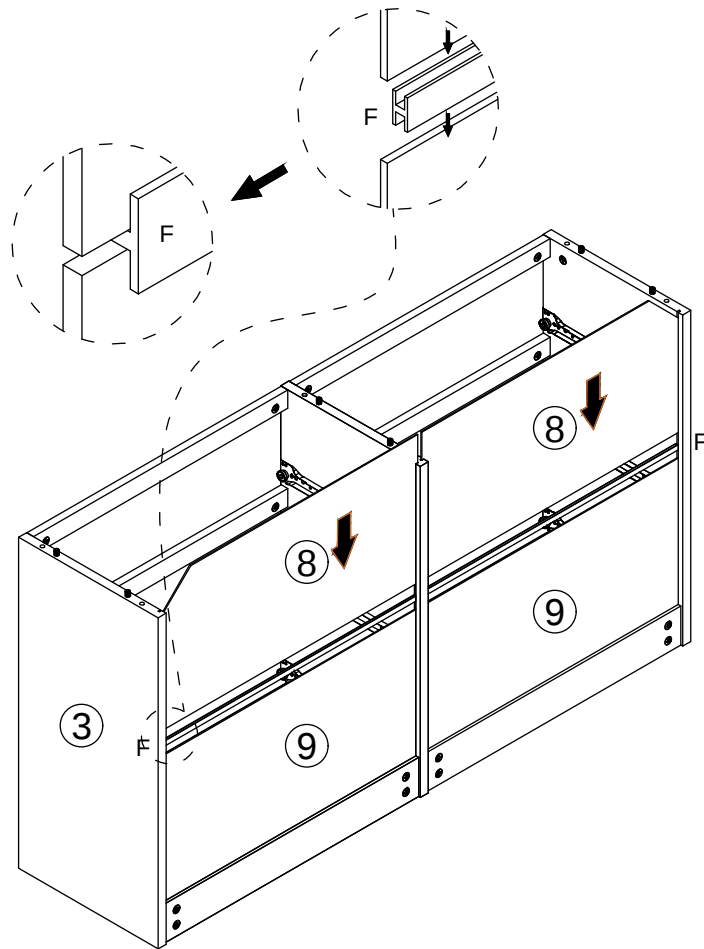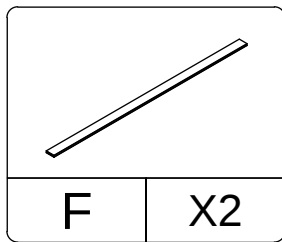


STEP16:

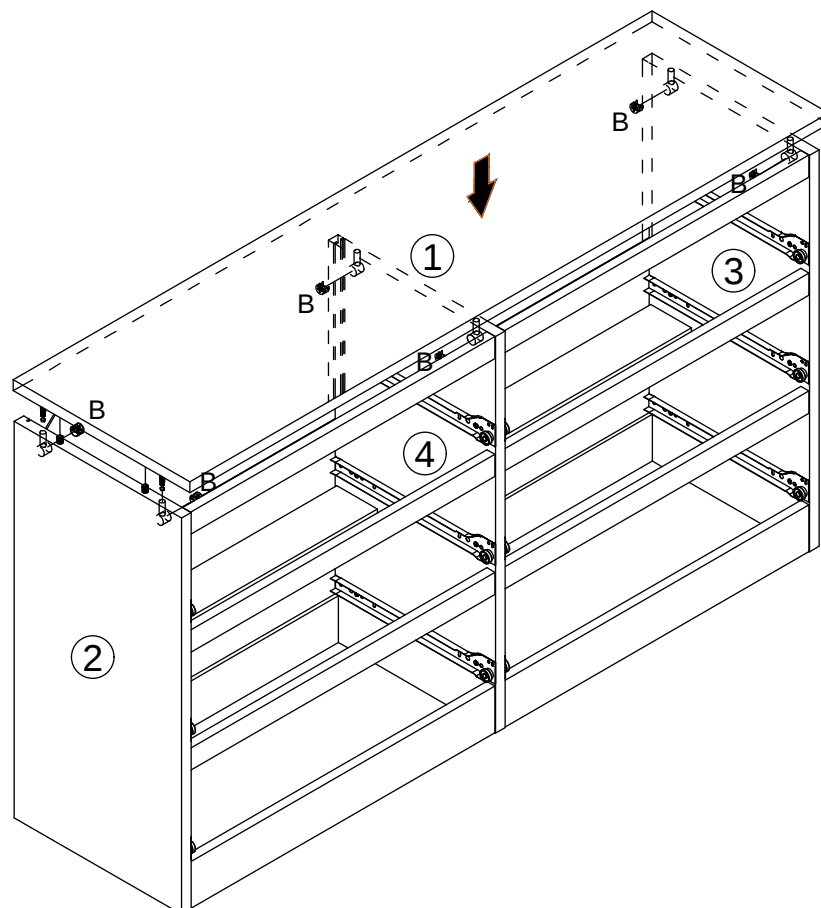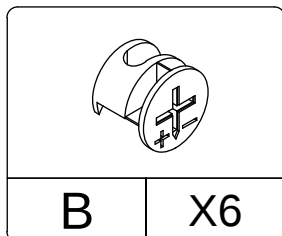


INSTALLATION STEPS

STEP17:

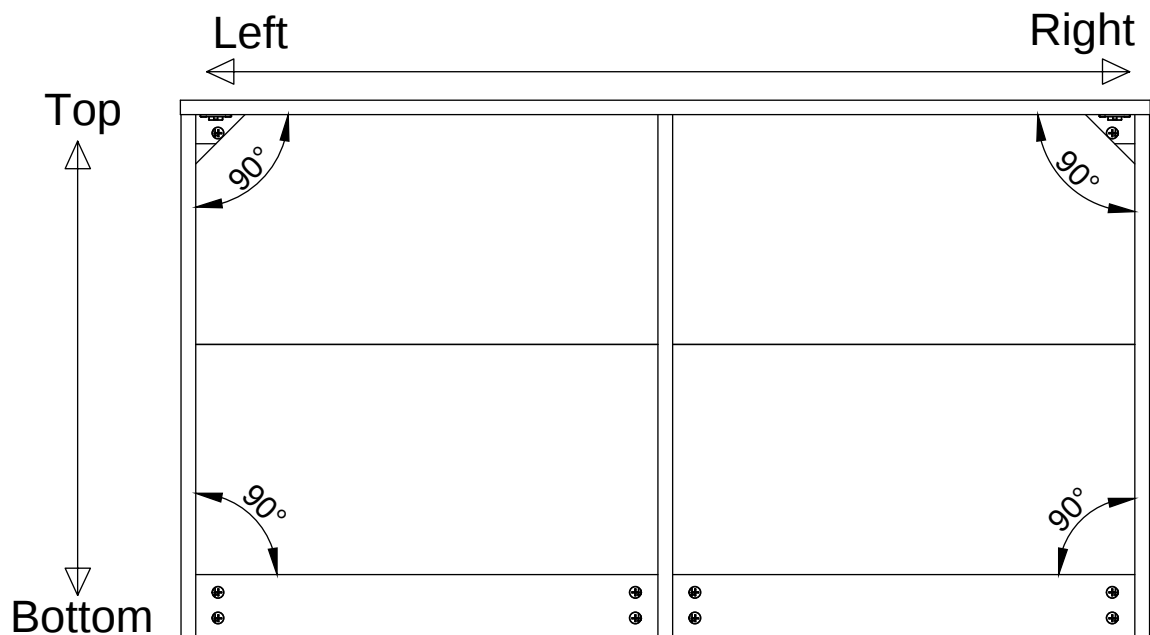


STEP18:

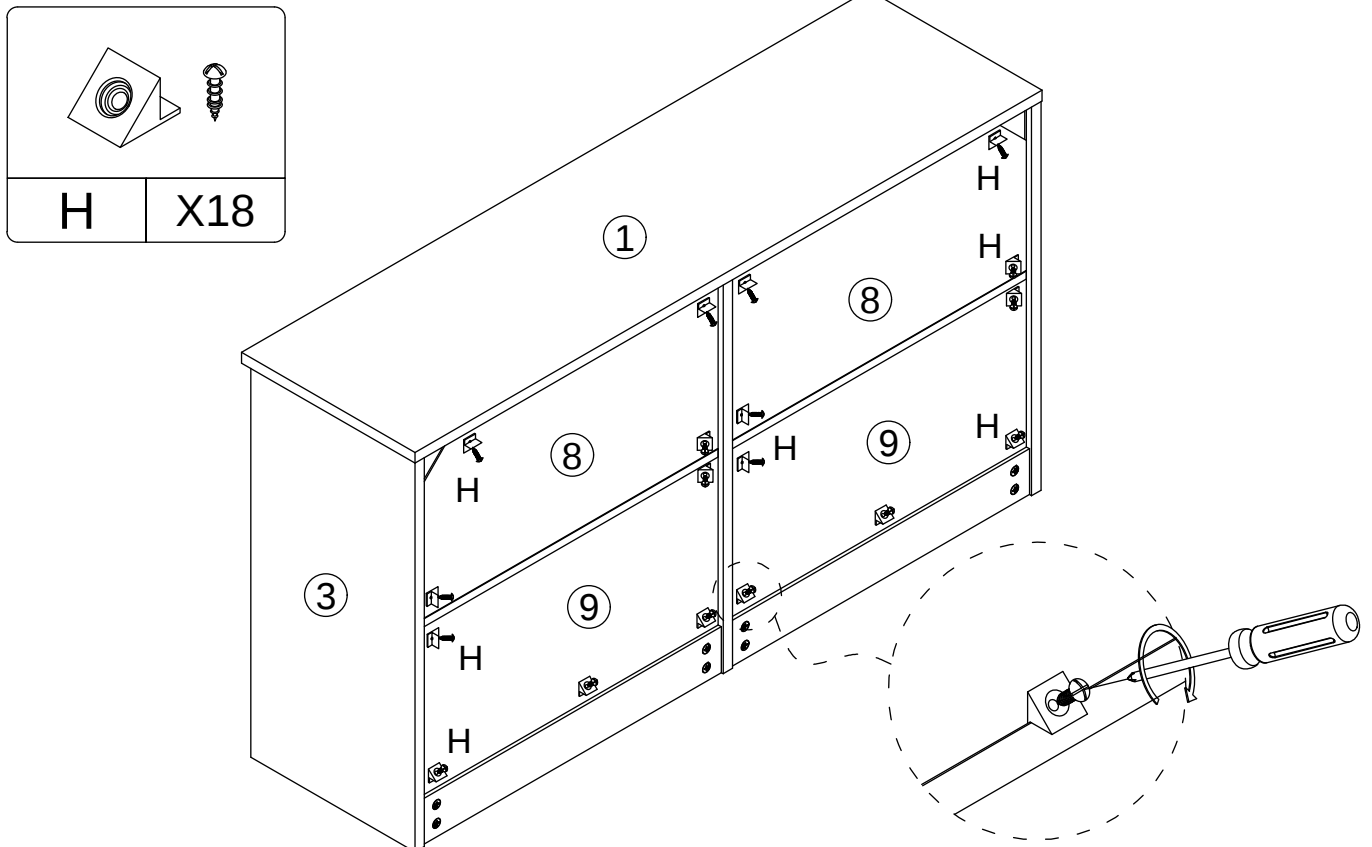


INSTALLATION STEPS


STEP19:

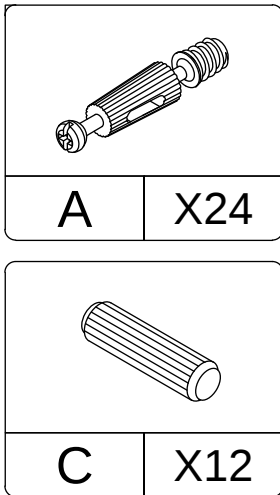


6X

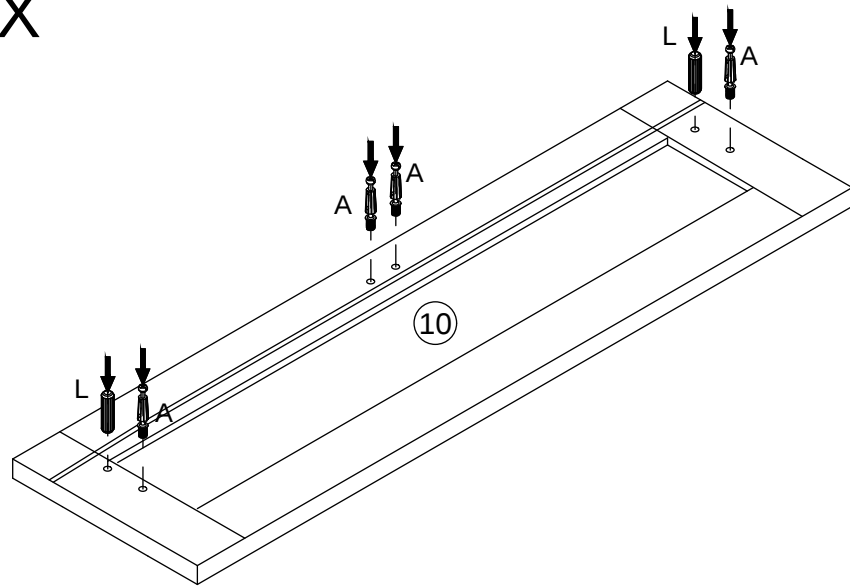

STEP20:

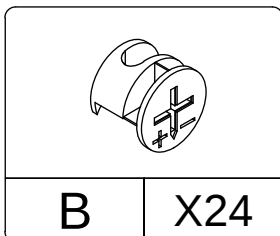


6X

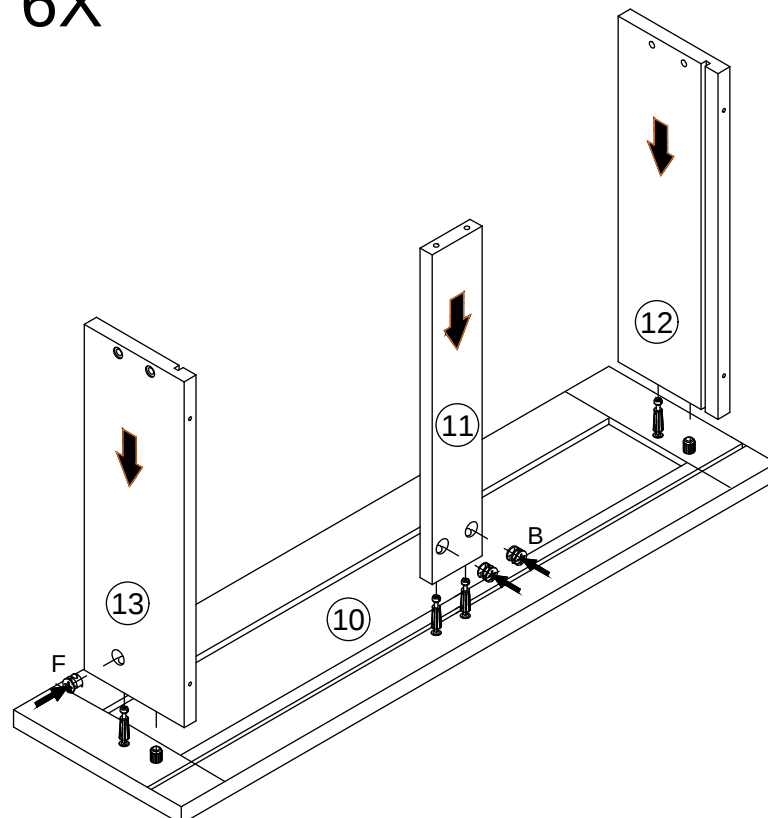

INSTALLATION STEPS



STEP21:

6X

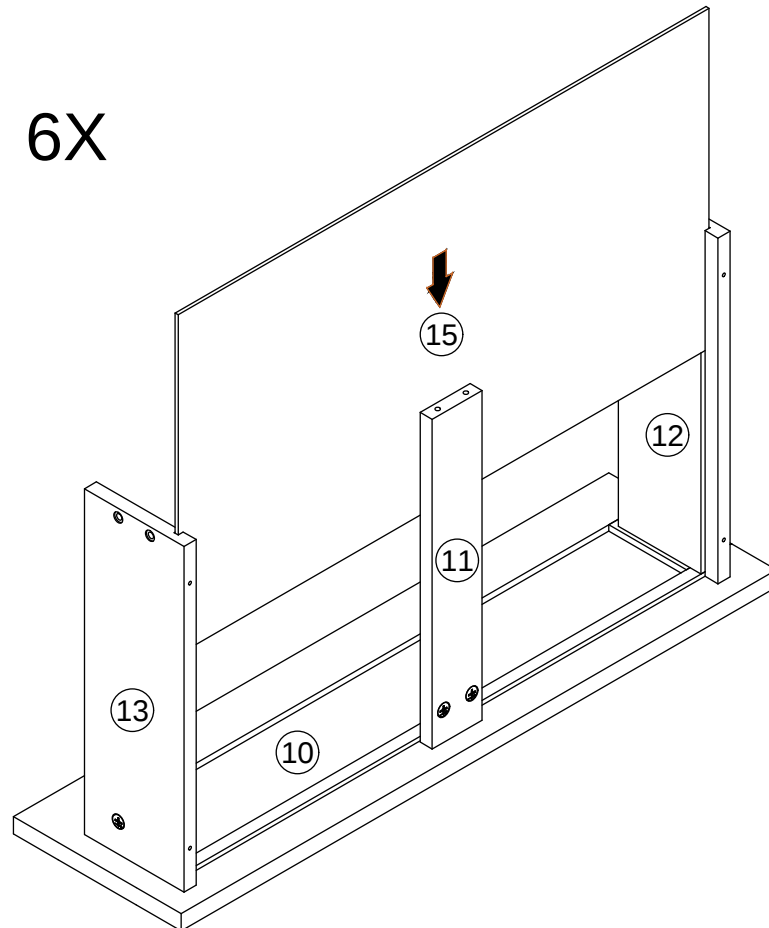



STEP22:

6X

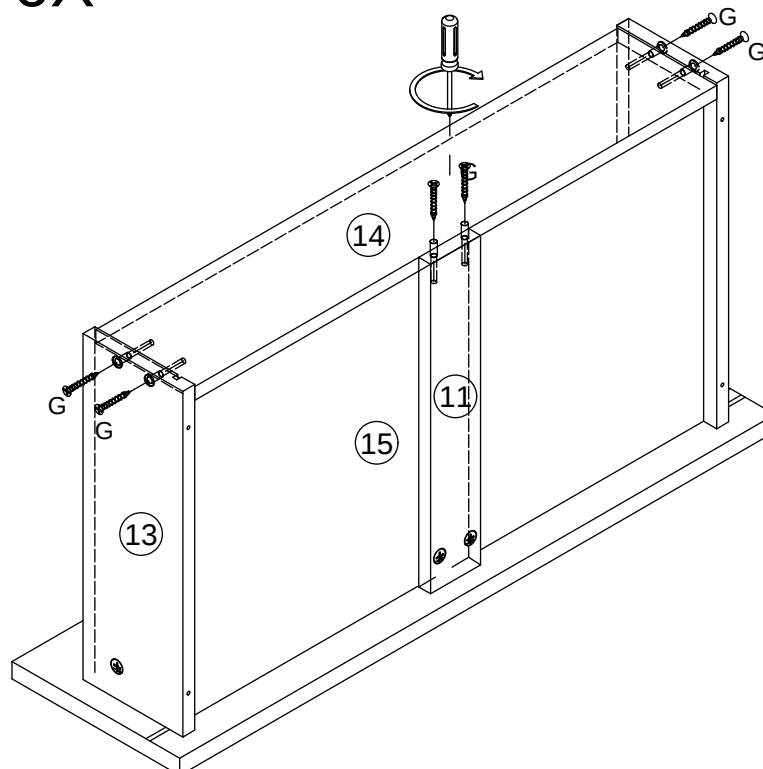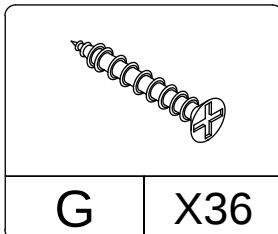


INSTALLATION STEPS





STEP23:

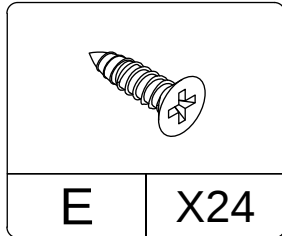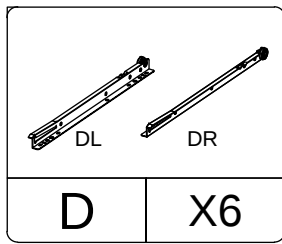

6X

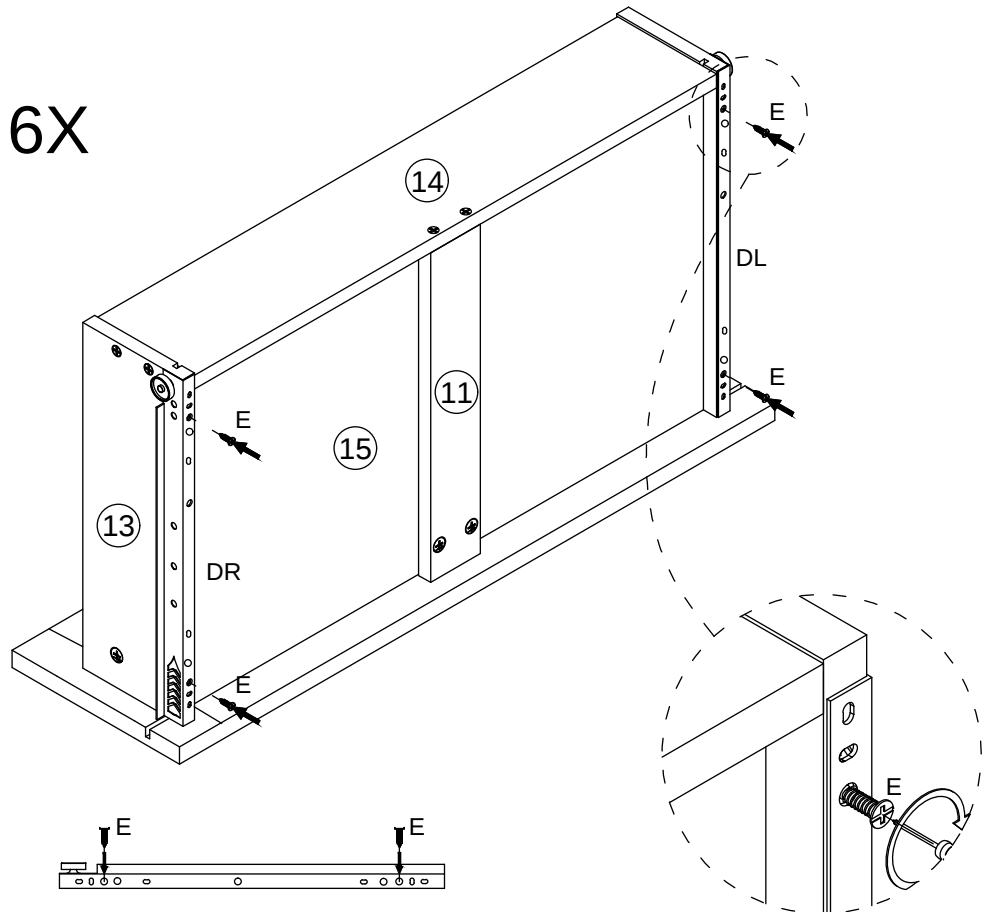

STEP24:

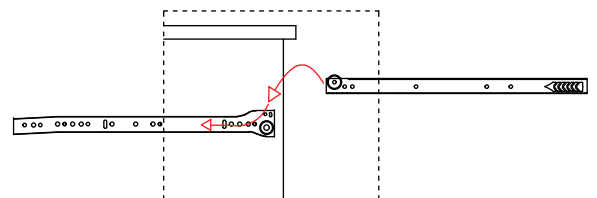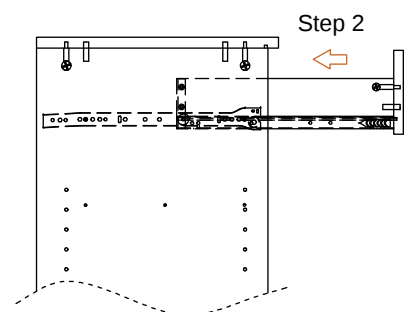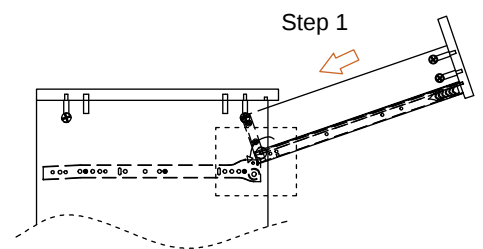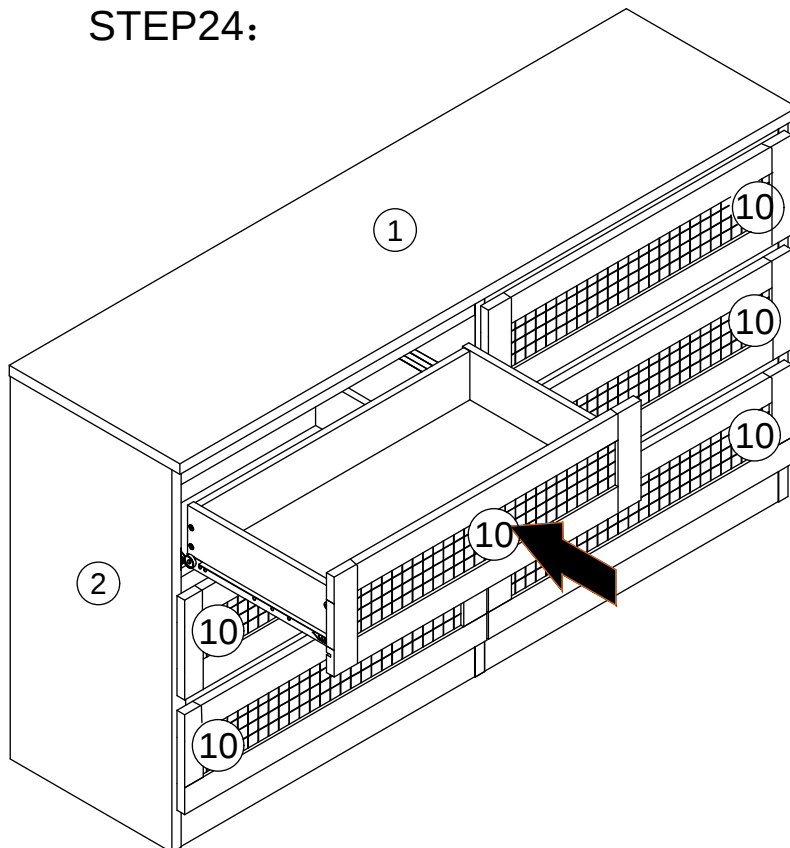

INSTALLATION STEPS

STEP25:

