

Assembly instructions

Bali

Twin Size
39" x 75"



assembly 2 people



tool rubber mallet



tool hammer



tool philips head screwdriver



assembling time 2 hours 30 minutes

or...




tool electric screwdriver



assembling time 1 hours 30 minutes




www.memomad.com

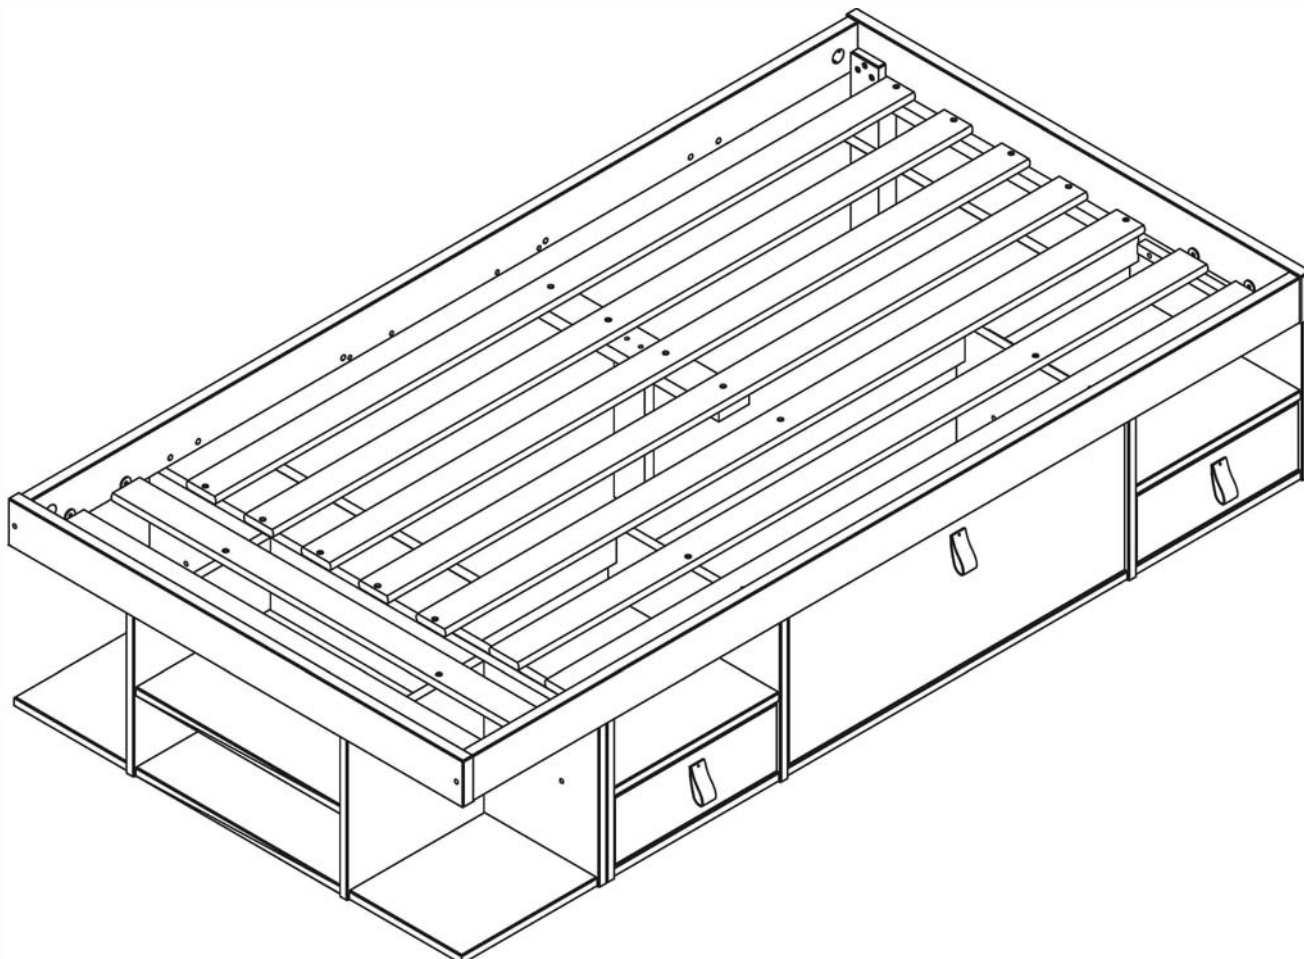

Attention!

- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.





FOOTBOARD

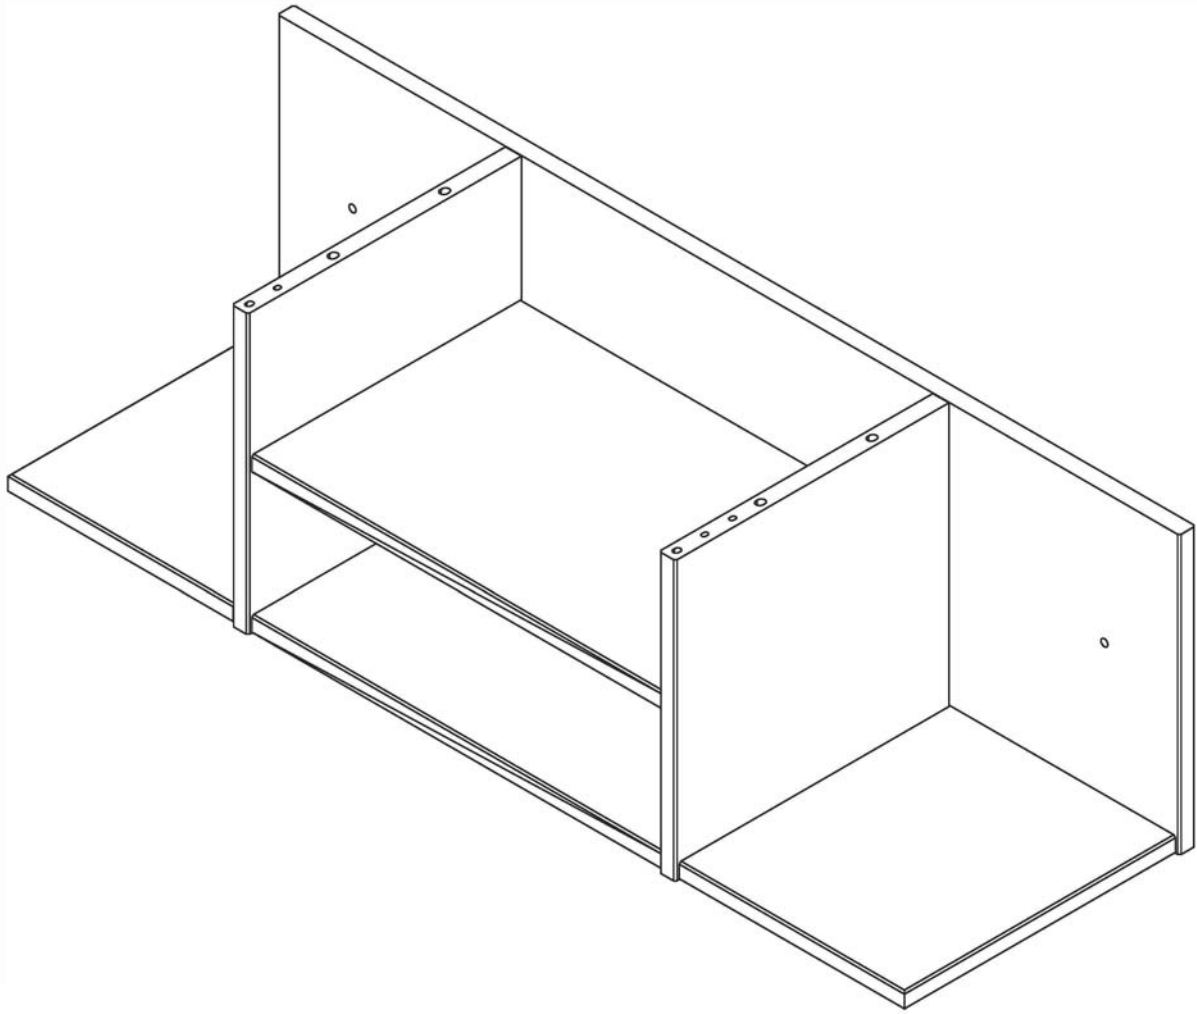


Attention!

- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.


HARDWARE/ACCESSORIES

A	 Ø 5/16" x 1"	16
B	 Ø 5/23" x 1.3/16"	18
F	 Furniture glide	08
W	 Shelf support	04

COMPONENTS

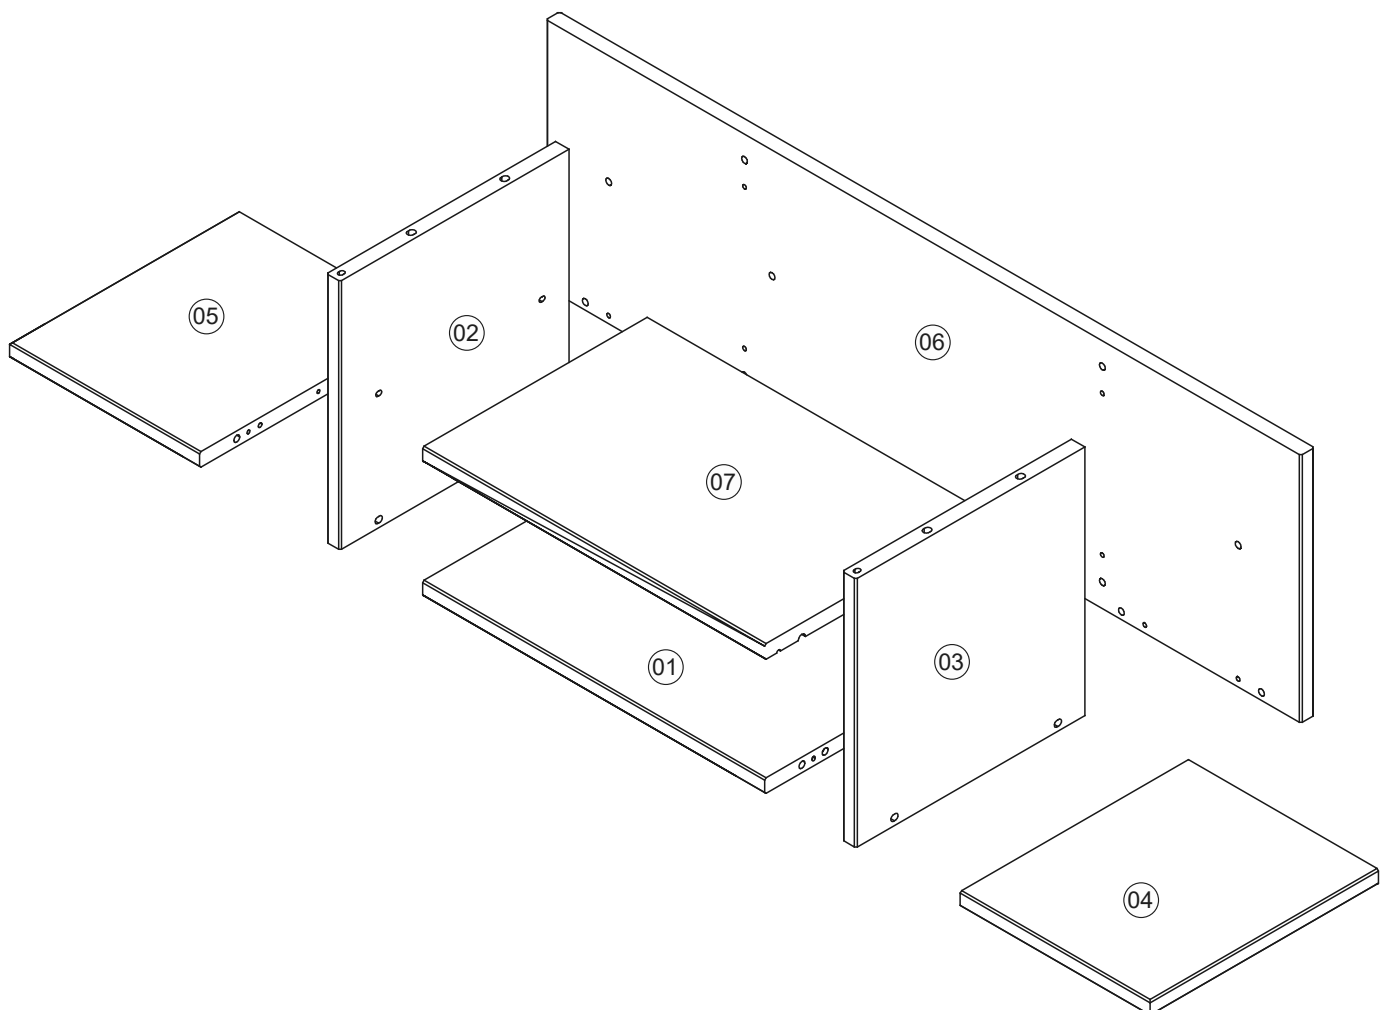



01

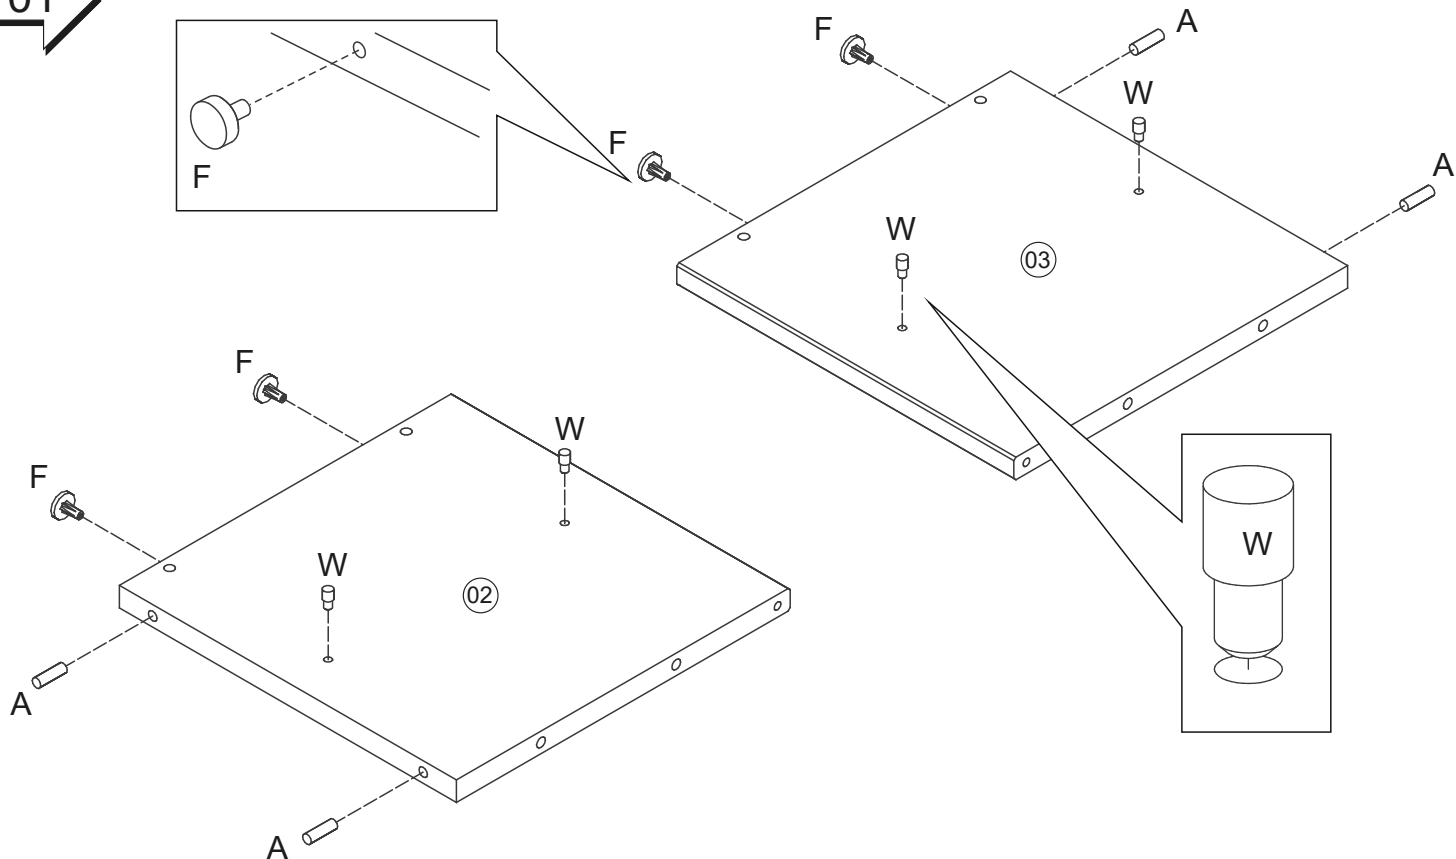



A	 $\varnothing 5/16'' \times 1''$	04	F	 Furniture glide	04	W	 Shelf support	04
---	---	----	---	---	----	---	---	----

02


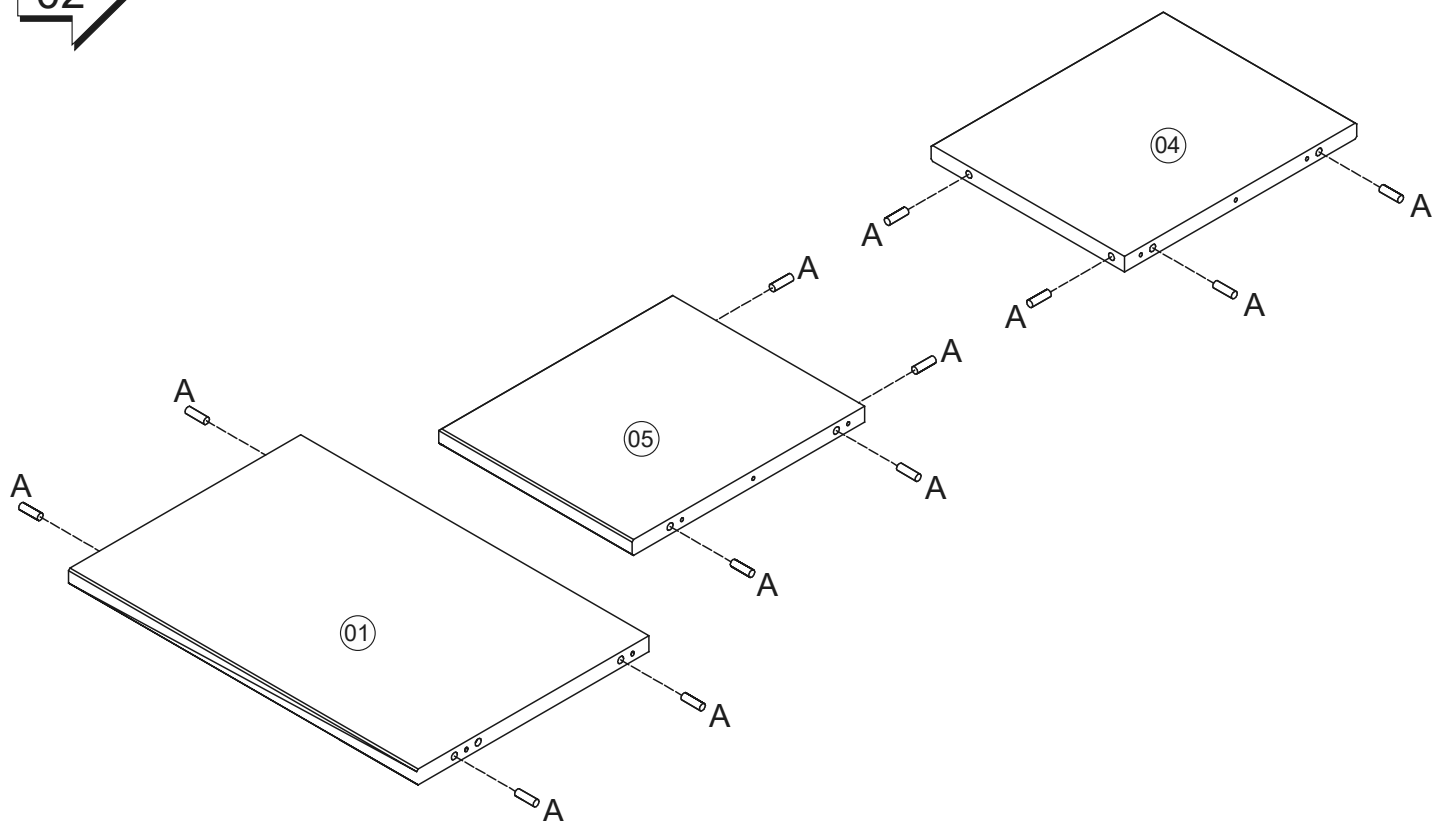


A	 $\varnothing 5/16'' \times 1''$	12
---	---	----



03

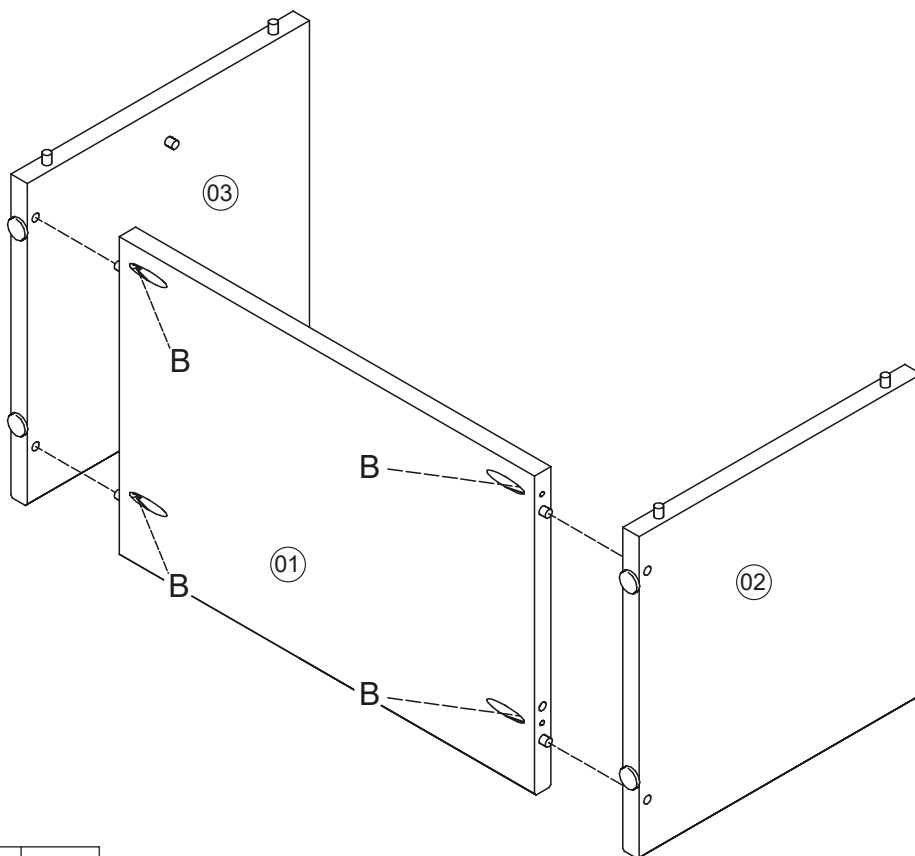


04

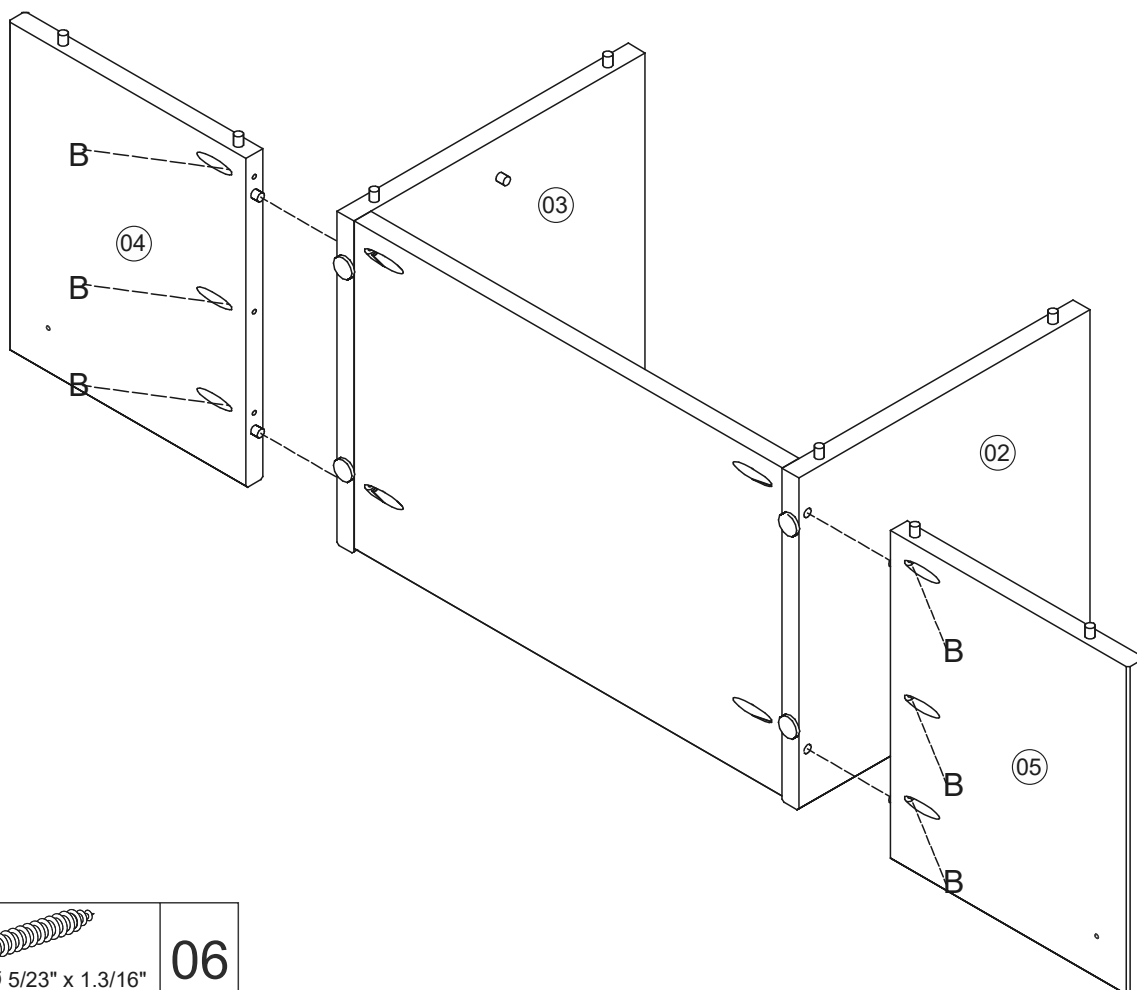


05

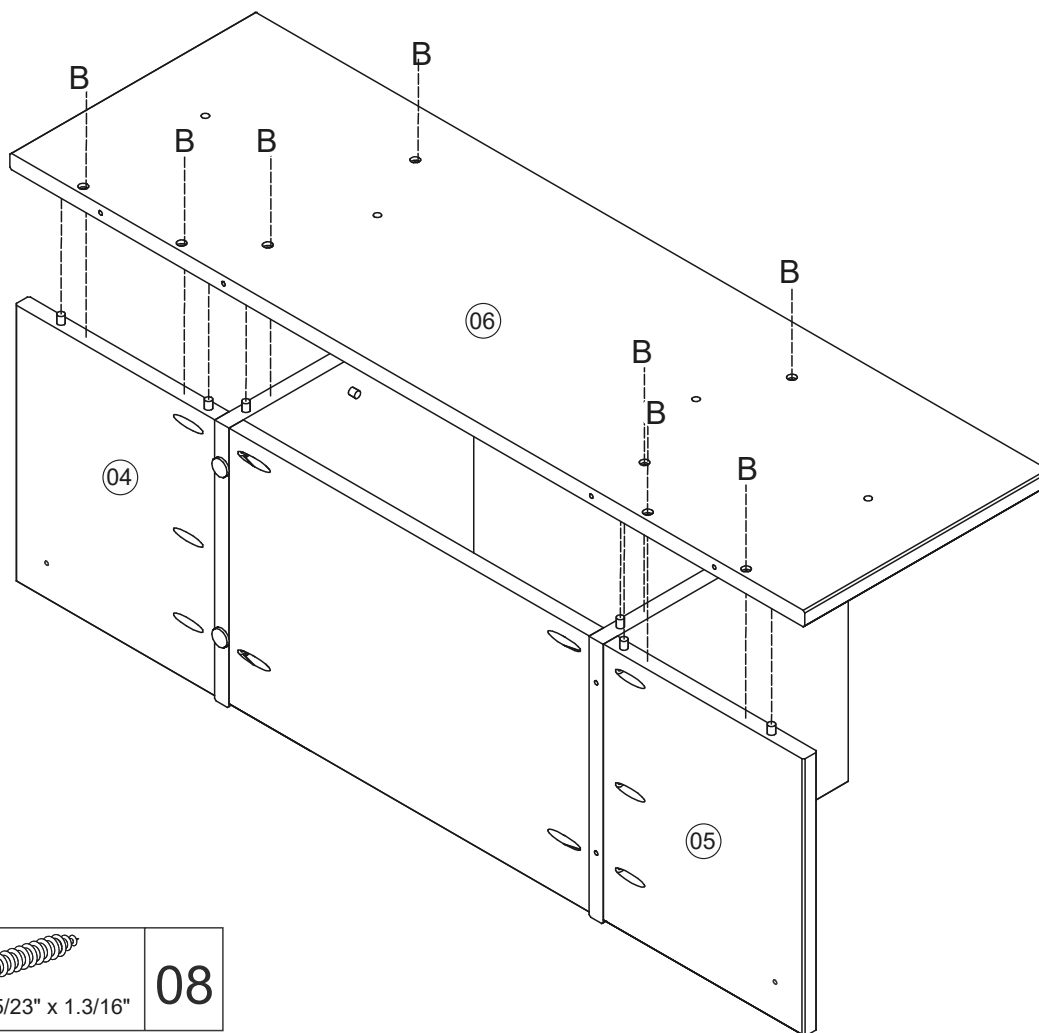

06

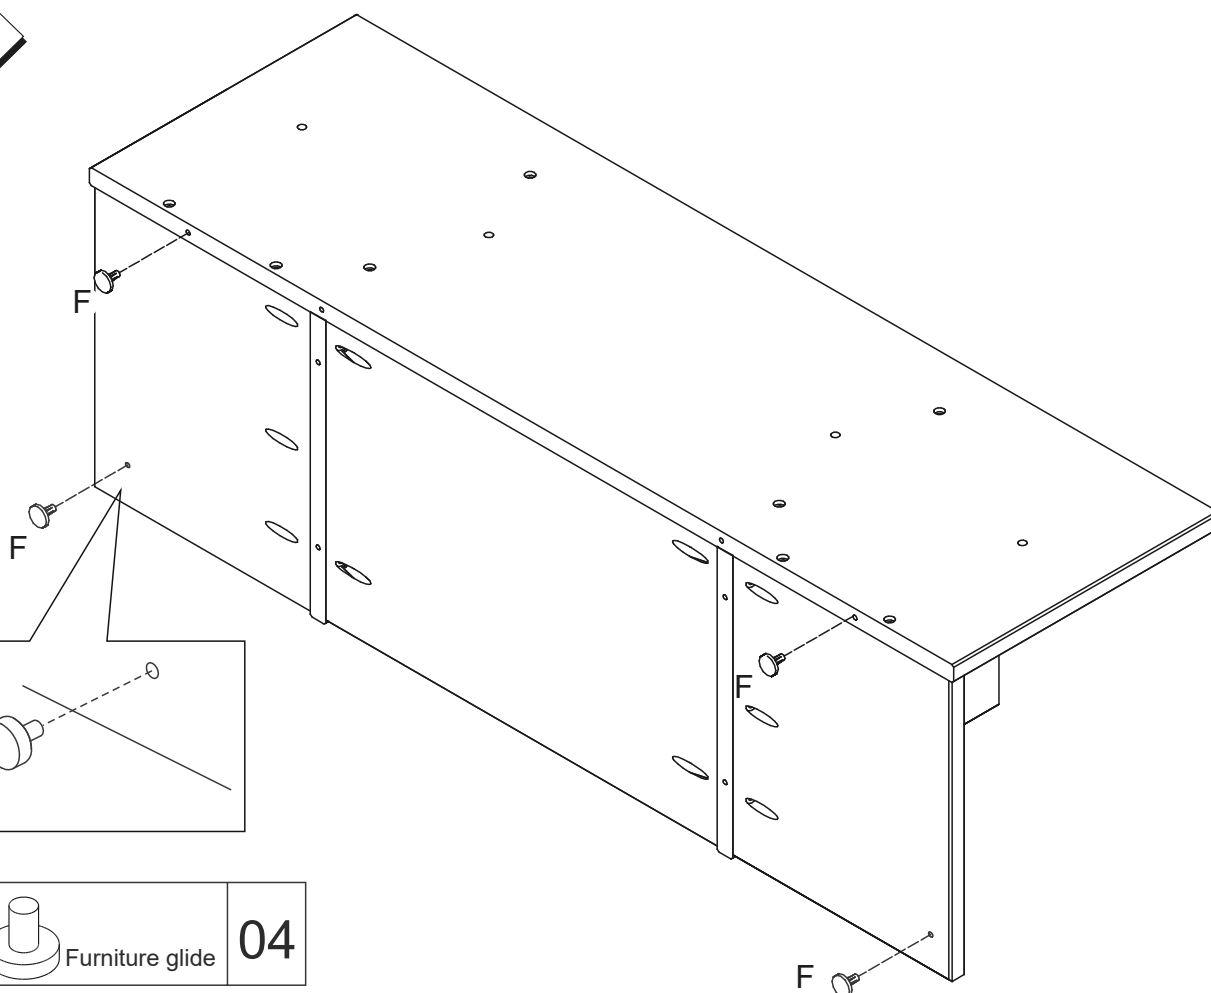








Side Module

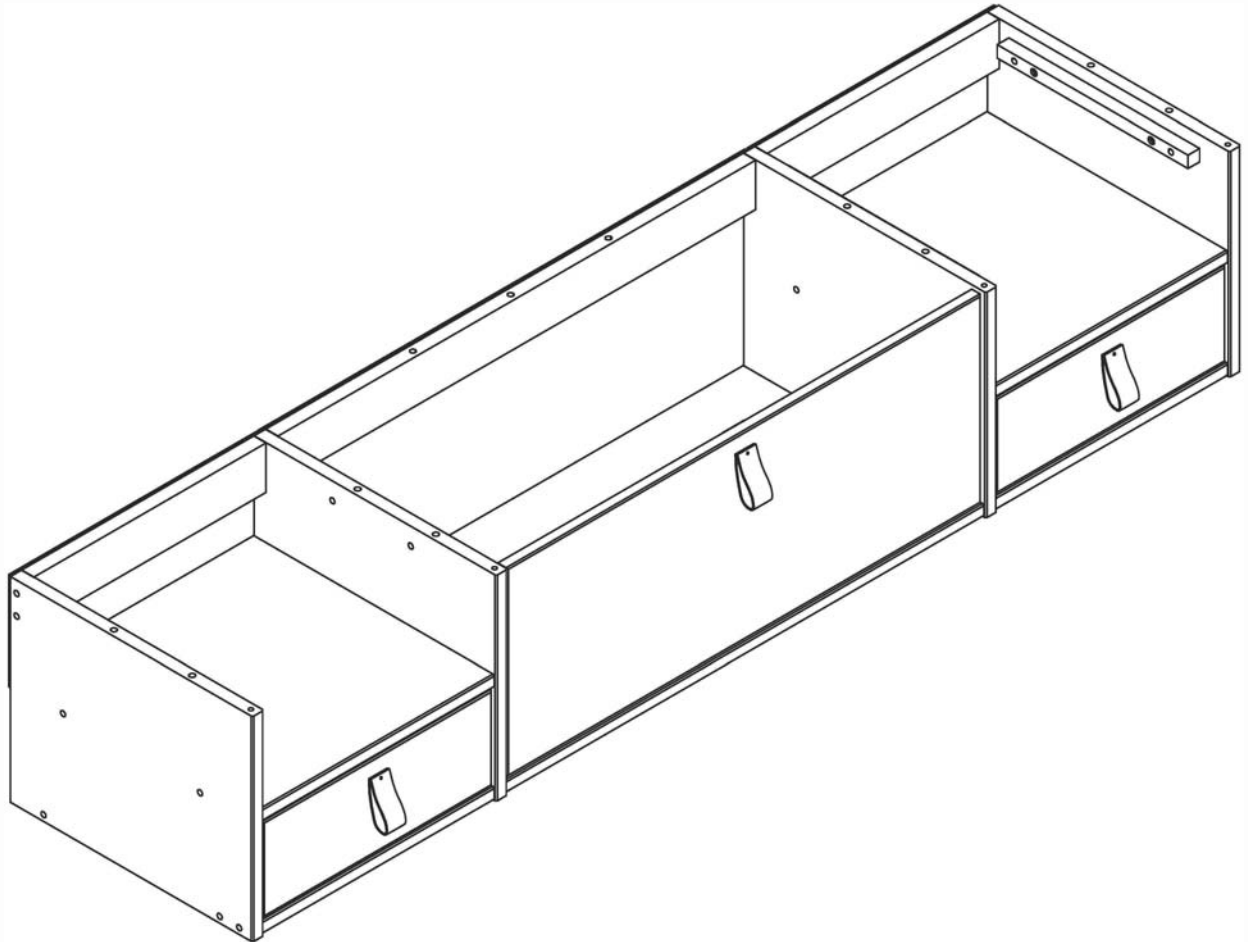





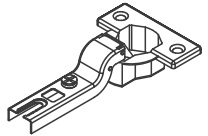


Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	44
B	 Ø 5/32" x 1.3/16"	30
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	08
G	 Magnetic Locking Plate	01





H	 Ø 1/8" x 9/16"	18
I	 Handle	03
J	 Ø 1/8" x 5/8"	33
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01
M	 Wedge	02
N	 Hinge-joint	02

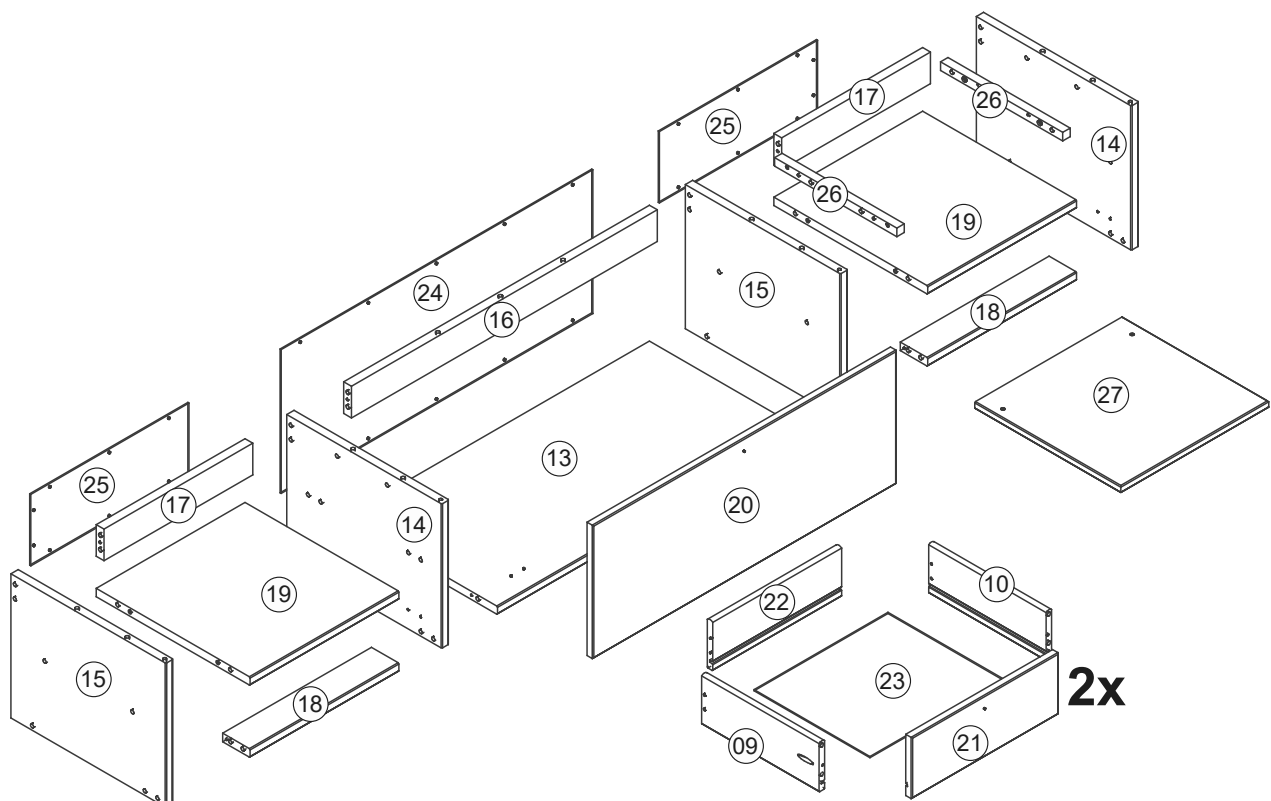COMPONENTS

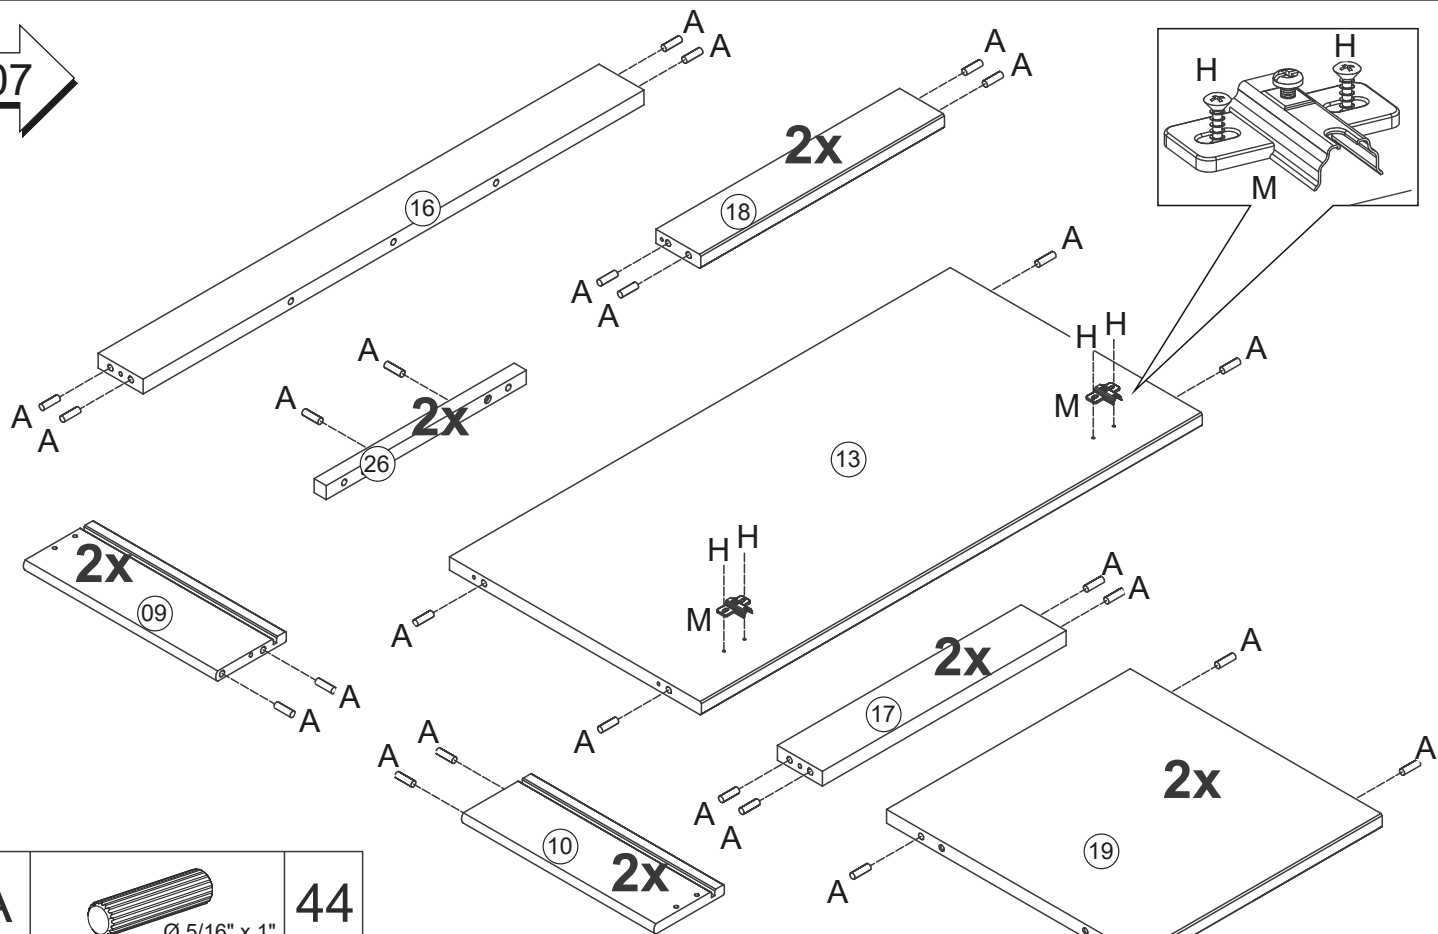


07







A	 Ø 5/16" x 1"	44	 2x		
M	 Wedge	02	H	 Ø 1/8" x 9/16"	04


08

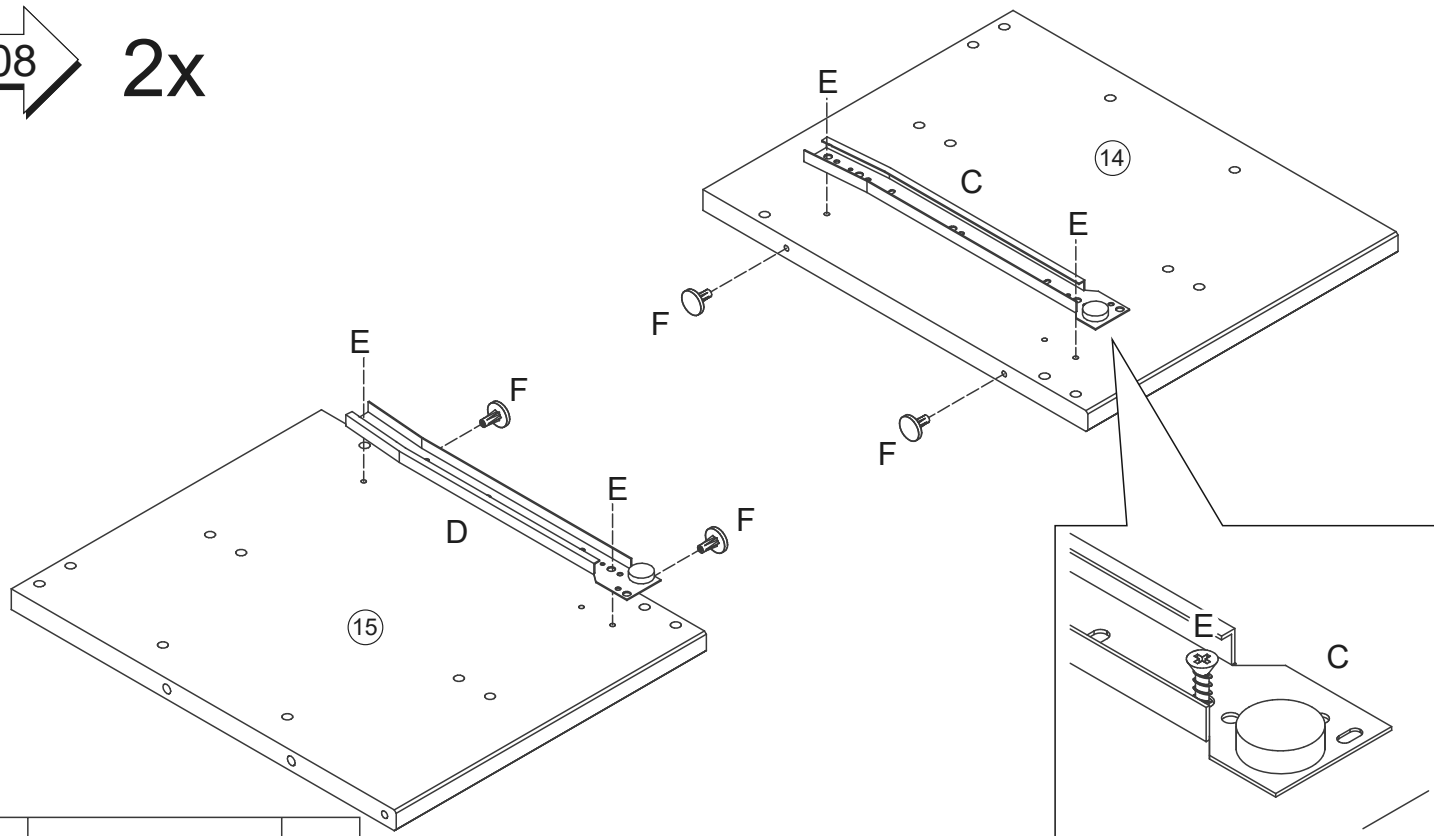2x





E	 Ø 1/4" x 13/32"	08						
F	 Furniture glide	08	C	 12"	02	D	 12"	02

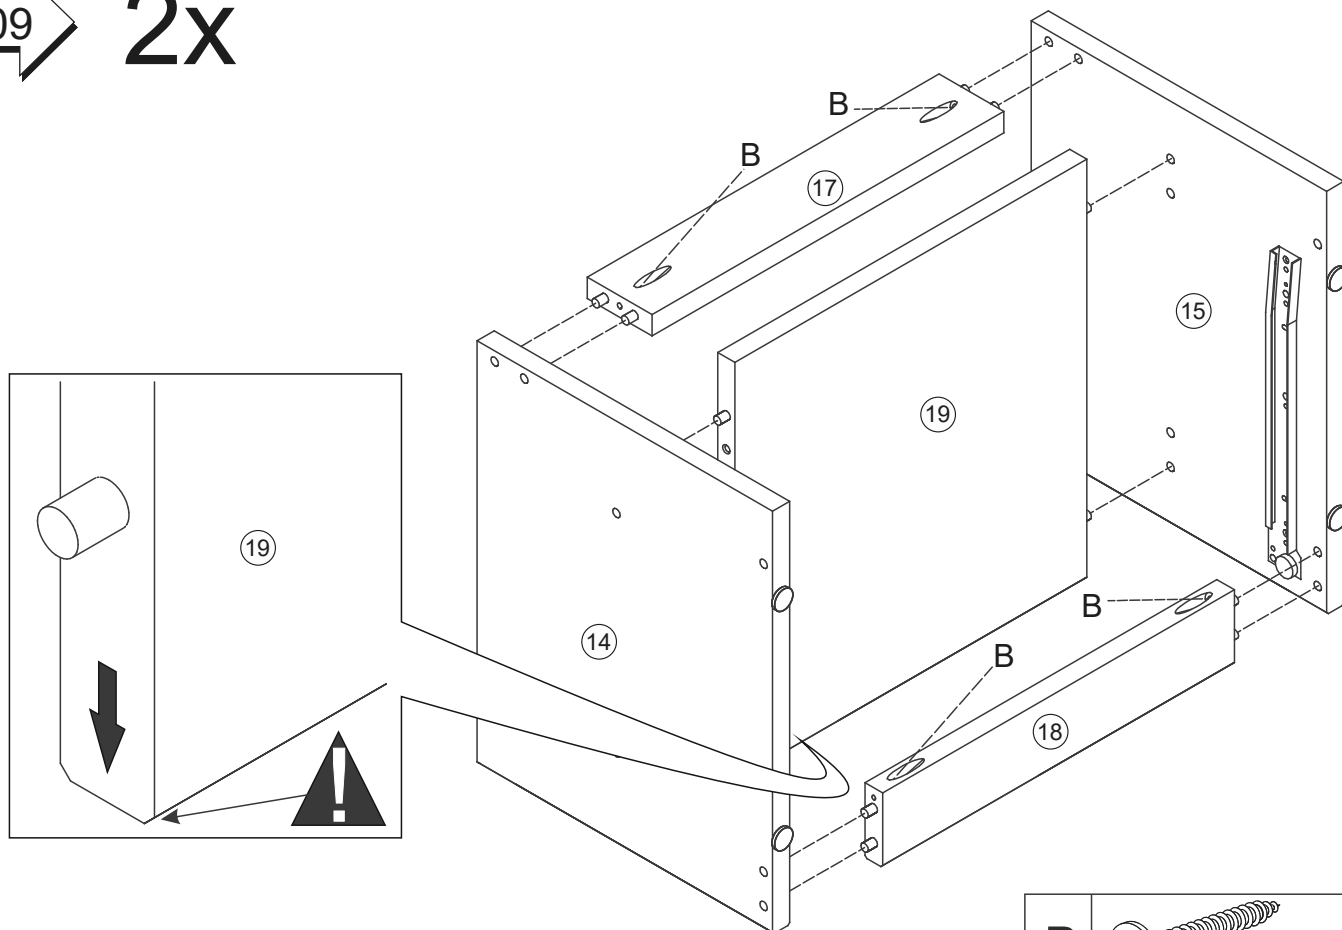


09 2x

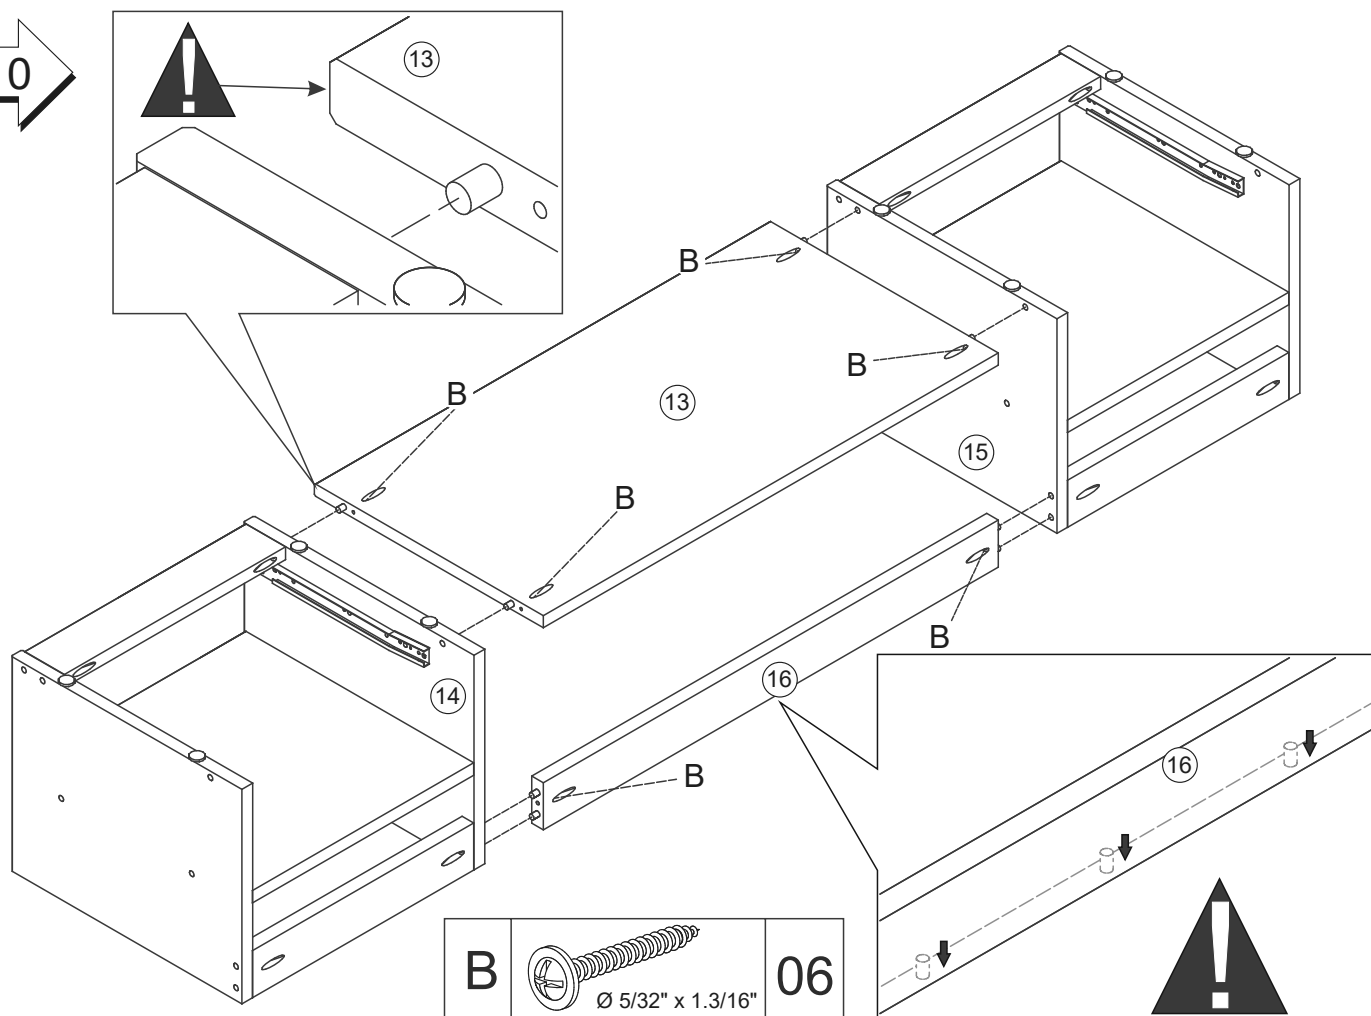


10






B	 Ø 5/32" x 1.3/16"	04
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01


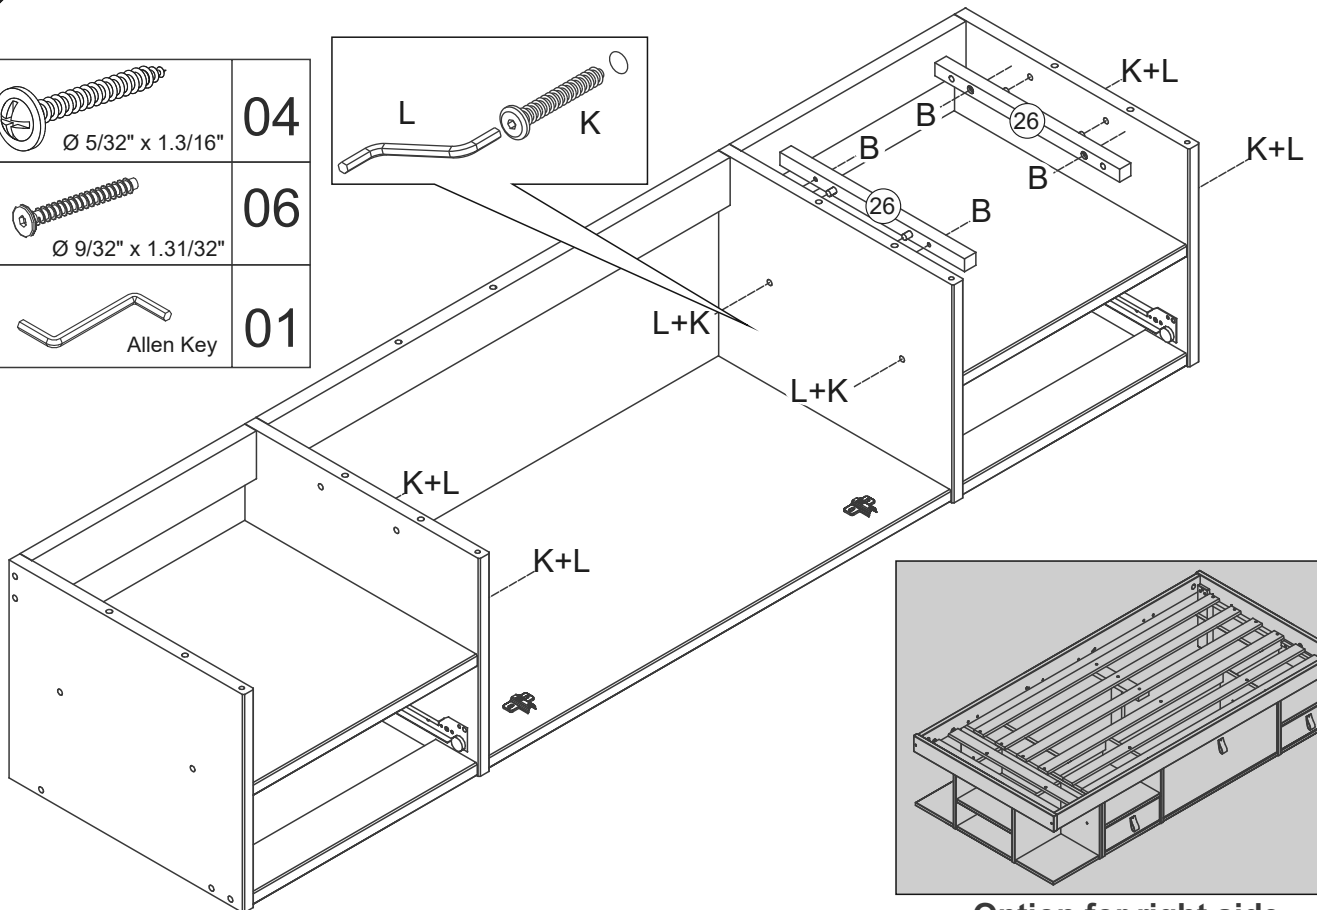


Option for right side

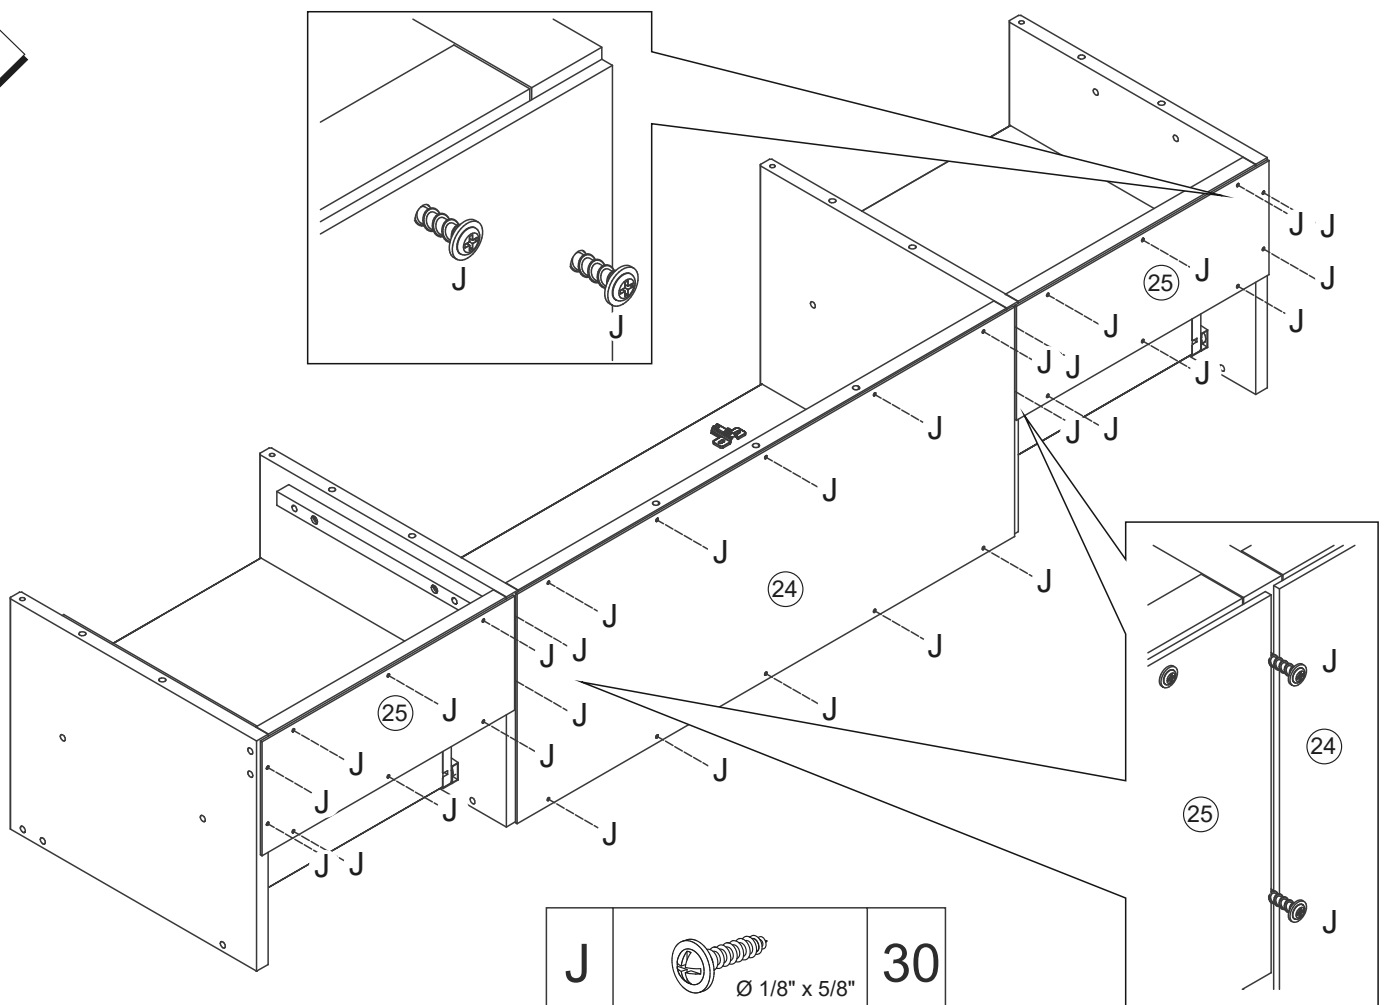


13

Now you need to decide on which side you want to assemble your side part.


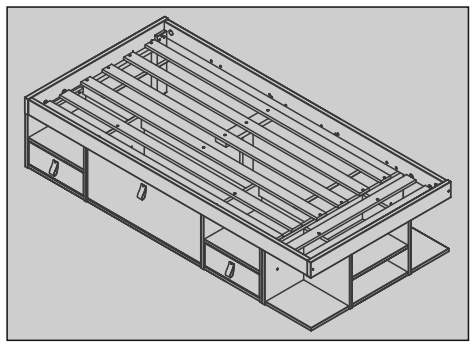
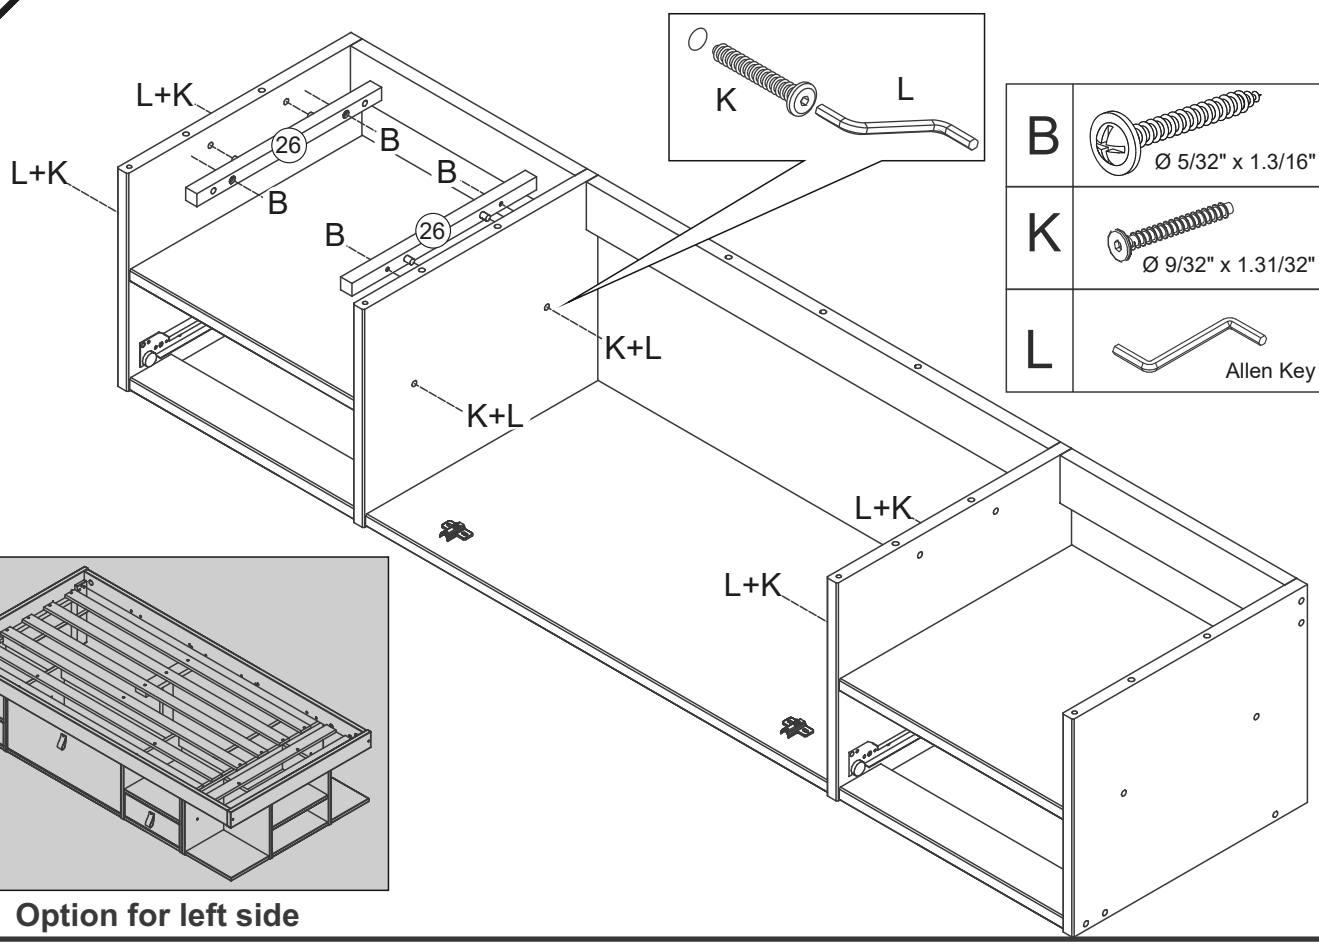



Option for left side

14




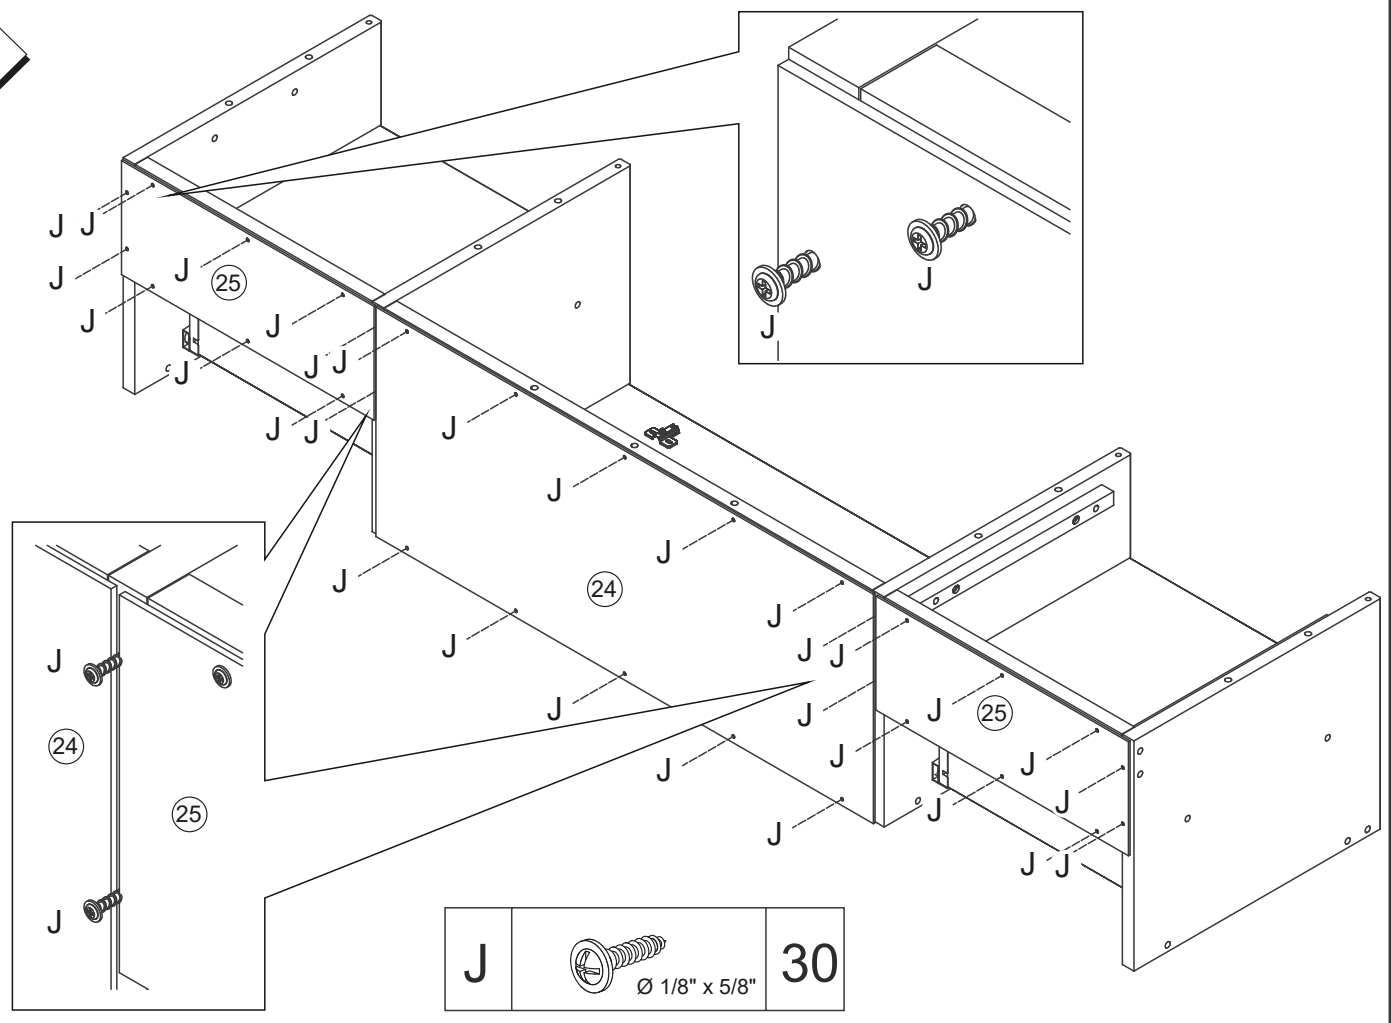




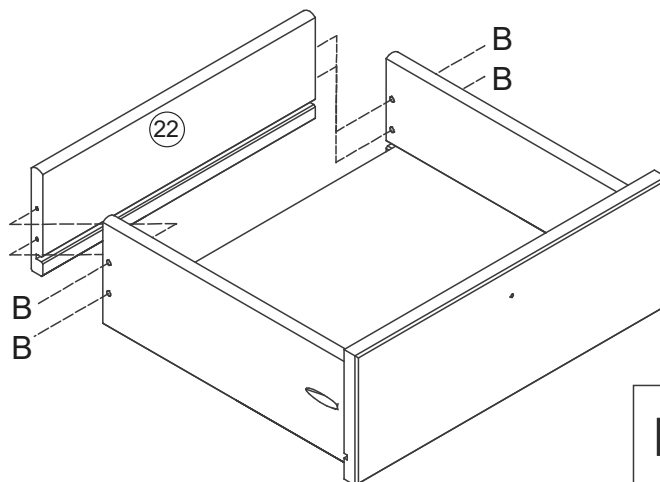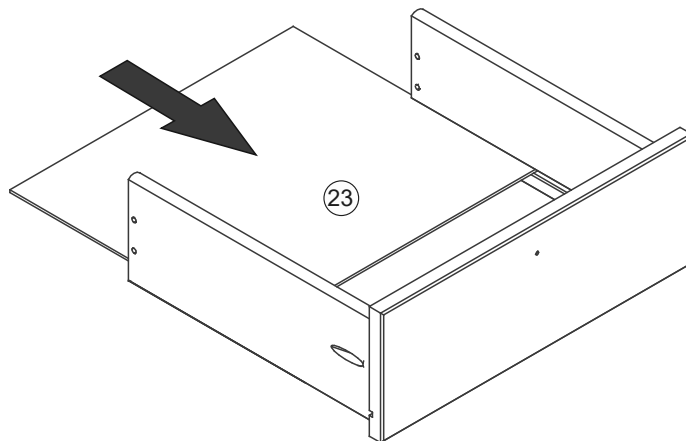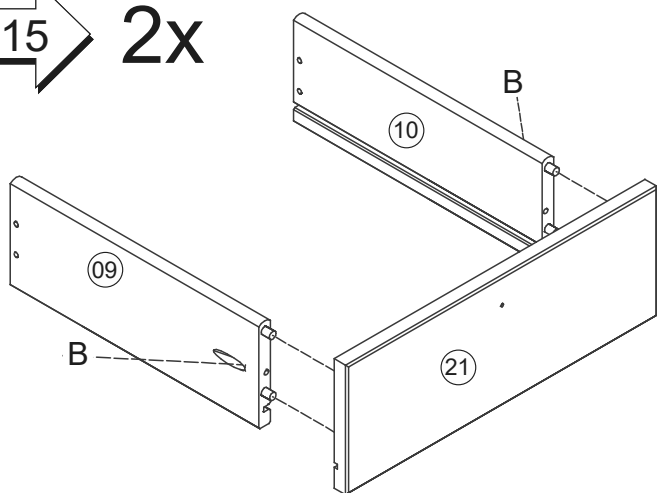


15 → 2x

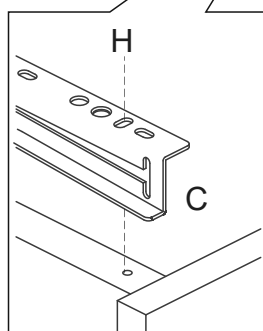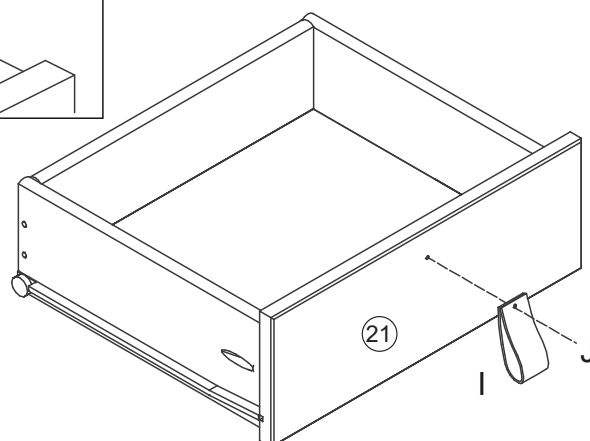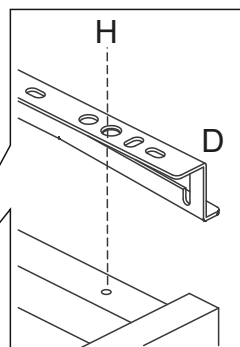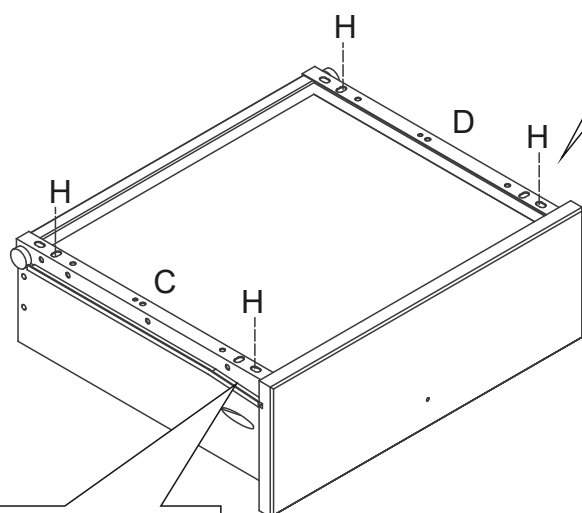


B		12
Ø 5/32" x 1.3/16"		

16 → 2x







I		02	J		02
Handle		Ø 1/8" x 5/8"			
H		08	C		02
Ø 1/8" x 9/16"		12"		D	
				12"	
				02	

17

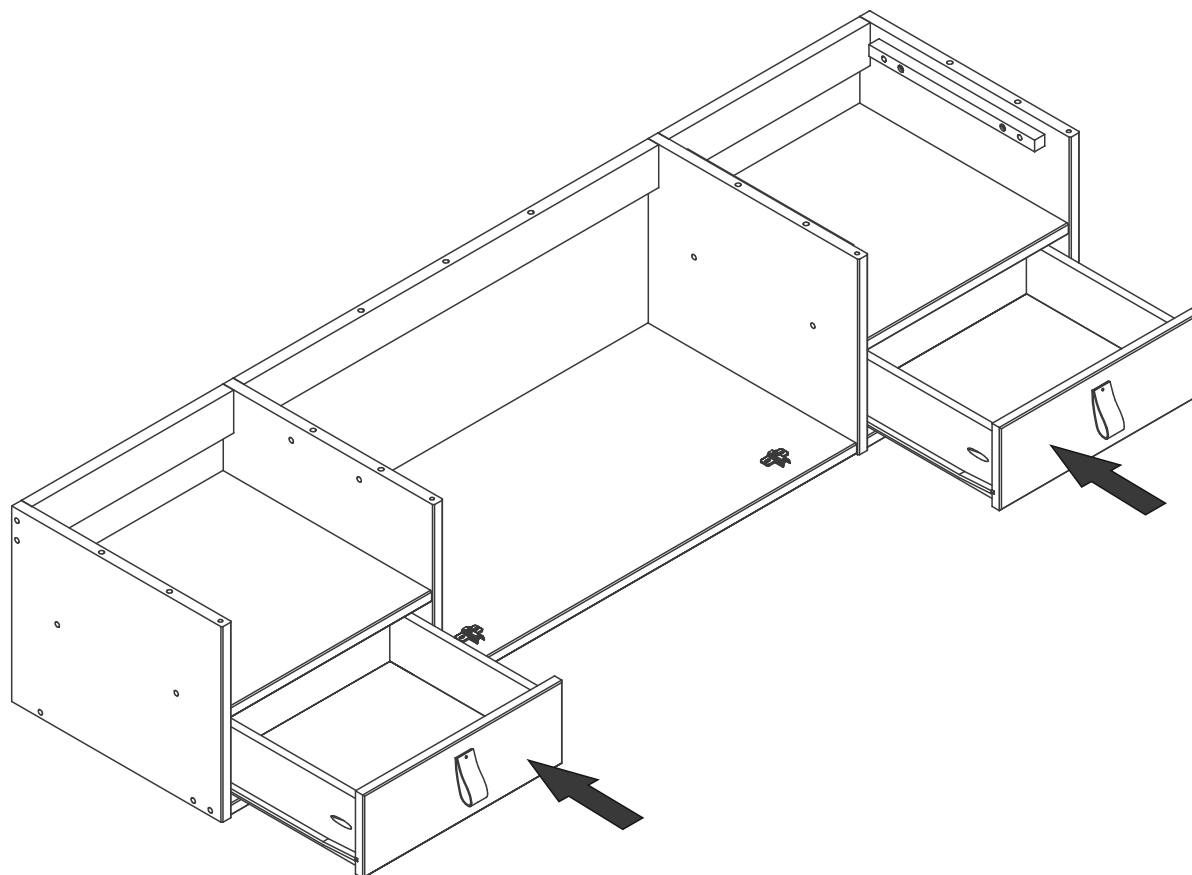


18

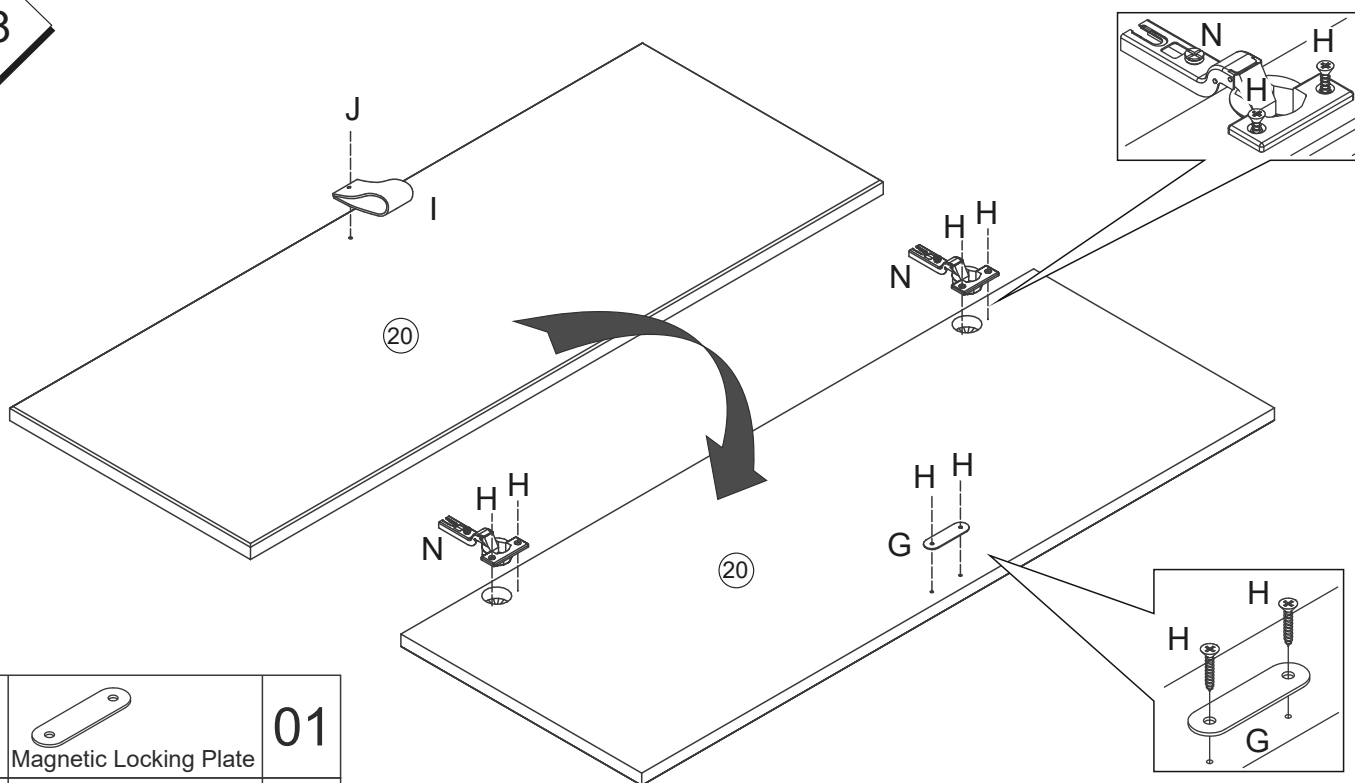


G		01
H	 Ø 1/8" x 9/16"	06
I		01

J	 Ø 1/8" x 5/8"	01	N		02
---	--	----	---	--	----





Drawer Adjustment

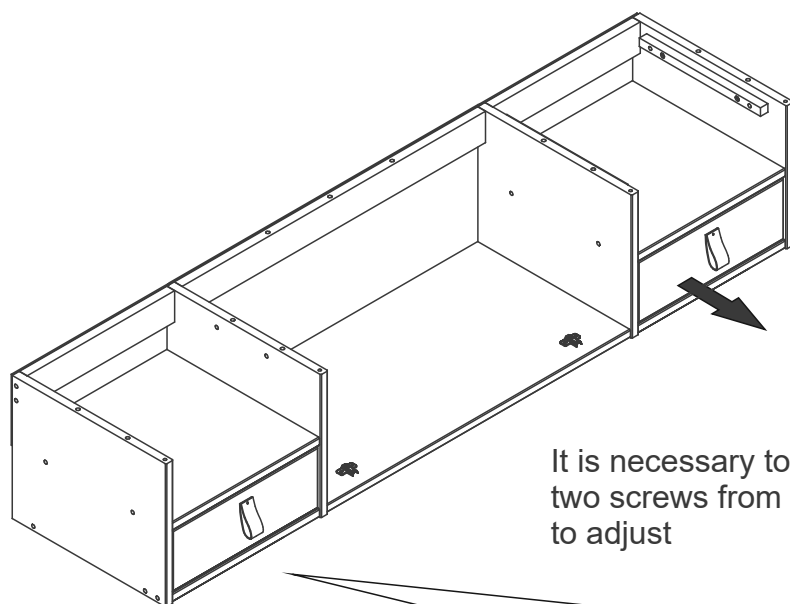

It is necessary to remove two screws from the slide to adjust

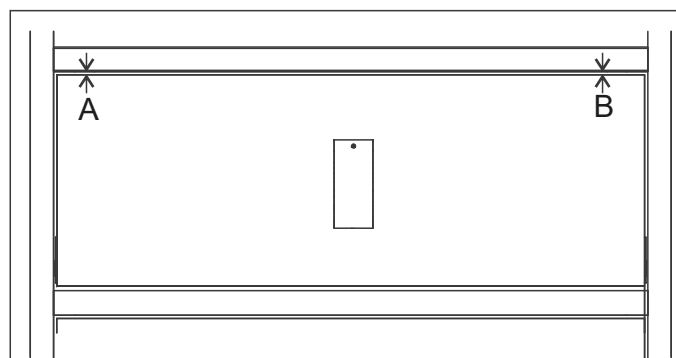


$A \neq B$

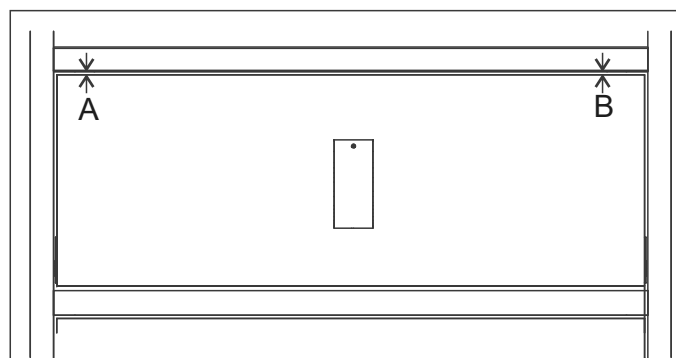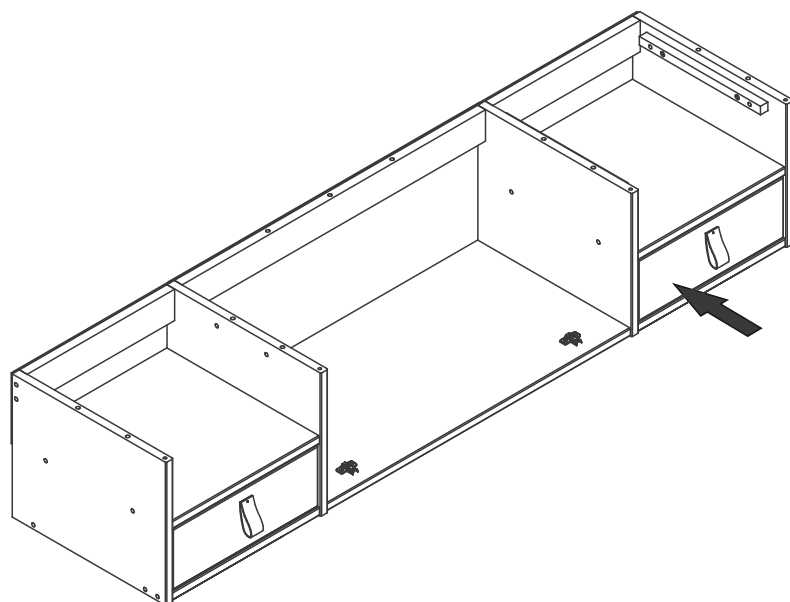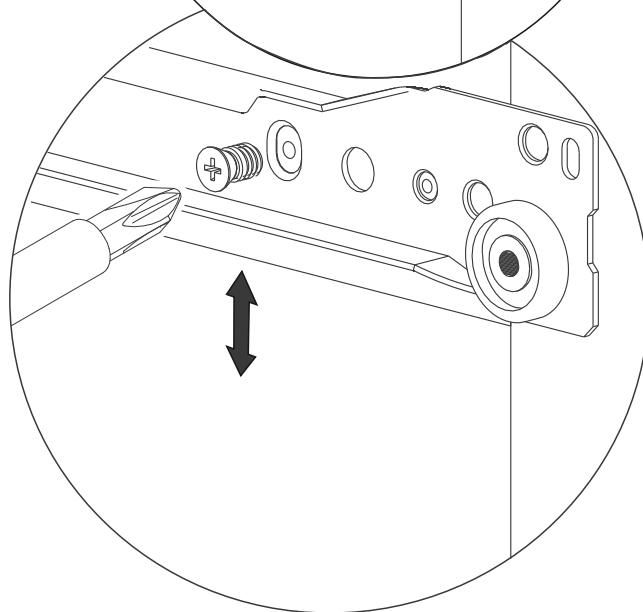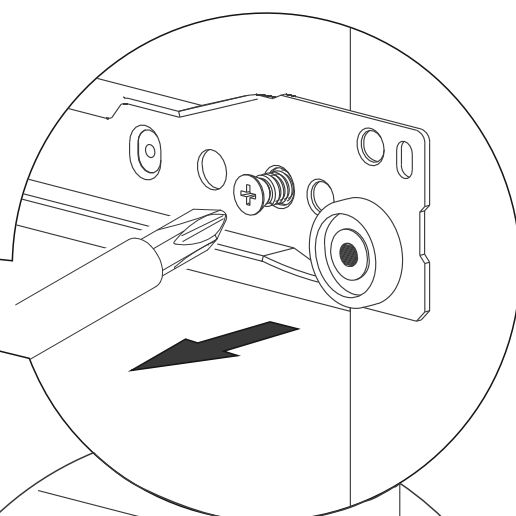


$A = B$

Drawer Adjustment

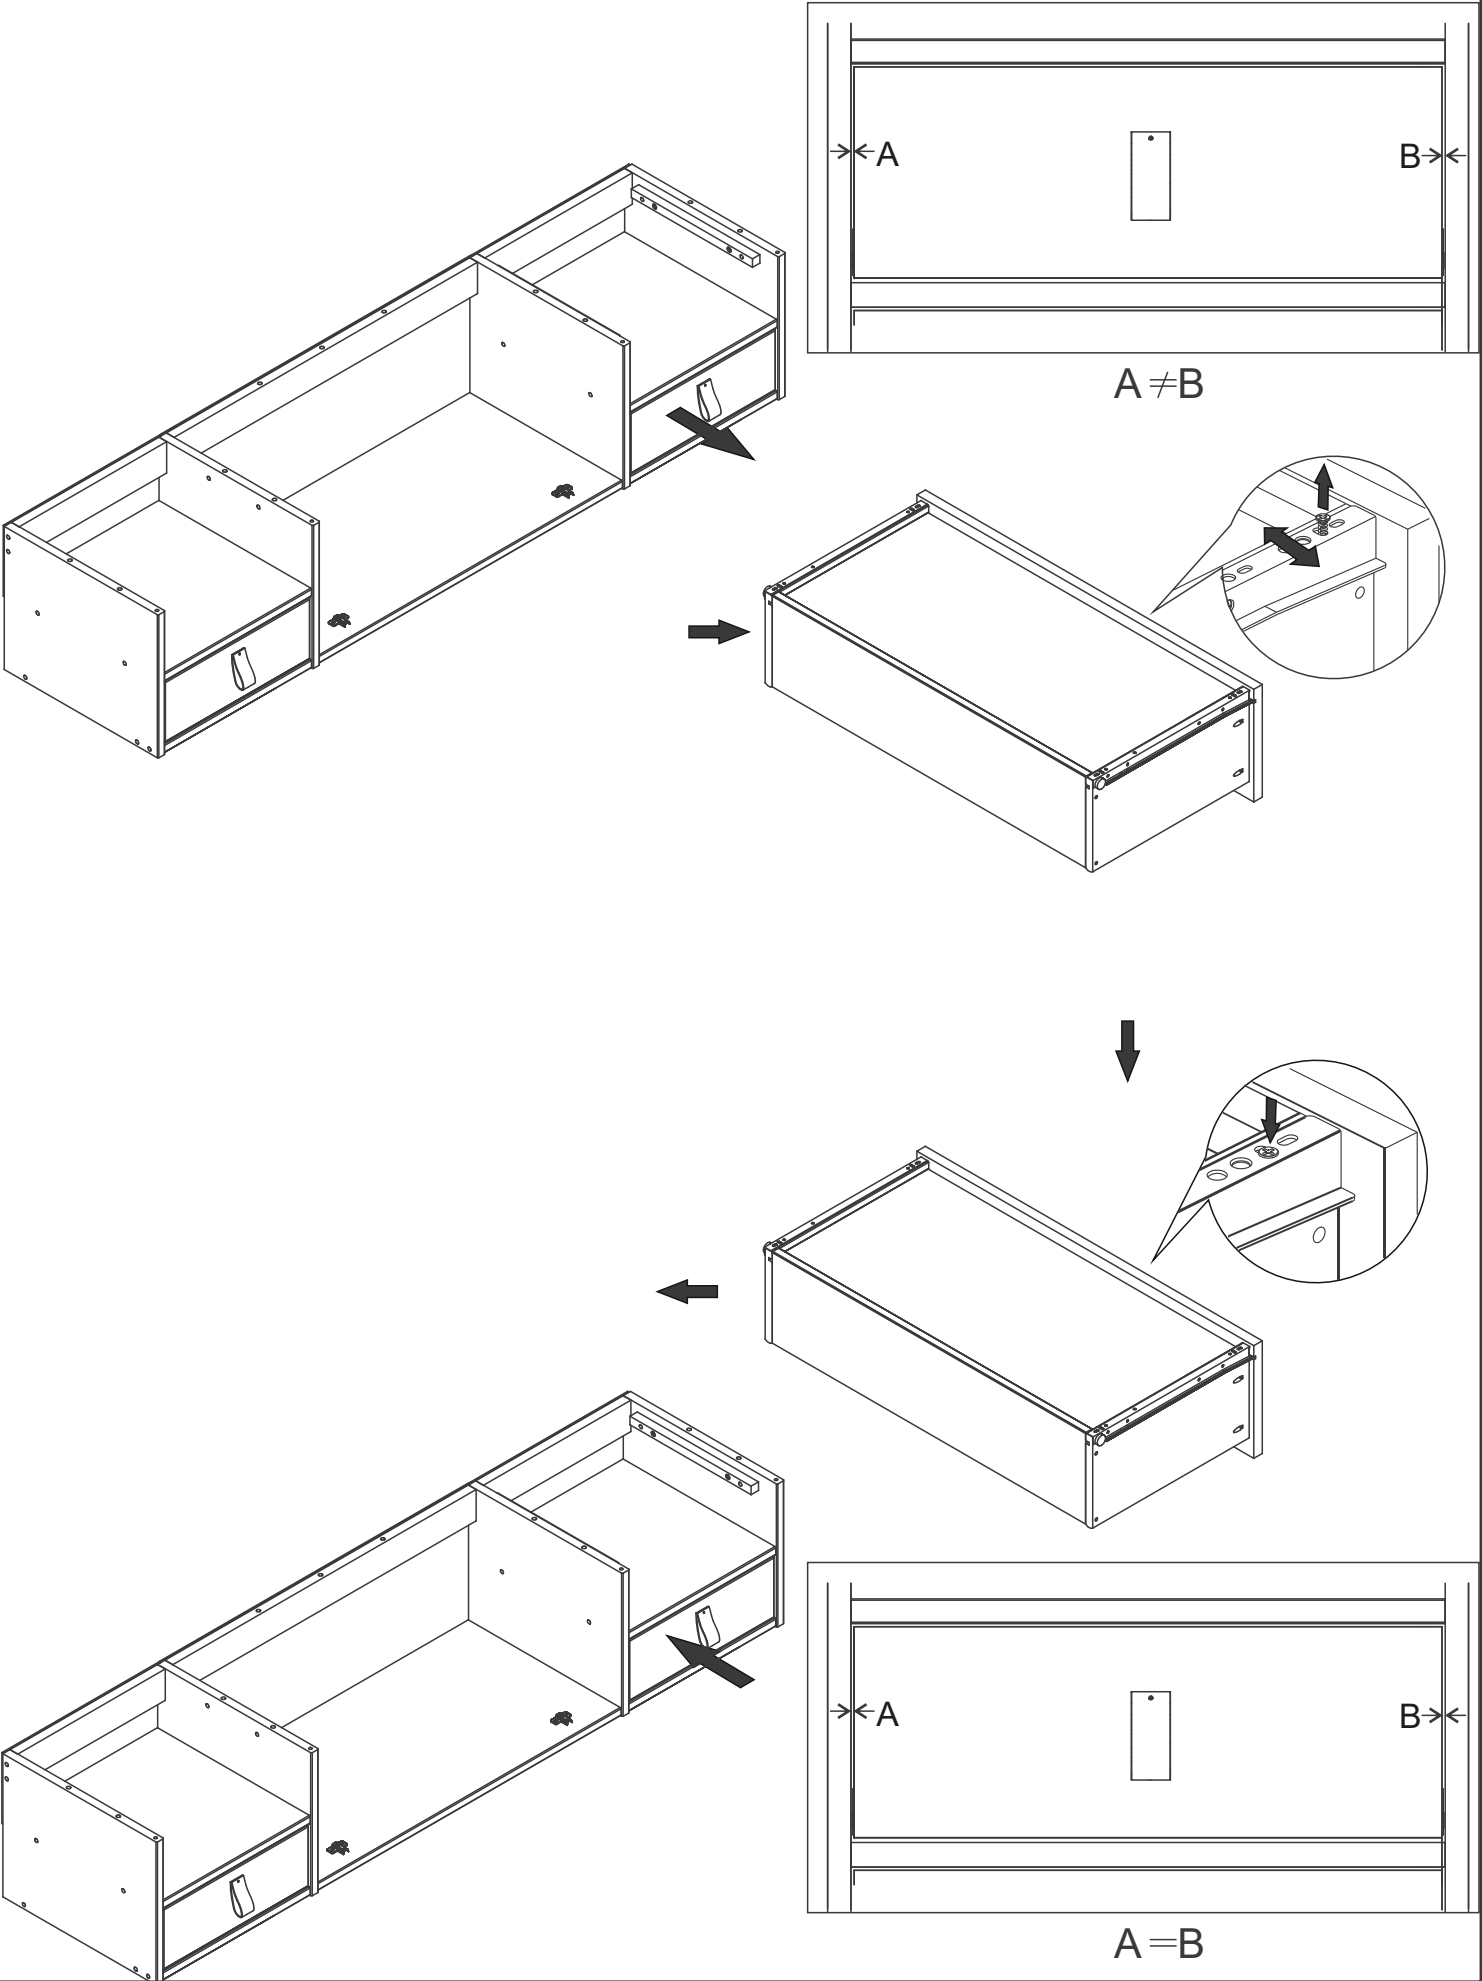








Upper Side





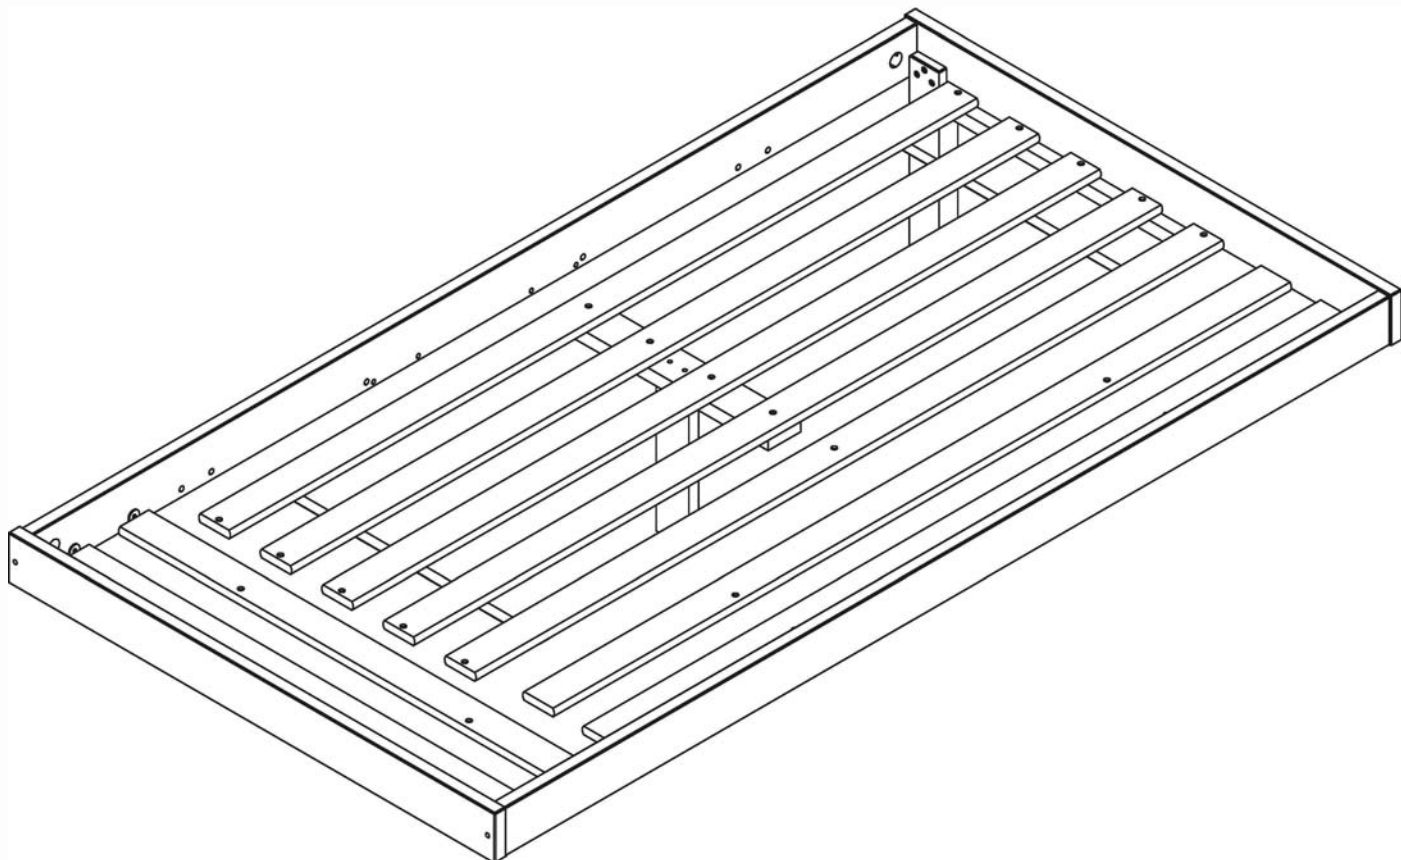




Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	22
H	 Ø 1/8" x 9/16"	12
L	 Allen Key	01
O	 Ø 9/32" x 2.3/4"	02
P	 Ø 1/4" x 2.3/4"	04
Q	 Elliptical nut	04
R	 Felt	02




S	 Magnetic clasp	01
T	 Ø 5/32" x 1.3/8"	33
U	 Ø 1/4" x 1"	05
V	 Corner fitting	06
X	 Trapeze	05+1
Y	 mm	01
Z	 Ø 9/32" x 2"	07

COMPONENTS


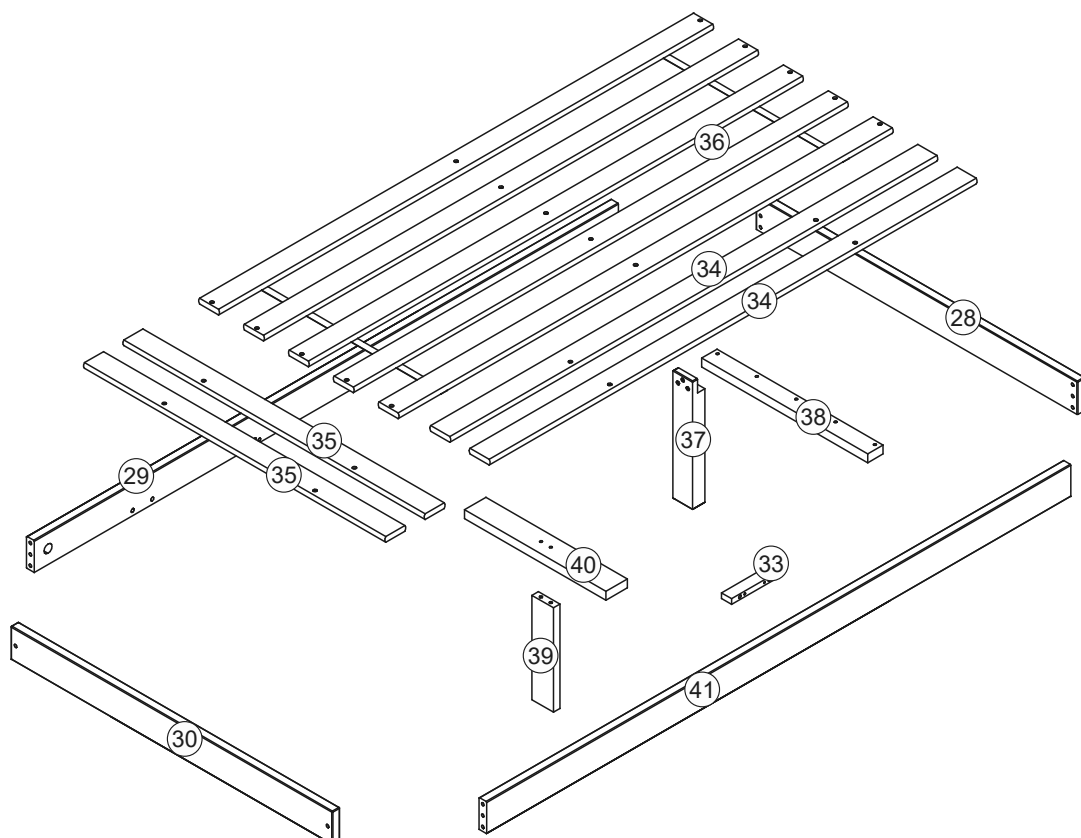


19

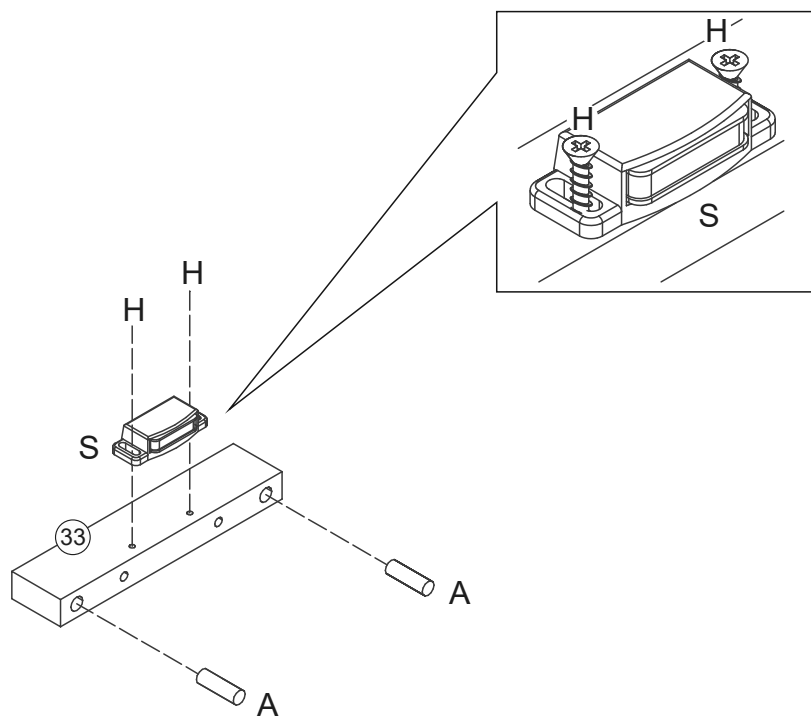




A	 Ø 5/16" x 1"	02
S	 Magnetic clasp	01
H	 Ø 1/8" x 9/16"	02


20

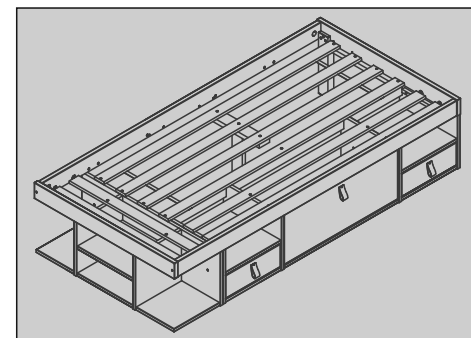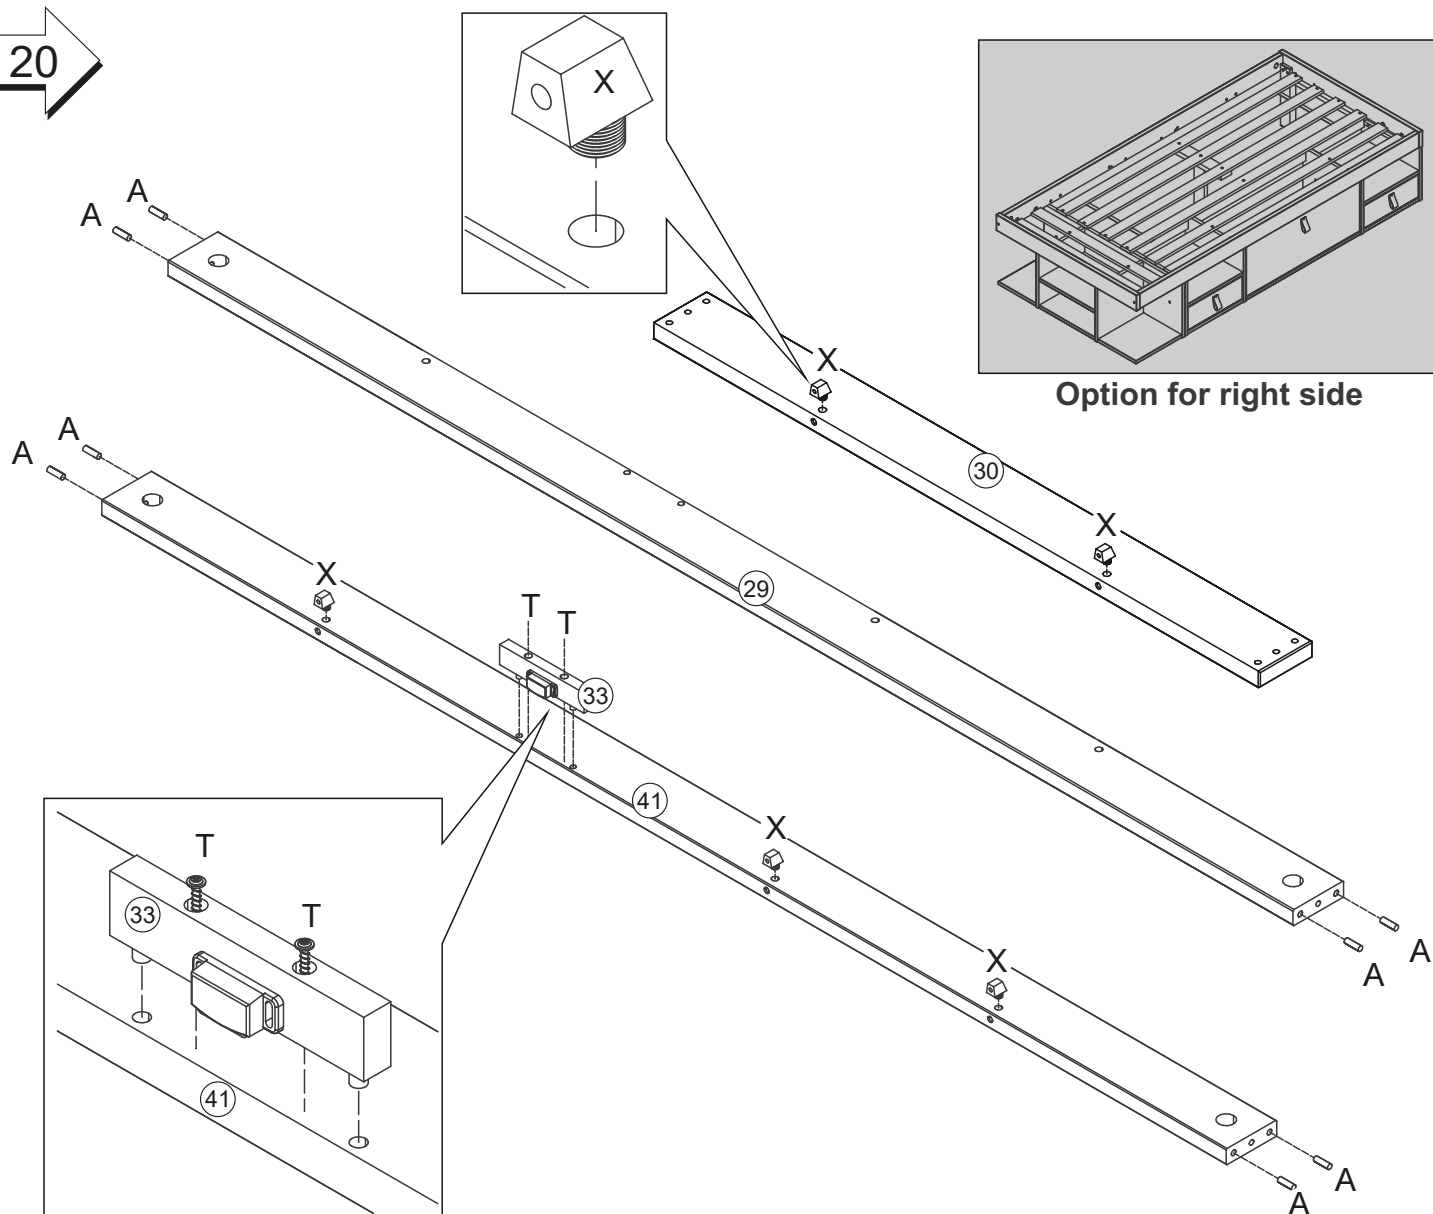


Option for right side

A	 Ø 5/16" x 1"	08	T	 Ø 5/32" x 1.3/8"	02	X	 Trapeze	05
---	---	----	---	---	----	---	--	----


21


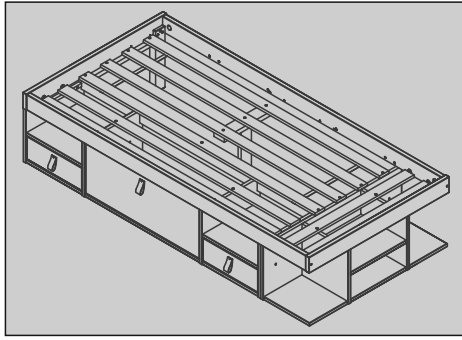


Option for left side


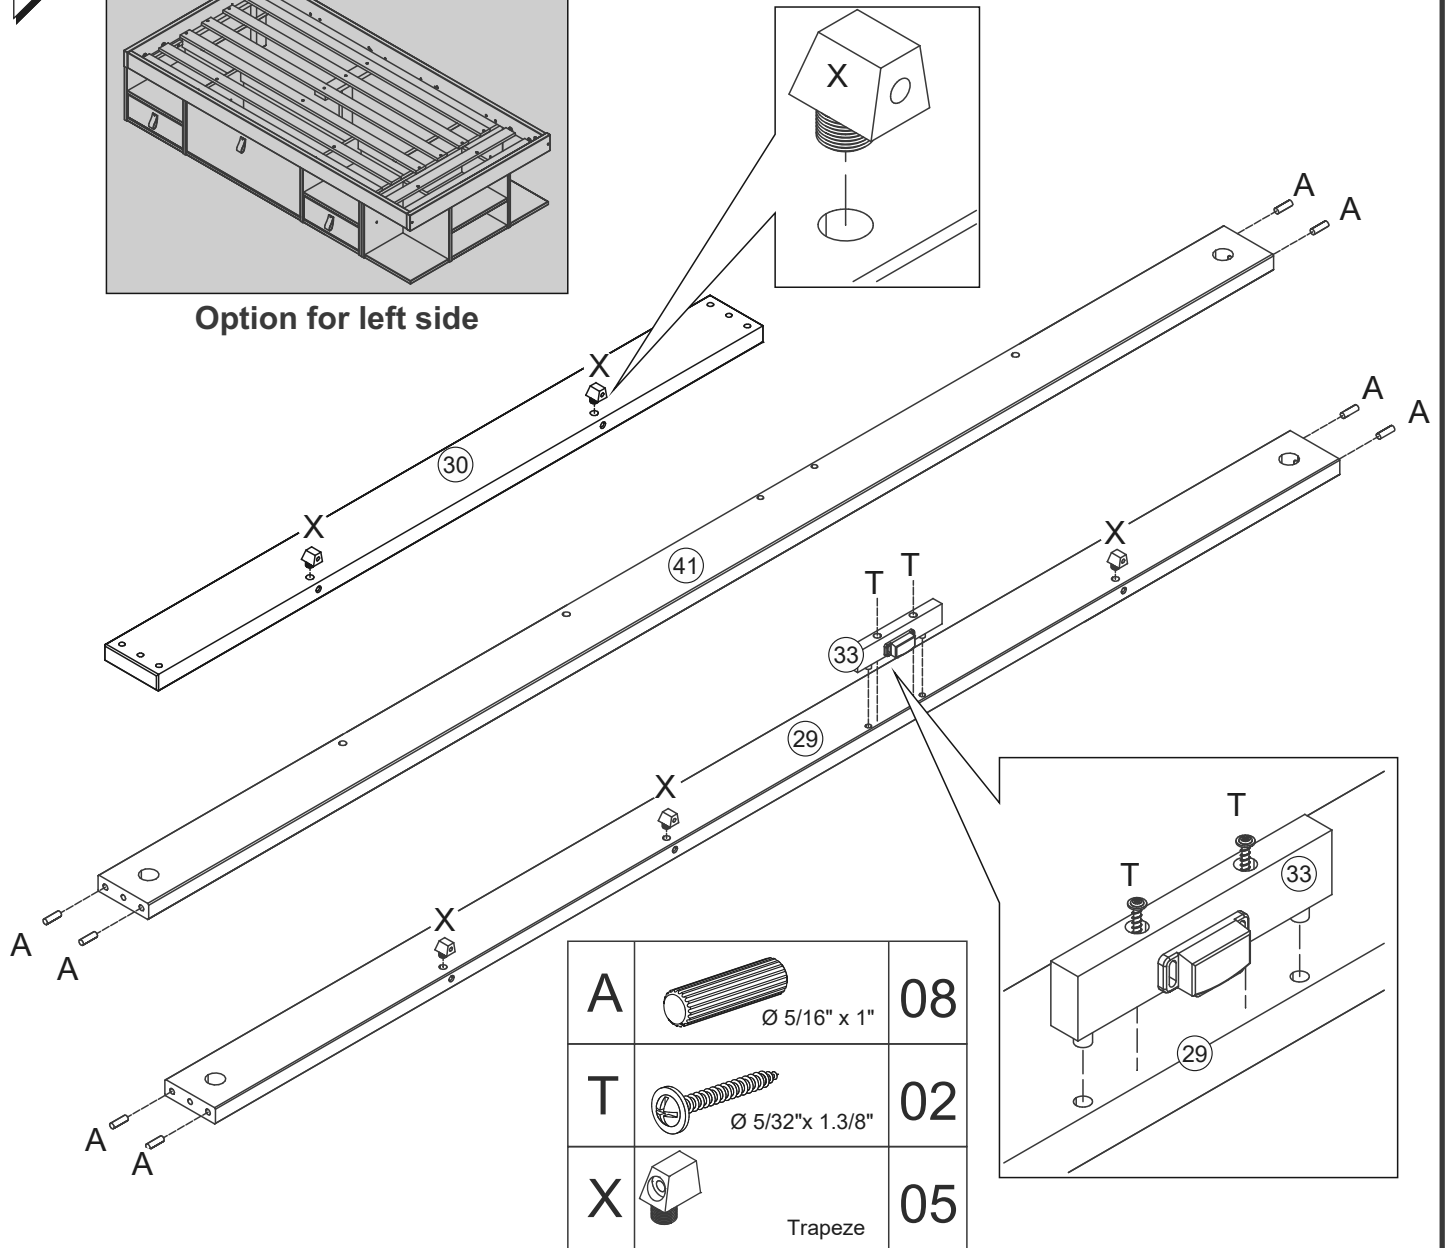



22

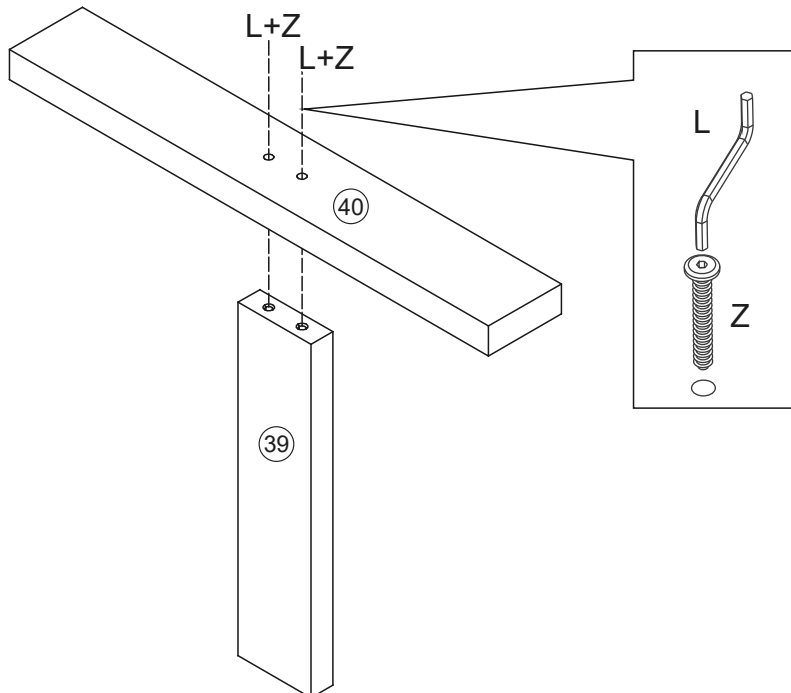


Z	 Ø 9/32" x 2"	02
L	 Allen Key	01




23

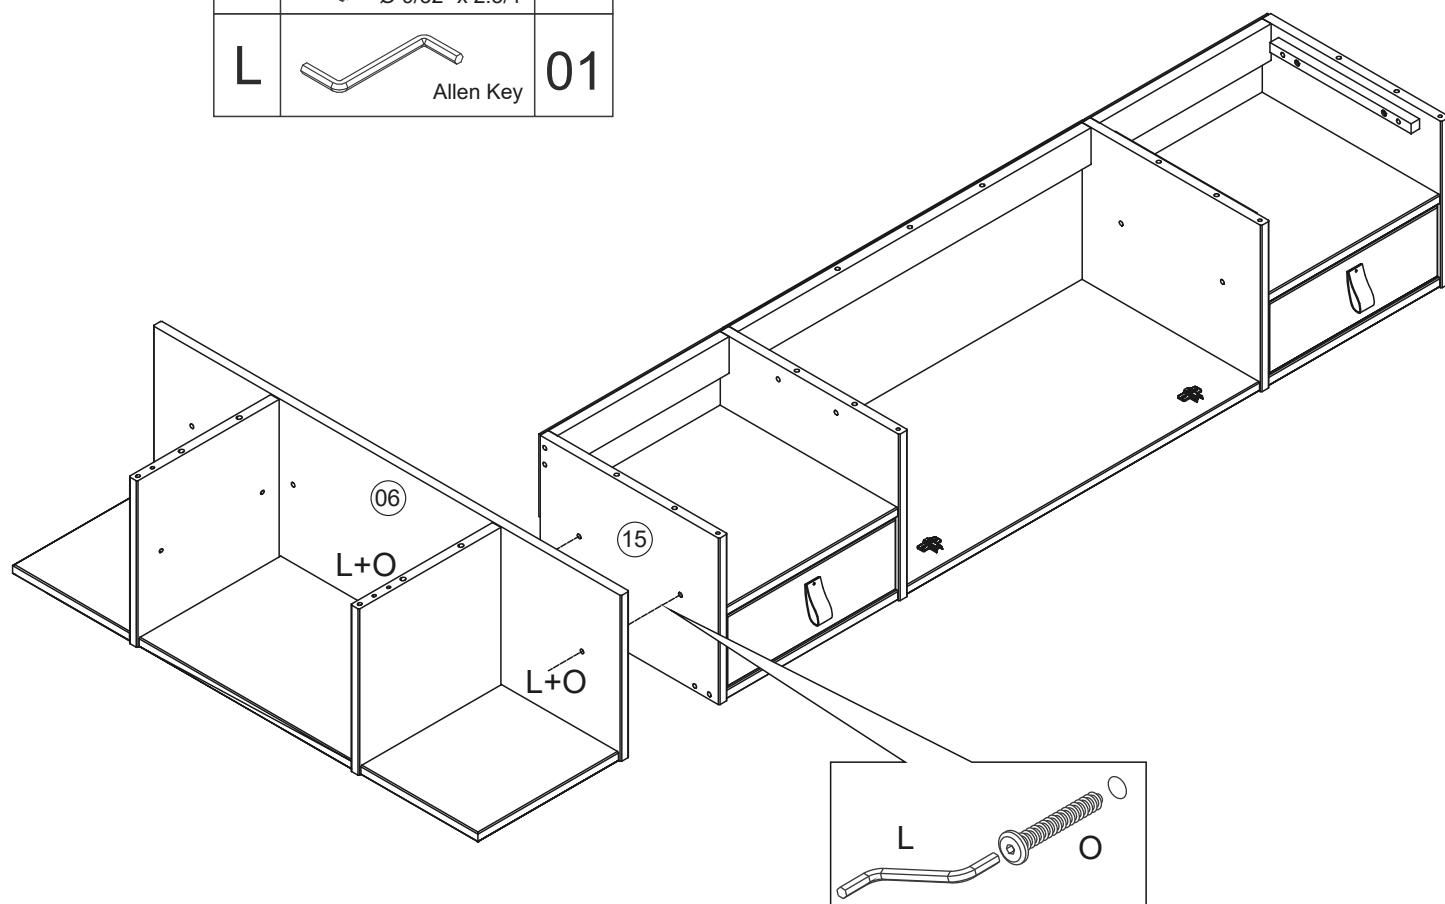O	 Ø 9/32" x 2.3/4"	02
L	 Allen Key	01


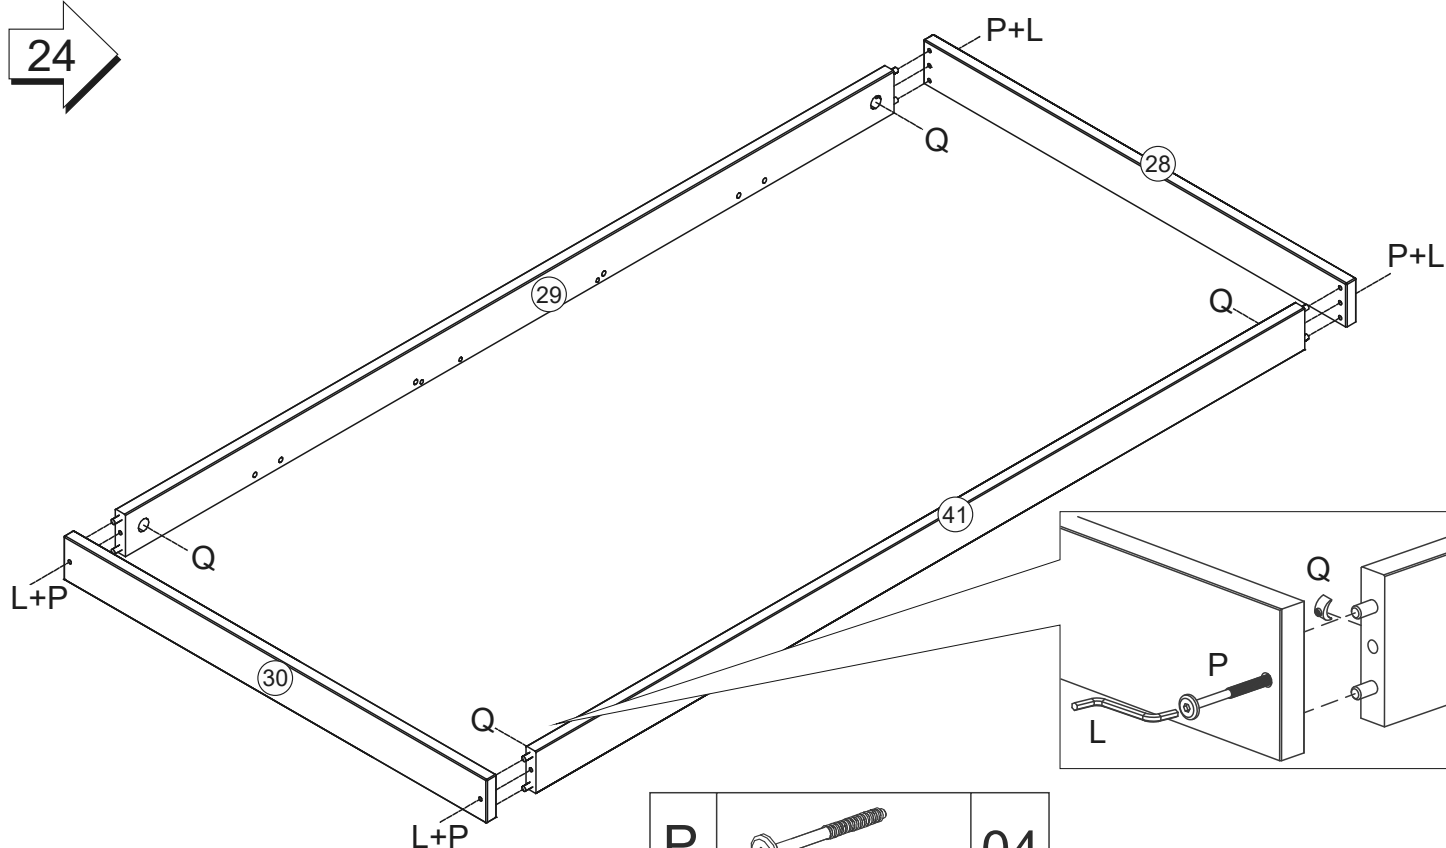


24





P	 Ø 1/4" x 2.3/4"	04
Q	 Elliptical nut	04
L	 Allen Key	01


25

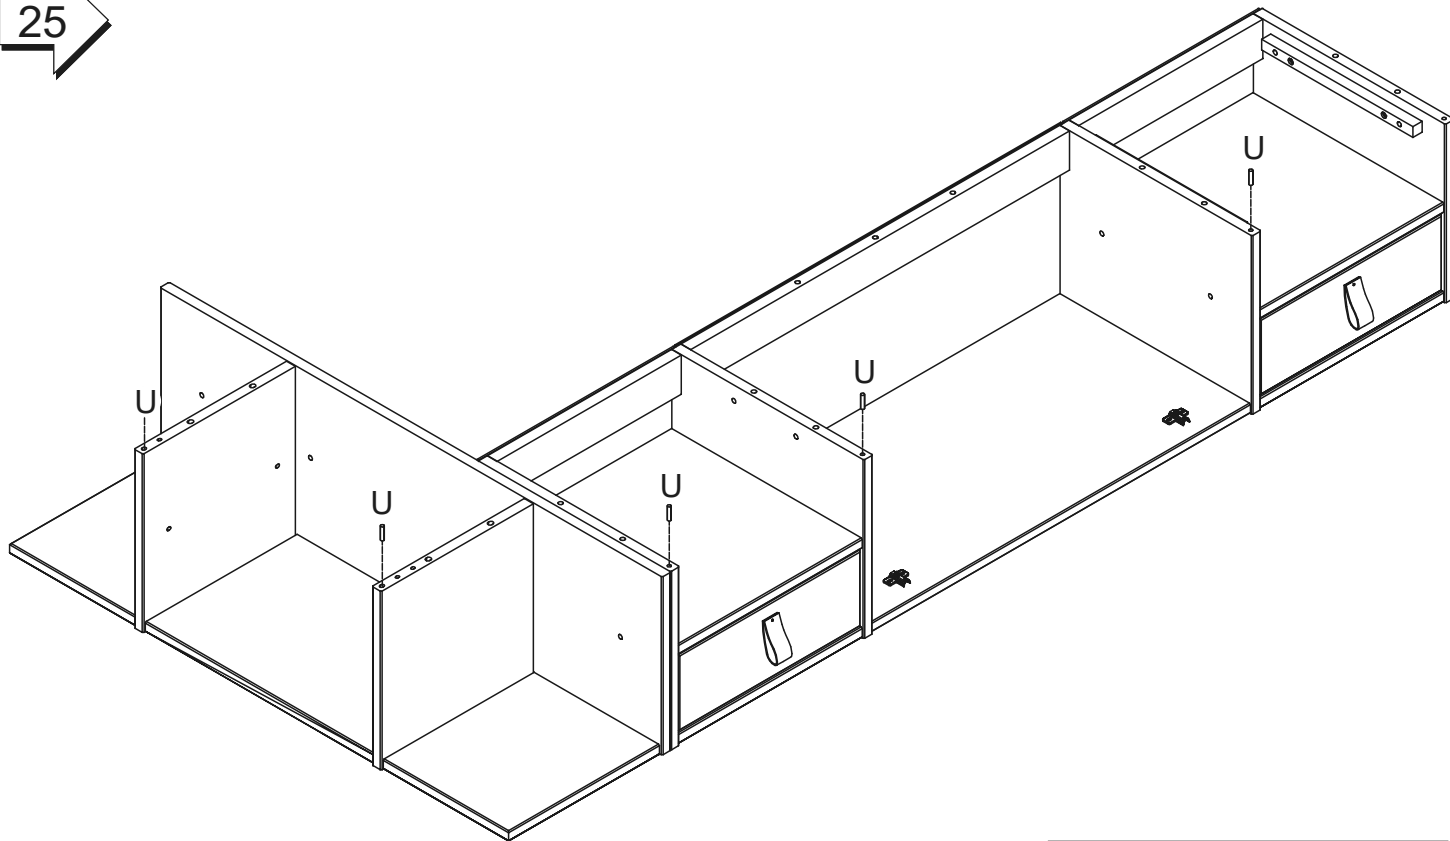


26

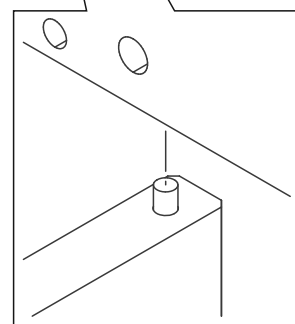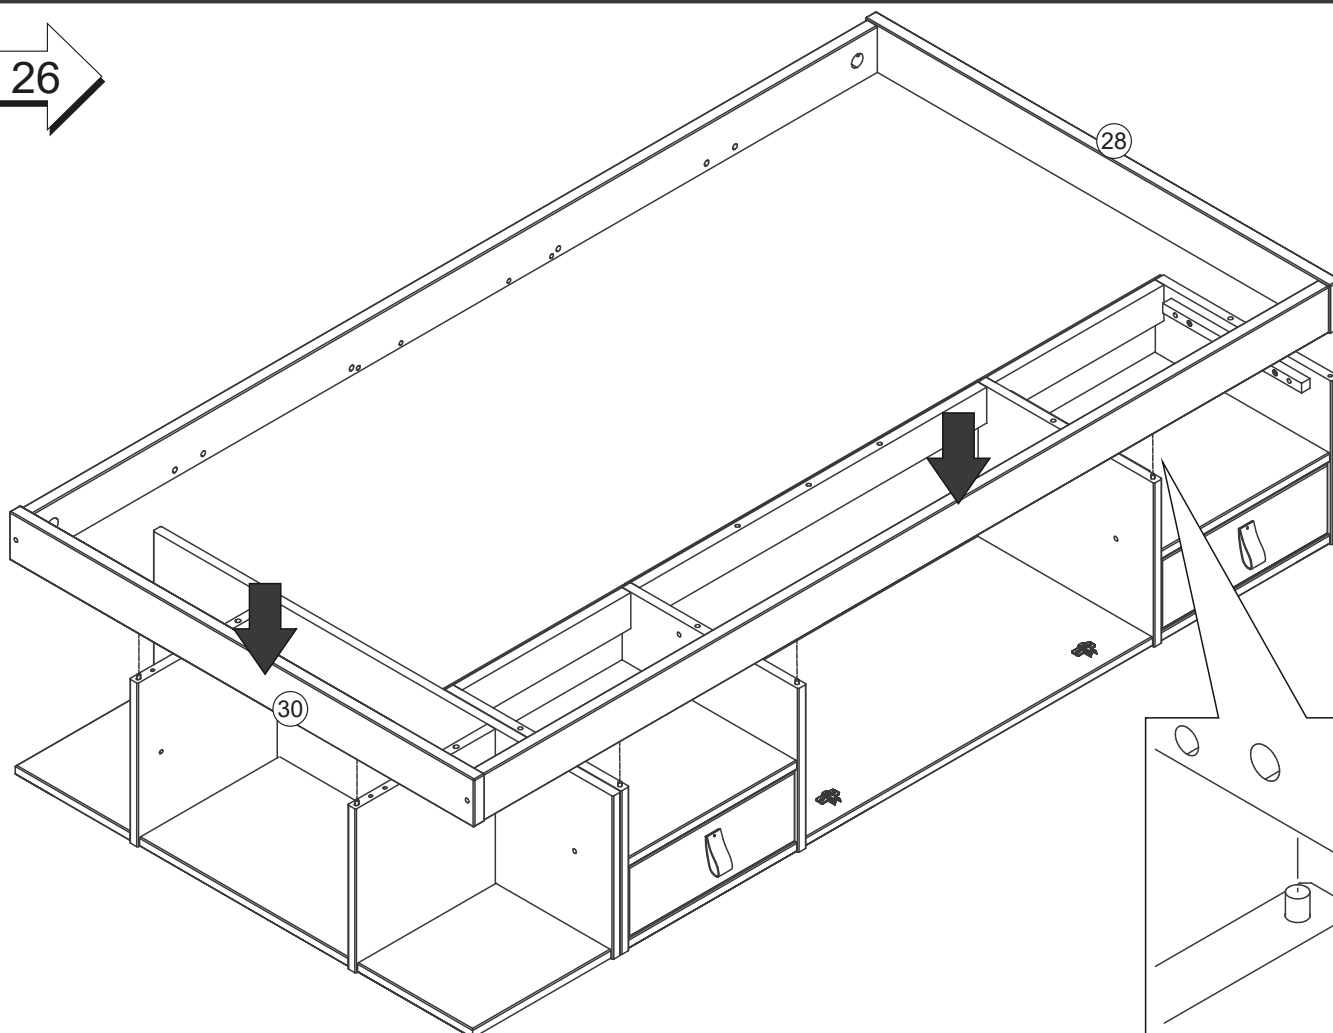


27



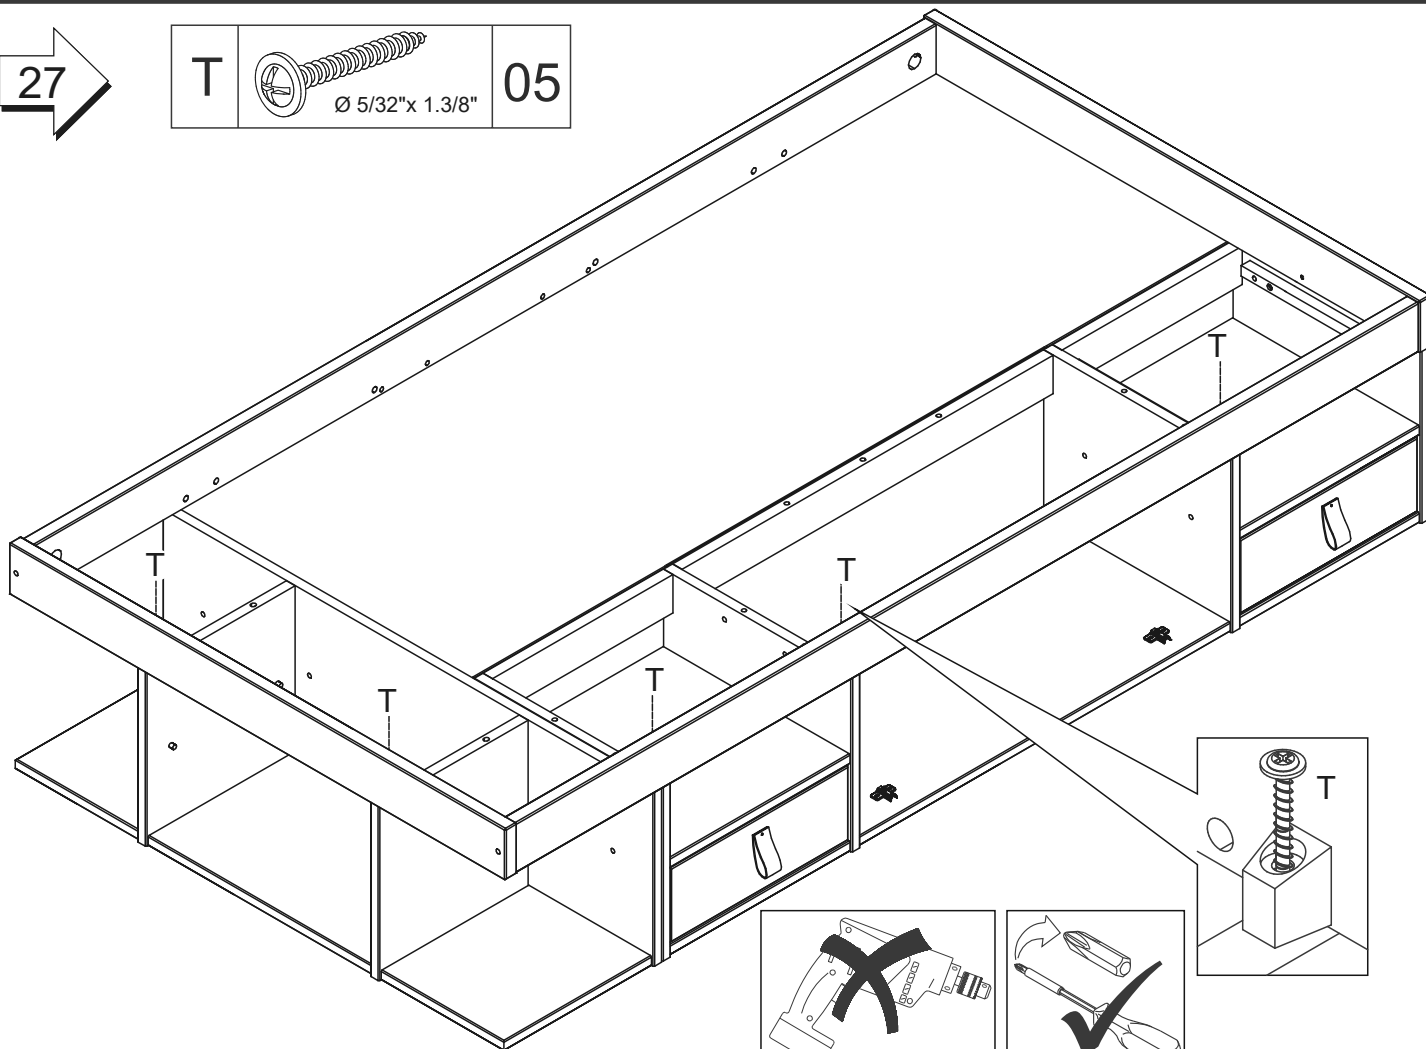

T		05
---	--	----




Ø 5/32" x 1.3/8"

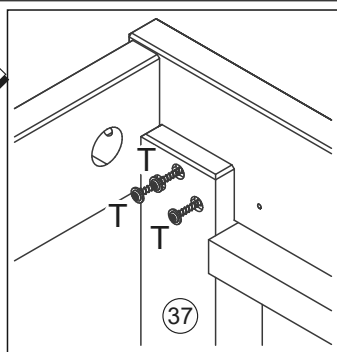


28




H		02	Z		05
	Ø 1/8" x 9/16"			Ø 9/32" x 2"	
V		02	L		01
	Corner fitting			Allen Key	

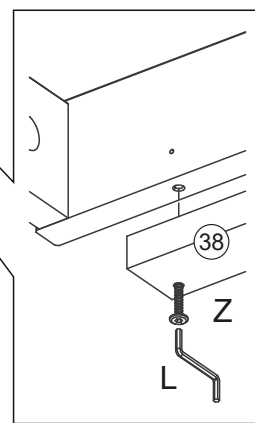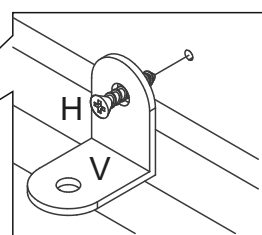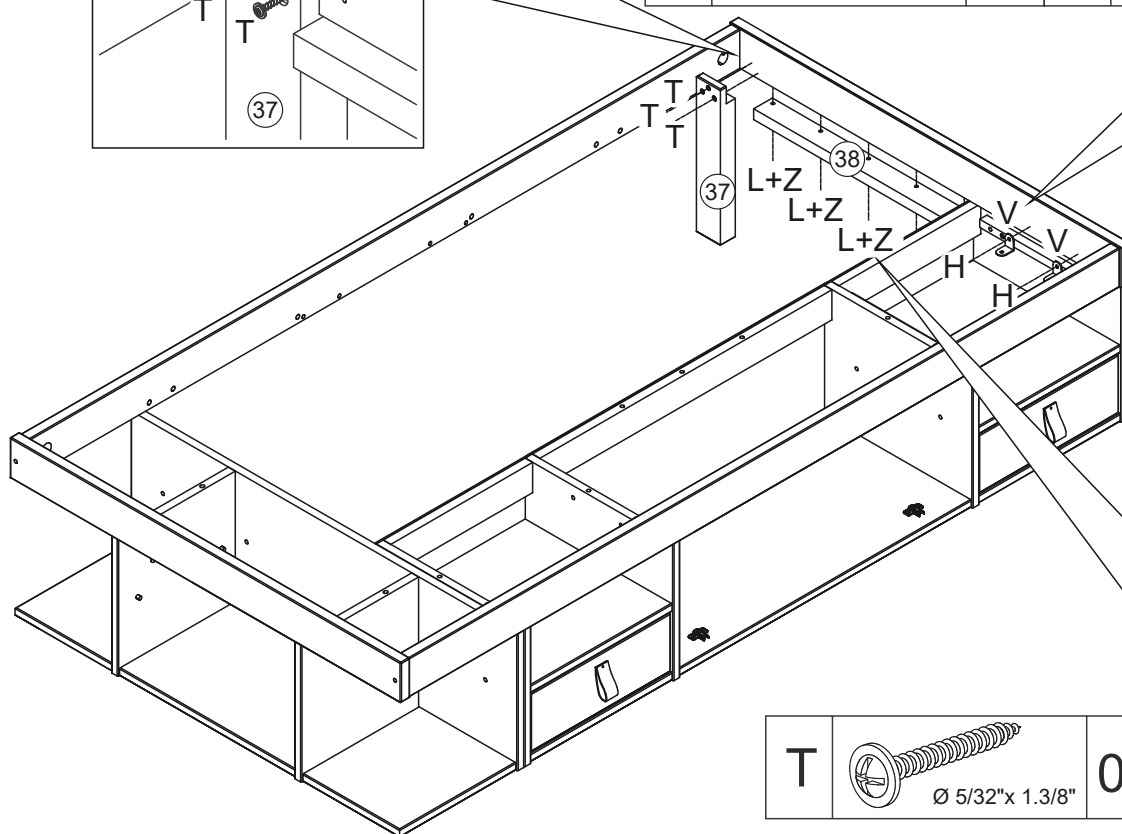


T		03
---	--	----

Ø 5/32" x 1.3/8"

29

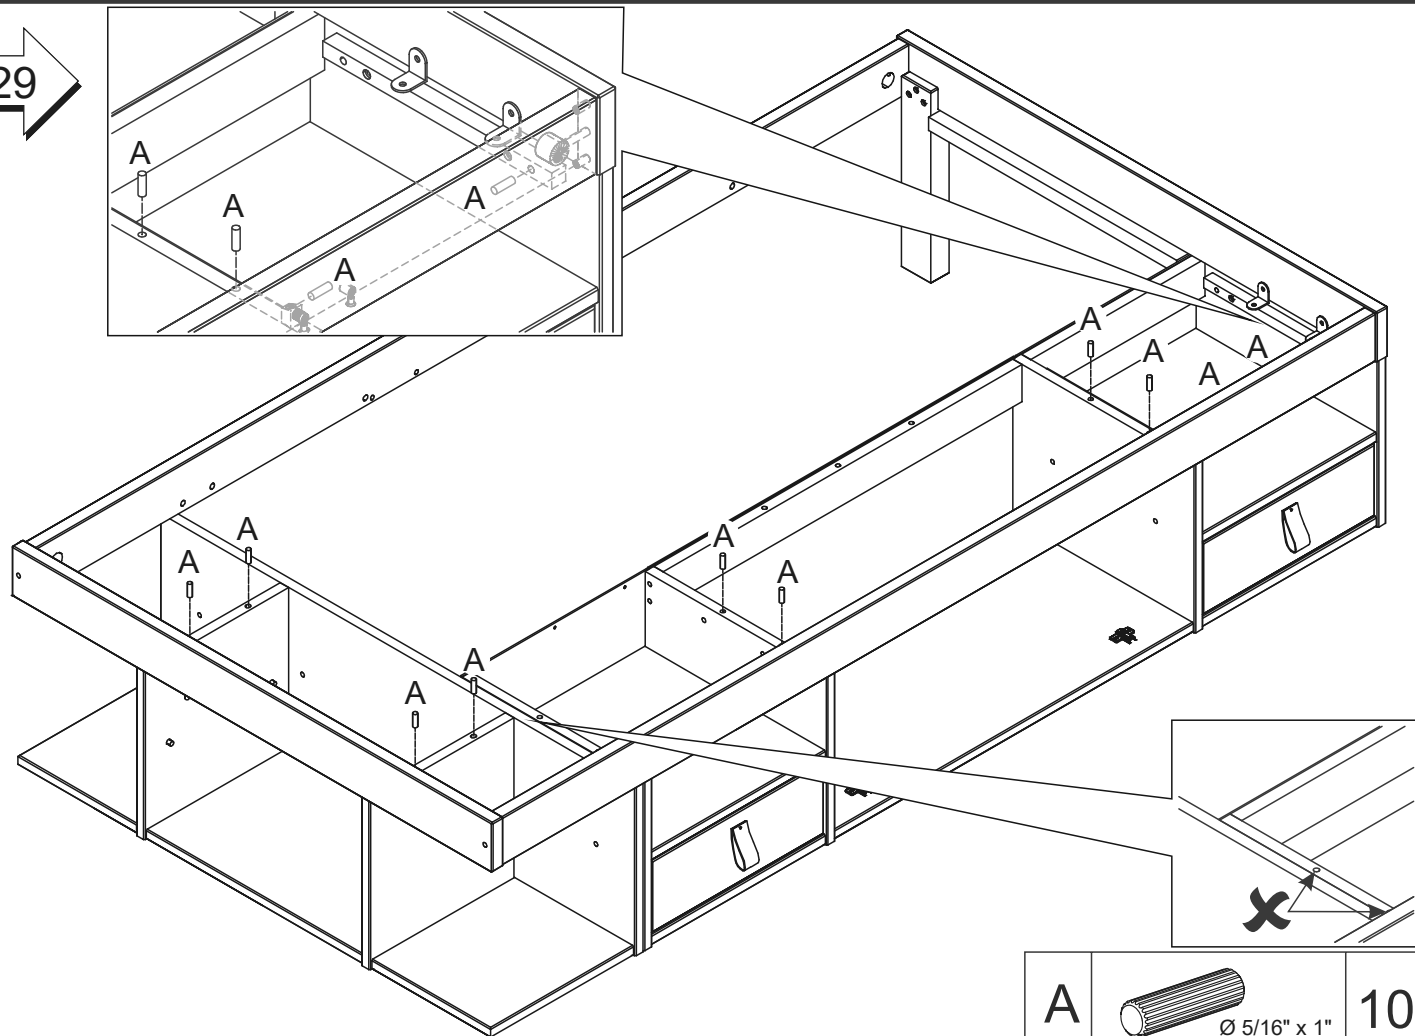


A



Ø 5/16" x 1"

10

30

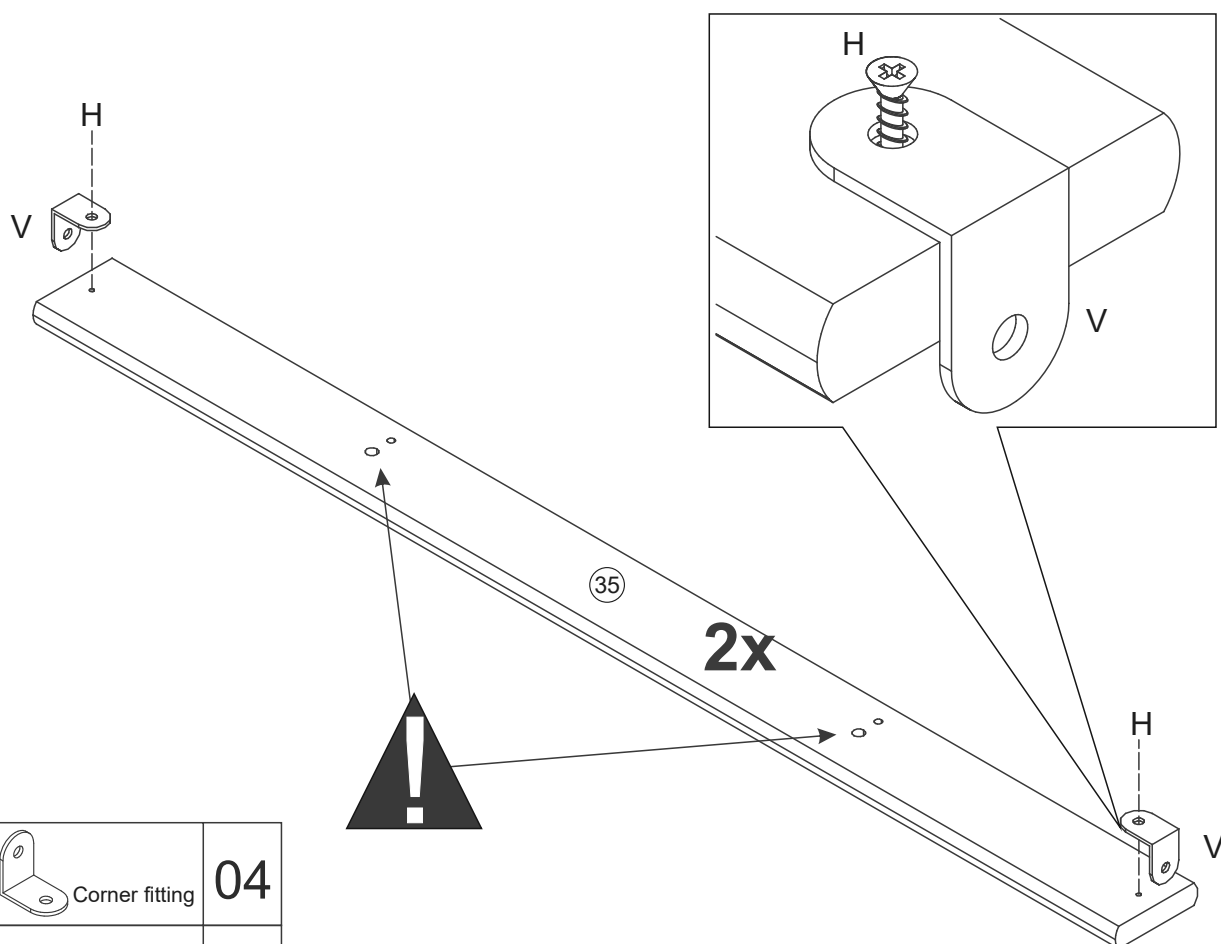

2x

V



Corner fitting

04


H




Ø 1/8" x 9/16"

04


31

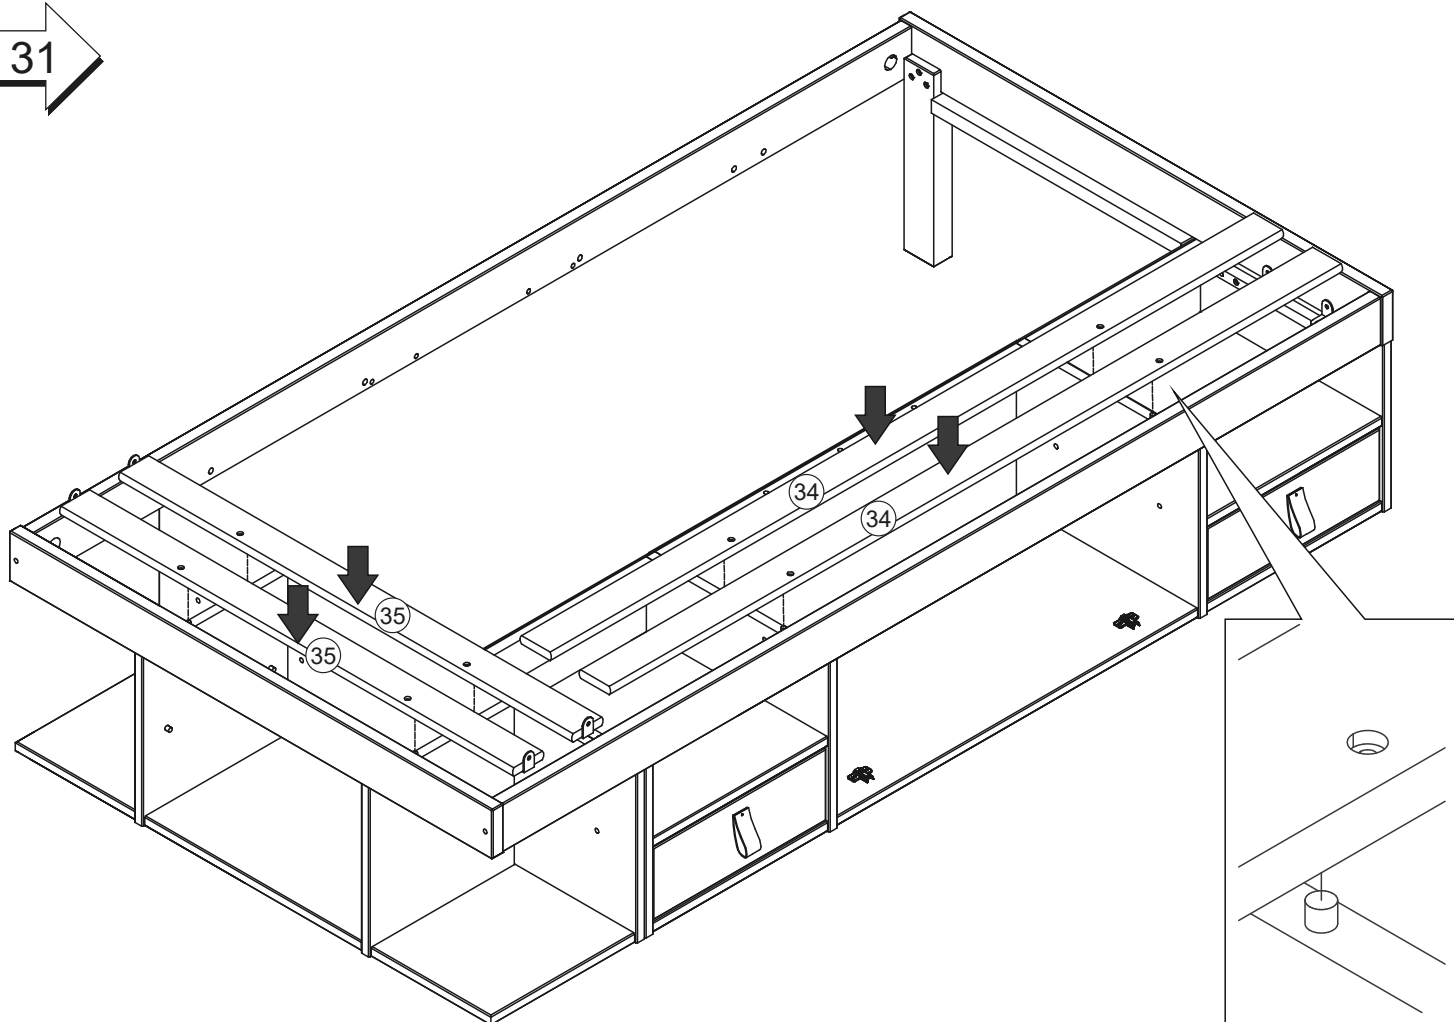

32

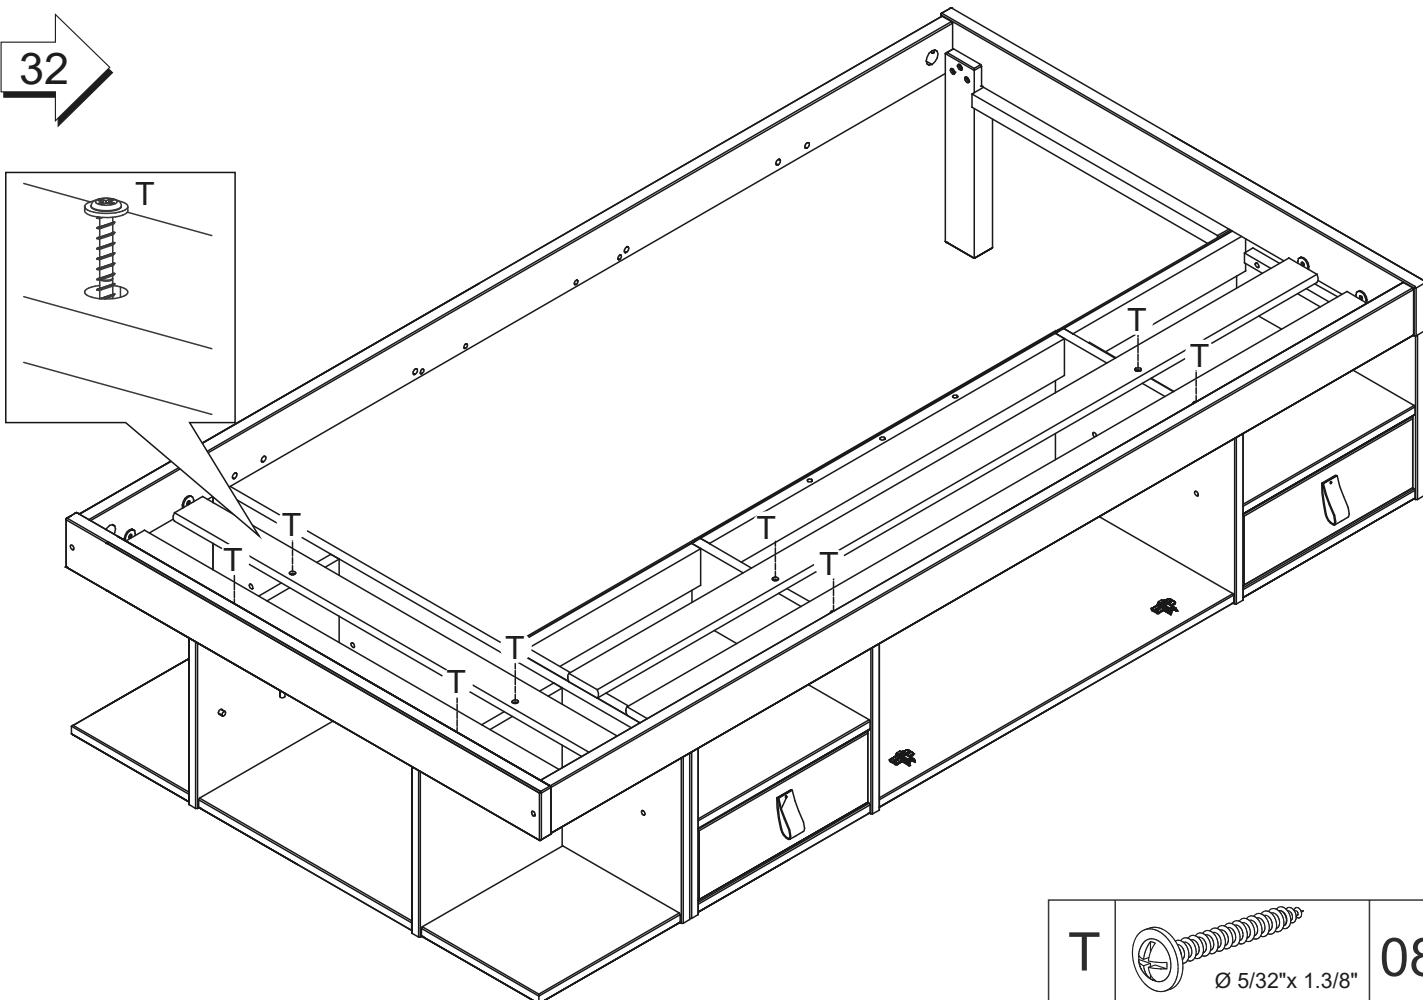


T




Ø 5/32" x 1.3/8"

08

35

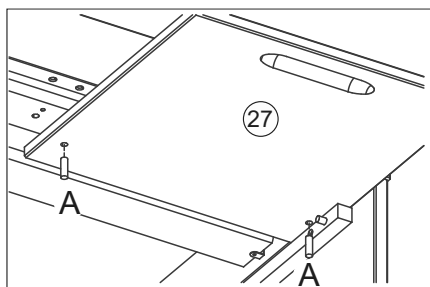


A




Ø 5/16" x 1"


02

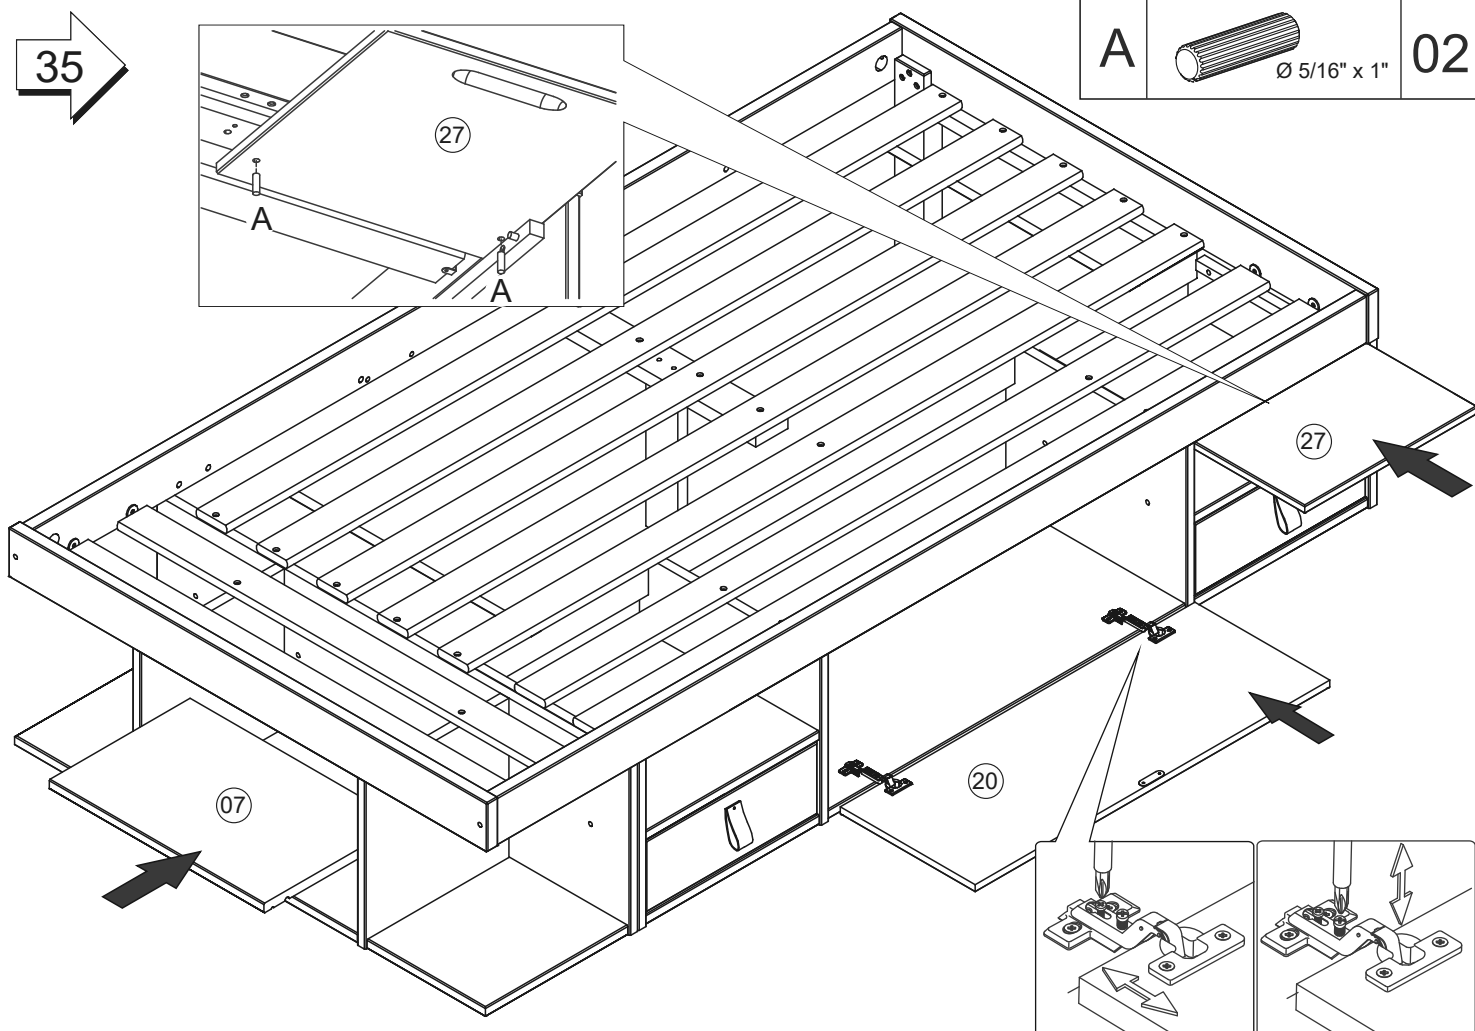


36

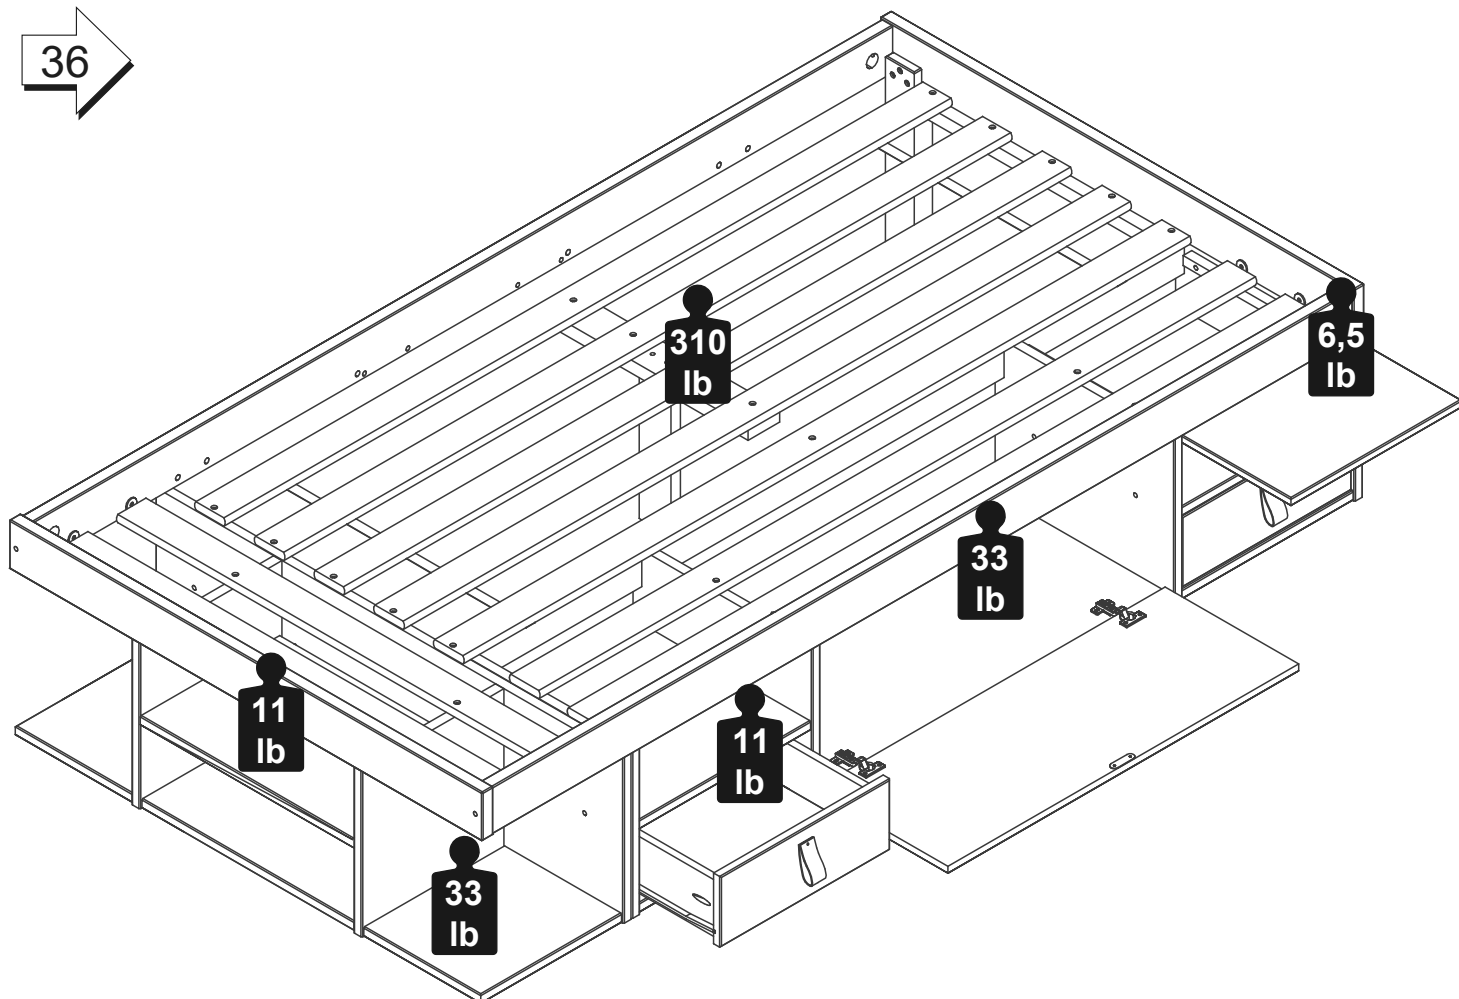



37

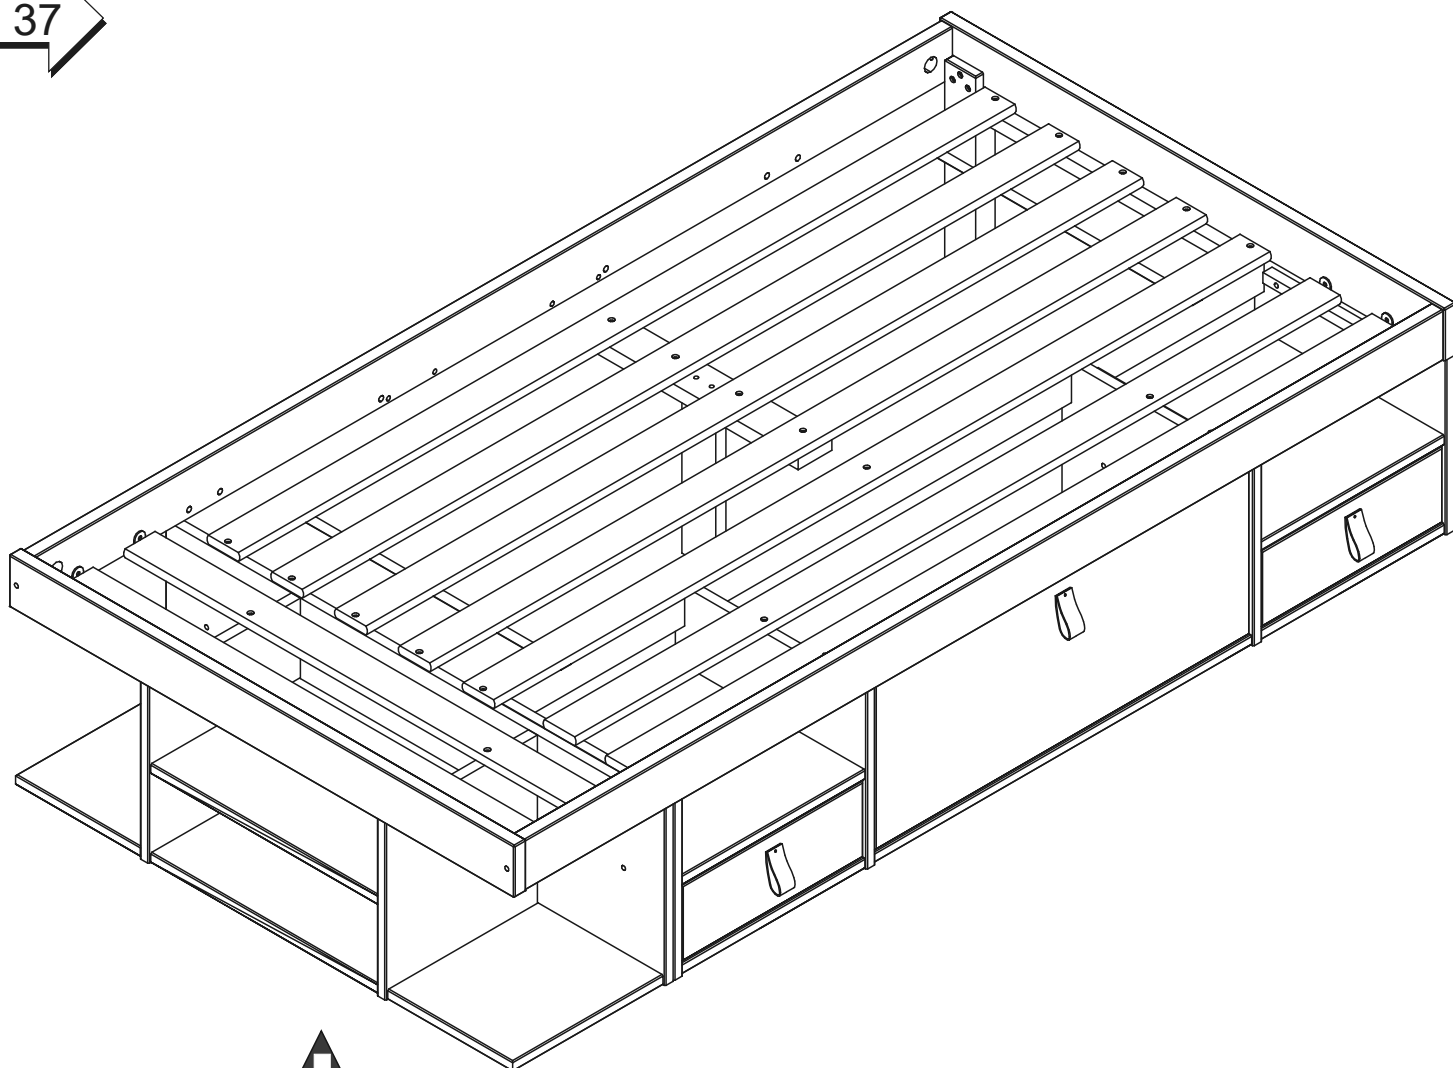

Please do not lift or pull the bed holding the bars around the slatted floor after having assembled your product.

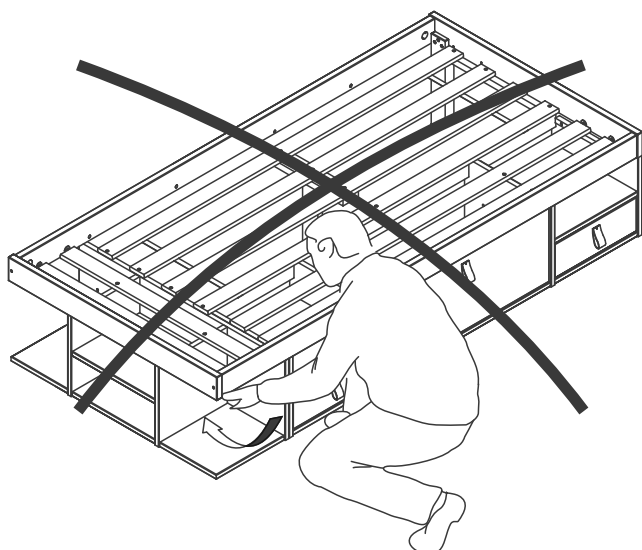

Hi there!
Have you finish the assembly of your product?
How about choosing a good place to set your MMM sticker? It's green and was send to you inside the accessories bag.

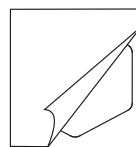

Please remove the adhesive label.

