
10 x 13 FT


HWG - 056-2

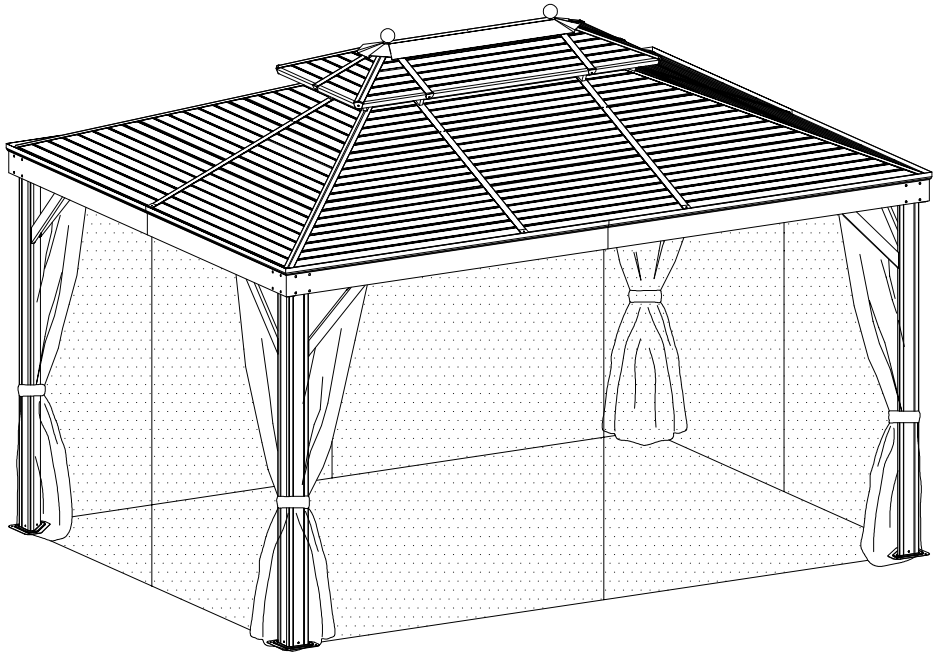


At least need 3person work together


REQUIRED TOOLS






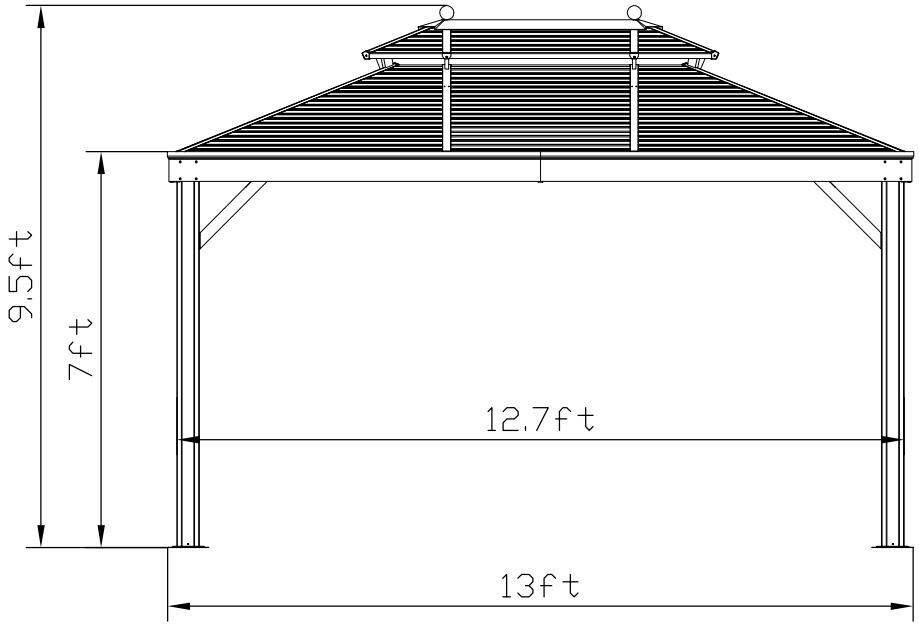



9.5ft
7ft
12.7ft
13ft

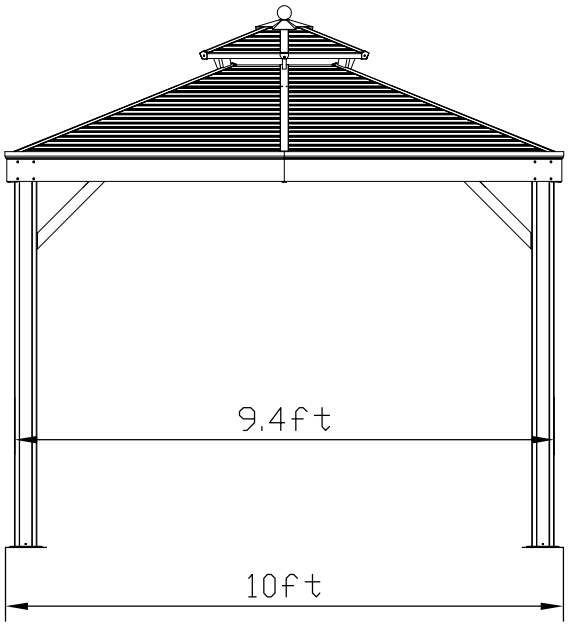
9.4ft
10ft

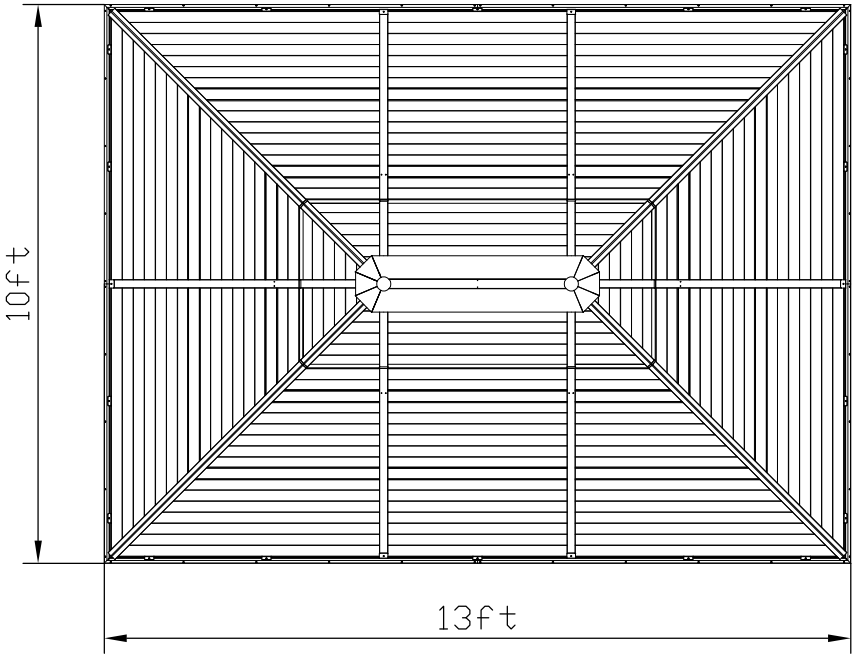
10ft
13ft




A x4




B x2



B1 x2



B2 x2



B3 x2



C x2



C1 x2



C2 x2



C3 x2



D x2



D1 x2




D2 x2



D3 x2


































E x4




E1 x6

F x8

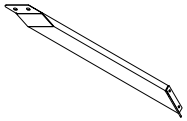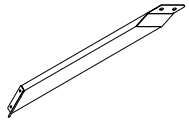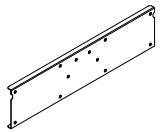 G x2	 G1 x4	 G2 x4	G3 x2
 G4 x2	 H x4	 H1 x4	 H2 x4
 J x4	 K x4	 L x1	 M x1
 N x8	 N1 x6	 N2 x6	 N3 x4
 N4 x8	 P x4	 Q1 x4	 Q2 x4
 Q x4	 Q3 x4	 Q4 x4	 R x2

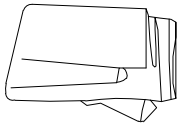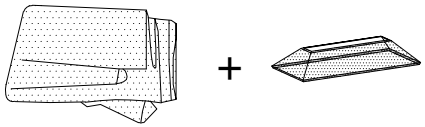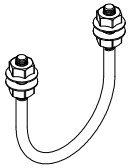
 S x2	 S1 x4	 S2 x4	 T x4
 T1 x4+x1	 U x112	 V x4	 W x18
 W1 x18	 Y x40	 Y1 x12	 Za x2
 1 x251 M6x15	 2 x32	 3 x12 M5x12	 4 x14 ST4.8x12
 5 x2	 6 x18 M5x6	 7 x56 ST4x8	 9 x12
 10 x1	 x1  x1		

STEP 1

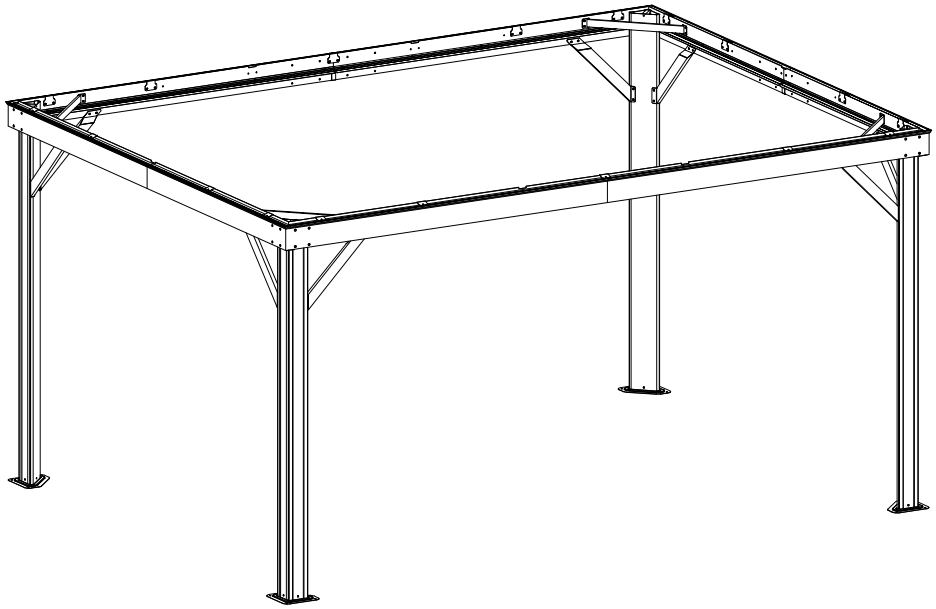


Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.


<1>

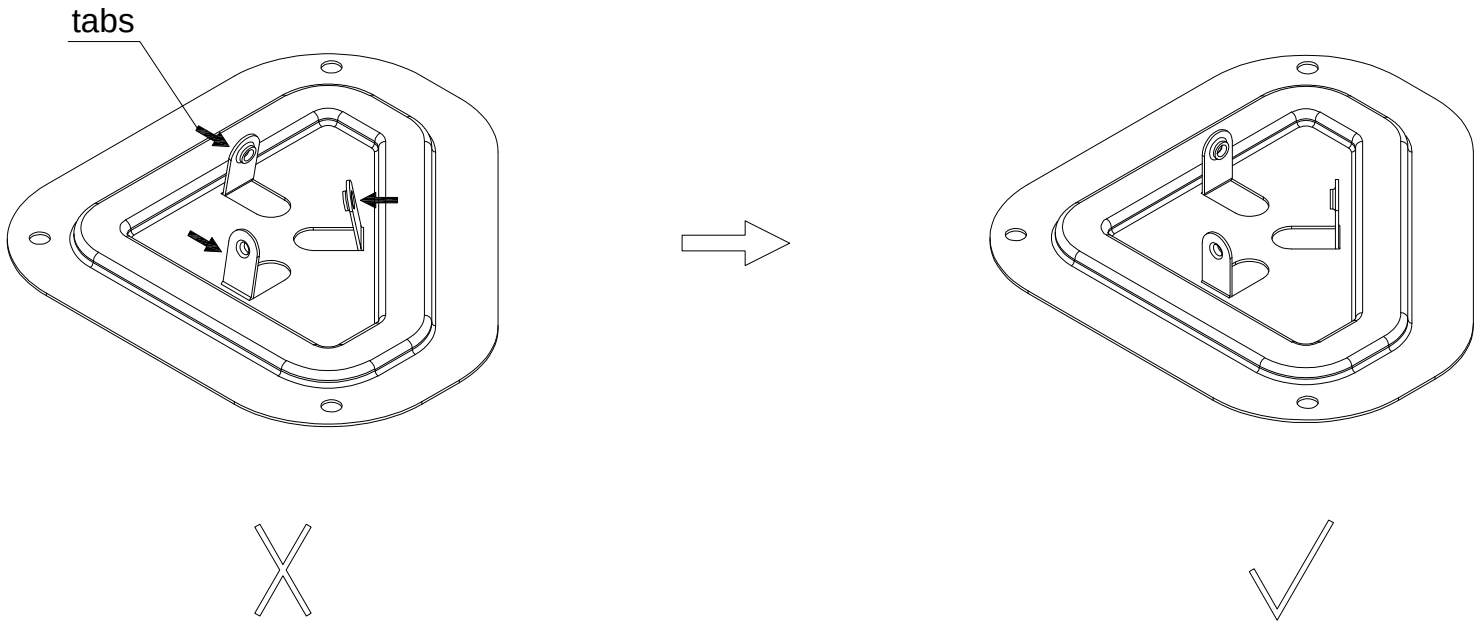

Tips: If the tabs on the base are crooked,you can use pliers to straighten them for easy screw installation



A x4




J x4






M6x15


1 x12

<2>

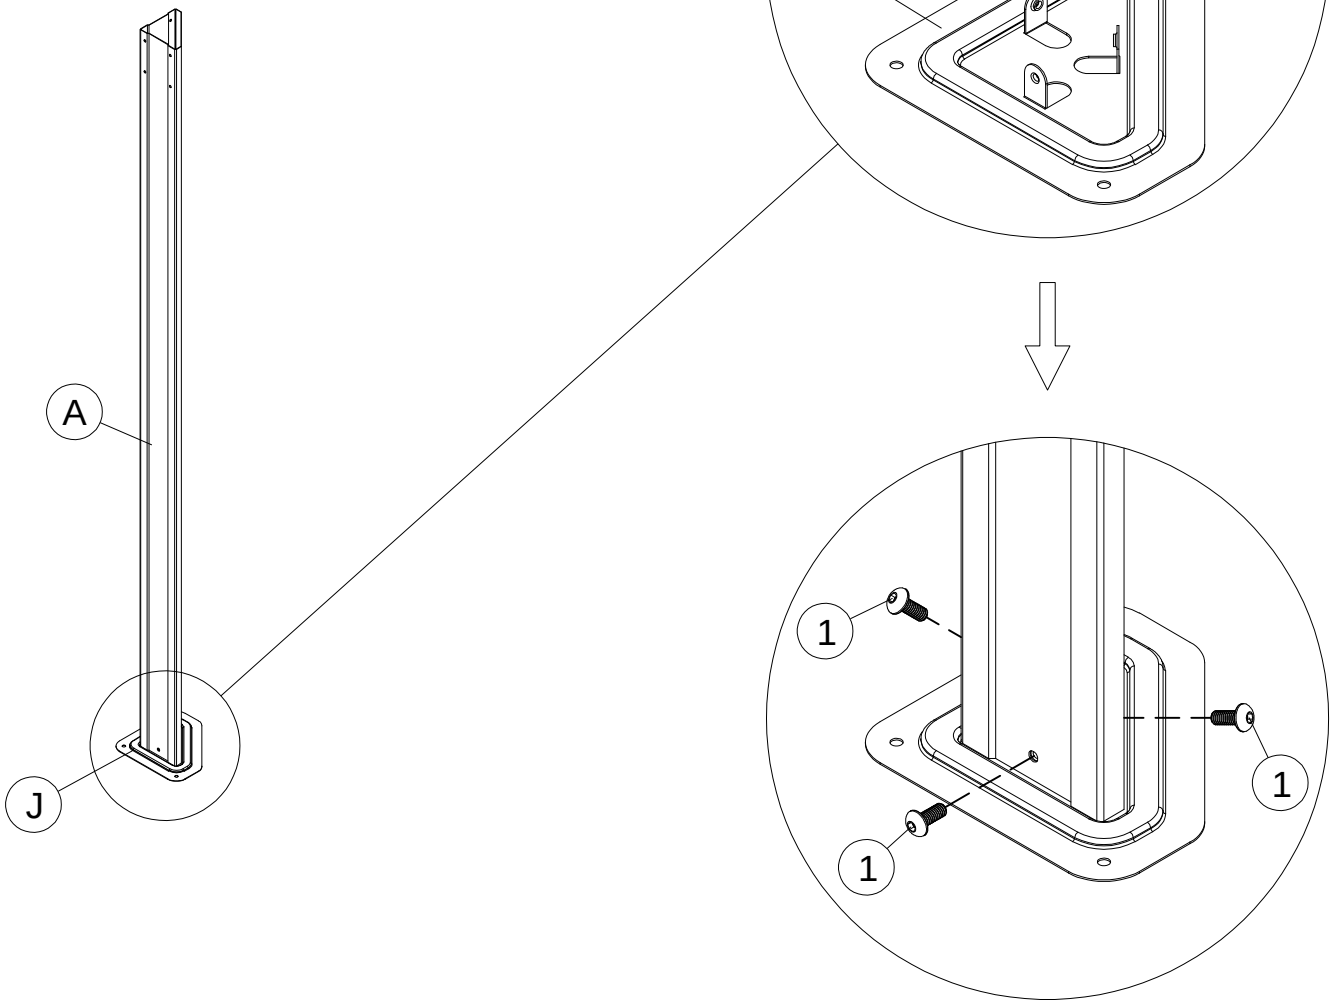

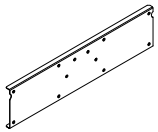
			 M6x15	 M5x12
B x2	B1 x2	P x2	1 x16	3 x4


<3>



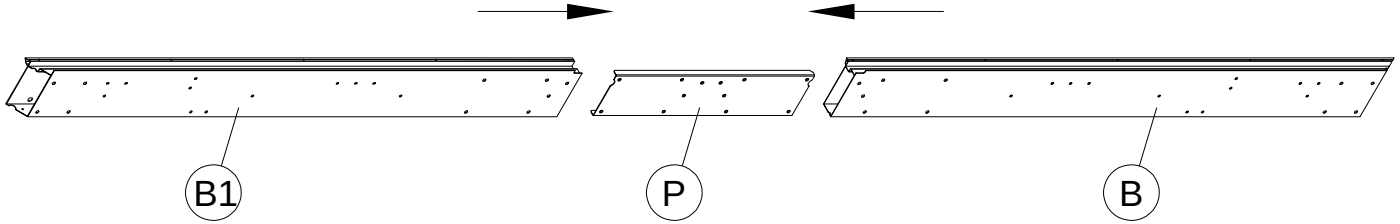


Tip 1: Use #1 screws to line up the holes in beam B1 and connector P, then connect beam B.
Tip 2: When installing the screws, just hold them roughly in place and then tighten all the screws when you have the entire part connection aligned.


<4>

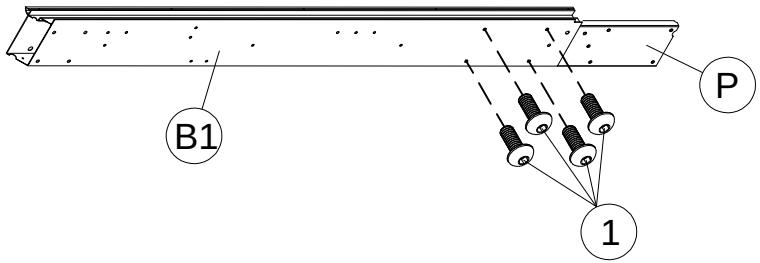

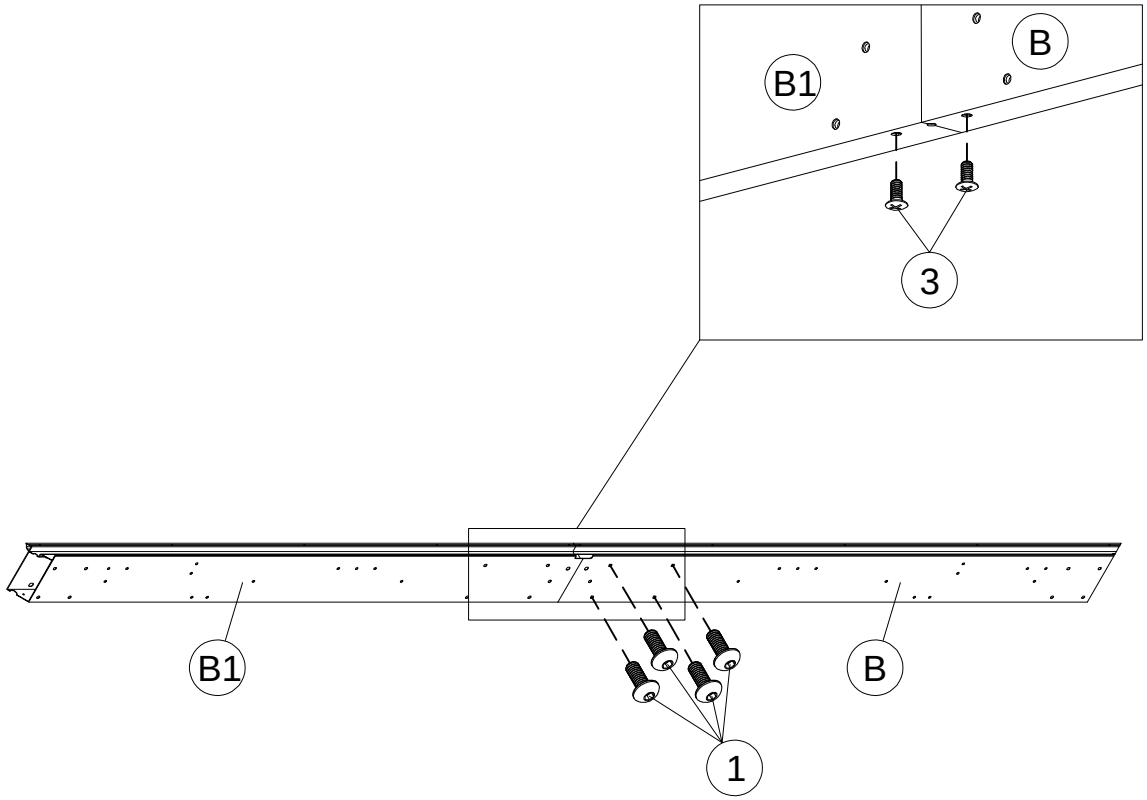

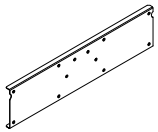
				
B2 x2	B3 x2	P x2	M6x15 1 x16	M5x12 3 x4


<5>

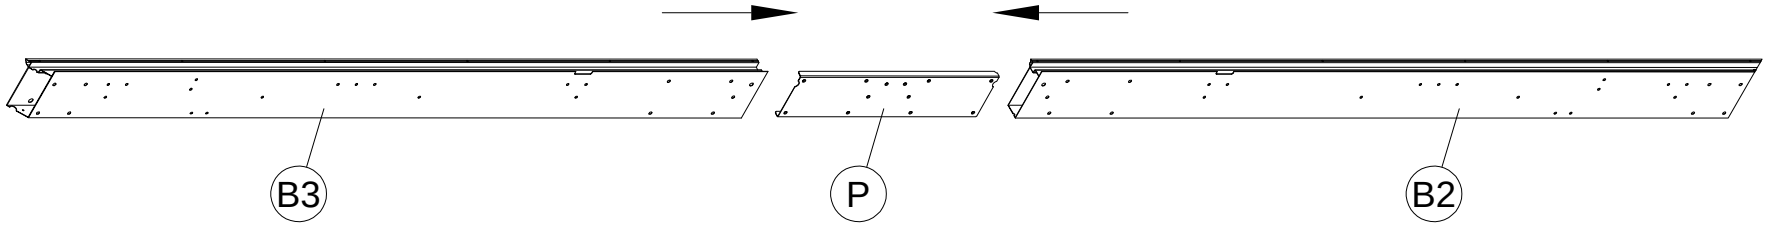


Tip 1: Use #1 screws to line up the holes in beam B3 and connector P, then connect beam B2.
Tip 2: When installing the screws, just hold them roughly in place and then tighten all the screws when you have the entire part connection aligned.

<6>

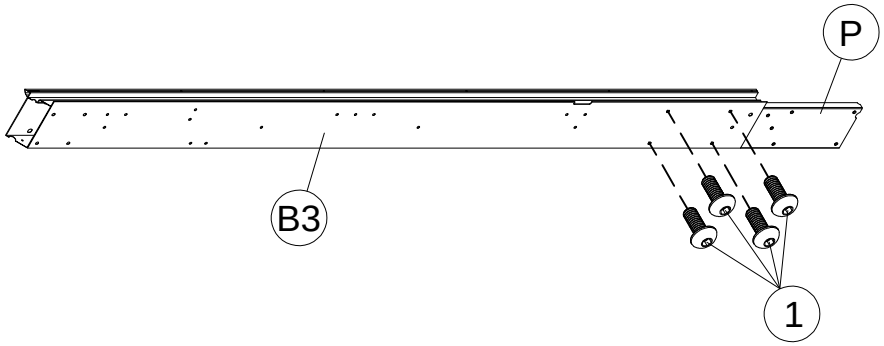


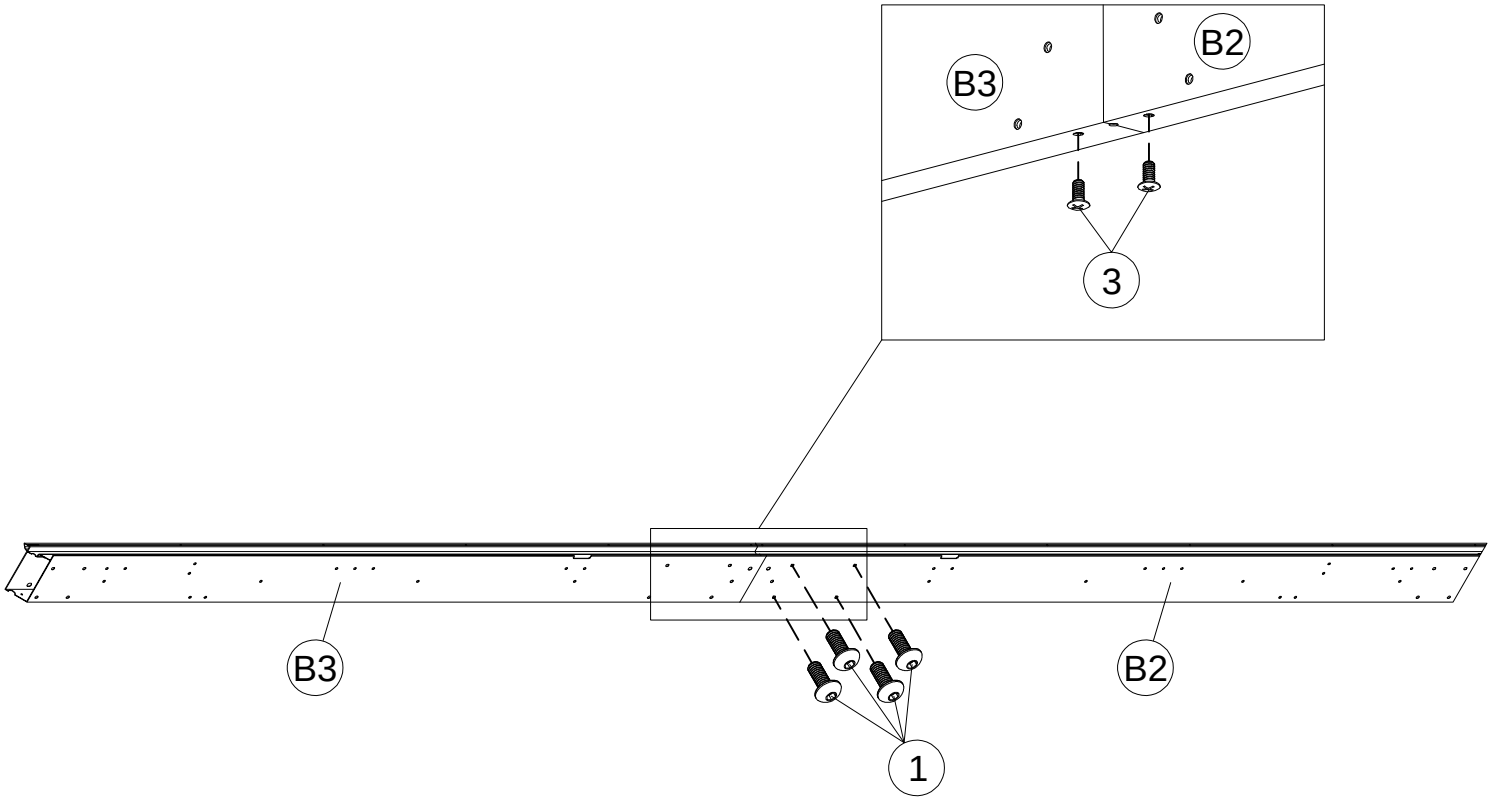





2 x32

<7>

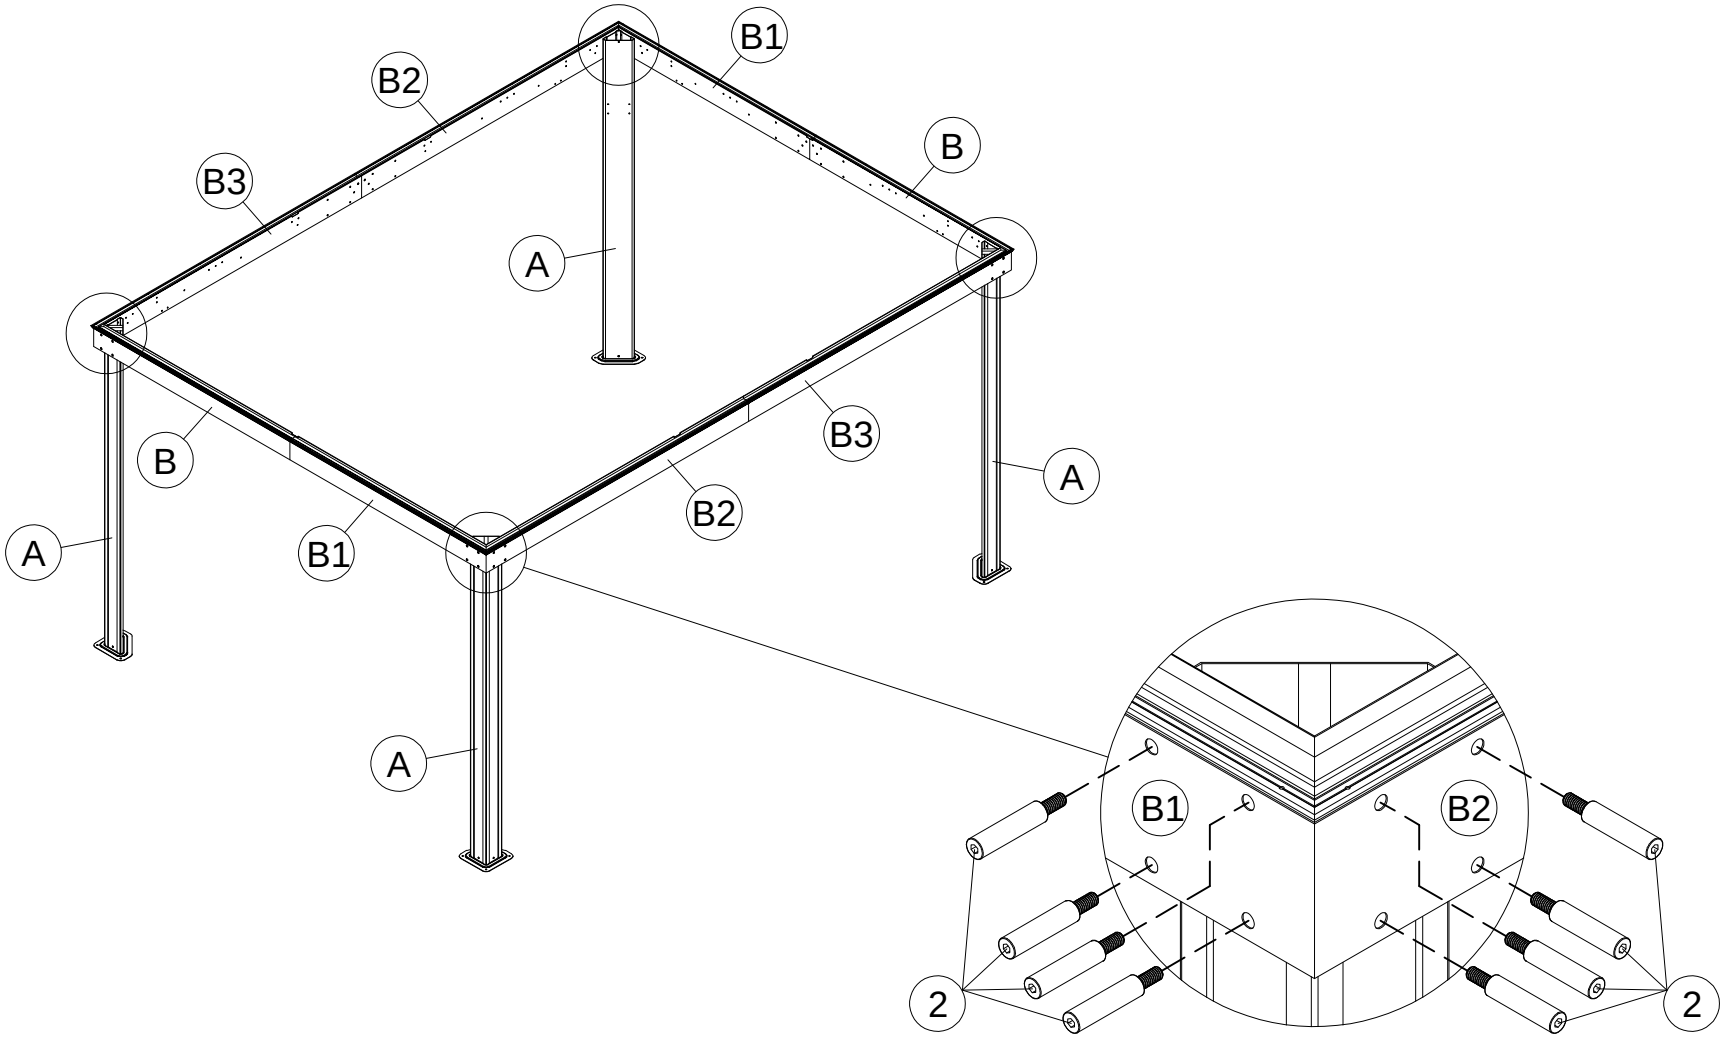

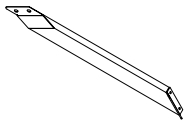

H1 x4

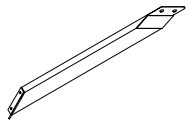


H2 x4





M6x15

1 x32

<8>

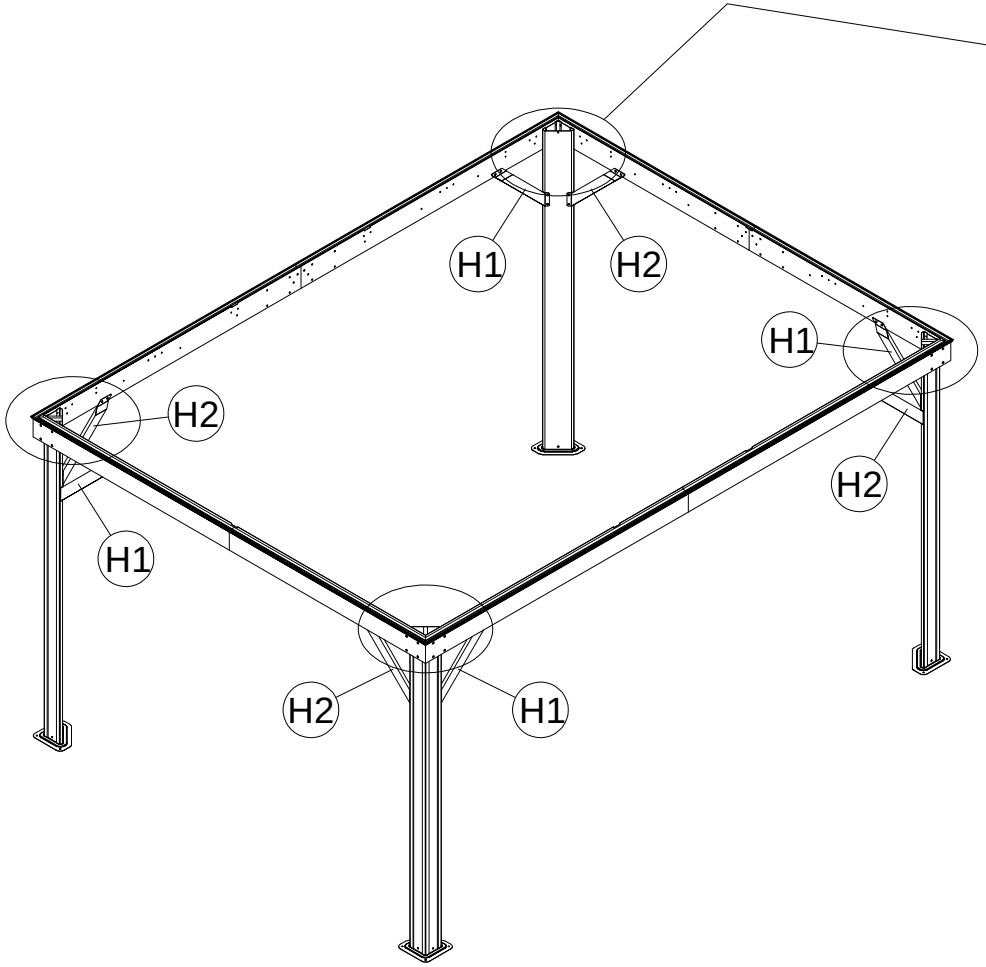

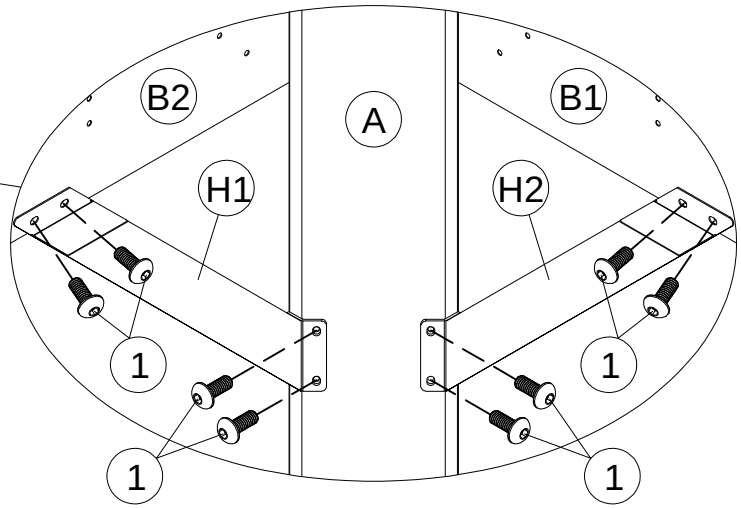




W1 x18





M6x15

1 x36

<9>

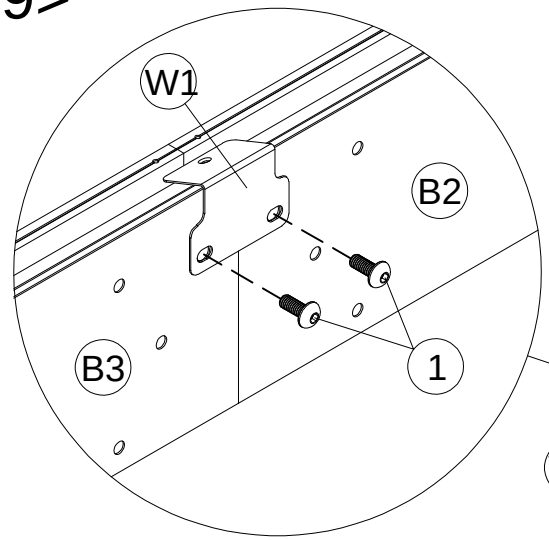


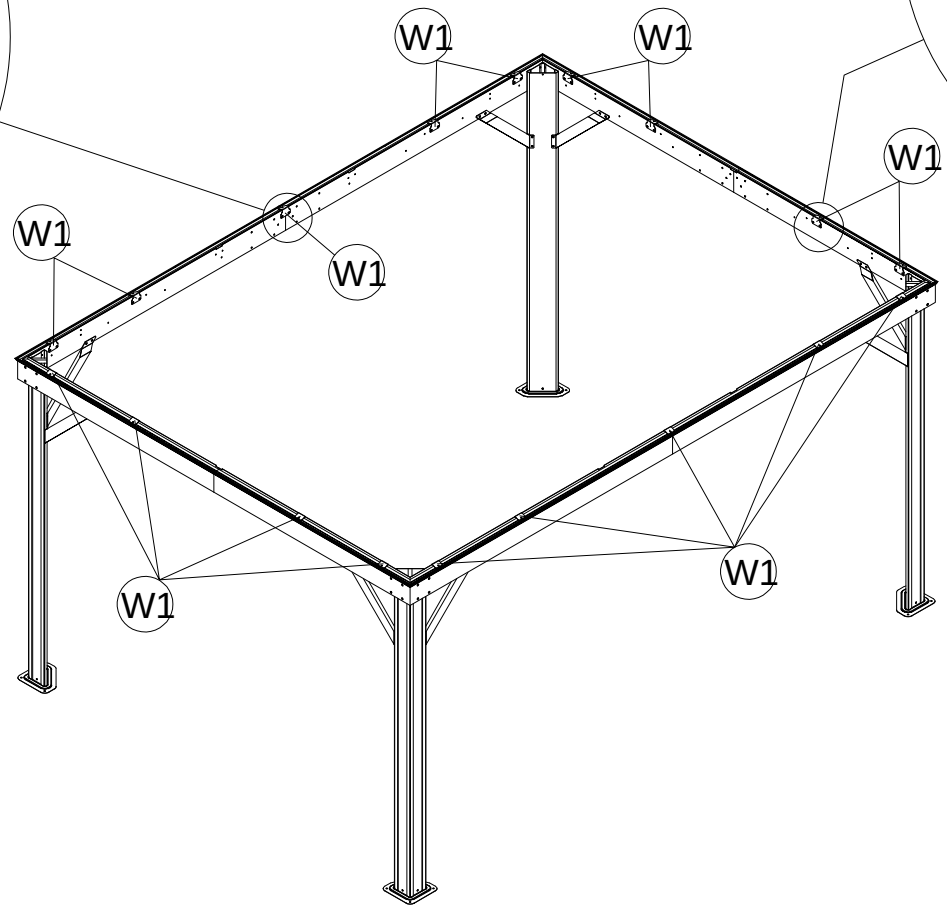


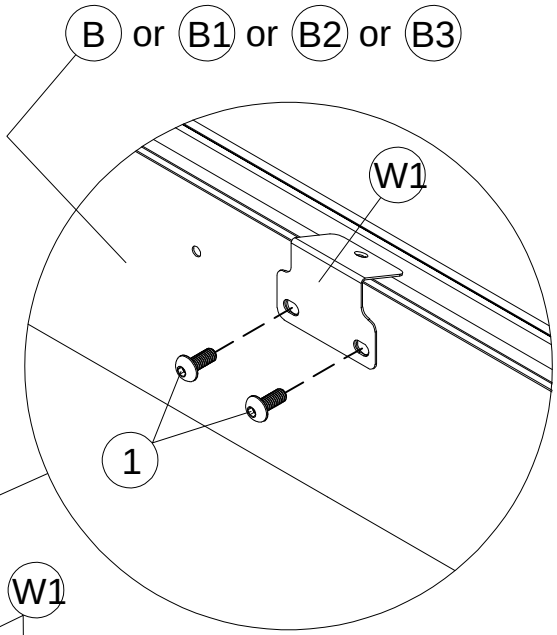


				M6x15
C x2	C1 x2	C2 x2	C3 x2	1 x36


<10>

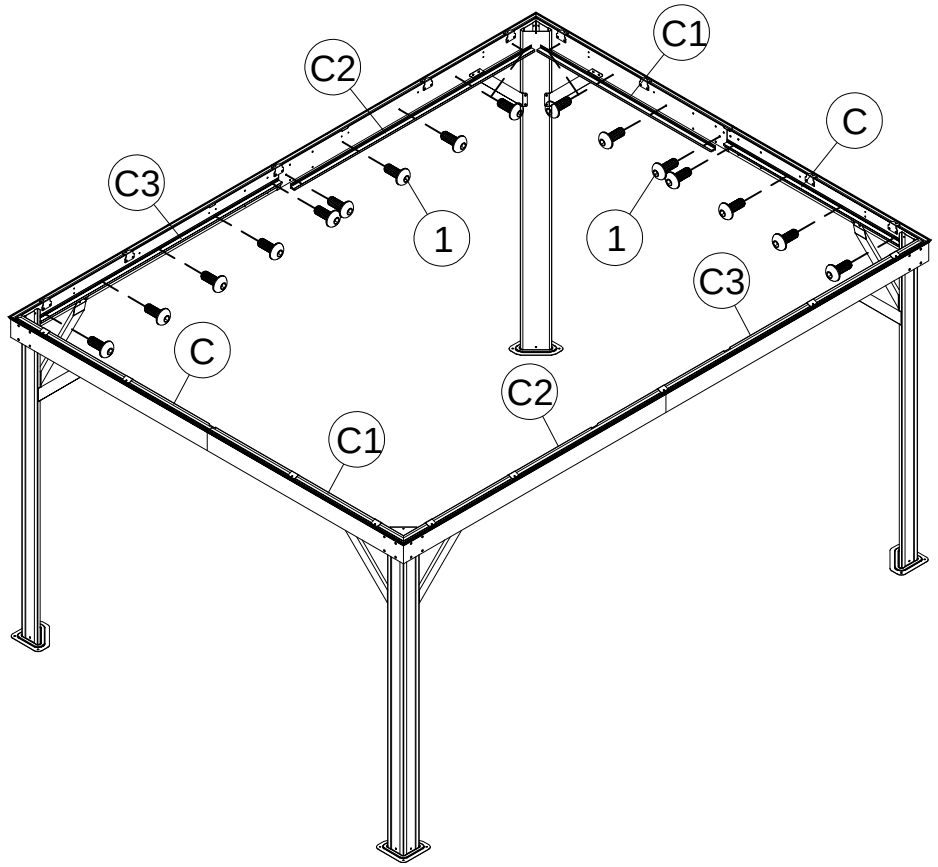


		 M5x12
U x112	V x4	3 x4

<11>

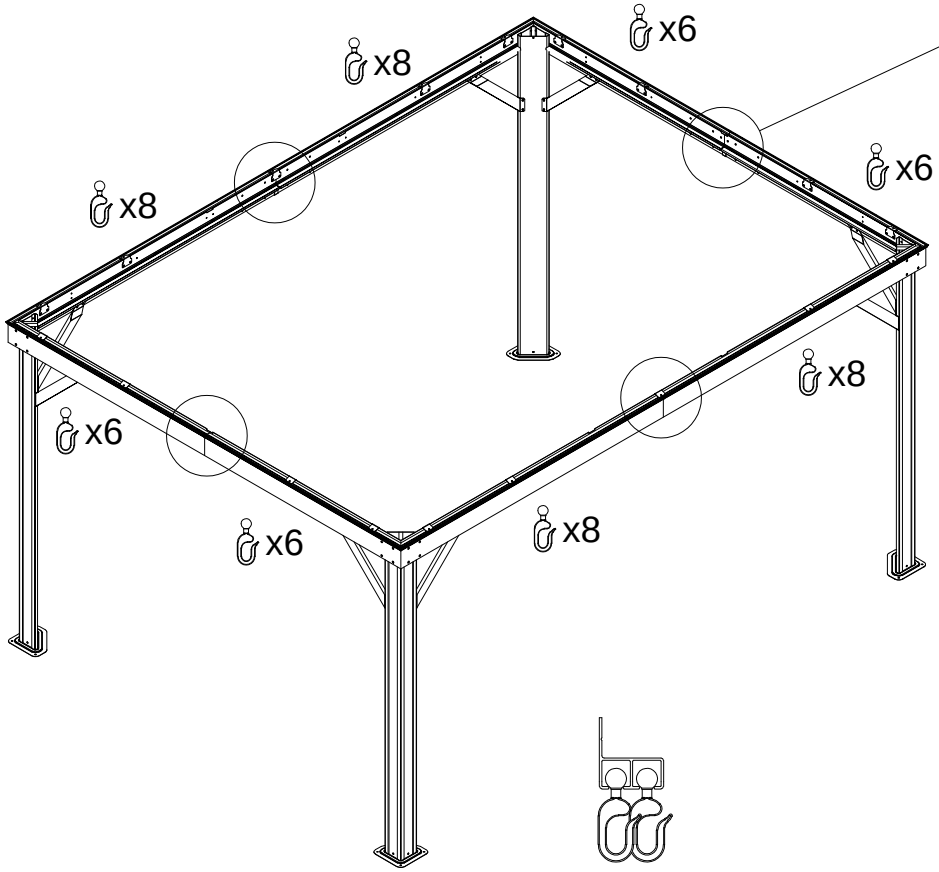

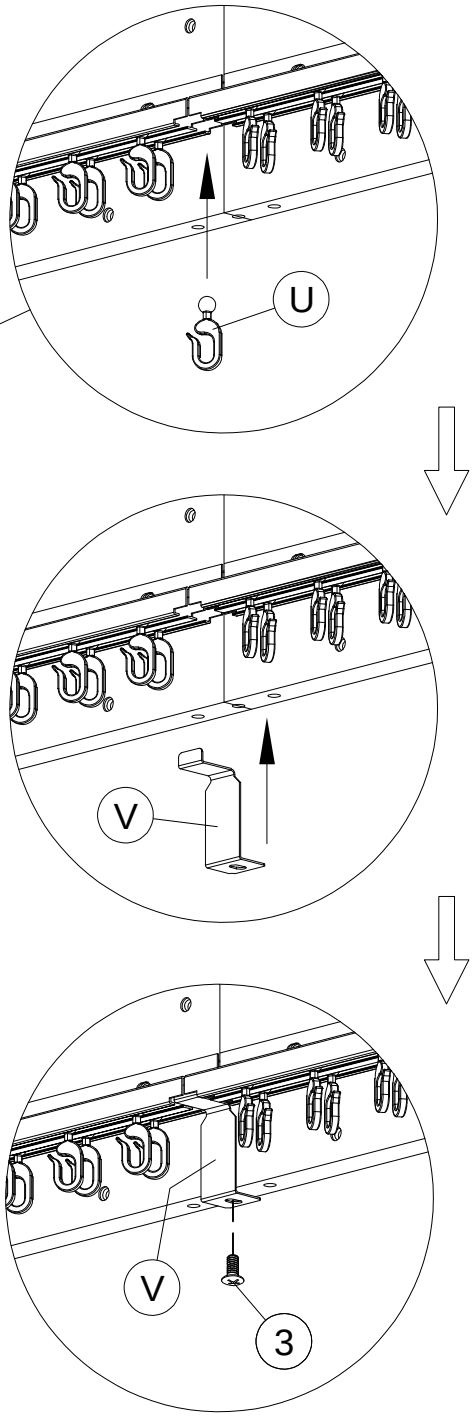




H x4




M6x15


1 x16

<12>

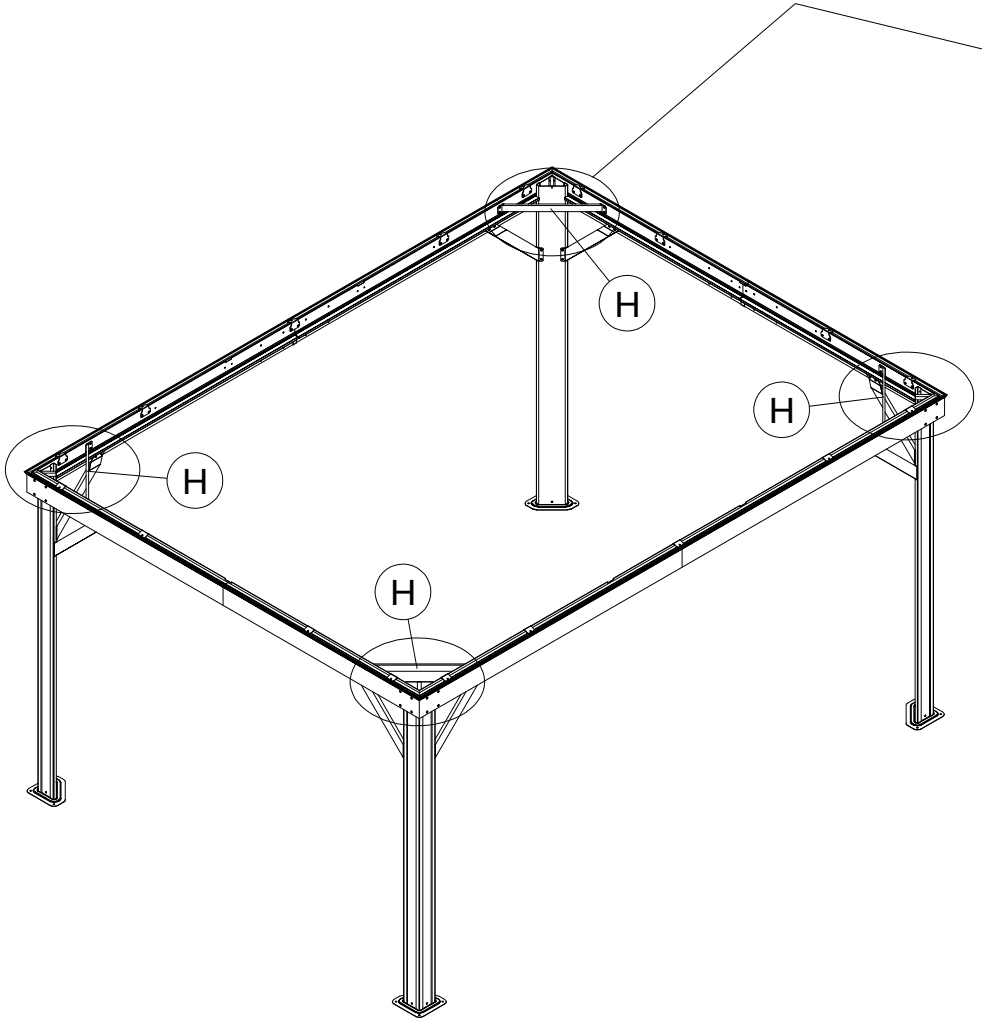

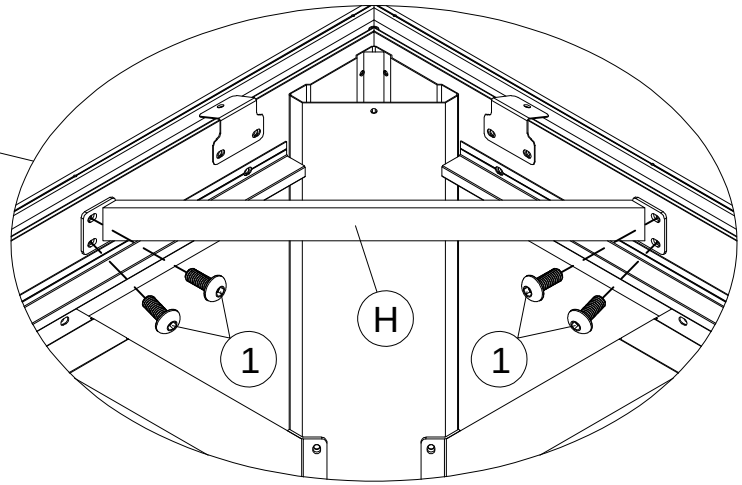


STEP 2

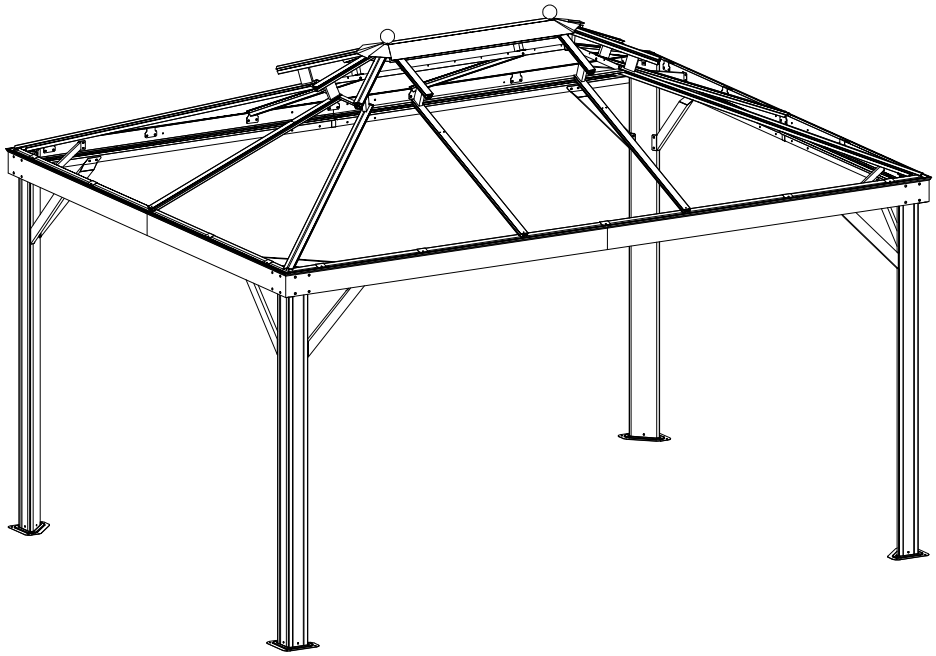

Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.




L x1



10 x1

<13>

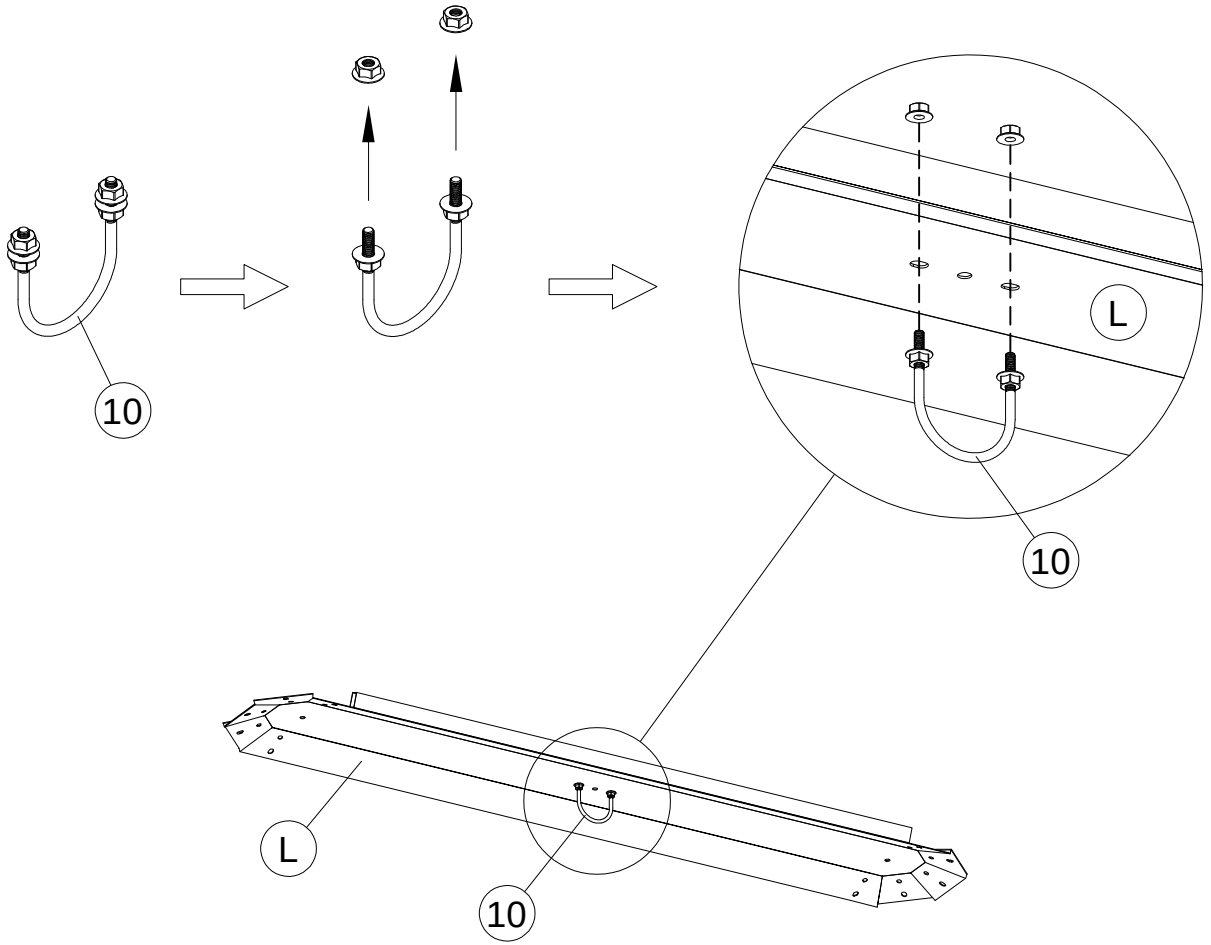




E x4



M6x15


1 x12


<14>

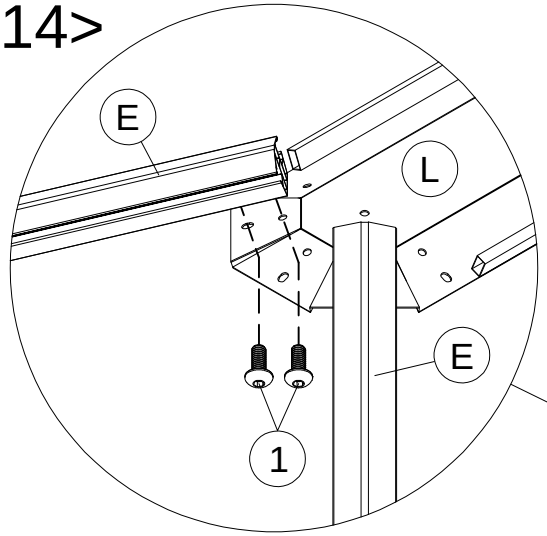


Note:


1. Let one person stand on the ladder to lift " L " and hold,and let others fasten the screws connecting both ends of " E ".
2. Please do not let go of holding " L " until all the " E " screws are installed.

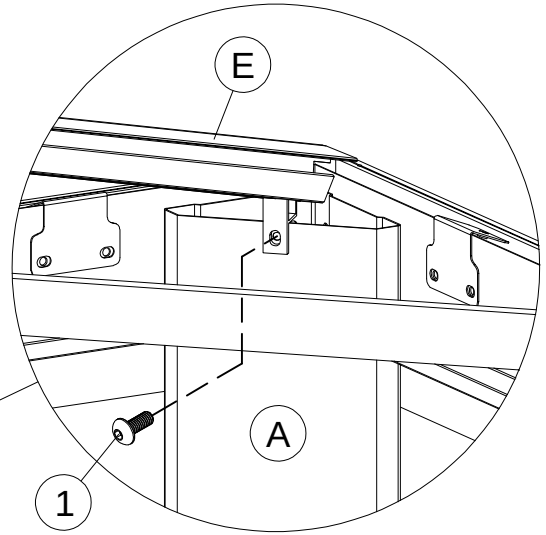

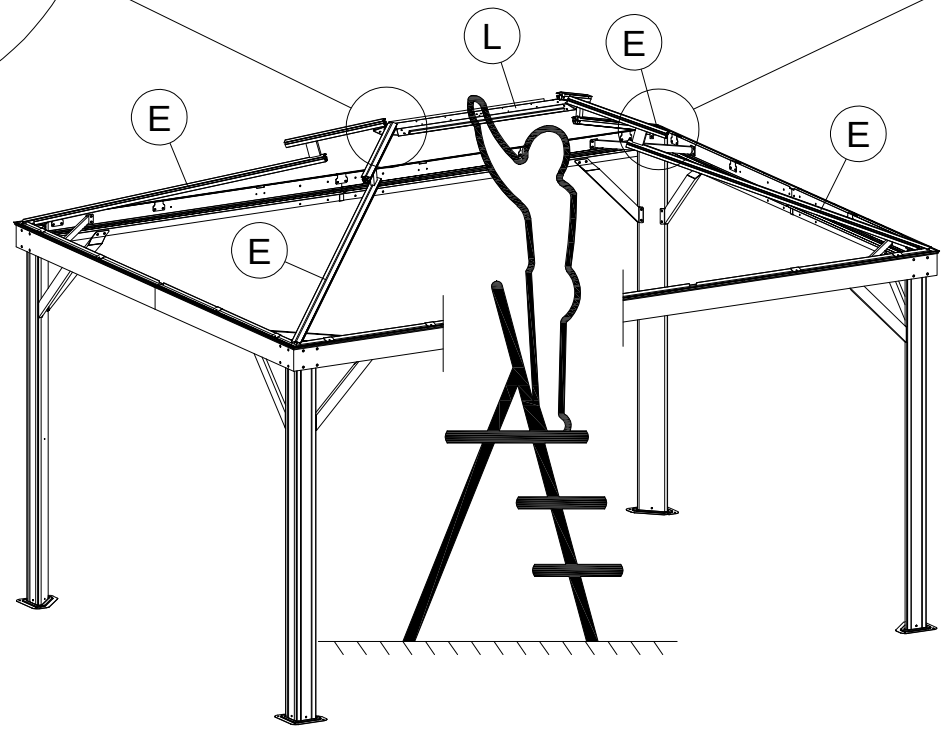

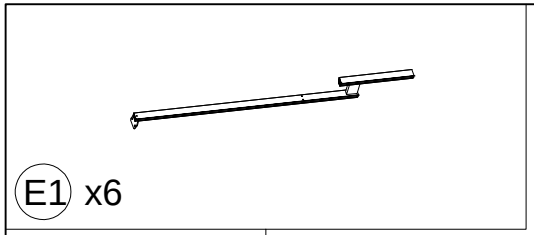


E1 x6

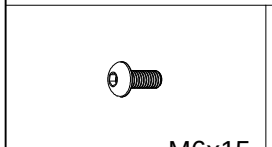


M6x15


1 x24


<15>

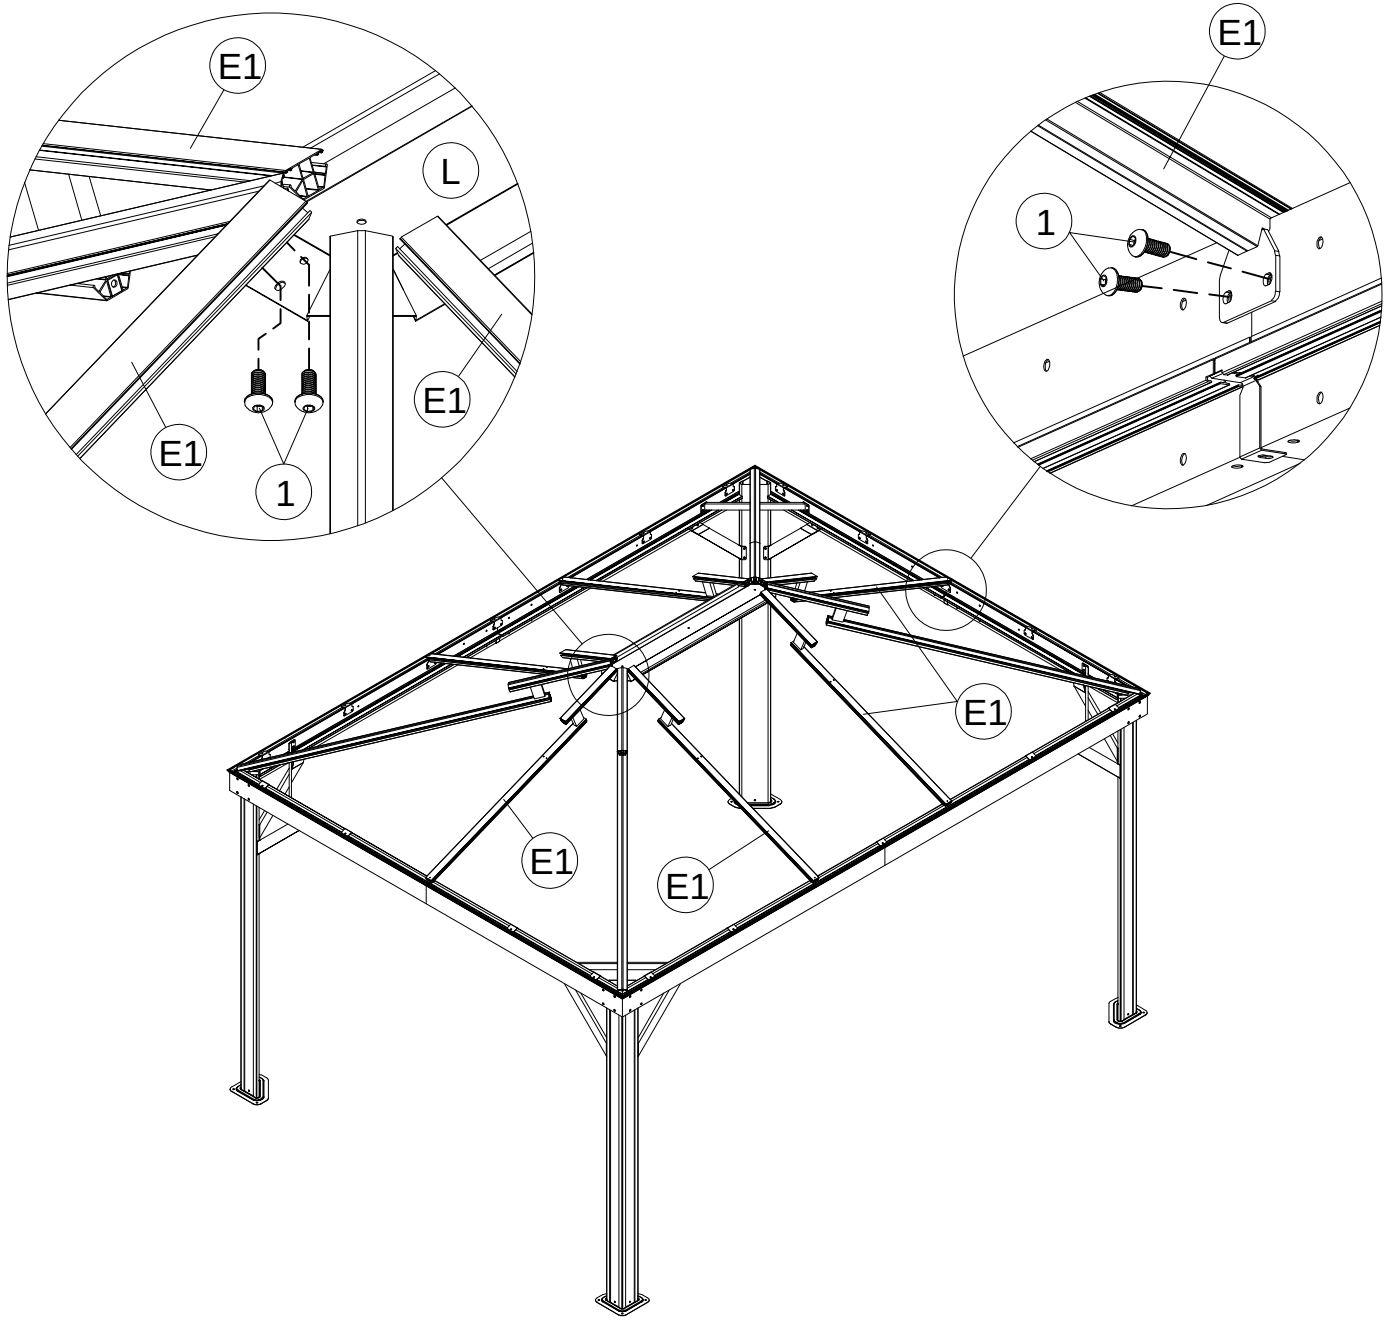



 M x1	 Za x2	 M6x15 1 x3	 5 x2

<16>

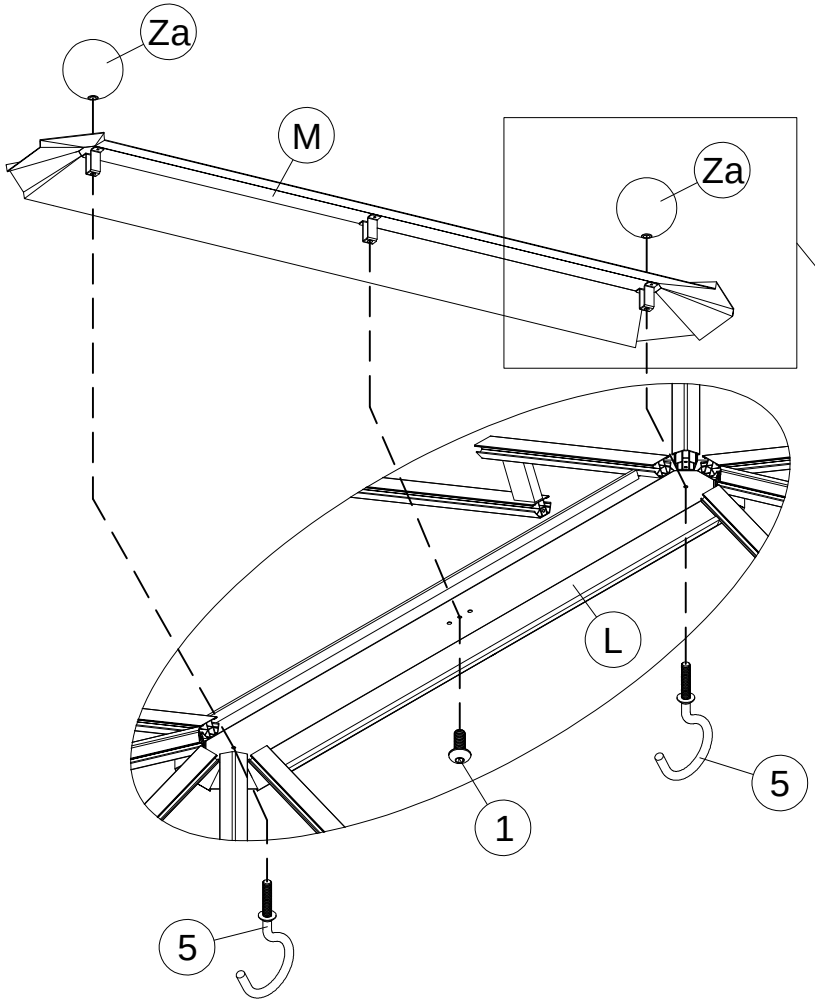


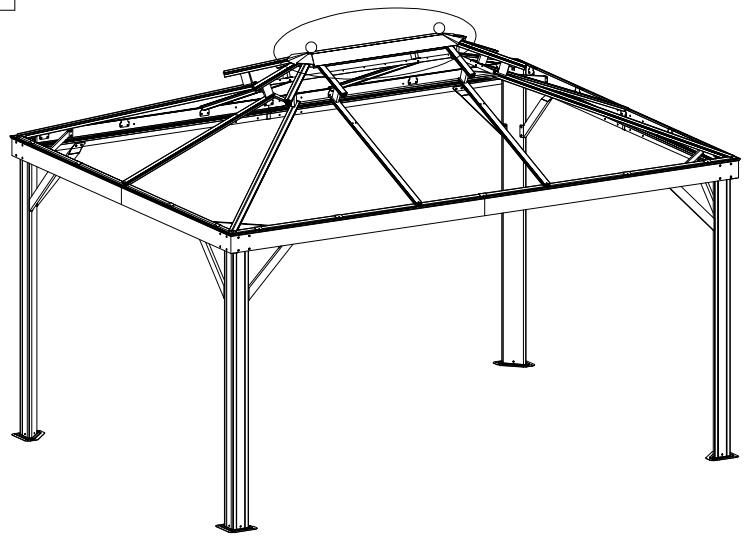


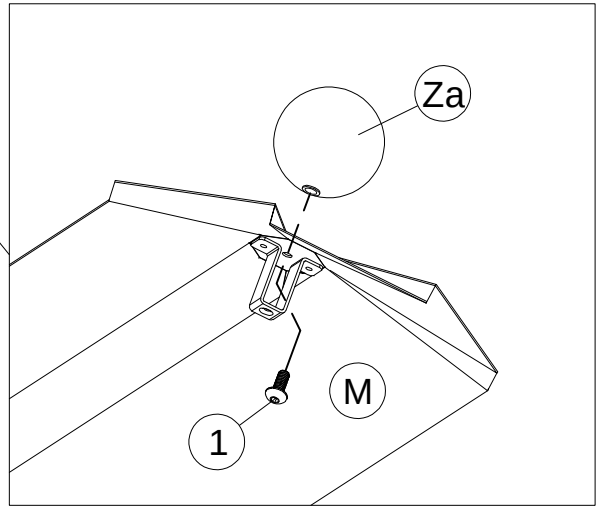



 G3 x2	 G4 x2	 N x4	 M6x15 1 x10

<17>

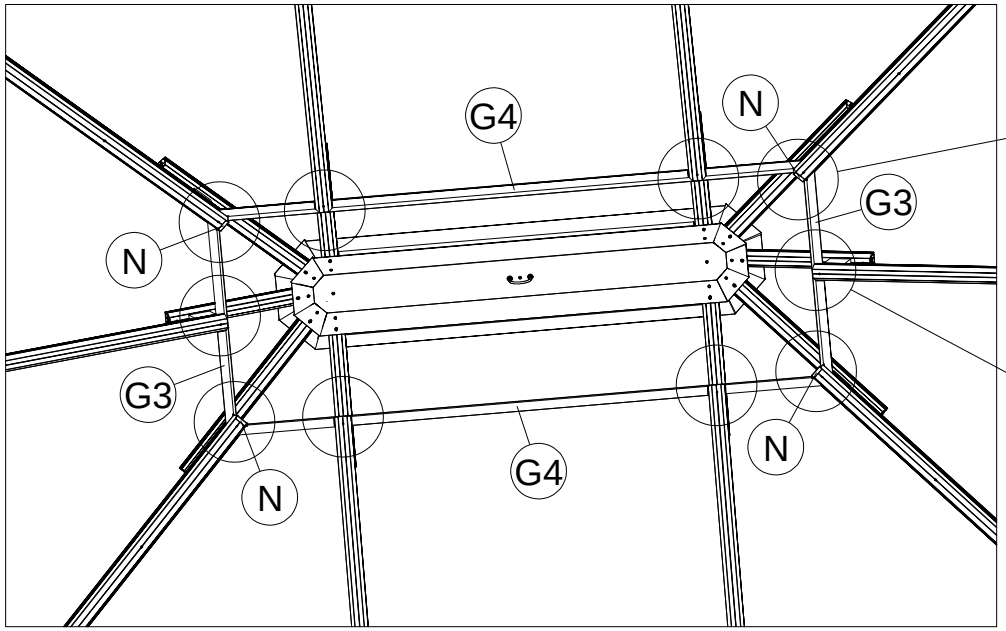


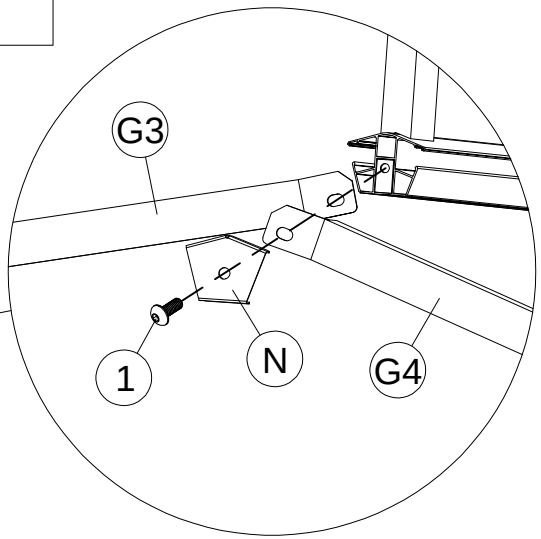

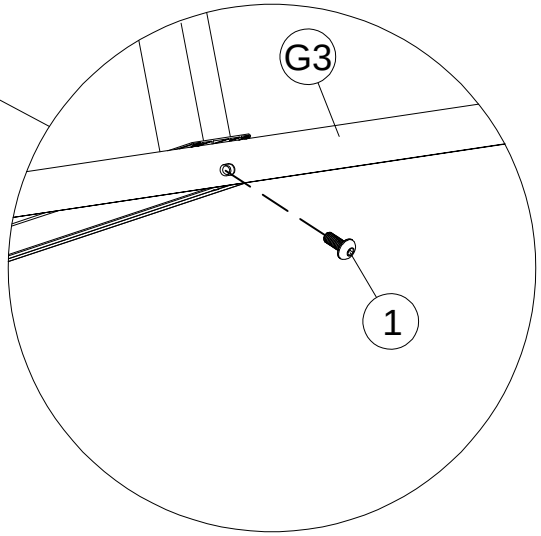


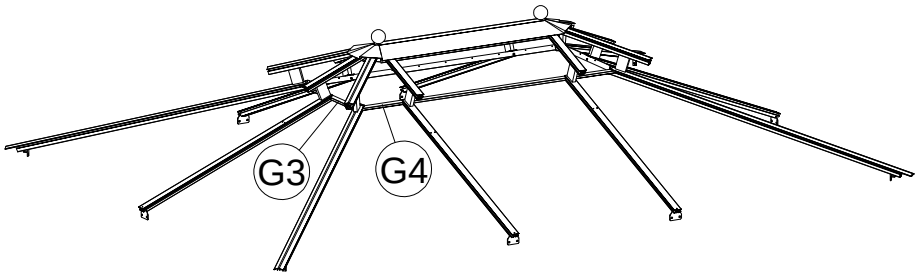


STEP 3

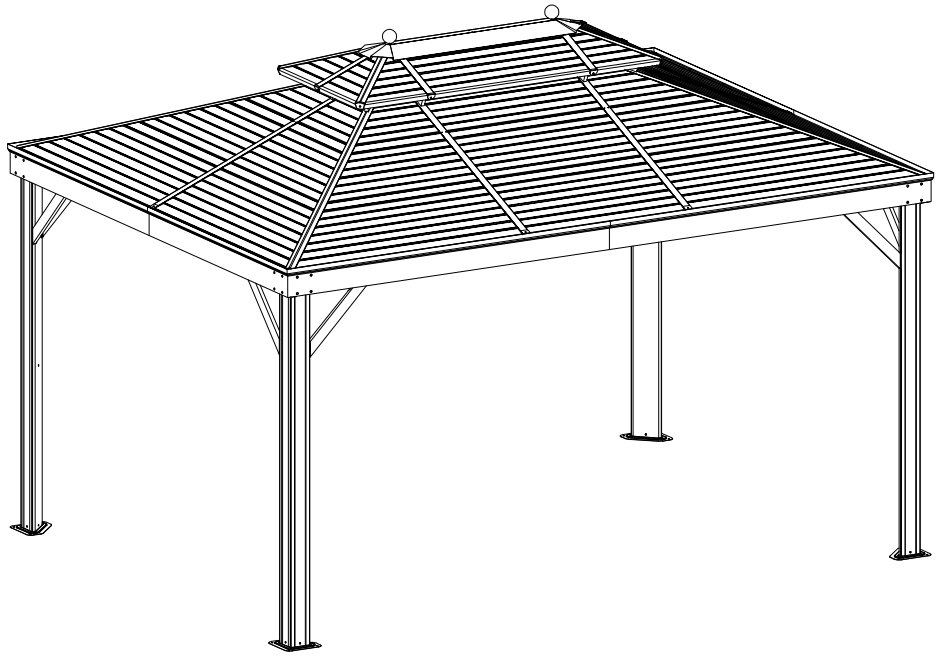



Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.

		
S x2	S1 x4	S2 x4

<18>

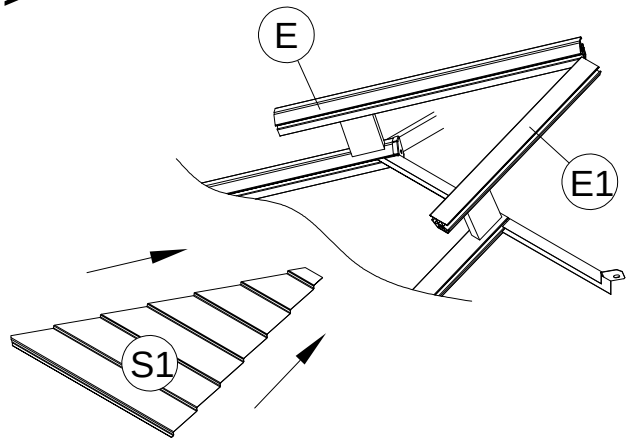

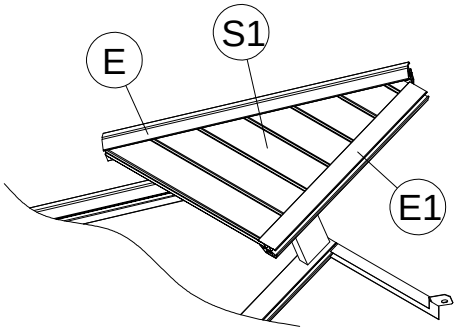


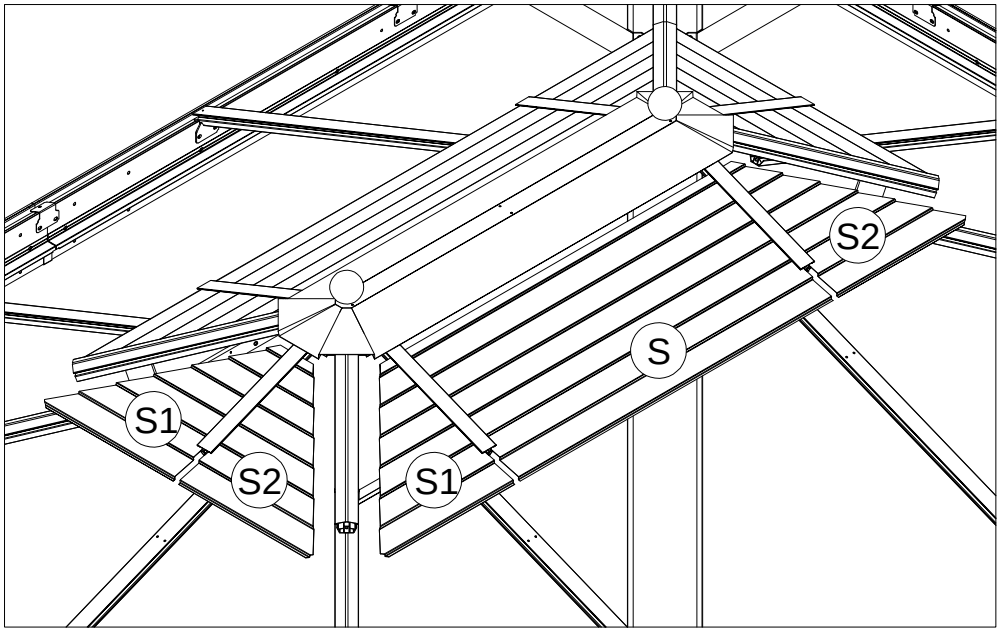



Tips:
1. Before installing the panels, first tear off the protective film.
2. When installing the panels, gently slide them into the track.
3. If you meet resistance during the sliding process, pull back the panels and try to install them again, don't exert too much force to avoid the panels breaking.
4. If the panels can't be stuck into the sliding groove, you can Use sharp-nosed pliers to open the slots a little.


G x2	G1 x4	G2 x4	N x4	N1 x6	1 x10 M6x15

<19>

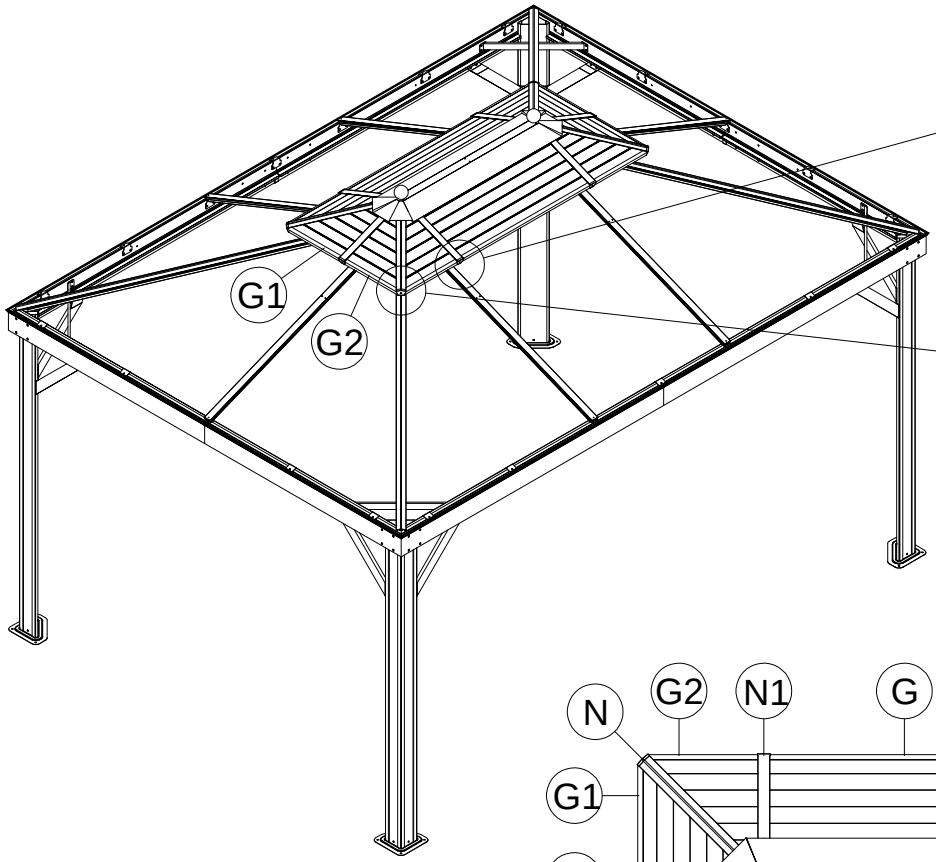

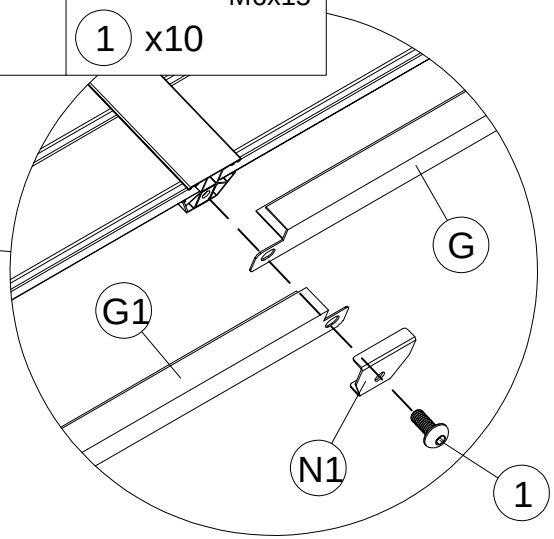

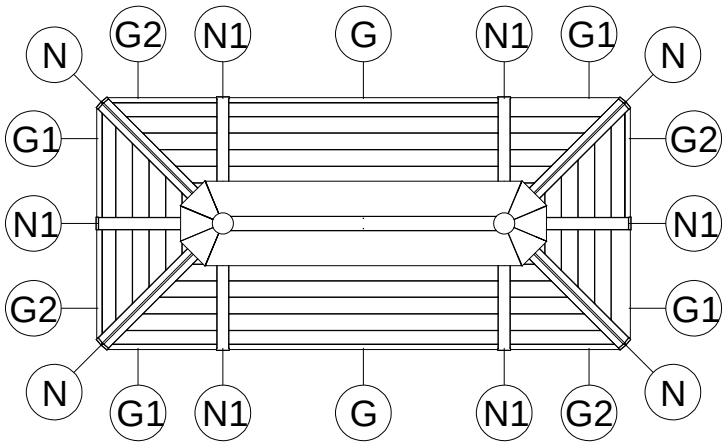


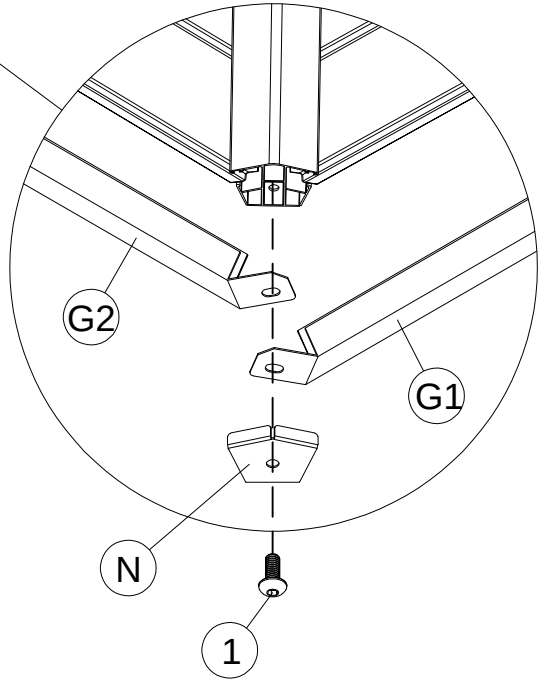


Tip: When installing the brackets, there will be overlap between the brackets. Do not tighten the screws yet, wait to make sure all the brackets are in the correct position before tightening the screws to secure them.

		 M6x15
F x8	N4 x8	1 x8

<20>

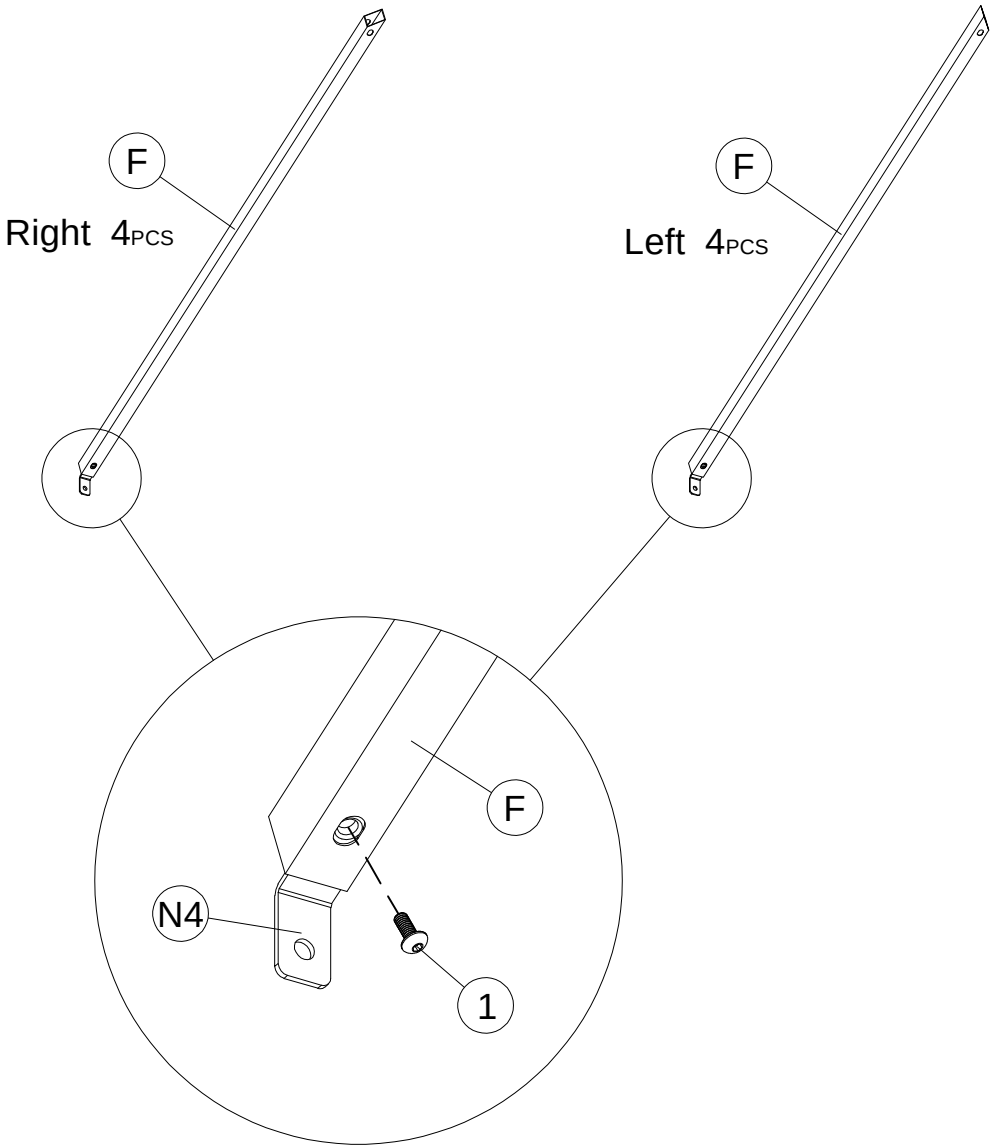




N3 x4





M6x15

1 x4

<21>

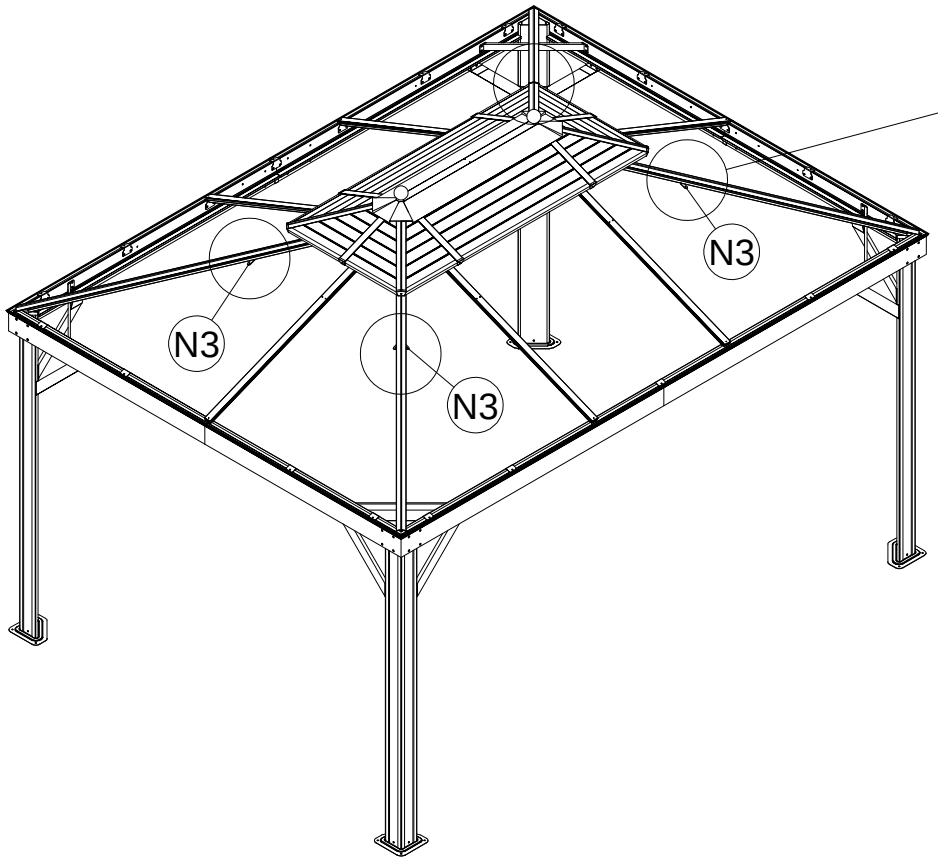

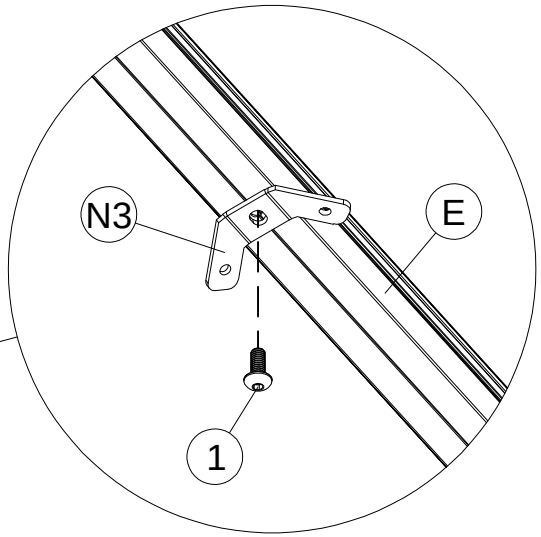











M6x15

1 x16

<22>

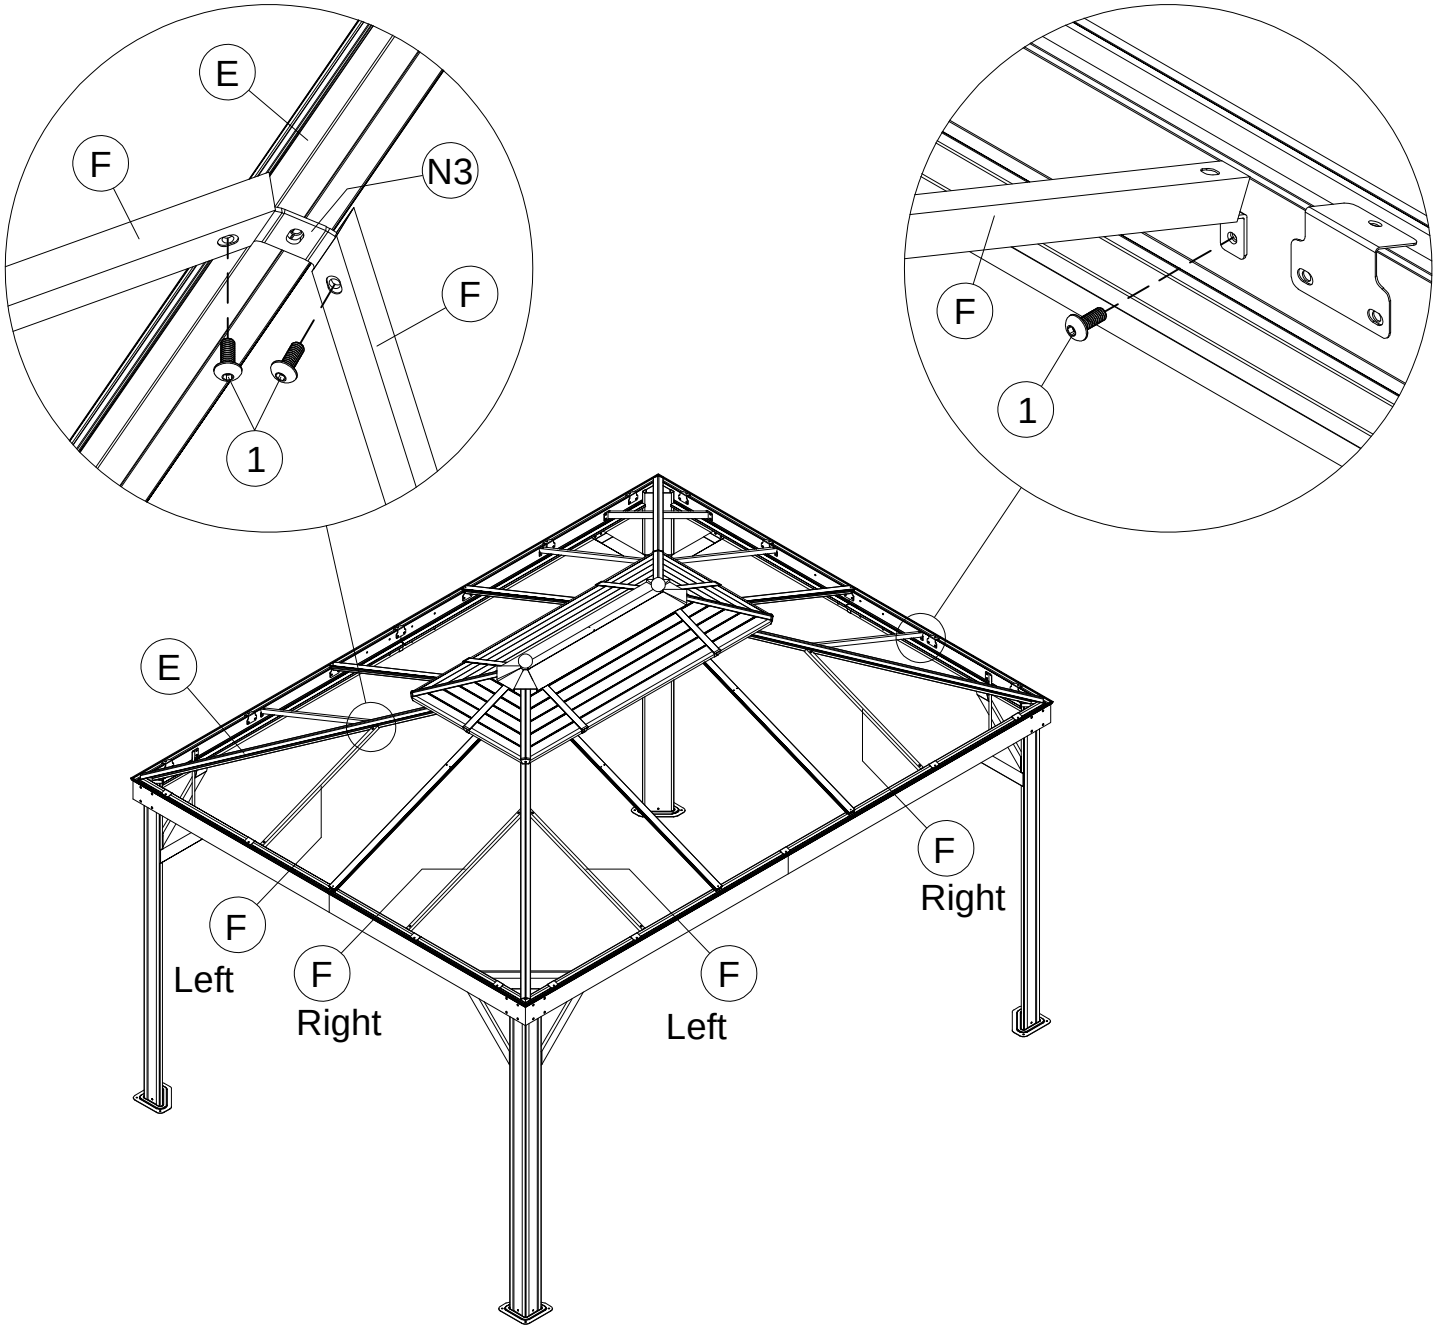



 Q x4	 Q1 x4	 Q2 x4	 R x2	 N2 x6	 W x18	 Y x8


ST4.8x12
4 x6



M5x6
6 x18

<23>

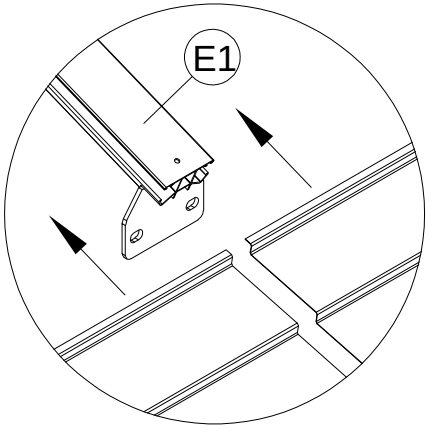



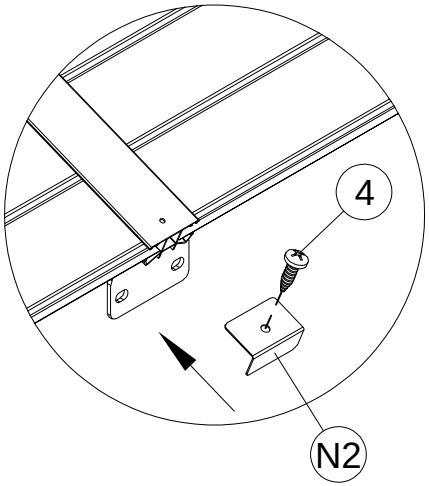


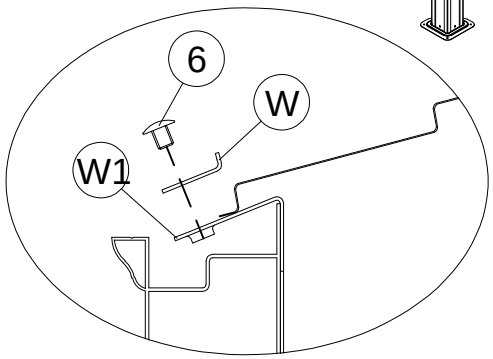

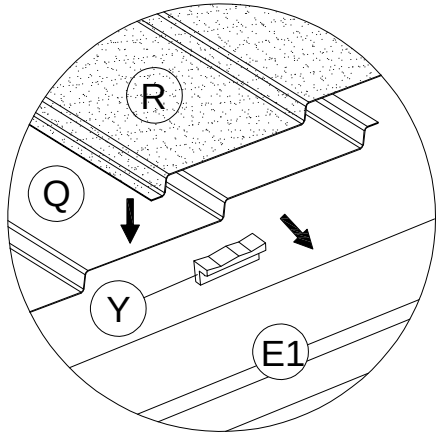


Note:
Y is stuck in the position where the small piece R and the large piece Q overlap.

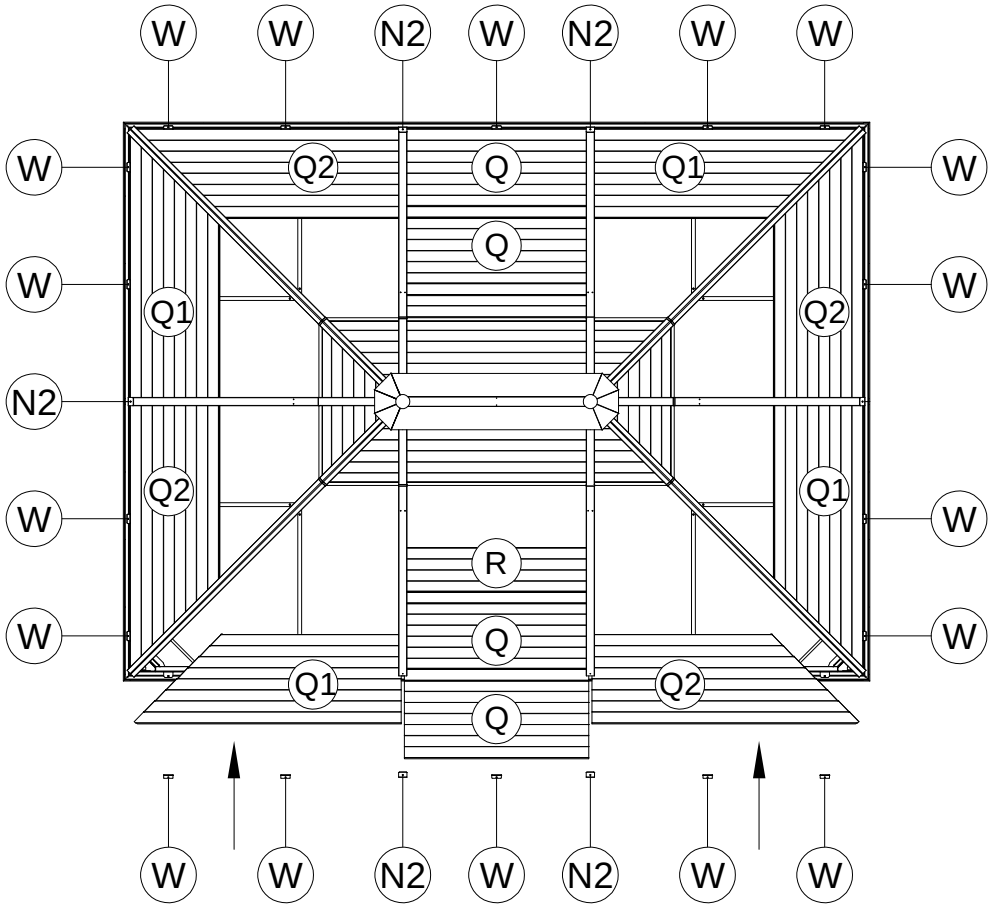

W
W
N2
W
N2
W
W
W
Q2
Q
Q1
W
Q
W
Q1
Q2
W
N2
Q2
Q1
W
R
W
Q
W
Q1
Q2
Q
W
W
N2
W
N2
W
W



 Q3 x4	 Q4 x4	 Y x16

<25>

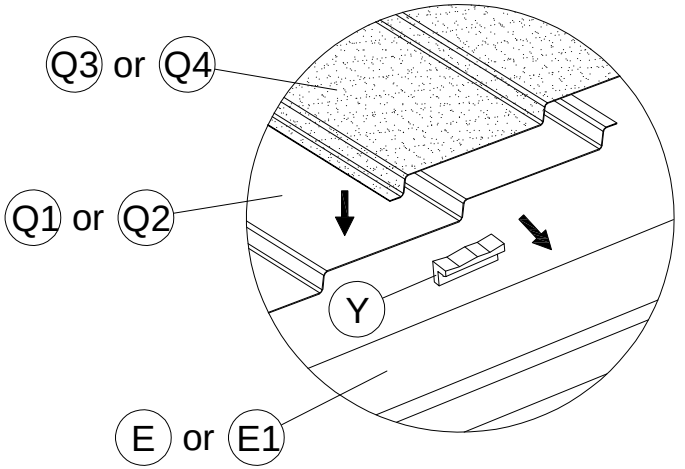


Note:
Y is stuck in the position where the small piece (Q3,Q4) and the large piece (Q1,Q2) overlap.

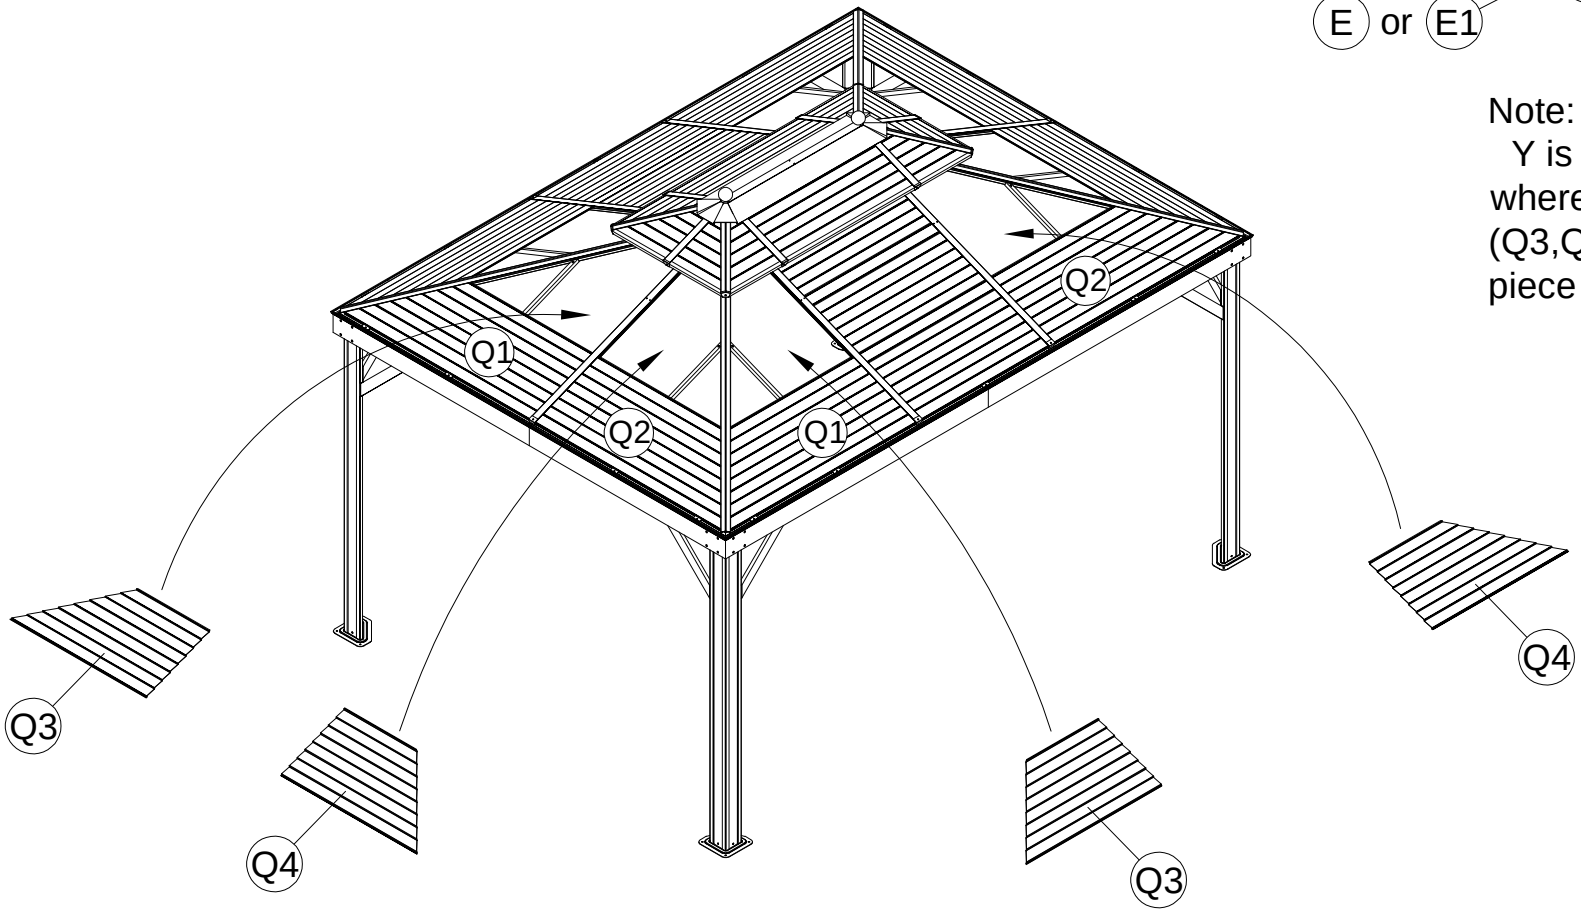



 R1 x4	 R2 x4	 Y x16

<26>

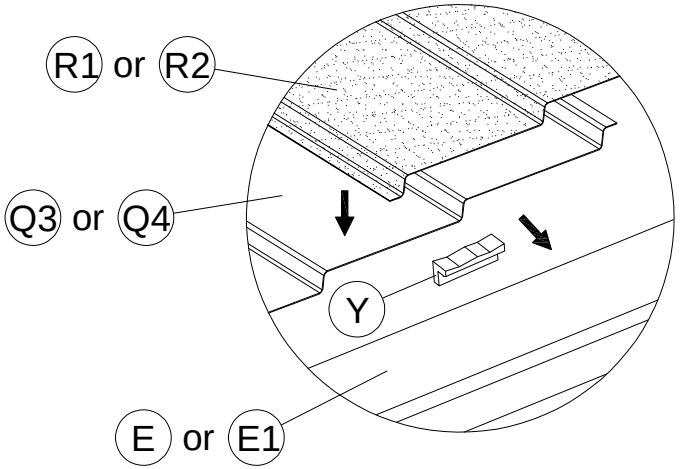

Note:
Y is stuck in the position where the small piece (R1,R2) and the large piece (Q3,Q4) overlap.

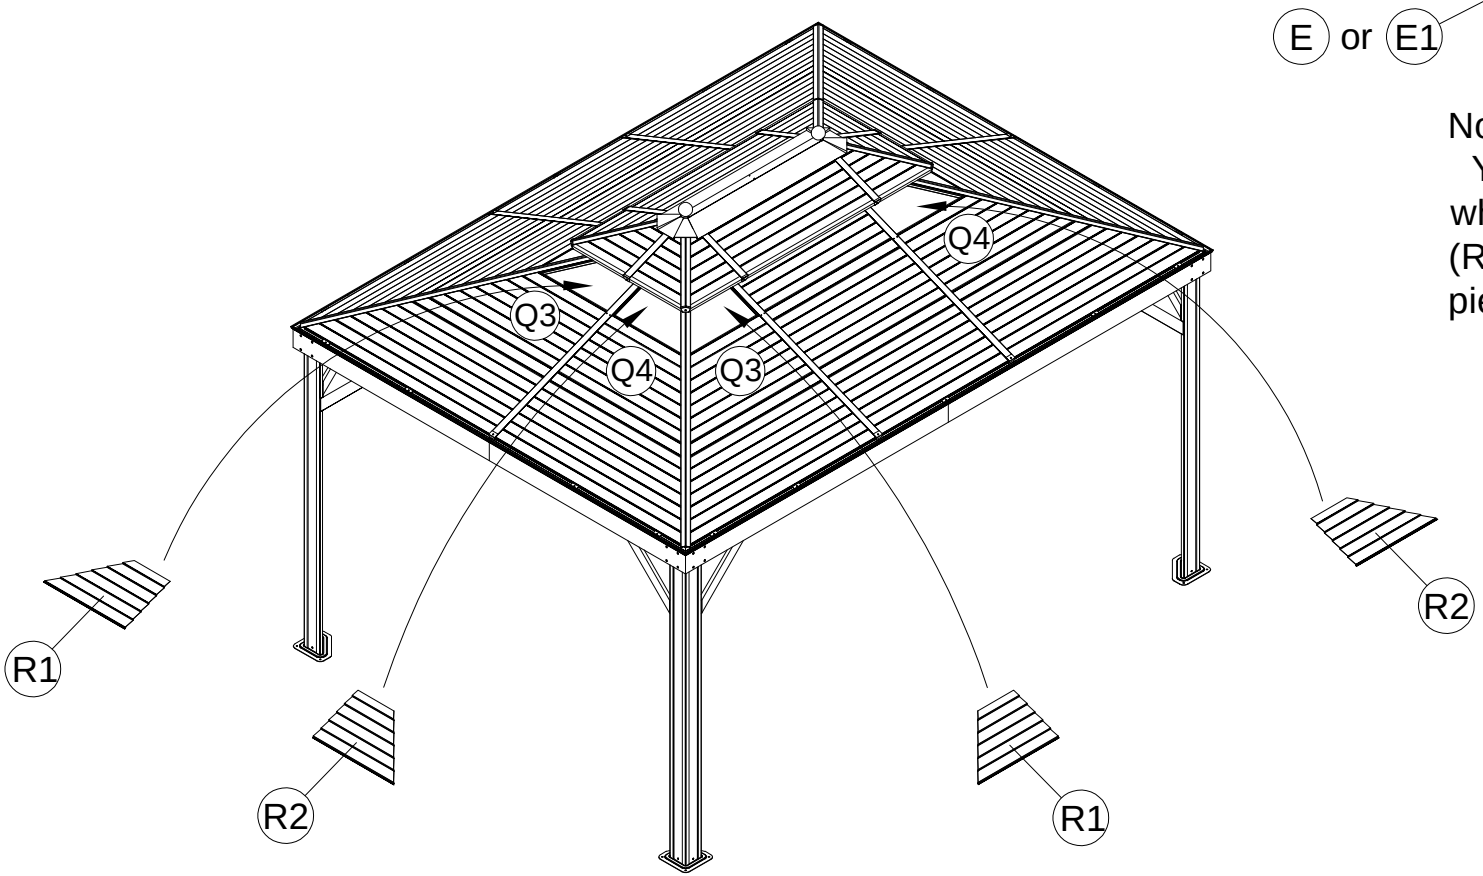



Y1 x12





ST4x8

7 x12

<27>


Note: pls use power tools to drill the screws.

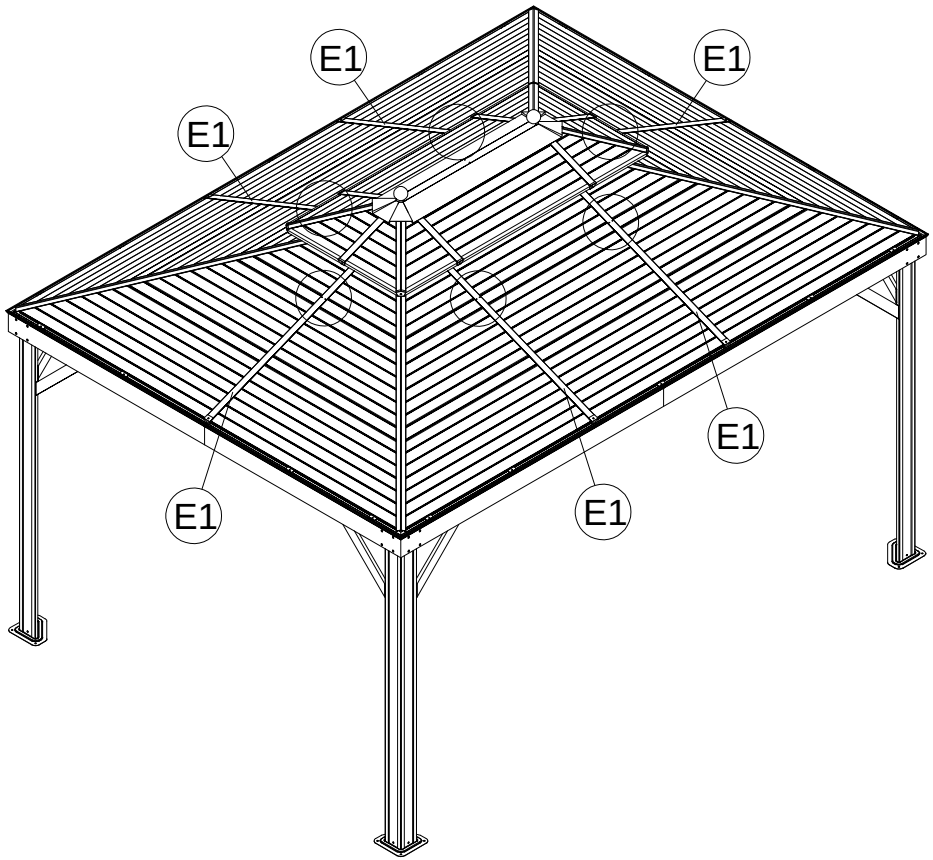


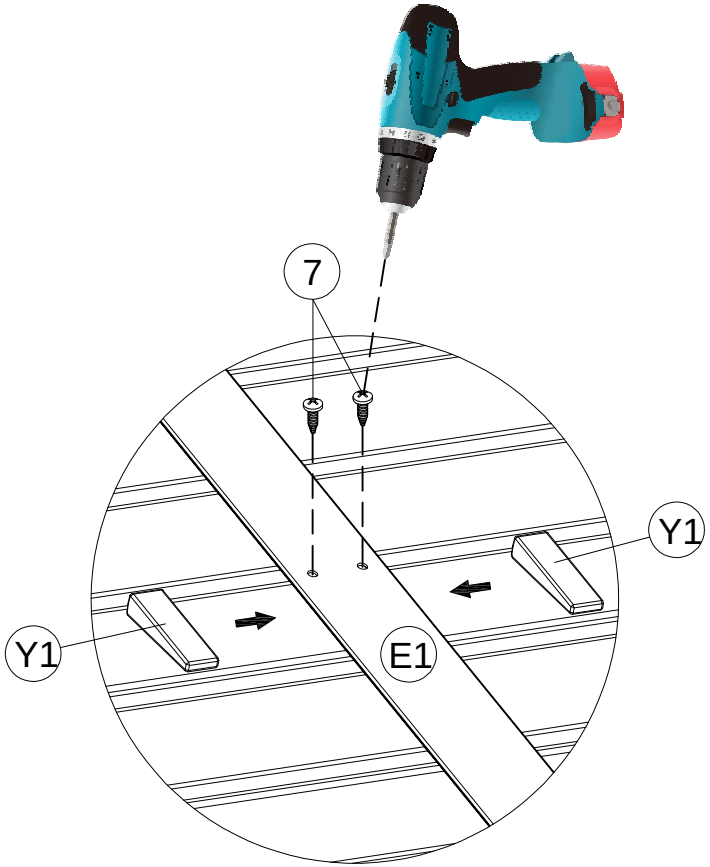

				 ST4x8
D x2	D1 x2	D2 x2	D3 x2	7 x44

<28>

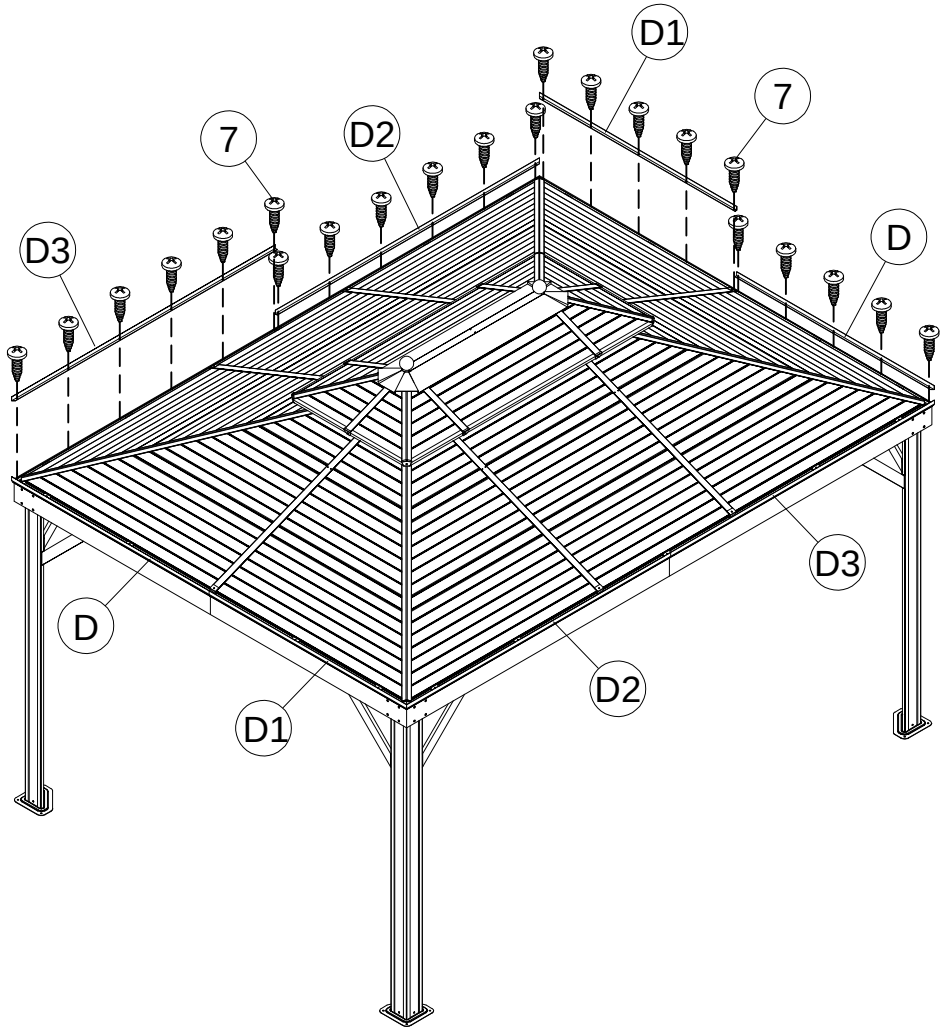

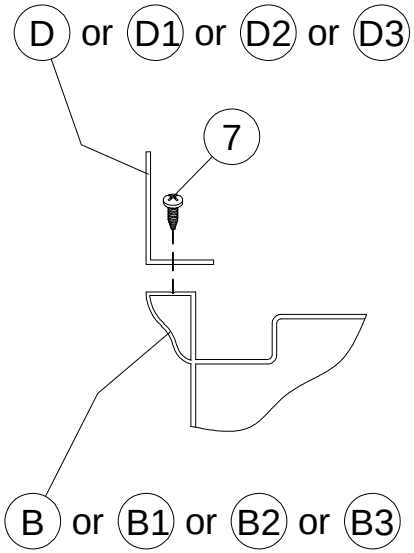




K x4





ST4.8x12

4 x8


<29>

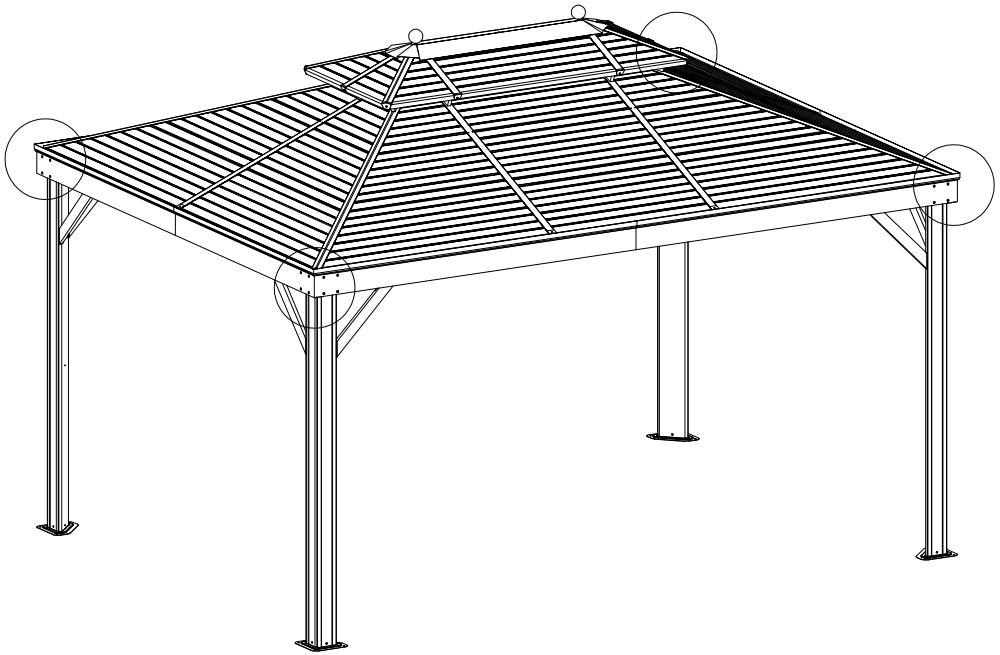

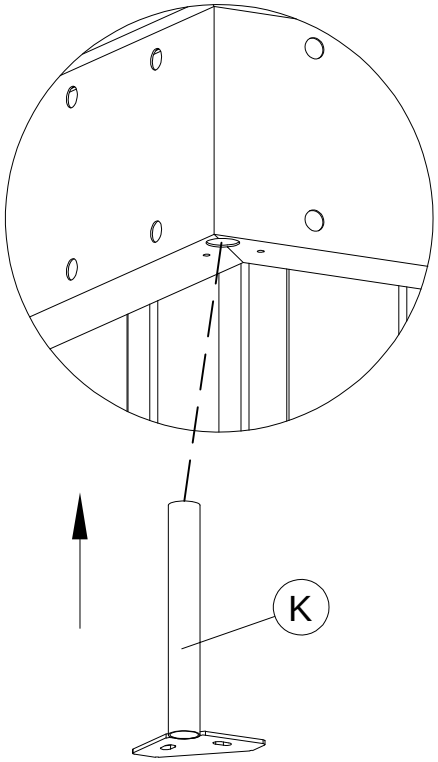


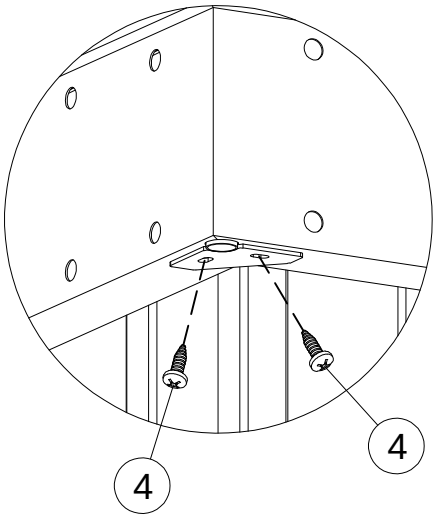

STEP 4

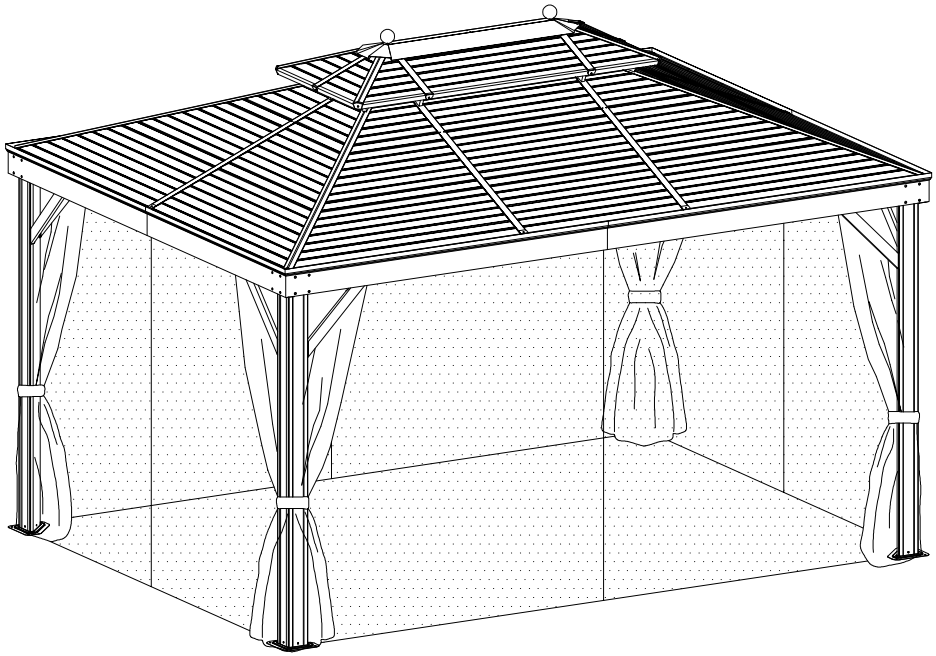



Tip: Be sure to hang the nettings on the inside track and the privacy curtains on the outside track

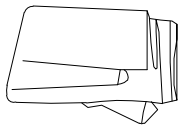


T x4


<30>




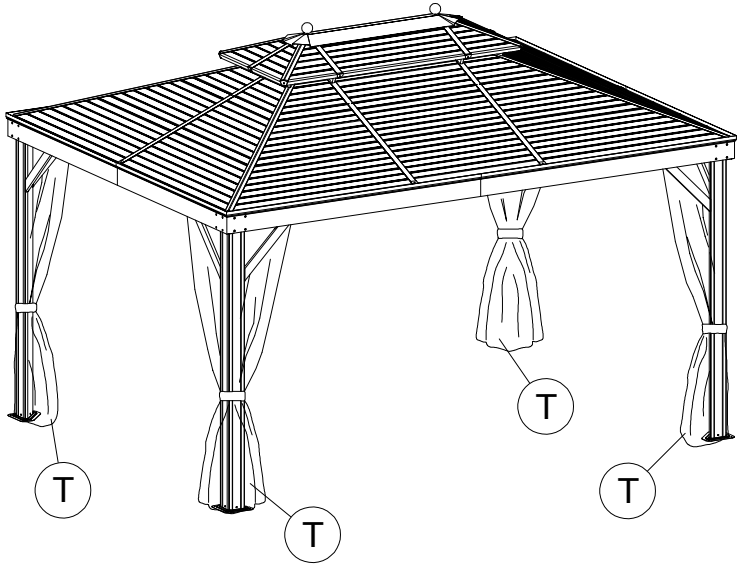


Tips: When installing curtains, you can first find the tie for the curtain, and then hang the curtain according to the hole number on the left and right sides of the tie.

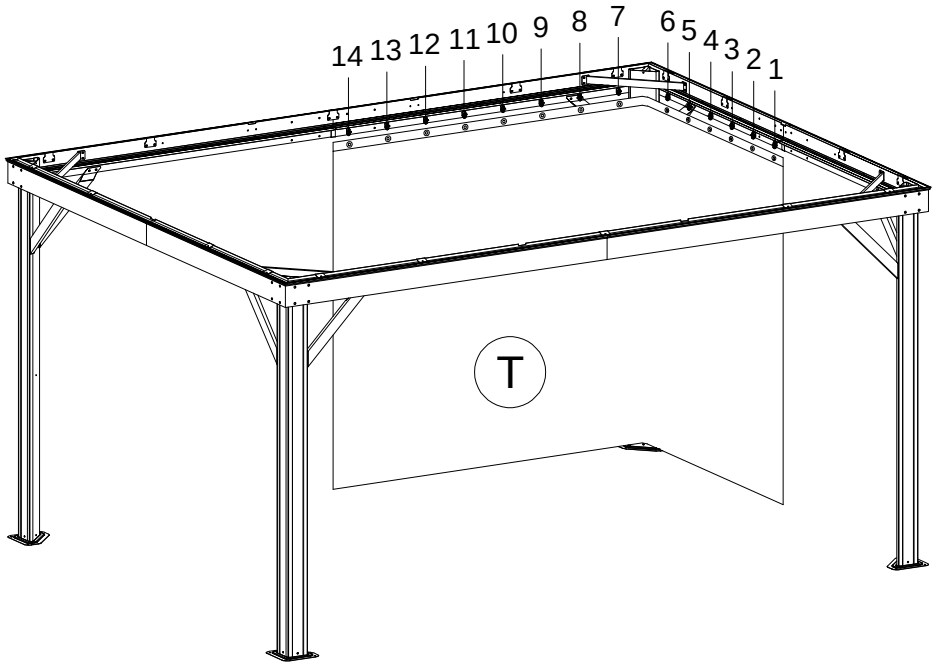


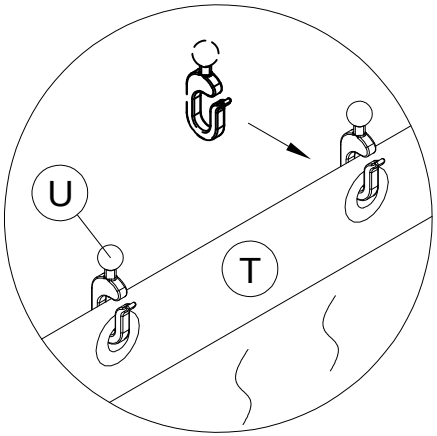

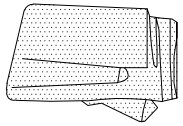


T1 x4

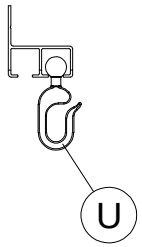


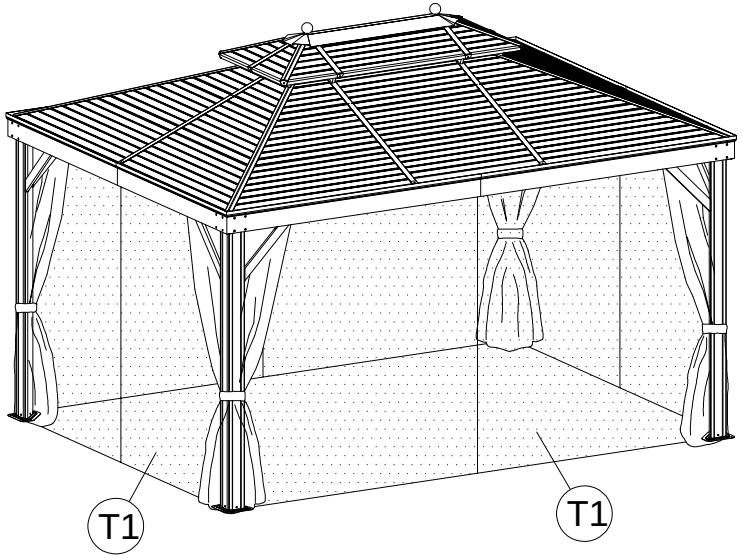


<31>


Tips: When installing nettings, you can first find the tie for the netting, and then hang the netting according to the hole number on the left and right sides of the tie.

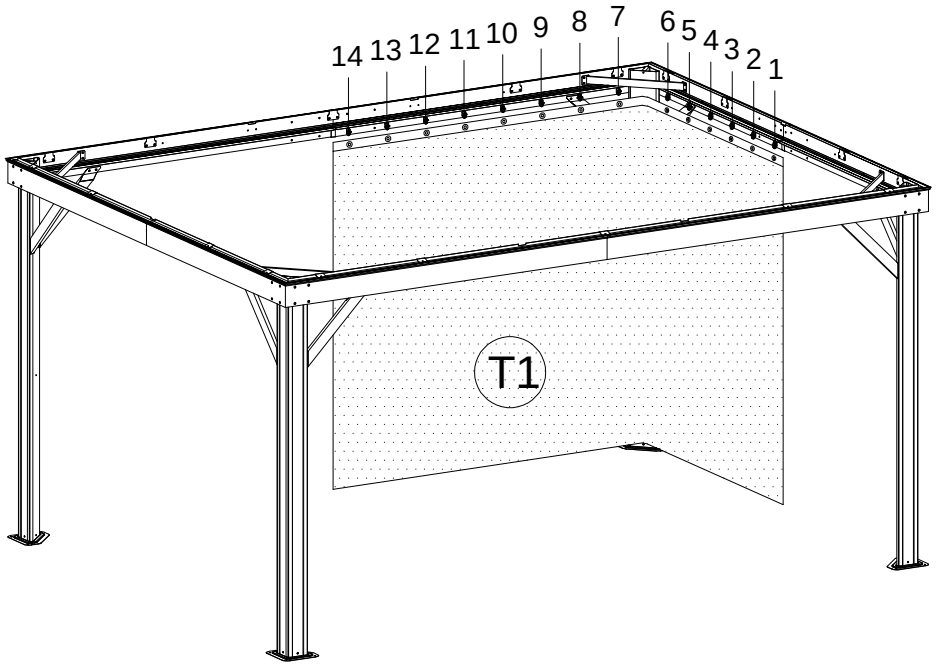

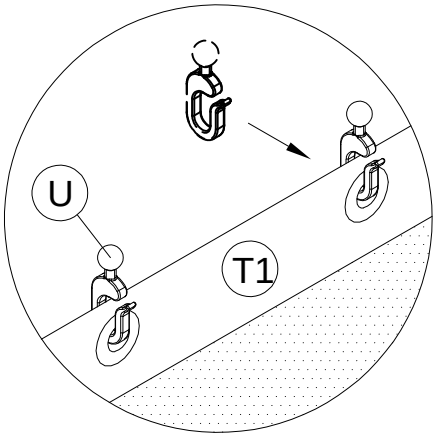




T1 x1





9 x12


Tips: The gazebo is already installed. Please determine where the gazebo will be placed and fix it with screws. If the floor on which the gazebo will be installed is concrete, it can be fixed with the expansion screws provided in the package.

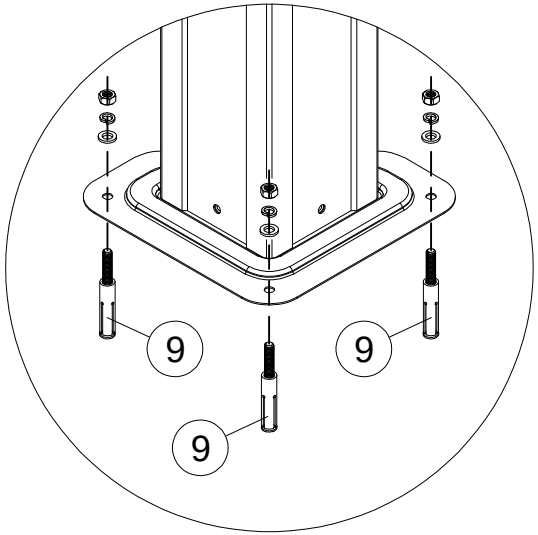


<32>

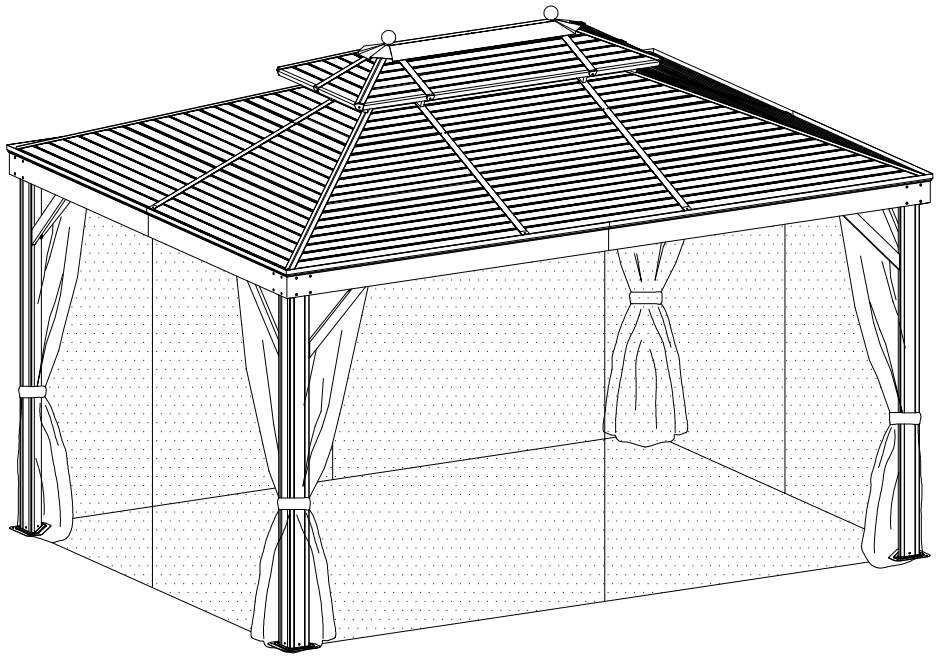

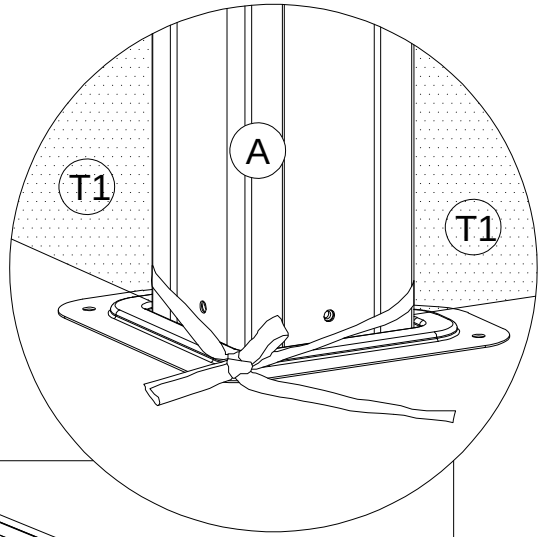

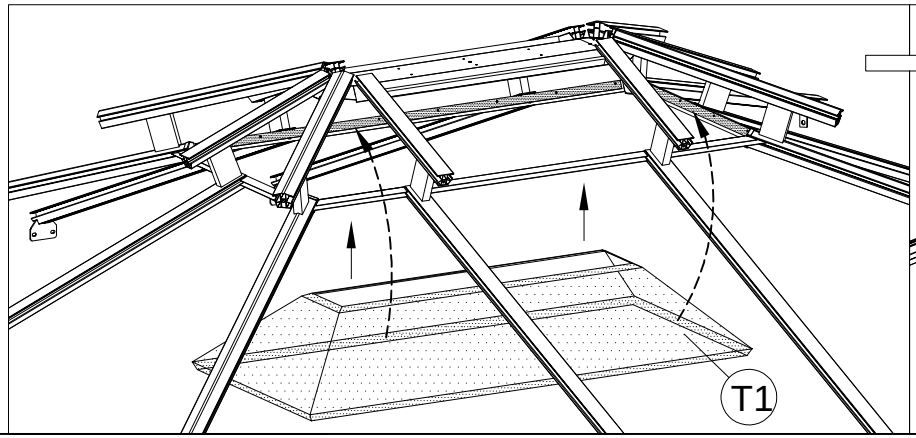

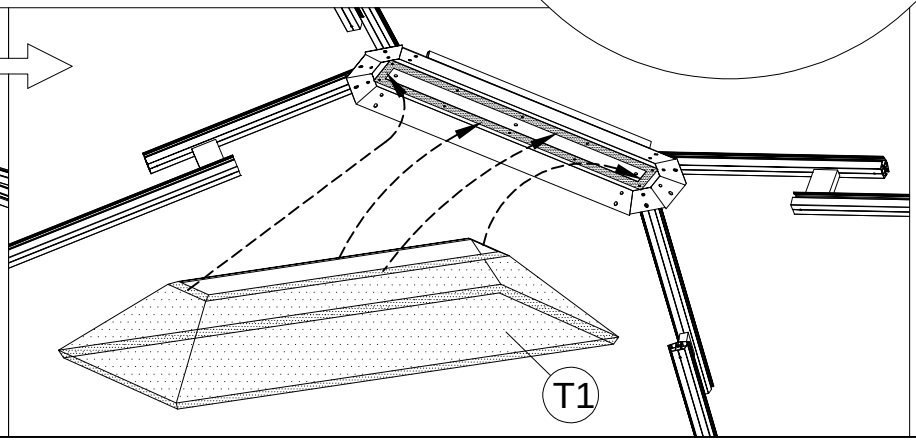

Carton-1/5	
Part	Qty
A	4

Carton-2/5	
Part	Qty
B2	2
B3	2

Carton-3/5	
Part	Qty
B	2
B1	2
E1	6
L	1
M	1
P	4
T	4
T1	4+1

Carton-4/5	
Part	Qty
C	2
C1	2
C2	2
C3	2
D	2
D1	2
D2	2
D3	2
E	4
F	8
G	2
G1	4
G2	4
G3	2
G4	2
H	4
H1	4
H2	4
J	4
K	4
W1	18
Za	2

Carton-4/5	
Part	Qty
N.N1.N2.N3.N4	1
U.V.W.Y.Y1.9.10	
1.2.3.4.5.6.7	1

Carton-5/5	
Part	Qty
Q	4
Q1	4
Q2	4
Q3	4
Q4	4
R	2
S	2
S1	4
S2	4