

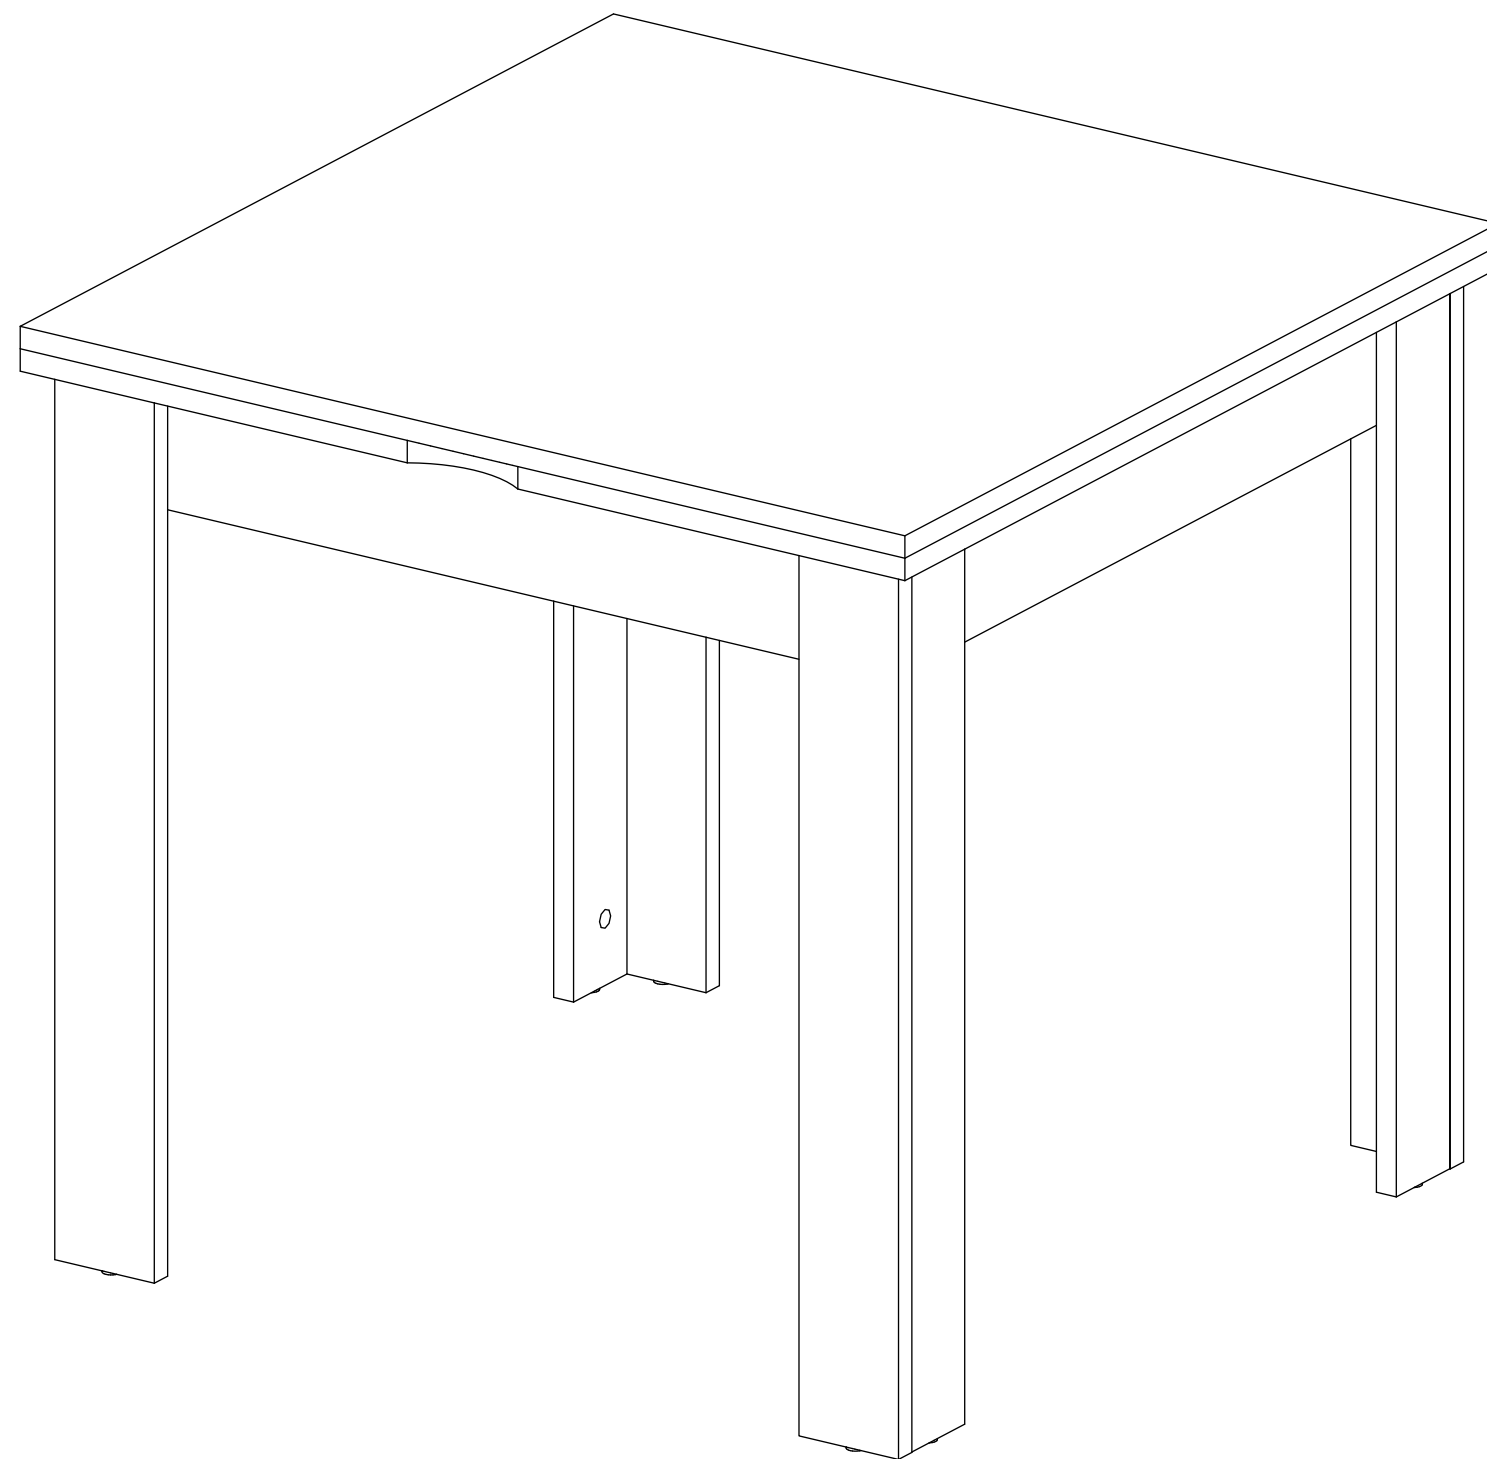
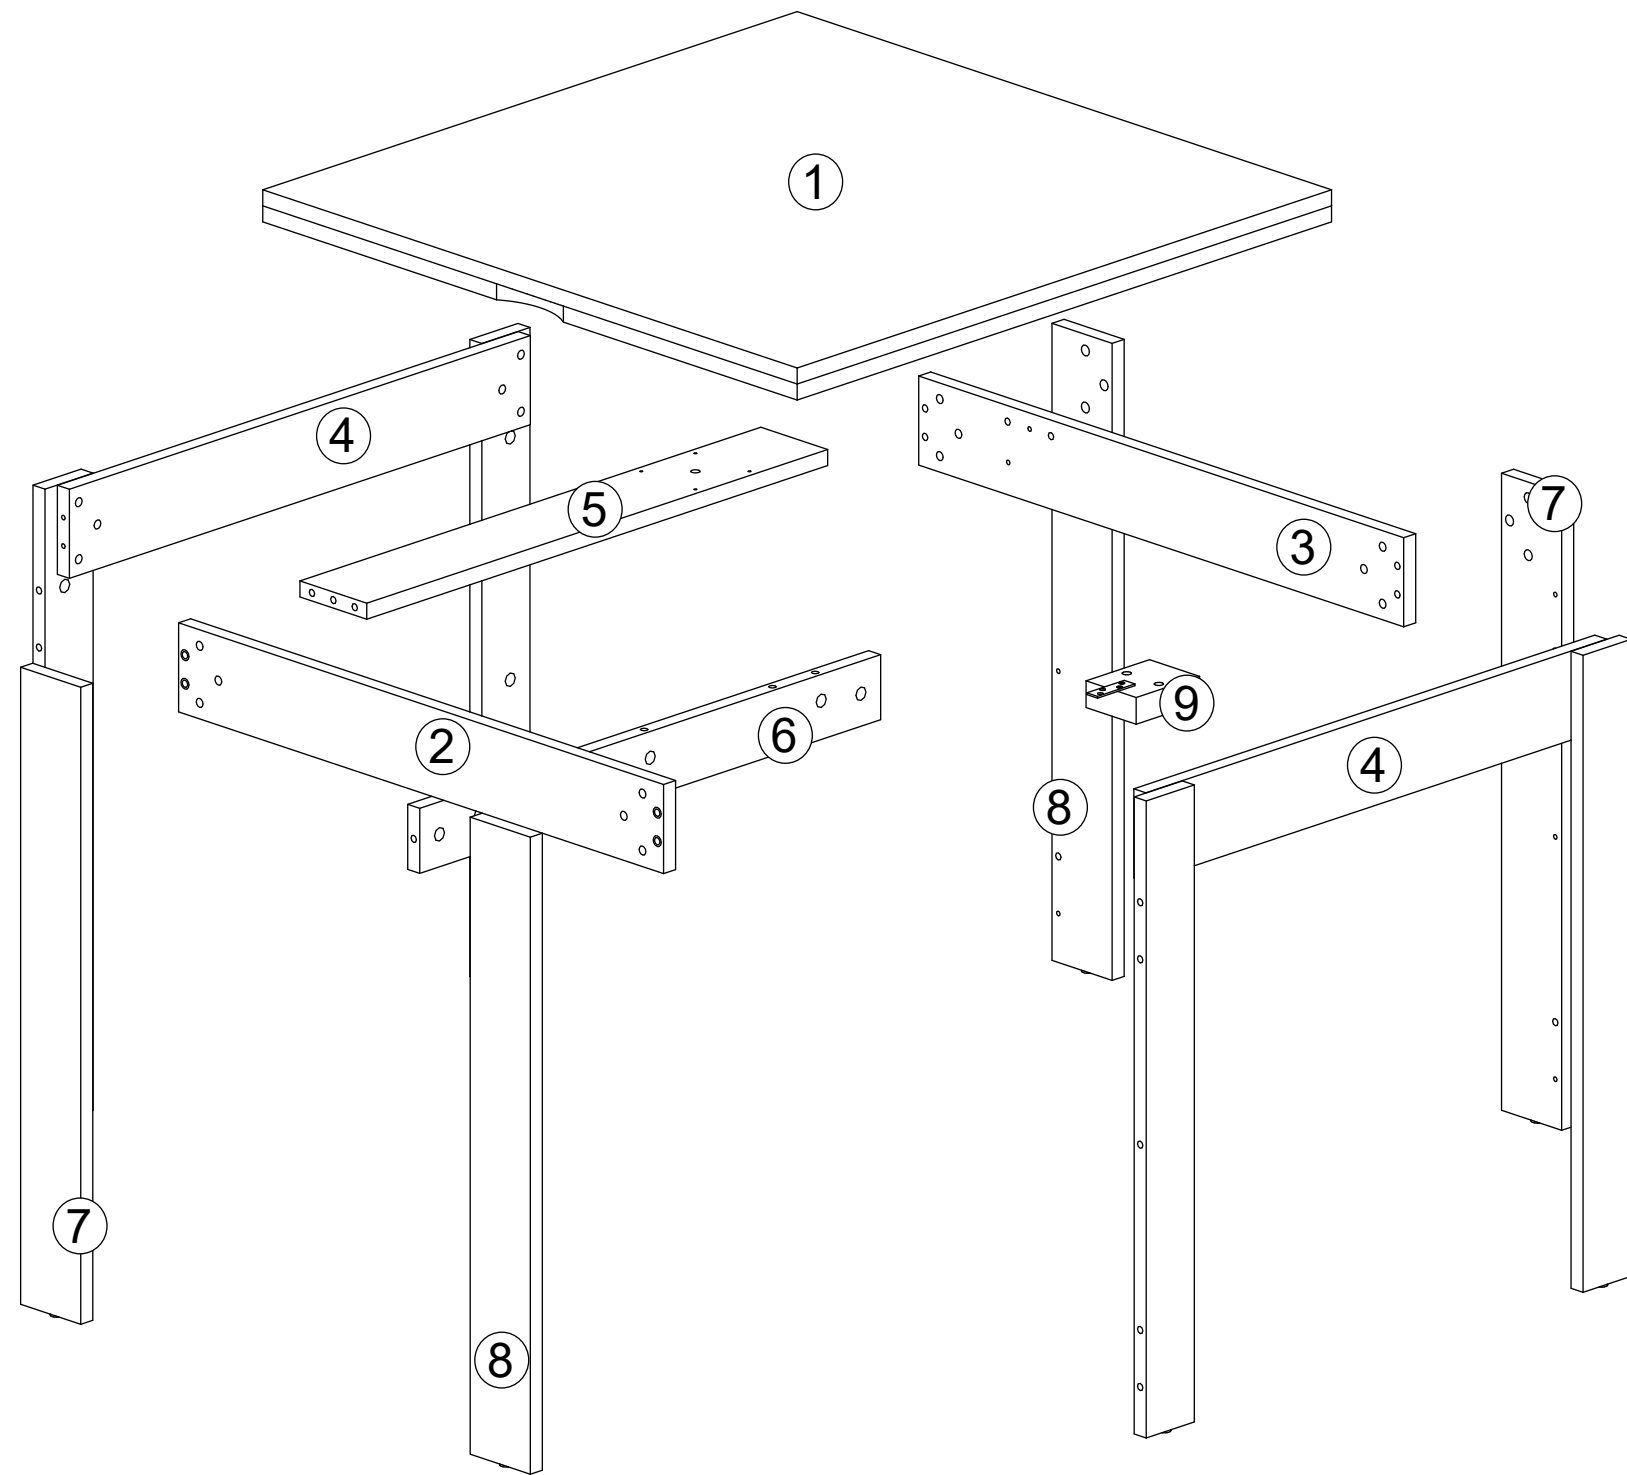
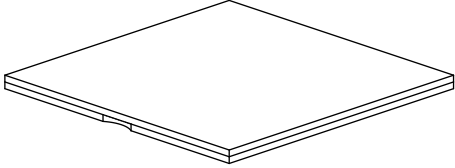
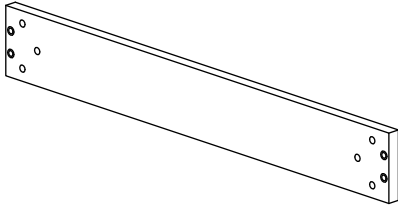
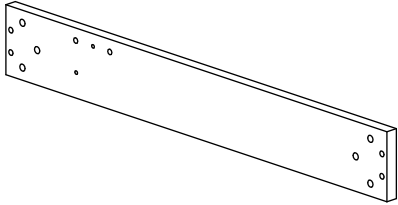
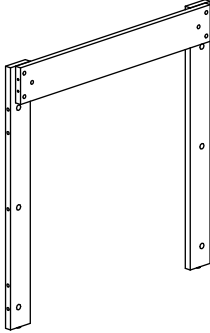
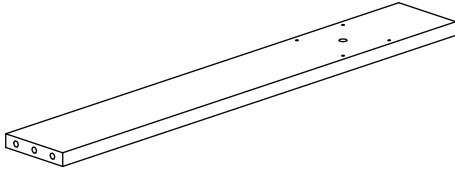
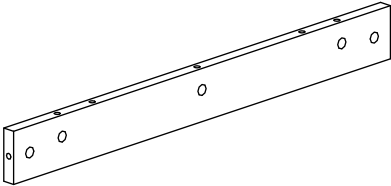
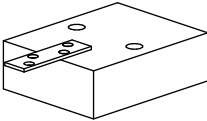
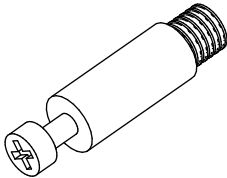

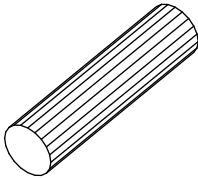
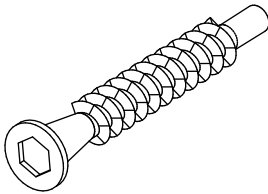
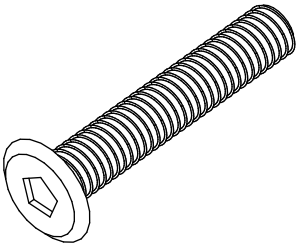
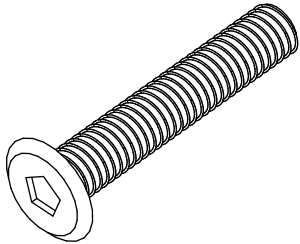
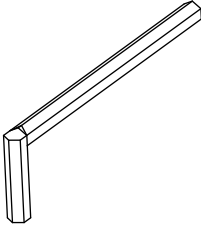
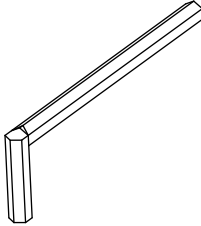


Assembly Instruction

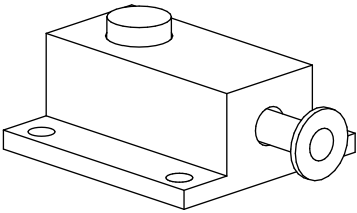


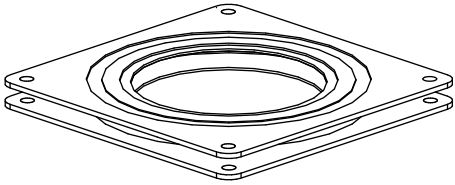

Parts & Tool List

① x1 	② x1 	③ x1 	④ x2 	⑤ x1 
⑥ x1 	⑦ x2 	⑧ x2 	⑨ x1 	
Ax19+1  M6*35mm	Bx19+1  φ15*11mm	Cx14+1  φ8*30mm	Dx8  M7*38mm	Ex2  M8*40mm
Fx12+1  M8*30mm	Gx1  S4	Hx1  S5	Ix1 	Jx1 

Kx1

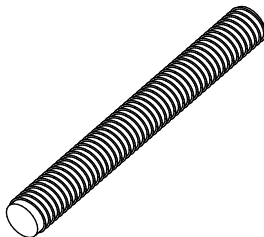


M8*60mm


Lx12+1




Mx1

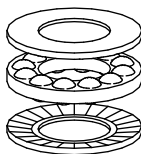

Nx1


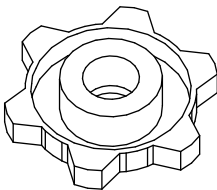


Px13

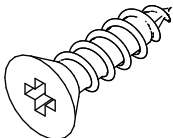


φ3.5*12mm




1

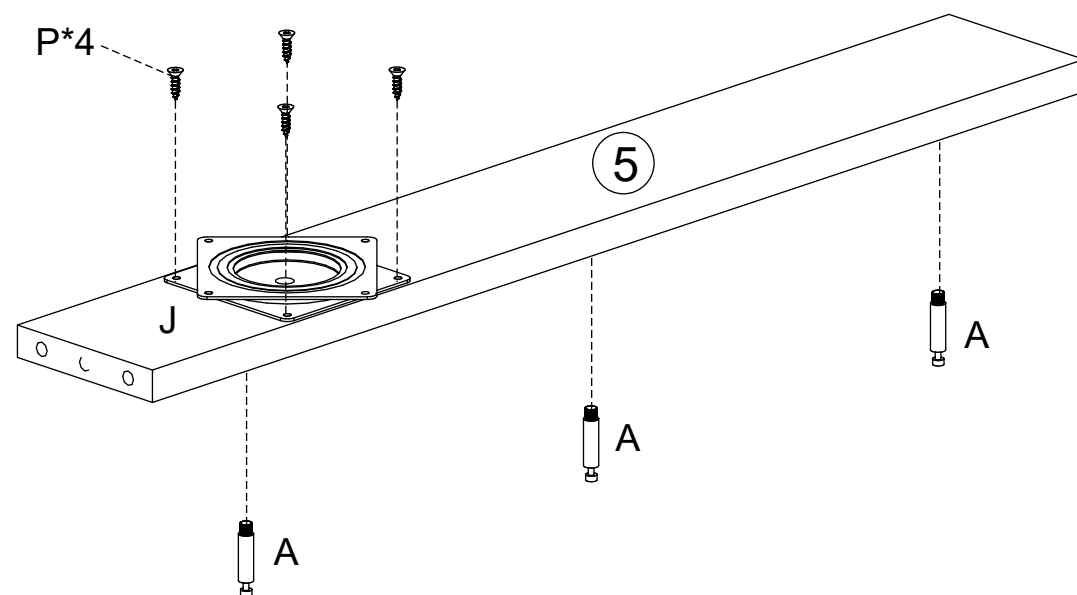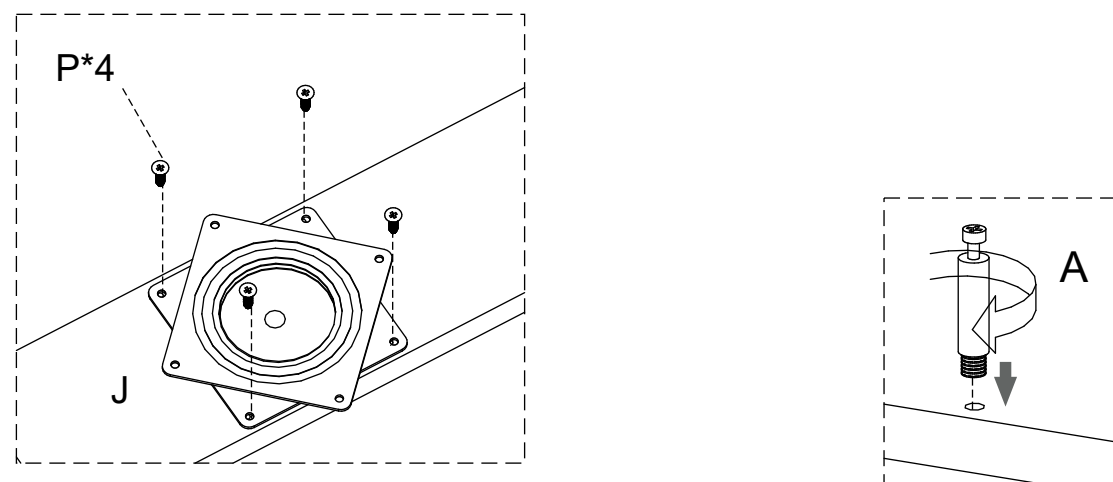




Accessory Q Black Front Panel

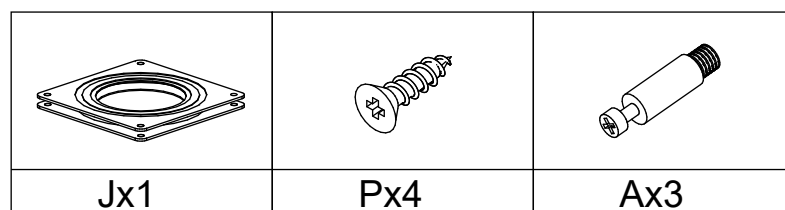


2

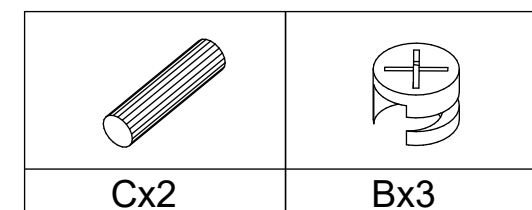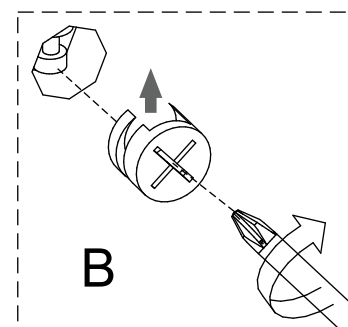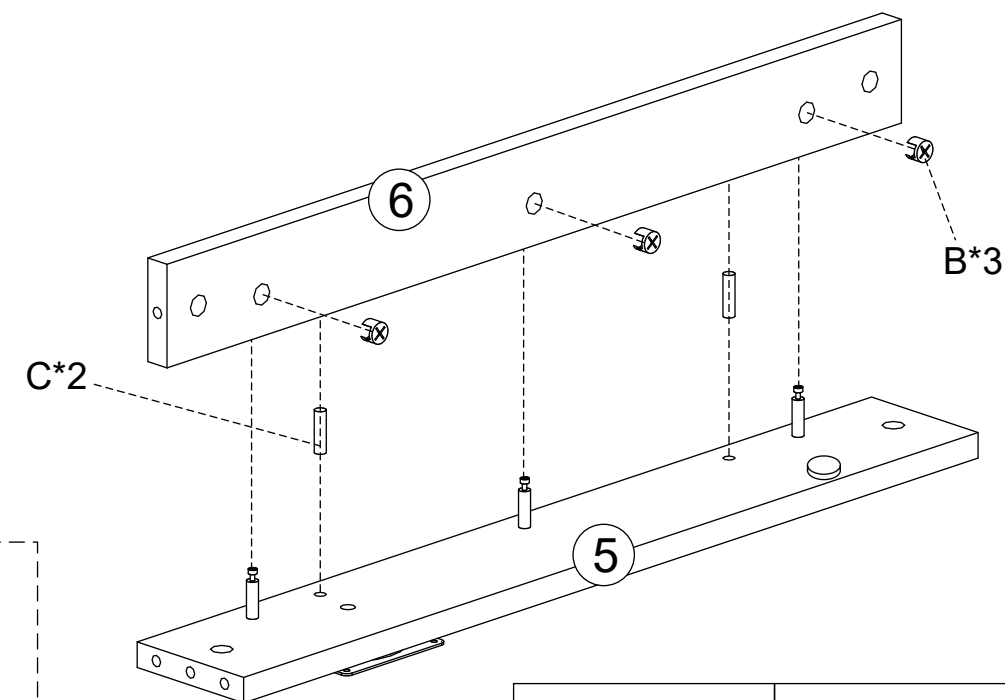

3

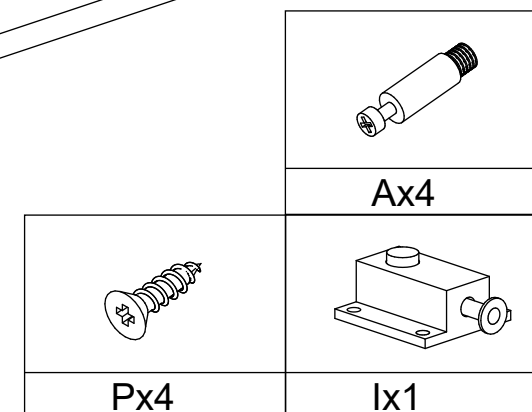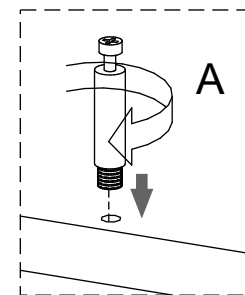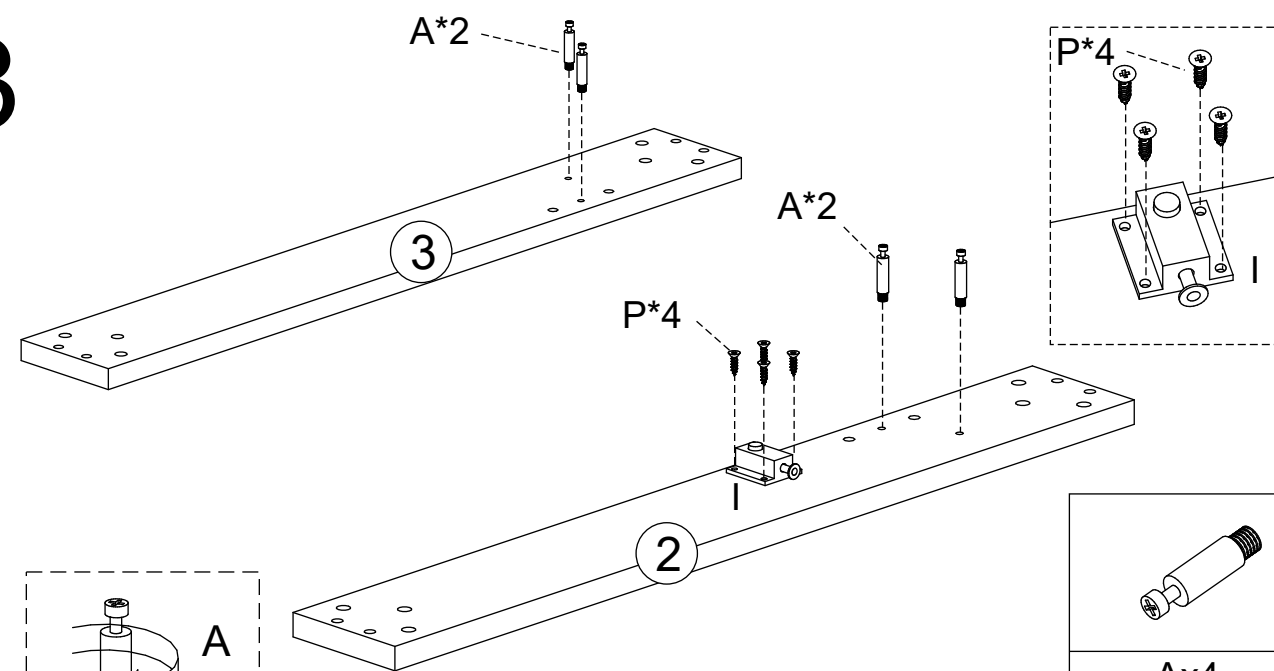


4

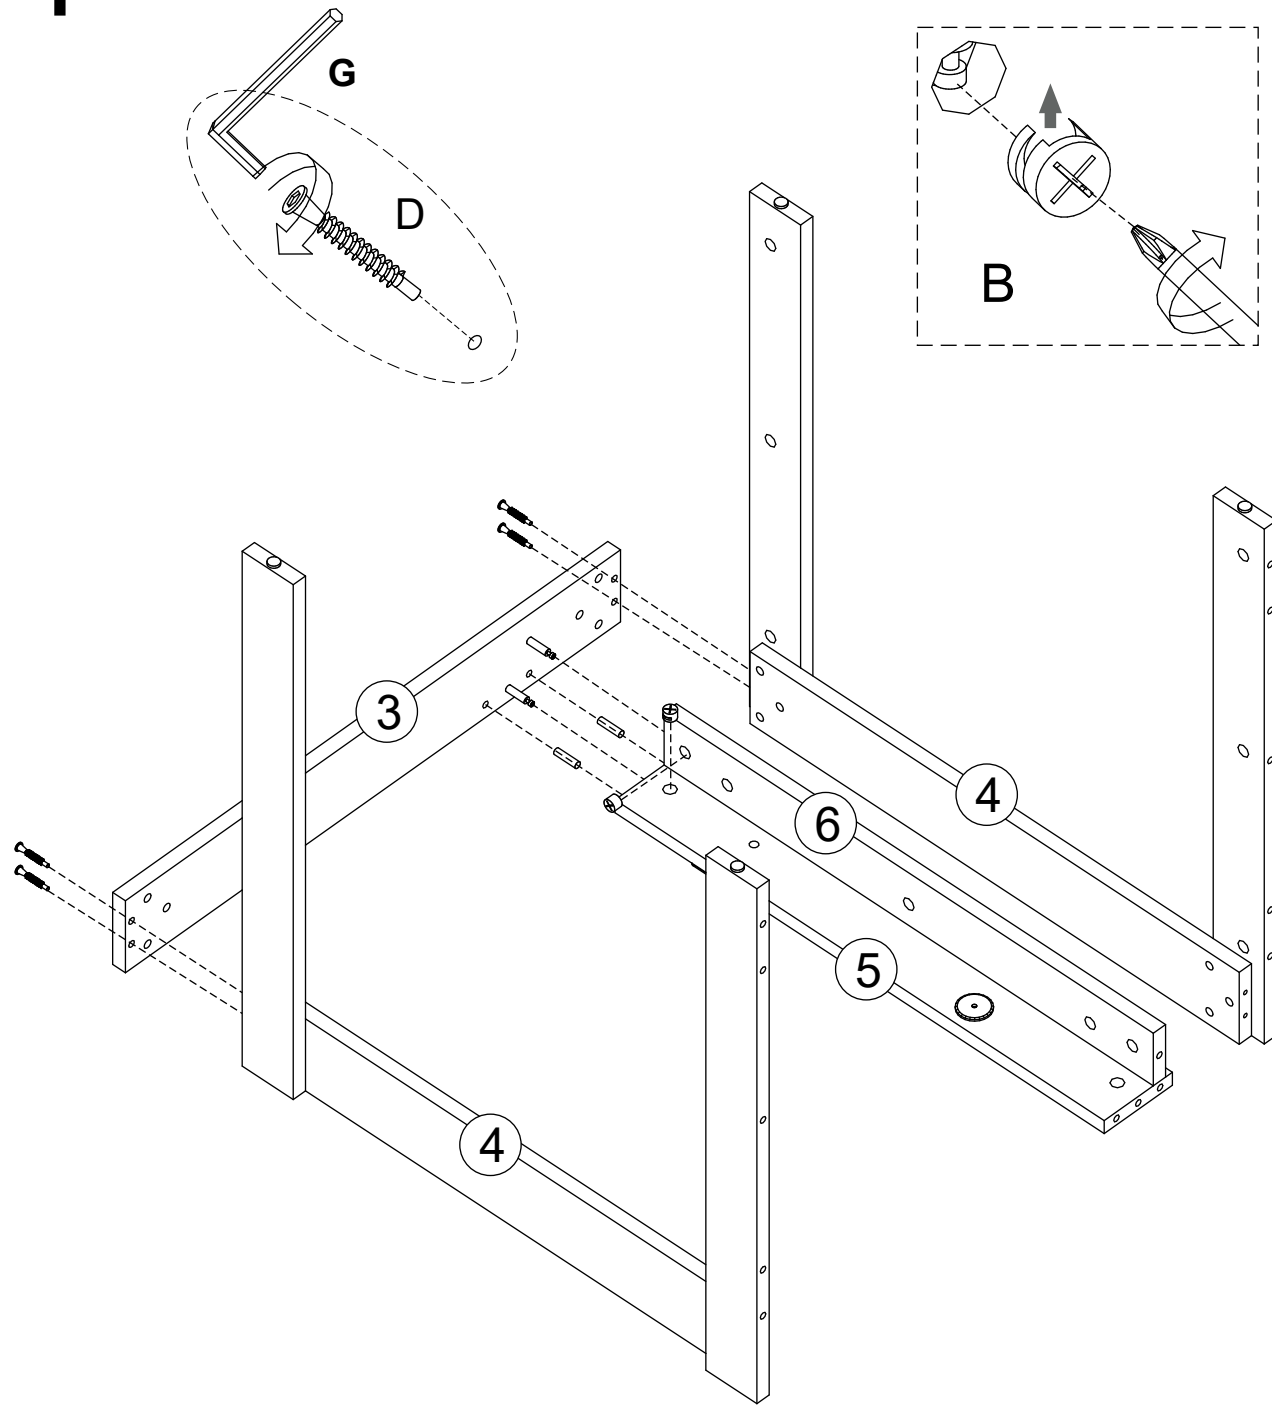




Dx4	Gx1	Cx2	Bx2

5

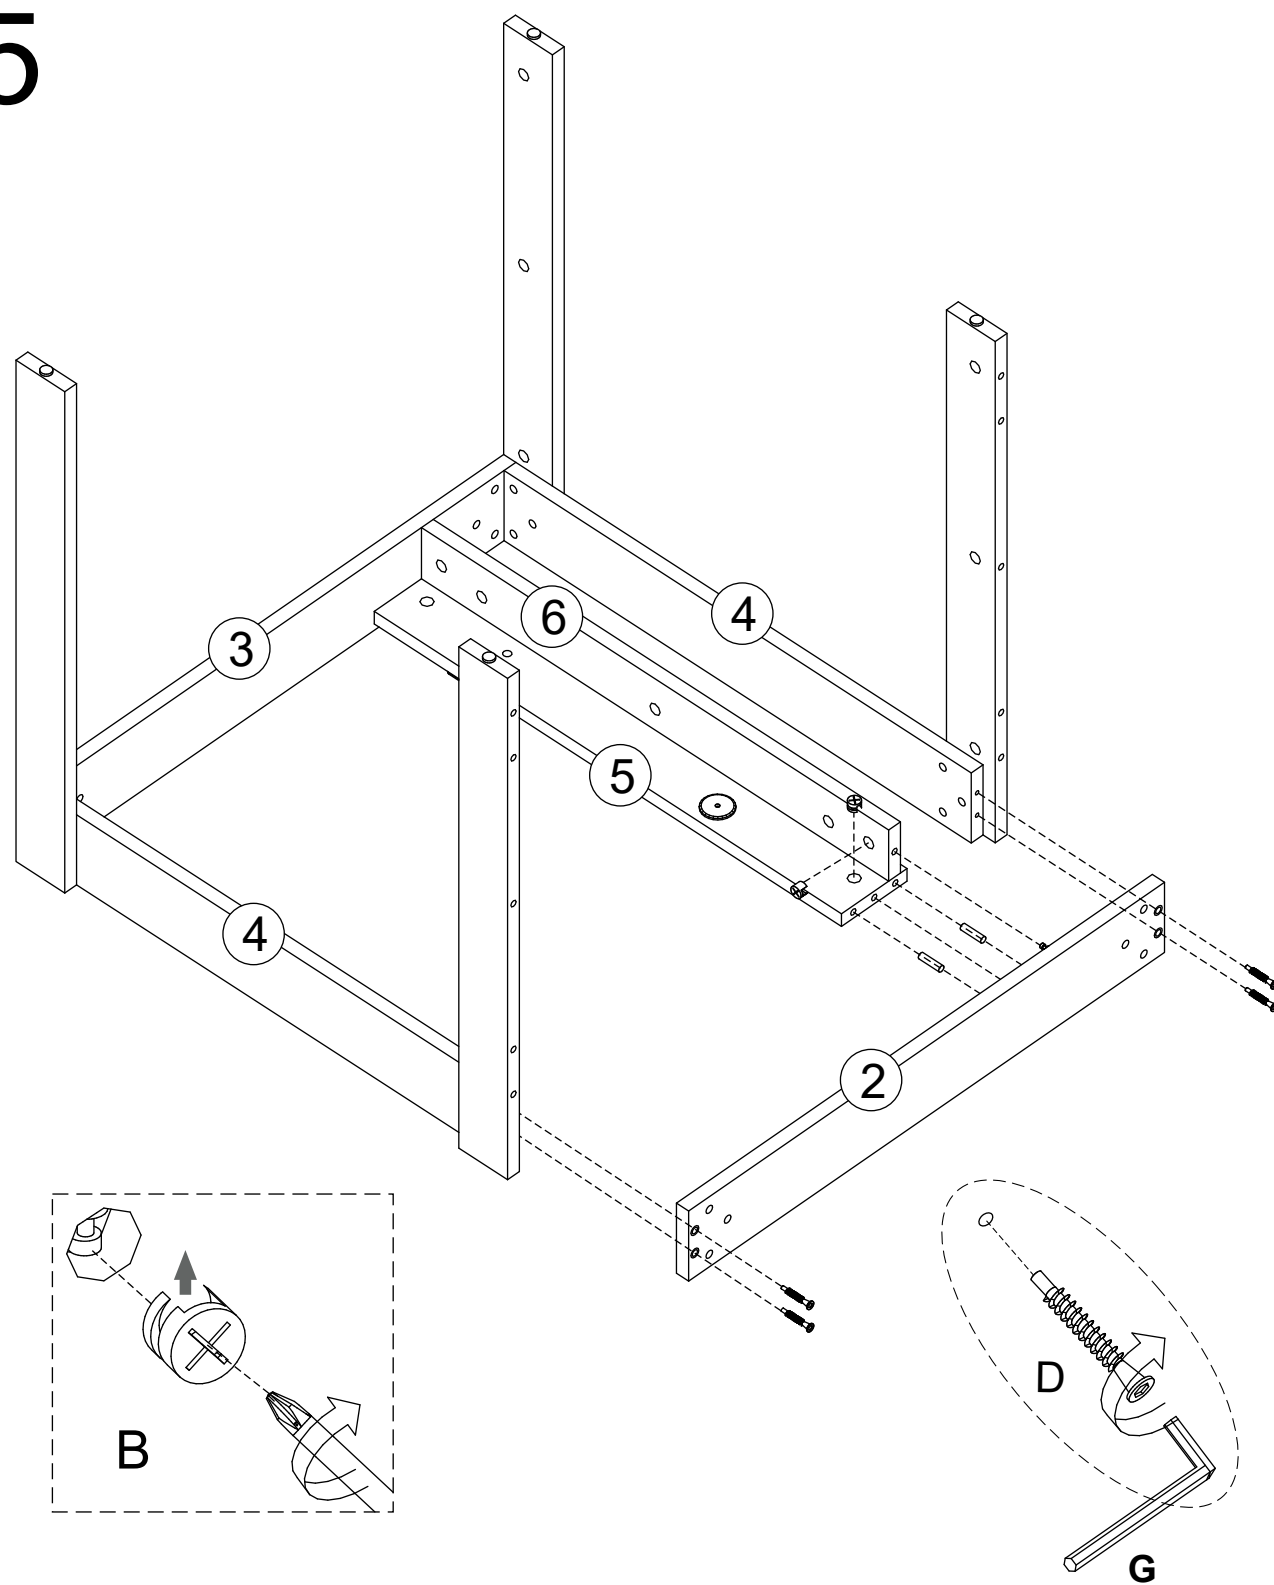




Dx4	Gx1	Cx2	Bx2

6

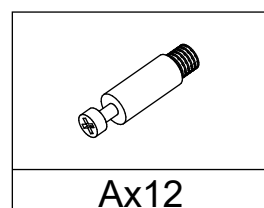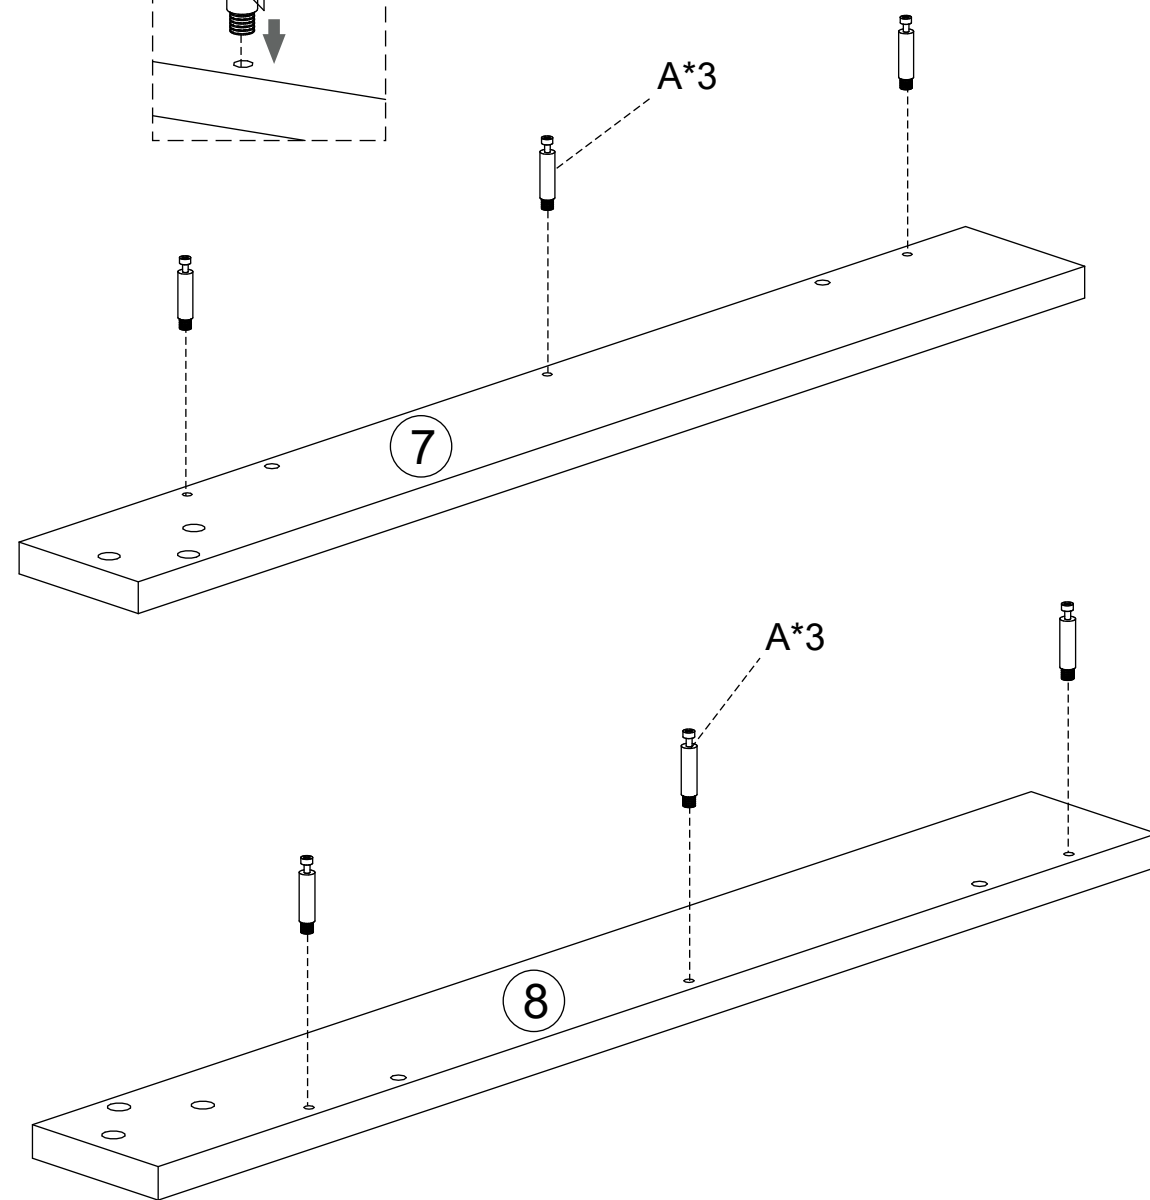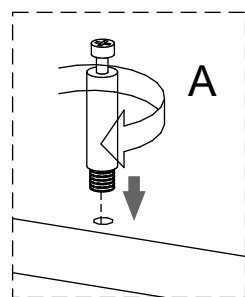

Ax12

7

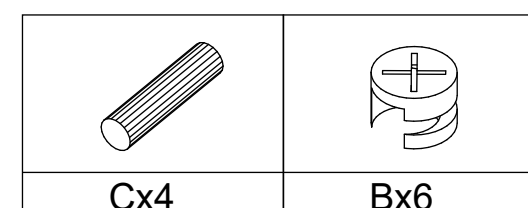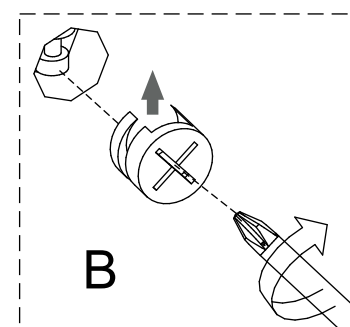
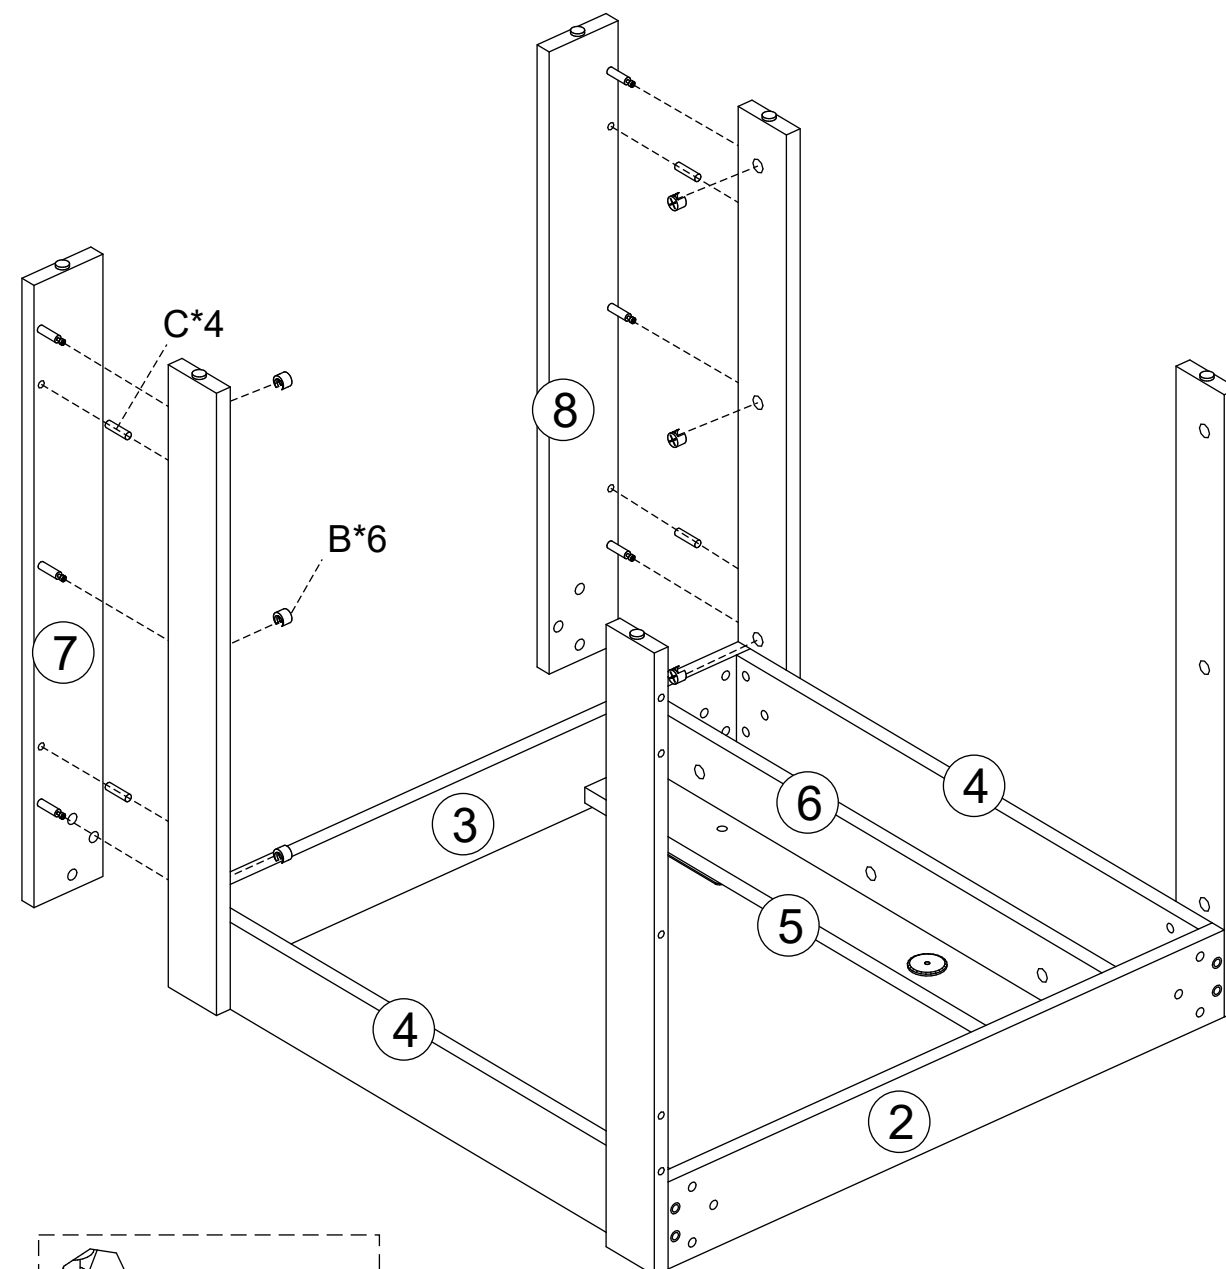


Cx4







Bx6





8

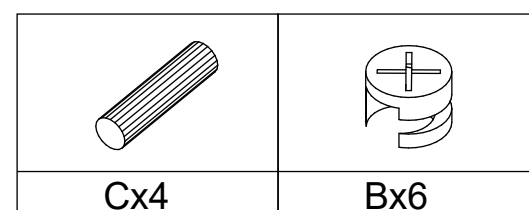
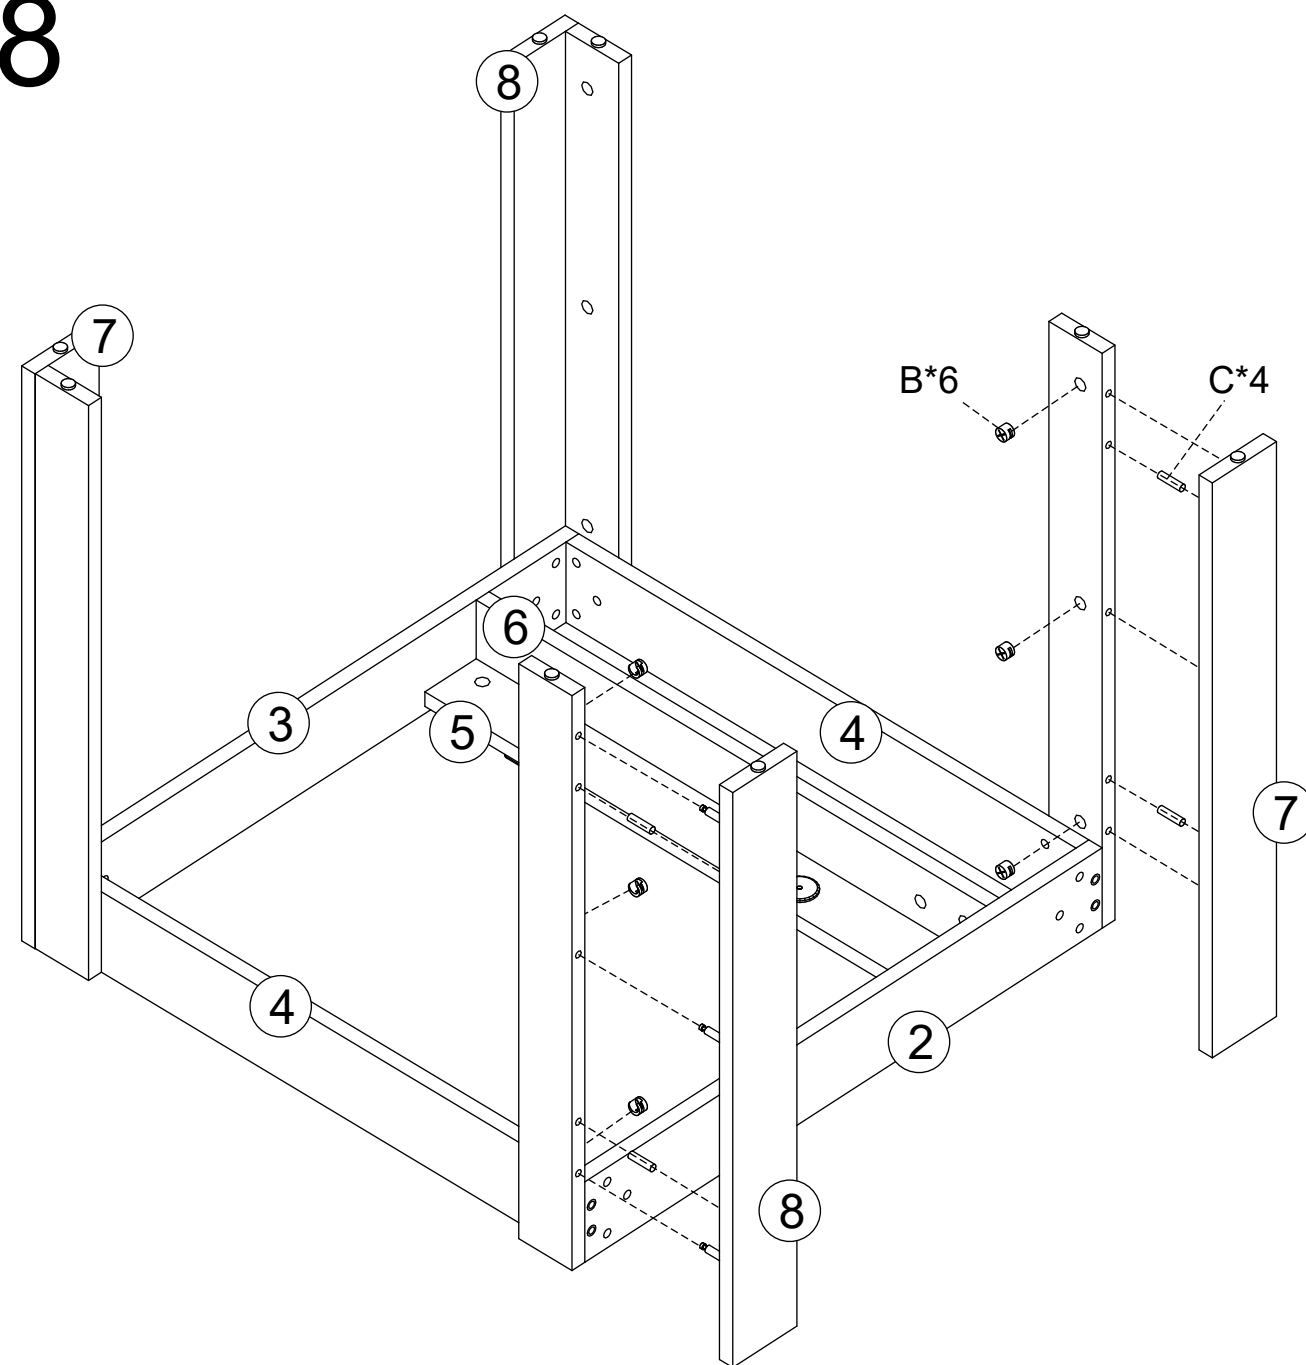


9

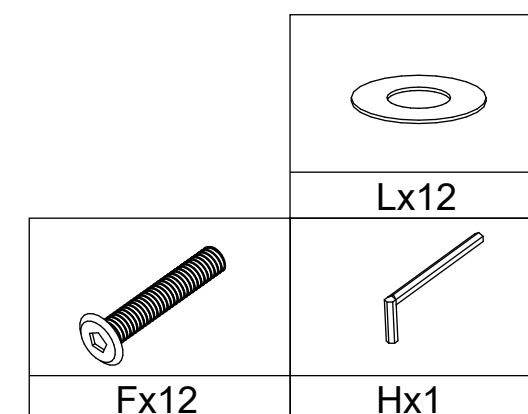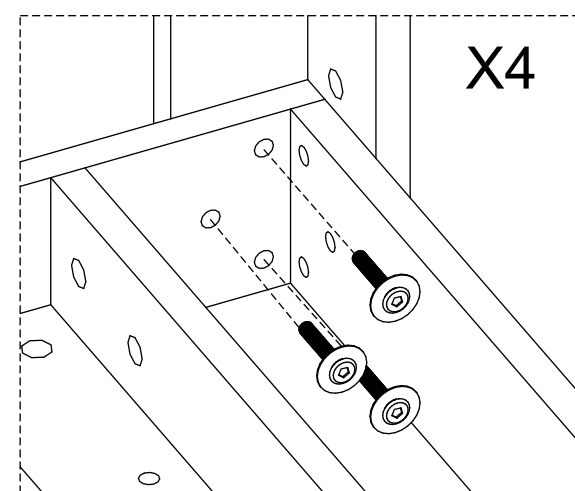
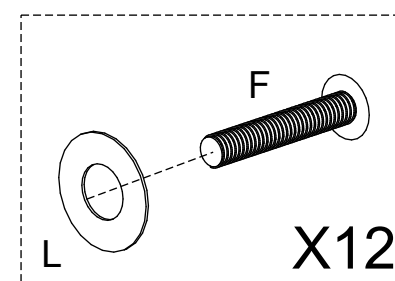
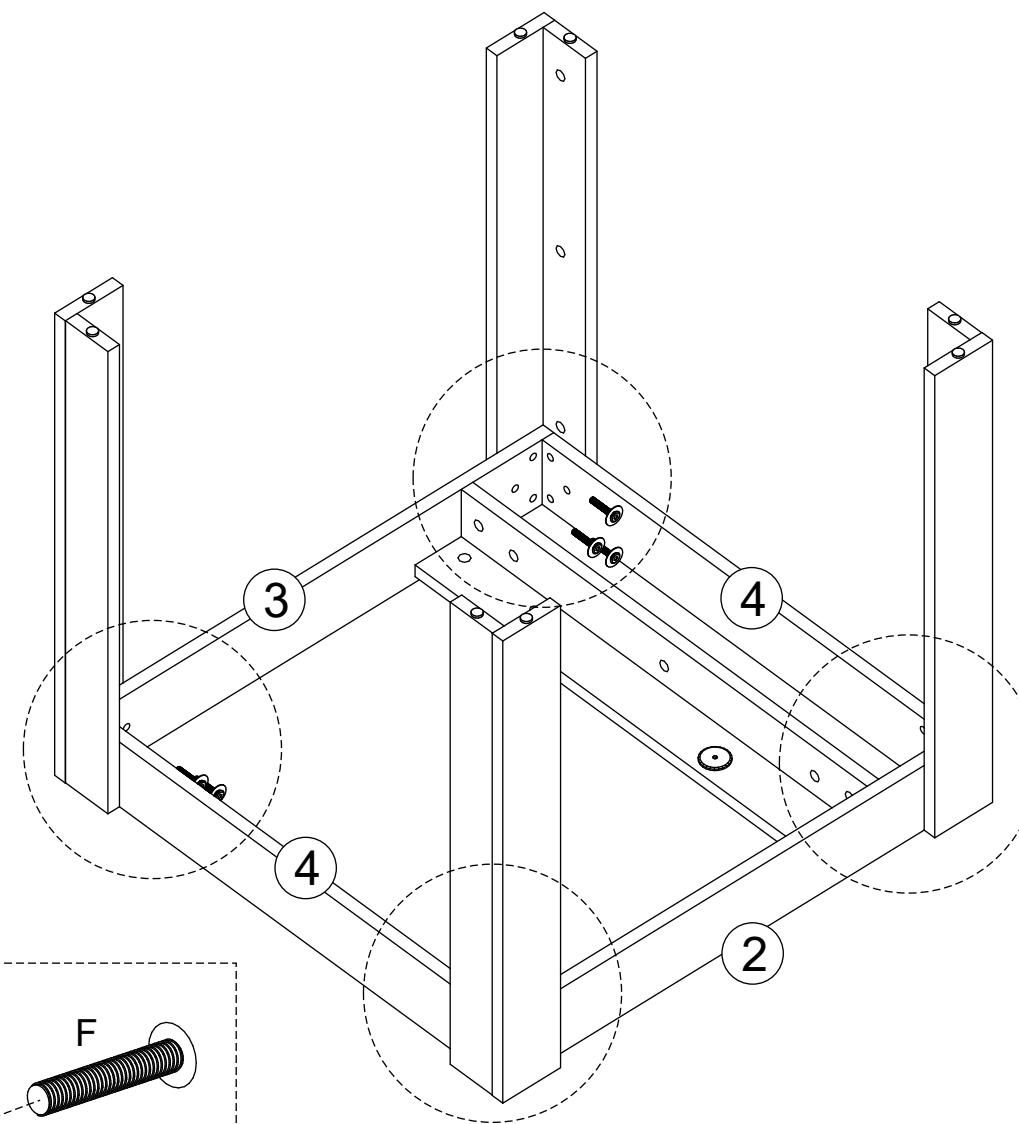


10

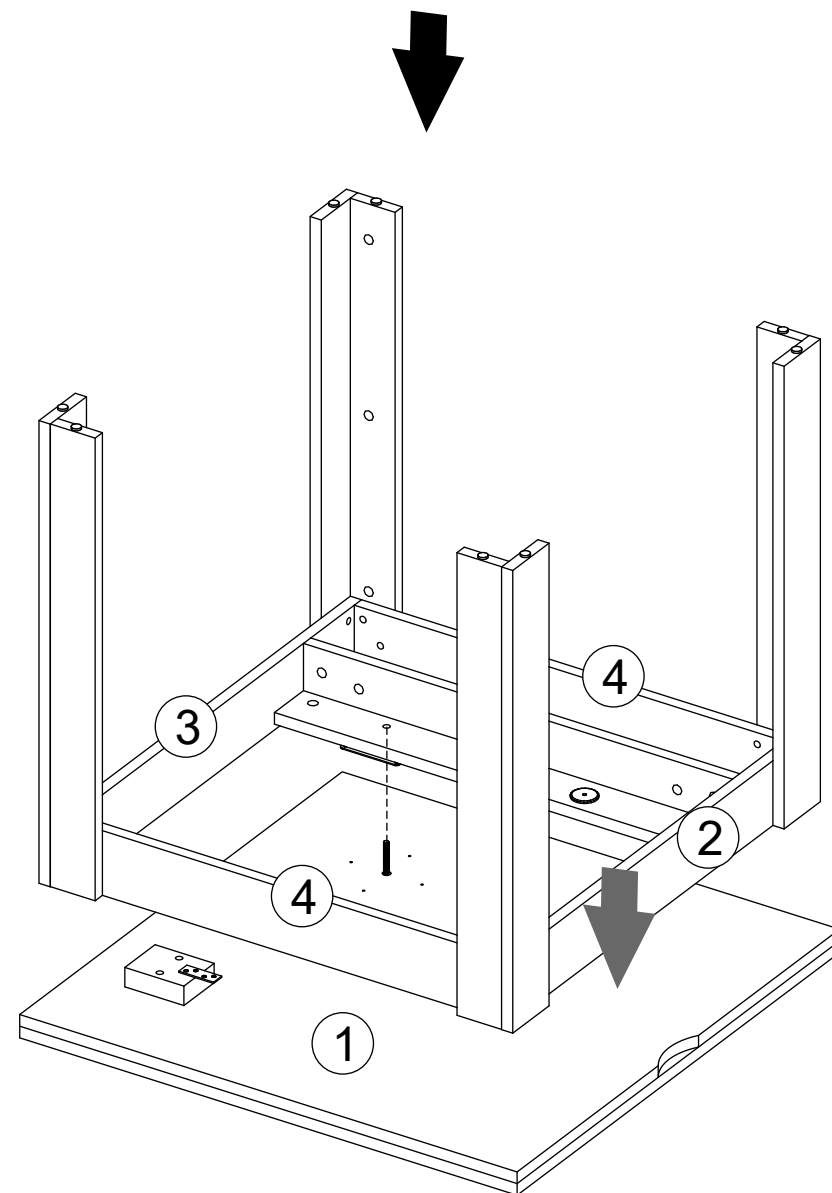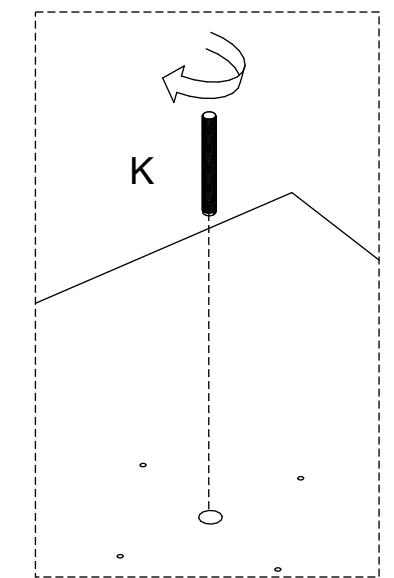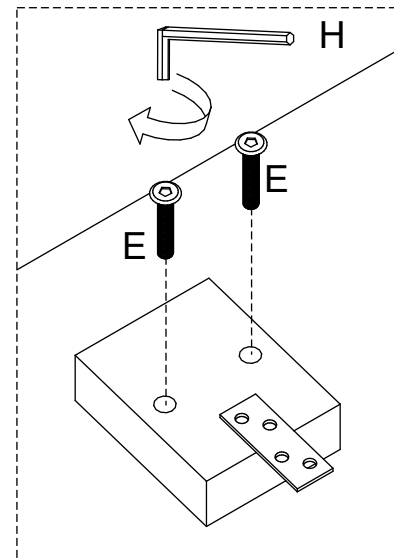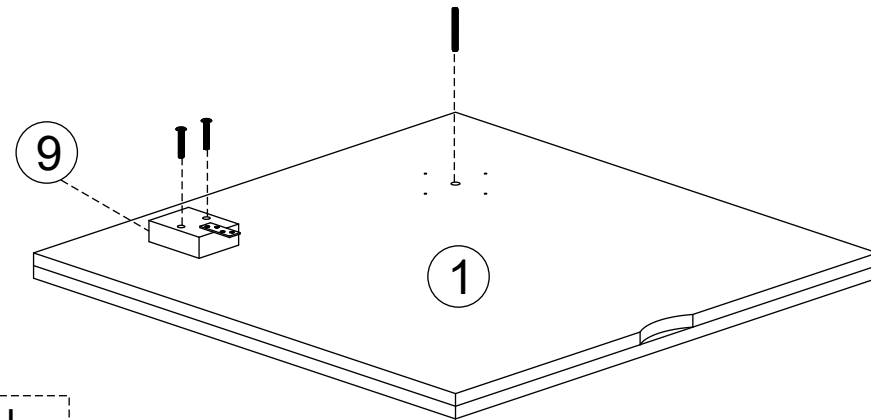

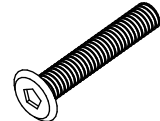
		
Kx1	Ex2	Hx1

11

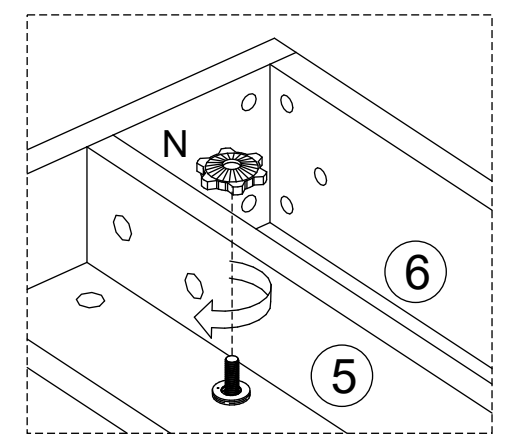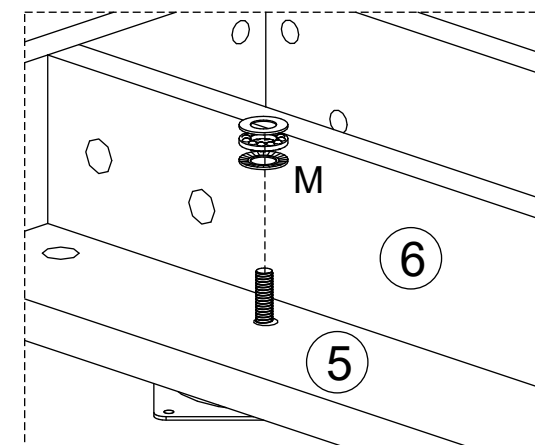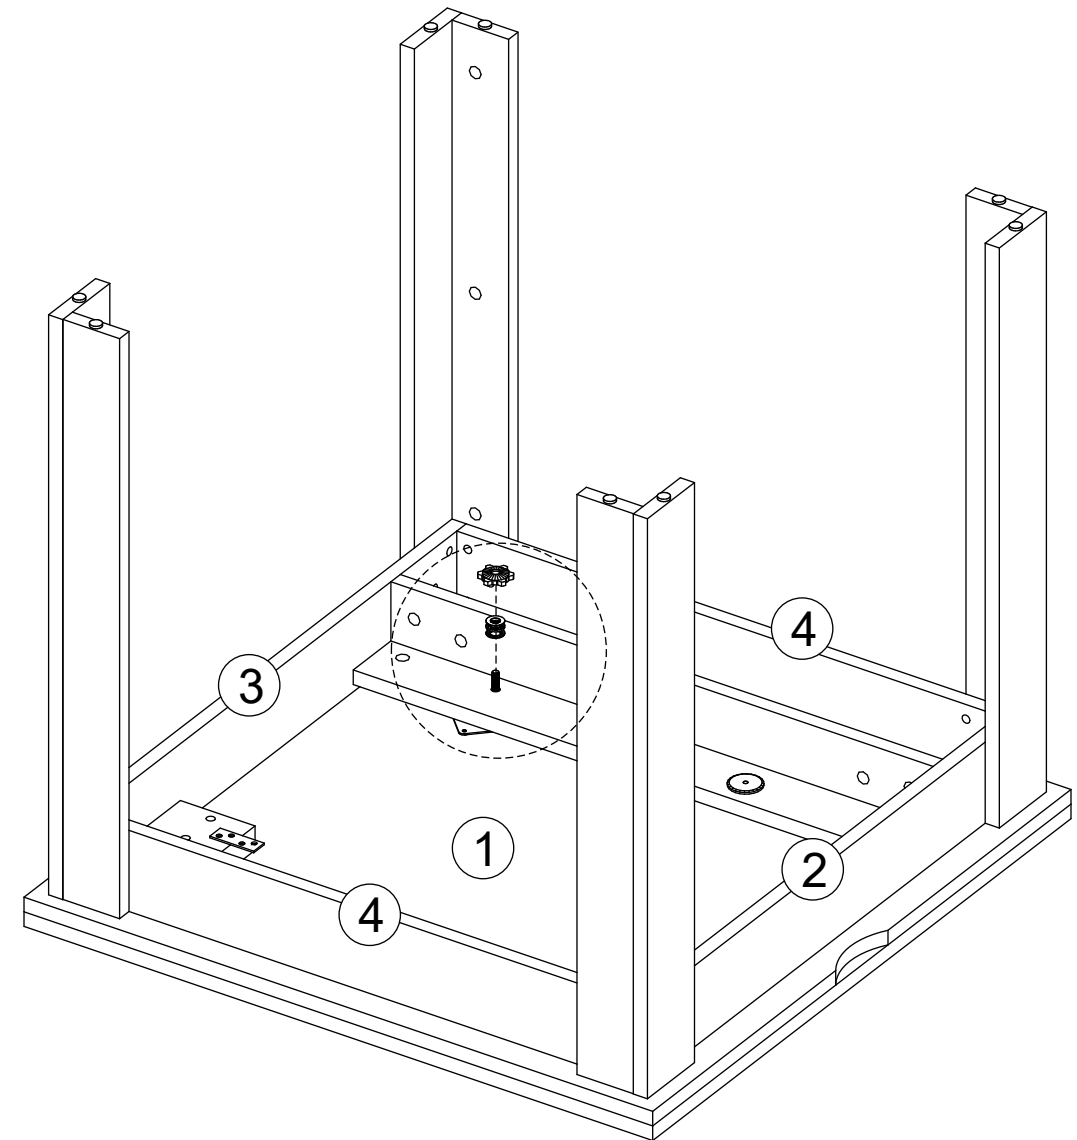


	
Mx1	Nx1


12

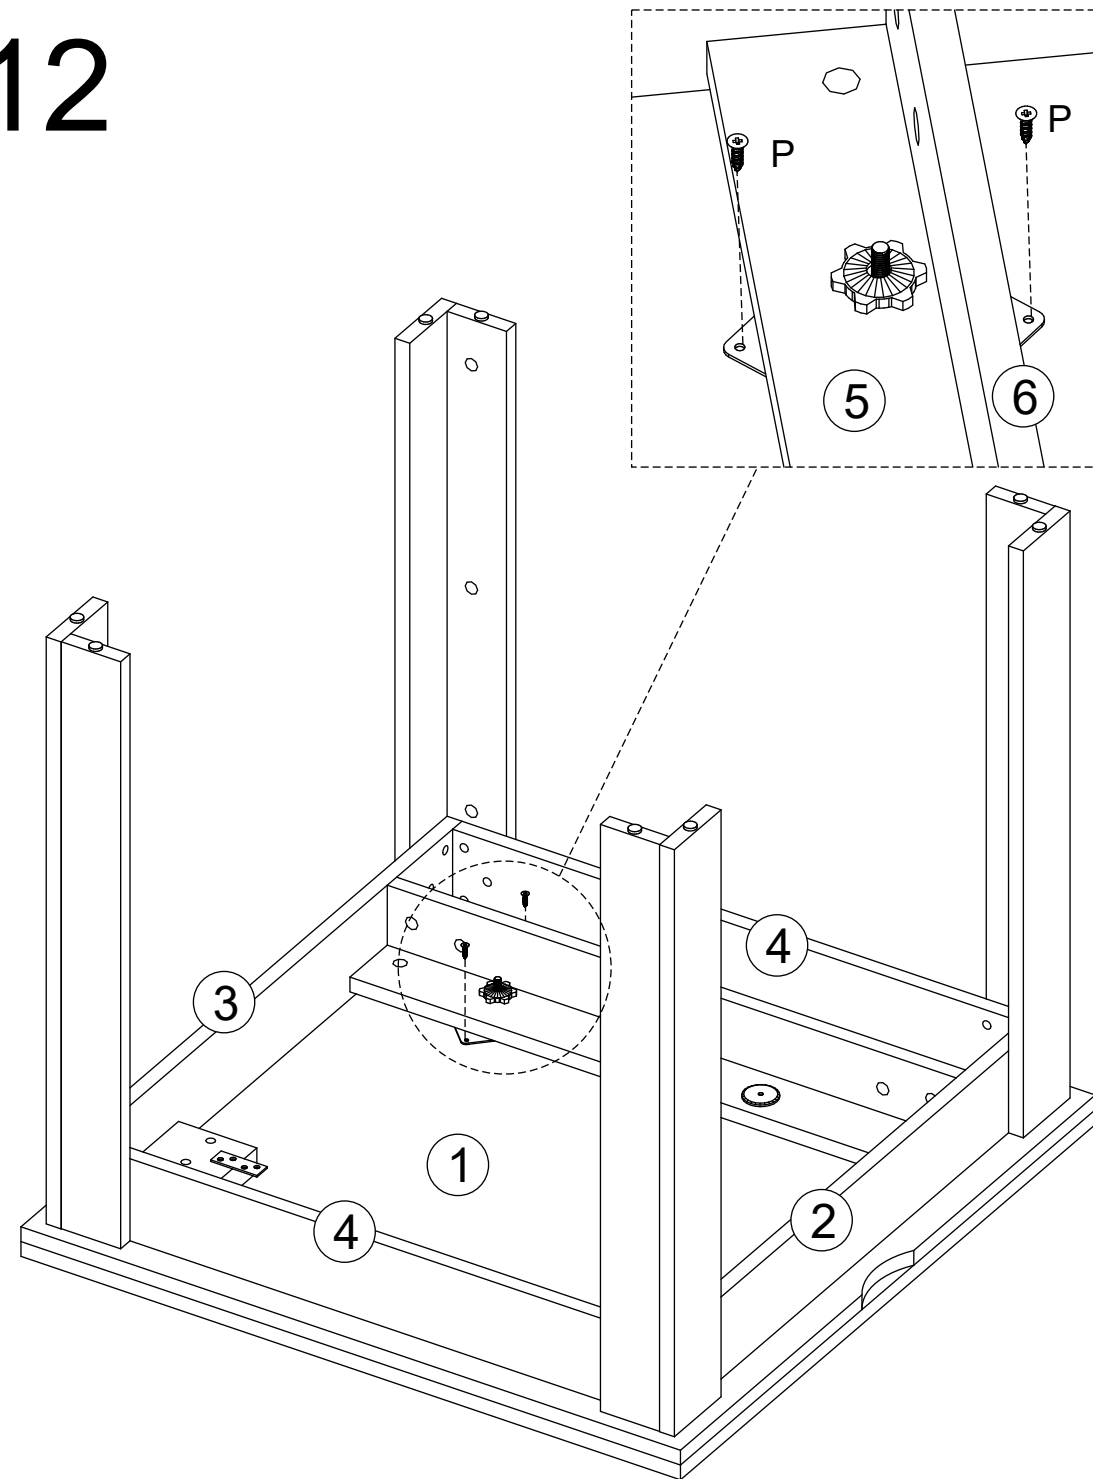


After securing part K,
rotate board 1 180° counterclockwise.

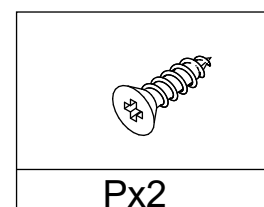




13

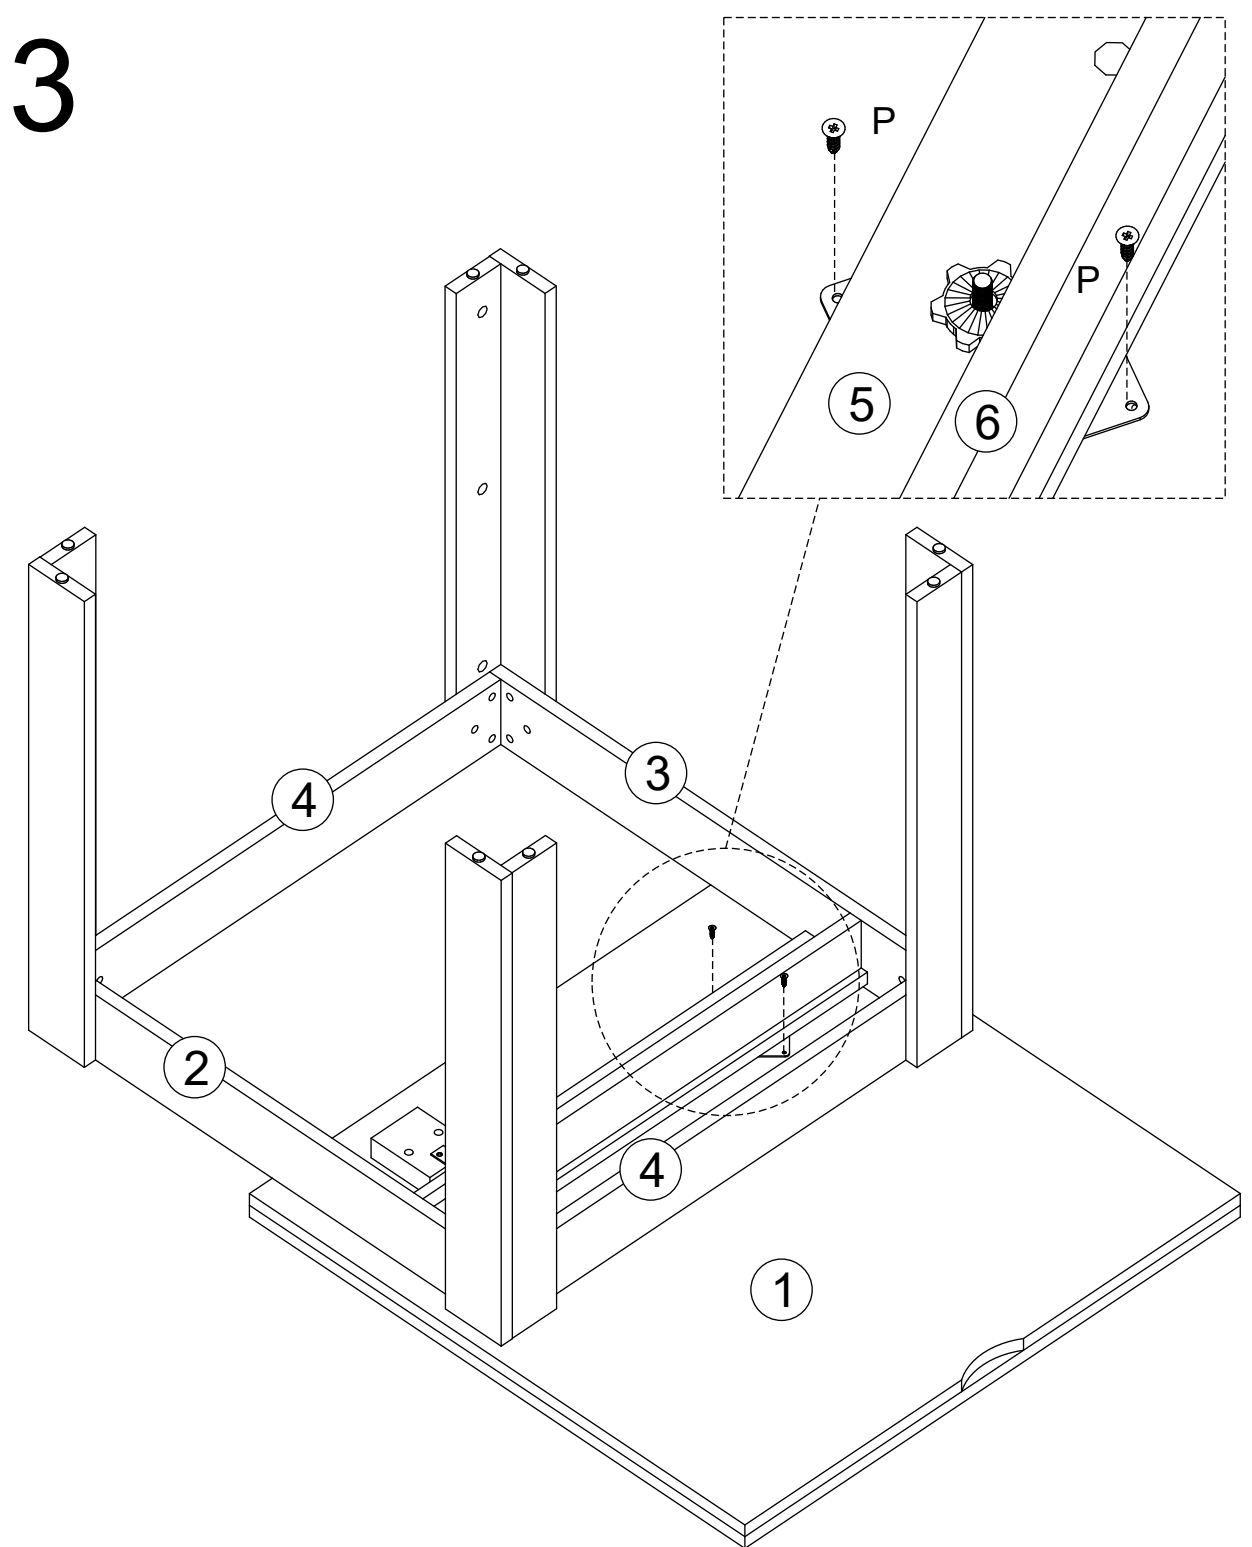

Lock the accessory K
and then restore.


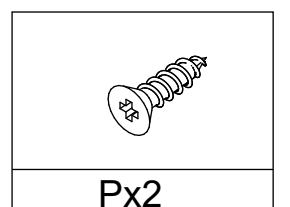


14

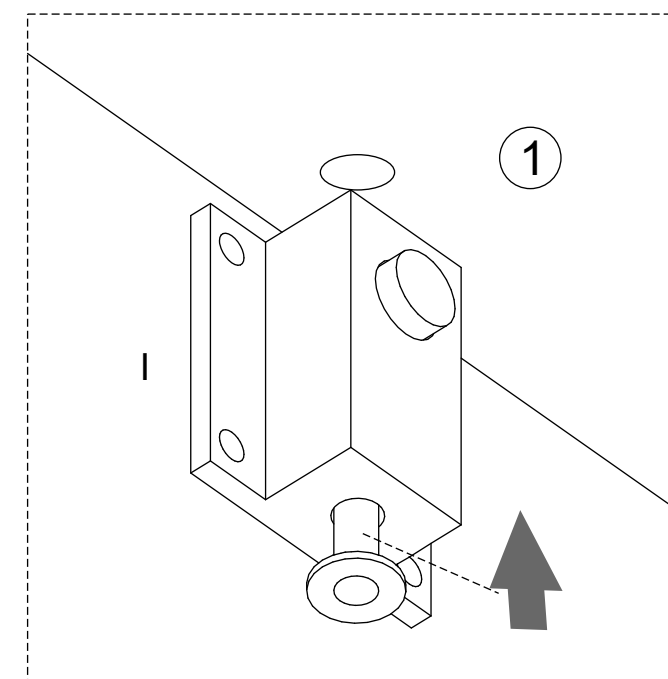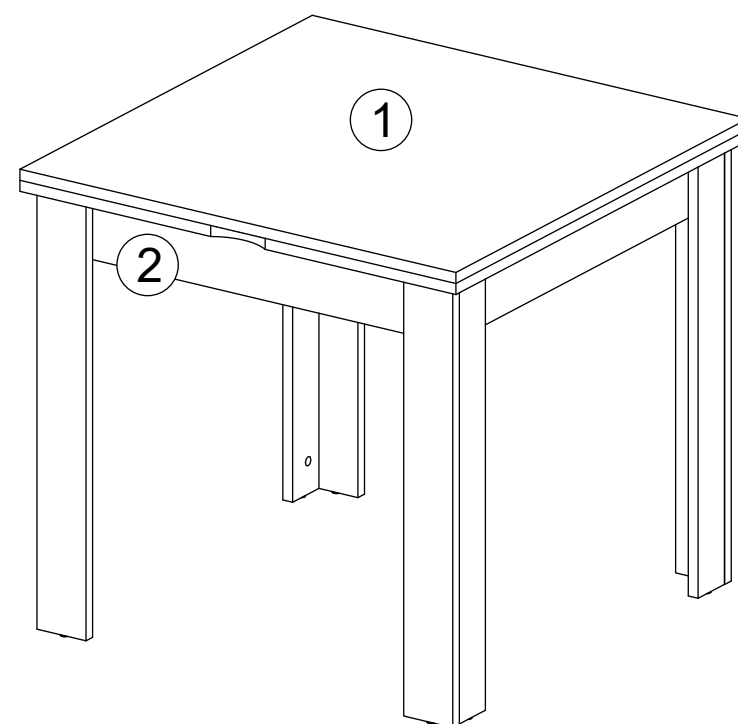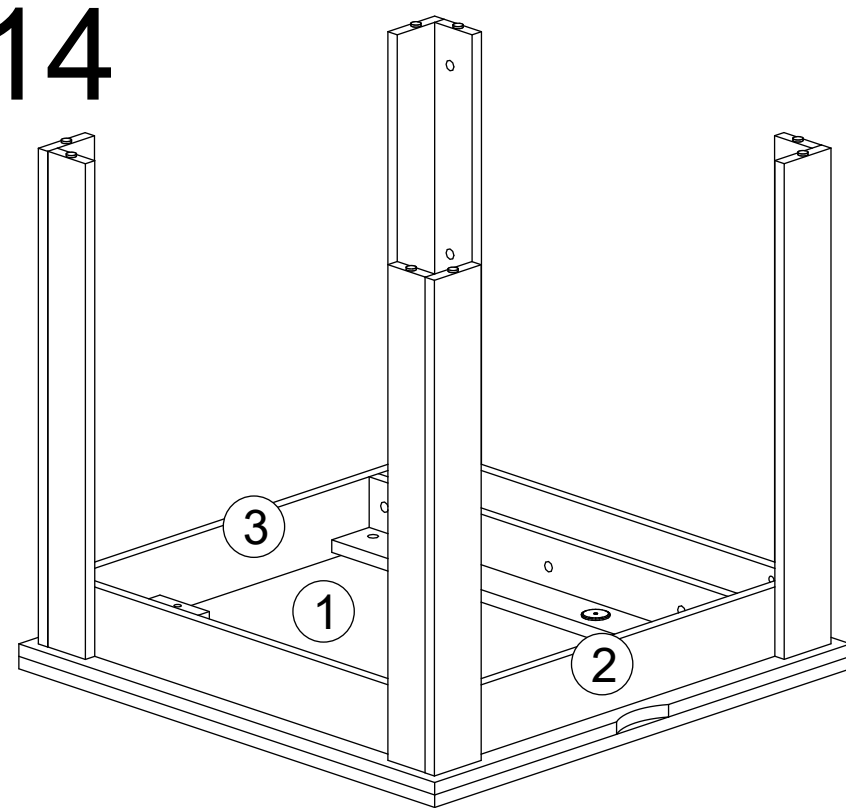


Use after aligning part I with the hole on board 1

15

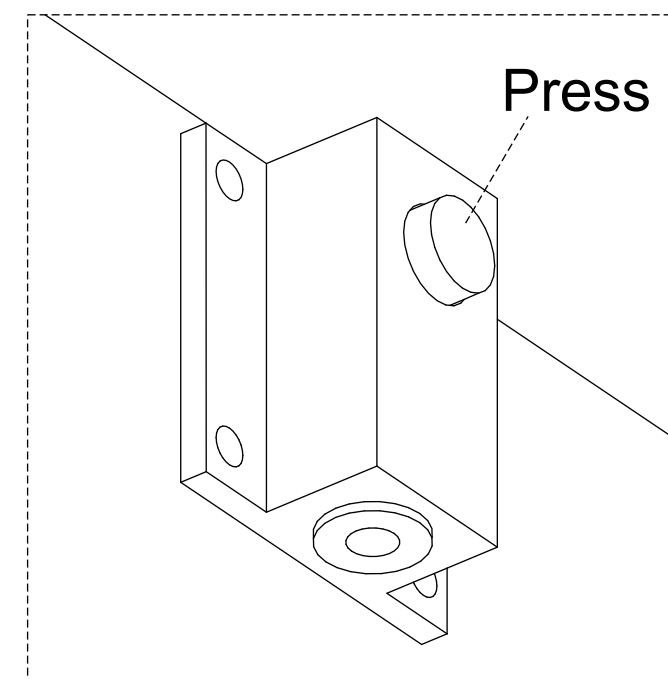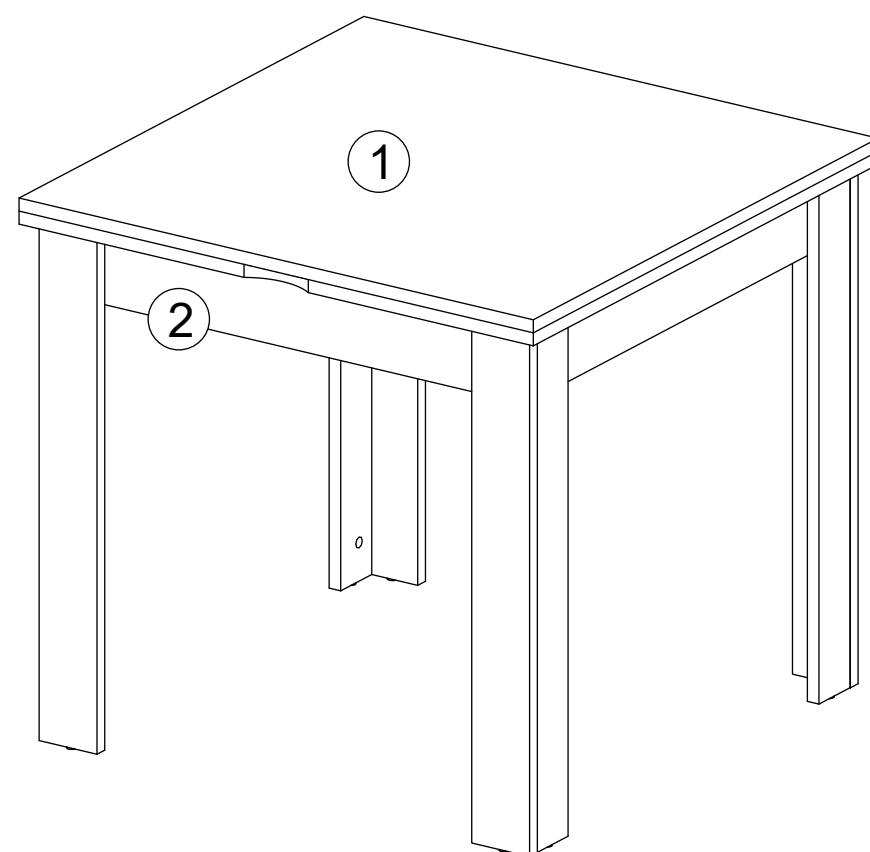


Press the button on accessory I

16


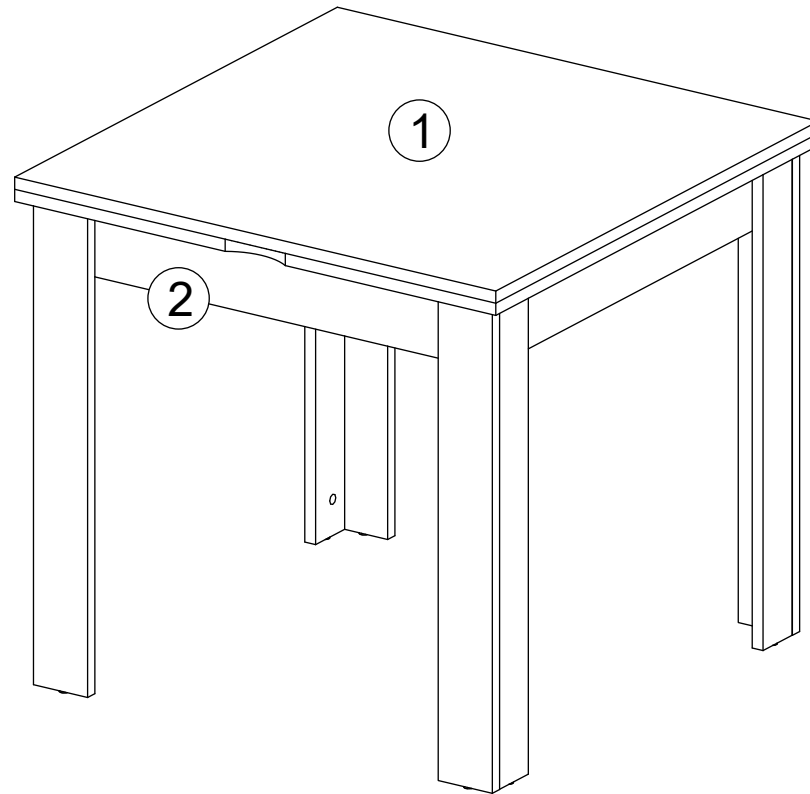


rotate board 1 180° counterclockwise.

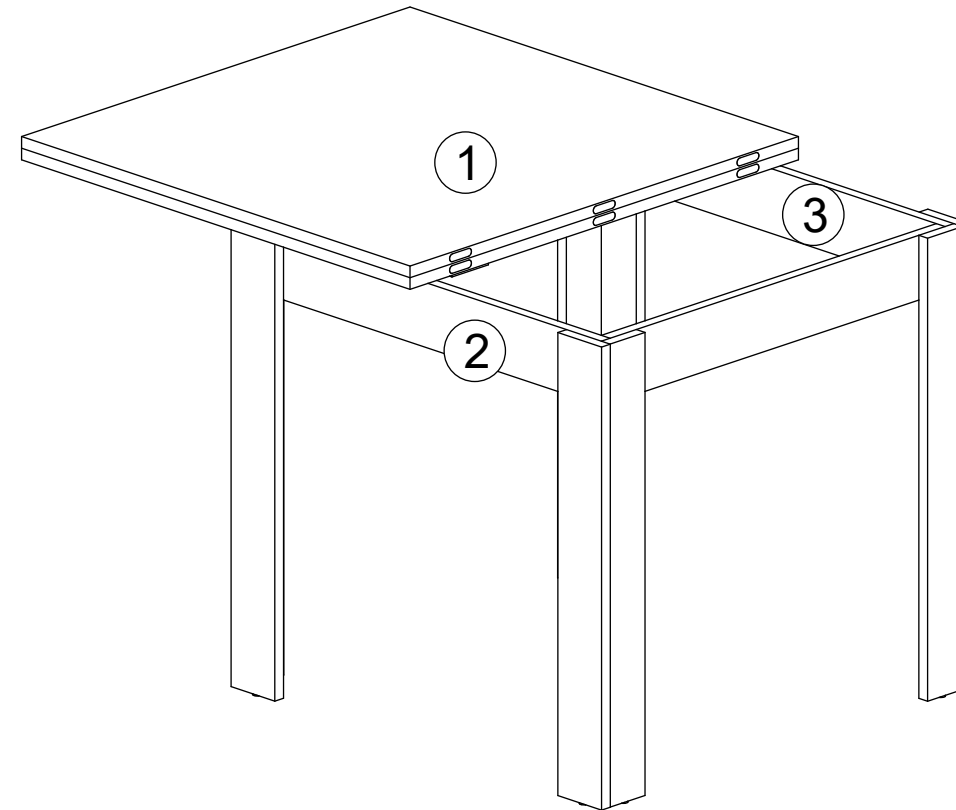

Open board 1

17

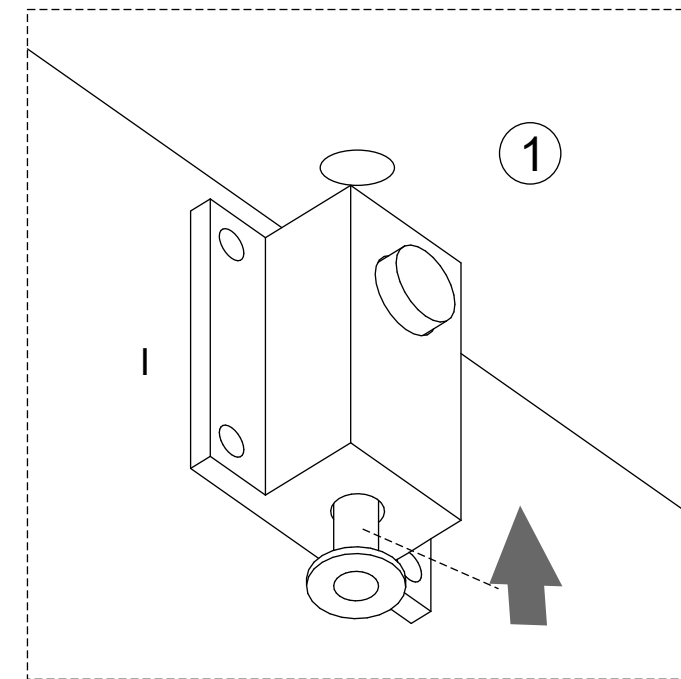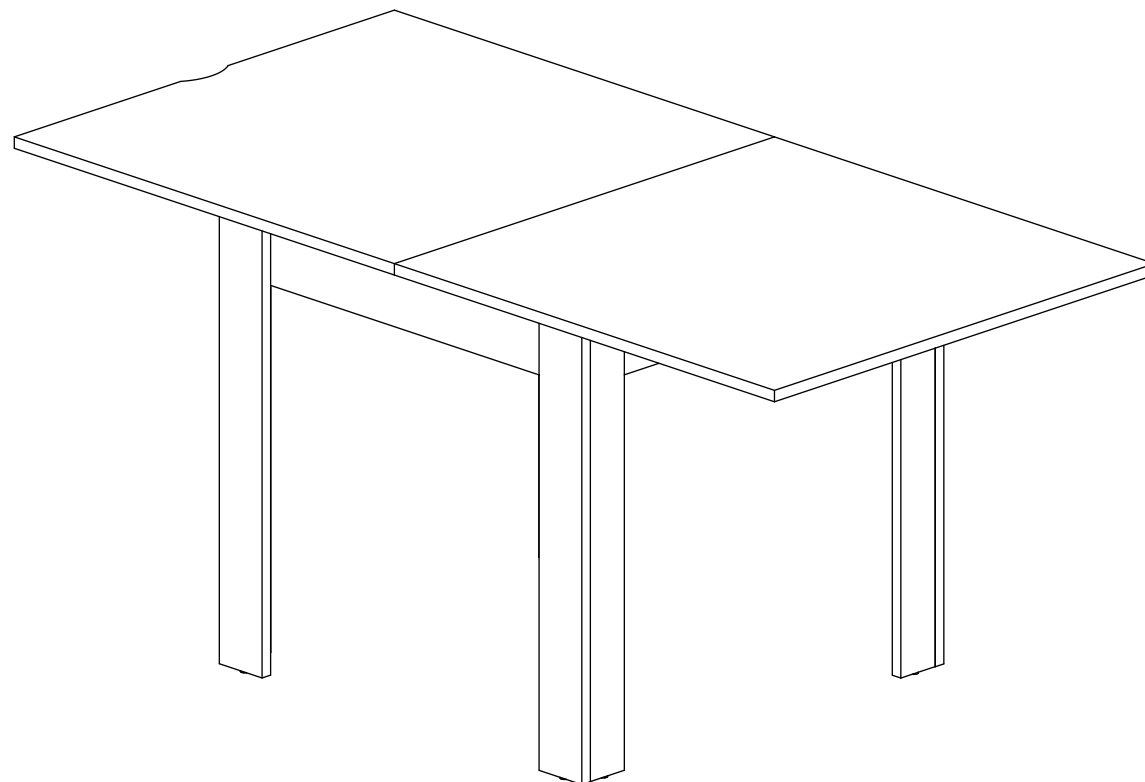

Use after aligning part I with the hole on board 1