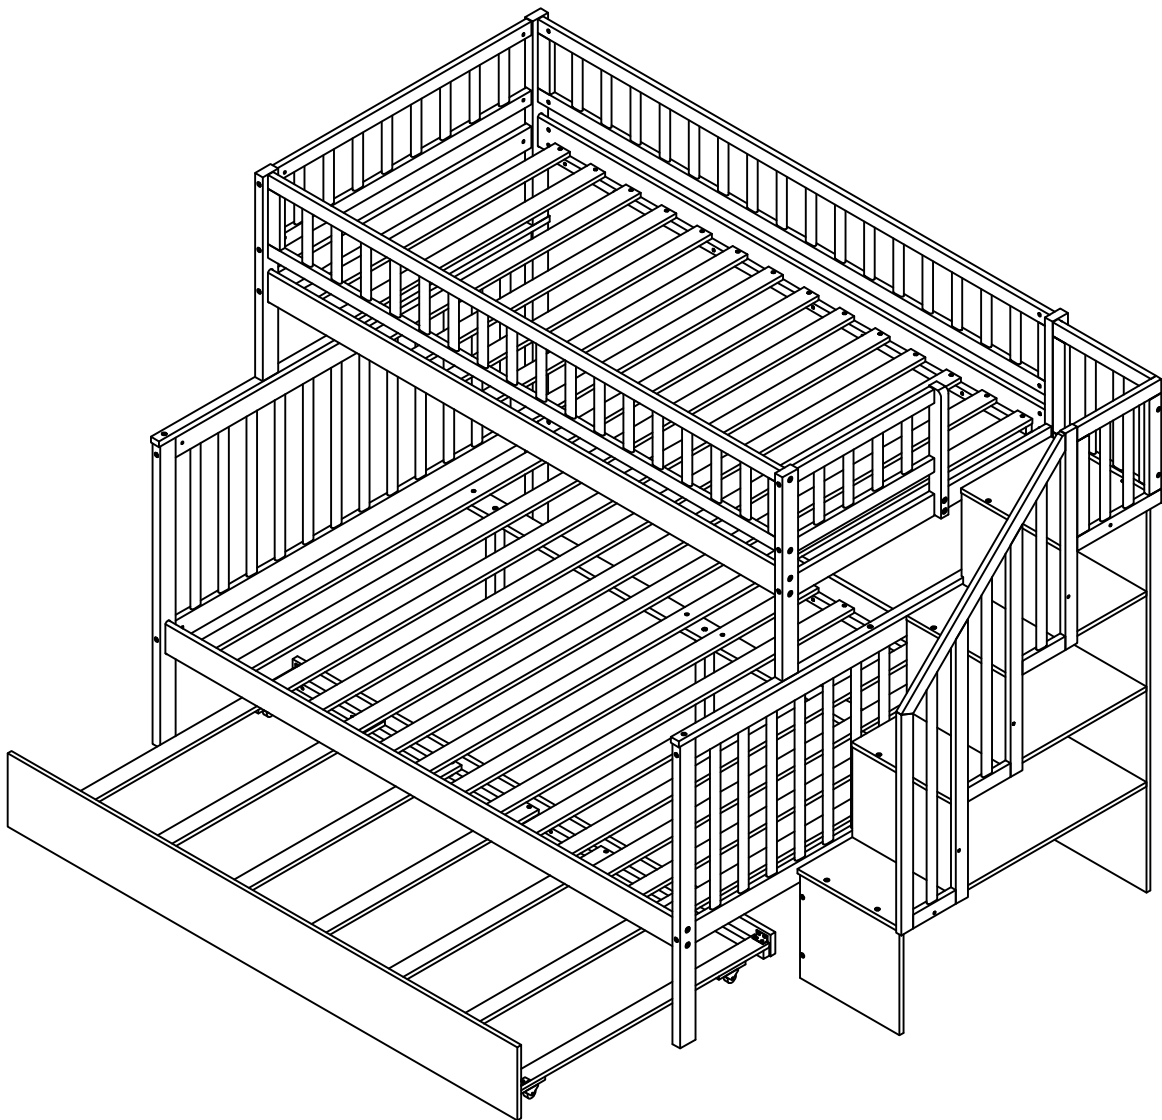


ASSEMBLY INSTRUCTIONS

TWIN/FULL/TRUNDLE SIZE BUNK BED



This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team.

WF286045/WF286046/WF286047

SAFETY WARNINGS AND GENERAL NOTES :

Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.

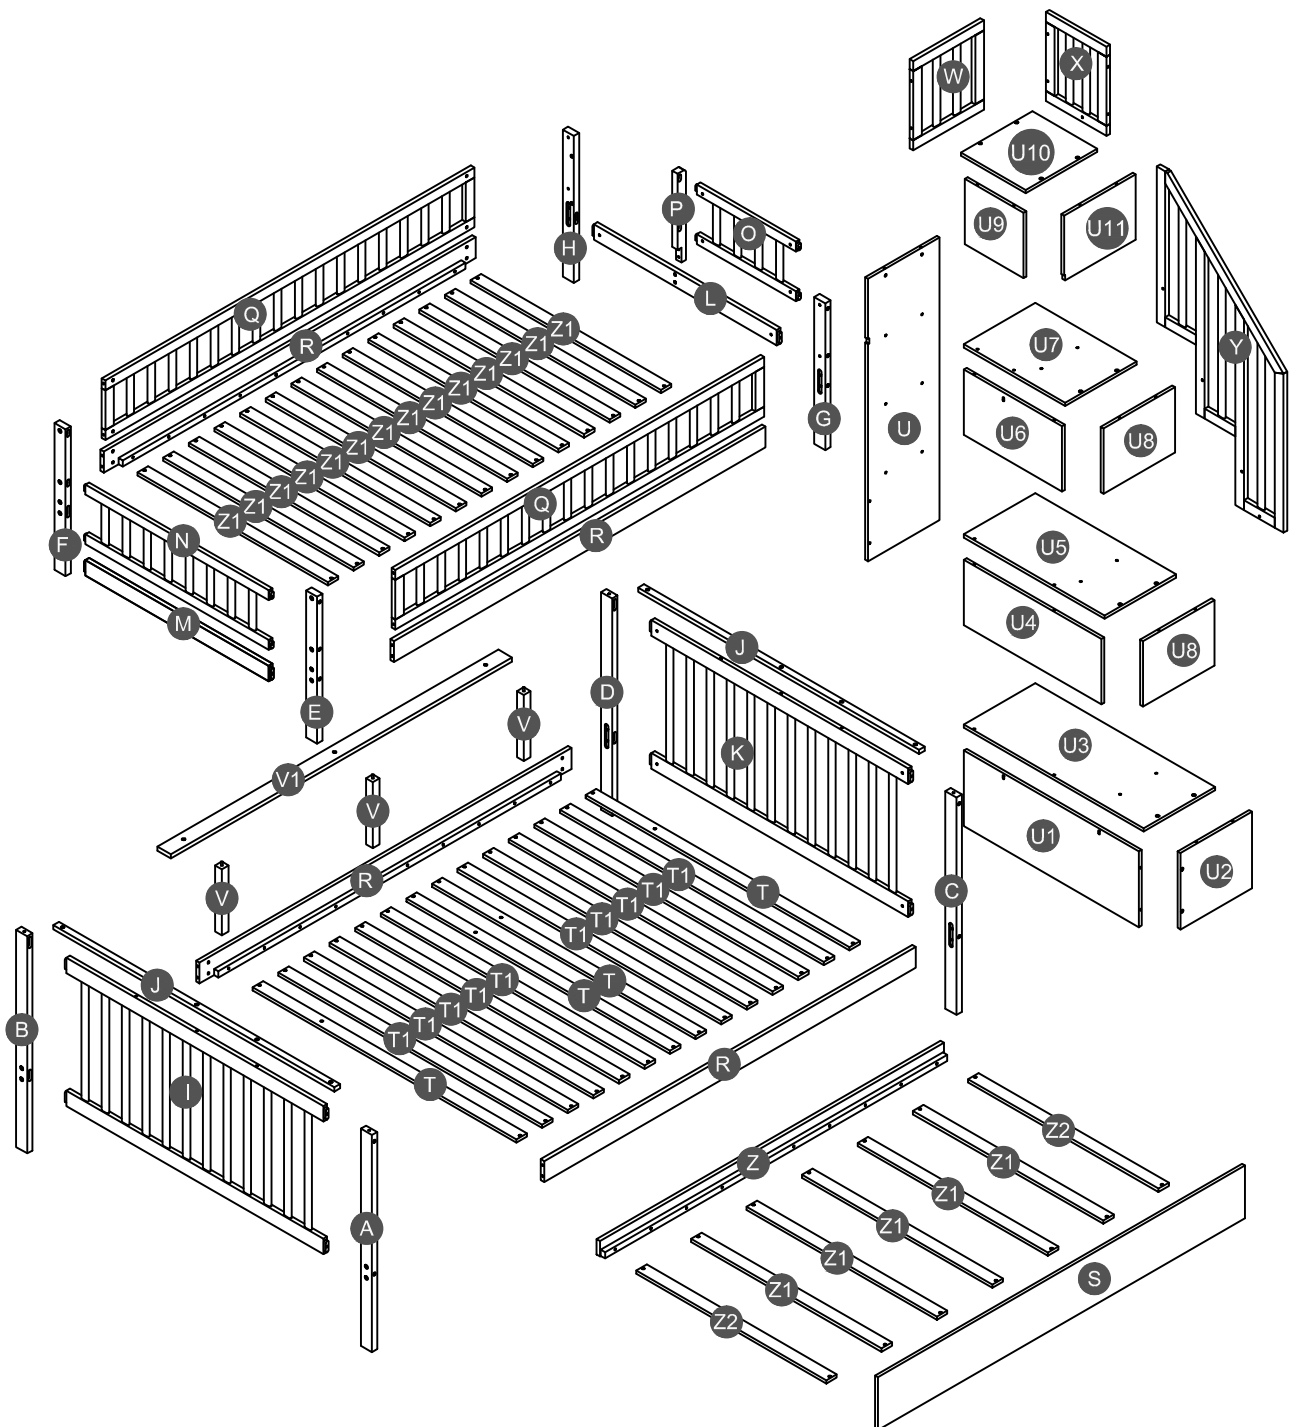
THIS BED IS DESIGNED TO USE A TWIN MATTRESSES 37 1/2" - 38 1/2" WIDE X 74"-75" LONG WITH THE TOTAL THICKNESS NOT EXCEEDING 6" FOR UPPER BUNK, FOR THE LOWER FULL-SIZE SHOULD BE 53"-54" WIDE X 74"-75" LONG, WIDE WITH 8" THICKNESS.

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:














Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers

Detail View










Part List



Hardware List WF286045

A		B		C	
Lower leg(Left front) - 1pc		Lower leg (Right back)- 1pc		Lower leg(Right front) - 1pc	
D		E		F	
Lower leg (Left back)- 1pc		Upper leg(Left front) - 1pc		Upper leg(Right back) - 1pc	
G		H		J	
Upper leg (Right front)- 1pc		Upper leg (Left back)- 1pc		Cap for lower HB&FB-2pcs	
Q		R		N	
Upper front & back side rail-2pcs		Lower&upper side rail - 4pcs		Upper HB - 1pc	
O		S		Z	
Upper FB - 1pc		Trundle front panel - 1pc		Trundle back panel - 1pc	
Z1		Z2		V1	
Slats - 8pcs		Trundle slats - 2pcs		Lower support slat - 1pc	











WF286046

U		U1		U2	
Back panel - 1pc		Lower left side panel - 1pc		Lower front panel - 1pc	
U3		U4		U5	
Lower step ladder panel - 1pc		Lower center left side panel - 1pc		Lower center step ladder panel - 1pc	
U6		U7		U8	
Upper center left side panel - 1pc		Upper center step ladder panel - 1pc		Center front panel - 2pcs	
U9		U10		U11	
Upper left side panel - 1pc		Upper step ladder panel - 1pc		Upper front panel - 1pc	







Part List

T  Lower slats - 4pcs	T1  Lower slats - 10pcs
--	--

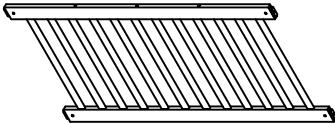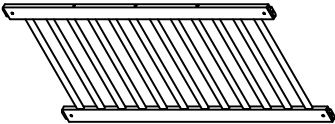
WF286047

I  Lower HB - 1pc	K  Lower FB - 1pc	L  Horizontal upper bar FB-1pc
M  Horizontal upper bar HB-1pc	P  Support guard rail - 1pc	Z1  Slats - 11pcs
V  Leg support - 3pcs	W  Upper guard back - 1pc	X  Upper guard side - 1pc
Y  Guard side - 1pc		

Hardware List

1	 Ø8*30mm Wood dowel (12pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (18pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (24pcs)
4	 (Ø12)1/4"*70mm Hex-Head bolts (2pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (37pcs)	6	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
7	 (Ø12)1/4"*30mm Hex-Head bolts (3pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(79pcs)	9	 Ø9*90mm Connecting bar (4pcs)
10	 (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	11	 (1/4")4.5*58mm Allen key (1pc)	12	 Ø4*30mm Wood screws (82pcs)
13	 Ø1/4"*19*2mm Flat Washer (3pcs)	14	 95*95*18*3mm Metal bracket (2pcs)	15	 Ø3.5*15mm Wood screws (16pcs)
16	 100*63*20mm Wheels (4pcs)	17	 40*18*18*2mm Metal bracket (2pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.

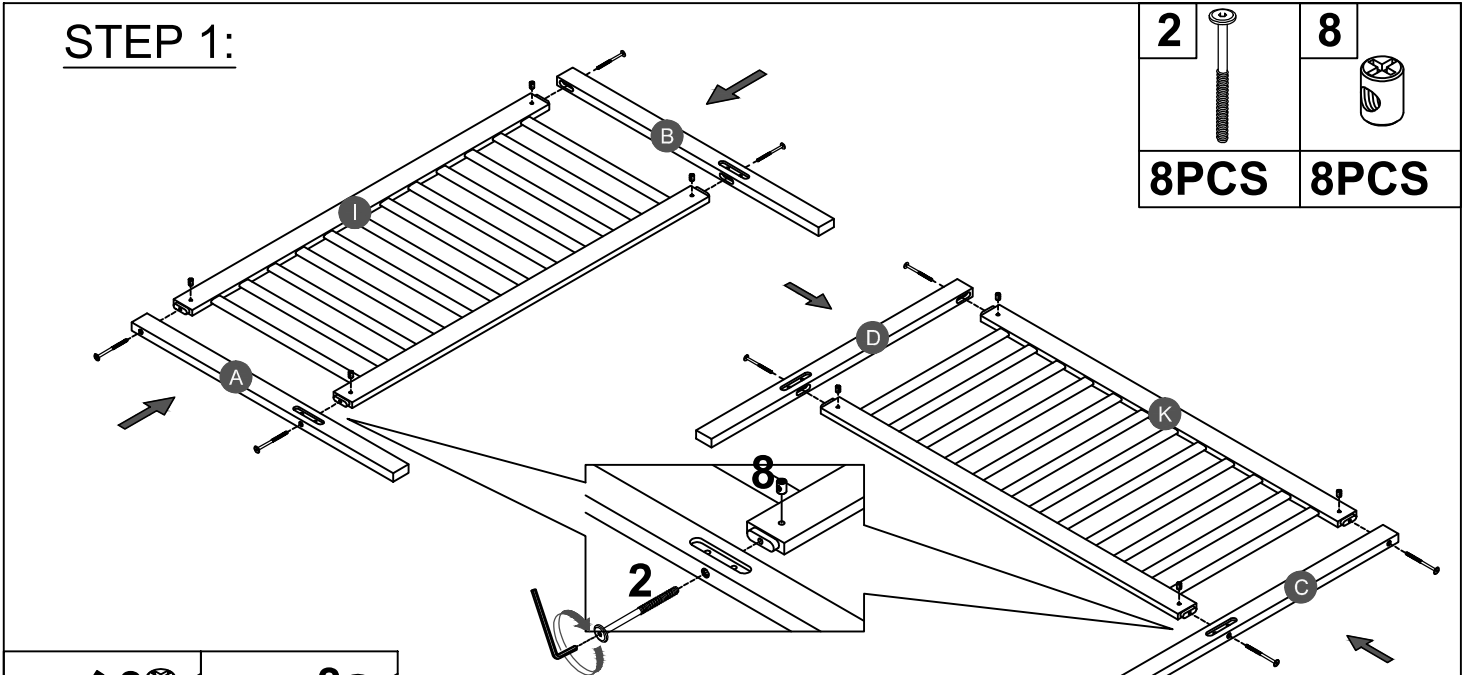STEP 1:




2	8
	
8PCS	8PCS

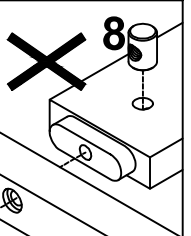
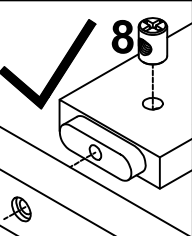


Note:Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

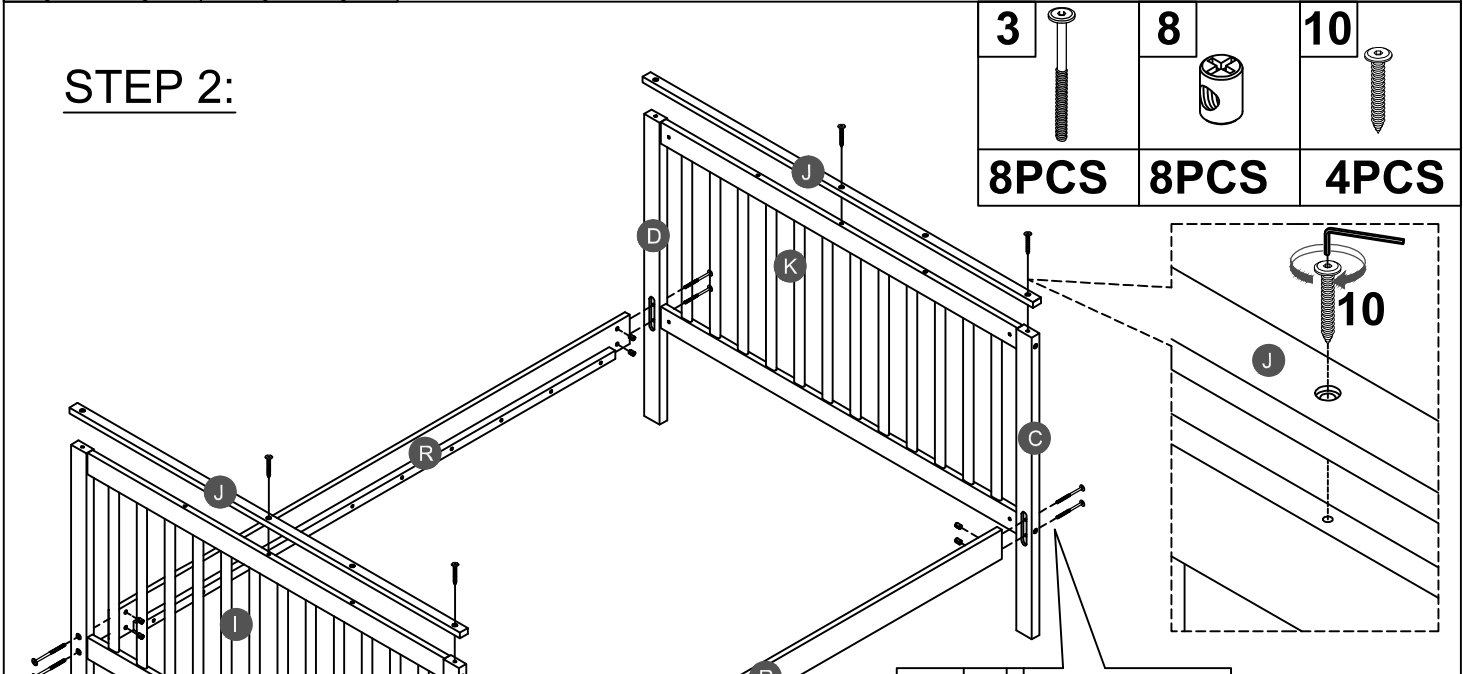STEP 2:




3	8	10
		
8PCS	8PCS	4PCS

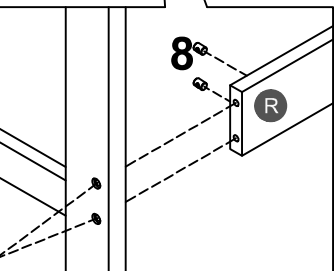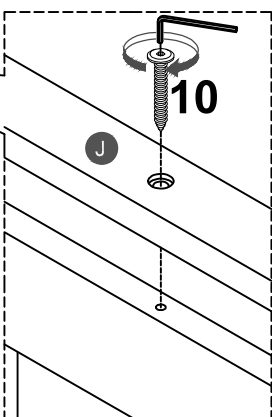

STEP 3:


2	4	6	8
			
10PCS	2PCS	2PCS	12PCS

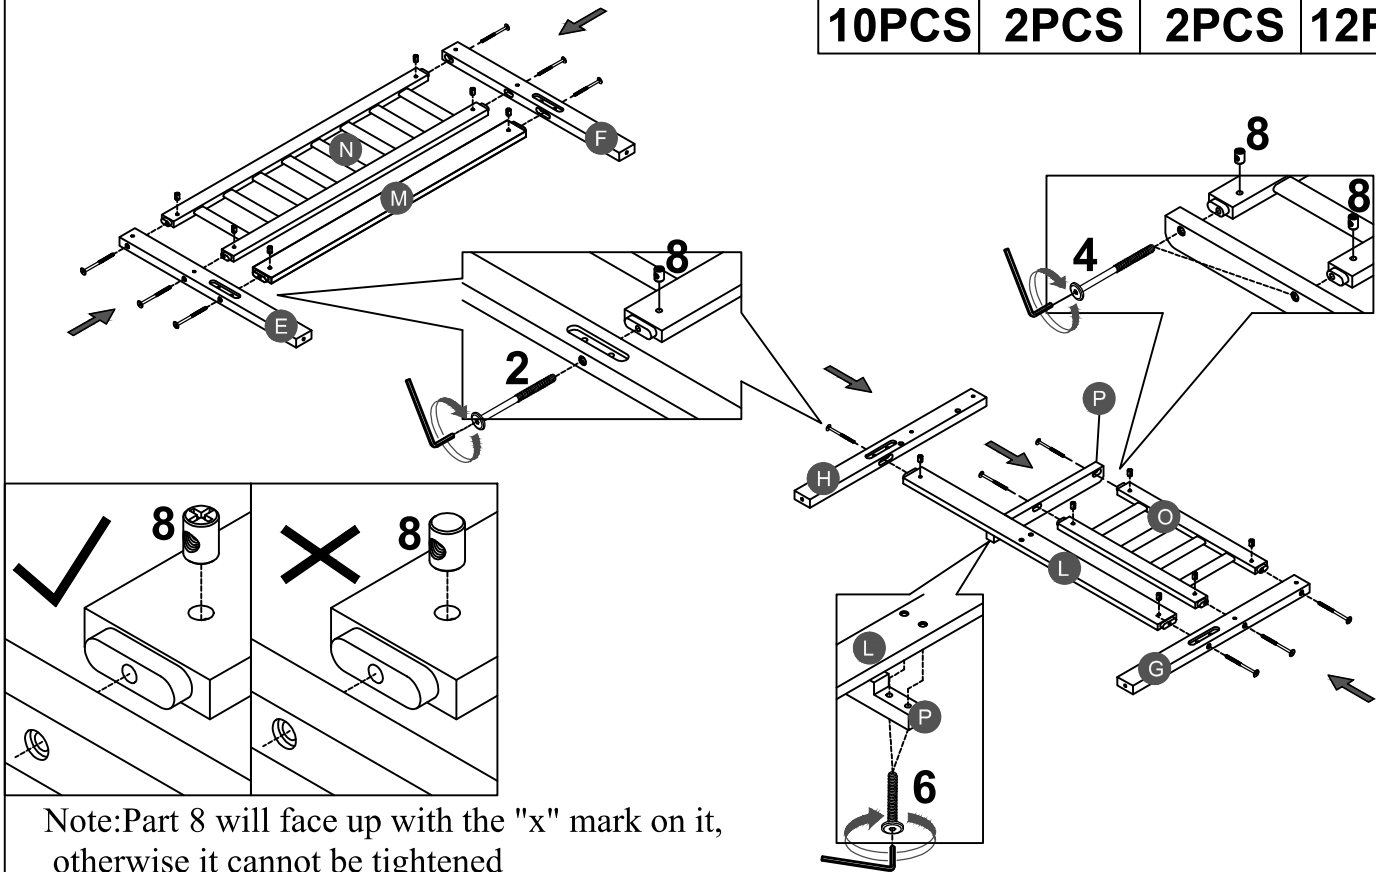

STEP 4:

Balcony don't tighten these yet . Leave them a bit loose to make fitting the lower side rail more easily.

3	8
	
16PCS	16PCS


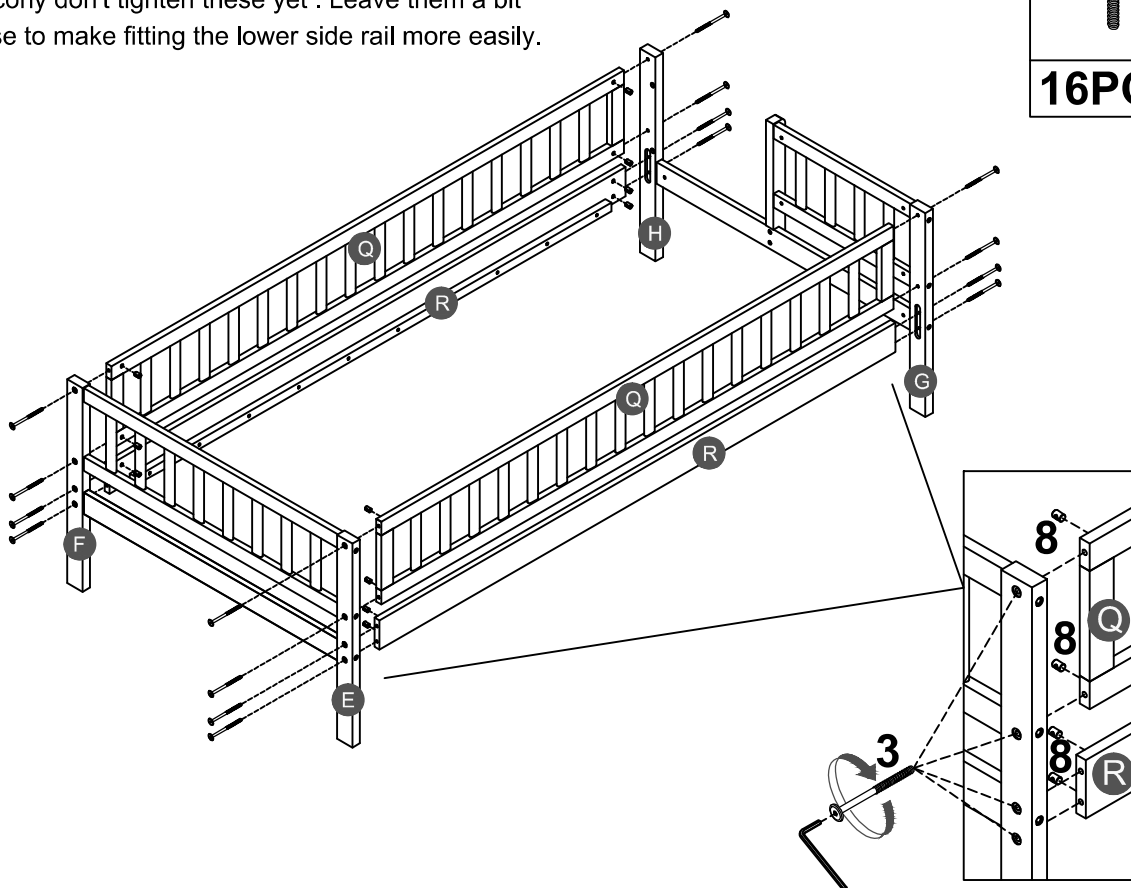


STEP 5:

9




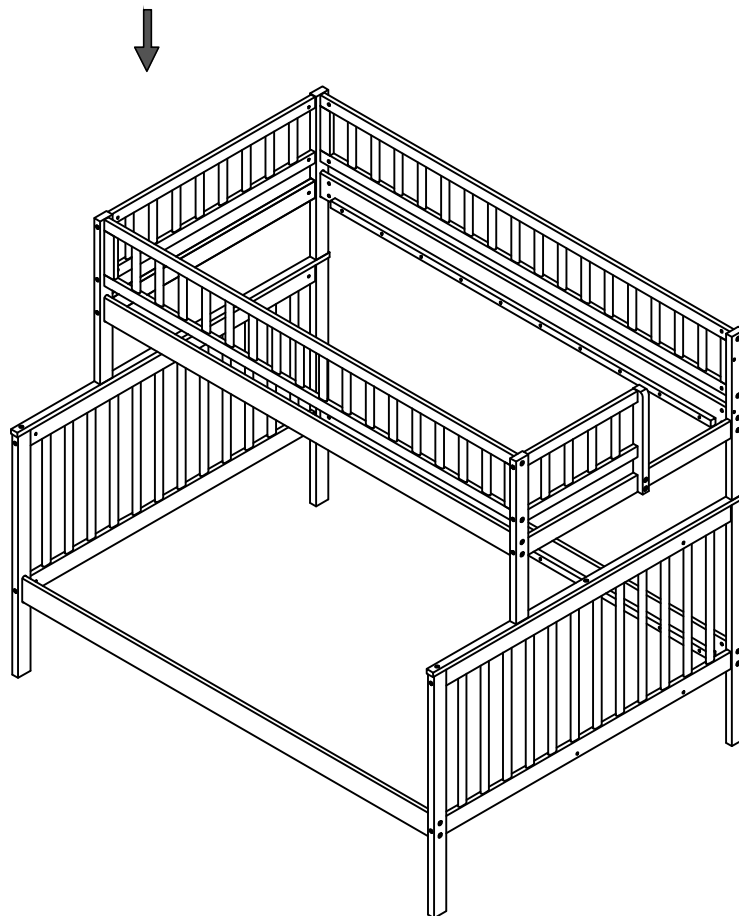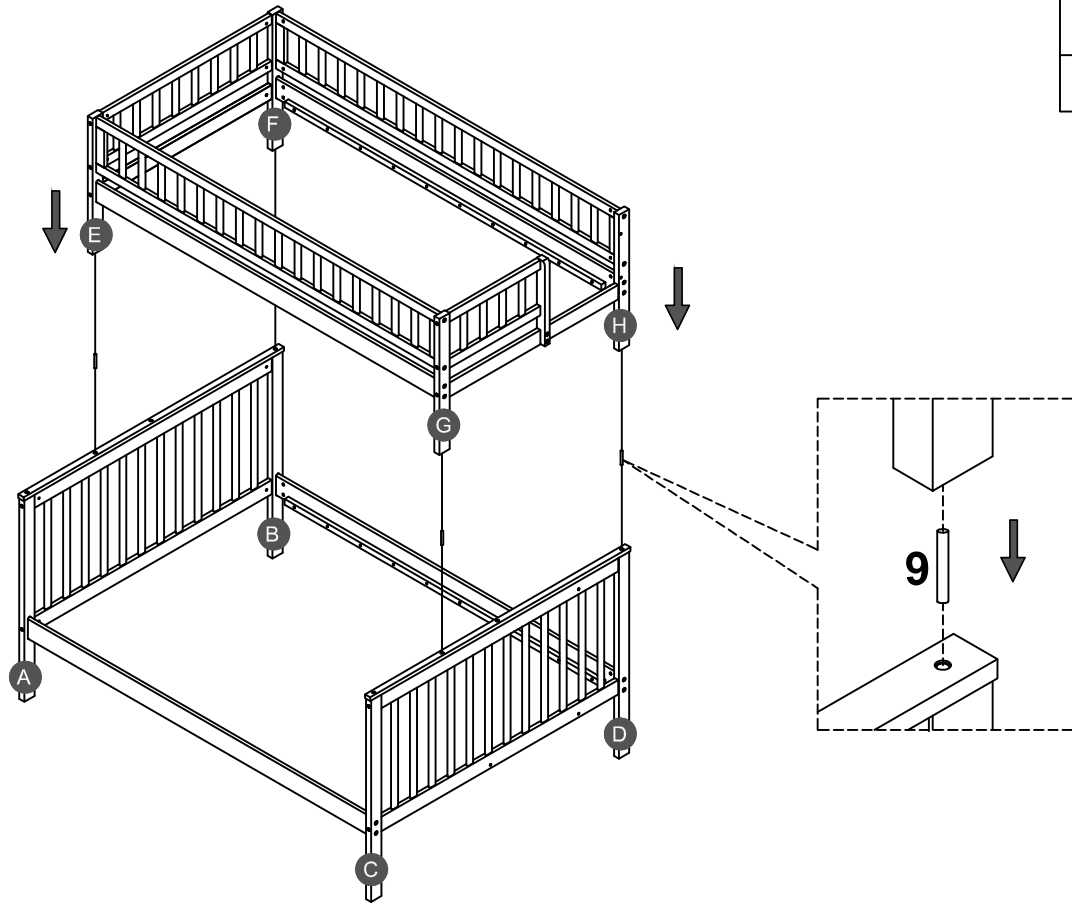4PCS




STEP 6:


1	5	8
		
12PCS	26PCS	26PCS

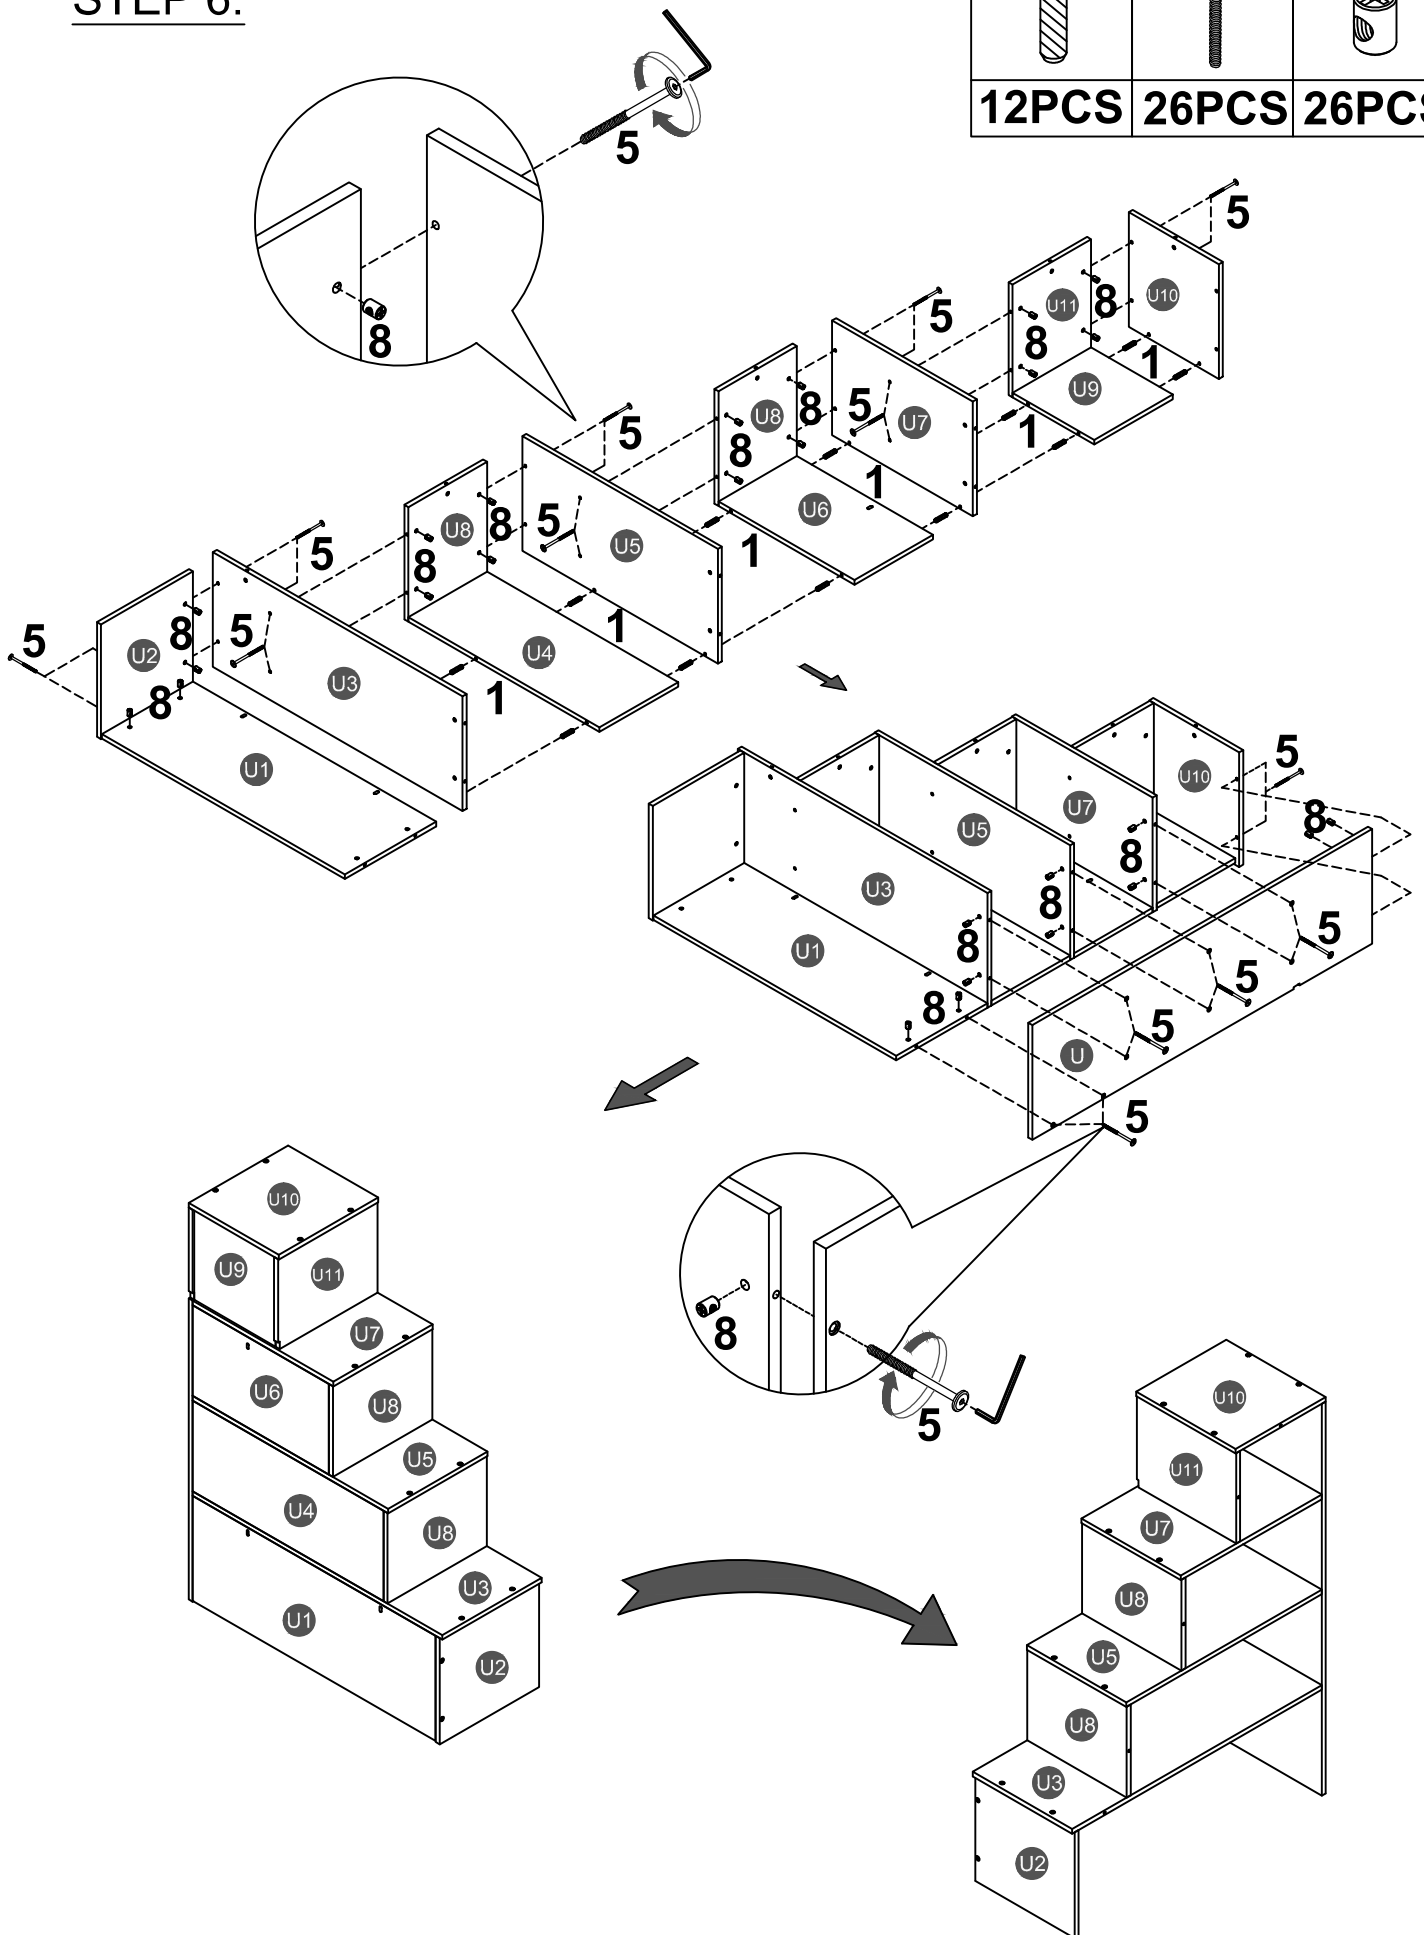

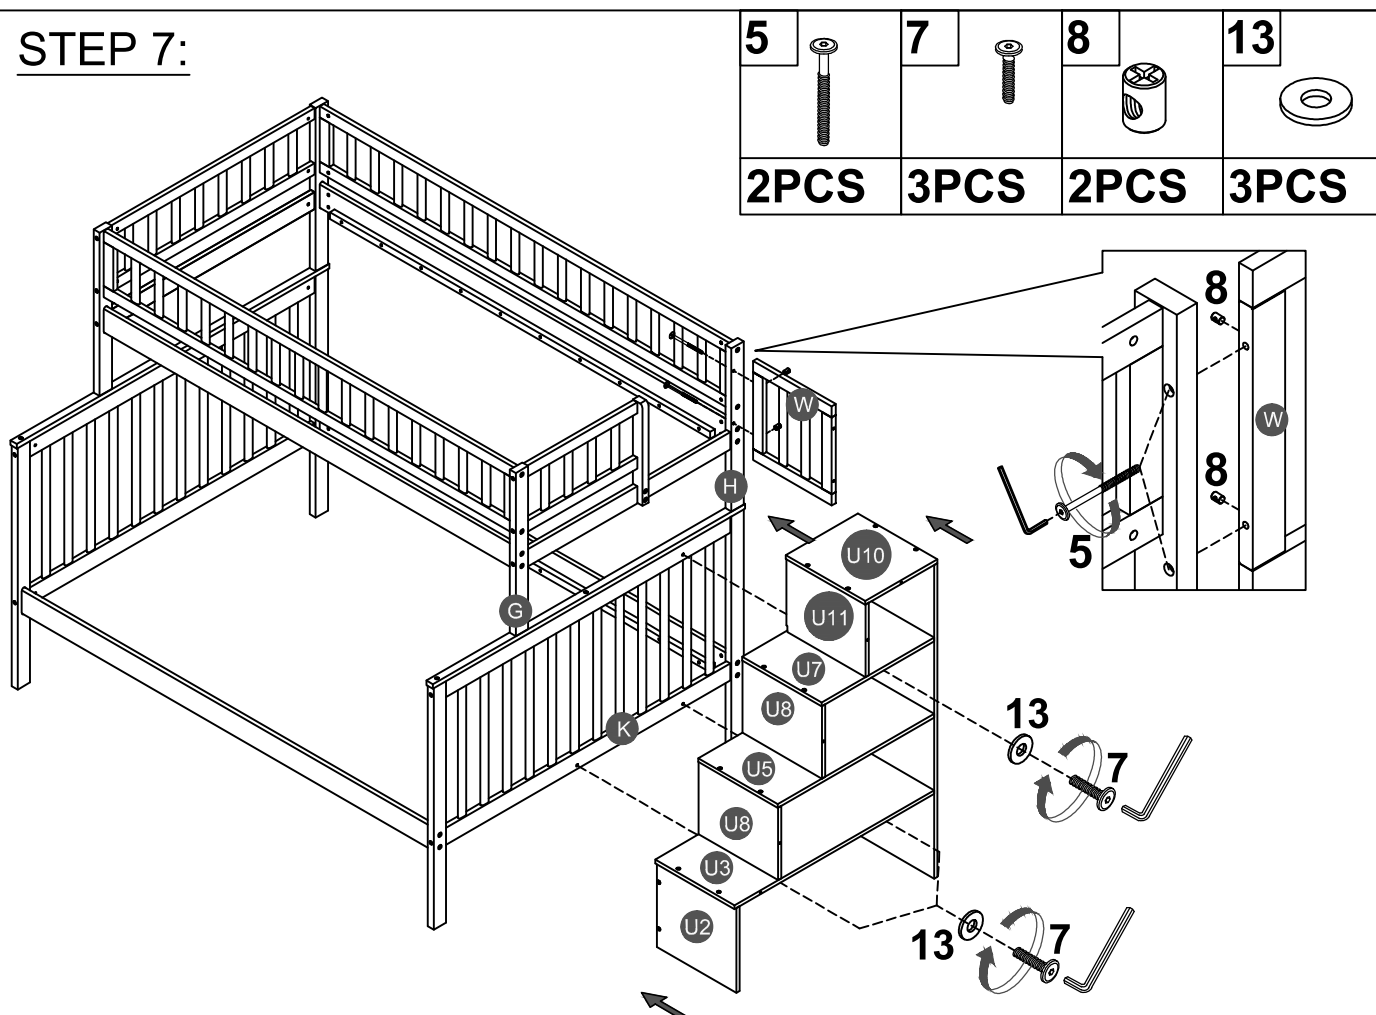
STEP 7:



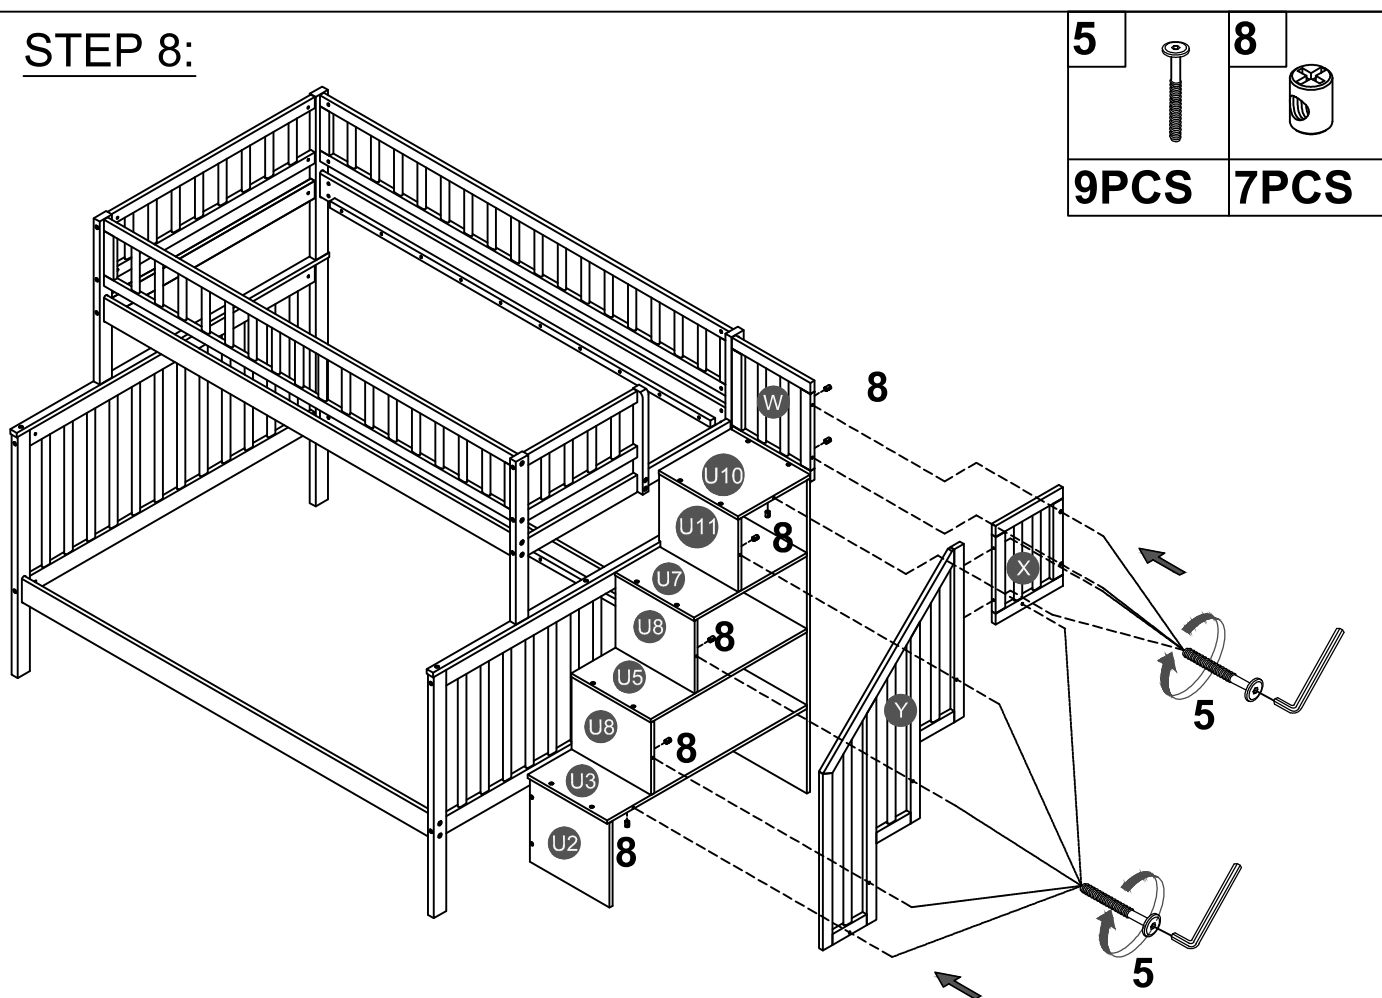STEP 8:




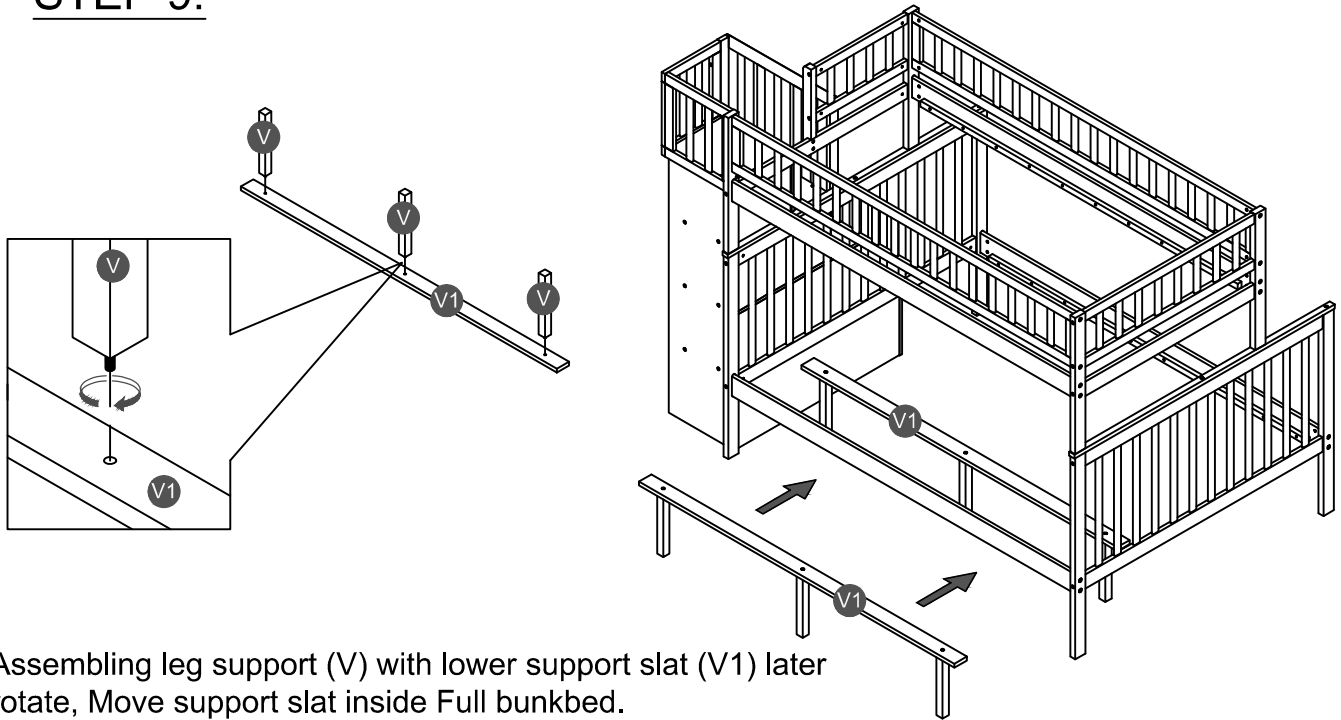STEP 9:






Assembling leg support (V) with lower support slat (V1) later rotate, Move support slat inside Full bunkbed.

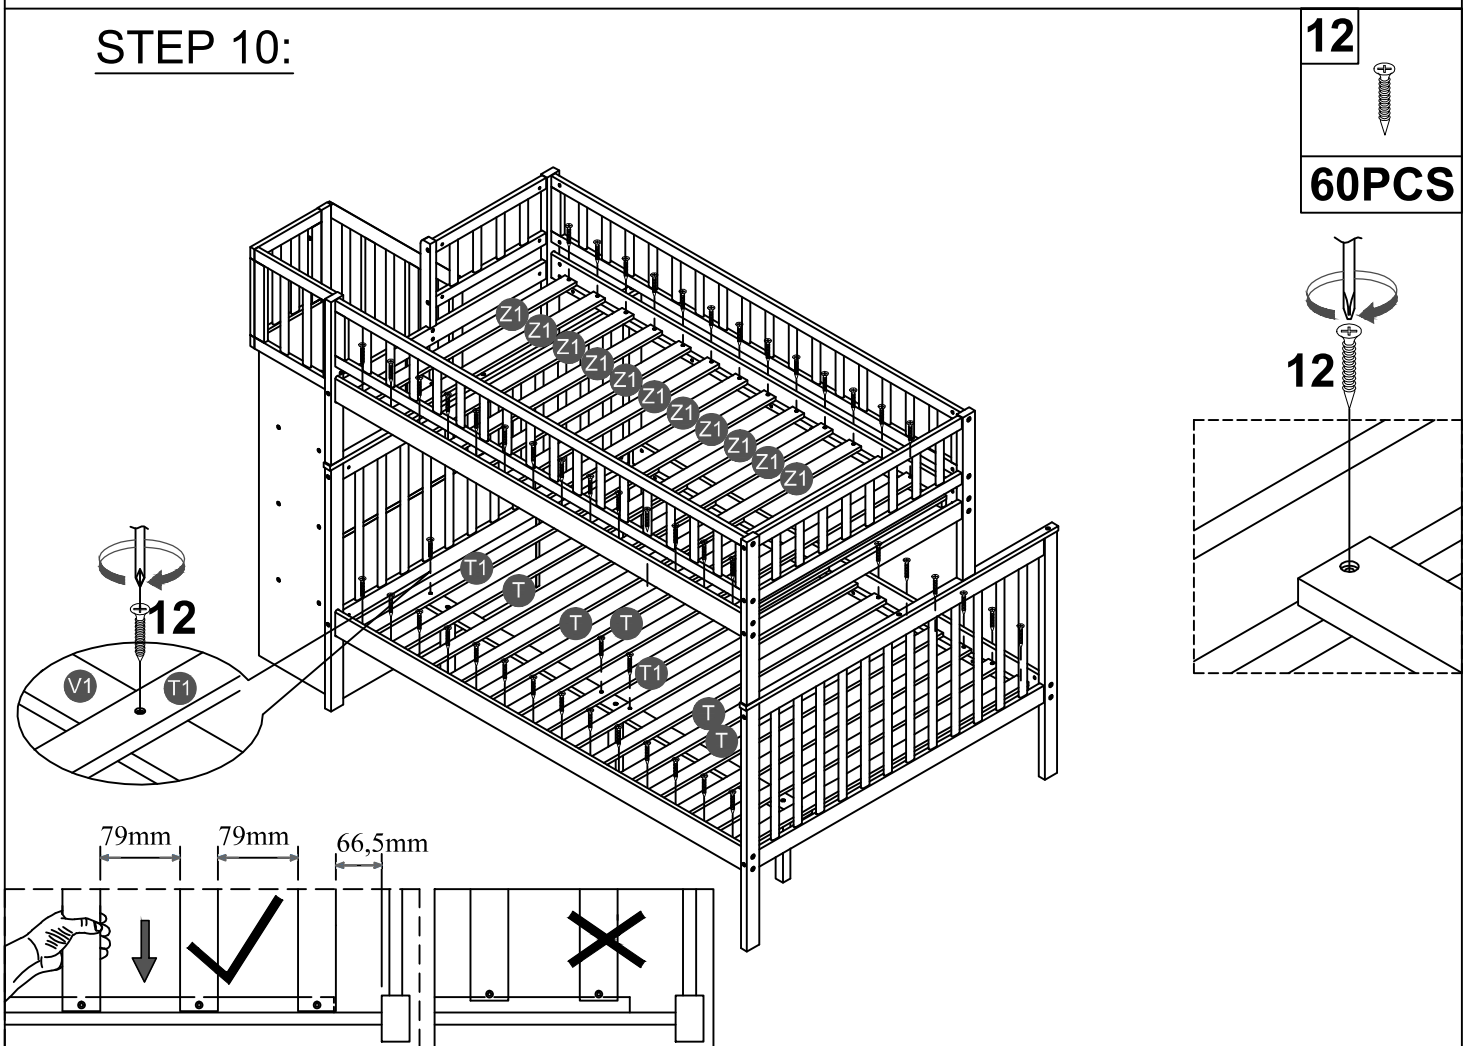STEP 10:



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

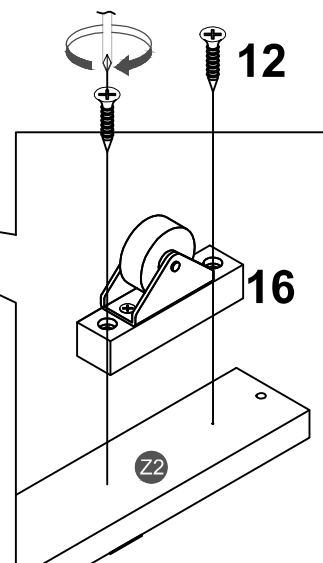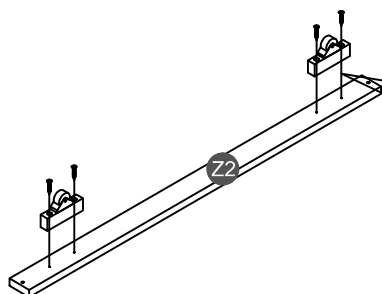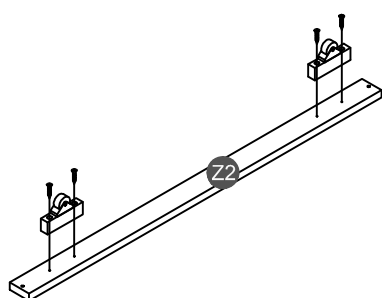STEP 11:



16



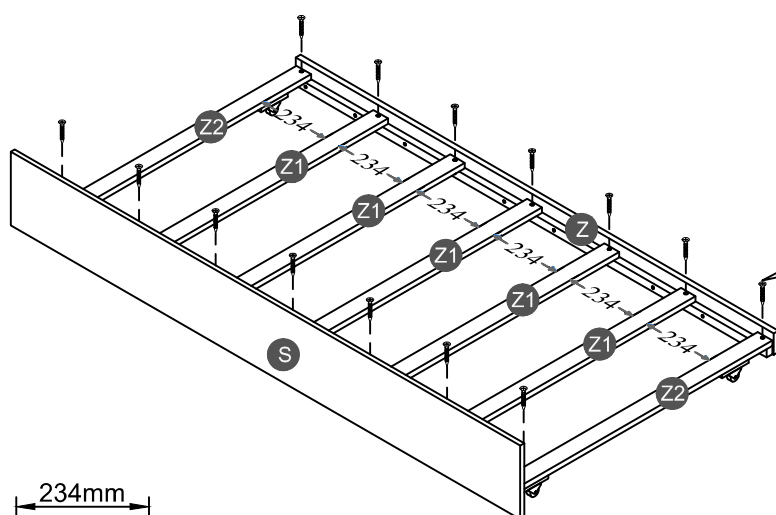
4PCS

12



8PCS




STEP 12:



12



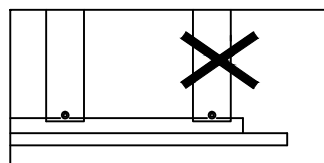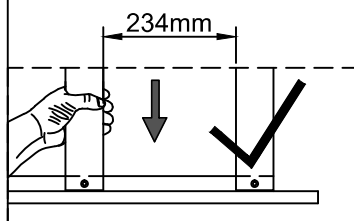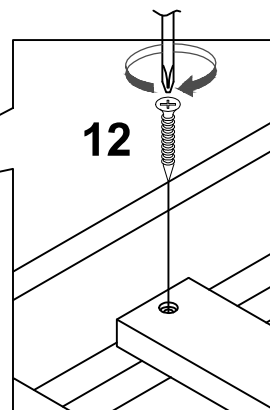
14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

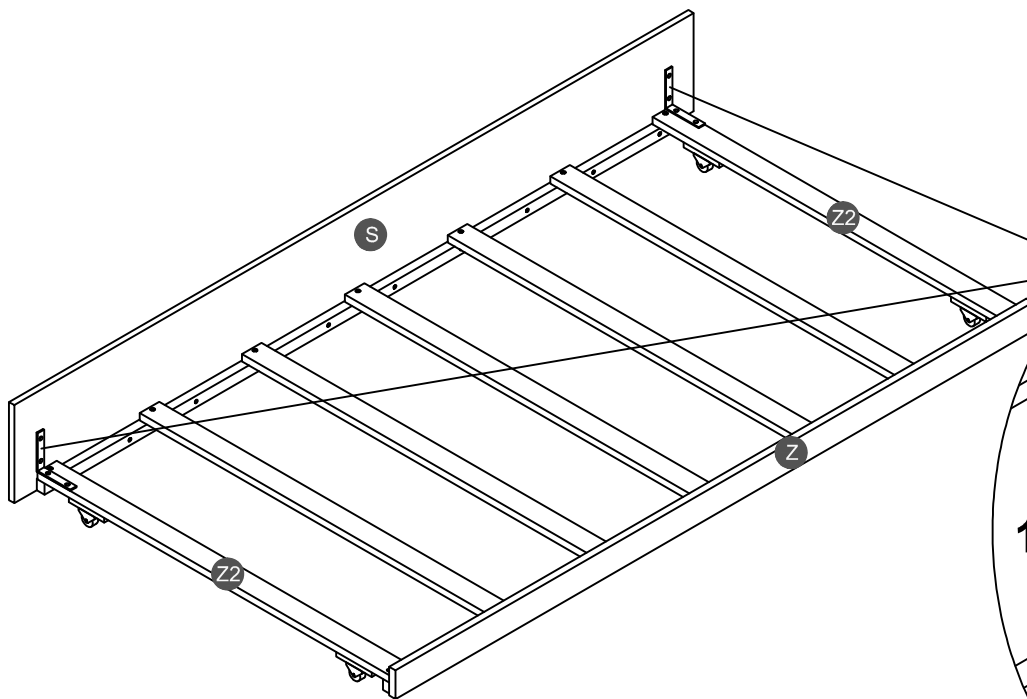STEP 13:



14

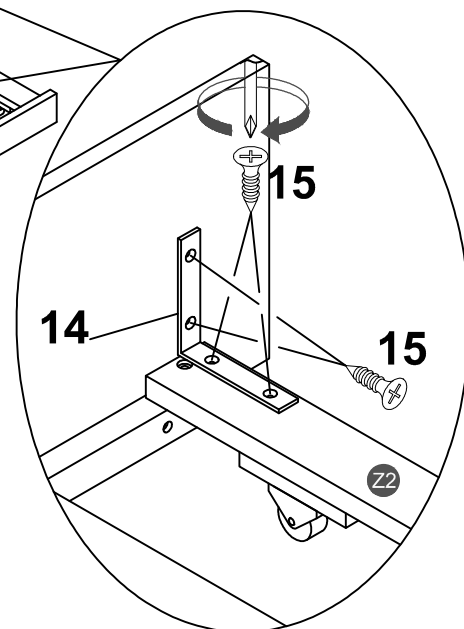


2PCS


15



8PCS



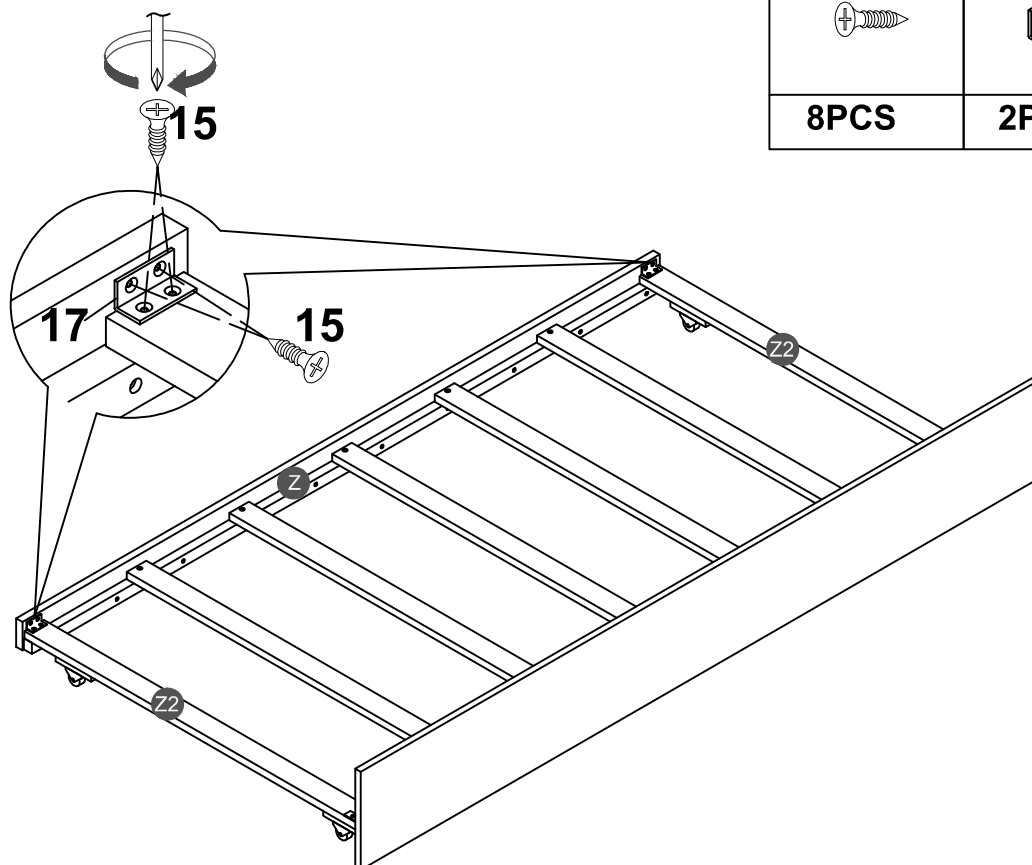STEP 14:



15



8PCS

17



2PCS

STEP 15:

