

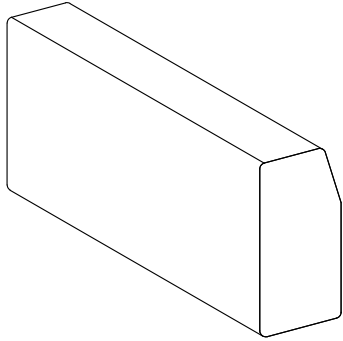
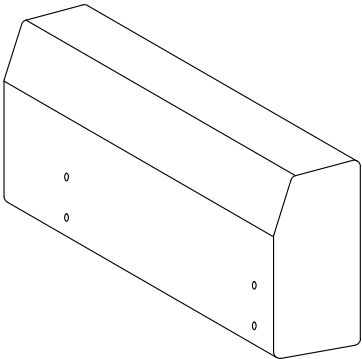
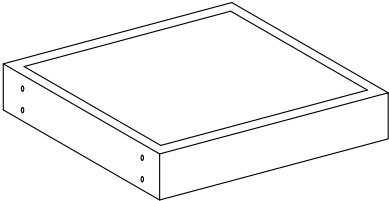
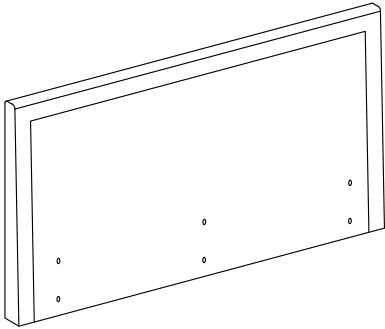
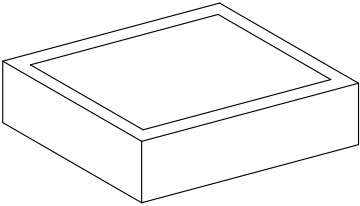
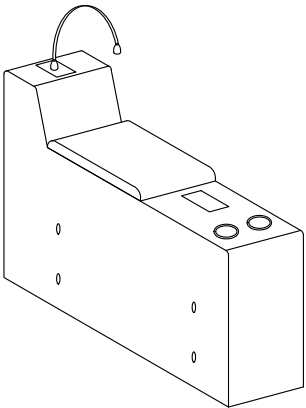
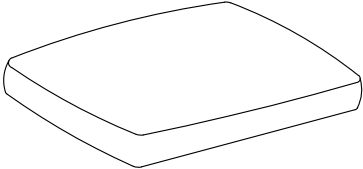
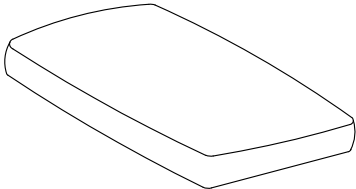
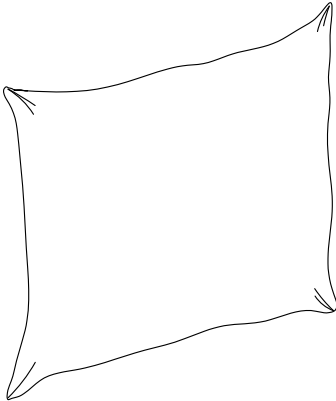
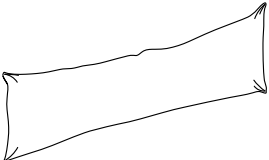




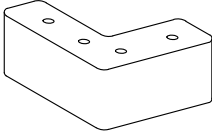
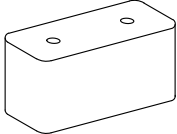
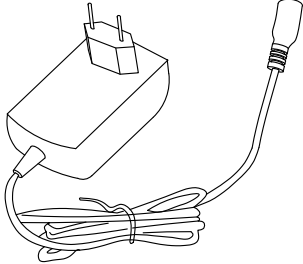


ASSEMBLY INSTRUCTION				
A  ×1	B  ×1	C  ×2	D  ×2	E  ×2
F  ×1	G  ×2	H  ×4	I  ×4	J  ×4
K  M5 Flat head Wood Screw 8×70 ×68	L  M8 Hexagon Bolt 8×45 ×22	M  M8 Hexagon Bolt 8×60 ×6	N  M8 Flat Washer 8×19 ×28	O  Allen Key 5×70 ×1
P  Screwdriver 4×90 ×1	Q  L-type rubber feet 150×150×50 ×12	R  L-type rubber feet 150×50×50 ×10	S  Plug ×1	T  Velcro ×12


STEP 1:

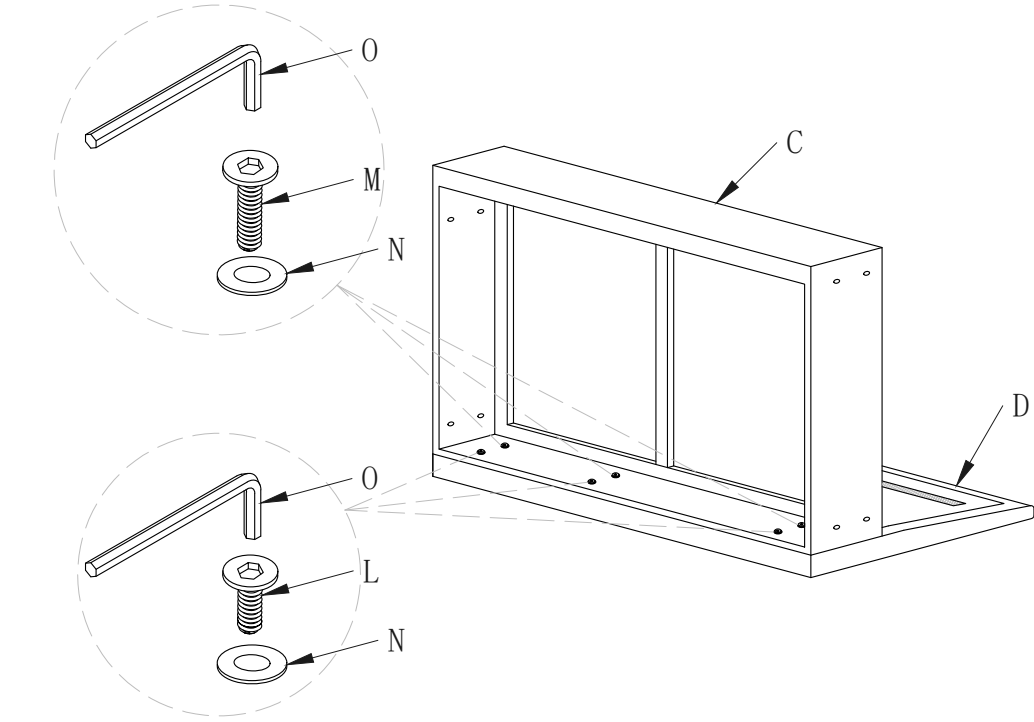


STEP 2:

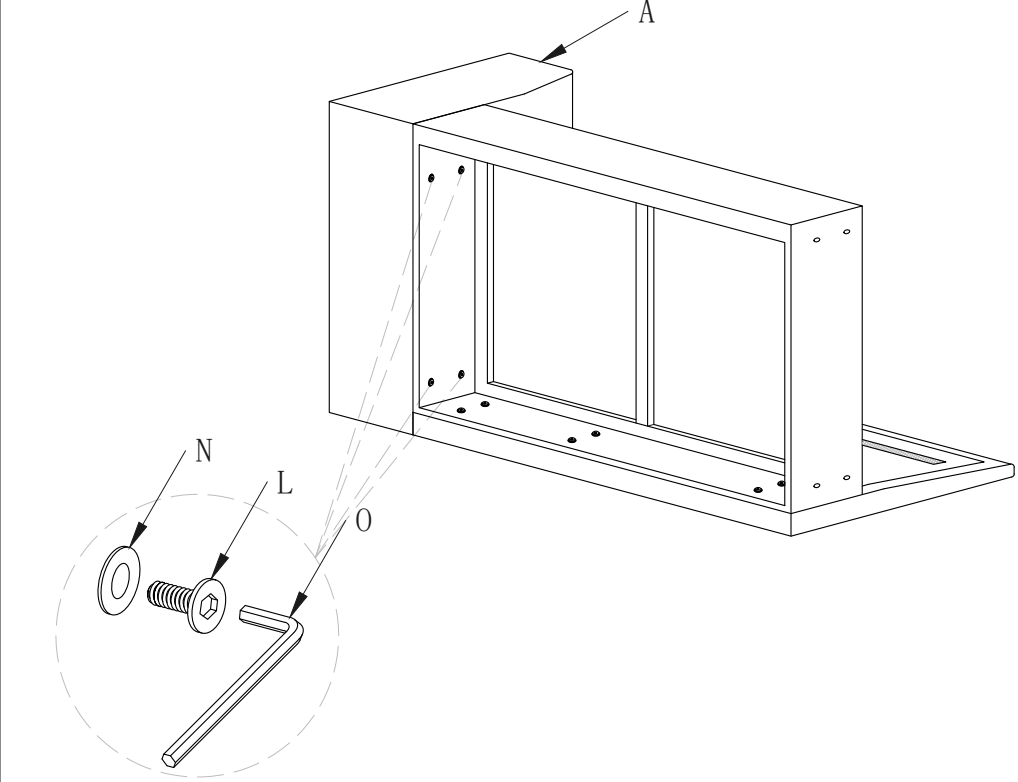


STEP 3:

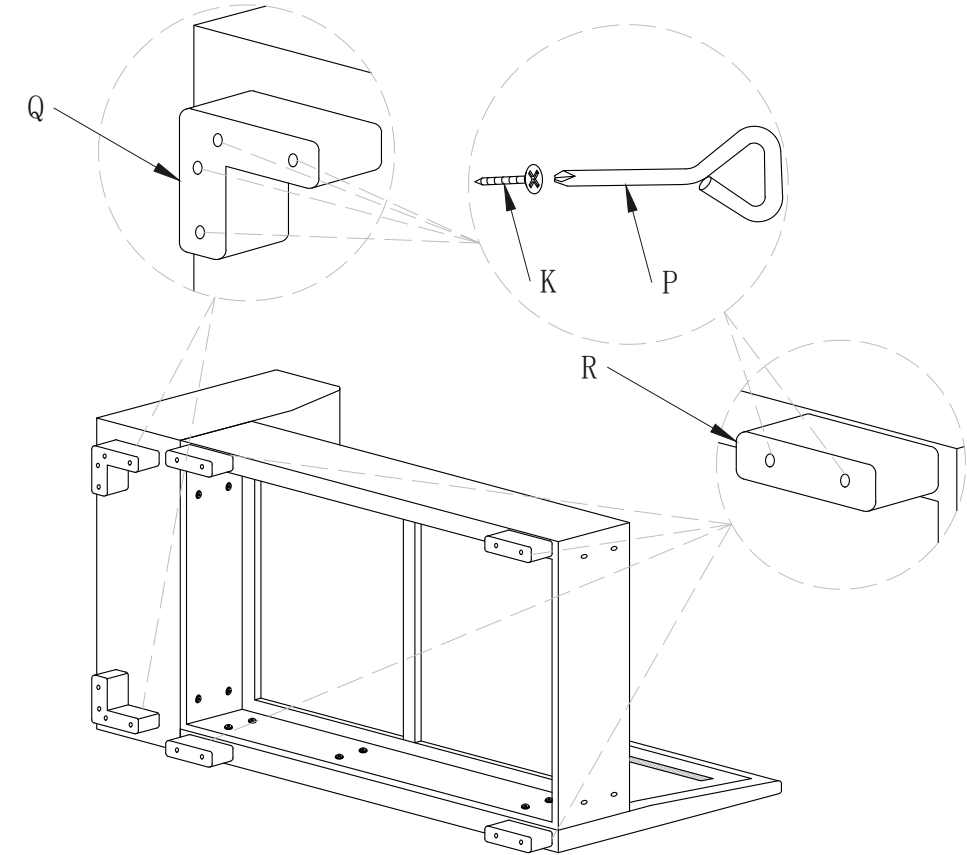


STEP 4:

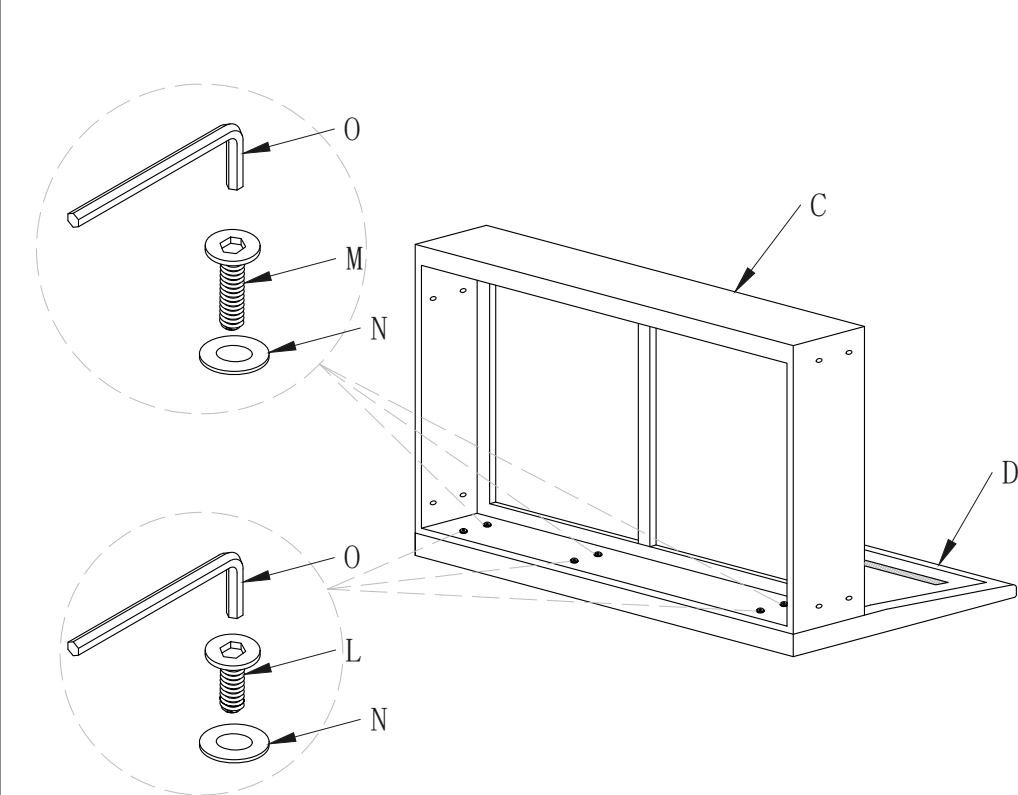


STEP 5:

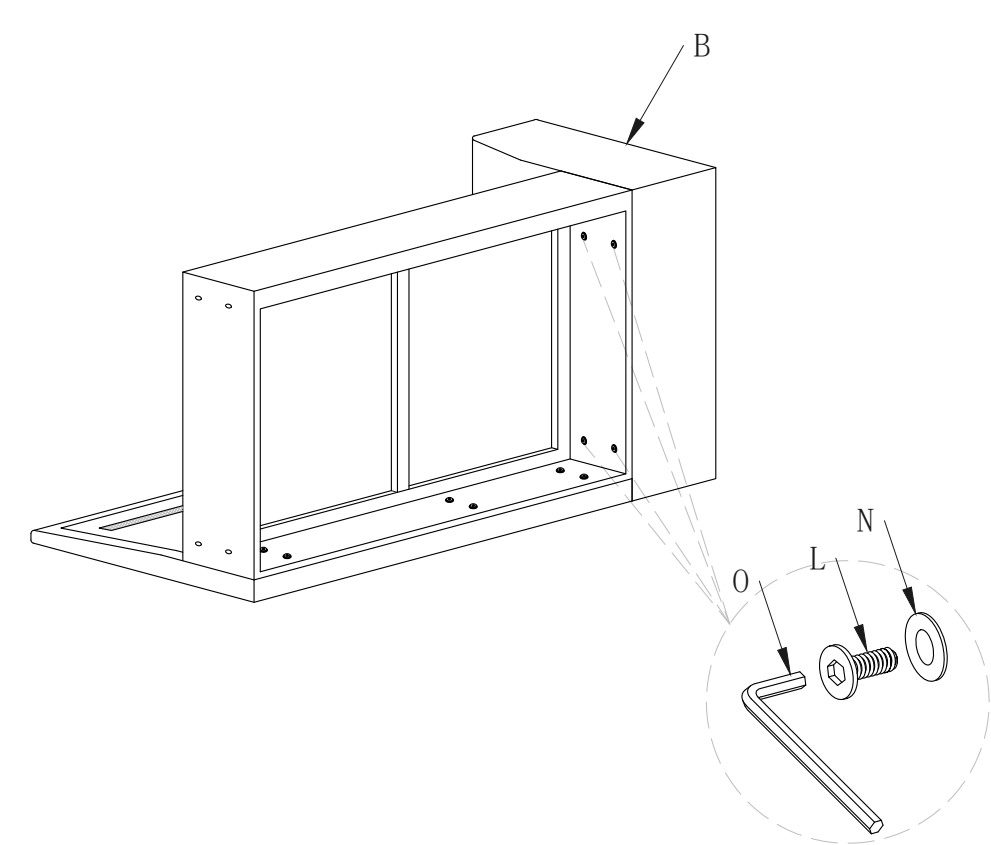


STEP 6:

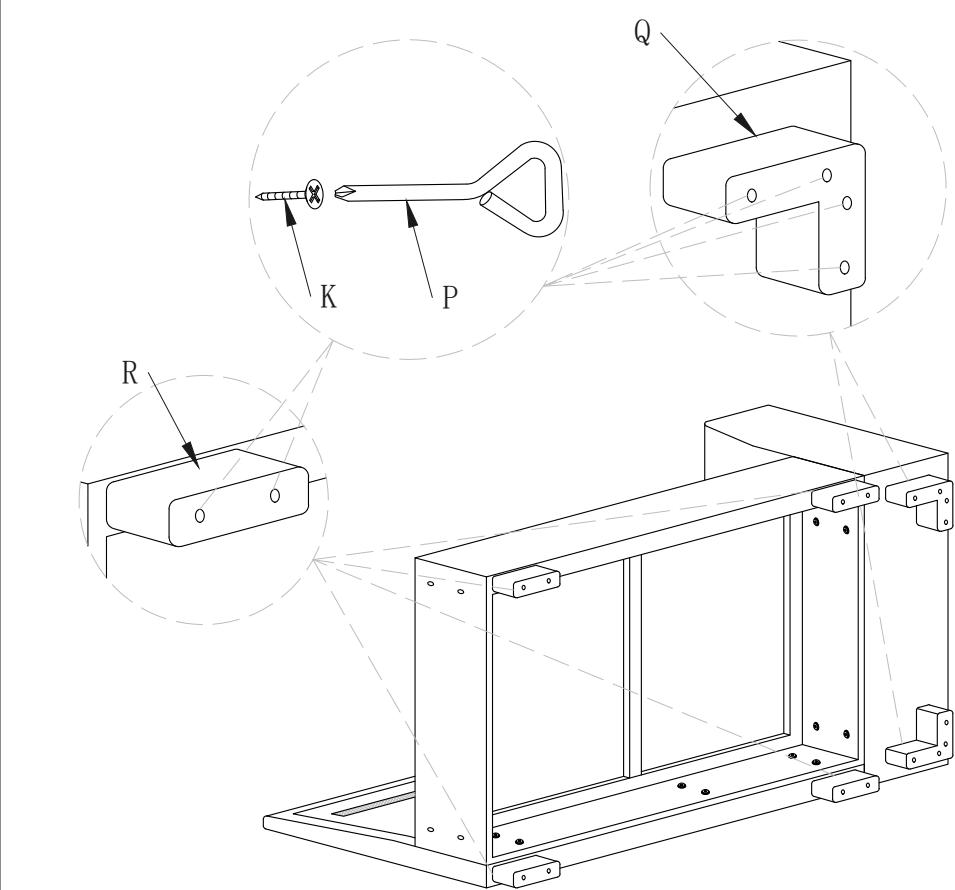

STEP 7:

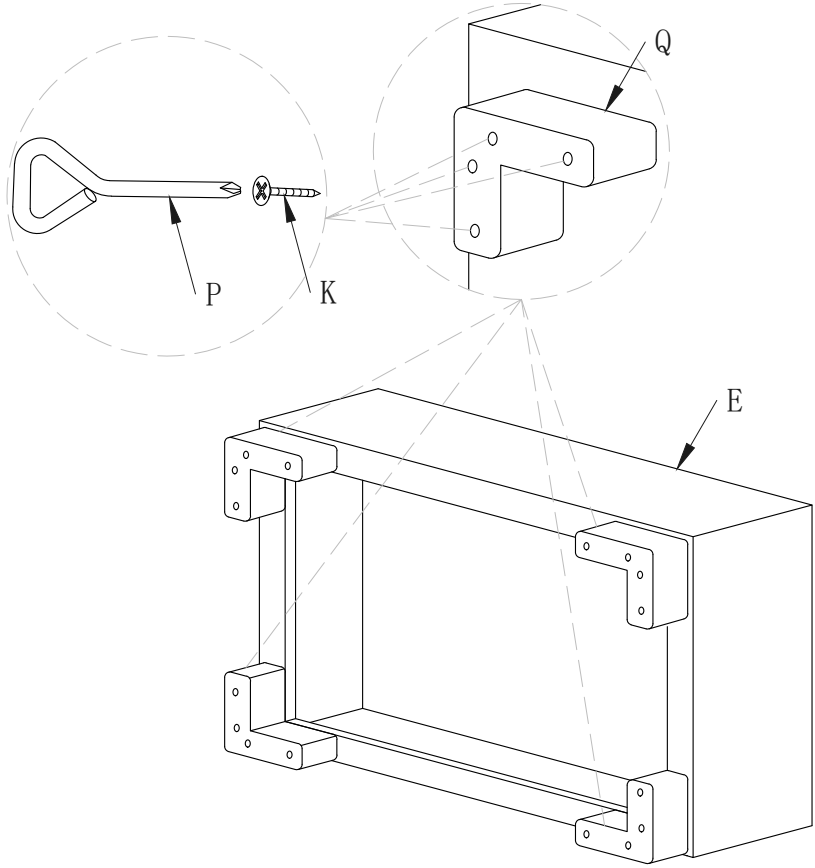


STEP 8:

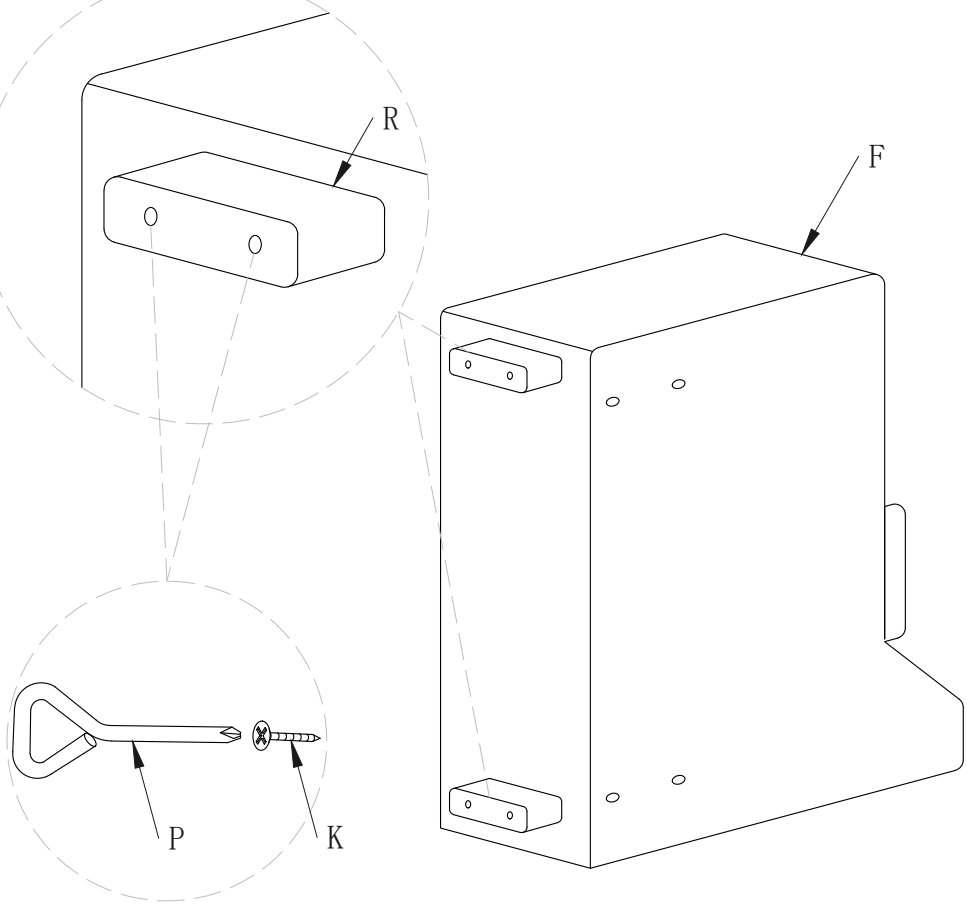


× 2


STEP 9:

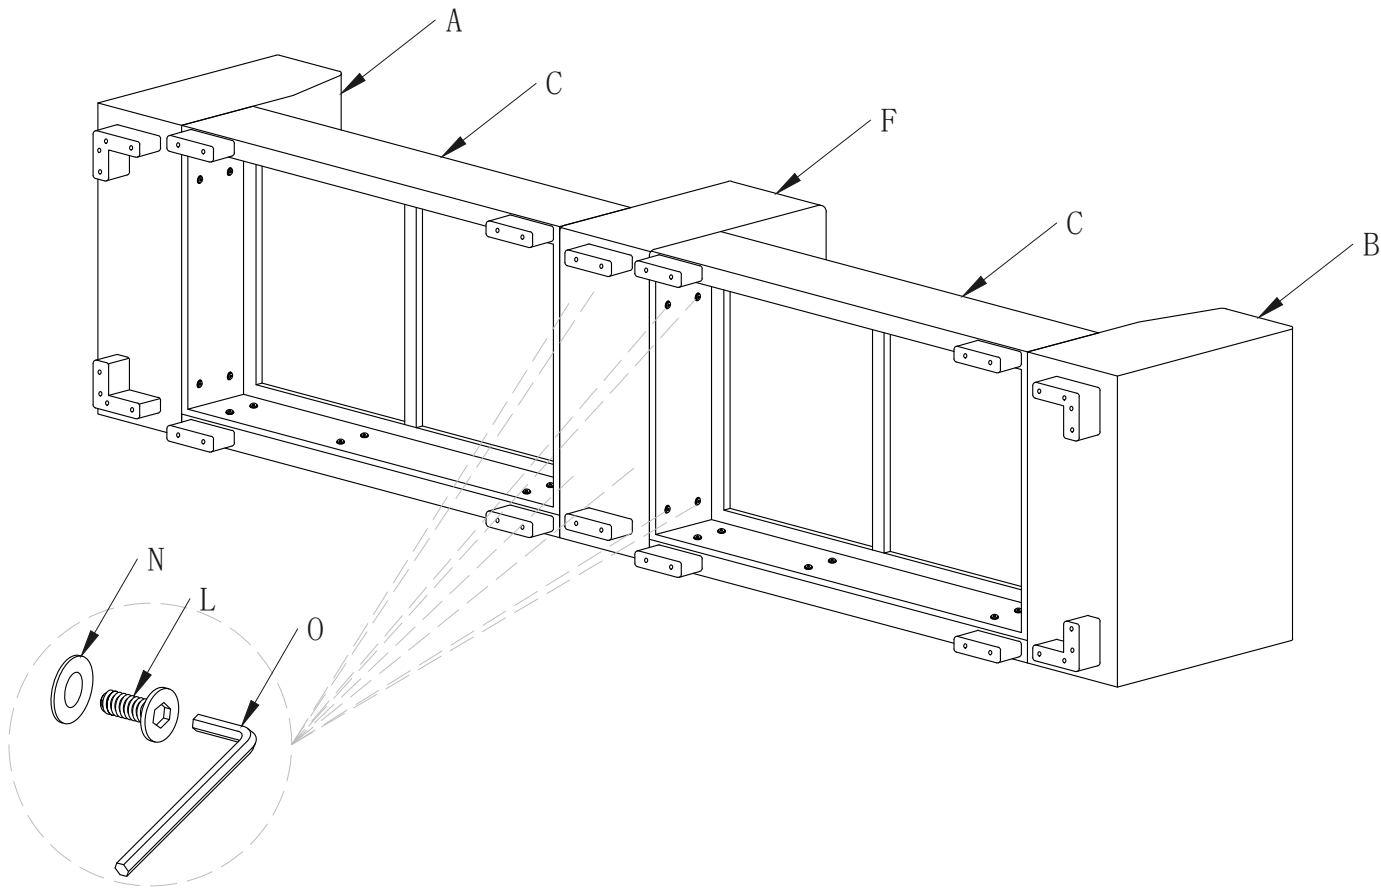


STEP 10:

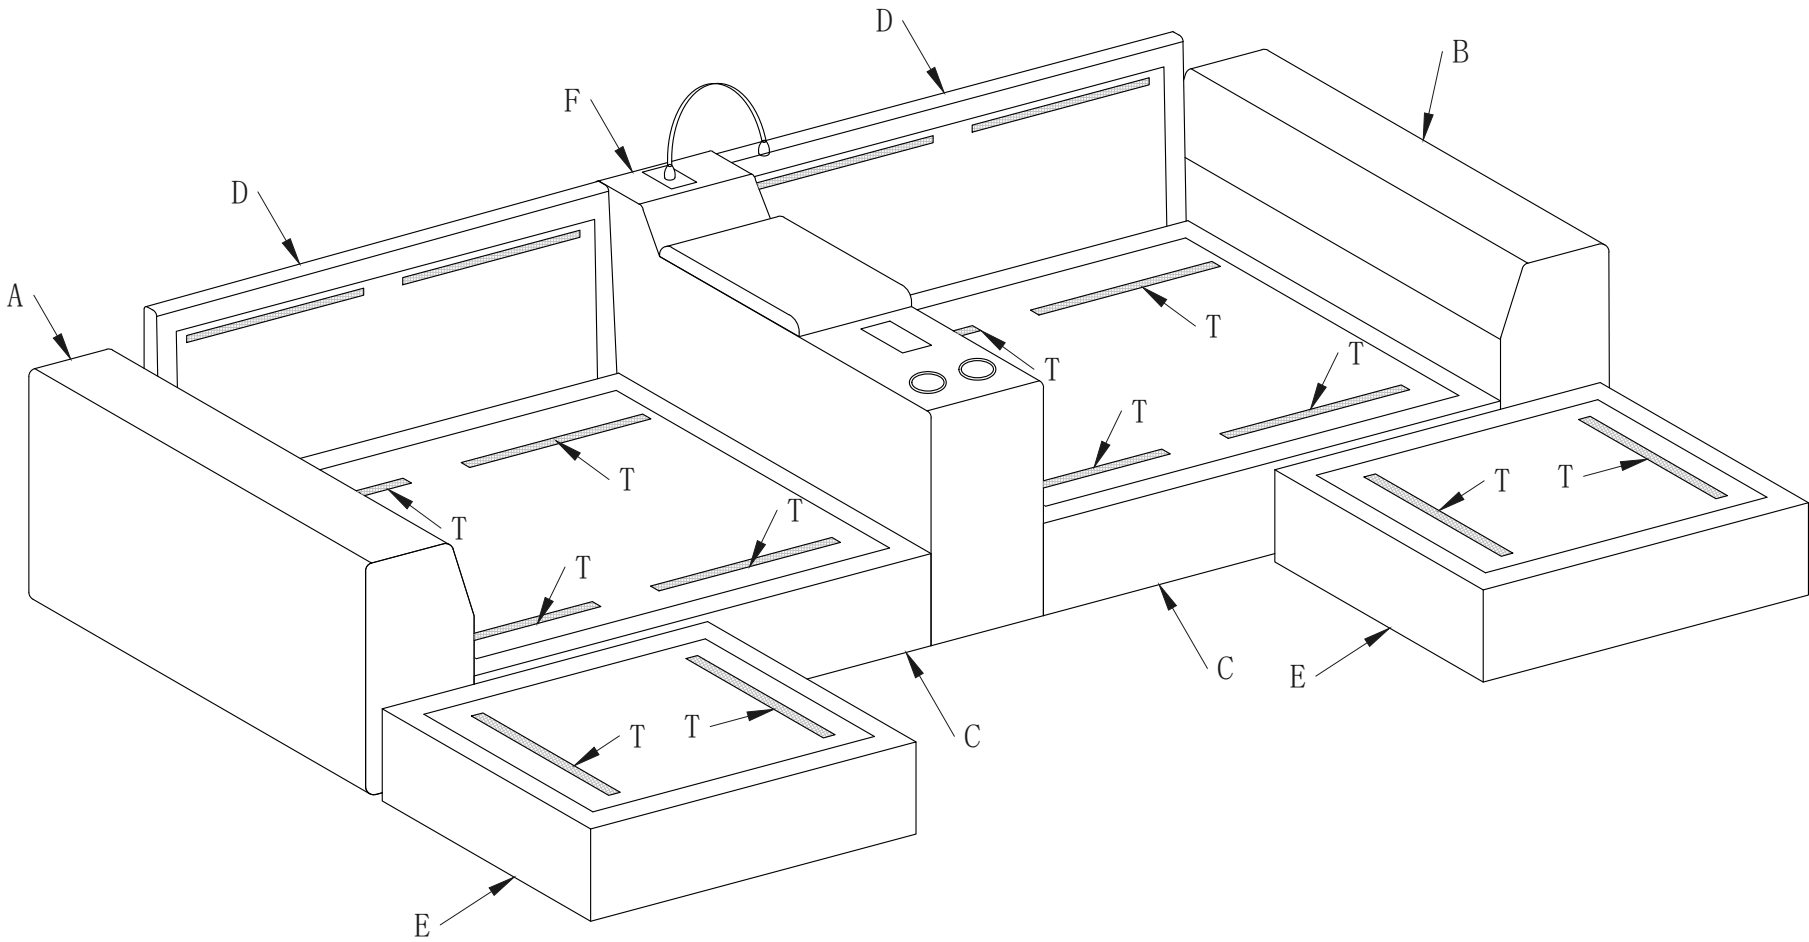

STEP 11:

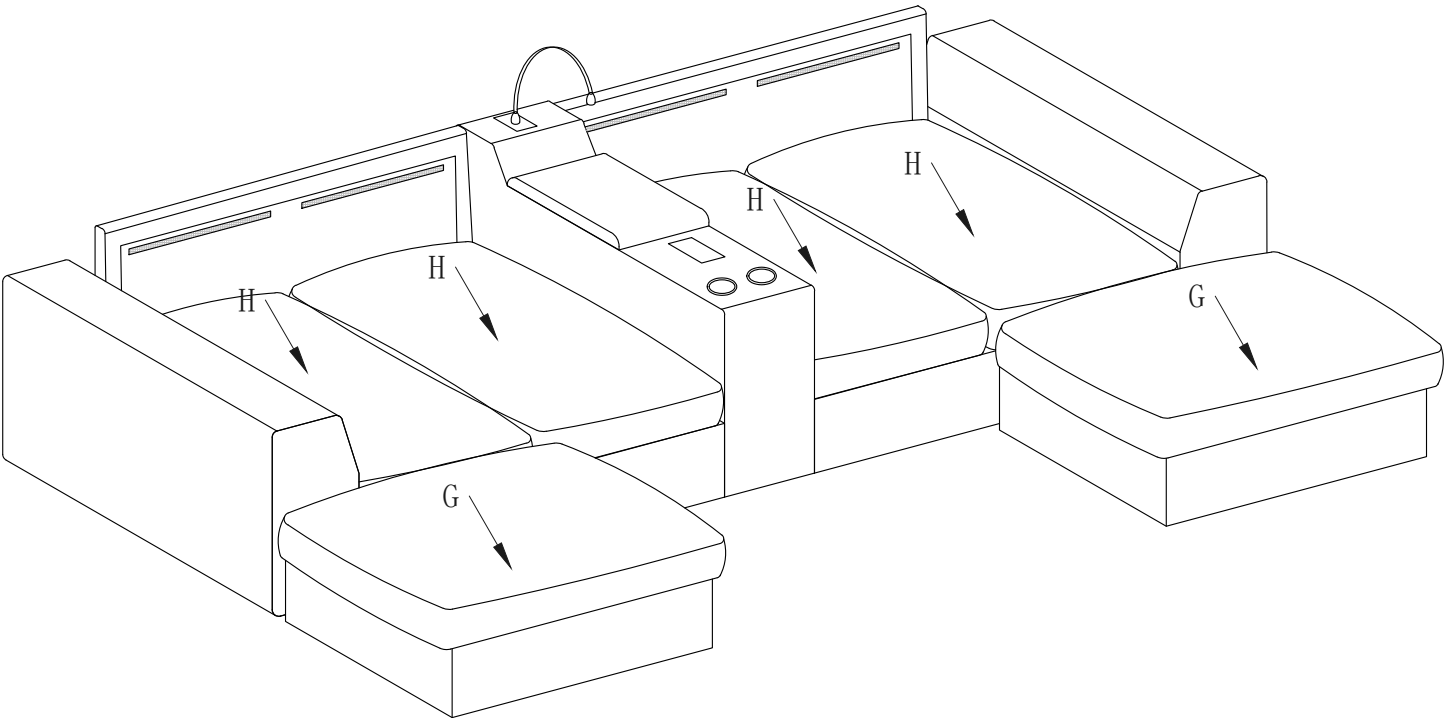

STEP 12:

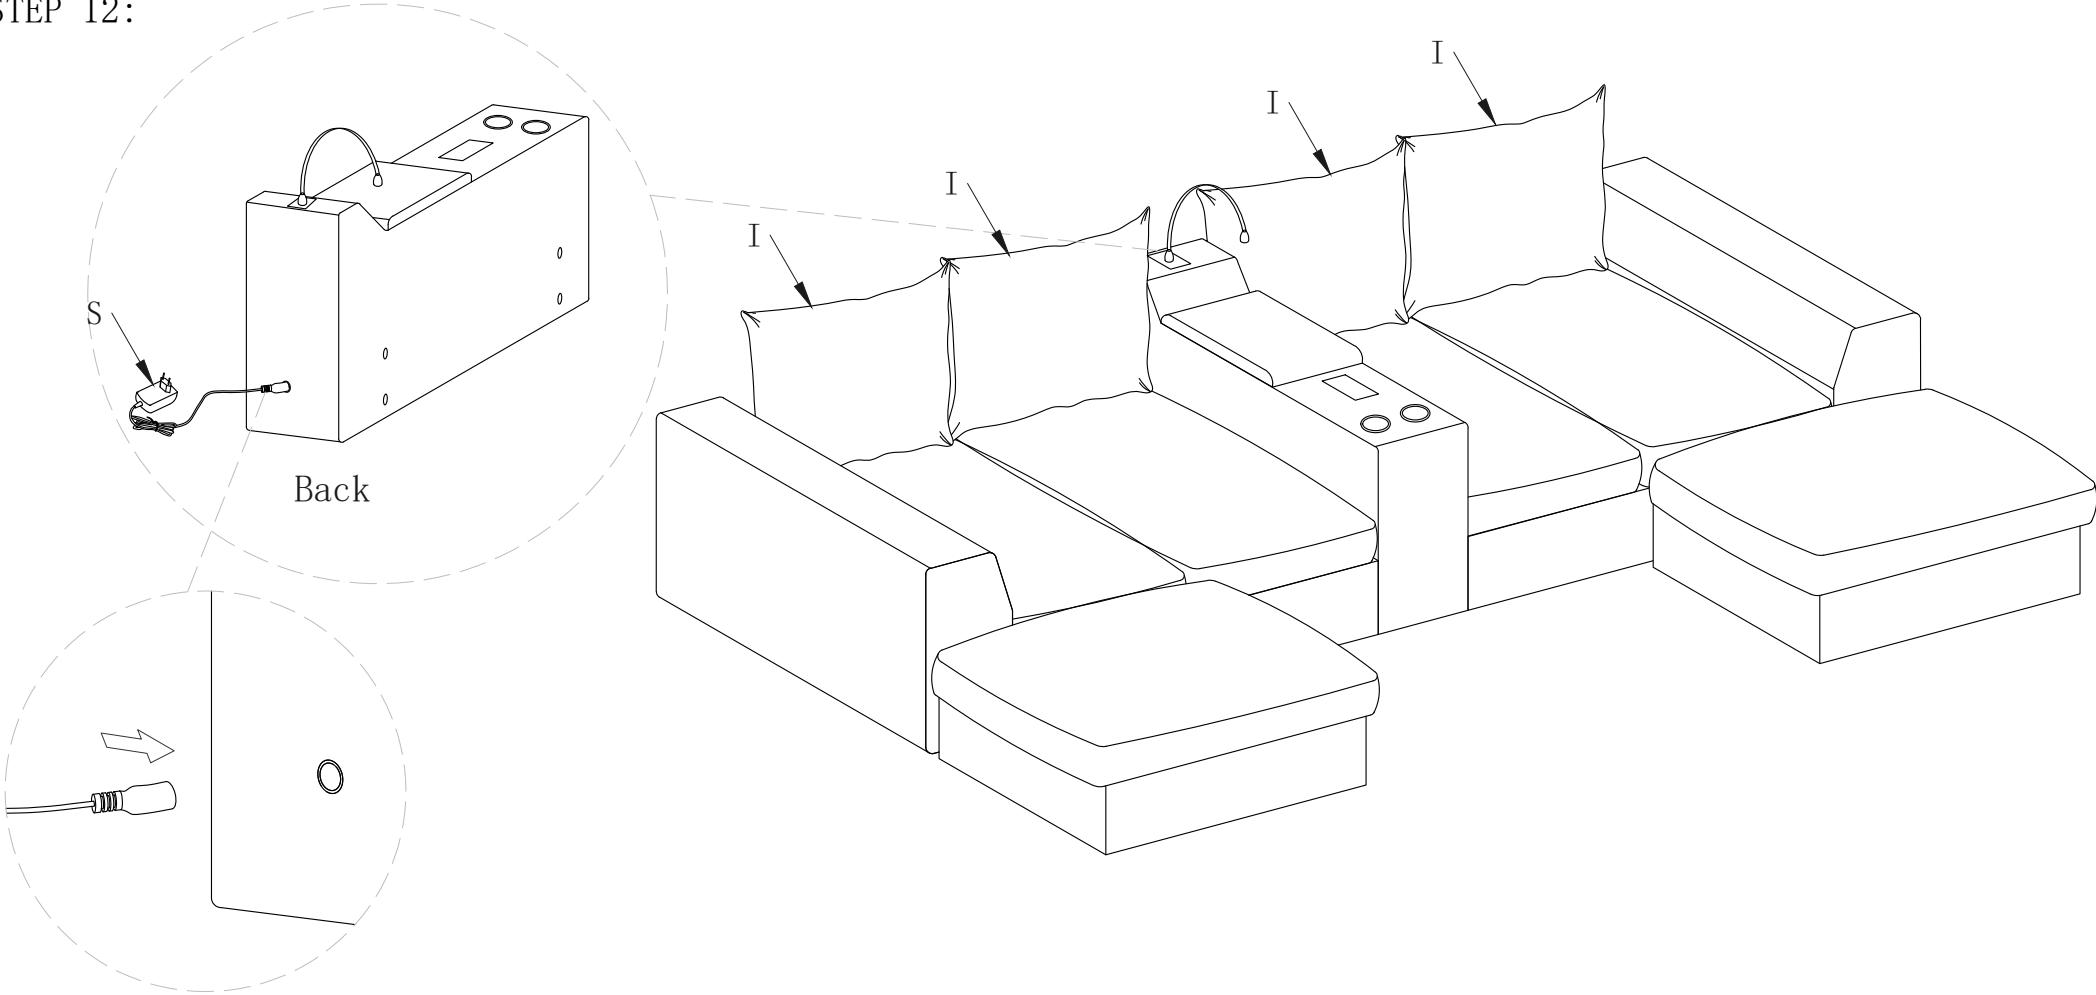

STEP 13:

