


# ASSEMBLY INSTRUCTIONS


## MISSION TENT BED

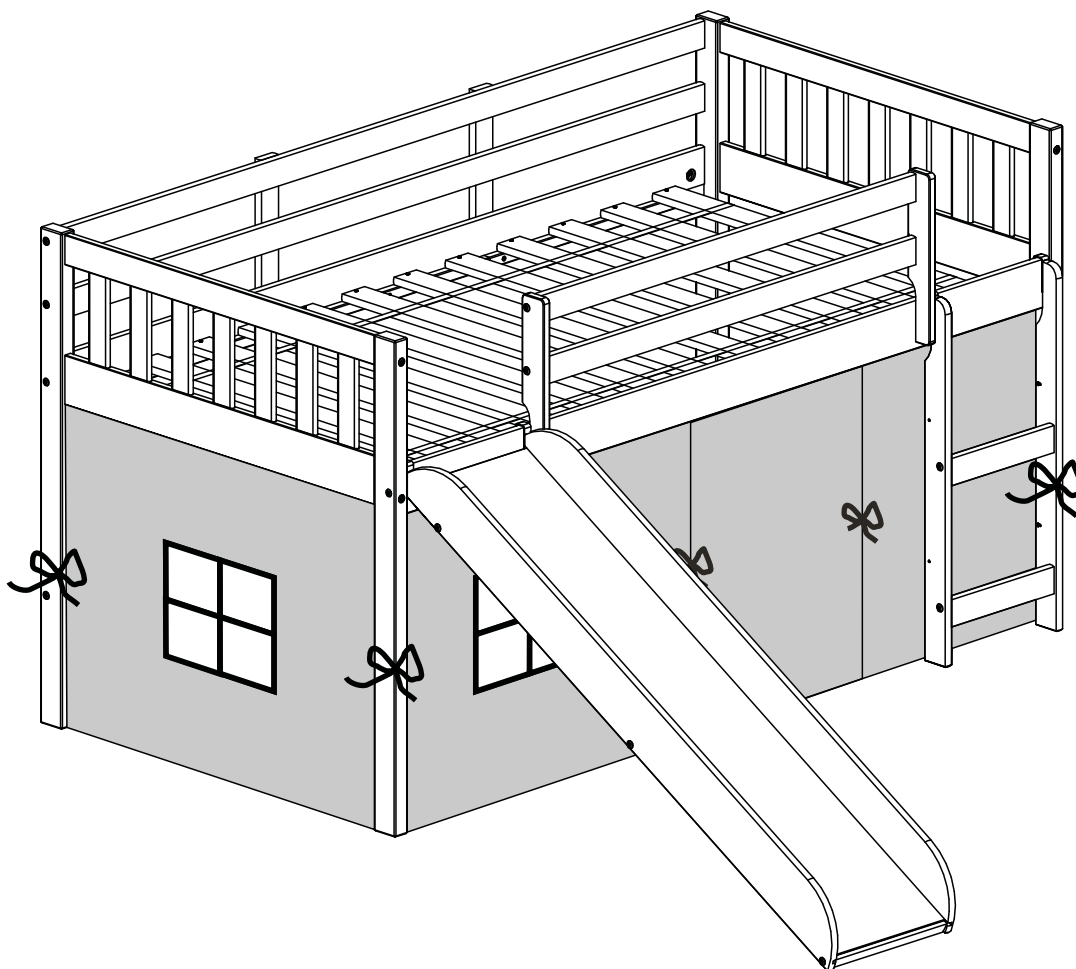


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

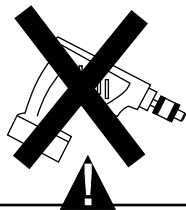


\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

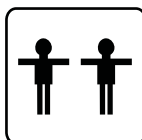


+

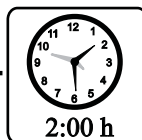

### Tools Required



(Not included)





(Not included)













### IMPORTANT:

**PLEASE READ INSTRUCTIONS BEFORE STARTING THE ASSEMBLY**

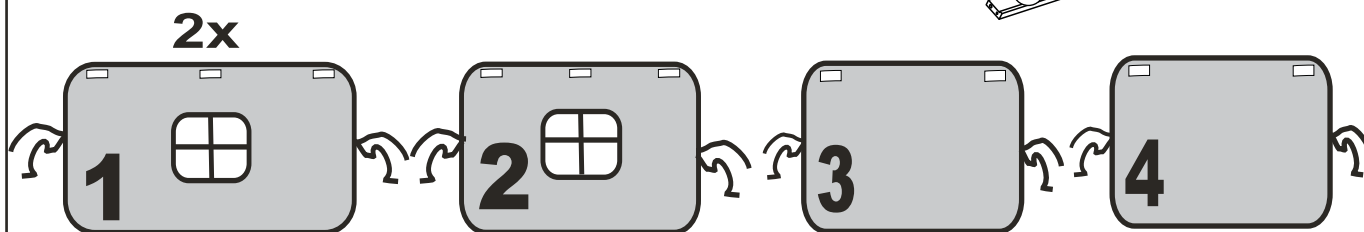
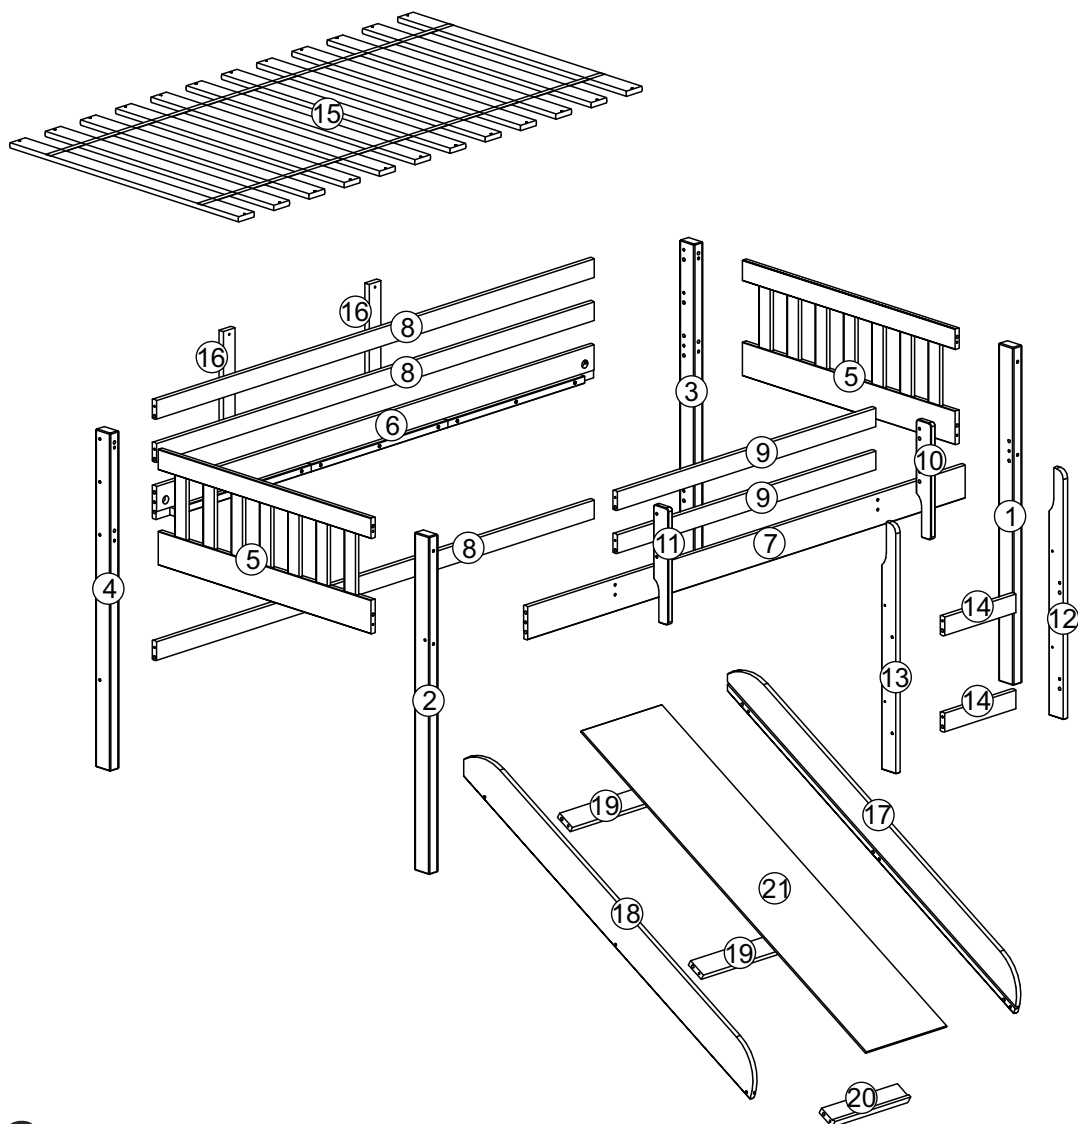
## Part List - MISSION TENT BED




**Identifying the Hardware**—Identify the hardware using the illustrations below.


<b>A</b>  Qty <b>04</b> 1/4 x 80 Screw	<b>B</b>  Half Moon Qty <b>04</b> 1/4" Half Moon	<b>C</b>  Qty <b>06</b> 7,0 x 80 Screw
<b>D</b>  Qty <b>08</b> 7,0 x 100 Screw	<b>E</b>  Qty <b>36</b> 10 x 40 Wood Dowel	<b>F</b>  Qty <b>18</b> 7,0 x 50 Screw
<b>G</b>  Qty <b>30</b> 4,0 x 30 Screw	<b>H</b>  Qty <b>02</b> 4,0 x 40 Screw	<b>I</b>  Qty <b>12</b> 3,5 x 16 Screw
<b>J</b>  Qty <b>04</b> Protector	<b>K</b>  Qty <b>04</b> Hook Ladder	<b>L</b>  Qty <b>01</b> Hex Screwdriver

# 01

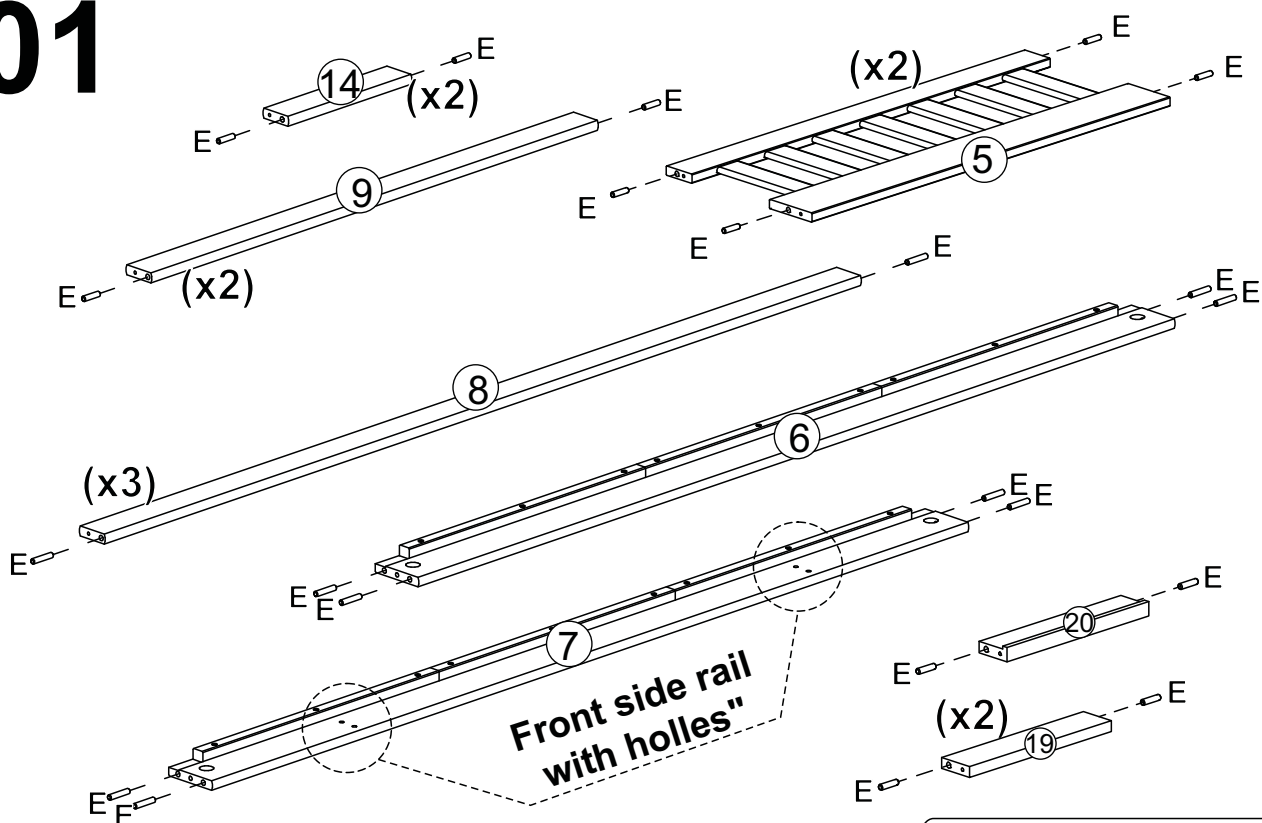

**E**  Qty **36**  
10 x 40 Wood Dowel

# 02

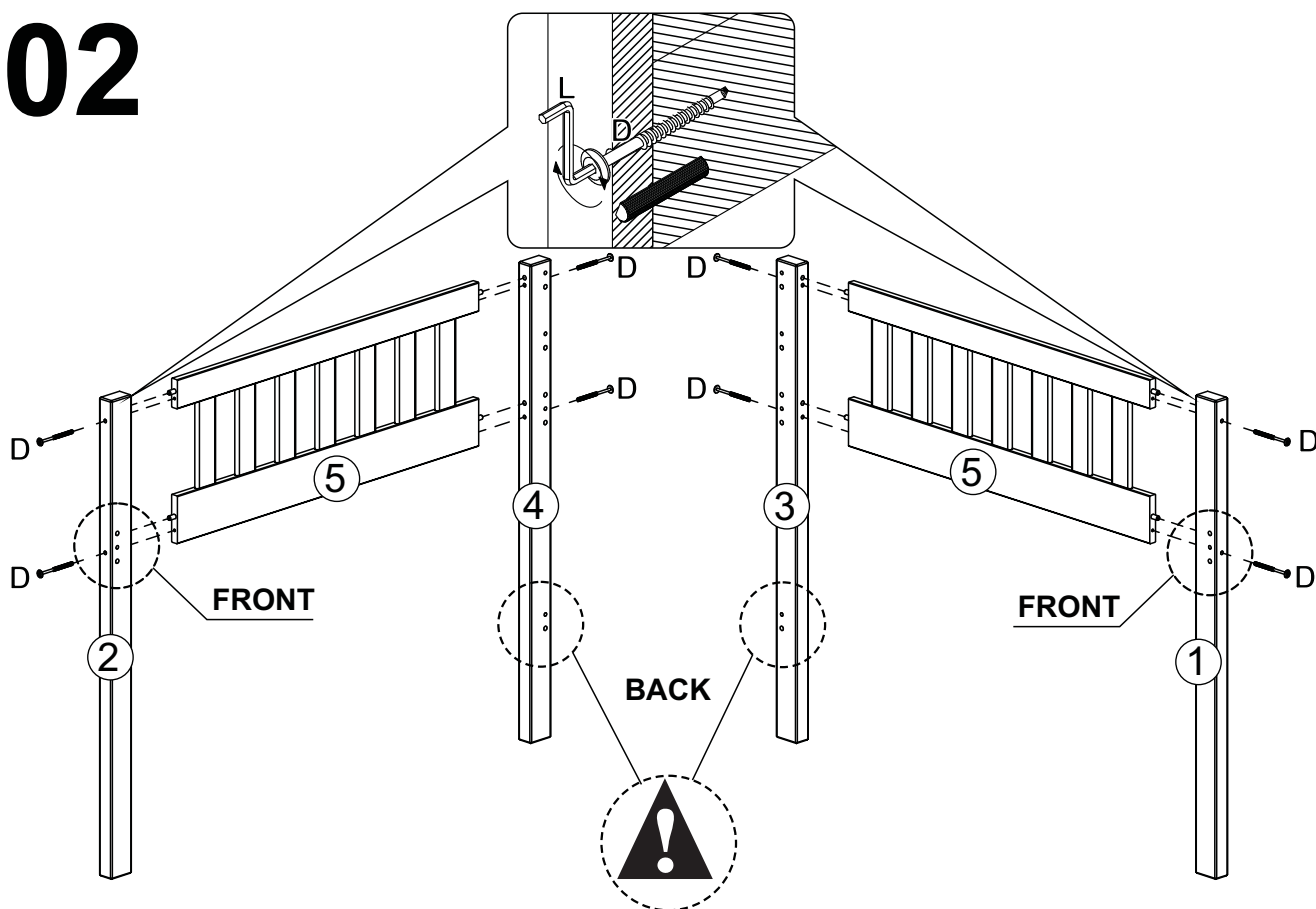

**D**



7,0 x100 Screw

Qty **08**


**L**




Hex Screwdriver


Qty **01**

# 03

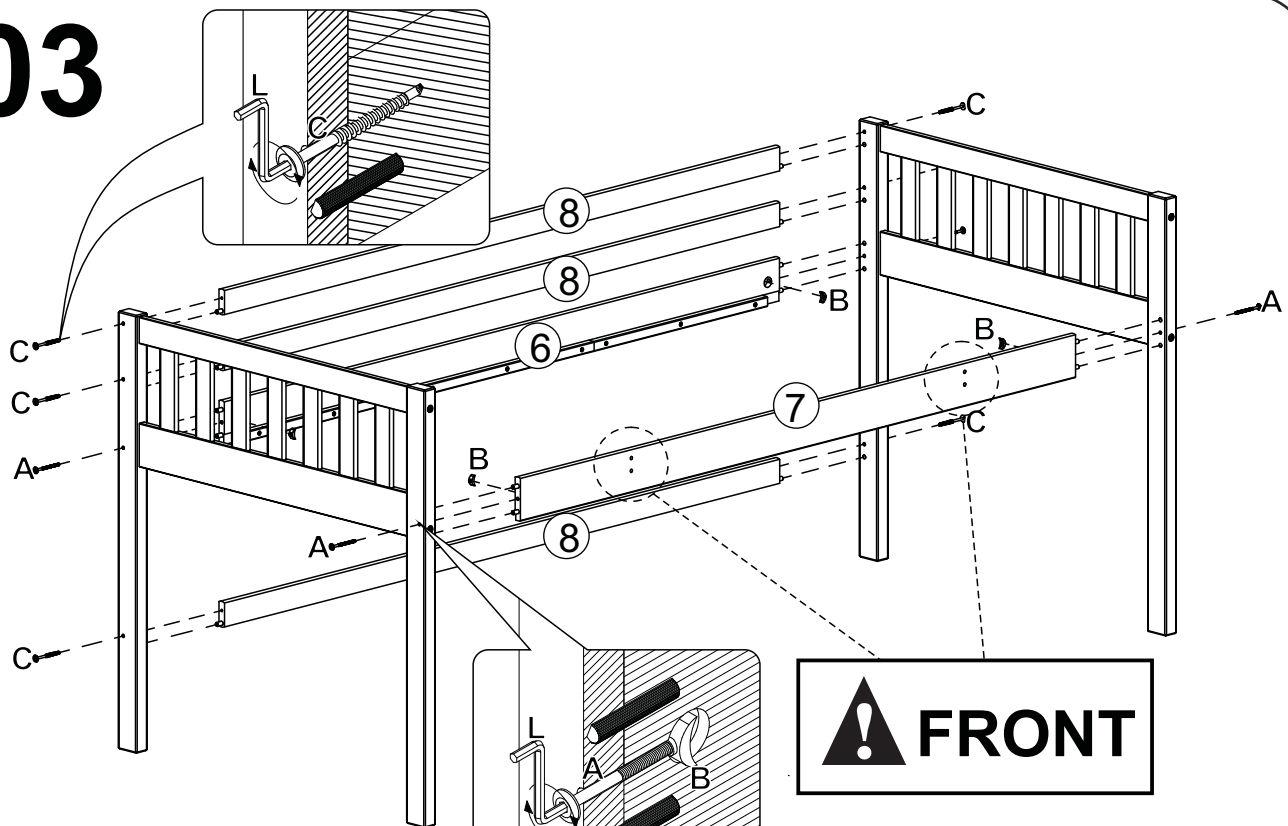


**A**  1/4 x 80 Screw Qty **04**

**B**  1/4" Half Moon Qty **04**

**C**  7,0 x 80 Screw Qty **06**

**L**  Hex Screwdriver Qty **01**


# 04

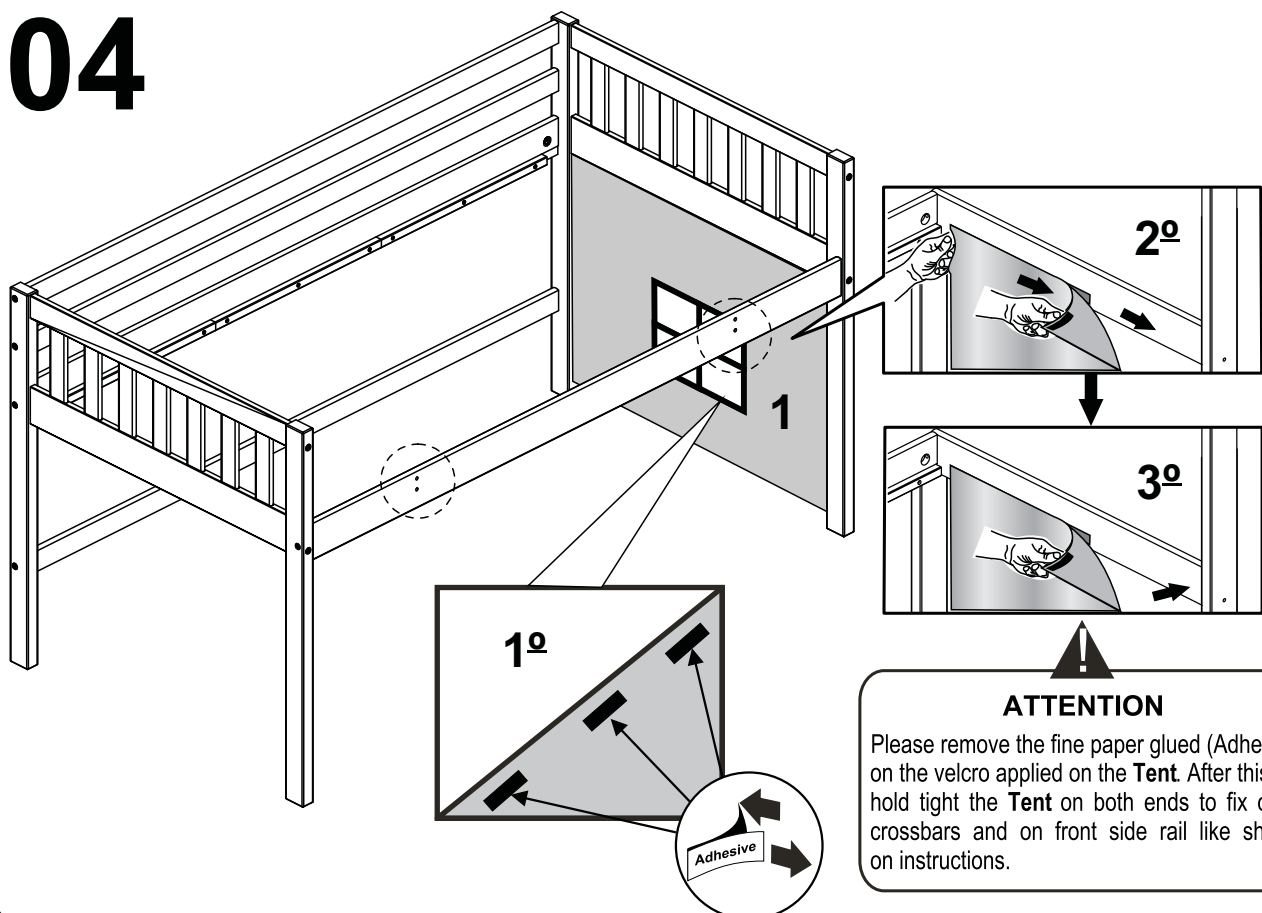


## ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on both ends to fix on the crossbars and on front side rail like showing on instructions.


# 05

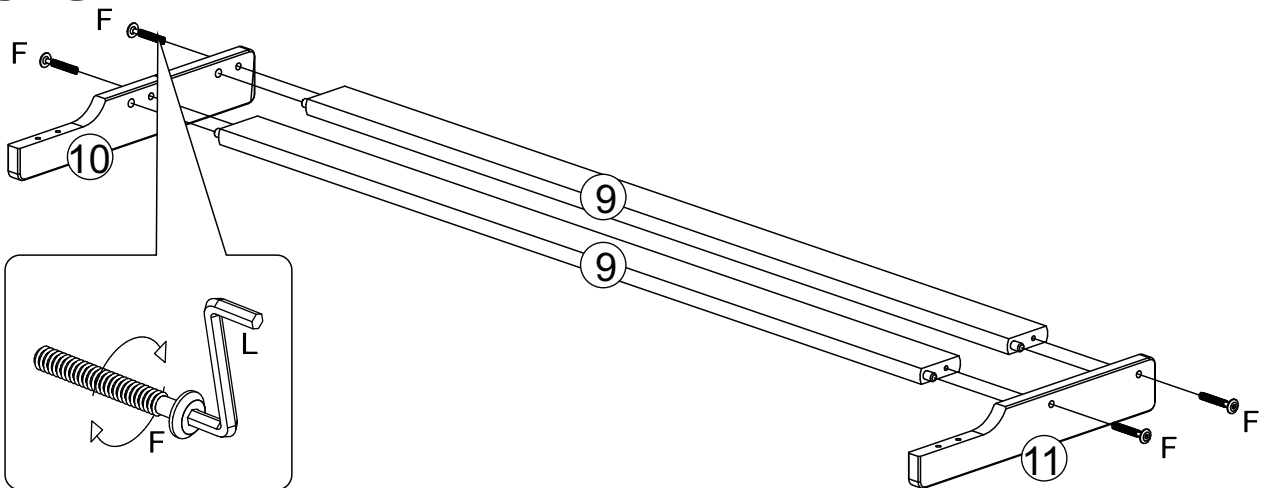


**F**  **7,0 x 50 Screw** Qty **04**

**L**  **Hex Screwdriver** Qty **01**










# 06

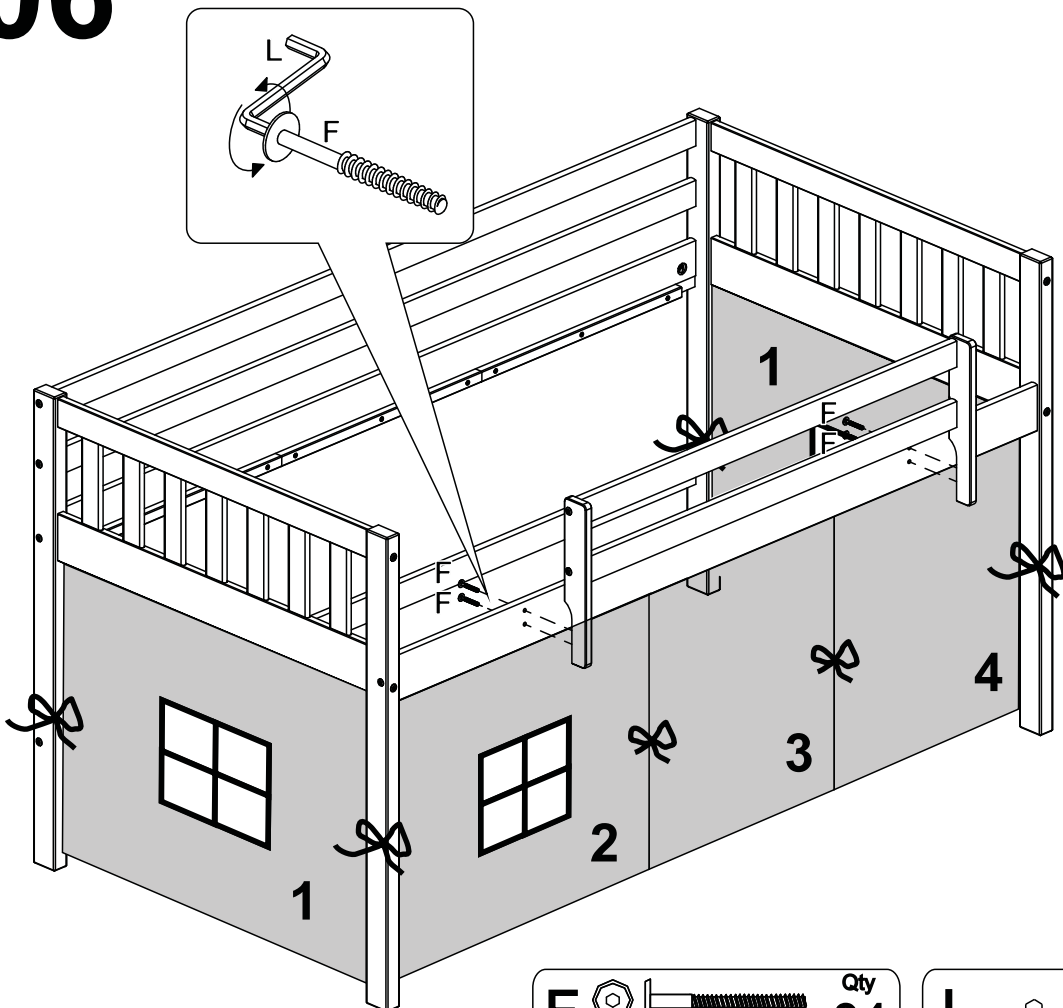






**F**  **7,0 x 50 Screw** Qty **04**

**L**  **Hex Screwdriver** Qty **01**



# 07 LADDER

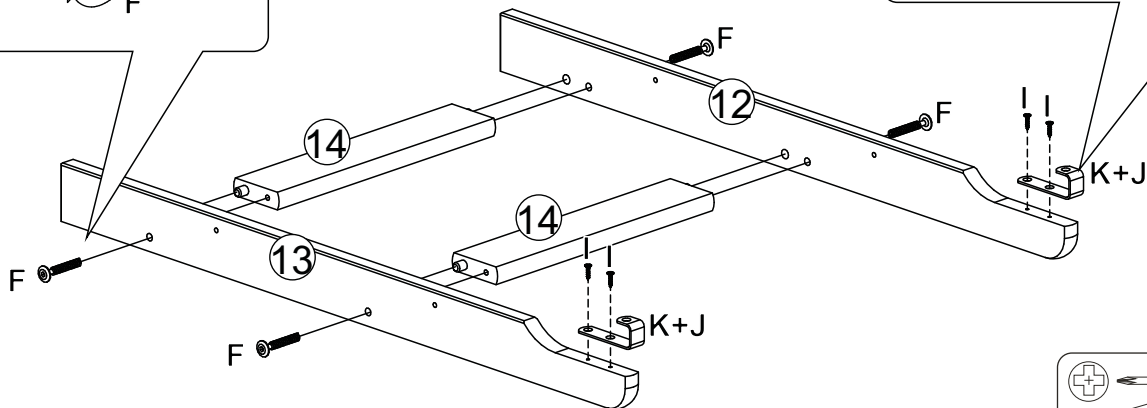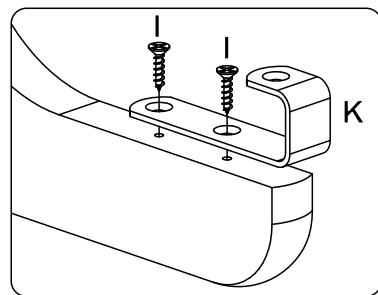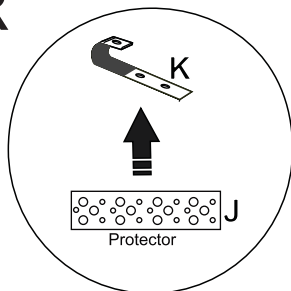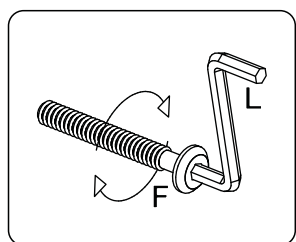

# 08

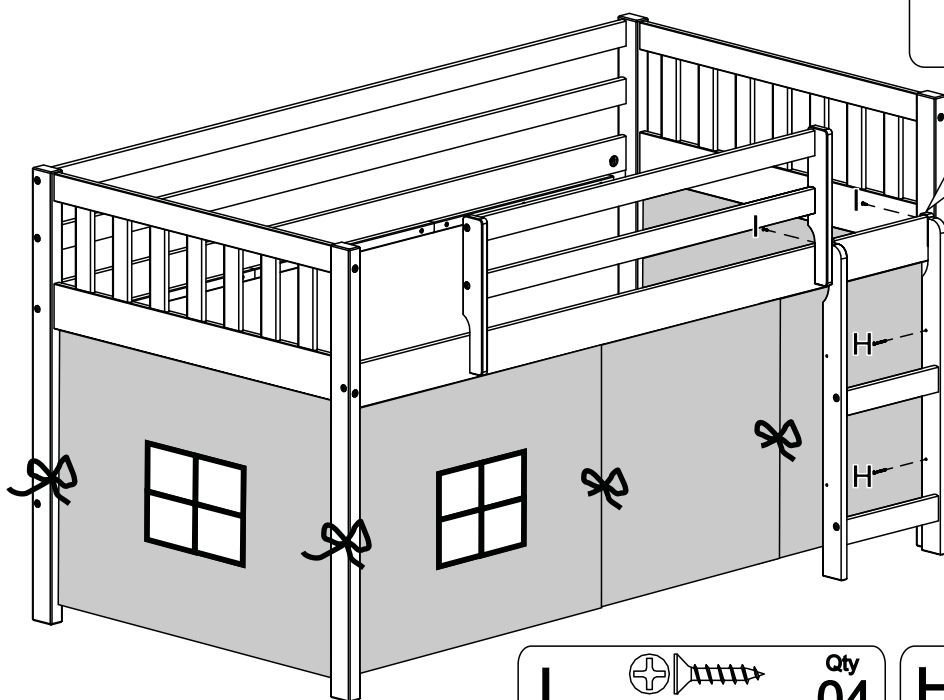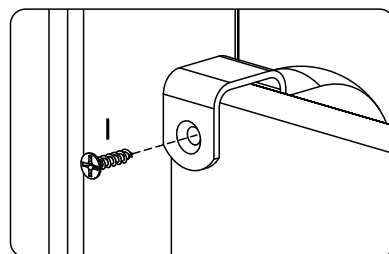


# 09

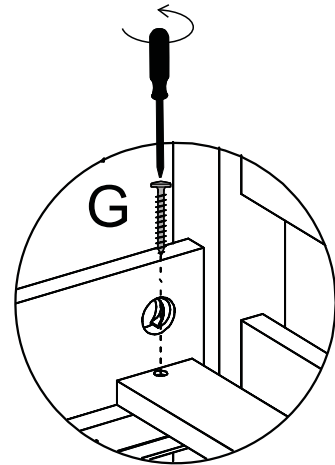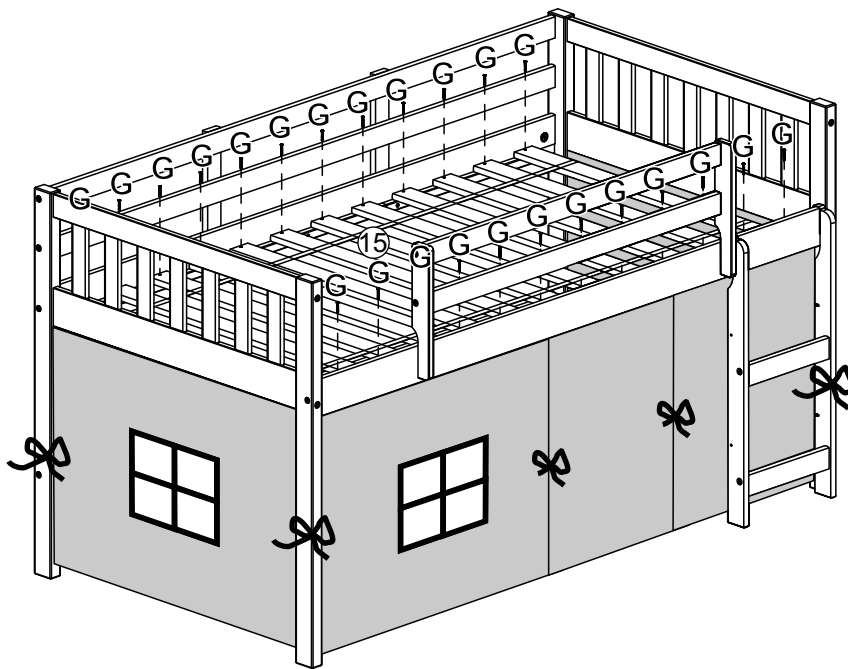


**The first slat must be fixed here at 3" from each headboard end.**

**Install slat kit with spacer tape on top (Facing up).**


**G**  **4,0 x 30 Screw** Qty **24**


# 10

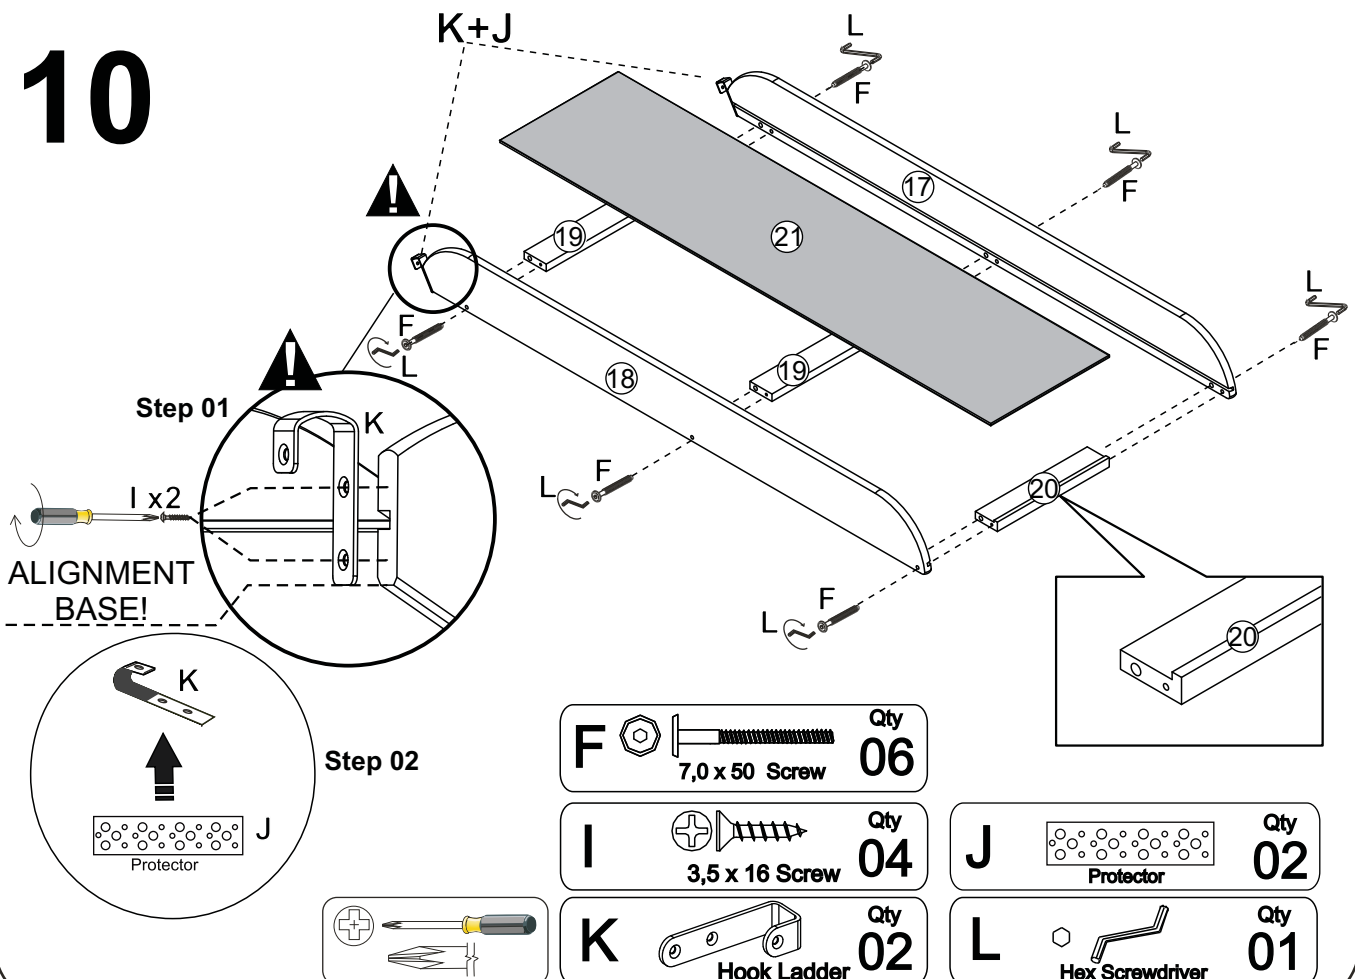


# 11

**WARNING**  
THE MATTRESS  
SURFACE MUST NOT  
BE ABOVE THIS LINE  
"MATTRESS 8" HIGH LIMITED"

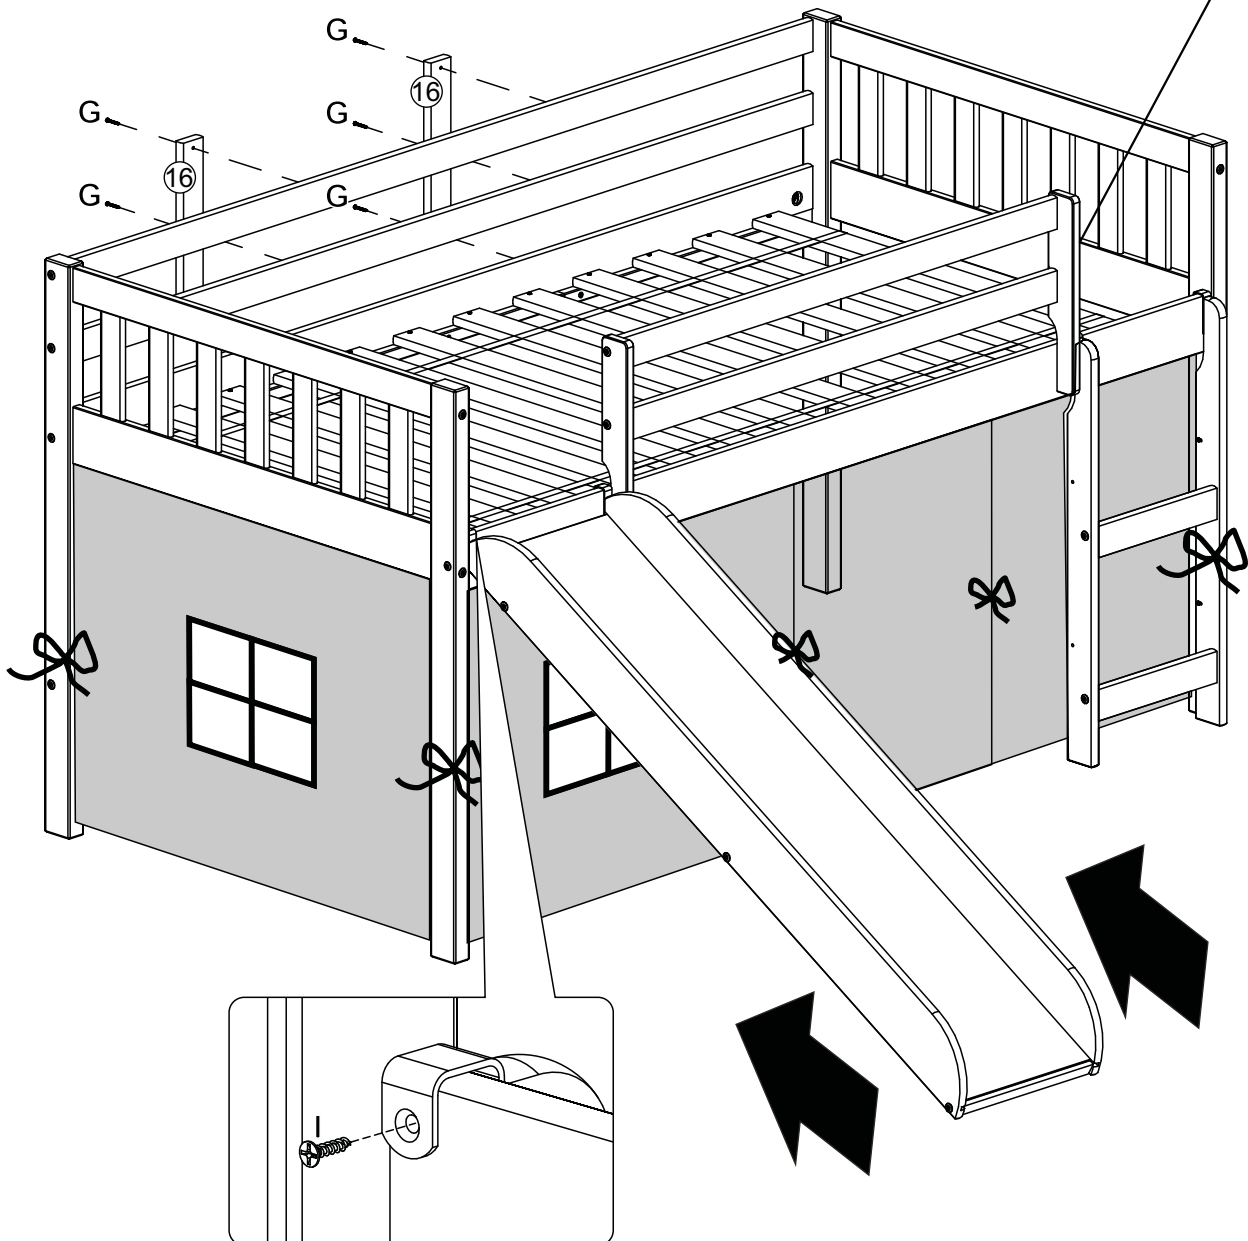

**G**  **4,0 x 30 Screw** **Qty 06**

**I**  **3,5 x 16 Screw** **Qty 02**

