


CONTEMPORARY SOFA

Assembly Instruction

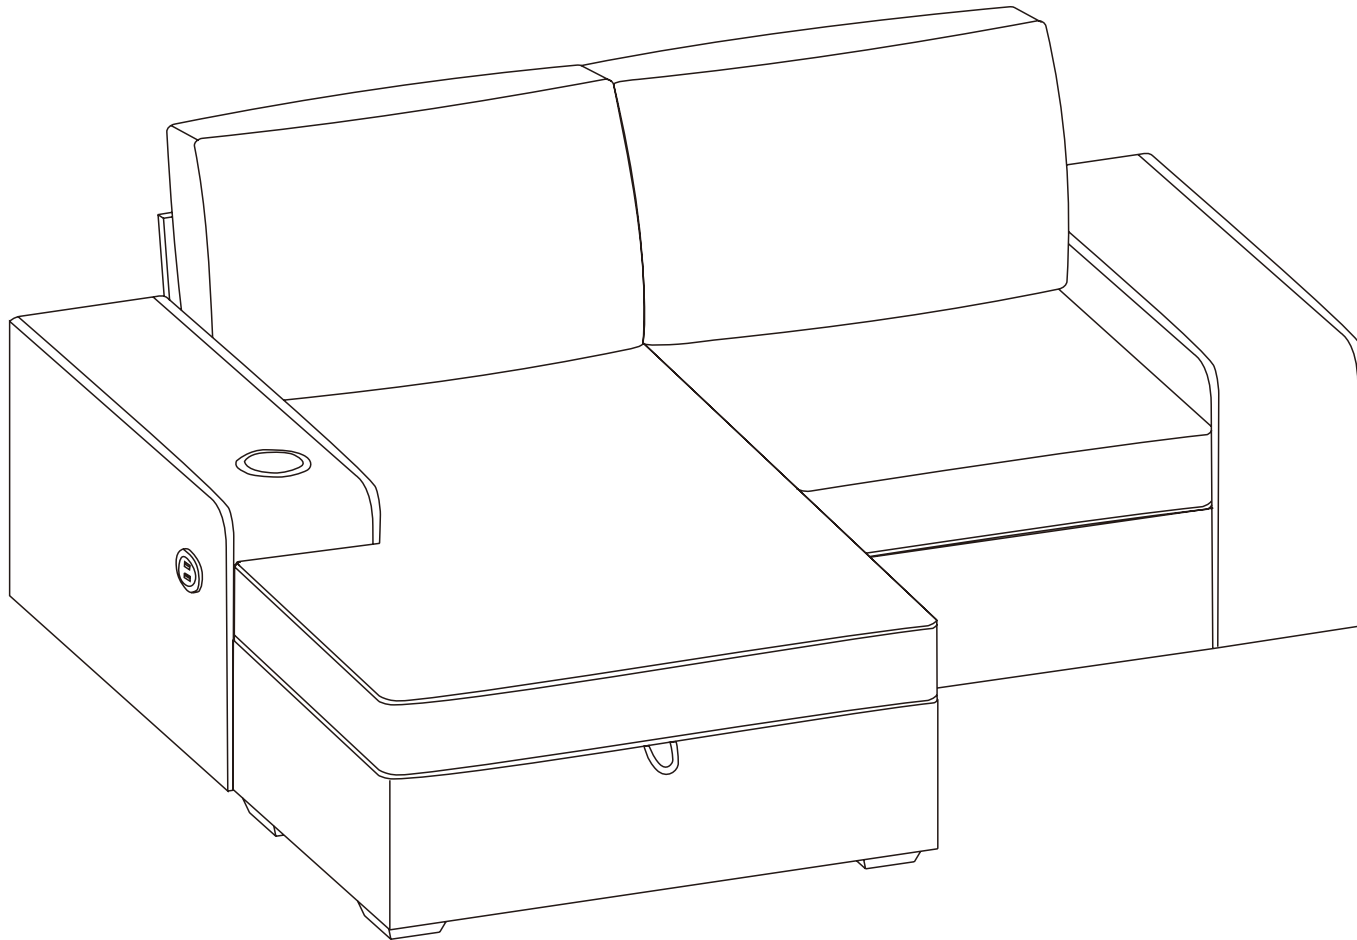

NOTE:

Delivered with Multiple PACKAGES with
Multiple TRACKINGS, may NOT be delivered
at the same time.




Safety and Care Advice

Important – Please read these instructions fully before starting assembly


Thanks for your purchase. Before assembling, please follow the instructions to check if all the spare parts and screws are intact.

- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
- Keep all components and packaging out of reach of children or animals to avoid the risk of choking or suffocation.
- Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed in a safe and environmentally friendly way.
- Please do not take off the cover, and do not wash.


Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

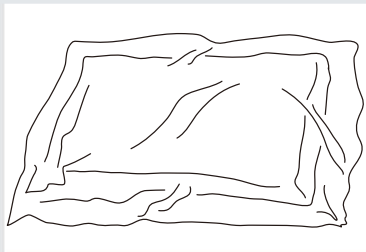


Open the vacuum bag carefully.

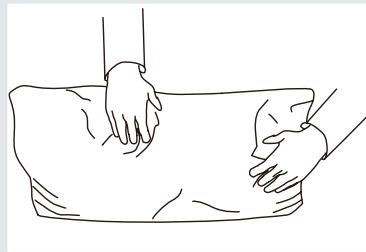

Press and tap with both hands from the side to fully inhale air.

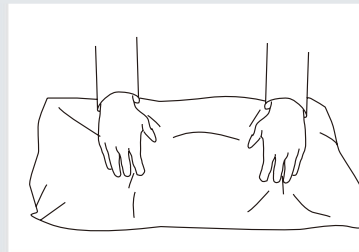

Press and tap with both hands from the front to fully inflate.

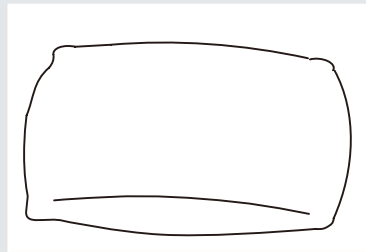

Carefully smooth out each section until the surface is even.


After packing up, place them in somewhere dry and ventilated. After about 72-96 hours. It can be restored to the best use condition.

Seller's Notice:

Our product is packed in separate boxes as shown below, and they might be shipped in different batches. Please wait until you received all the boxes then start the assembly.

Noted: Assembly instruction is only provided in Box1.

The following is the list of components contained in each box.

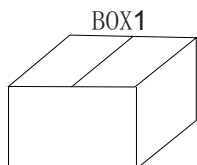

Main structure accessories


Ⓒ		Backrest	x2
Ⓐ		Armrest (L)	x1
Ⓡ		Armrest (R)	x1

Structure accessories

Ⓐ		Sofa Leg	x8
Ⓑ		Support Leg	x1
Ⓘ		Connector	x2
⓵		Connector	x2
Ⓚ		Charger	x1


Hardware parts

Ⓒ		M6*20	Bolt	x6
Ⓓ		M8*45	Bolt	x1
Ⓕ		M8*60	Bolt	x8
Ⓖ		M6	Allen Key	x2
ⓗ		M8*25	Bolt	x6

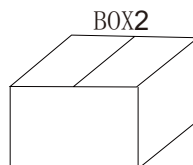

Main structure accessories


Ⓐ		Back Frame	x1
Ⓓ		Front Bezel	x1
Ⓔ		Seat Frame	x1
Ⓕ		Seat Frame	x1

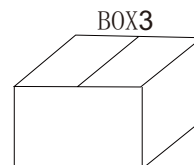


Main structure accessories

Ⓑ		Cushion	x1
Ⓖ		Chaise Cushion	x1
ⓓ		Ottoman TopBezel	x1
Ⓘ		Ottoman Base Frame	x1


SOFA

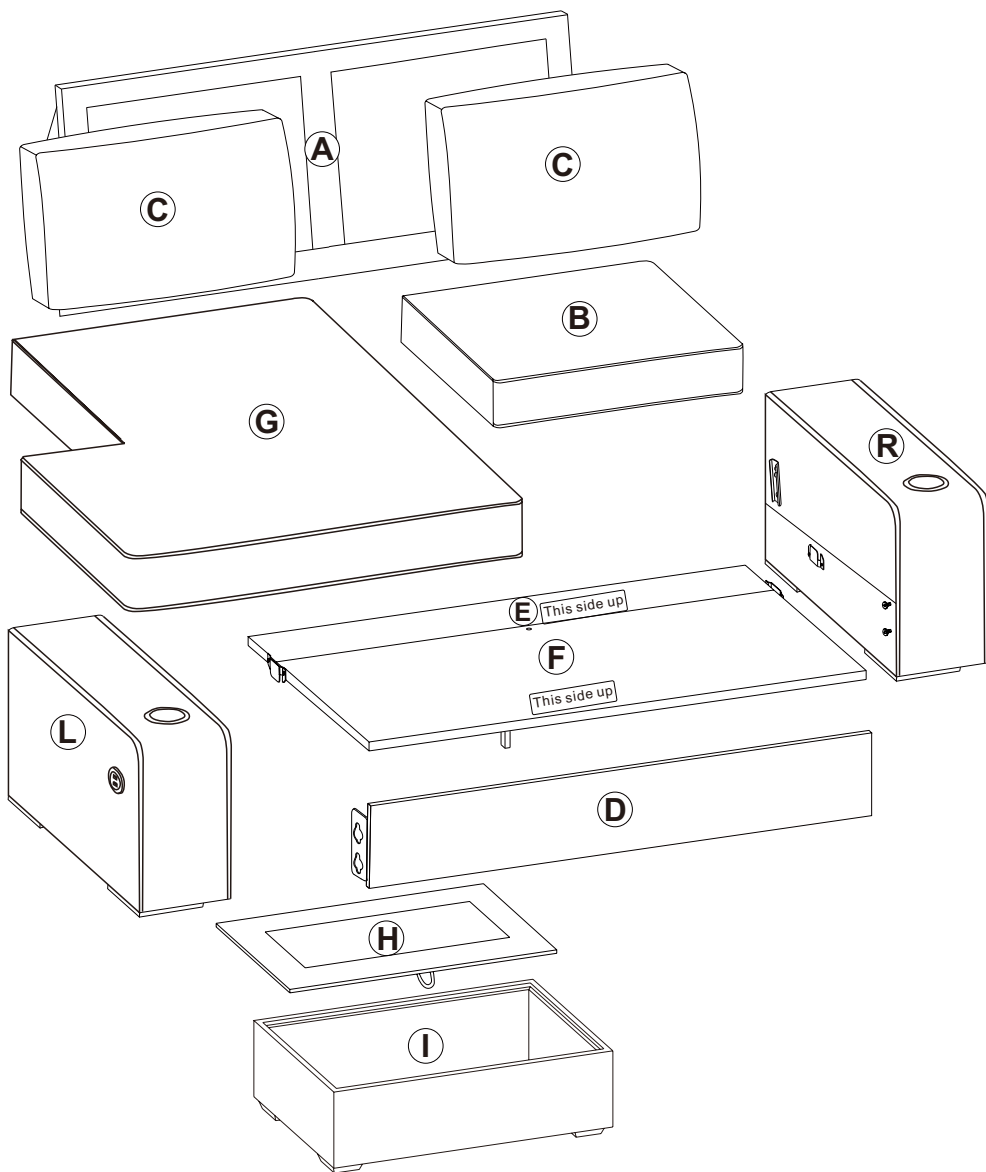

Structural accessories

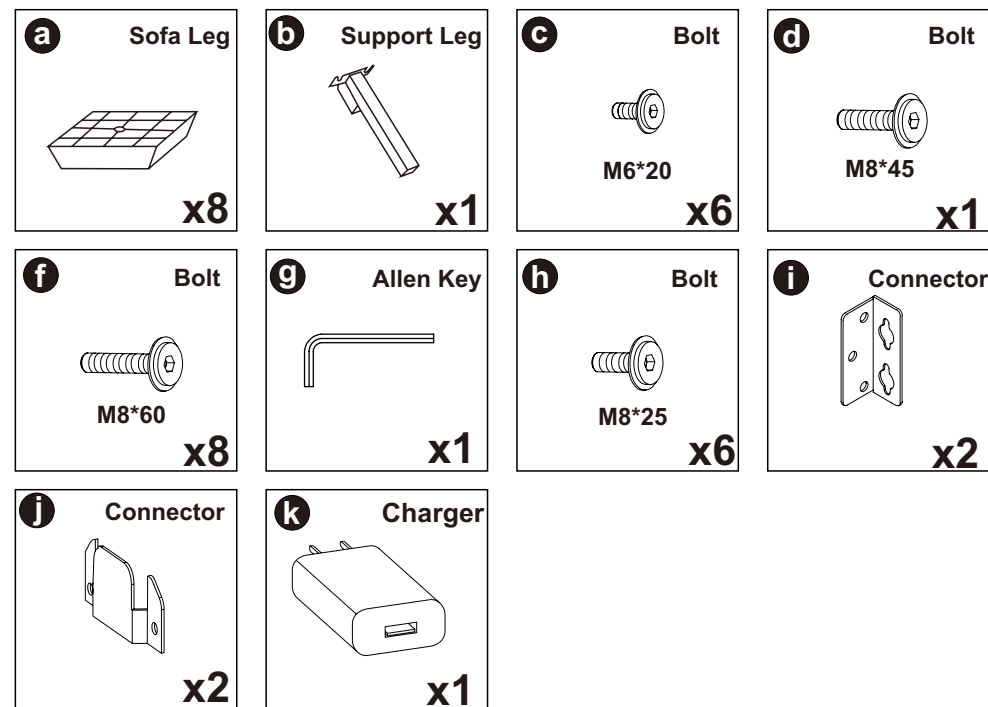


Main structure accessories

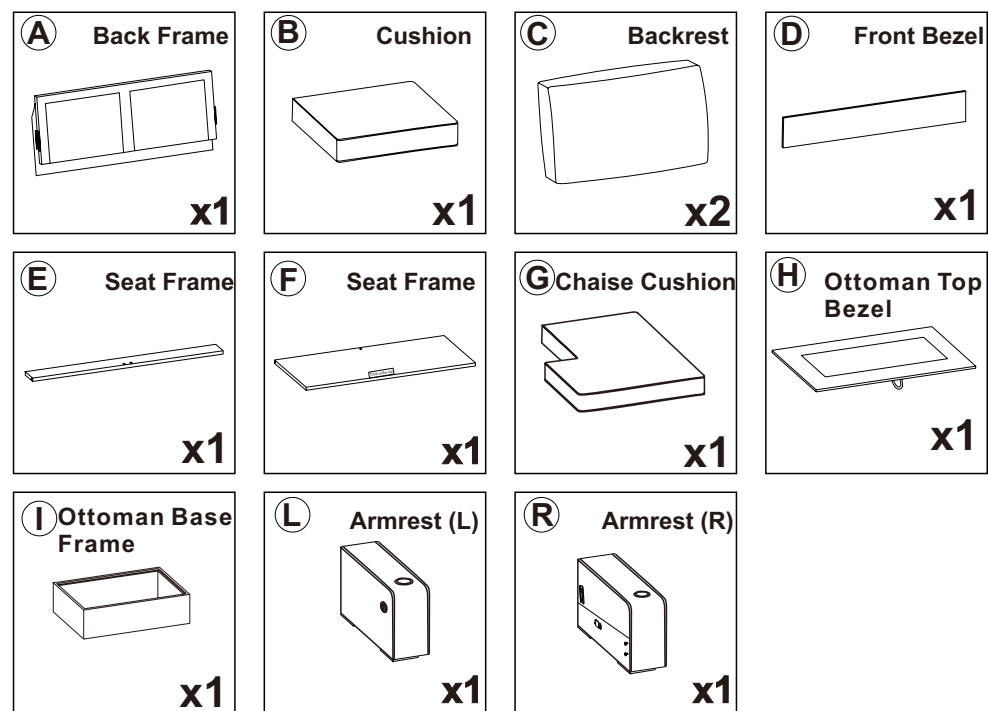


STEP 1



Attention! Back cushions are stored inside the armrests, please remove screws and take off the wood board.

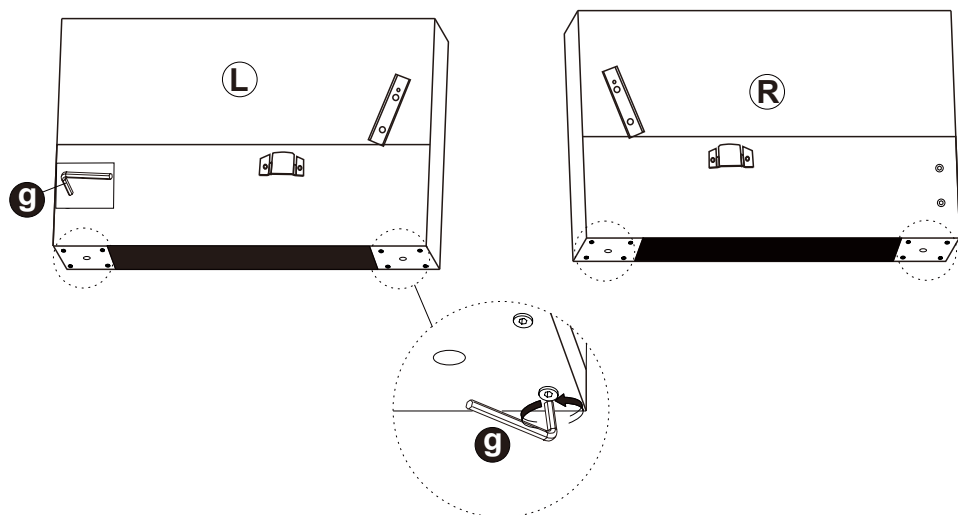


STEP 2

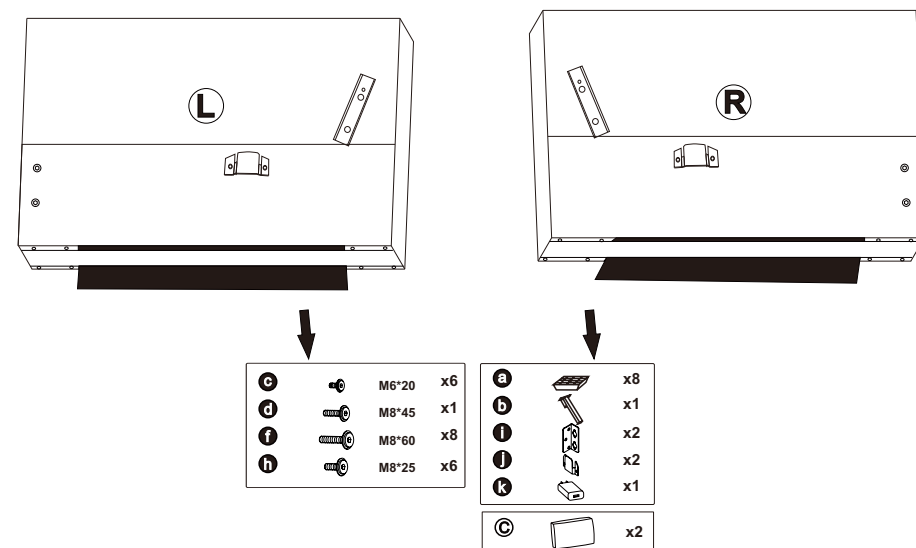


Take out of C and all the accessories from the bottom of L and R.


STEP 3

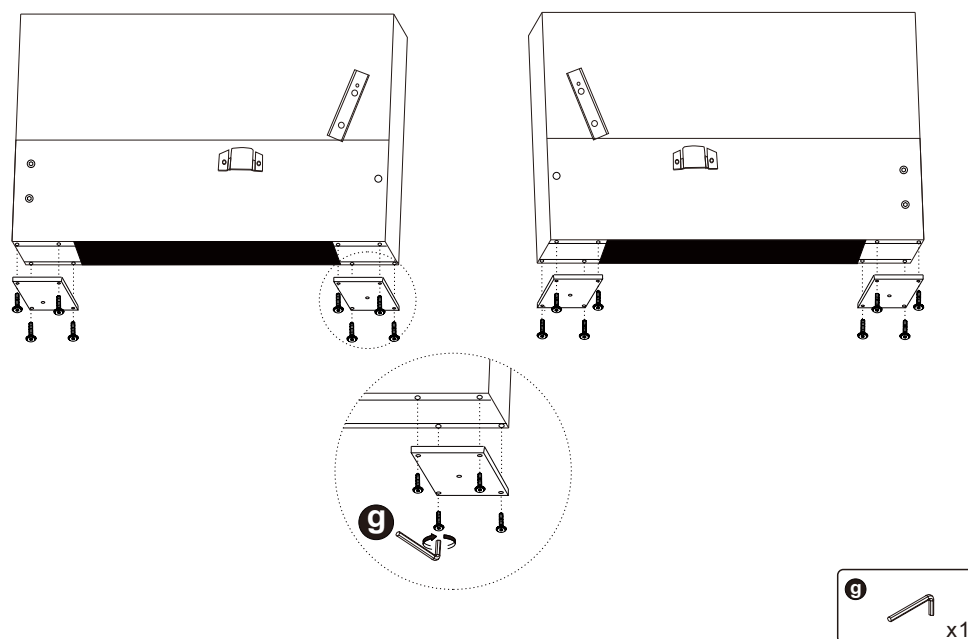


STEP 4

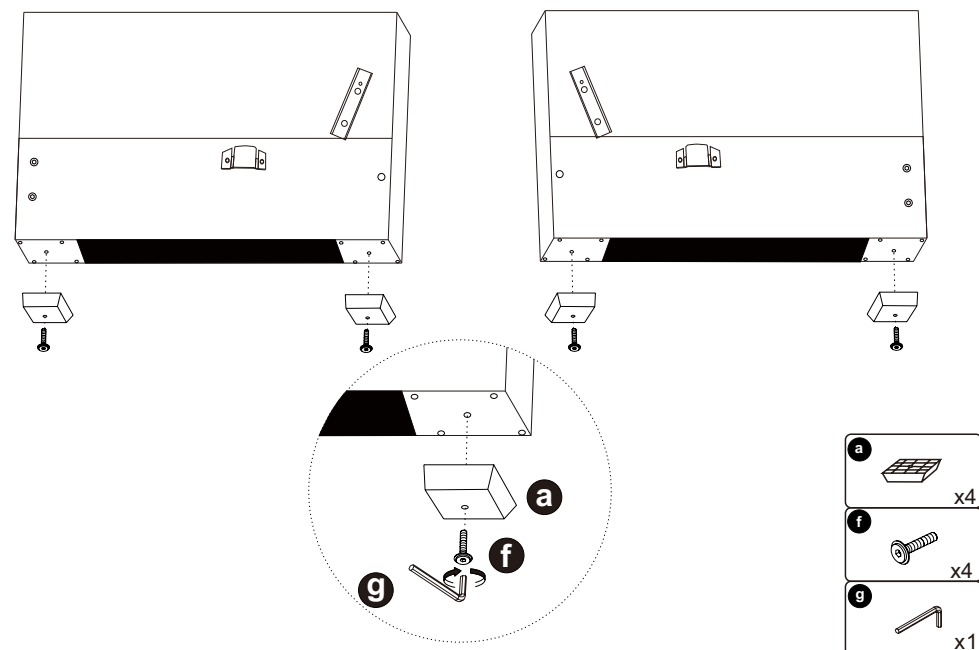


STEP 5

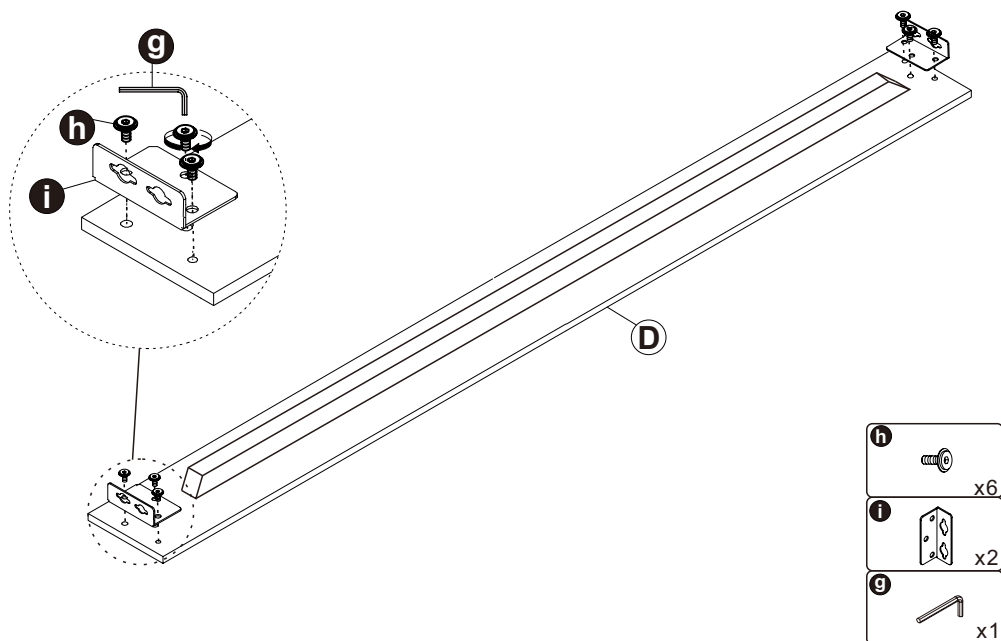


STEP 6

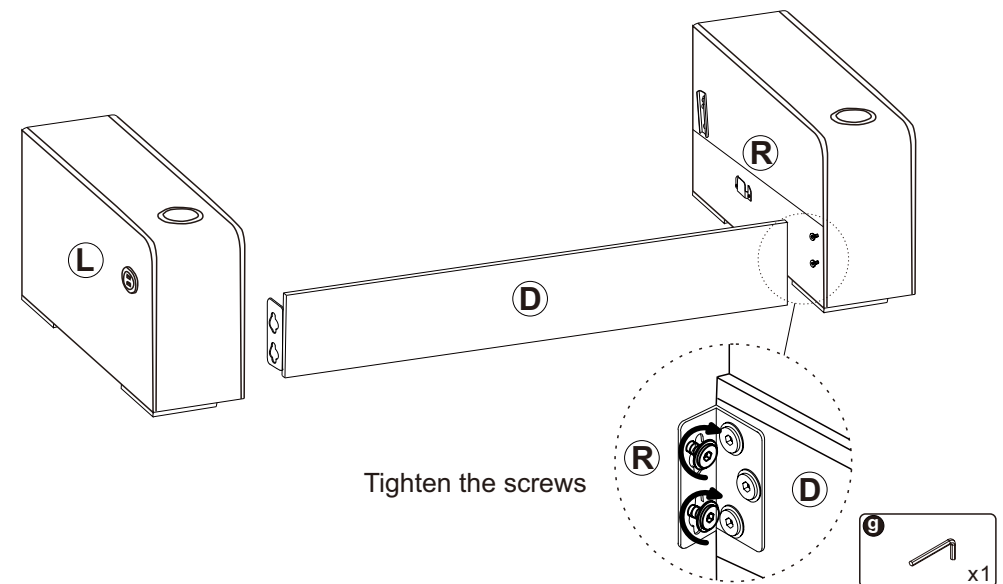


STEP 7

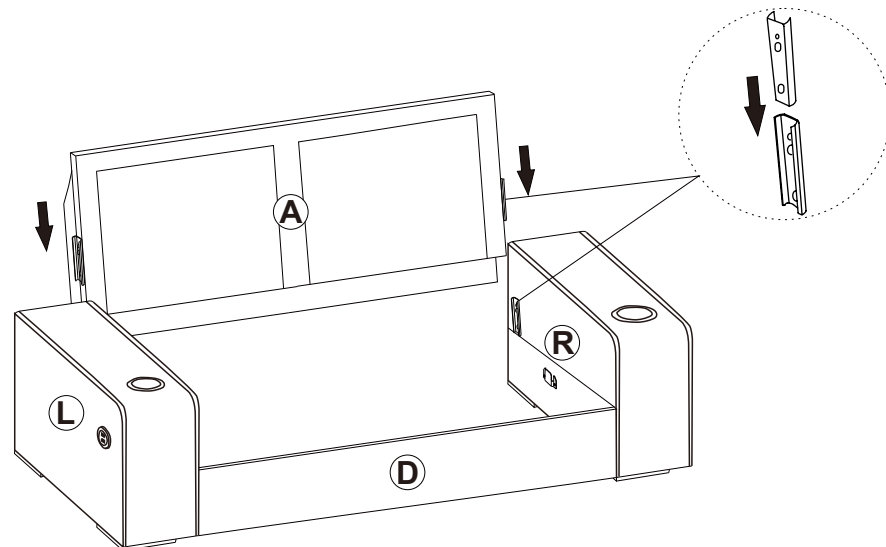


STEP 8

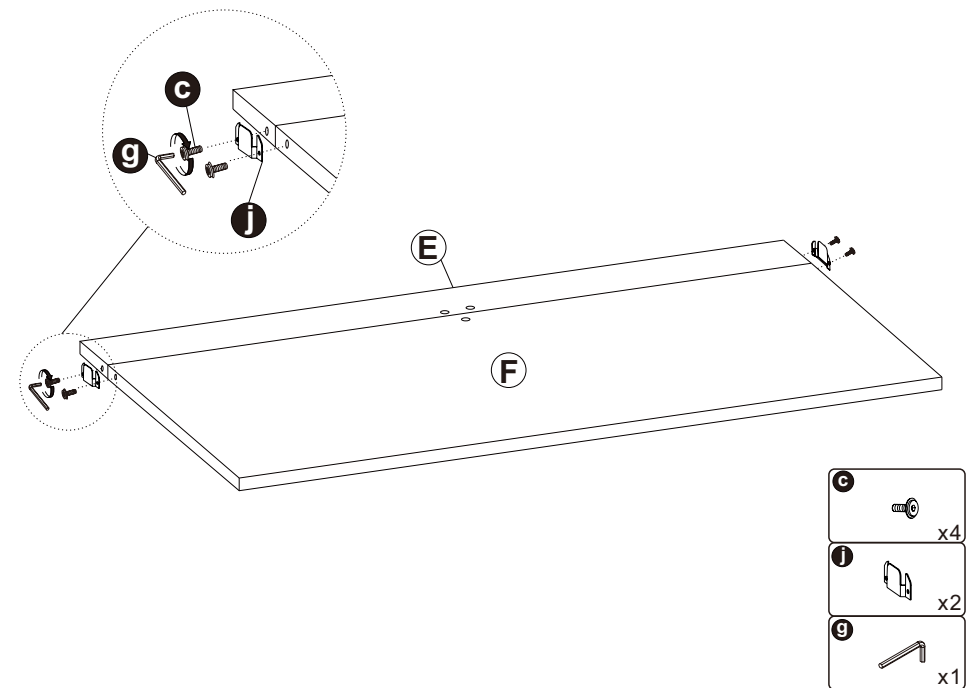


STEP 9

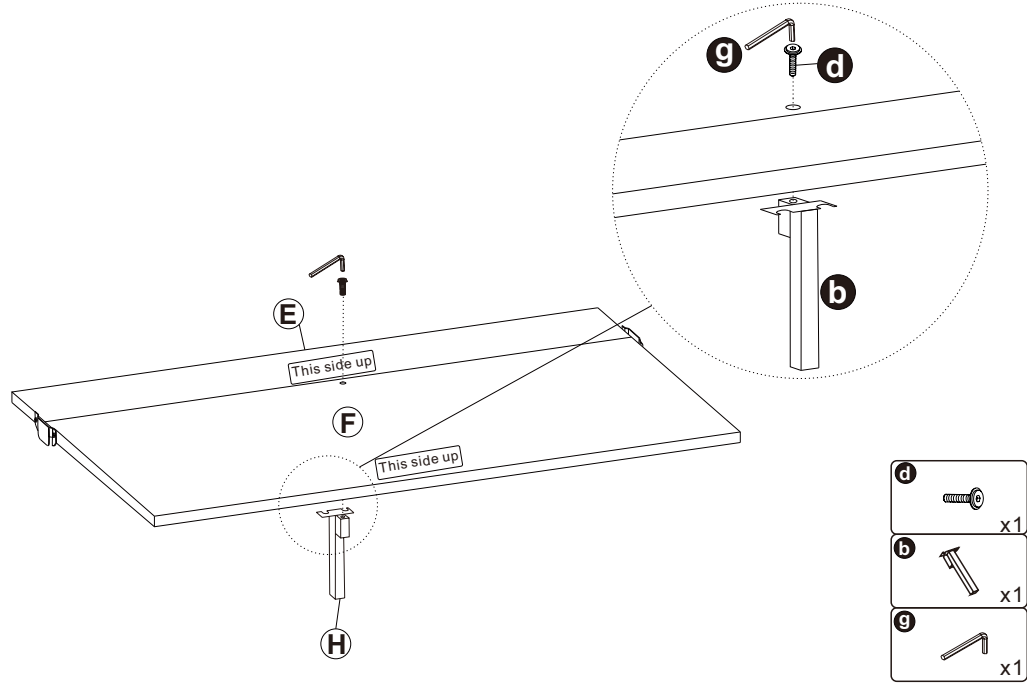


STEP 10

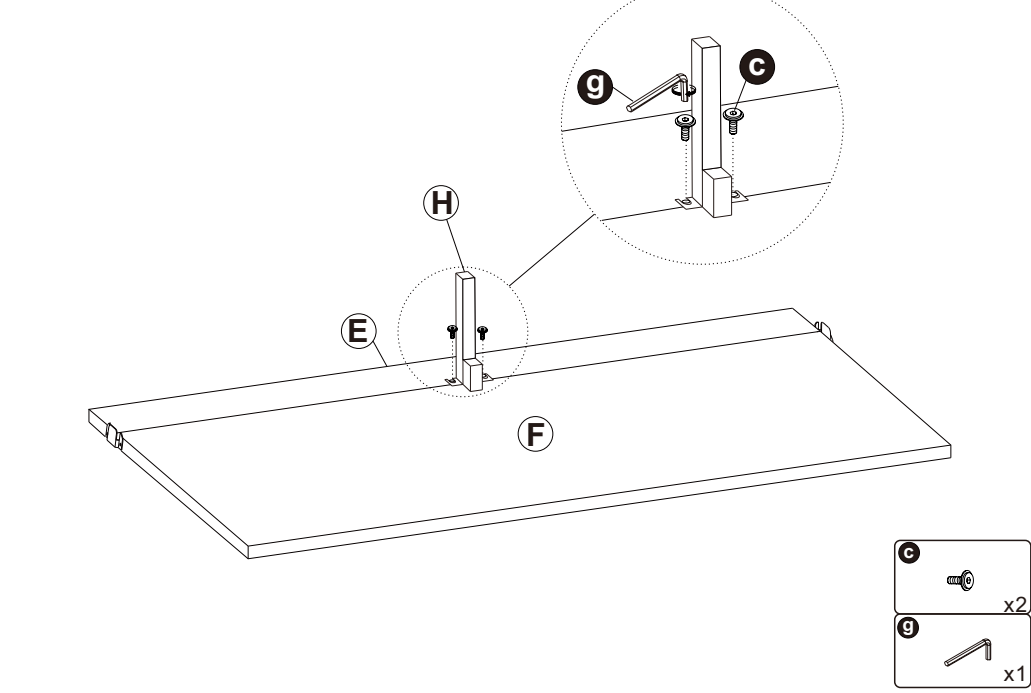


STEP 11

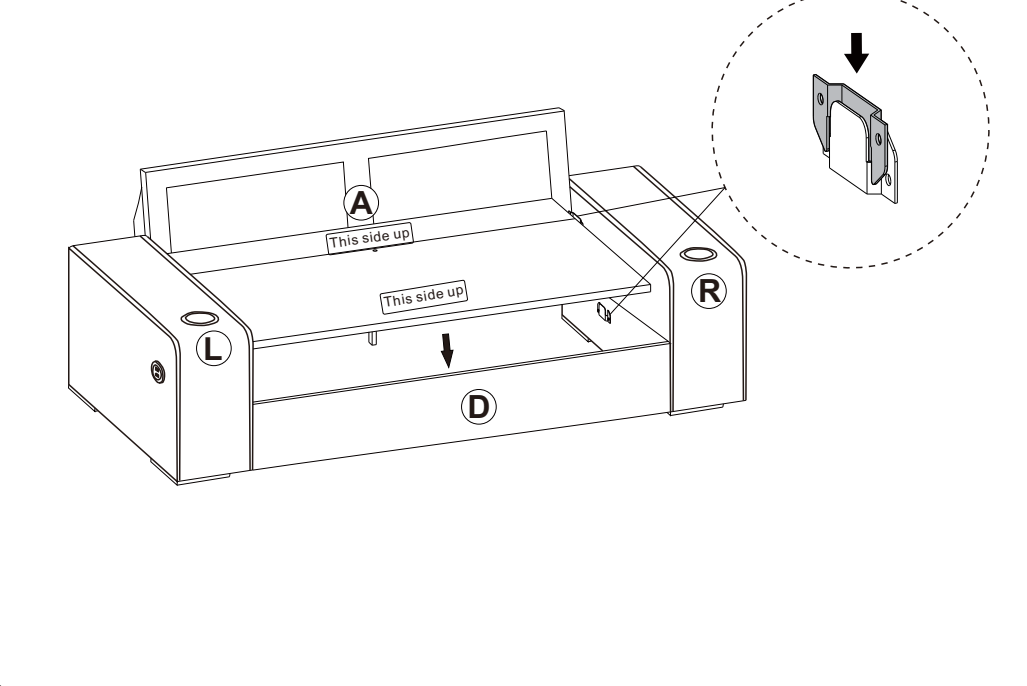


STEP 12

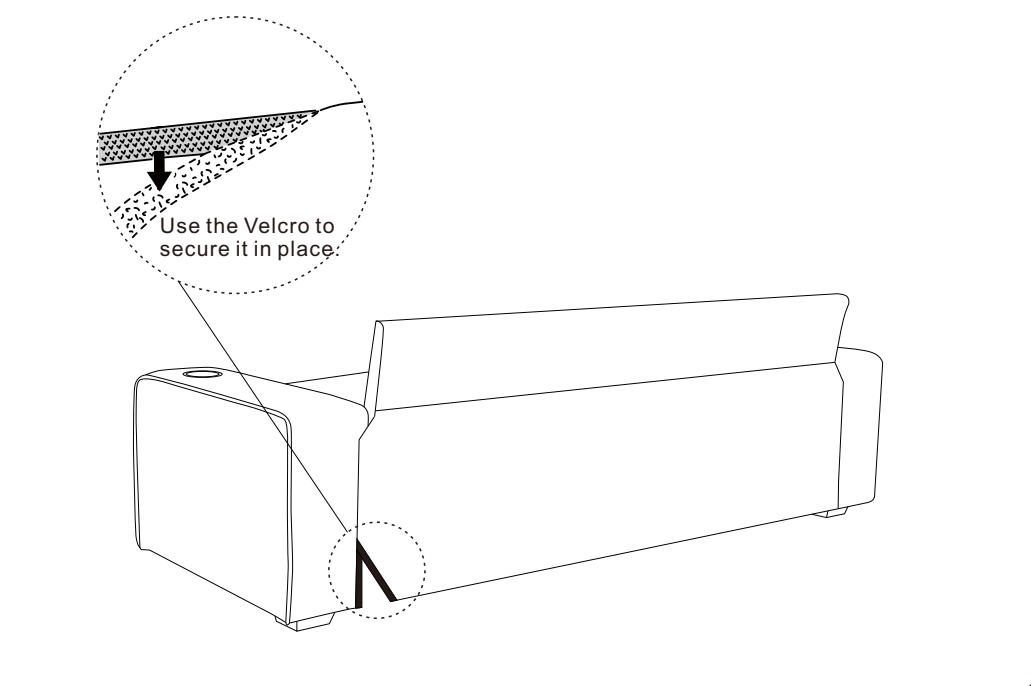


STEP 13

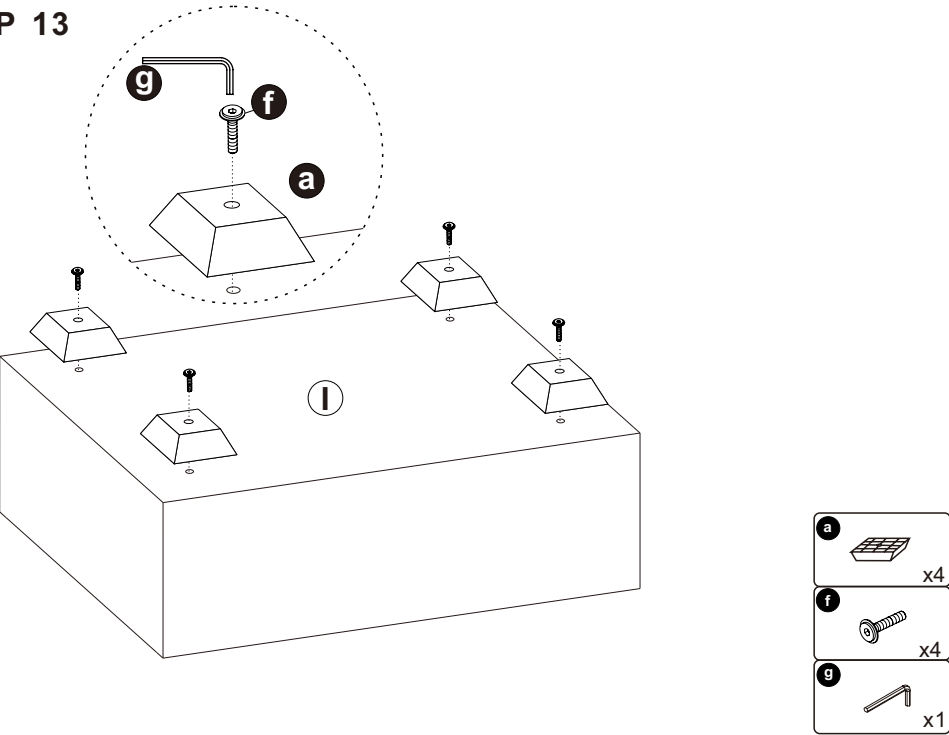


STEP 14

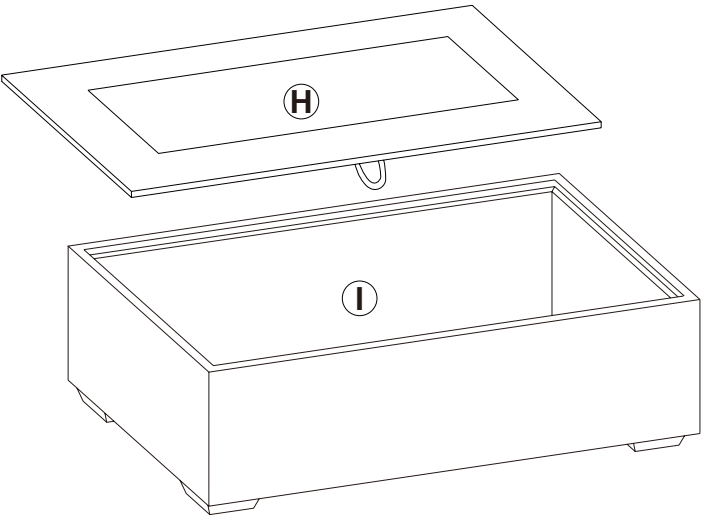


STEP 15

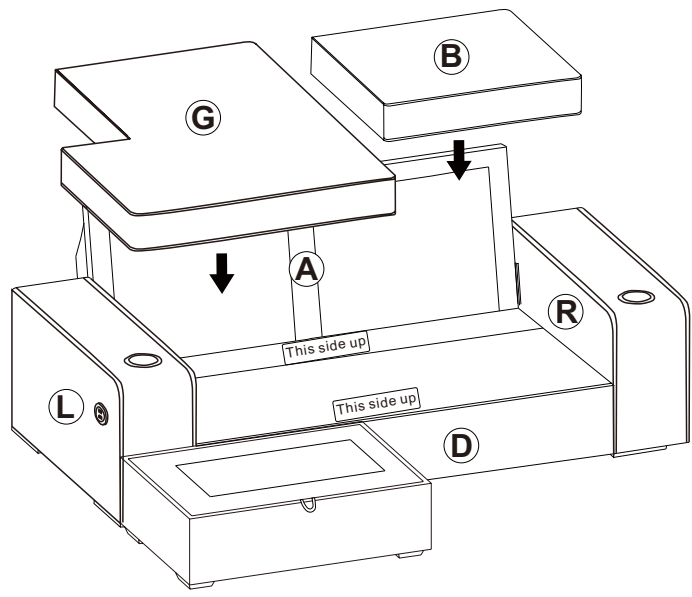


STEP 16

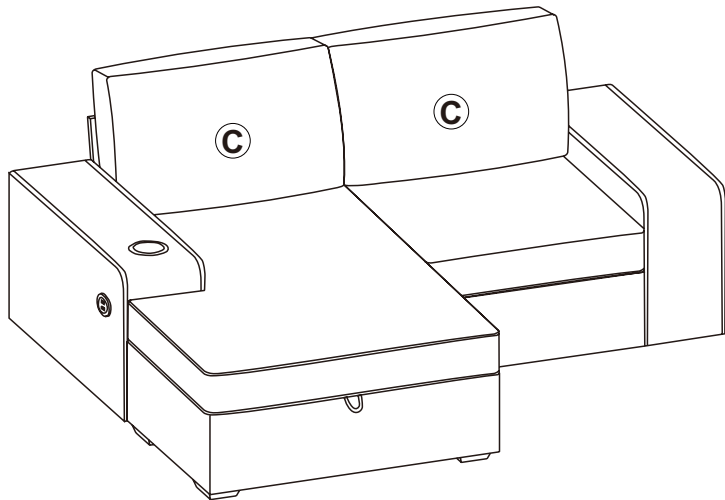


STEP 17

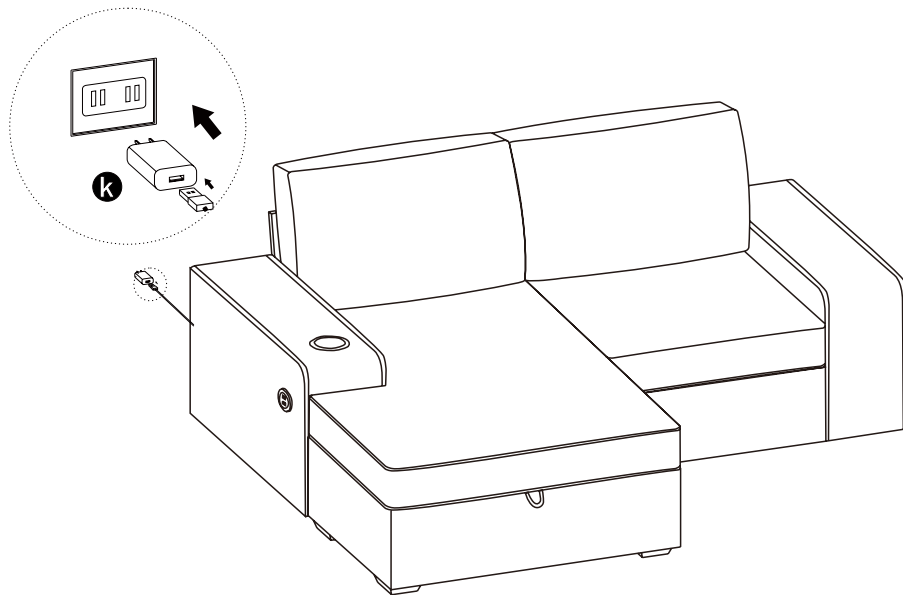

STEP 18

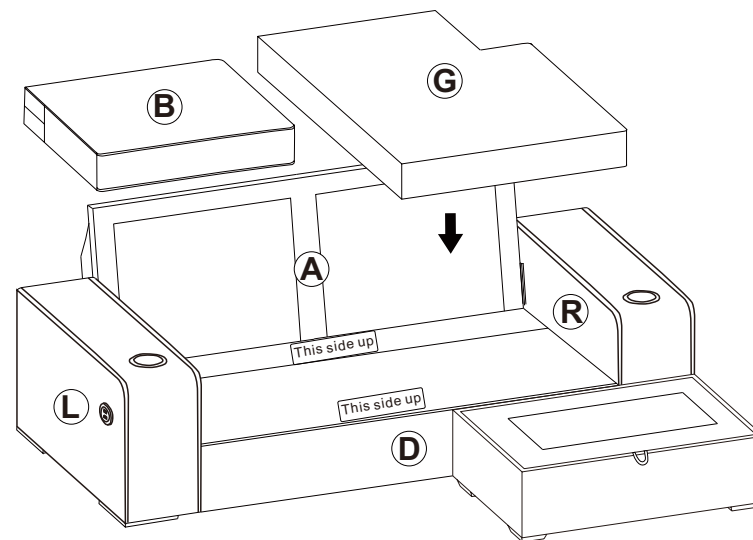

STEP 19

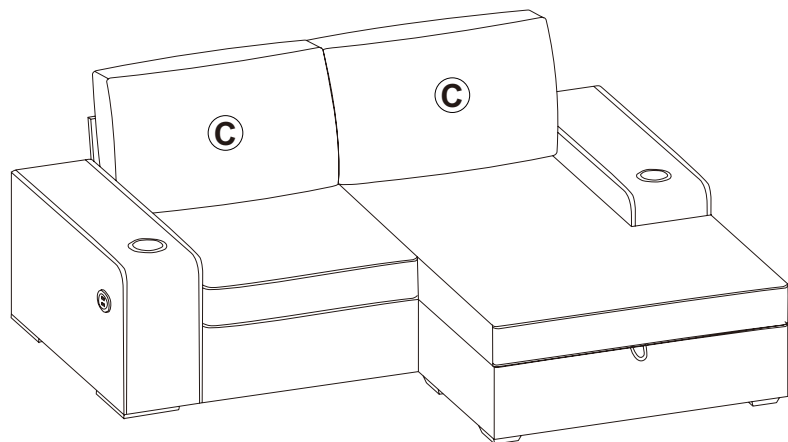

STEP 20

