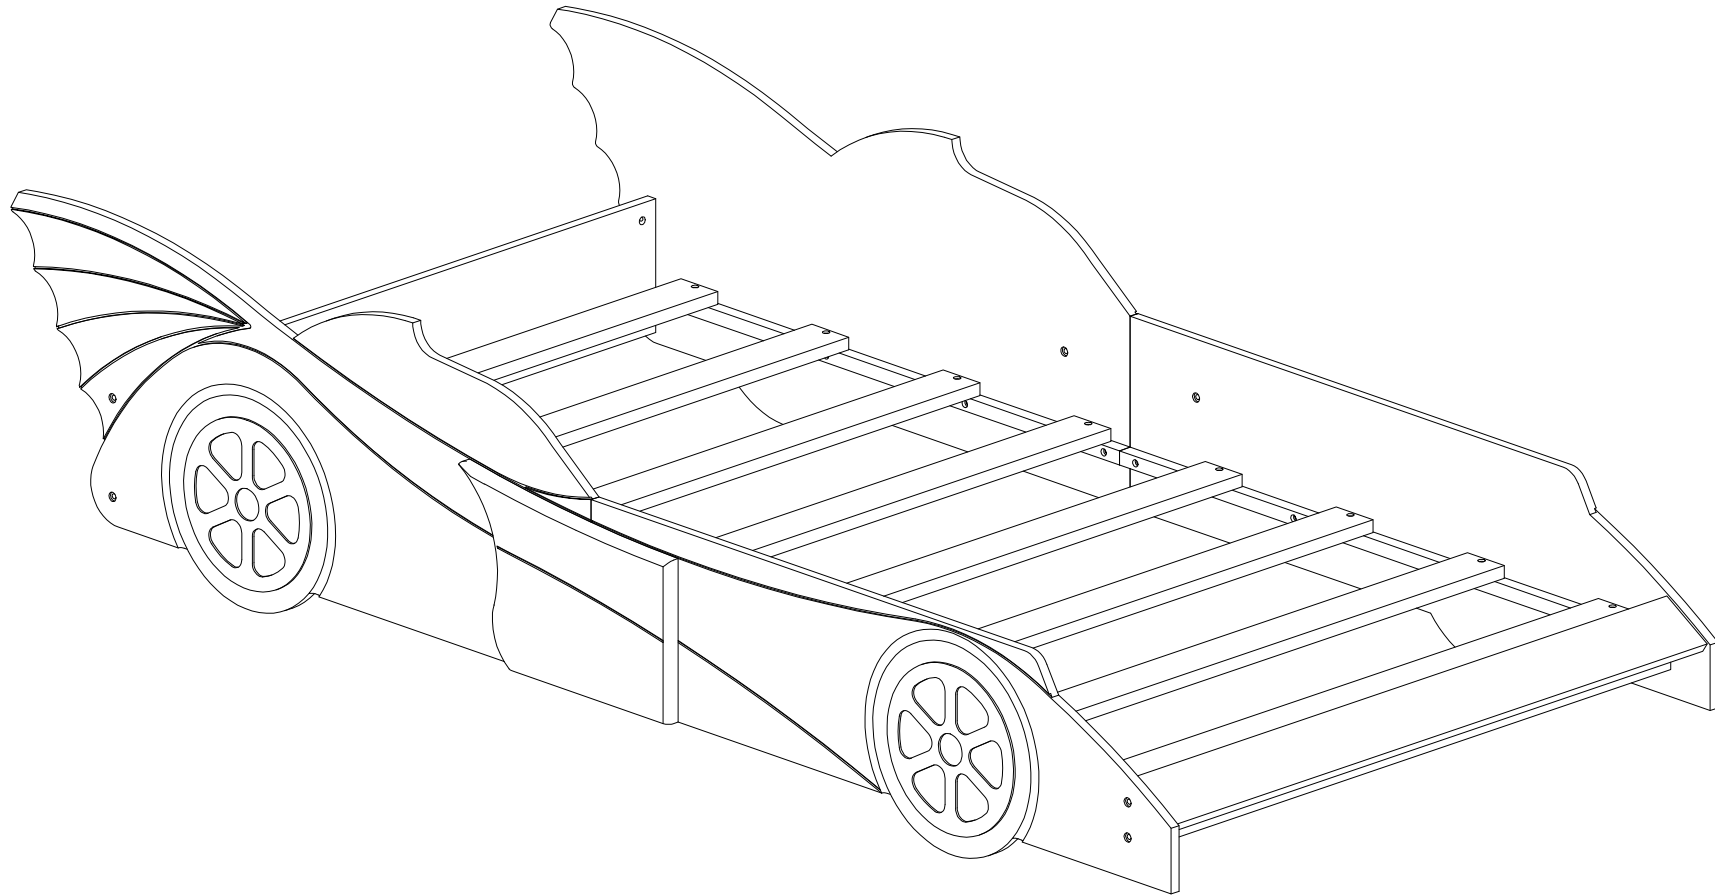


ASSEMBLY INSTRUCTION

TWIN CAR BED

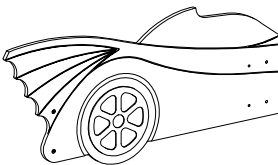
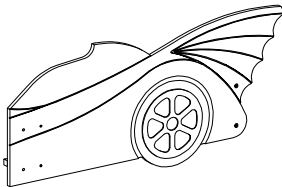
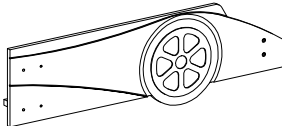
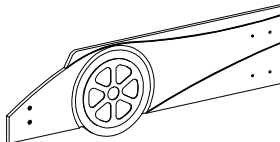

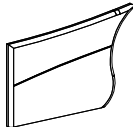





PAGE: 1 OF 6

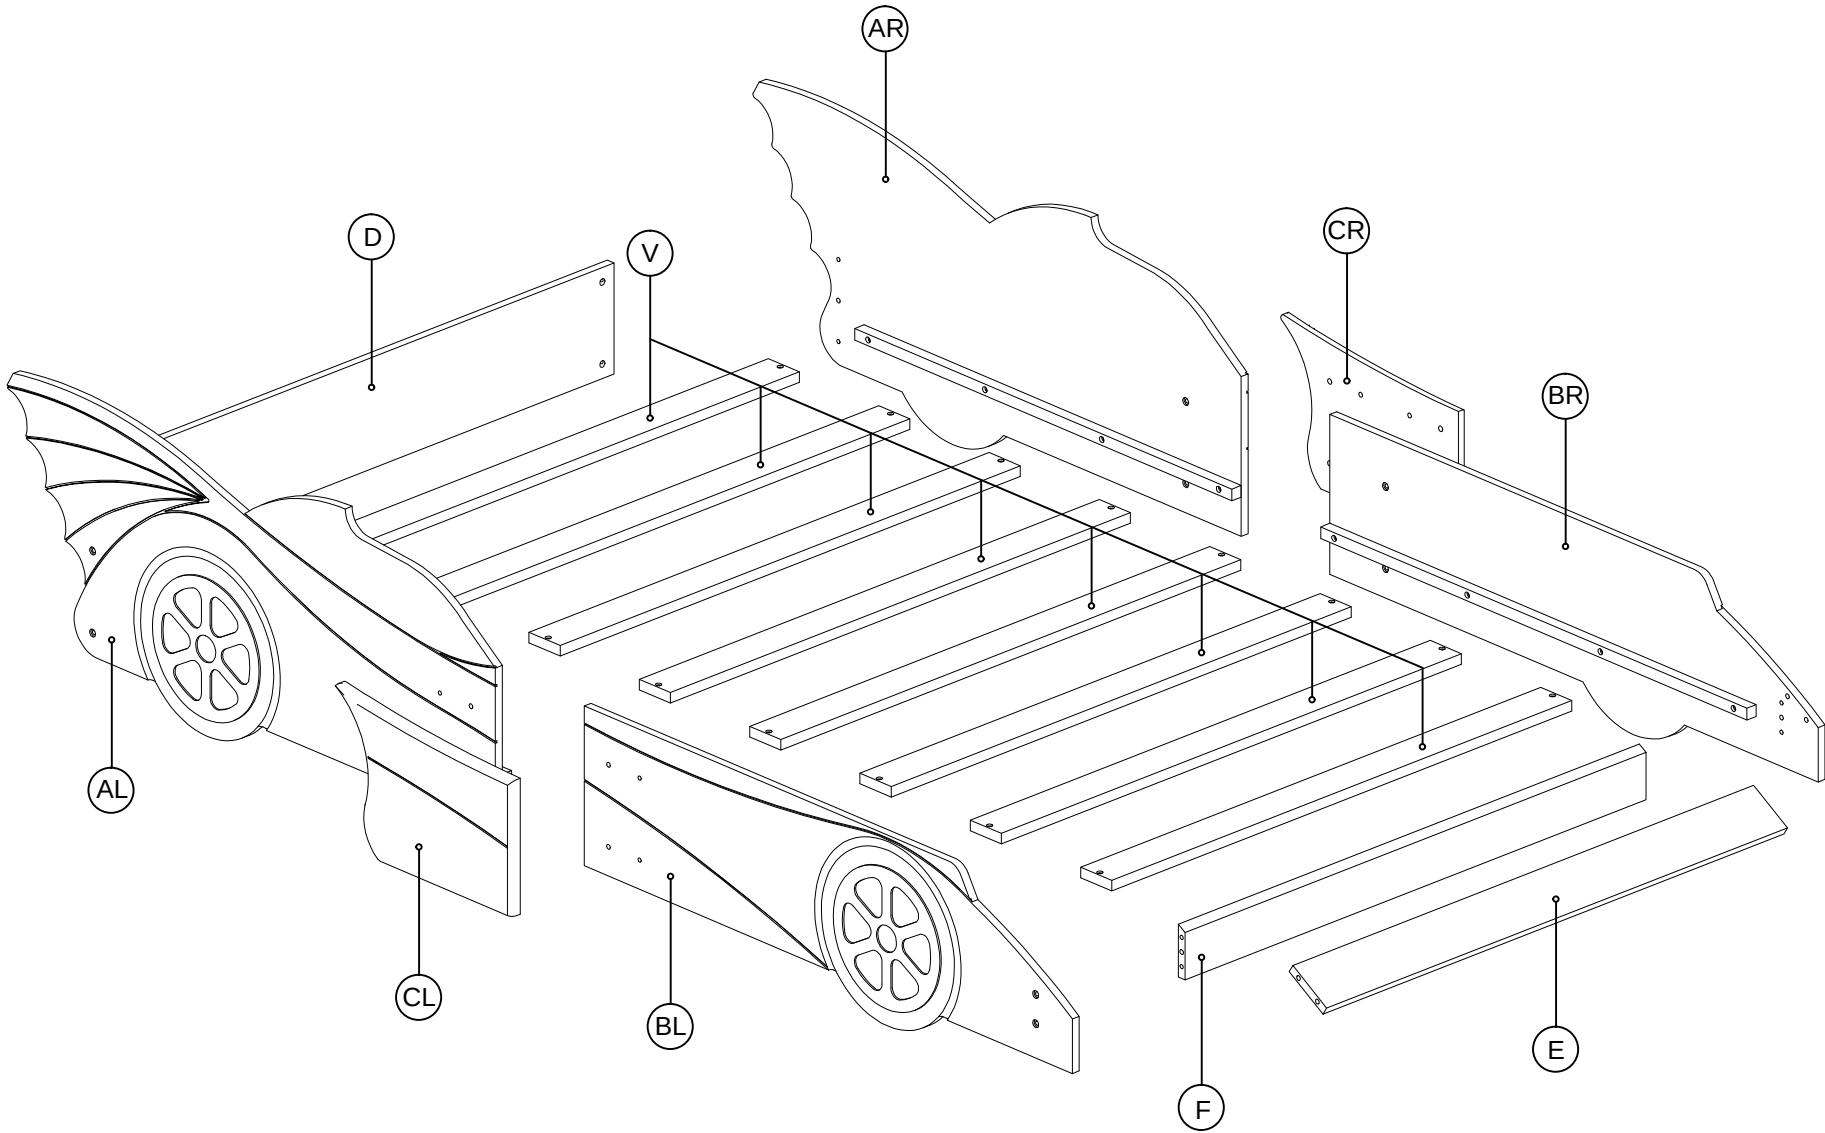


IMPORTANT NOTE

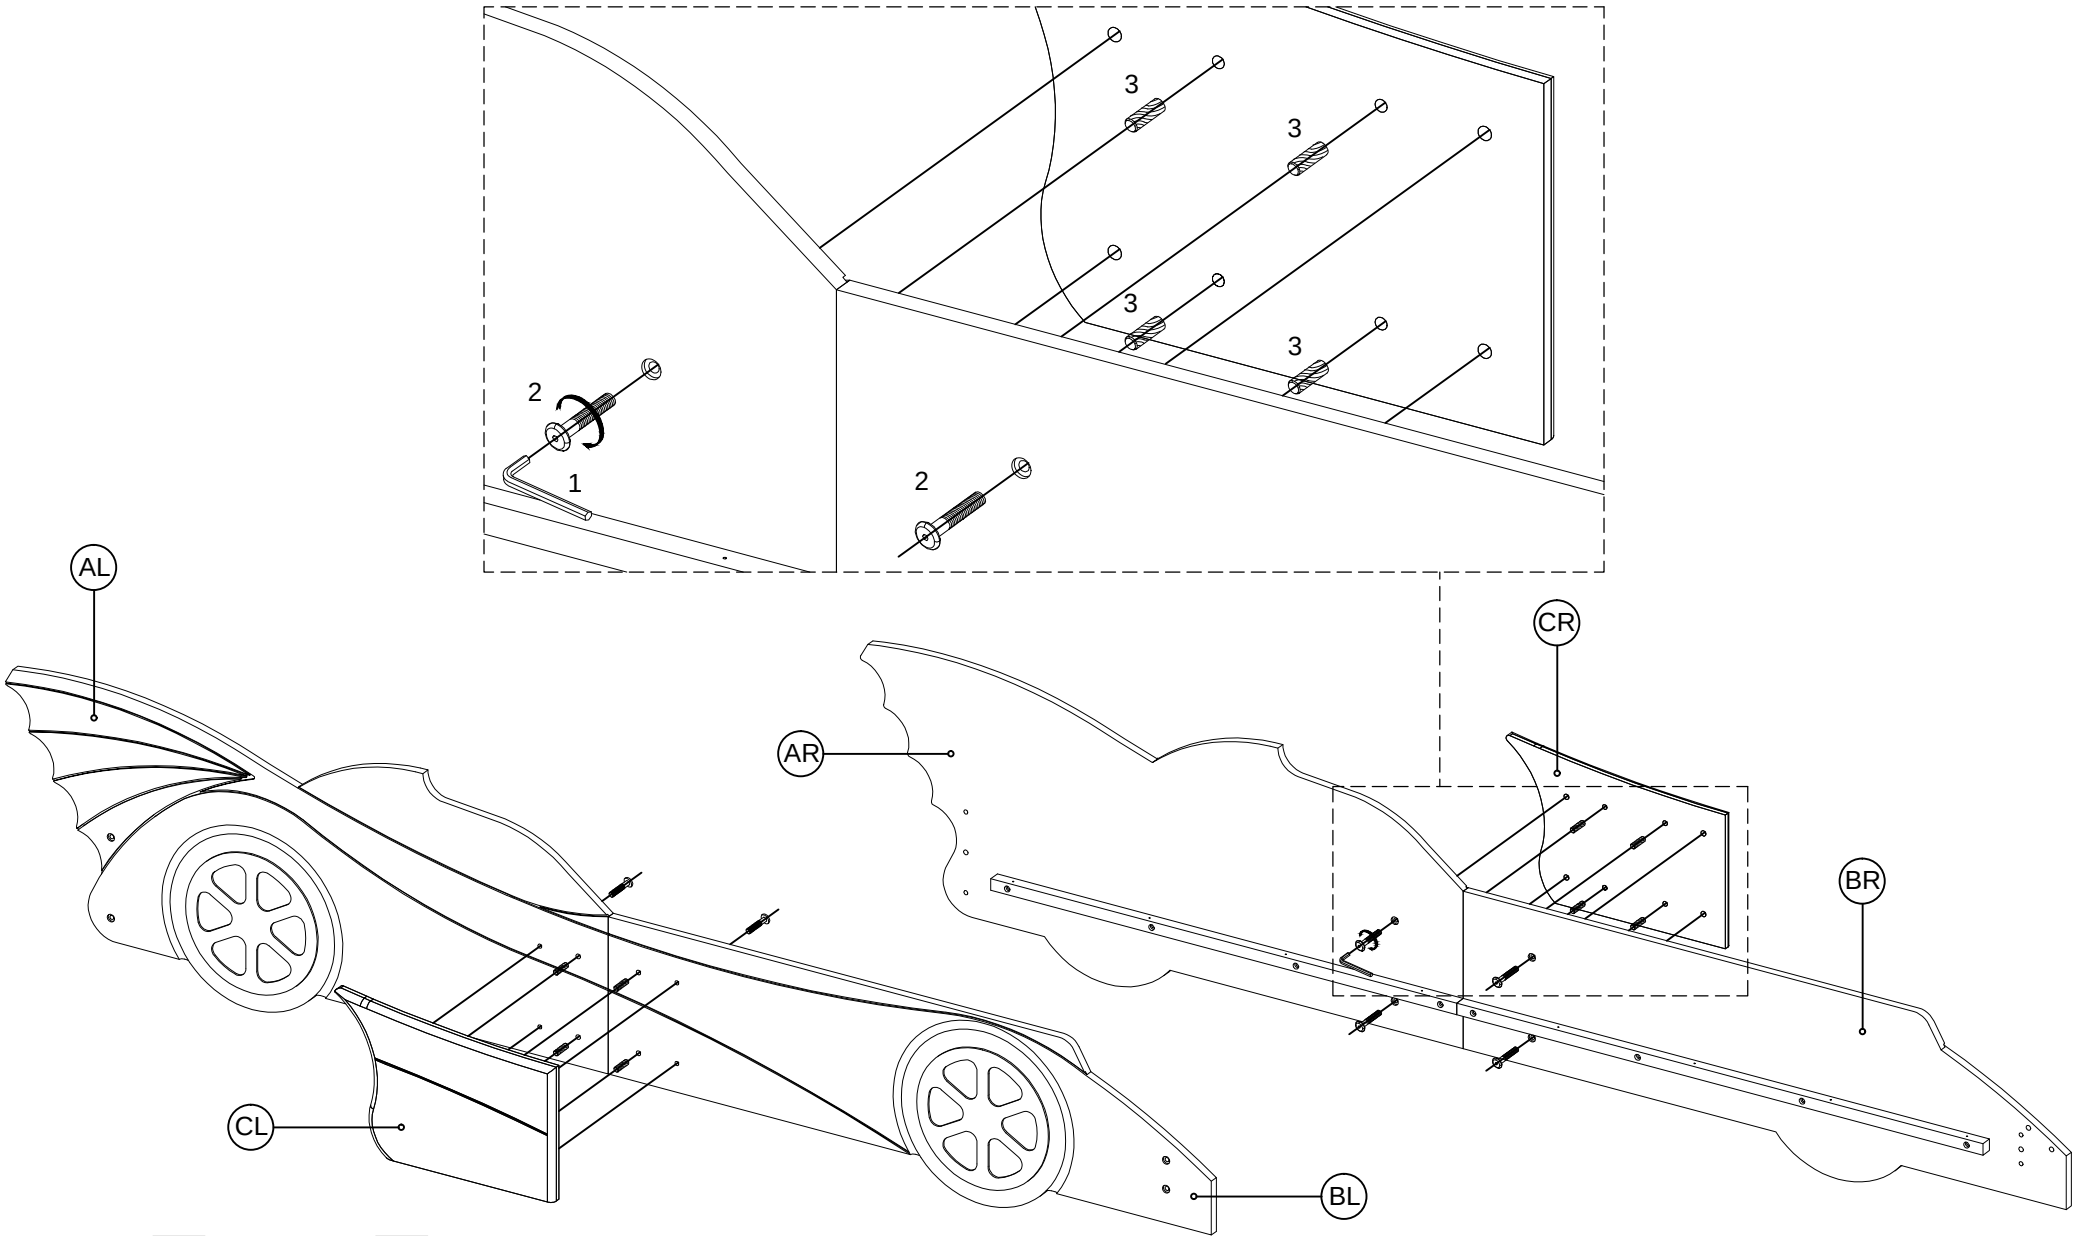
1. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
2. BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
3. DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP



ASSEMBLY INSTRUCTION

PART LIST		HARDWARE LIST	
AL BACK SIDE RAIL LEFT (1PC) 	AR BACK SIDE RAIL RIGHT (1PC) 	1 ALLEN KEY (1PC) K4 x 60 mm 	
BL FRONT SIDE RAIL LEFT (1PC) 	BR FRONT SIDE RAIL RIGHT (1PC) 	2 HEX HEAD BLOT (8PCS) 1/4 x 25 mm 	
CL SUPORT SIDE RAIL LEFT (1PC) 	CR SUPORT SIDE RAIL LEFT (1PC) 	3 WOOD DOWEL (16PCS) Ø8 x 25 mm 	
D BACK RAIL (1PC) 	E FRONT RAIL UPPER (1PC) 	4 HEX HEAD BLOT (8PCS) 1/4 x 50 mm 	
F FRONT RAIL LOWER (1PC) 	V SLATS (8PCS) 	5 BARREL NUT (8PCS) 1/4 x Ø10 x 10 mm 	
		6 WOOD SCREW (16PCS) Ø4 x 25 mm 	

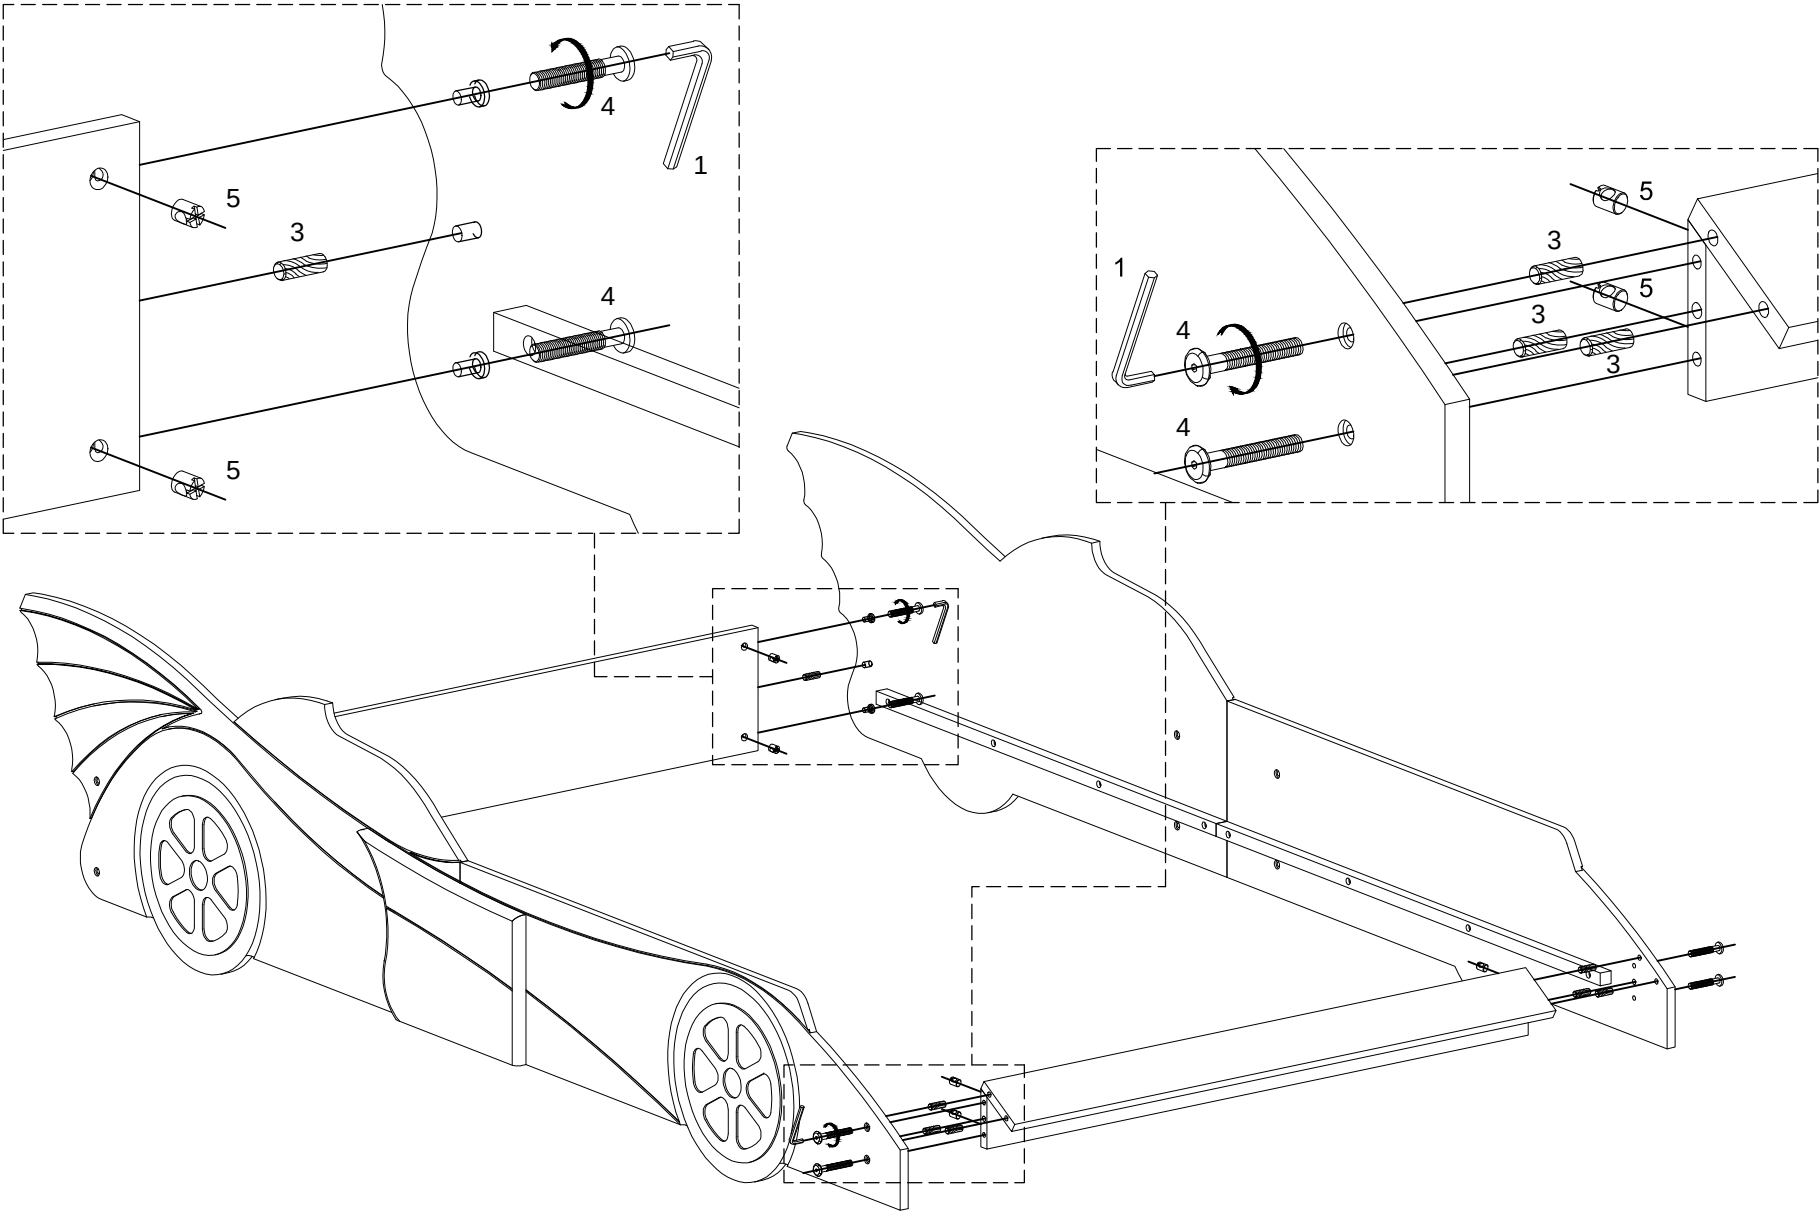



STEP 1



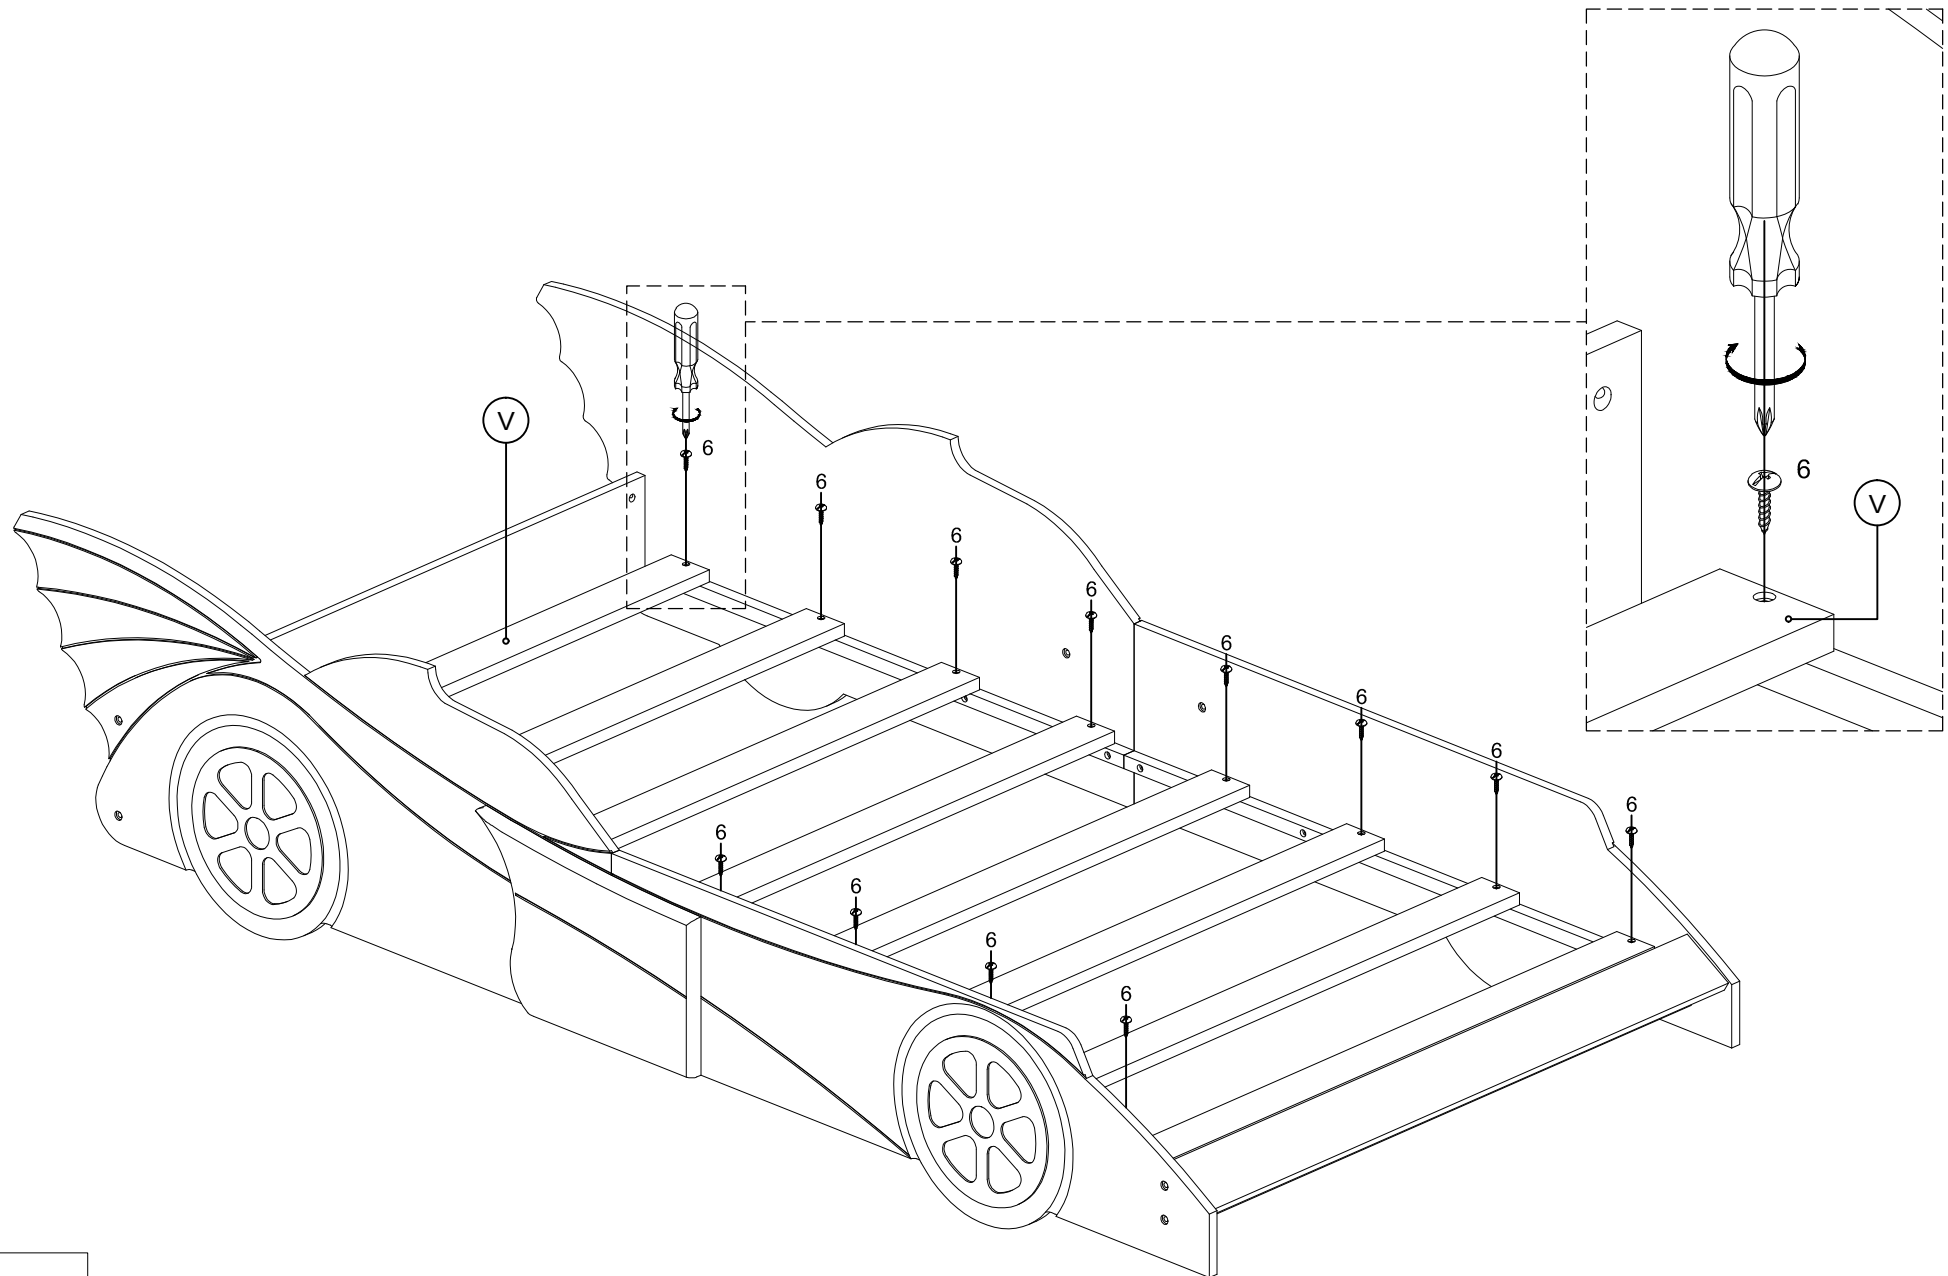
1		2		3	
Allen key - 1pc K4 x 60 mm					
Hex head bolt - 8pcs 1/4 x 25 mm					
Wood dowel - 8pcs Ø8 x 25 mm					

STEP 2




1		3		4		5	
Allen key - 1pc K4 x 60 mm		Wood dowel - 8pcs Ø8 x 25 mm		Hex head blot - 8pcs 1/4 x 50 mm		Barrel nut - 8pcs 1/4 x Ø10 x 10 mm	

STEP 3



6



Wood screw - 16pcs
Ø4 x 25 mm