

CONGRATS!

YOU'RE NOW THE OWNER OF A BEAUTIFUL PIECE OF ART.



DID YOU KNOW?

We handmake everything at our creative funhouse in Denver, Colorado as soon as it's ordered. Bonus! The design you chose can be ordered on anything from a duvet cover to a shower curtain, throw pillows, wall art and more.

CARE:

This is an heirloom piece of furniture that will bring joy for generations. Nurture your credenza by using coasters for any beverages needing a rest. Treat wood with any generic wood cleaner and polish using a non-abrasive rag for extra love.

SHOW IT OFF:

Any questions or comments?


Please contact the support number listed on your packing slip.

HARDWARE INCLUDED:

 10 WOODEN DOWELS




 16 SHORT SCREWS

 8 LONG SCREWS

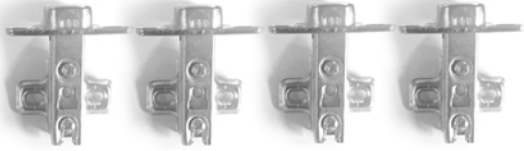


 4 SHELF PEGS


METAL LEGS ONLY

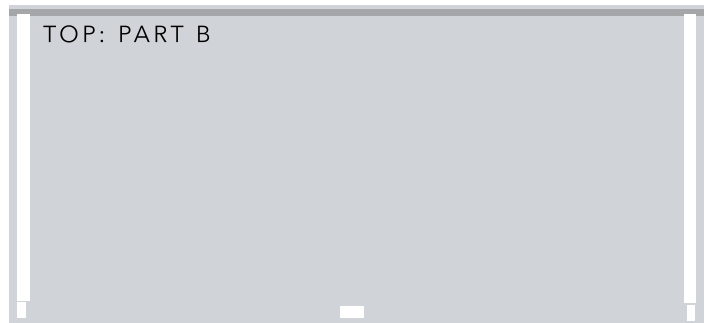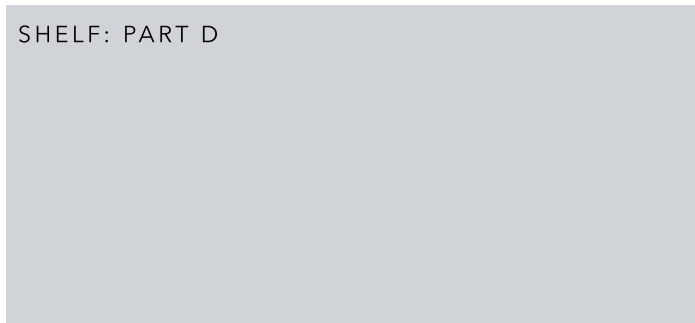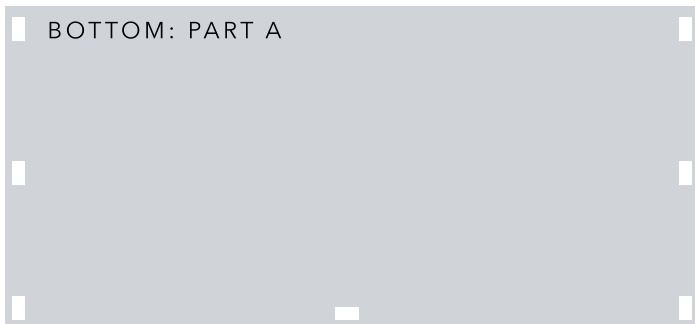

DIVIDER: PART C

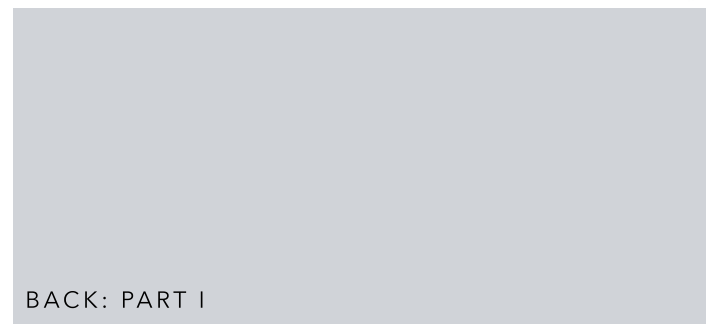

YOU WILL NEED:

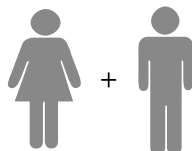

SCISSORS, PHILIPS HEAD SCREWDRIVER + A PARTNER IN CRIME FOR ASSEMBLY

STEP 1: UNPACK BOX ENSURE ALL CONTENTS ARE INCLUDED.

STEP 2: SPREAD OUT ALL CONTENTS. KEEP WOODEN PIECES PROTECTED BY LAYING THEM ON CARDBOARD SHEETS INCLUDED.

STEP 3: FIND TOP PIECE (PART B) AND LAY FLAT ON TOP OF CARDBOARD WITH RAILS AND HOLES FACING UP.



STEP 4: TAKE THE BACK SIDE (PART I) OF CREDENZA AND SLIDE IT IN THE GROOVES ON BOTH SIDE WALLS AND PRESS FIRMLY INTO PLACE.

STEP 5: GRAB SIDES (PART G+ H) AND INSERT 2 DOWELS ON BOTTOM OF EACH SIDE. SECURE TIGHTLY IN HOLES ON PART B. DO NOT USE A HAMMER.



STEP 6: INSERT A DOWEL ON EACH END OF THE DIVIDER (PART C). SECURE IN FRONT OF TOP PIECE.



STEP 7: TAKE FOUR LONG SCREWS AND SECURE THEM WITH SCREWDRIVER IN THE FOUR CORNERS OF THE TOP PIECE AS SHOWN.

STEP 8: TAKE BOTTOM (PART A) AND SECURE TWO DOWELS ON BOTH SIDES OF THE BOTTOM.




STEP 9: FLIP OVER AND SECURE ON TO SIDES AND BACK, LINING UP GROOVE WITH THE BACK SIDE AND THE DIVIDER WITH THE FRONT DOWEL.



STEP 10 (METAL LEGS): LINE UP ALL 4 LEGS AND SECURE WITH 3 BOLTS AND 3 WASHERS PER LEG. TIGHTEN WITH WRENCH.

STEP 10 (WOOD LEGS): LINE UP METAL PEG TIP WITH SOCKET ON THE CREDENZA. TURN CLOCKWISE TO TIGHTEN.

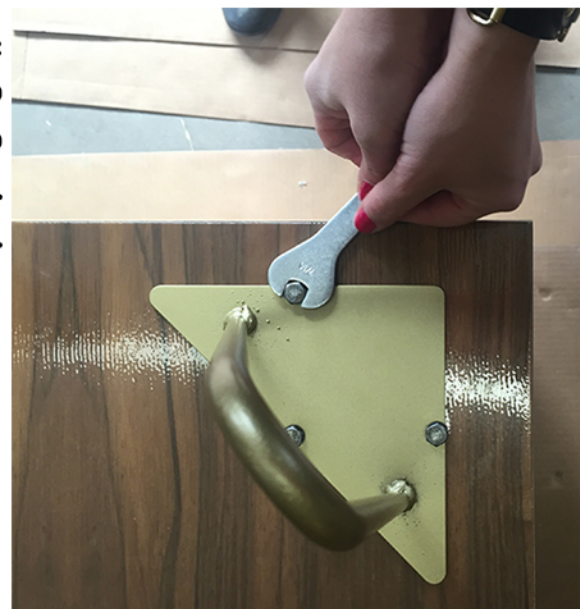


STEP 11: FLIP CREDENZA ON SIDE TO PREPARE FOR DOOR INSTALLATION. KEEP USING PROTECTIVE CARDBOARD.



STEP 12: OPEN EACH OF THE 4 HINGES BY LIFTING THE LEFT SIDE OF THE HINGE FROM THE RIGHT.

STEP 13: INSERT HINGES IN THE CIRCLE HOLES LOCATED ON THE INSIDE OF EACH DOOR. LINE UP DOOR TO THE SIDE RESTING ON THE FLOOR.

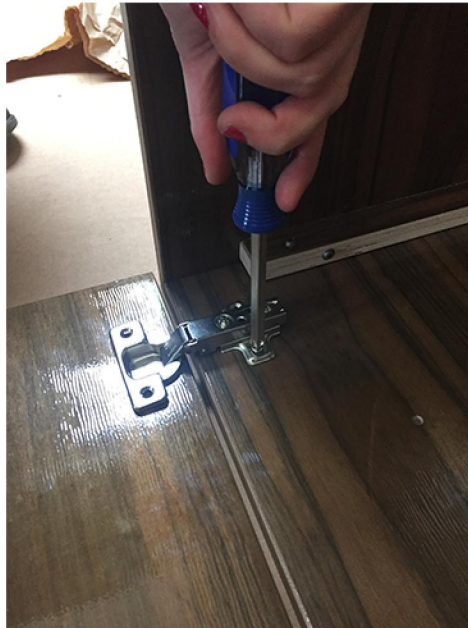

STEP 14: USE THE SCREWDRIVER AND SHORT SCREWS TO SECURE. 4 SCREWS PER HINGE. PRESS DOWN TIGHTLY AS YOU SCREW. FLIP CREDENZA AND REPEAT WITH OTHER SIDE. FLIP CREDENZA RIGHT SIDE UP. IF DOORS DO NOT ALIGN, GENTLY ADJUST THE TOP HINGE BY LOOSENING TOP SCREW.

STEP 15: PLACE SHELF PEGS INTO DESIRED SHELF LEVEL ON THE INSIDE OF THE CREDENZA.

STEP 16: GENTLY MANEUVER SHELF INTO CREDENZA AND LAY ON TOP OF PEGS.

STEP 17: CONGRATS! YOU MADE IT. YOU DESERVE A COCKTAIL.

SHOW IT OFF:

Any questions or comments?

Please contact the support number listed on your packing slip.