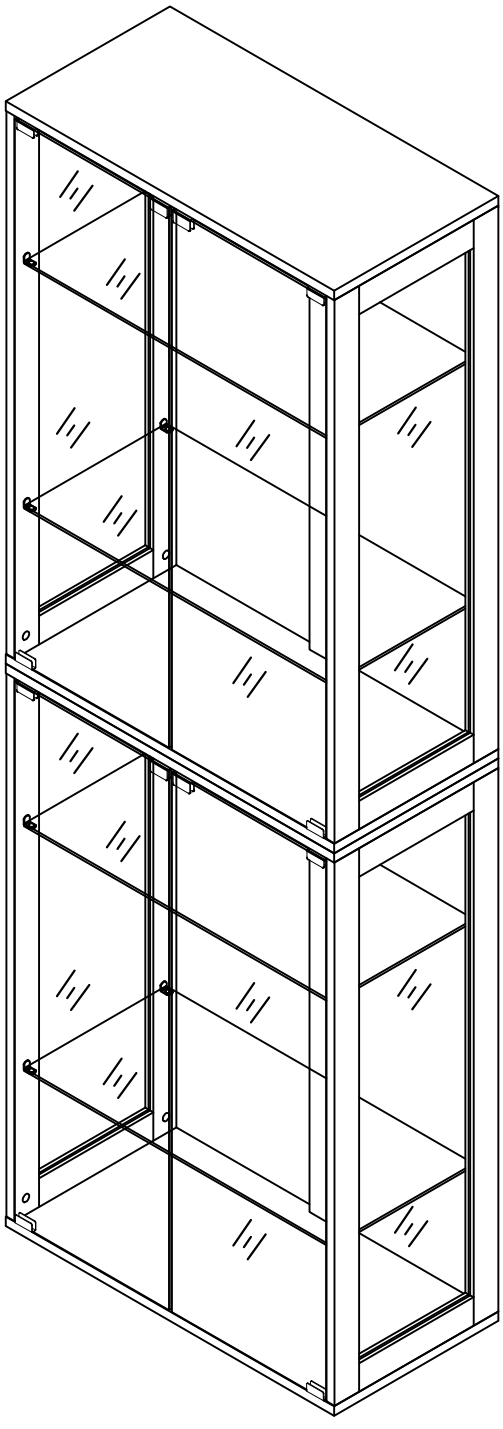
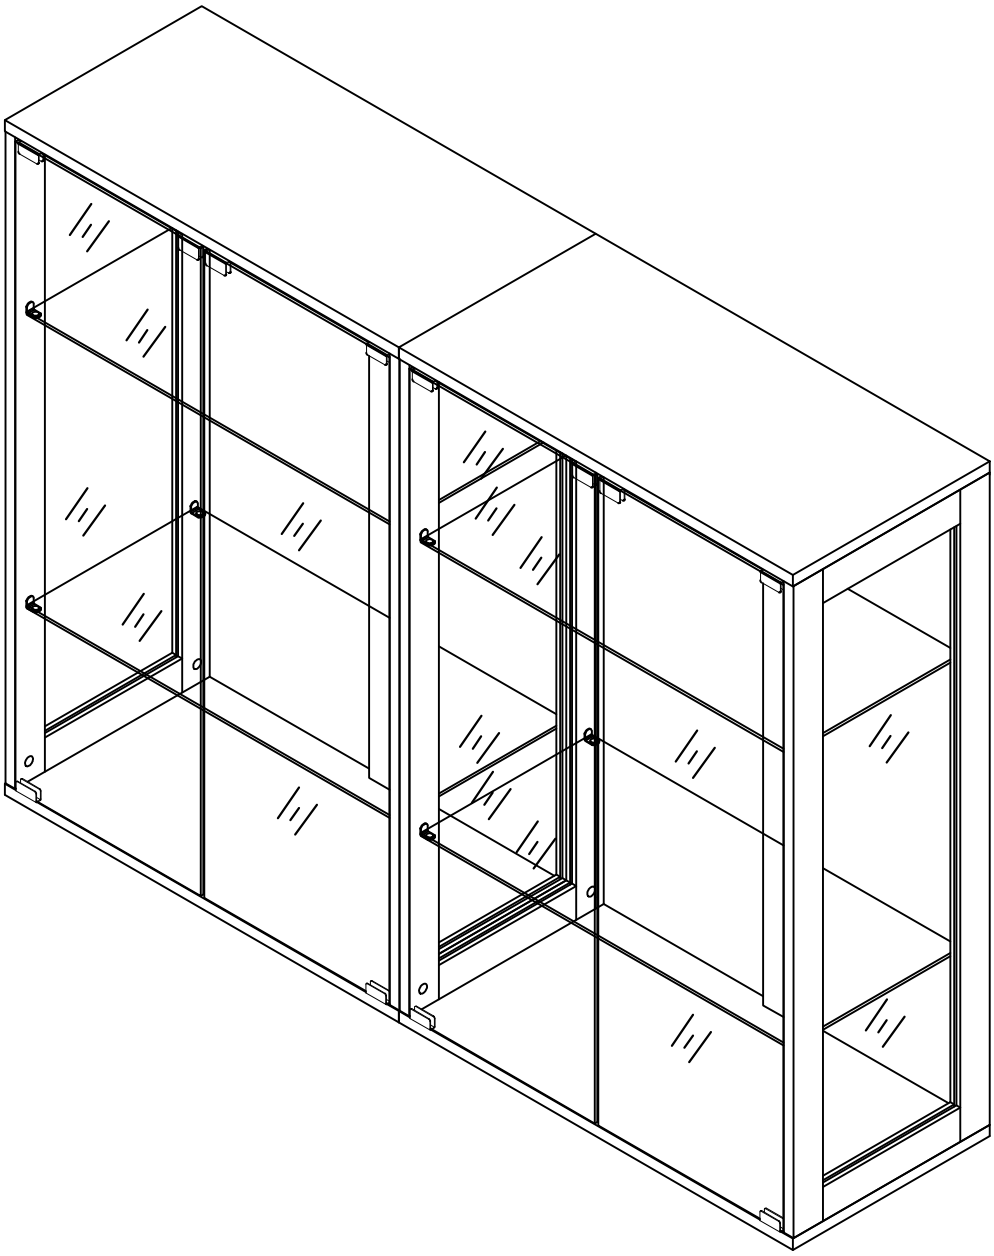
Assembly Drawing & Parts List



SQUARE GLASS 4D CABINT

JC-010

Two placement methods



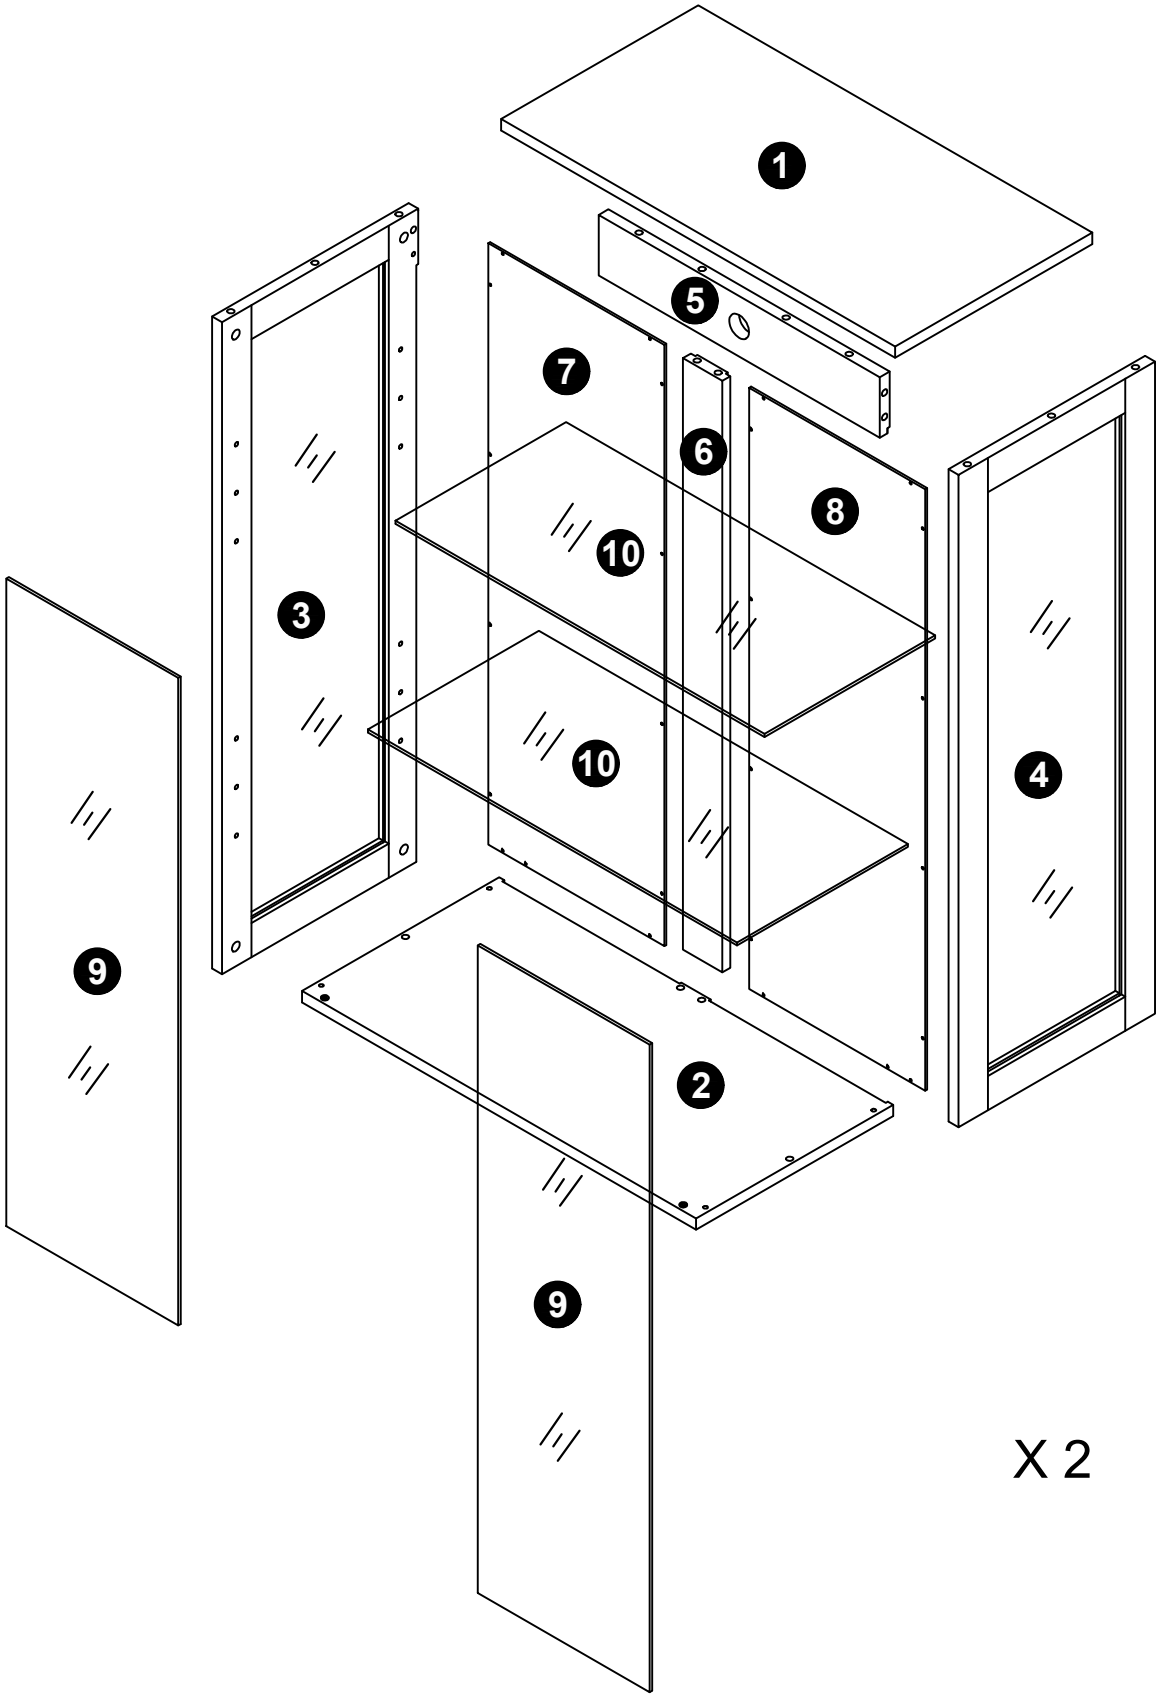
SQUARE GLASS 4D CABINT

JC-010

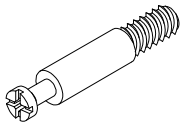
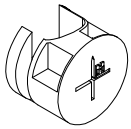

Two placement methods



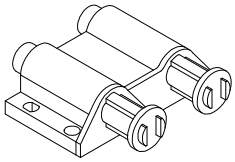
PACKAGE INCLUDE

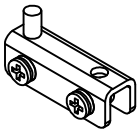

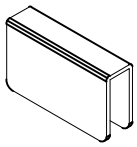
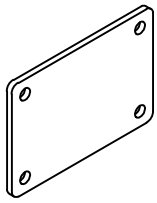
STRUCTURE FOR REFERENCE TO ASSEMBLY

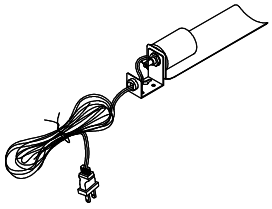
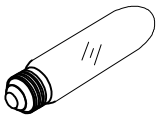



PART IDENTIFICATION

A x 24+1	B x 24+1	C x 24+1	D x 16
 Ø6*34mm	 Ø15*10mm	 Ø8*30mm	

E x 8	F x 52+1	G x 2	H x 16
 Ø3*12mm	 Ø3.5*12mm		

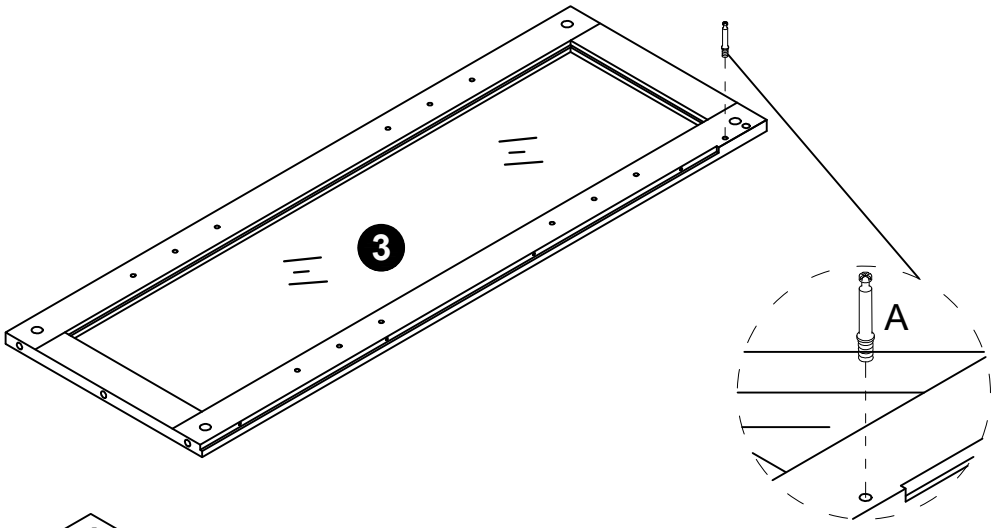
I x 4	J x 4	K x 4	L x 2
			

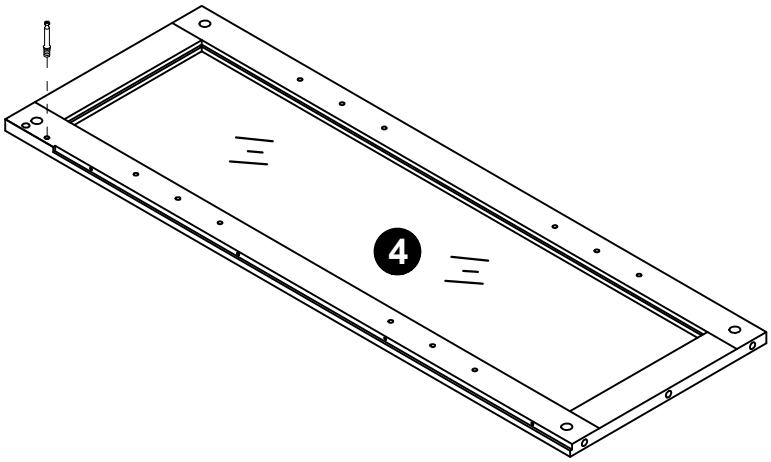
M x 4	N x 2	O x 2	P x 12
 M1 M2 M3			 Ø3*12mm

STEP 1

A x 4

Ø6*34mm






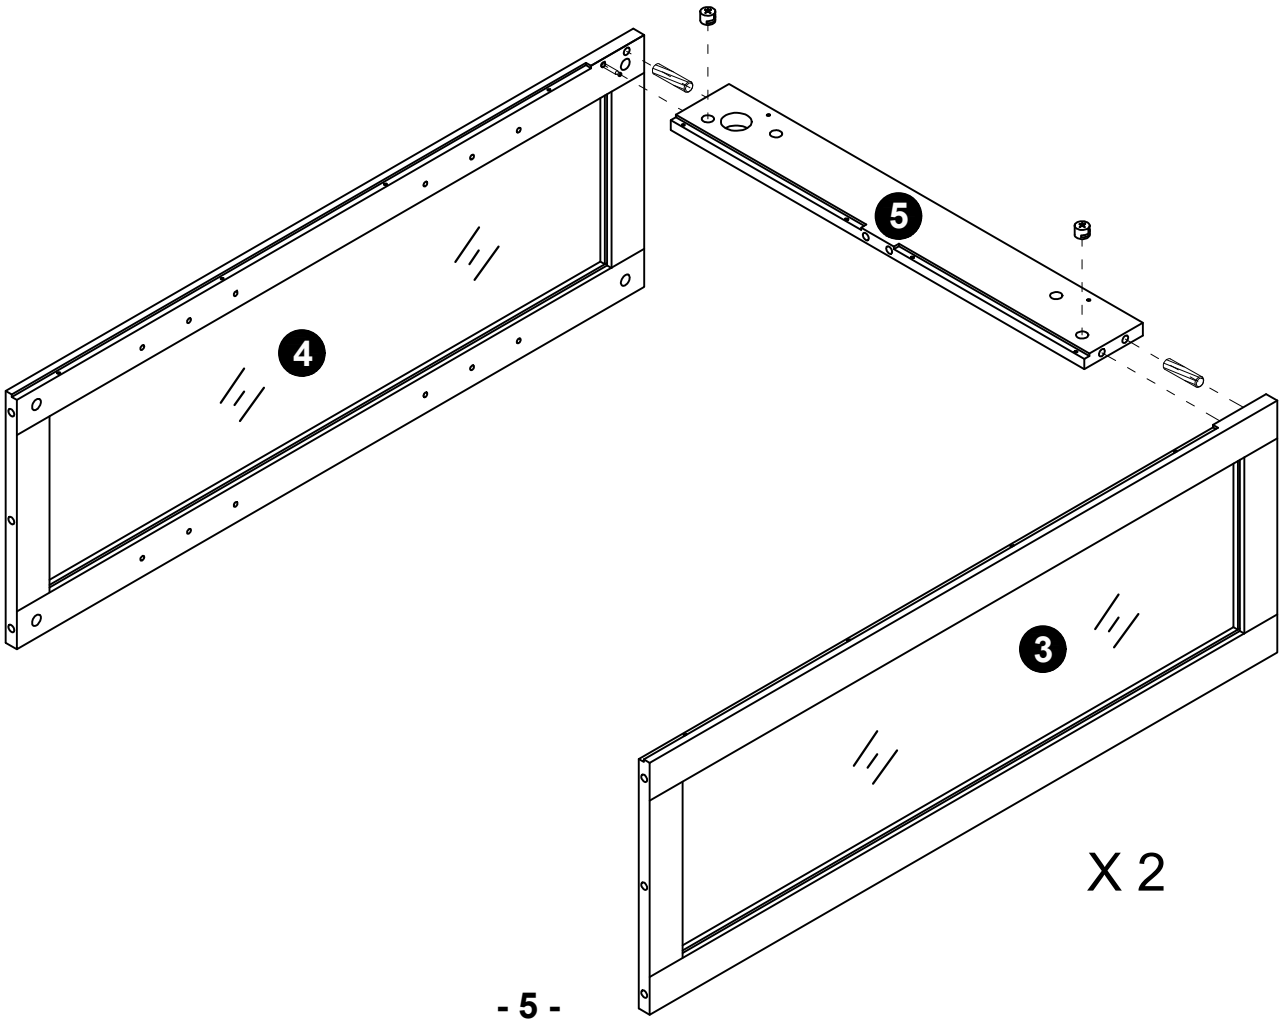
Warm Tips:
(A) should be screw to the small holes.

X 2

STEP 2

B x 4

Ø15*10mm
C x 4

Ø8*30mm

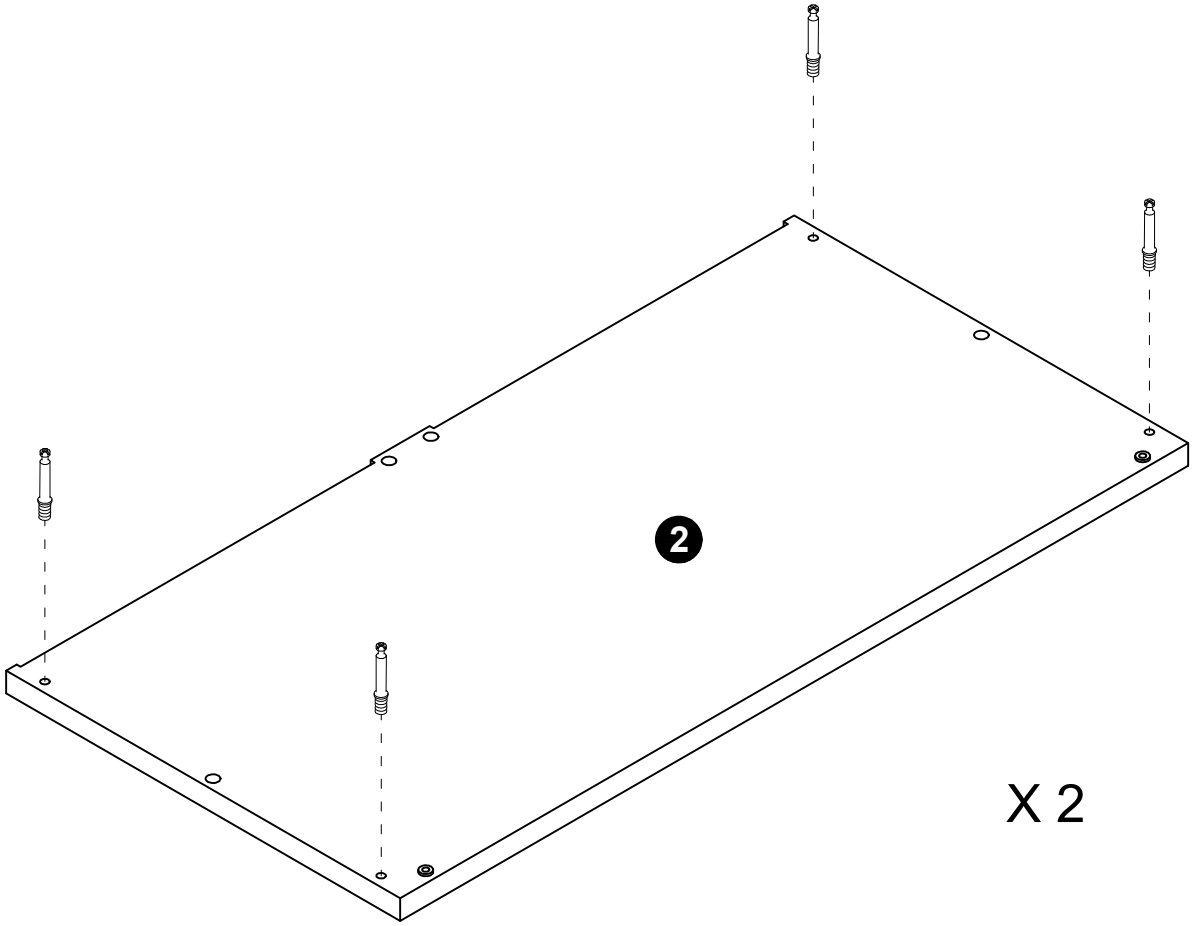


X 2

STEP 3


A x 8

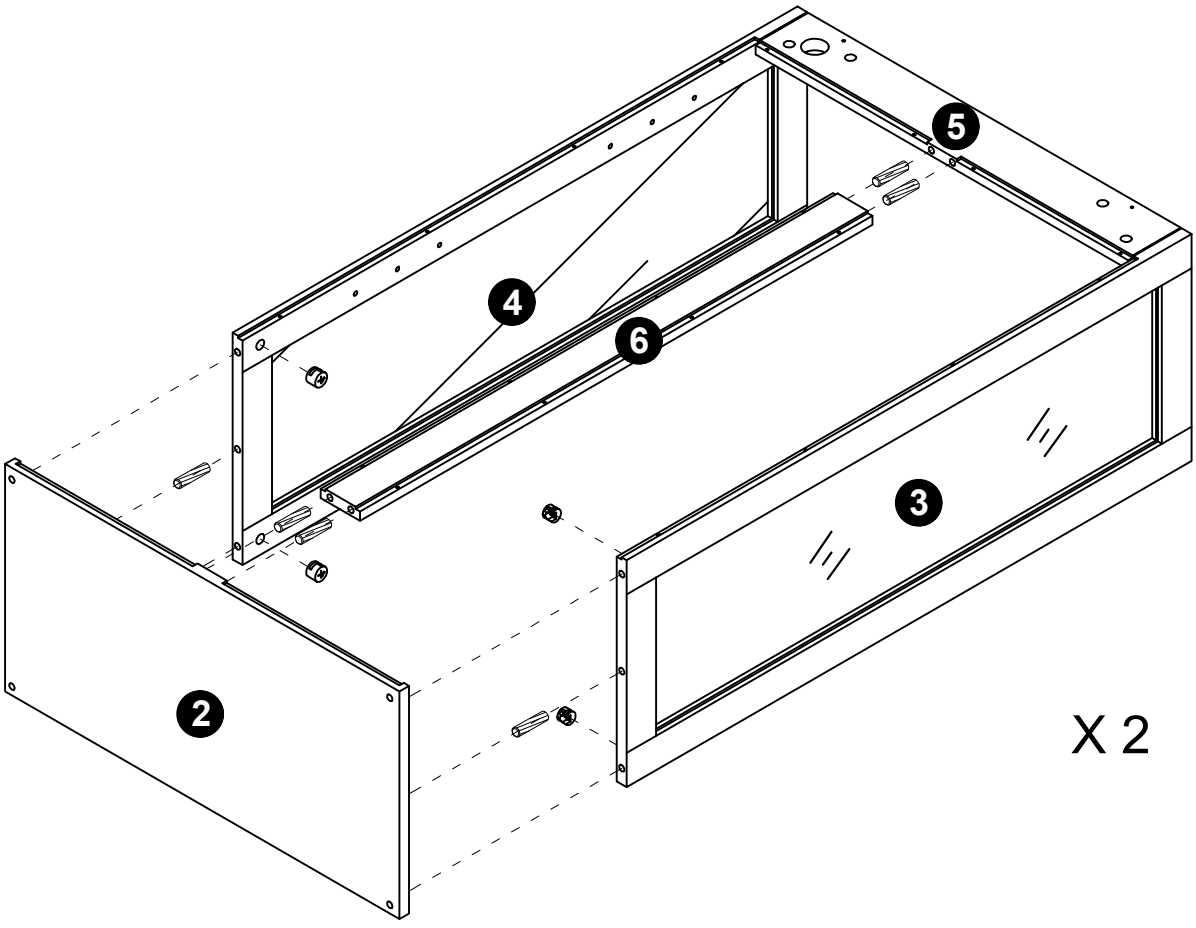
Ø6*34mm



STEP 4

B x 8

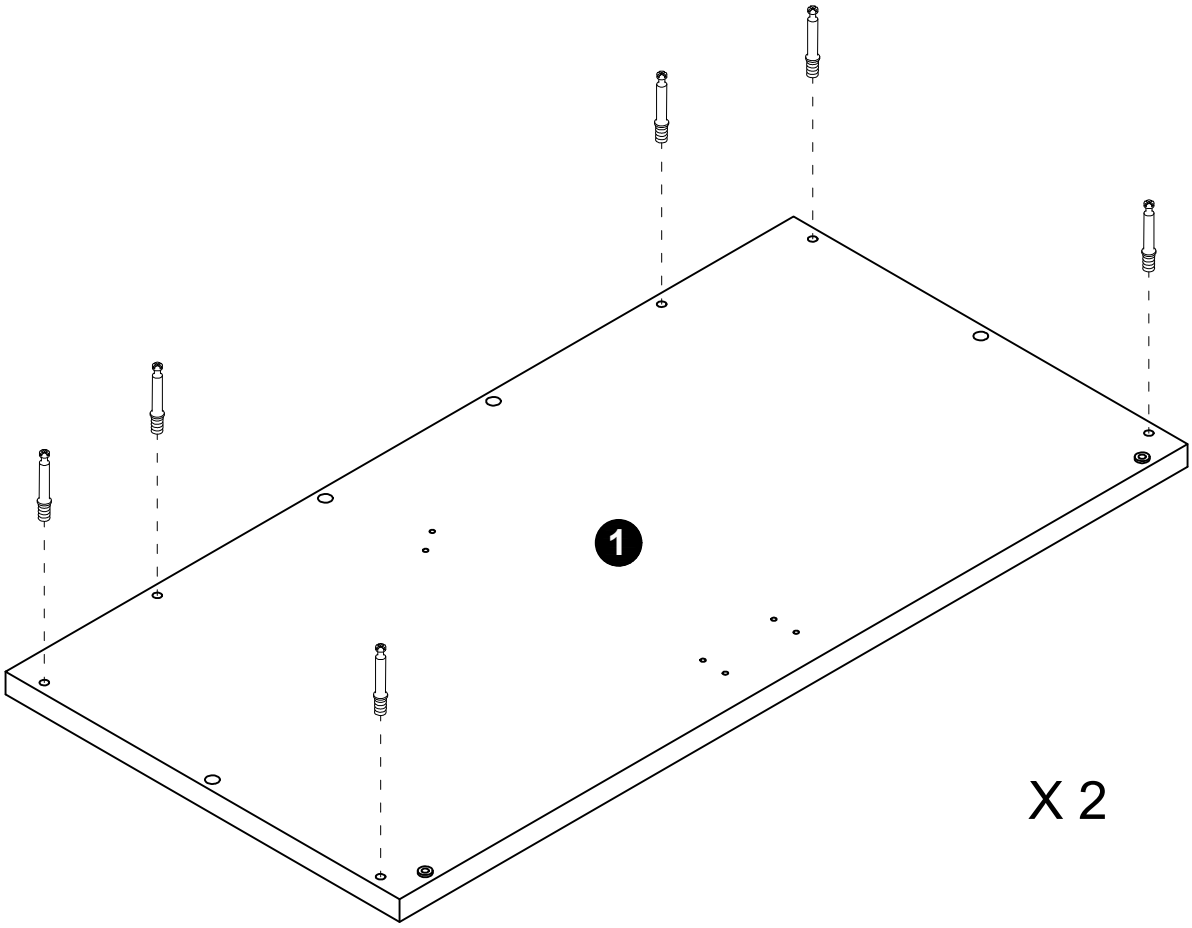
Ø15*10mm
C x 12

Ø8*30mm



STEP 5



A x 12

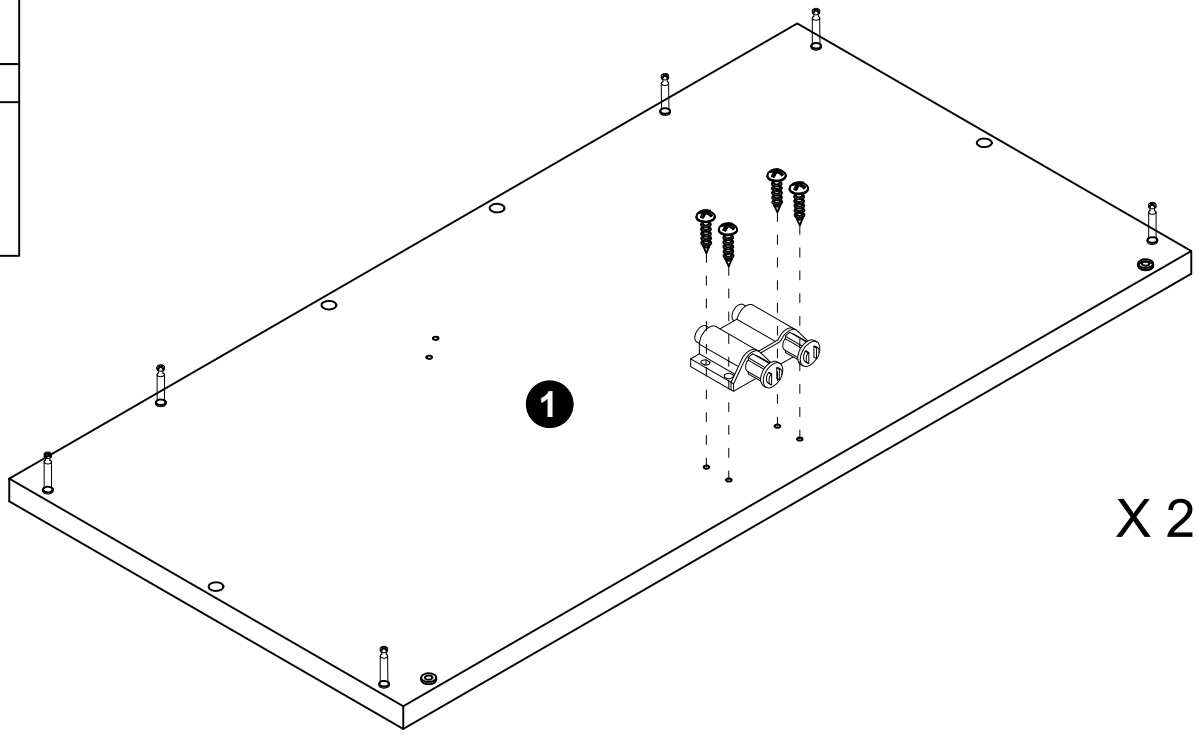
Ø6*34mm



X 2


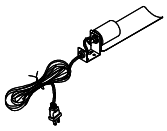
STEP 6

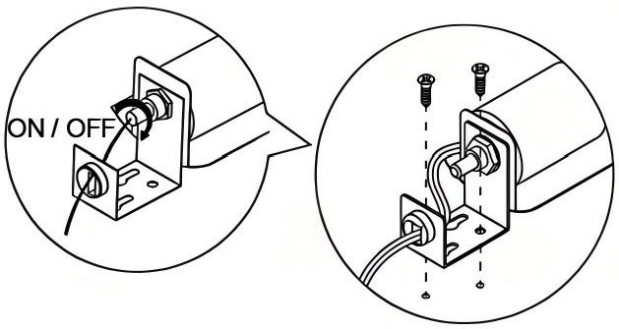
P x 8

Ø3*12mm
G x 2


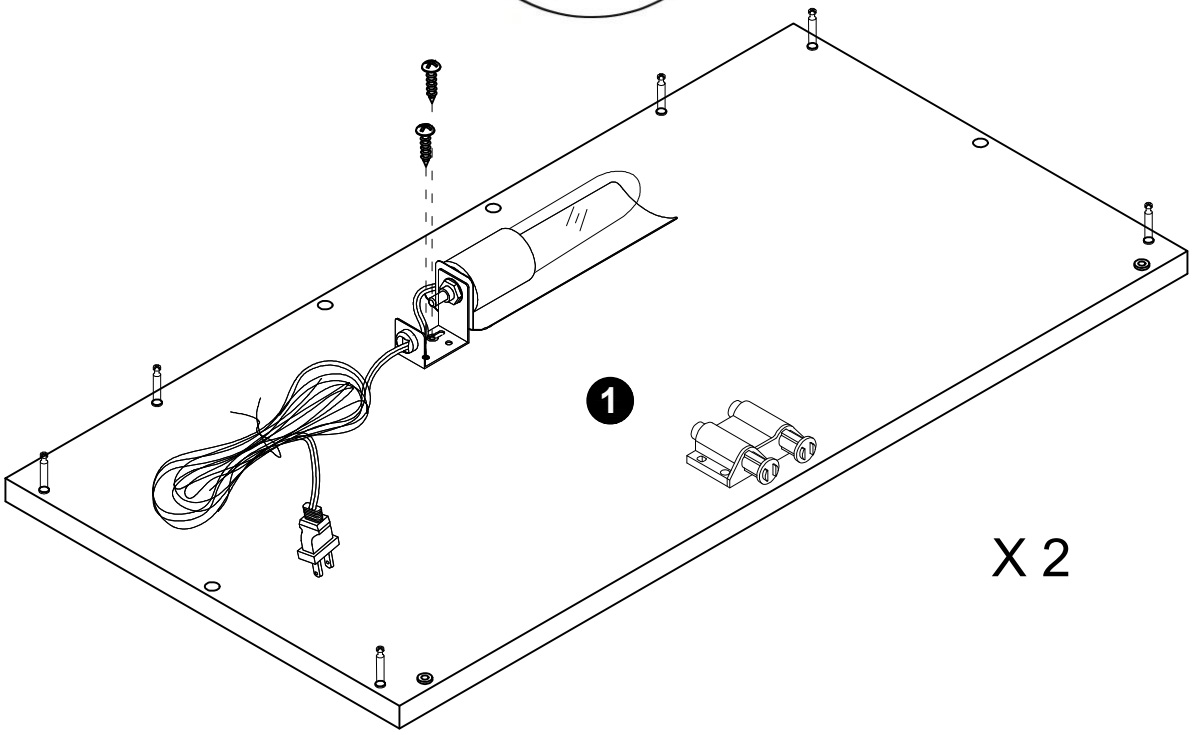


X 2

STEP 7

P x 4

Ø3*12mm
N x 2

O x 2





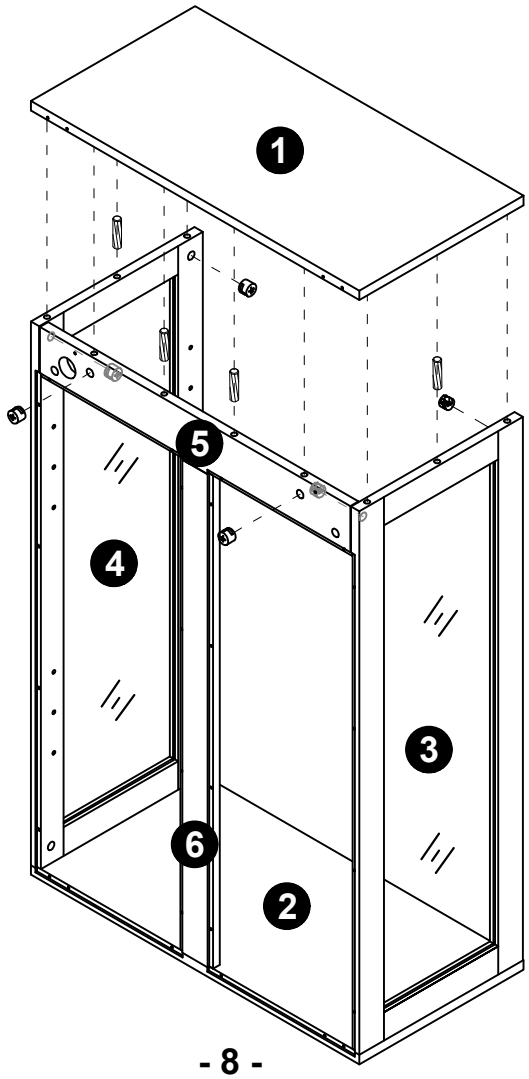


X 2

STEP 8

B x 12

Ø15*10mm
C x 8

Ø8*30mm



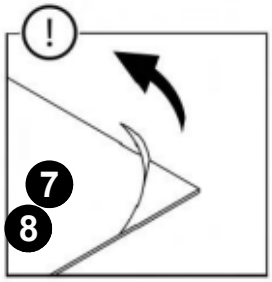
X 2

STEP 9

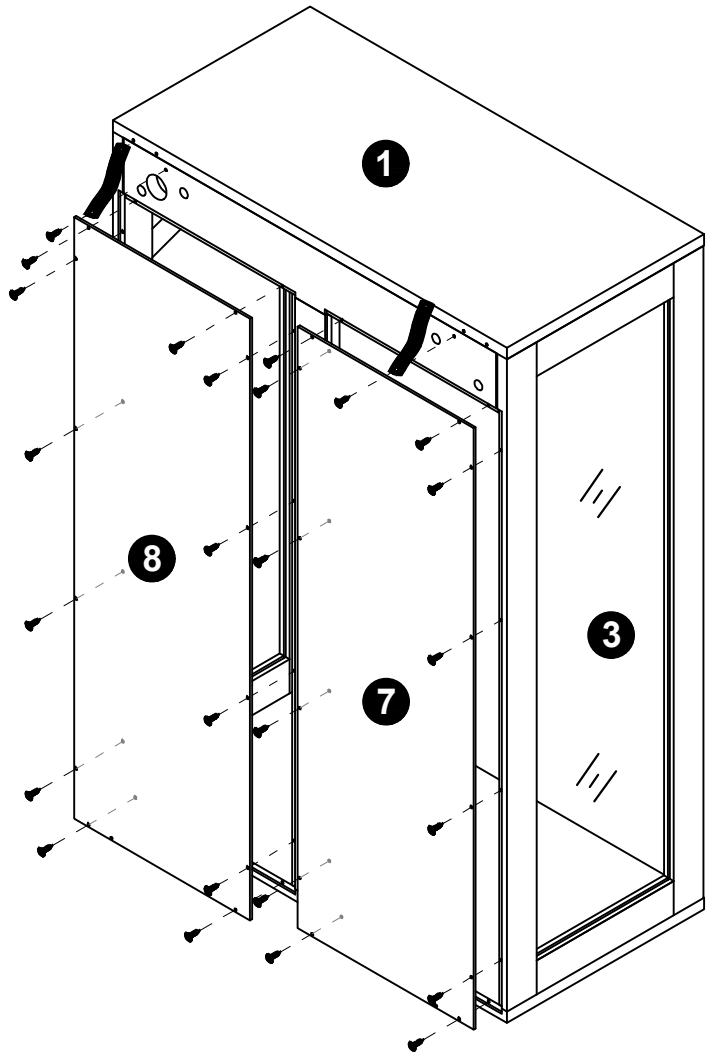
F x 52

Ø3.5*12mm
M x 4

M1



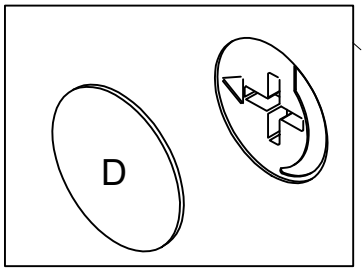
Remove protective film
on the mirror panel.



X 2

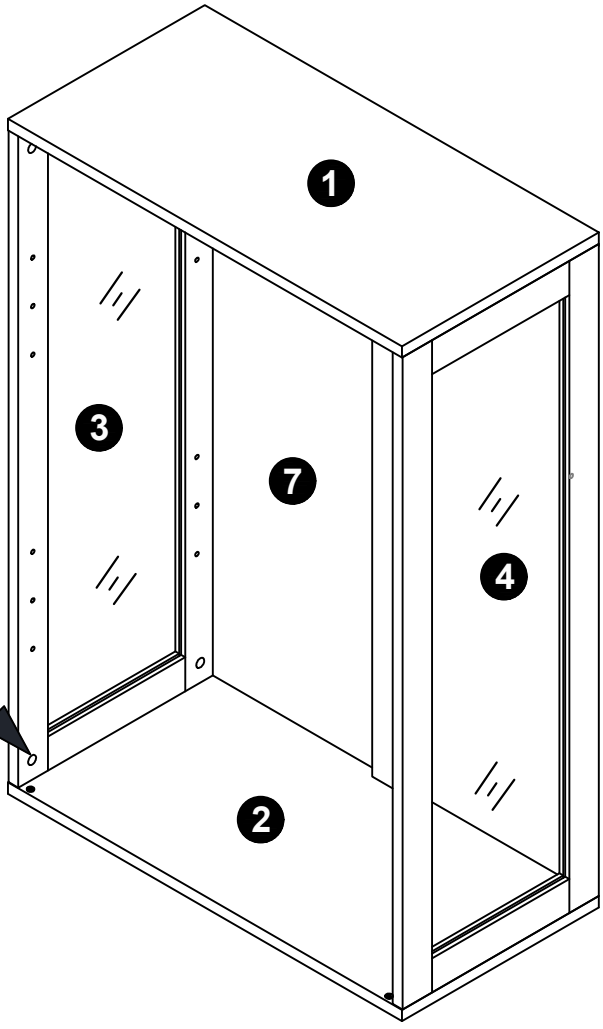
STEP 10

D x 16

In order to make the
product more beautiful

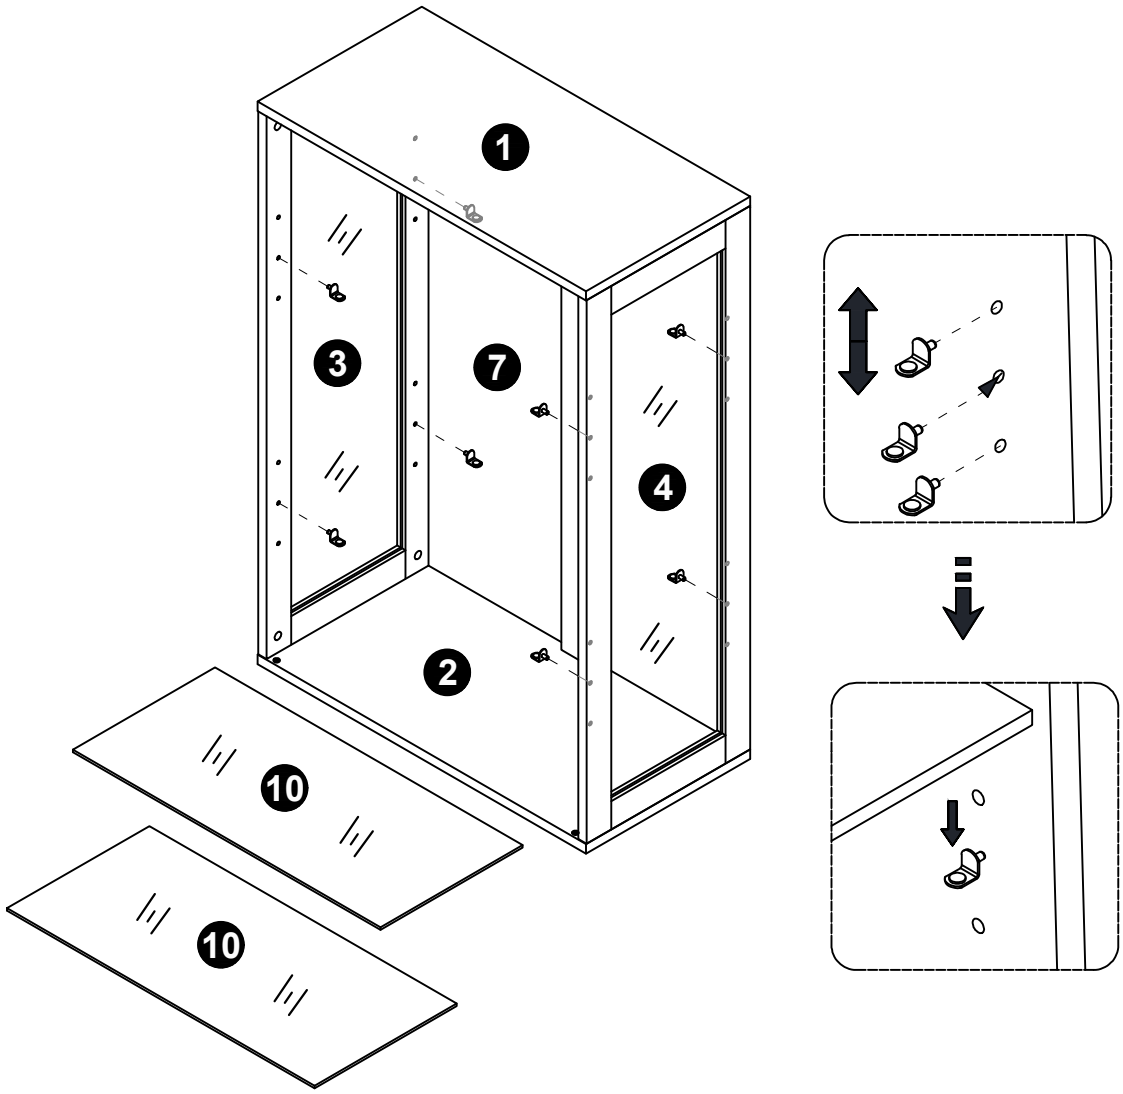
Please paste hard ware D
on the exposed holes



X 2




STEP 11

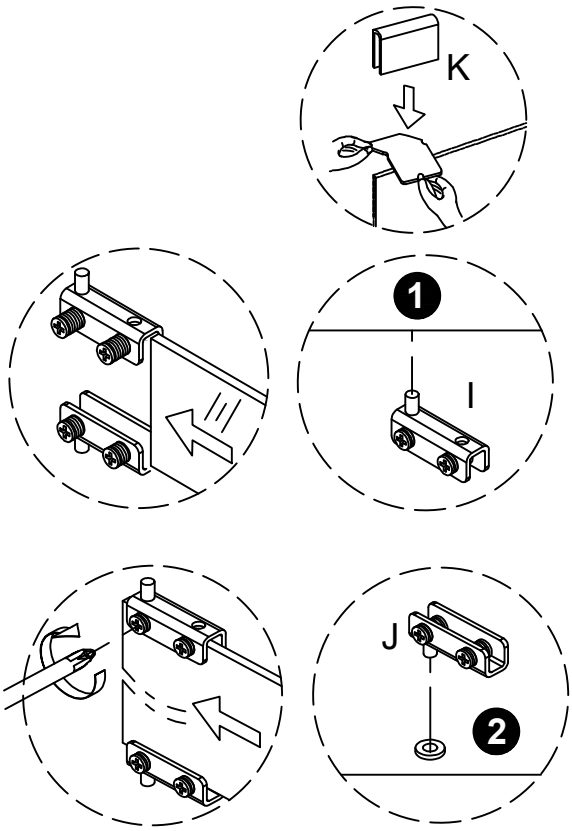
H x 16

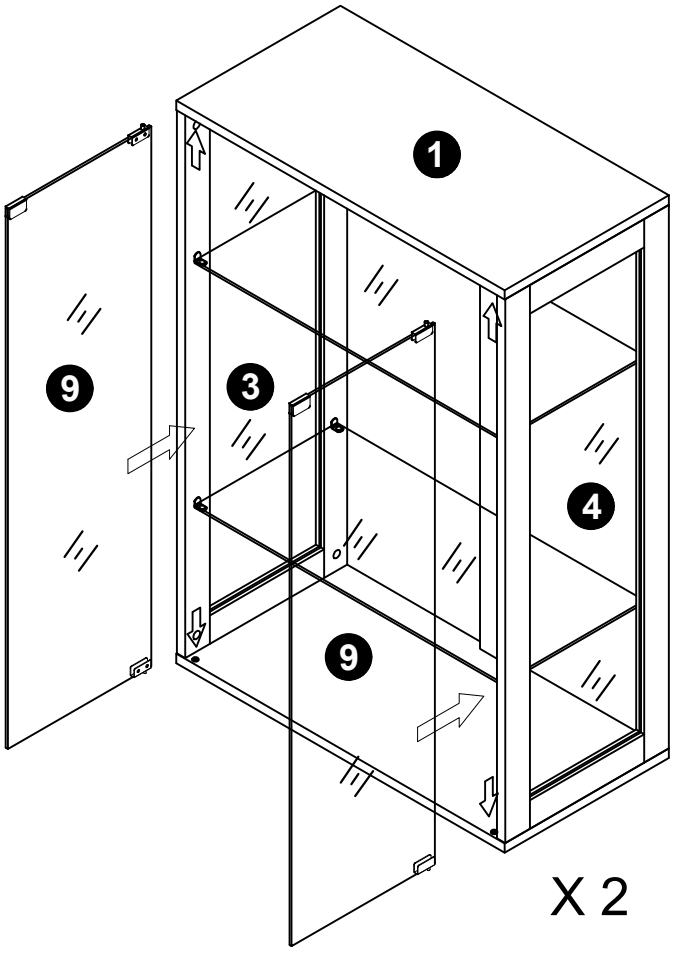



X 2

STEP 12

I x 4

J x 4

K x 4


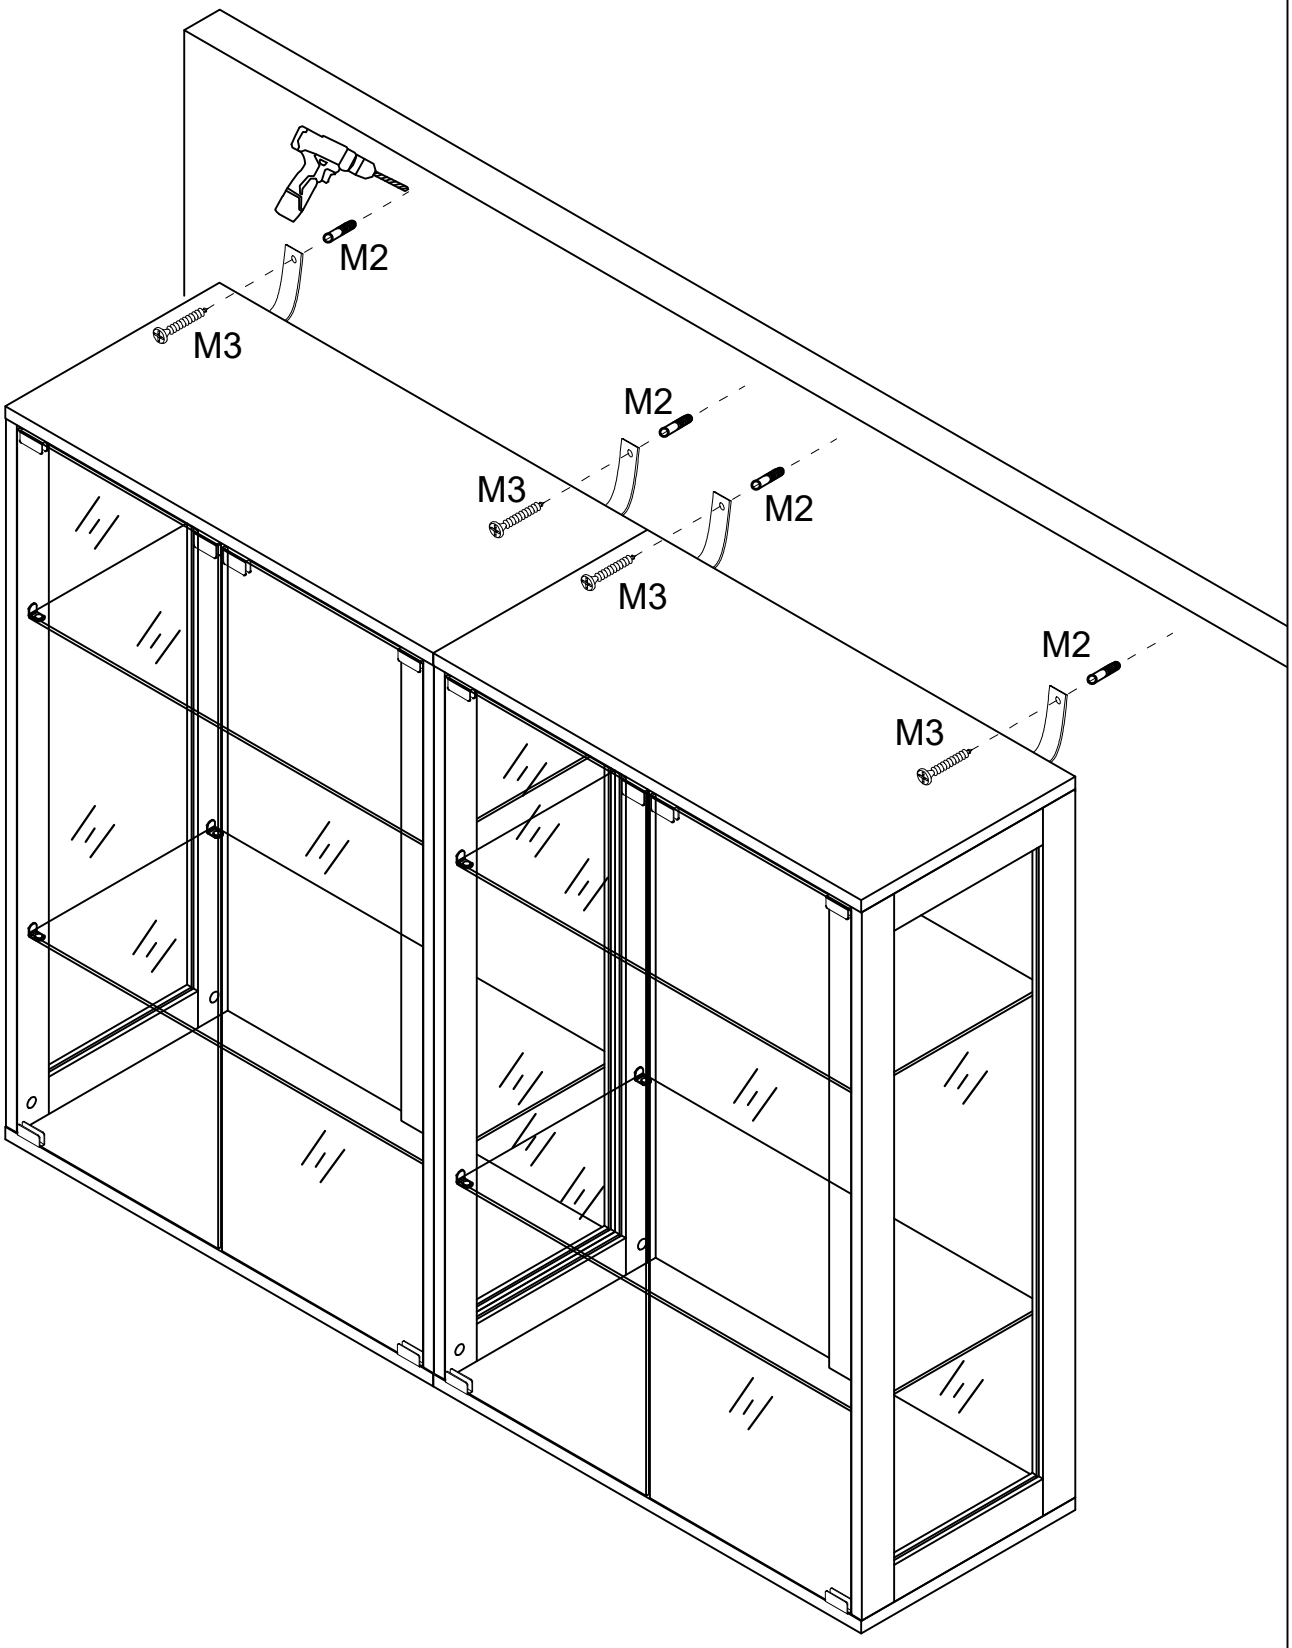




X 2


STEP 13

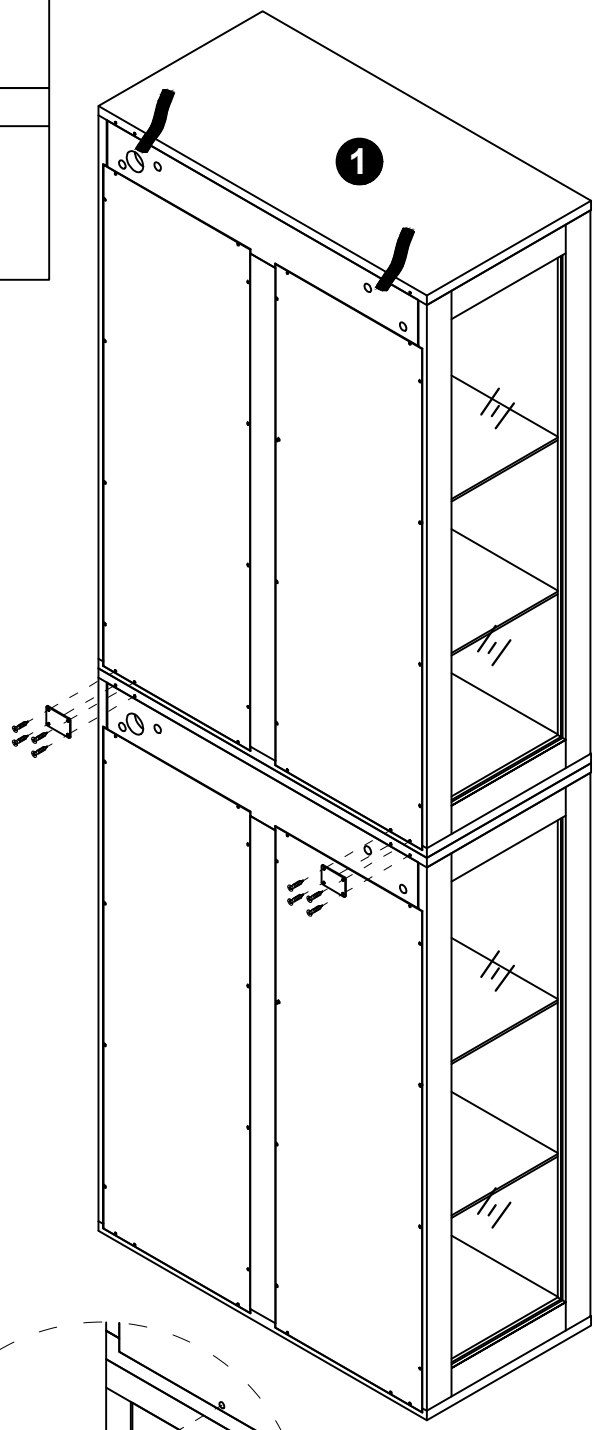
M x 4
 M2 M3

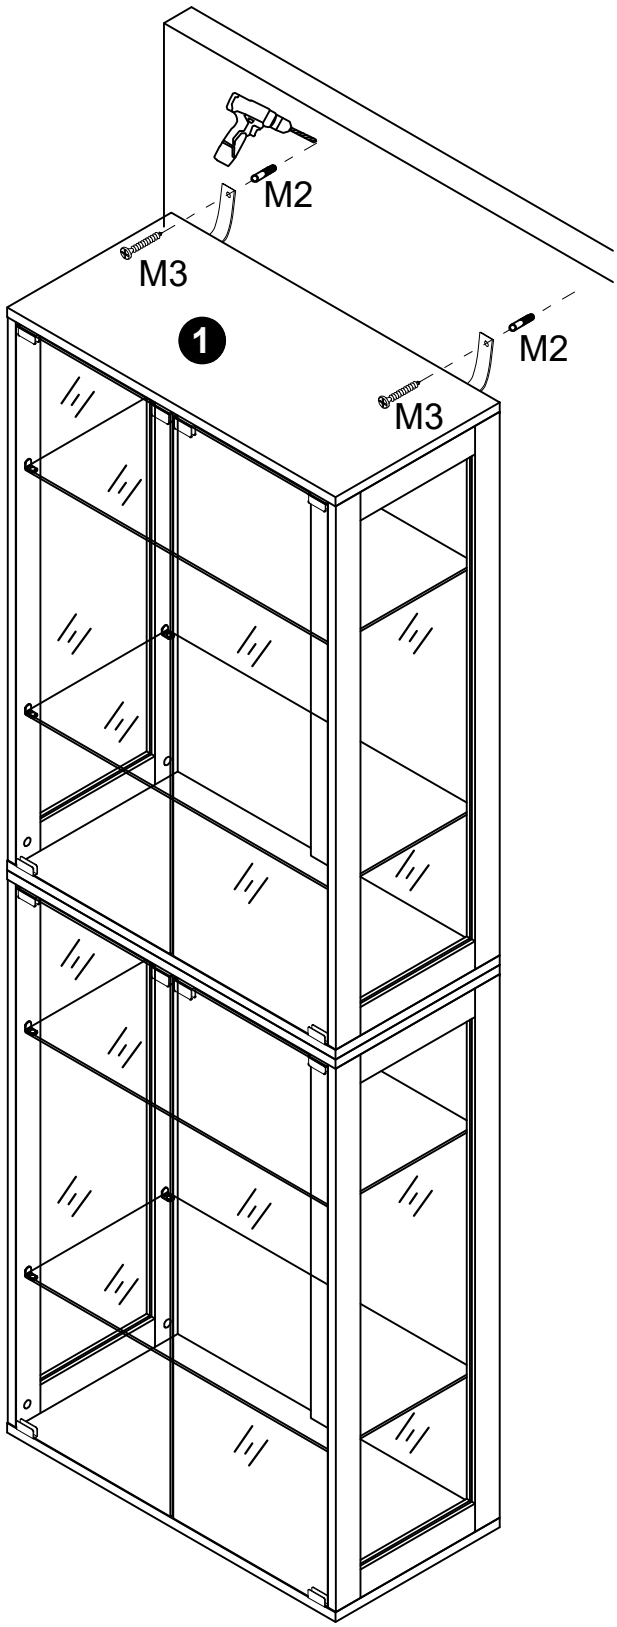


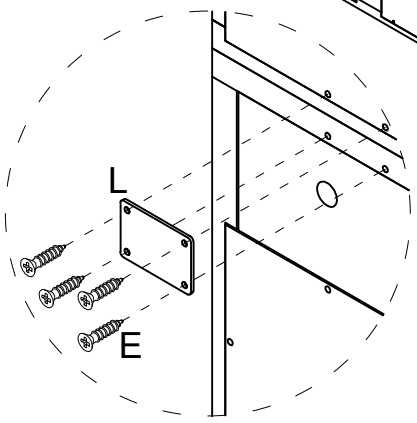
STEP 15

E x 8

Ø3*12mm
L x 2

M x 2
 M2 M3



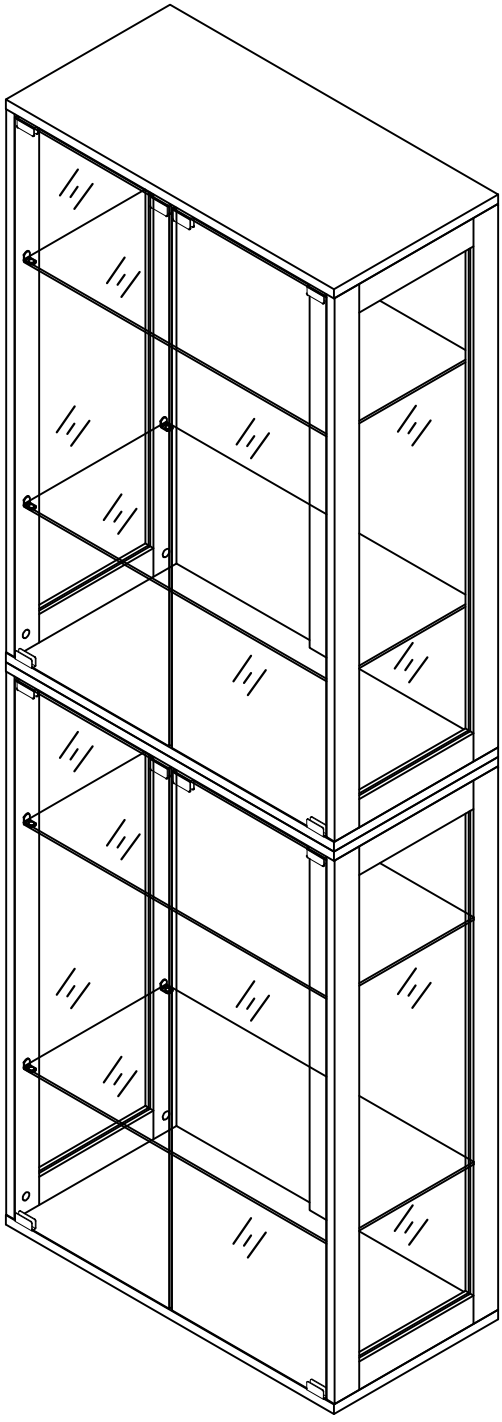


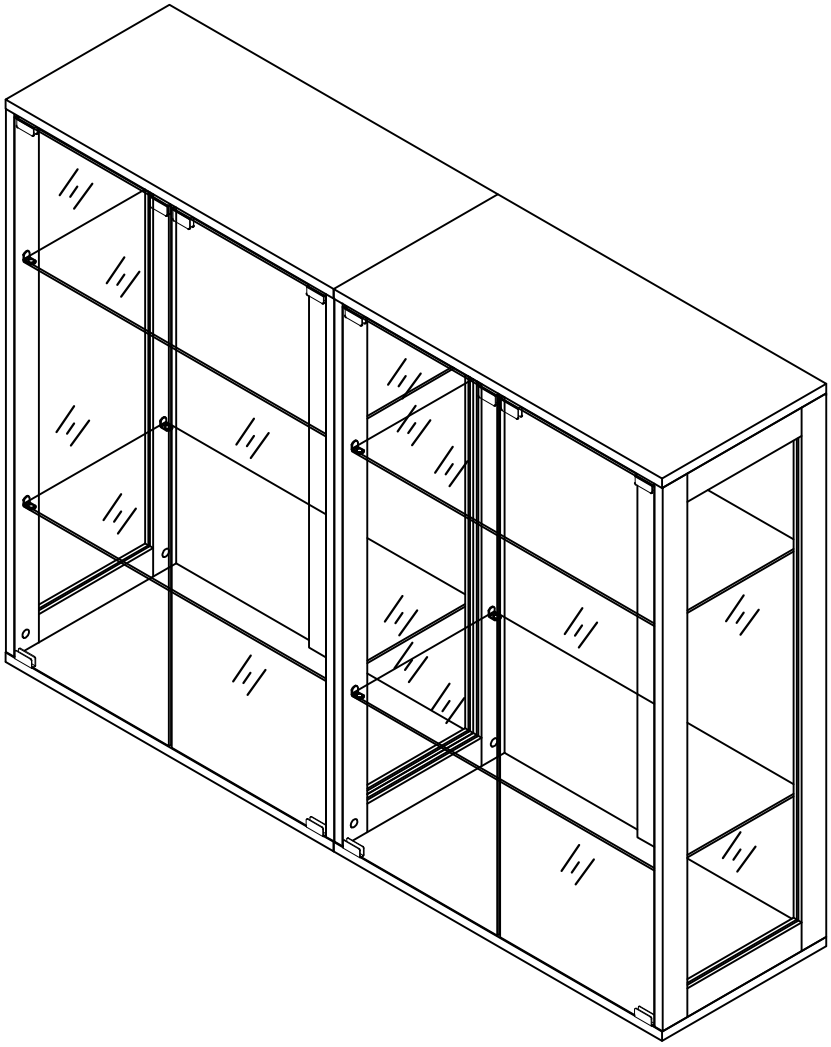


When installing connecting plate (L), remove screw F at the covered position and replace with screw E.

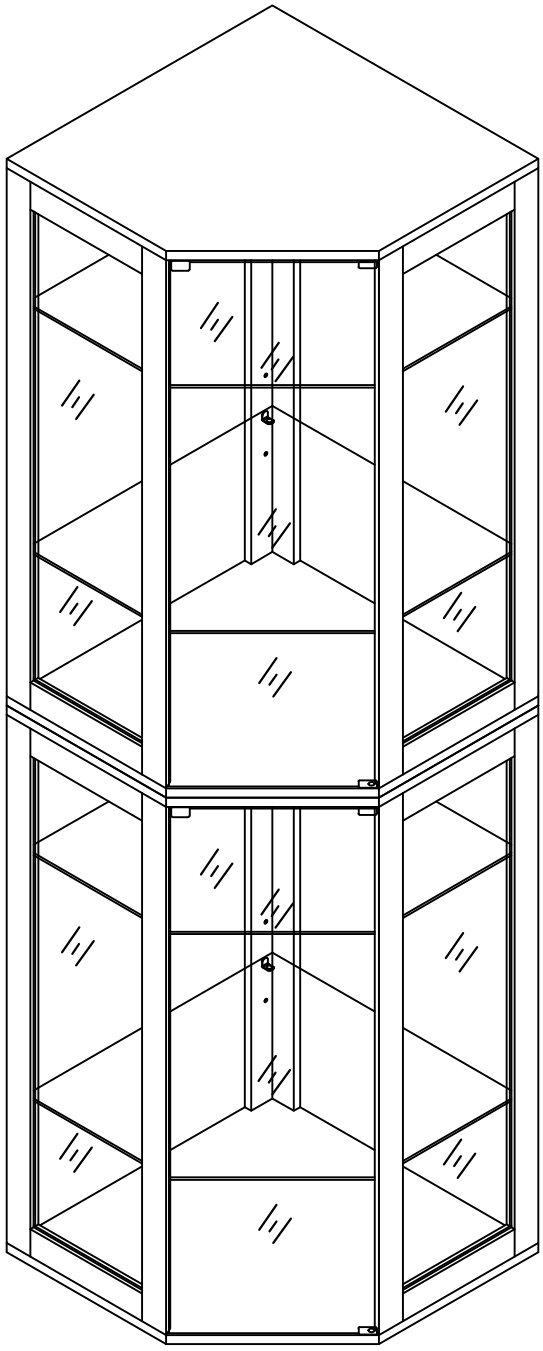
STEP 16

Two placement methods are available.





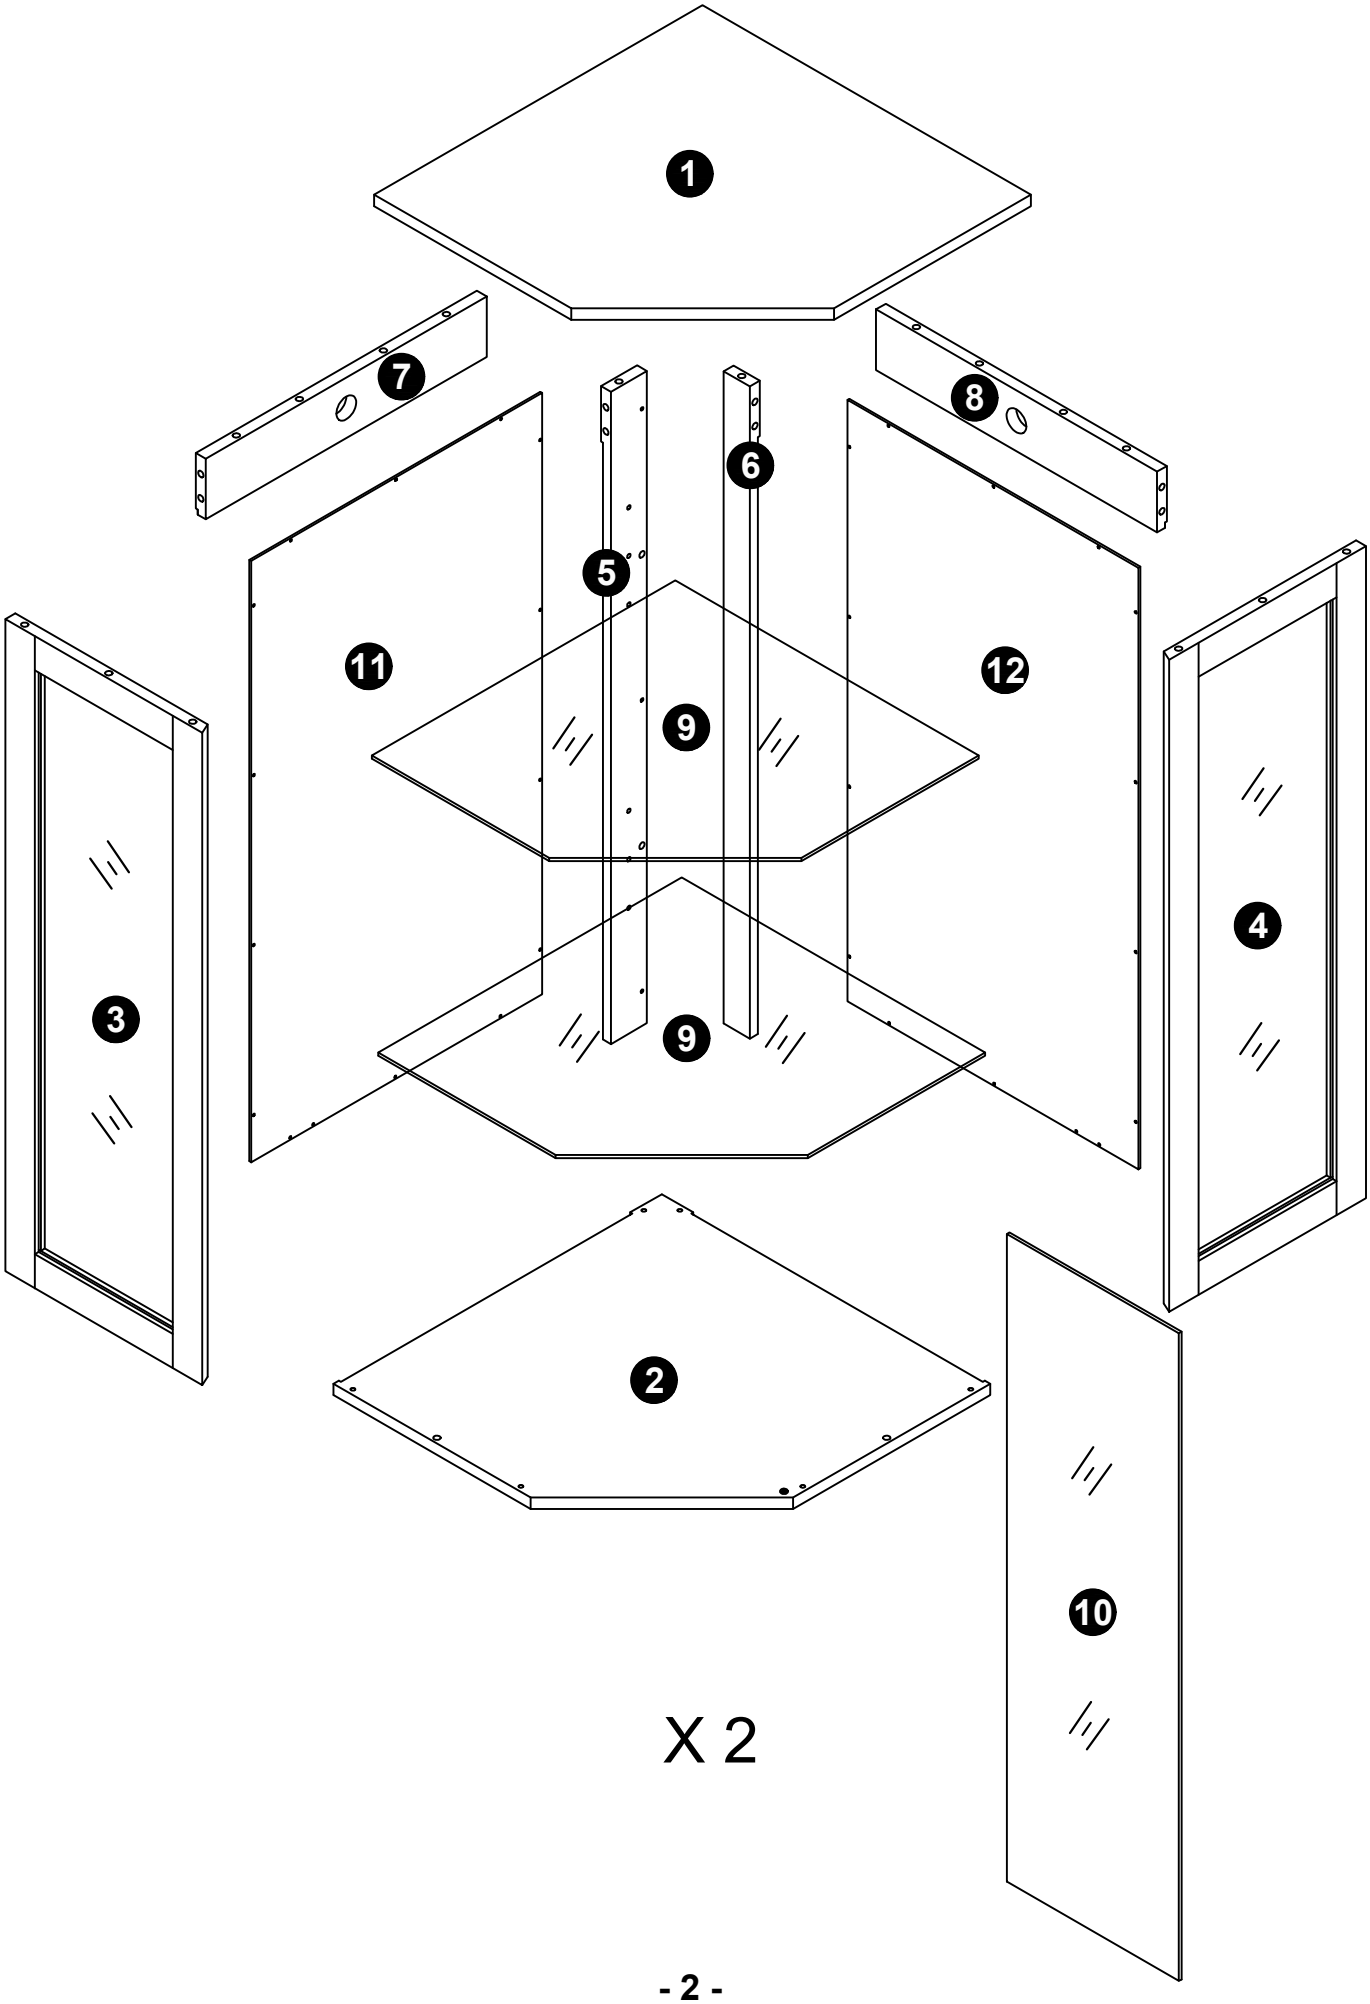
Assembly Drawing & Parts List



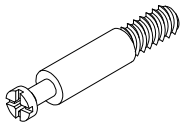
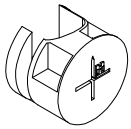


CORNER GLASS TALL CABINT
JC-012



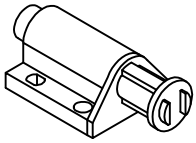
PACKAGE INCLUDE

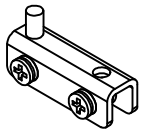

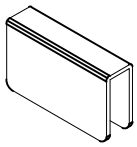
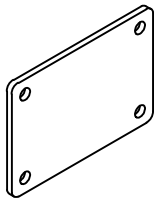
STRUCTURE FOR REFERENCE TO ASSEMBLY

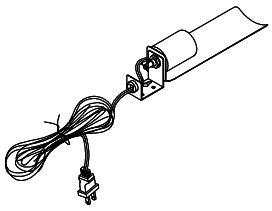
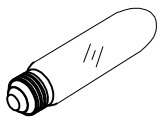



PART IDENTIFICATION

A x 40+1	B x 40+1	C x 28+1	D x 6
			
Ø6*34mm	Ø15*10mm	Ø8*30mm	Ø4*25mm


E x 8	F x 56+1	G x 2	H x 20
			
Ø3*12mm	Ø3.5*12mm		

I x 2	J x 2	K x 2	L x 2
			

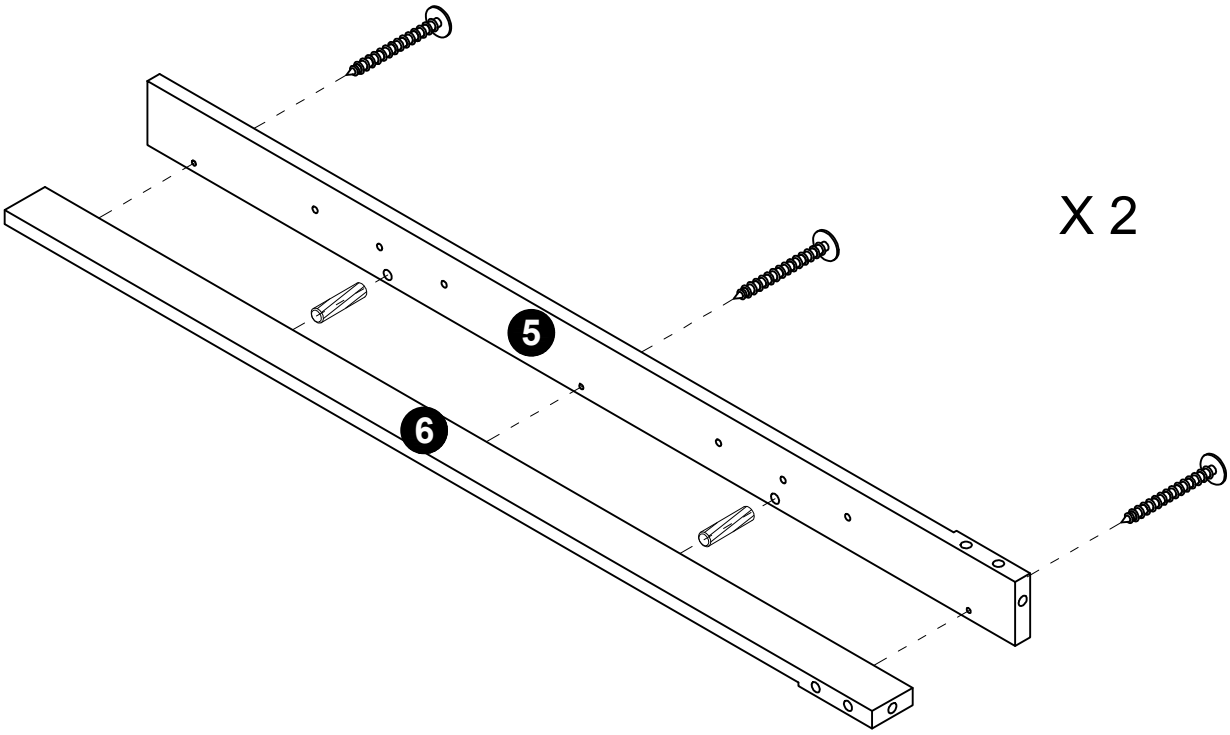
M x 2	N x 2	O x 16	P x 2
 M1 M2 M3			

Q x 12

Ø3*12mm

STEP 1

C x 4

Ø8*30mm
D x 6

Ø4*25mm

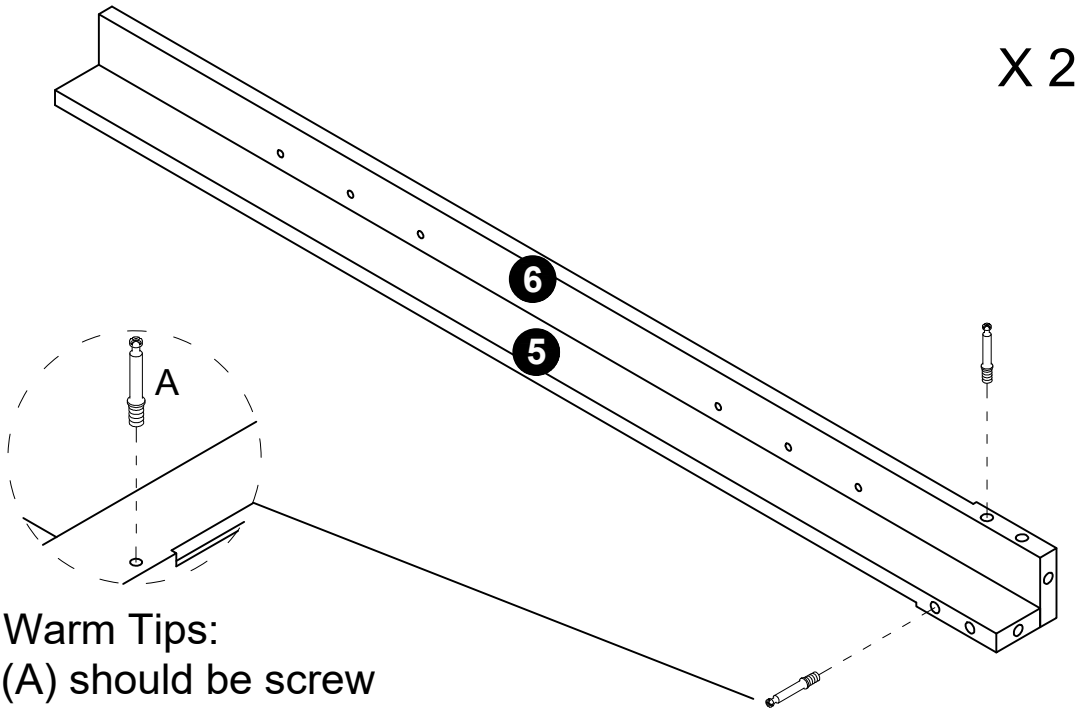


X 2

STEP 2

A x 4

Ø6*34mm




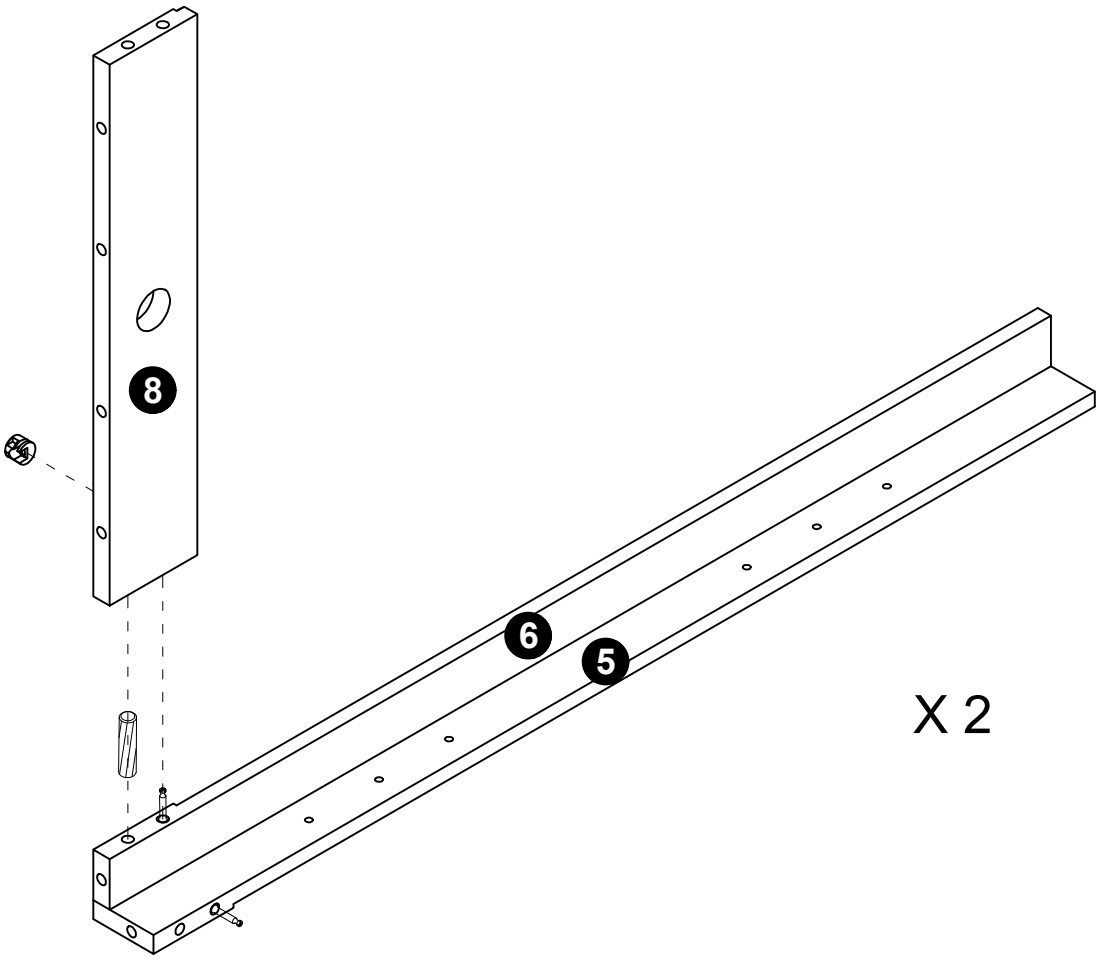
X 2

Warm Tips:
(A) should be screw
to the small holes.

STEP 3

B x 2

Ø15*10mm
C x 2

Ø8*30mm

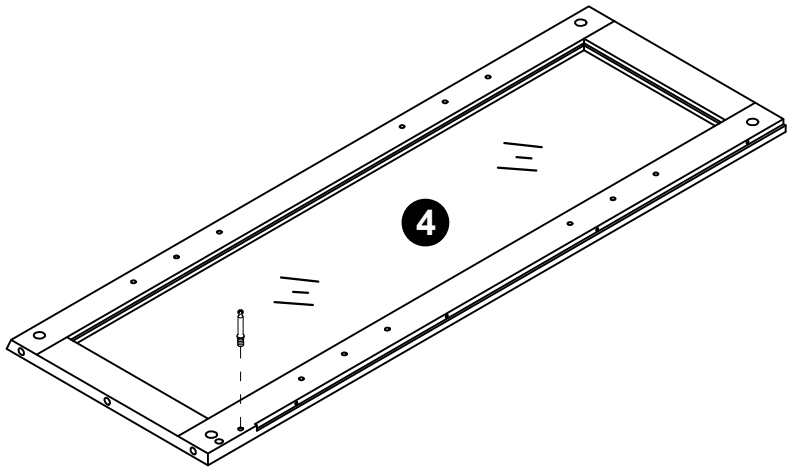


X 2

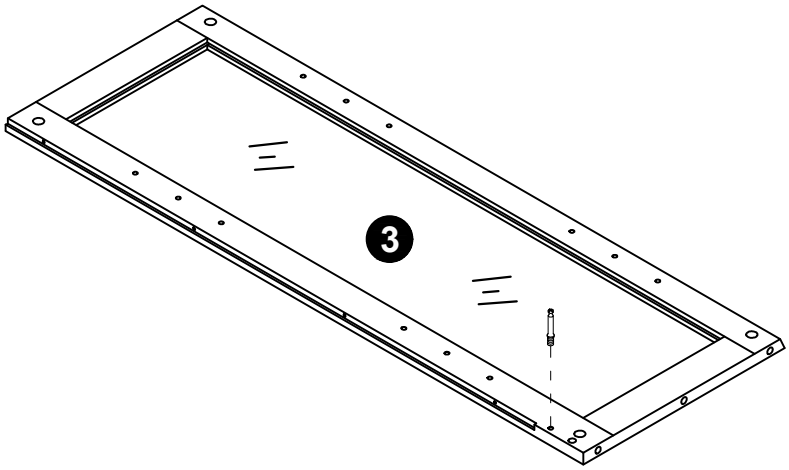
STEP 4

A x 4

Ø6*34mm




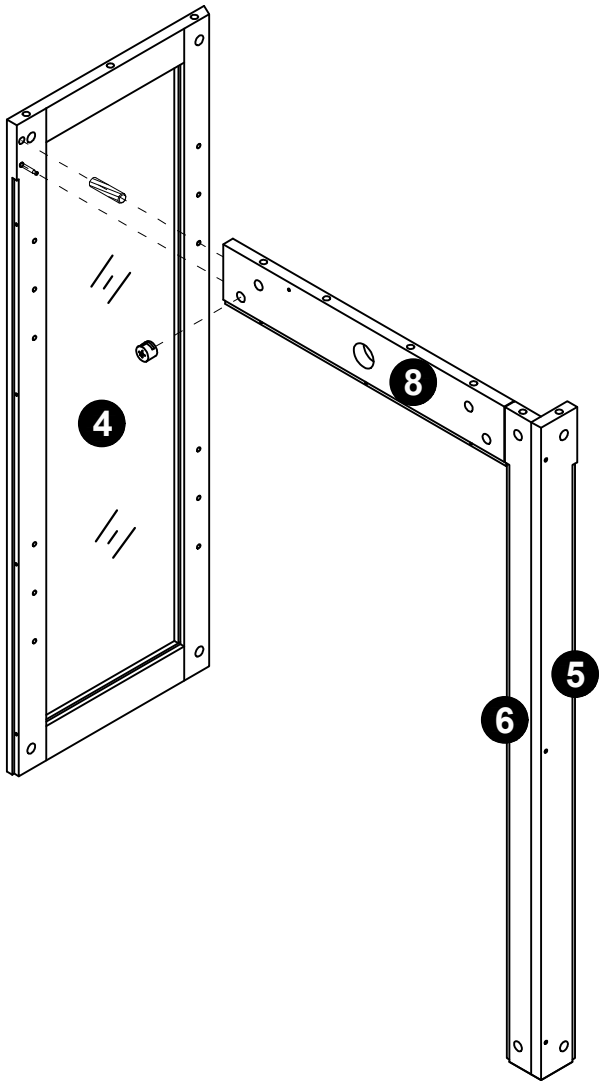
X 2



STEP 5

B x 2

Ø15*10mm
C x 2

Ø8*30mm

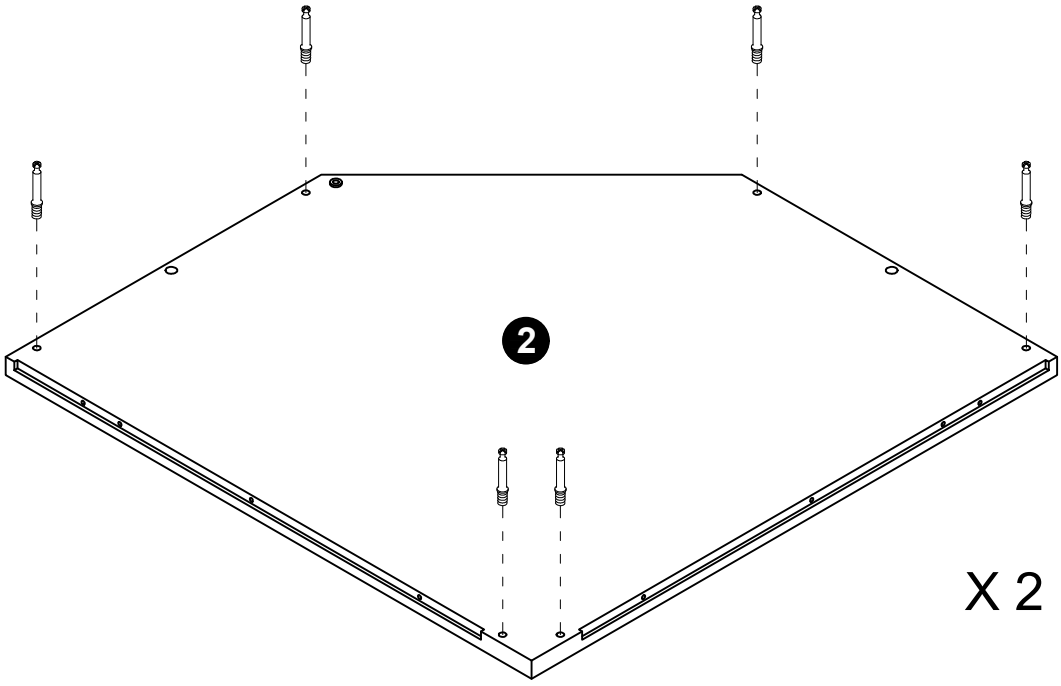


X 2

STEP 6

A x 12


Ø6*34mm

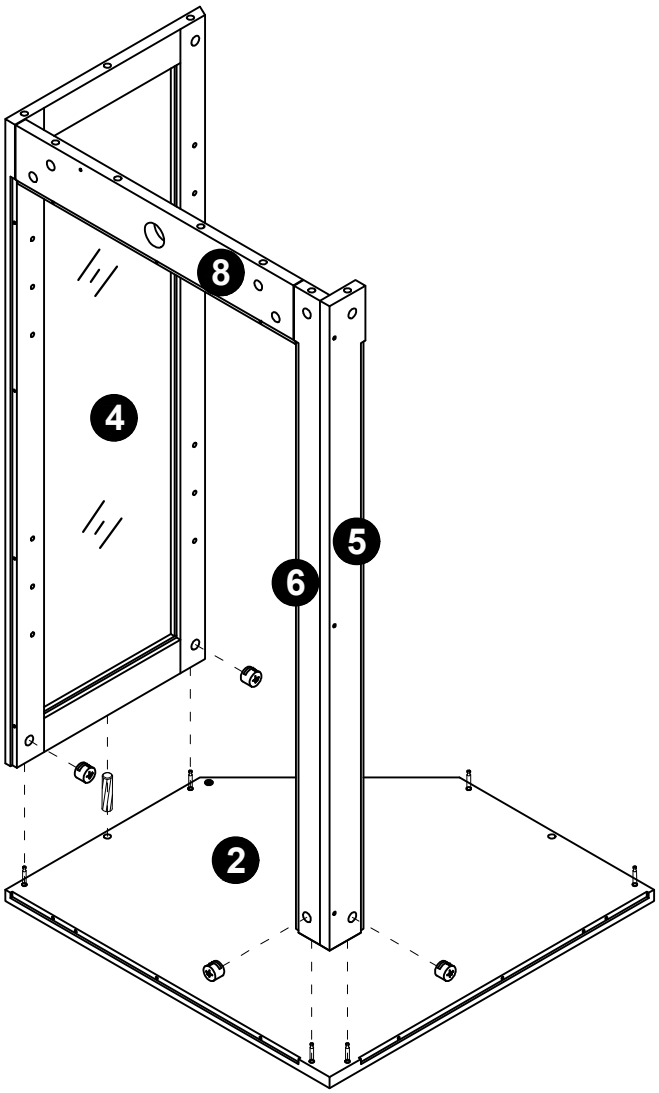


X 2

STEP 7

B x 8


Ø15*10mm
C x 2

Ø8*30mm

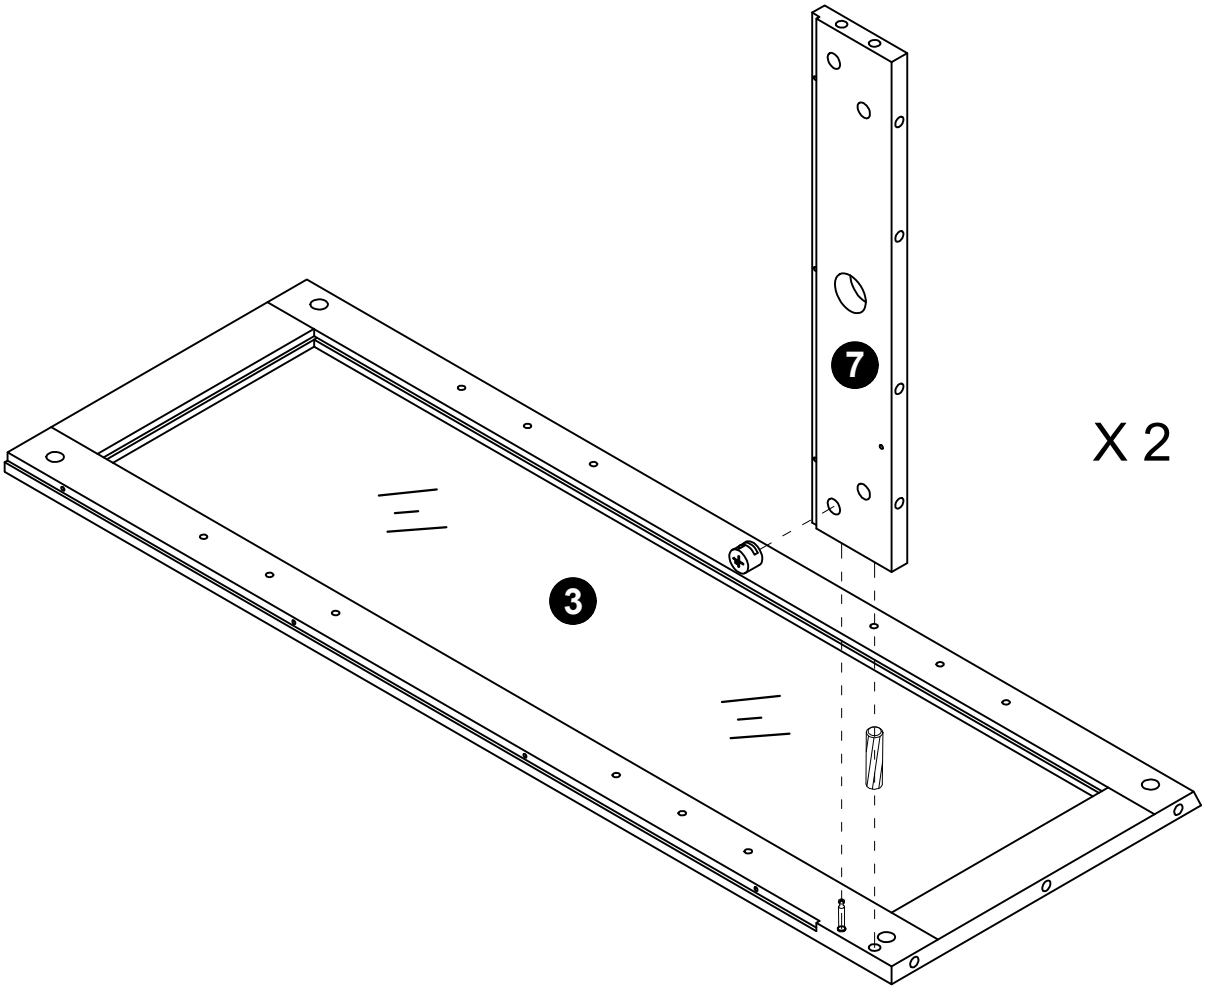


X 2

STEP 8

B x 2


Ø15*10mm
C x 2

Ø8*30mm

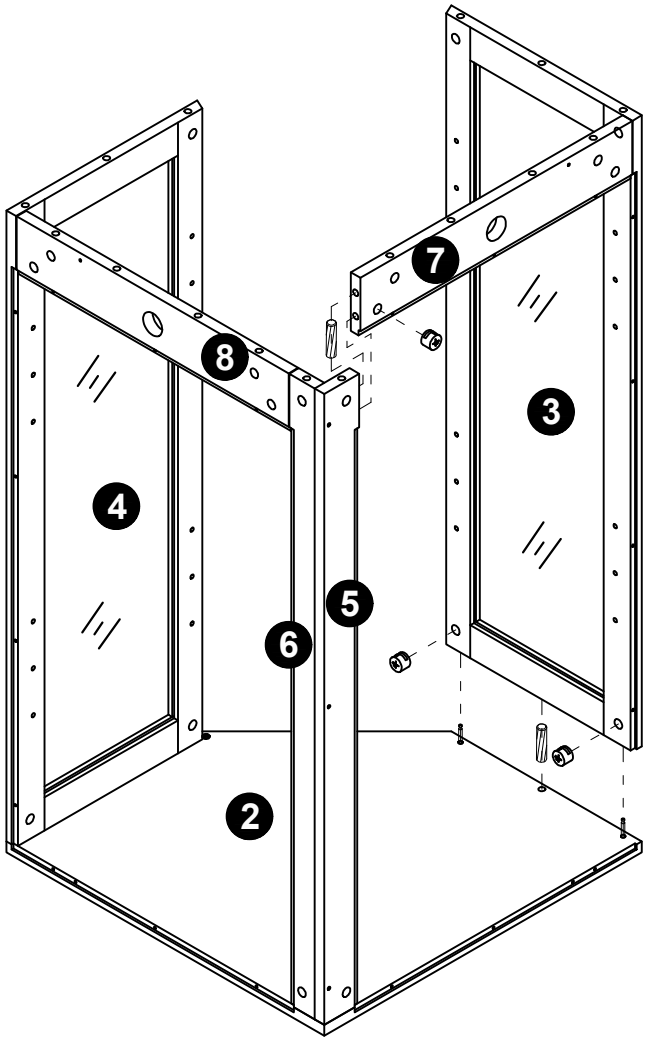


X 2

STEP 9

B x 6

Ø15*10mm
C x 4

Ø8*30mm

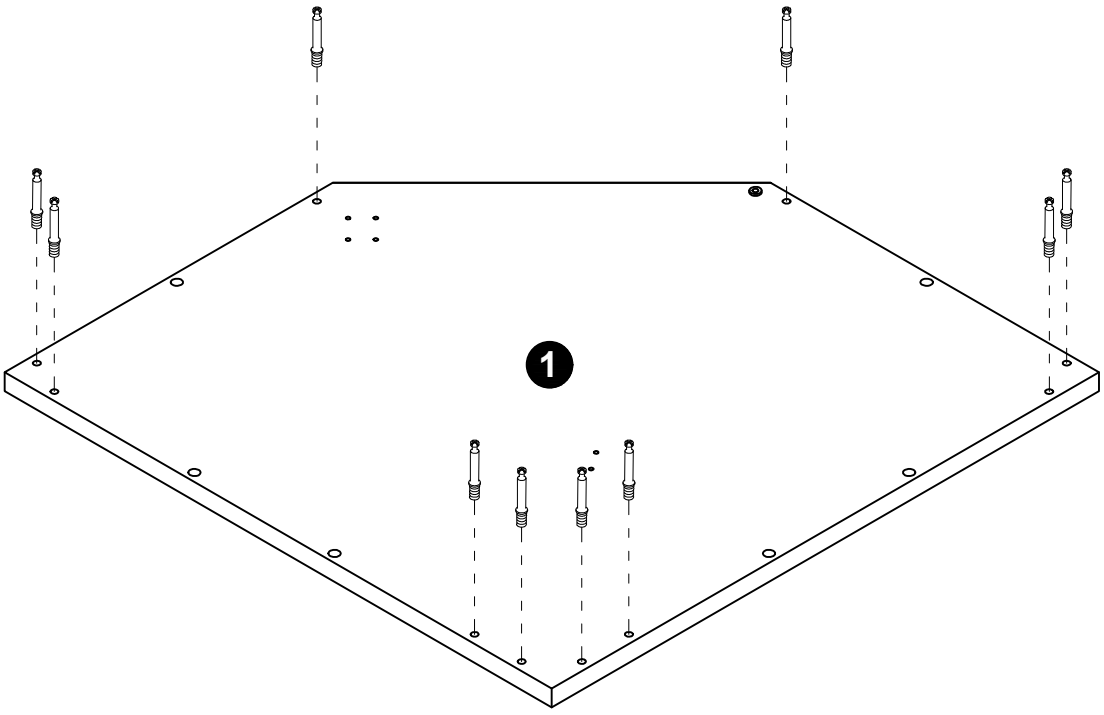


X 2

STEP 10



A x 20

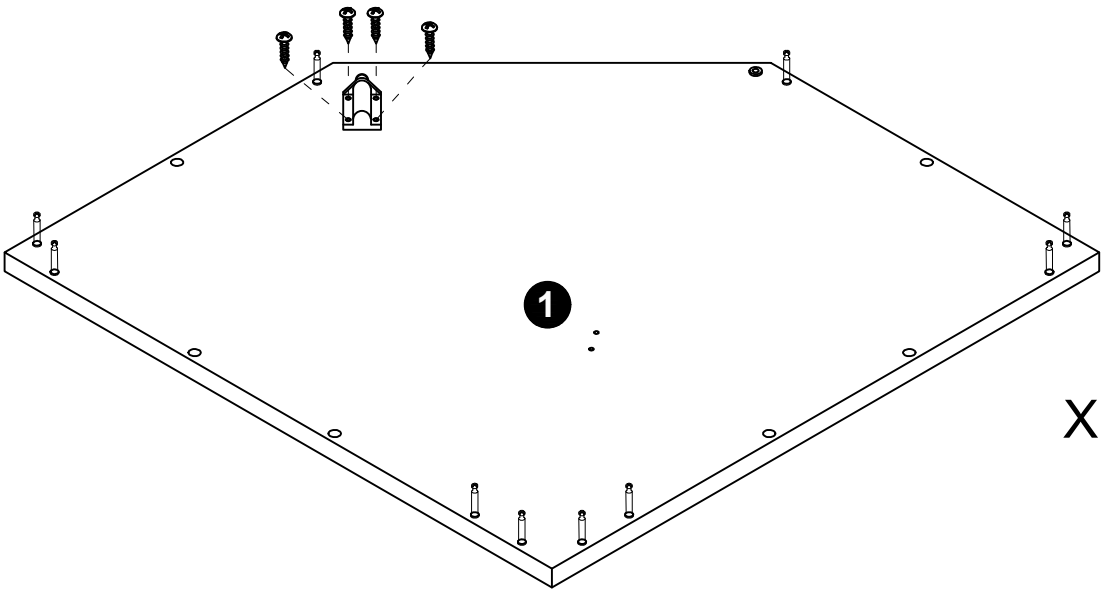
Ø6*34mm



X 2


STEP 11

Q x 8

Ø3*12mm
G x 2


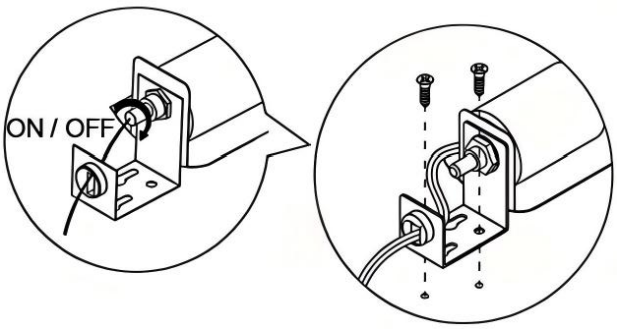


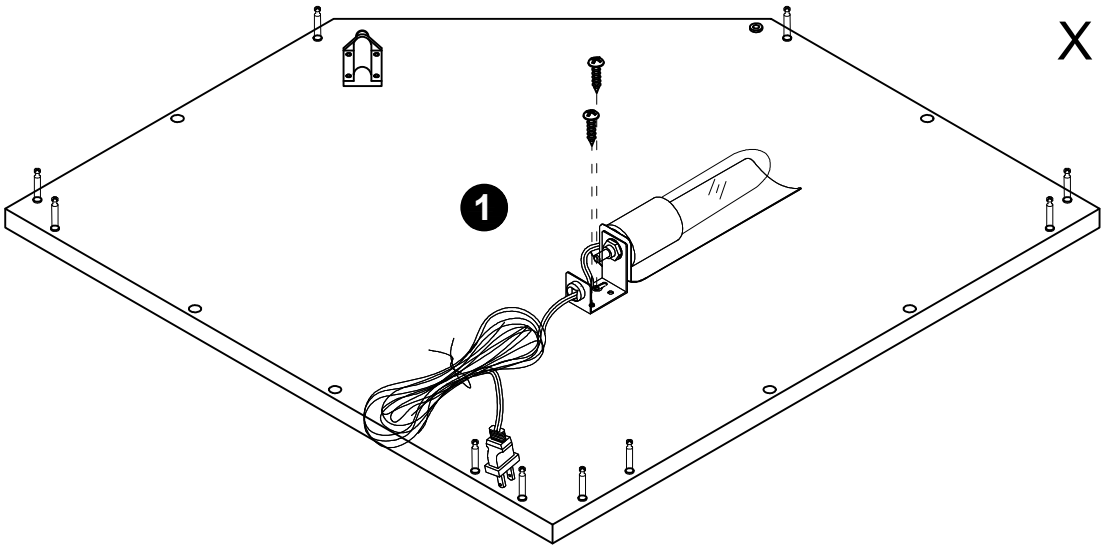
X 2

STEP 12

Q x 4

Ø3*12mm
N x 2

P x 2





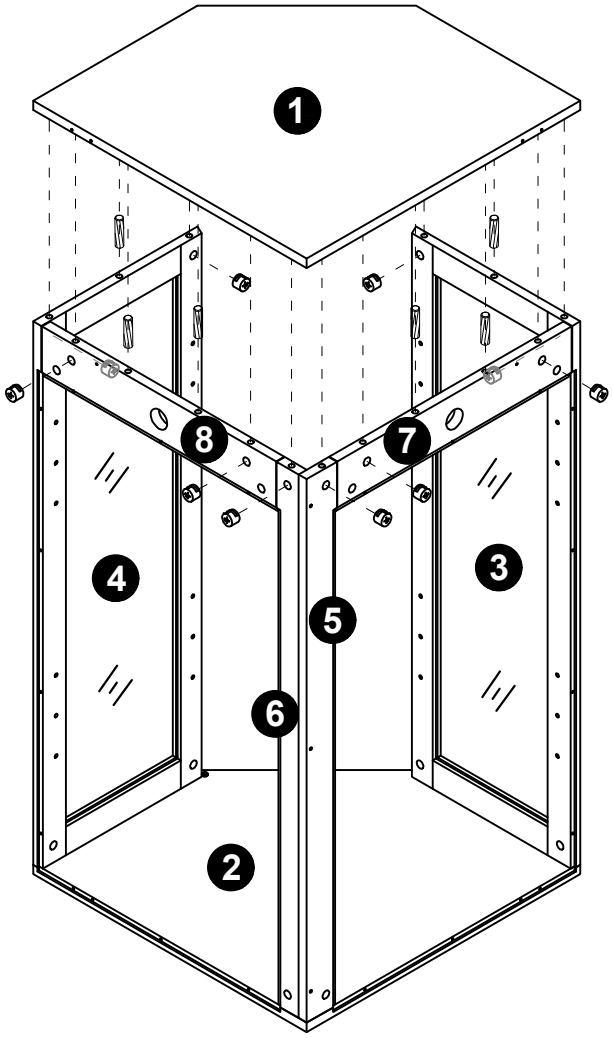


X 2

STEP 13

B x 20

Ø15*10mm
C x 12

Ø8*30mm



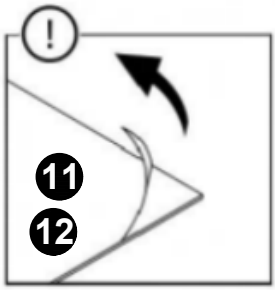
X 2

STEP 14

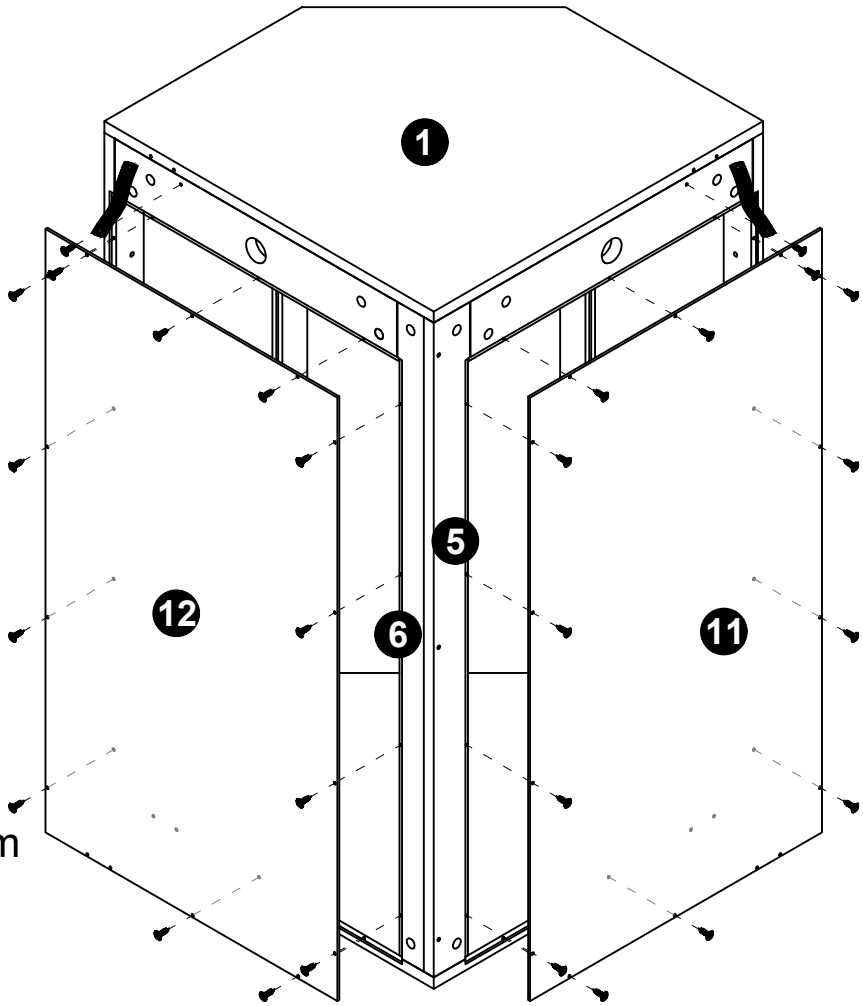
F x 28

Ø3.5*12mm
M x 2

M1



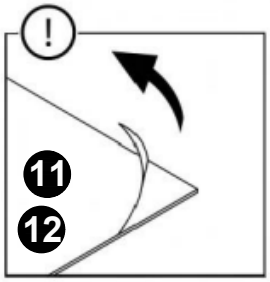
Remove protective film on the mirror panel.



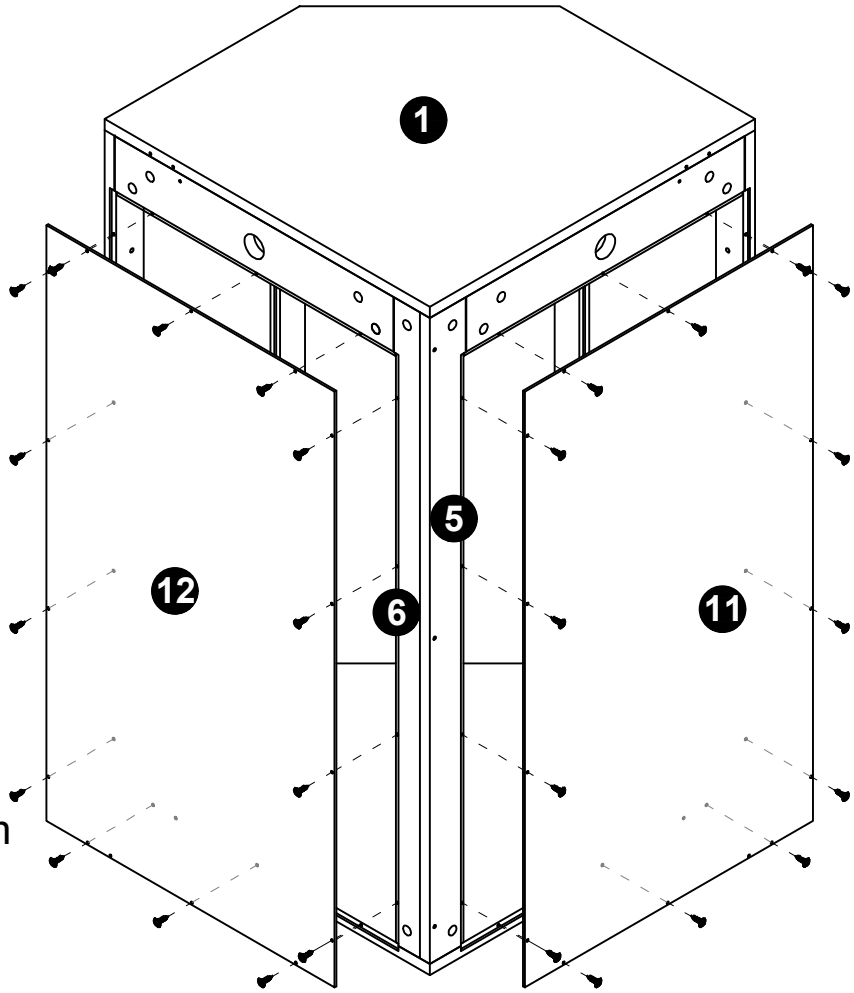
STEP 15

F x 28

Ø3.5*12mm

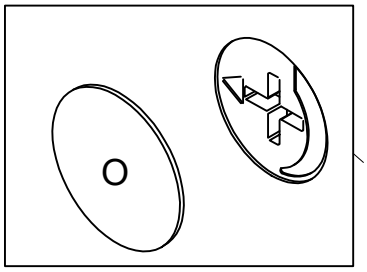


Remove protective film on the mirror panel.



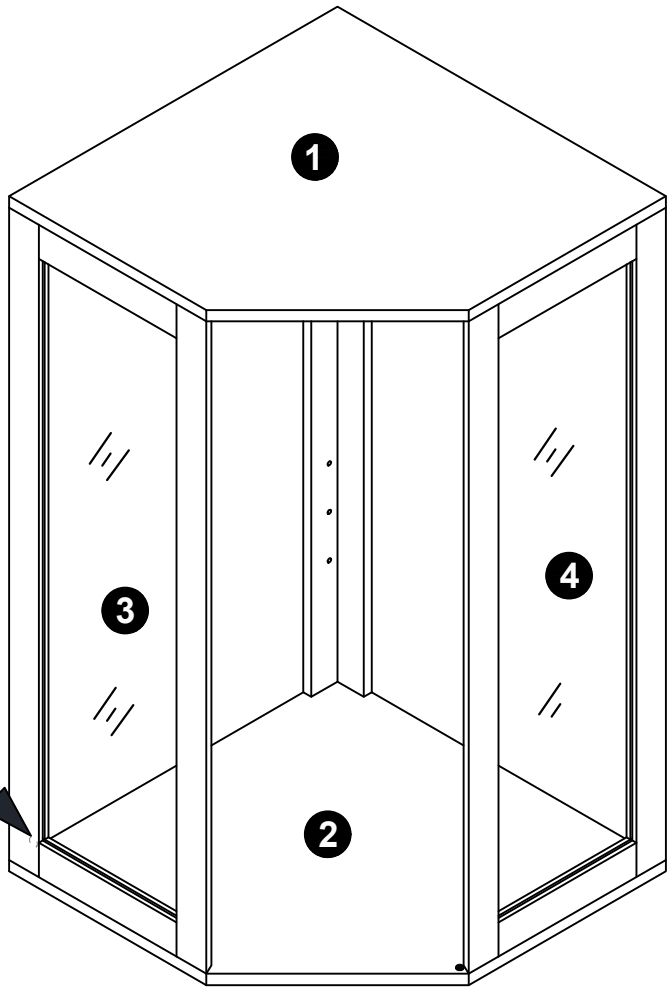
STEP 16

O x 16

In order to make the product more beautiful

Please paste hard ware O on the exposed holes



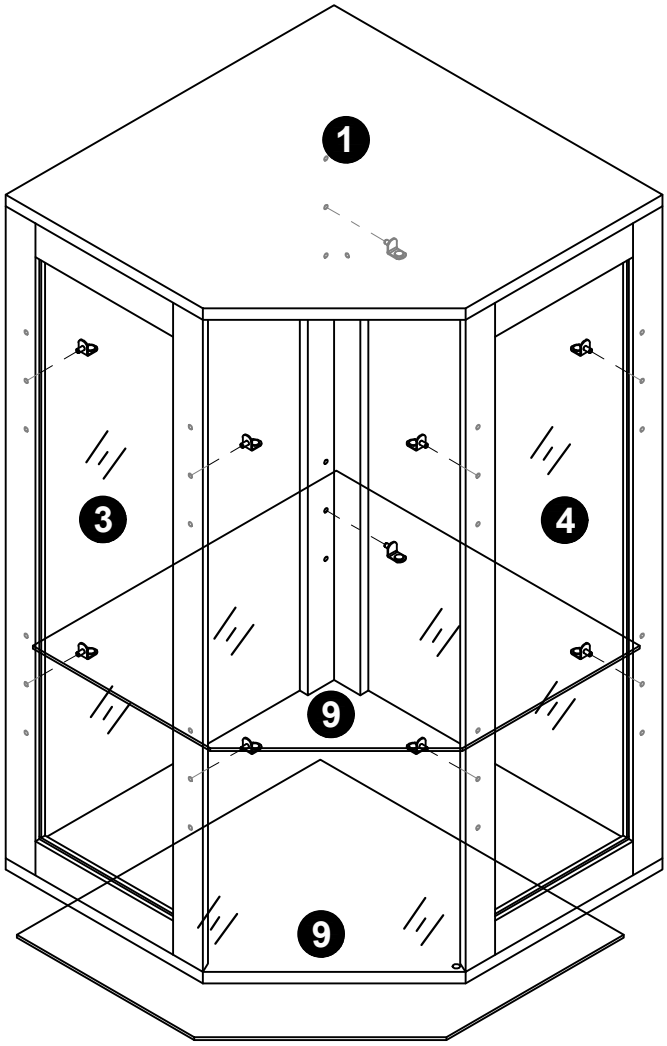
X 2

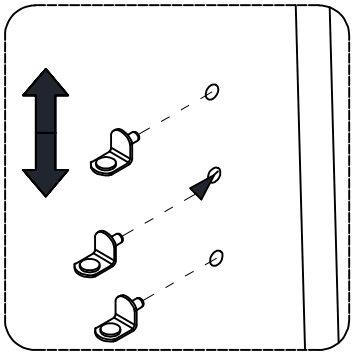
STEP 17

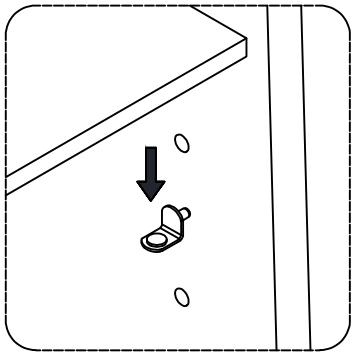
H x 20



X 2









STEP 18


I x 2



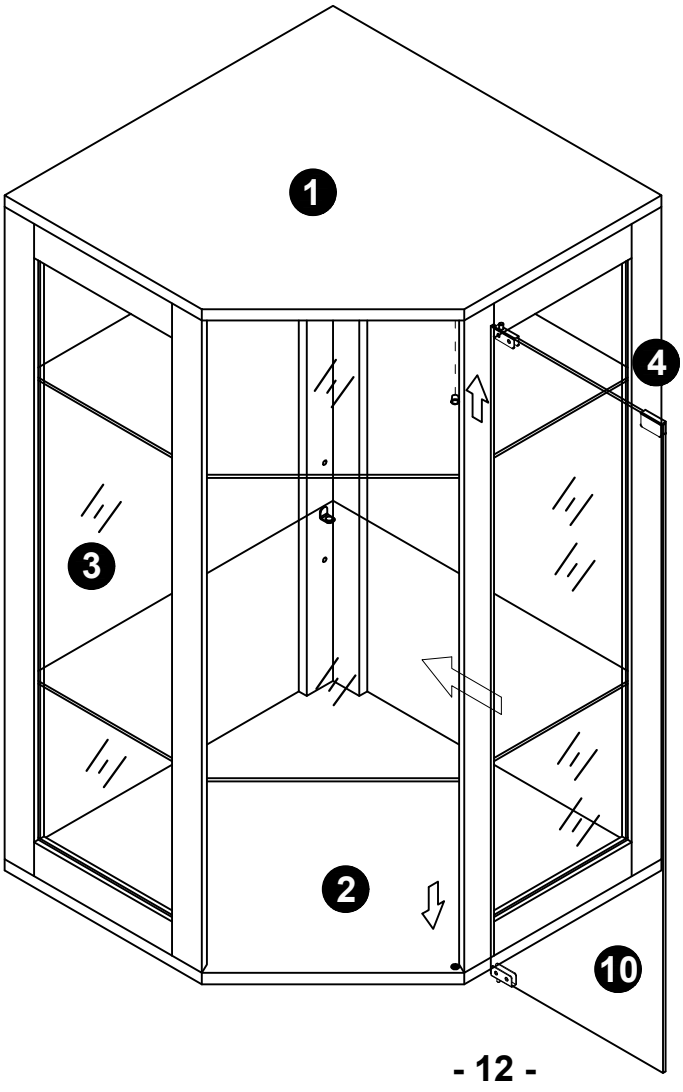
J x 2

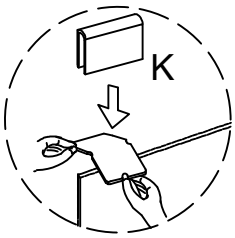


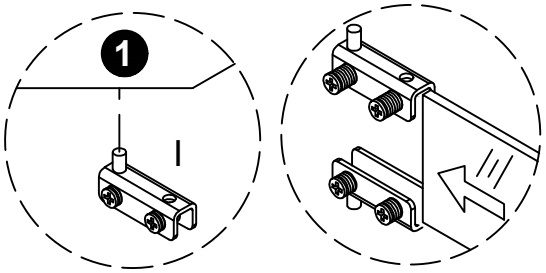
K x 2

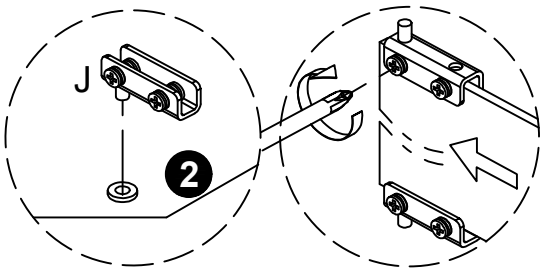


X 2










STEP 19

E x 8

Ø3*12mm
L x 2

M x 2
 M2 M3

