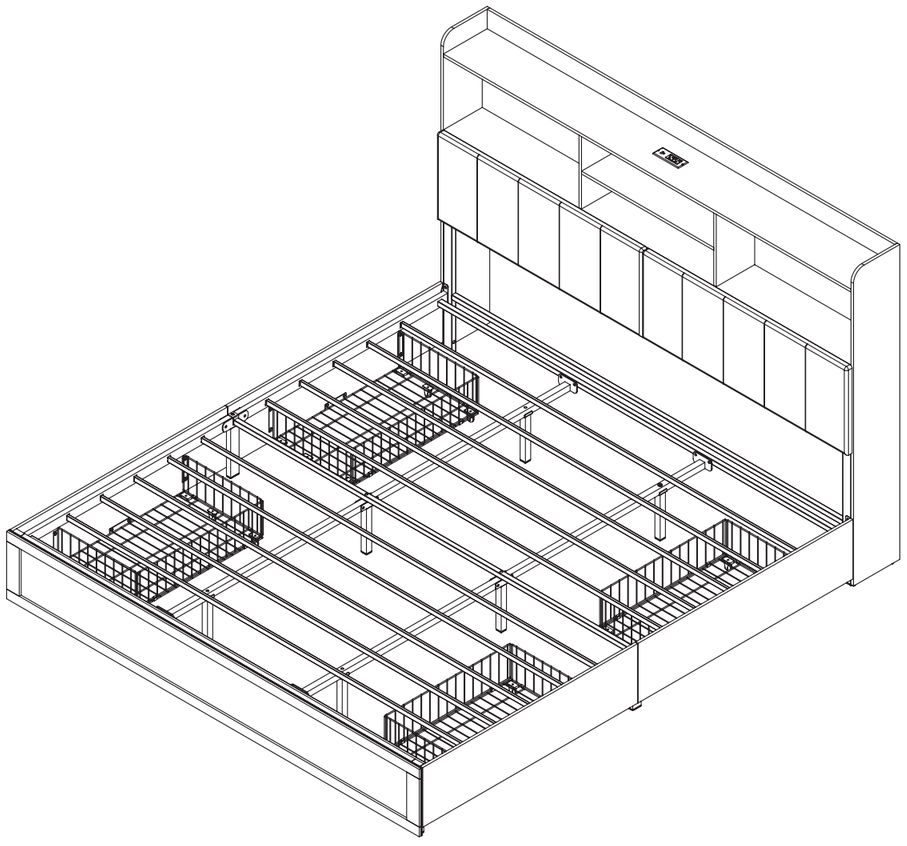
Storage Platform Bed-K

Assembly Instructions



Dear Customers,

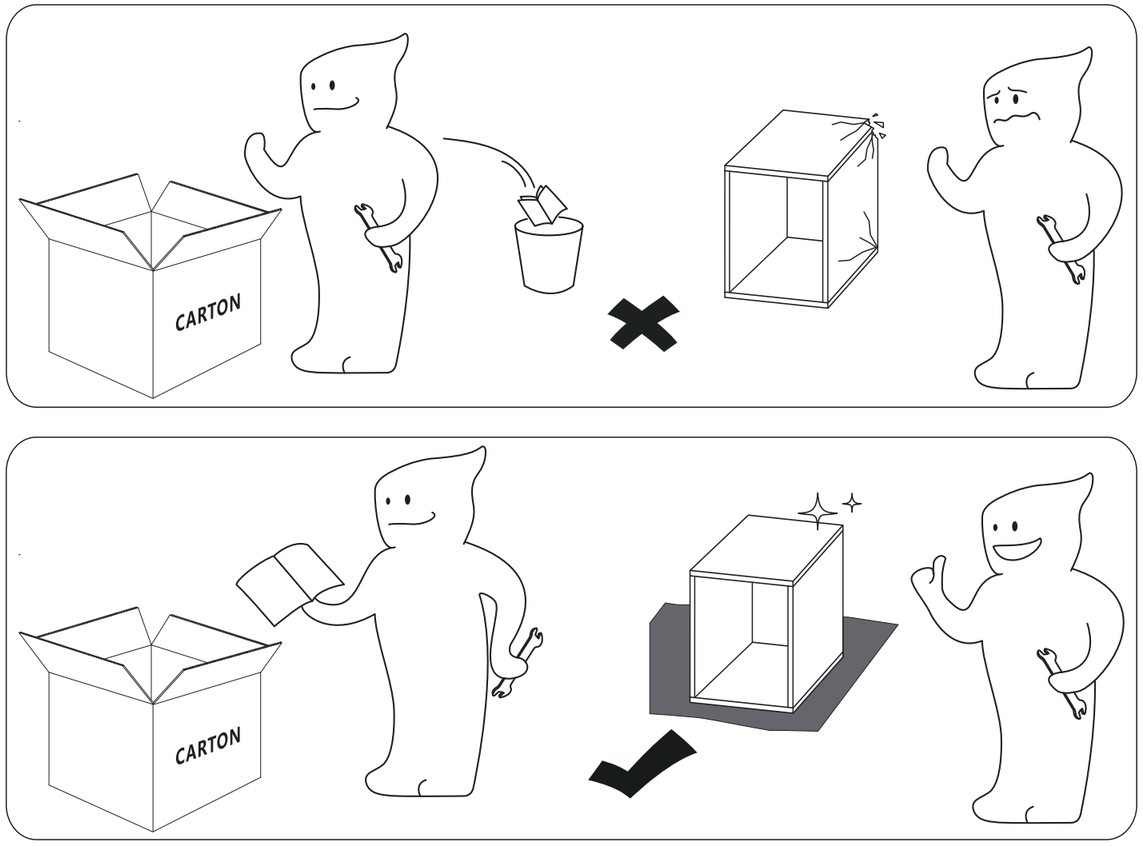
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADE IN CHINA

ASSEMBLY INSTRUCTIONS

! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.




Note:

















1. Should be assembled on flat ground to keep balance.

2. Before completing the installation, do not tighten the screws.










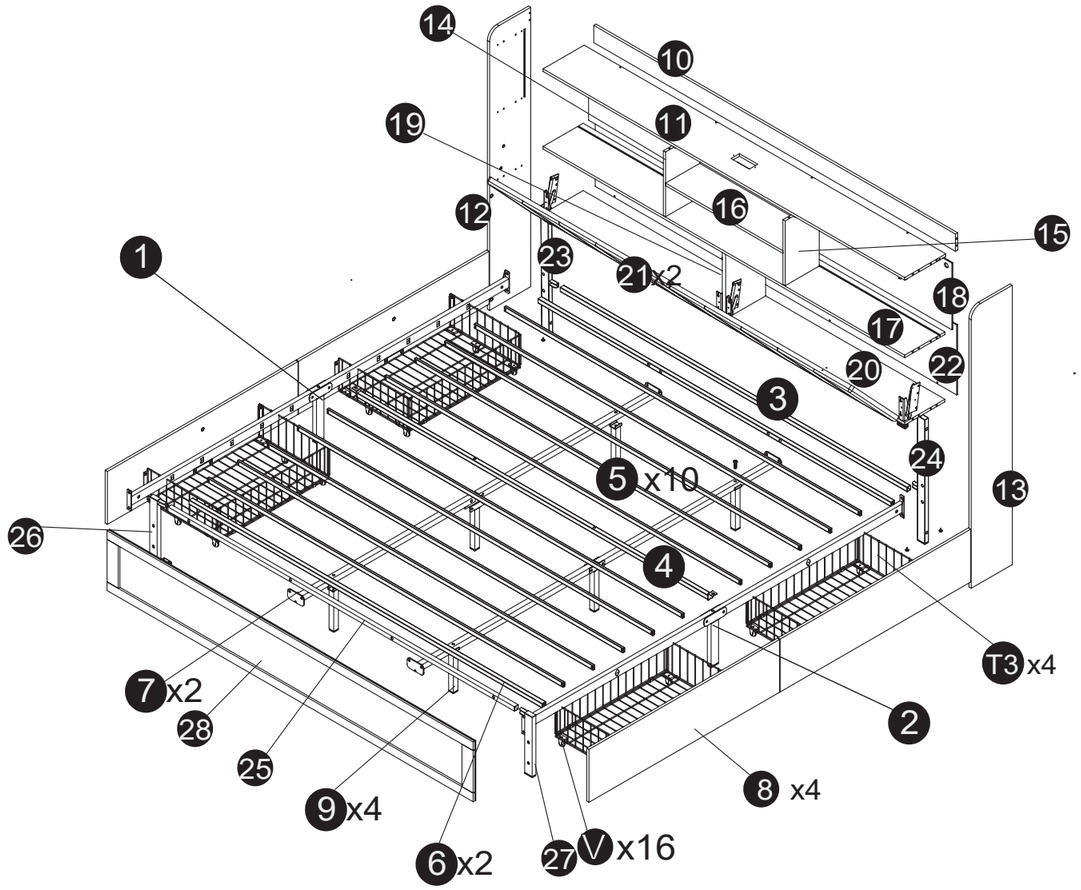
For easier and better assembly, **2** or more adults are required.





The box 1

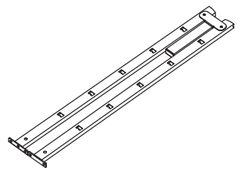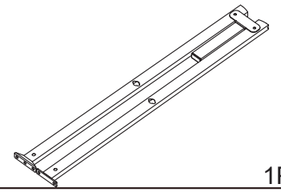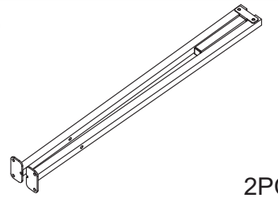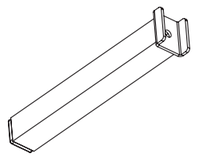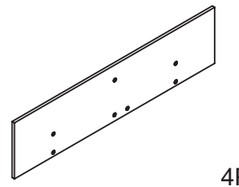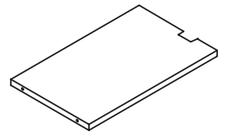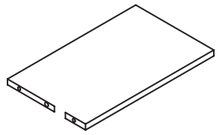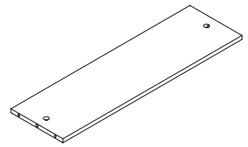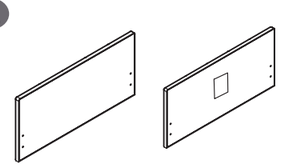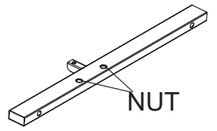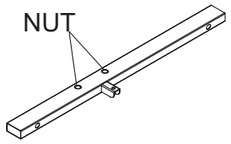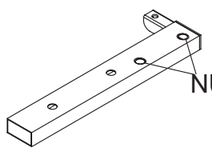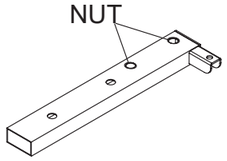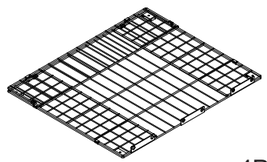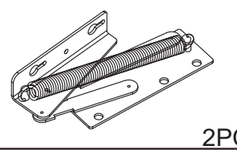1  1PC	2  1PC	7  2PCS
9  4PCS	8  4PCS	14  1PC
15  1PC	16  1PC	19  1PC
21  1PC	23  NUT 1PC	24  NUT 1PC
26  NUT 1PC	27  NUT 1PC	T3  4PCS
V  16PCS	J1  2PCS	J2  2PCS

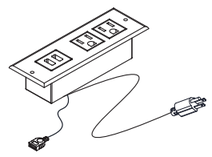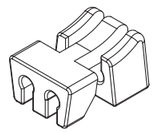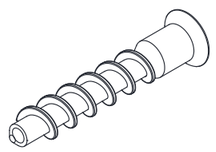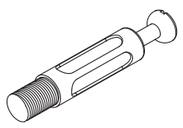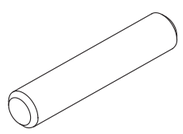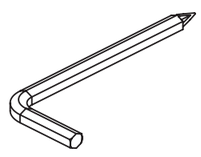
The box 1 continued

A  ST3.2x12 5PCS	B  ST4.2x12 2PCS	C  M8x12 white zinc 24PCS
D  M8x14 Colored Zinc 4PCS	E  M8x18 16PCS	F  M8x30 12PCS
G  M8x40 8PCS	H  M8x50 4PCS	I  M8x60 4PCS
J  M6x10 16PCS	U  1PC	M  8PCS
N  5PCS	O  M4x10 16PCS	P  M5x30 19PCS
Q  φ15x9.5 19PCS	R  φ7x40 19PCS	S  φ6x40 24PCS
T  M4 1PC	W  M5 1PC	Y1  M8 1PC

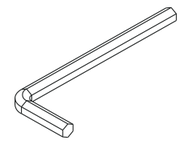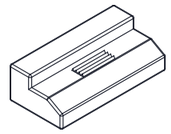The box 1 continued

Y2  1PC	Z  20PCS	














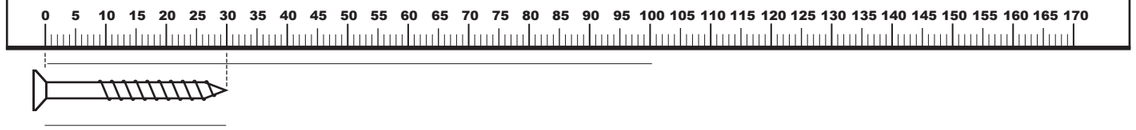
Ruler - Use this ruler to help correctly identify the screws




The lenath of the screw is measured from the rod part excluding the screw cap (30mm screw shown）

Please make sure to check that all screws are tightened after completing the entire installation.

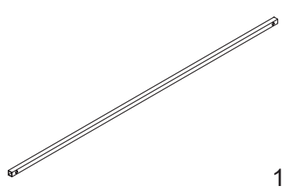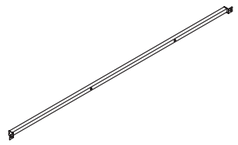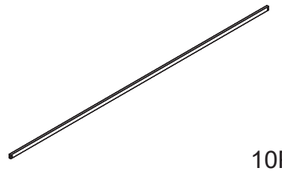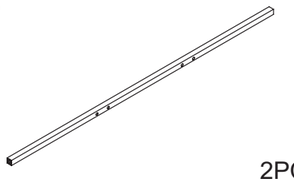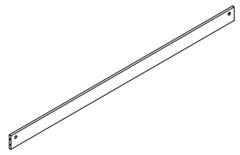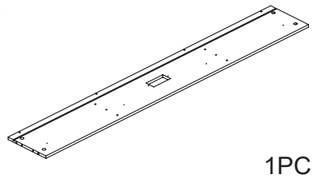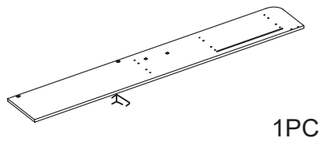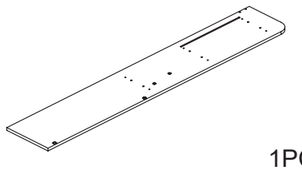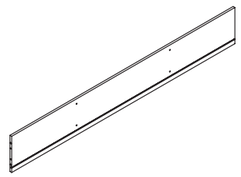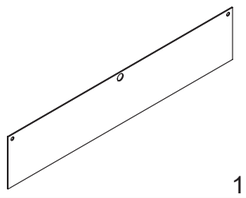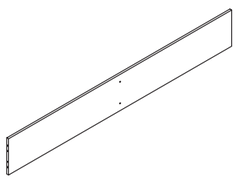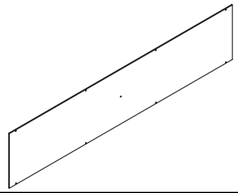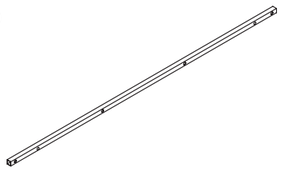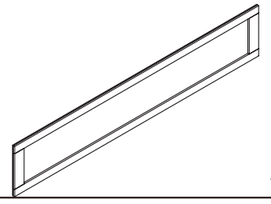
The box 2

3  1PC	4  1PC	5  10PCS
6  2PCS	10  1PC	11  1PC
12  1PC	13  1PC	17  1PC
18  1PC	20  1PC	22  1PC
25  1PC	28  1PC	K  1PC

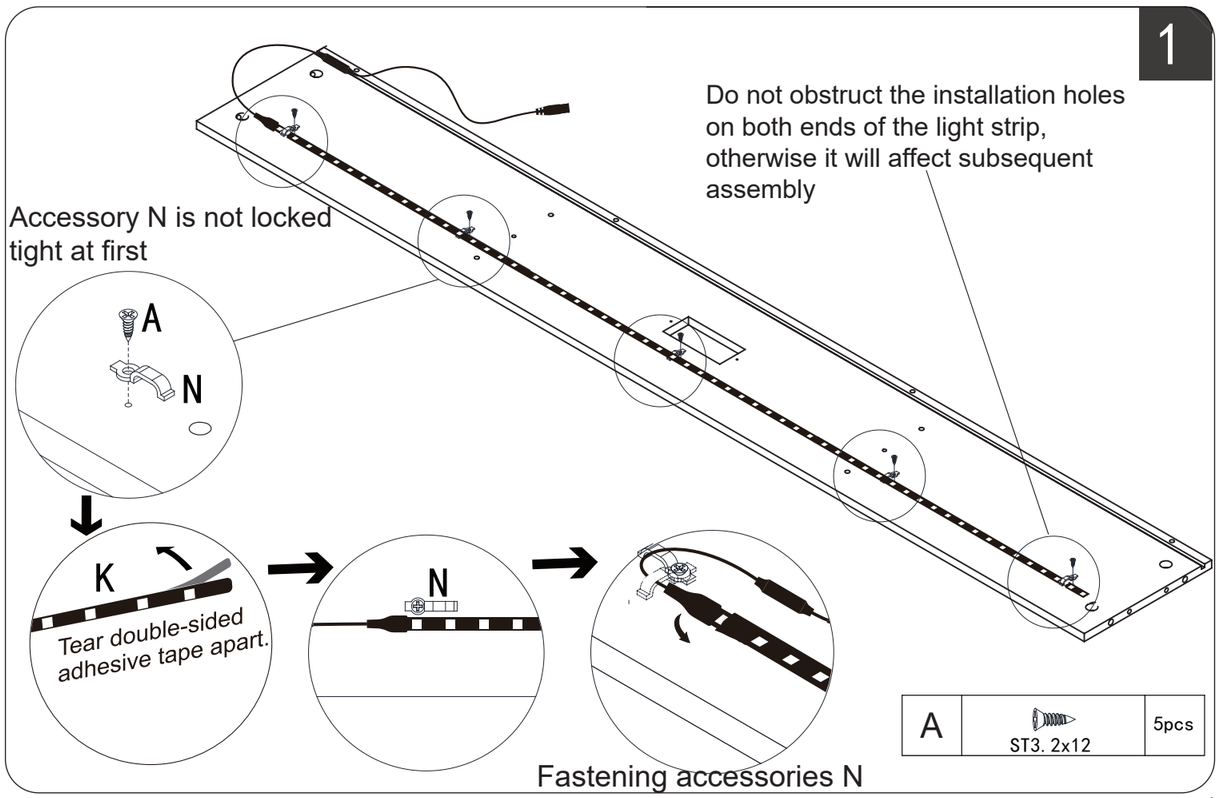
1



2

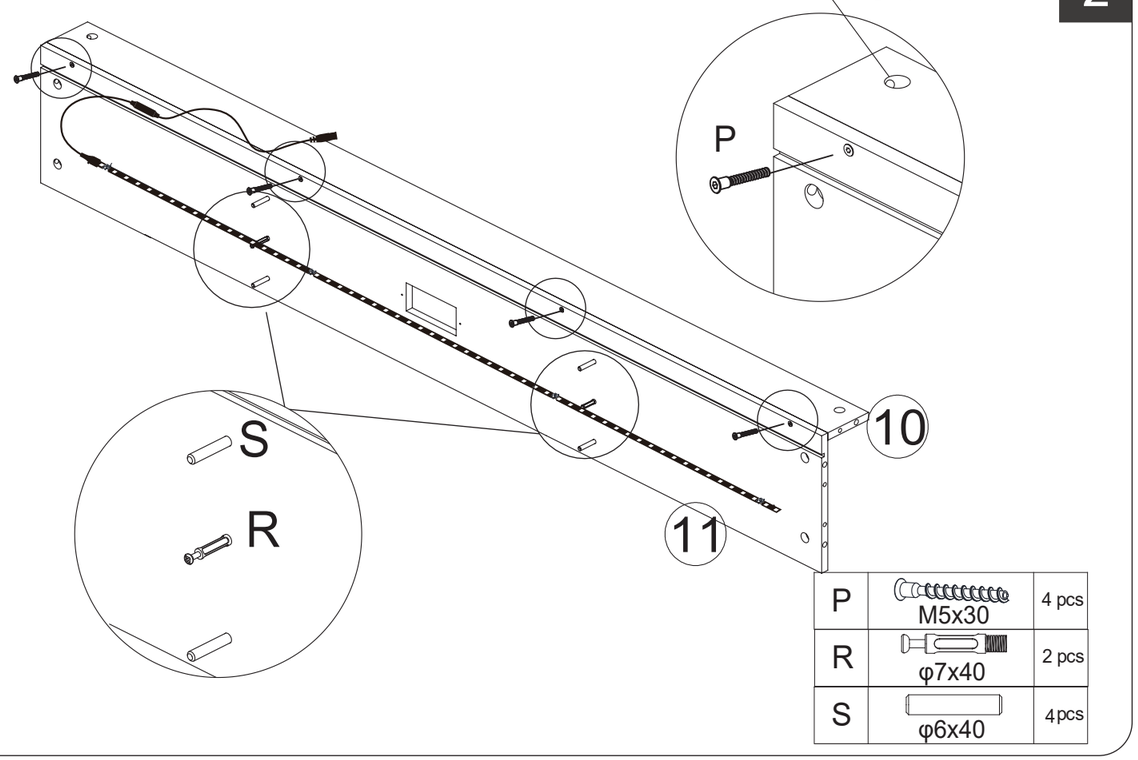


3

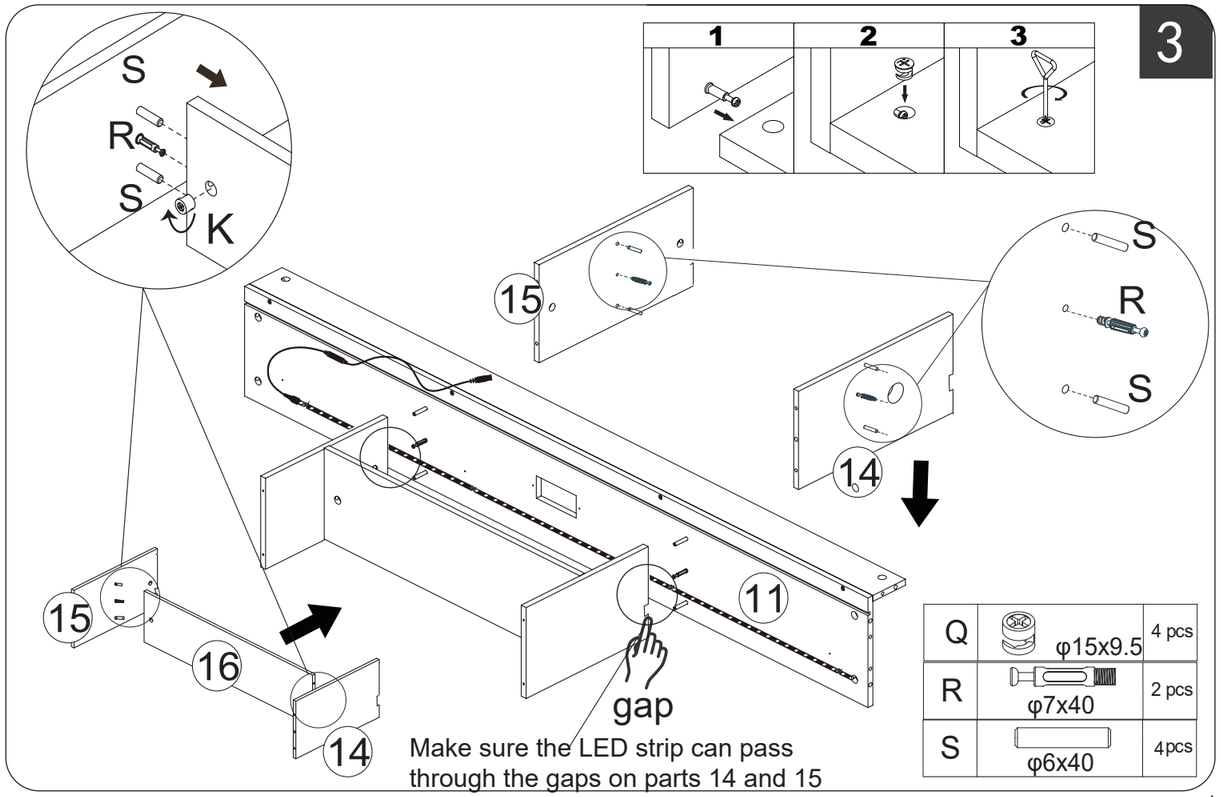

Make sure the LED strip can pass through the gaps on parts 14 and 15

Q	φ15x9.5	4 pcs
R	φ7x40	2 pcs
S	φ6x40	4pcs

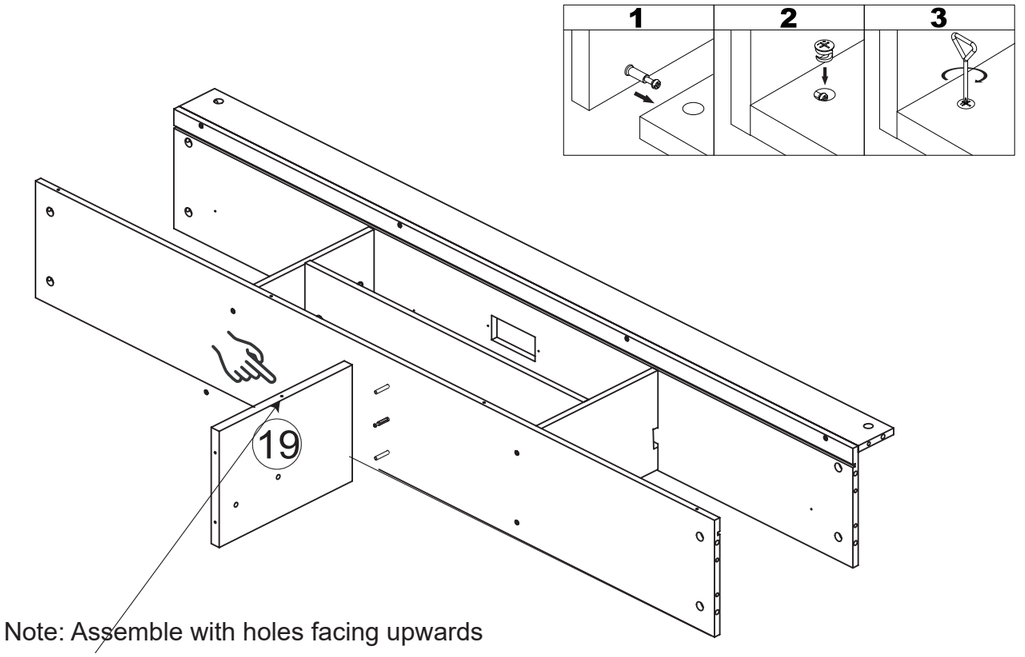
5



Note: Assemble with holes facing upwards


Q	φ15x9.5	1 pcs

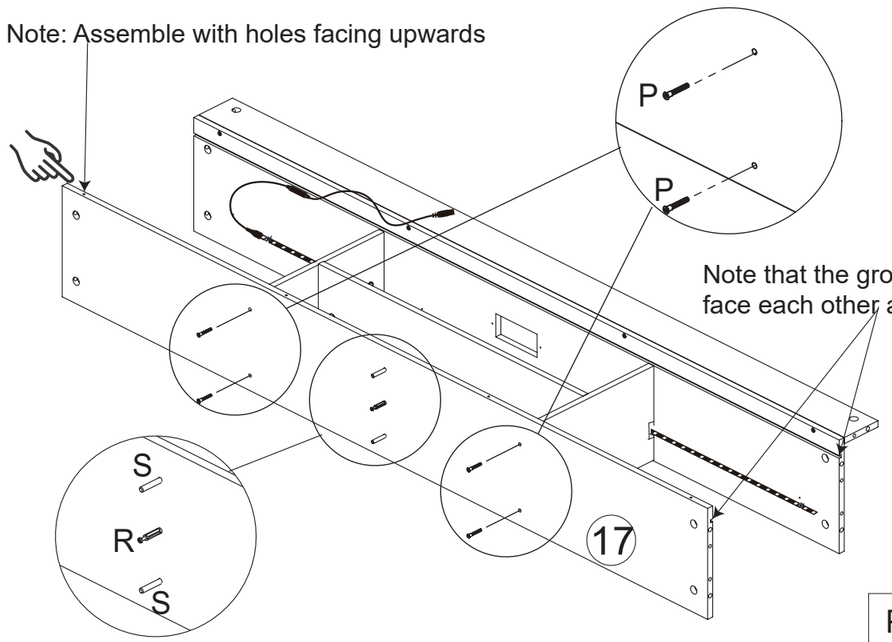4



P	M5x30	4 pcs
R	φ7x40	1 pcs
S	φ6x40	2 pcs

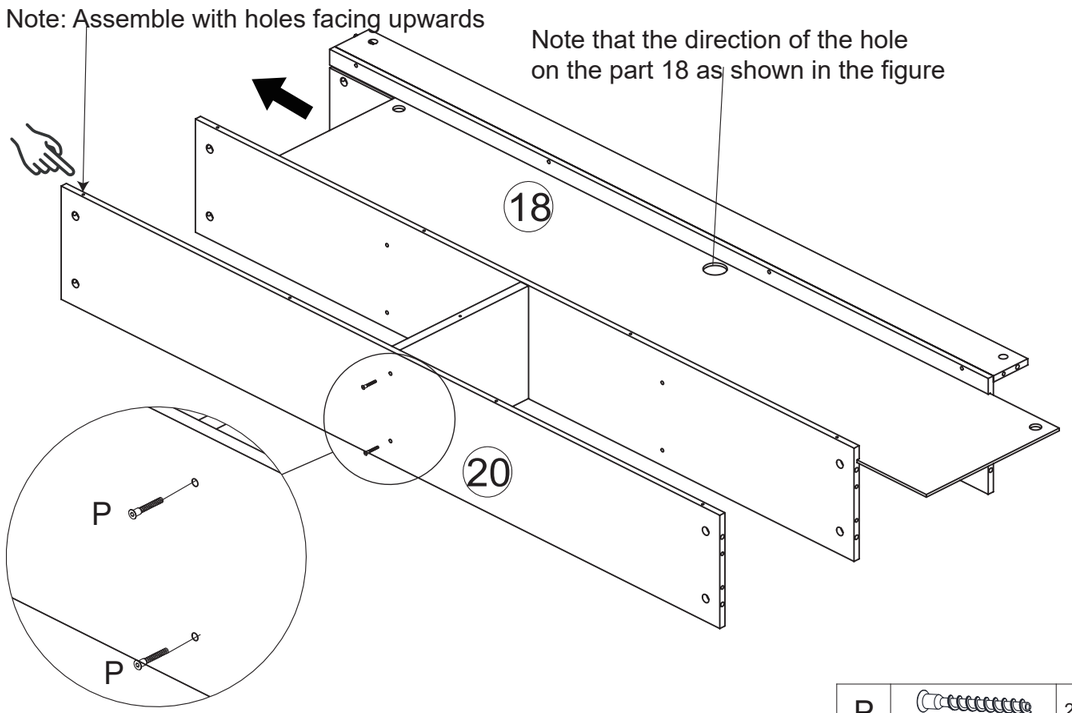
6



P	M5x30	2 pcs


7

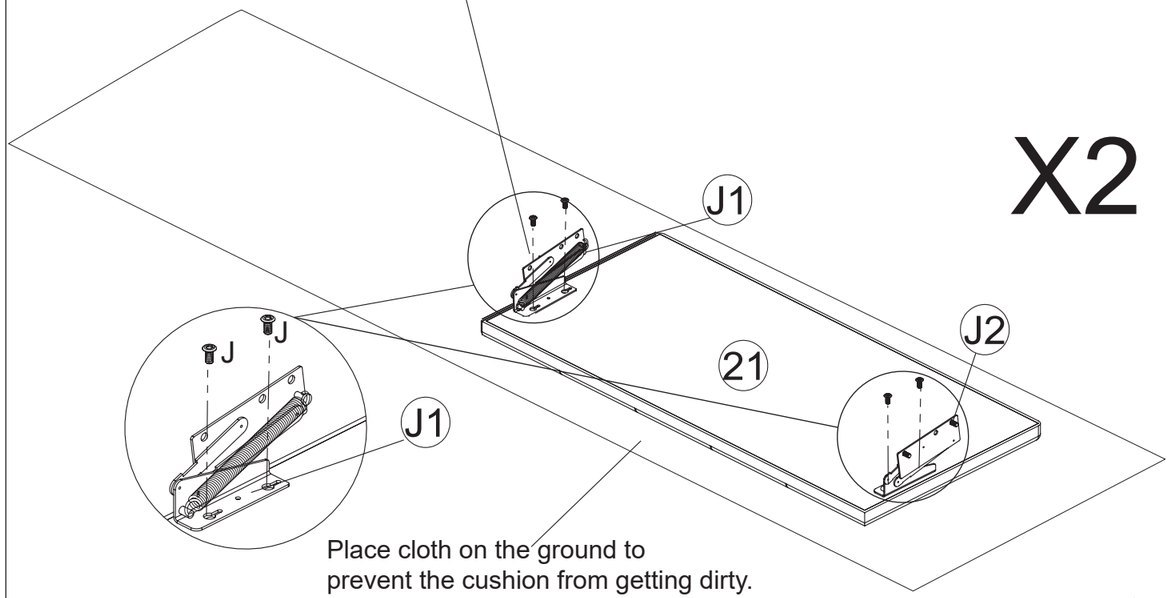Do not tighten the screws at first.
And making sure that the spring
is assembled properly (as shown on the graph).




J	M6x10	8PCS

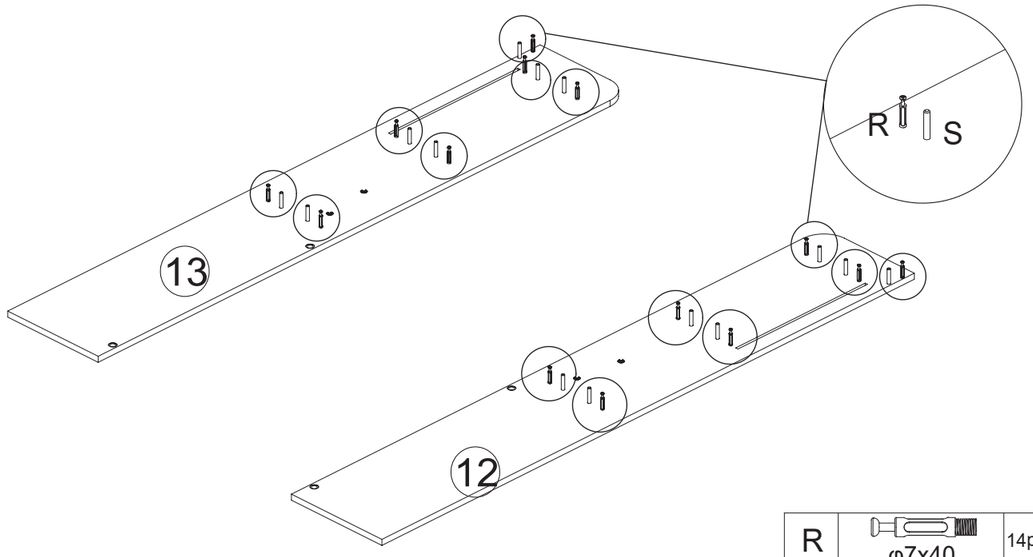
8



R	φ7x40	14pcs
S	φ6x40	14pcs

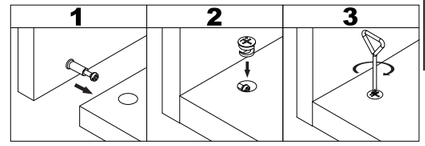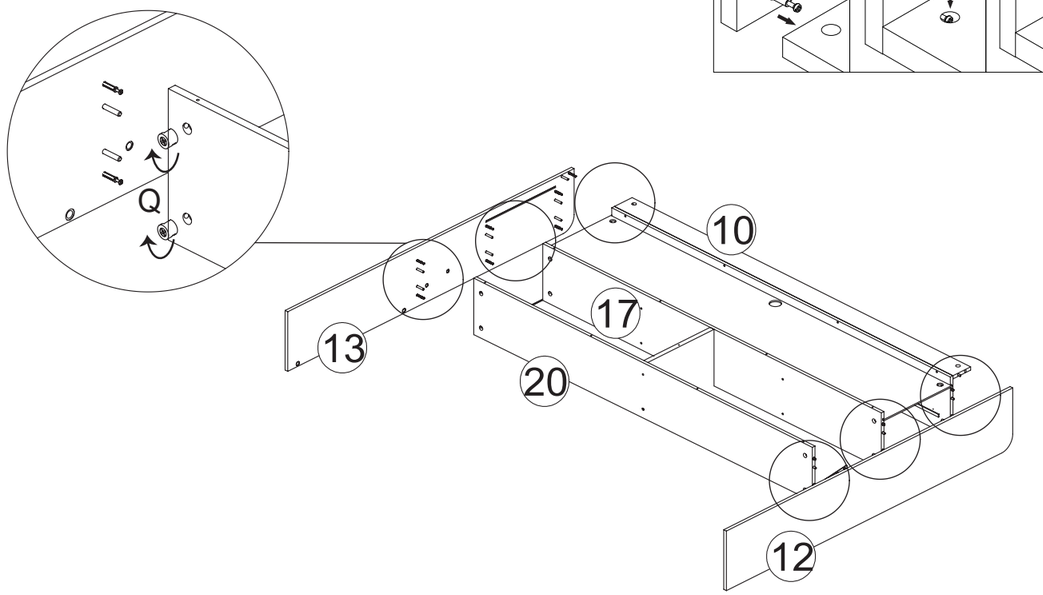9






Q	φ15x9.5	10pcs

10

Make sure the hole positions of J1 and J2
are aligned, it helps you to assemble easily.

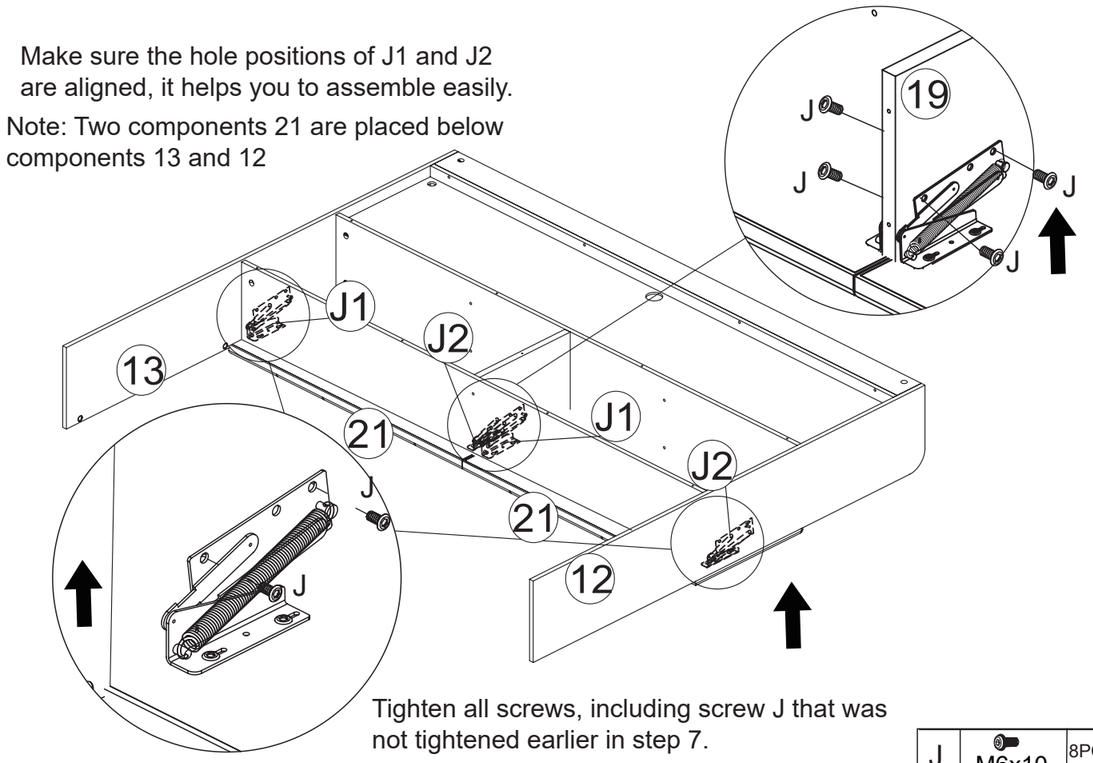
Note: Two components 21 are placed below
components 13 and 12



Tighten all screws, including screw J that was
not tightened earlier in step 7.


J	M6x10	8PCS

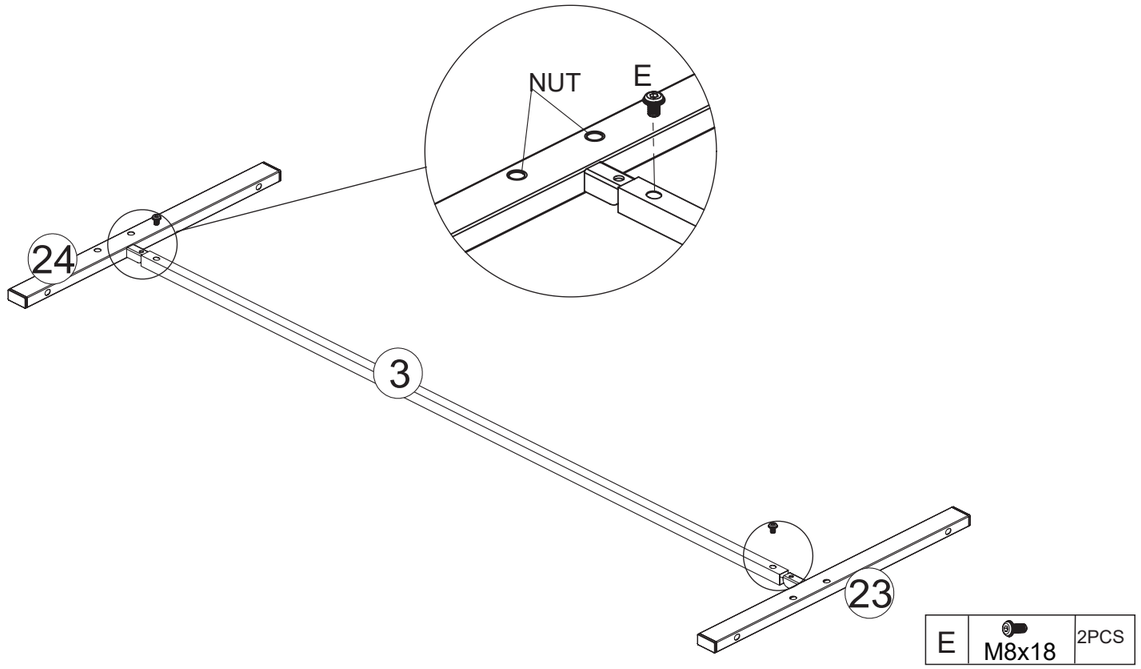11




E	M8x18	2PCS

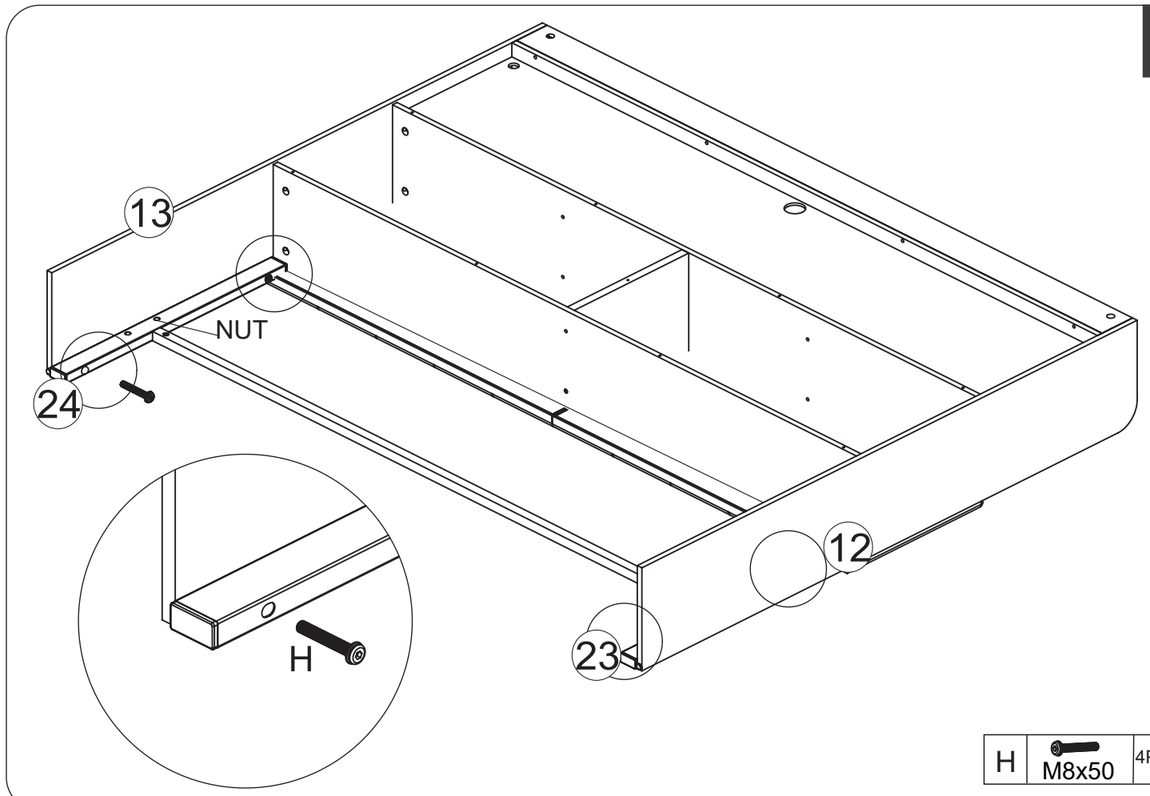12




H	M8x50	4PCS

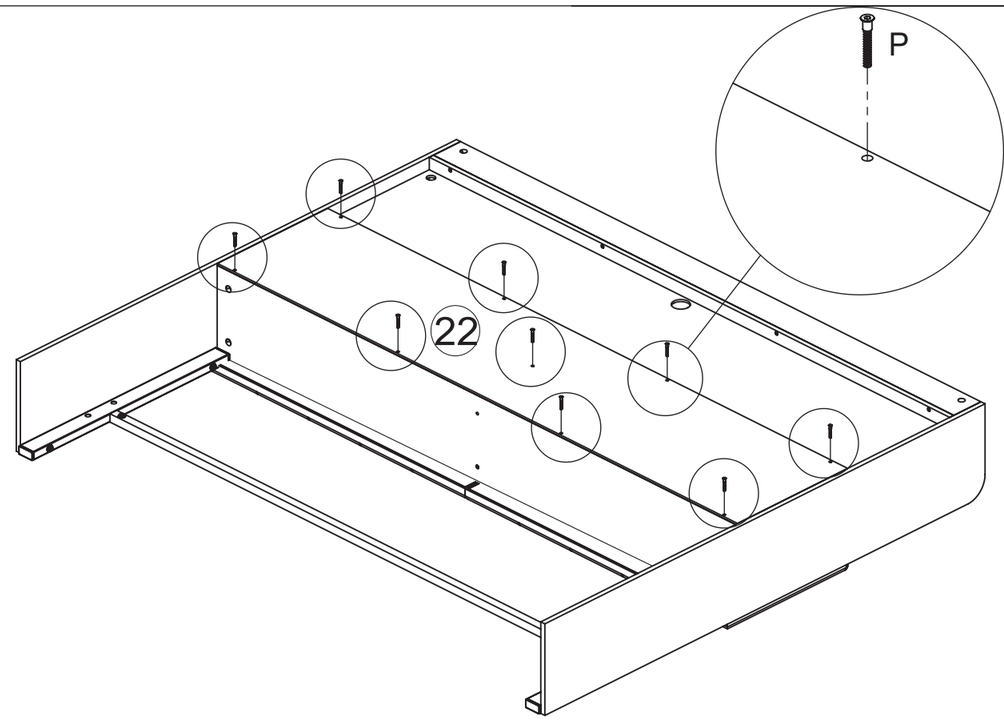13




P	M5x30	9 pcs

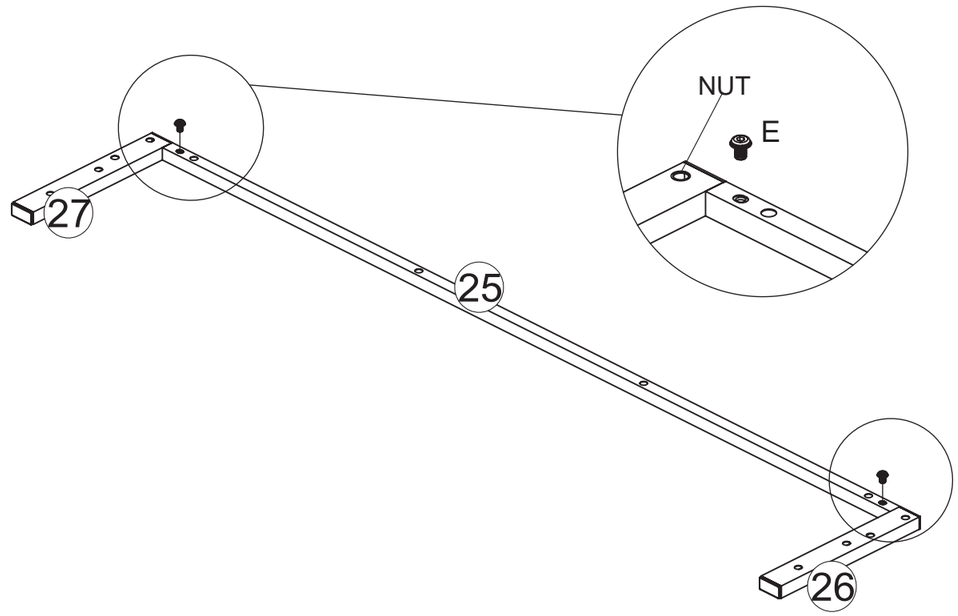14



E	M8x18	2PCS

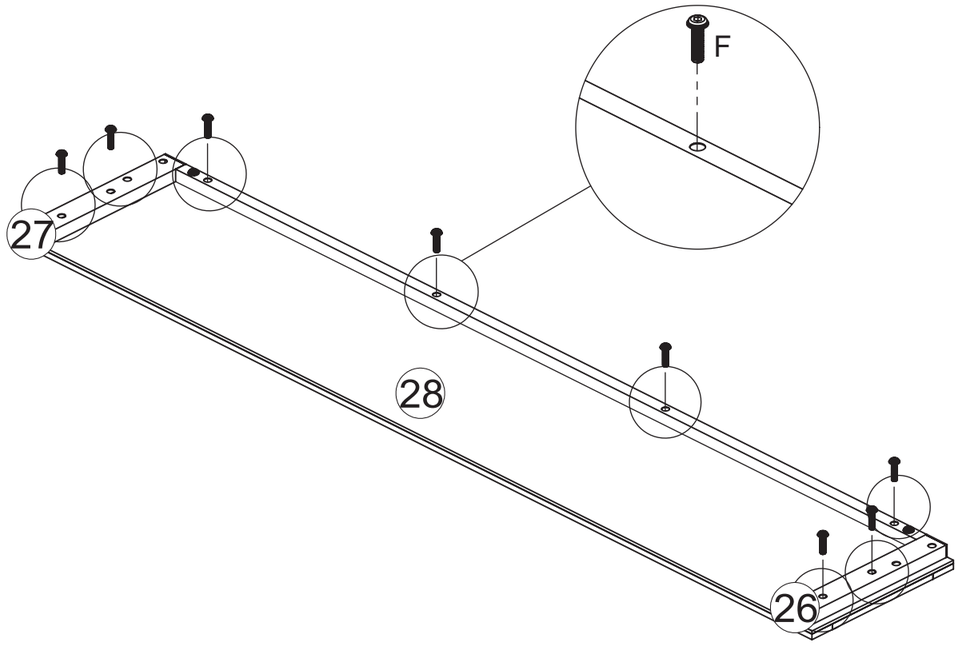15




F	M8x30	8PCS

16

WARNING!

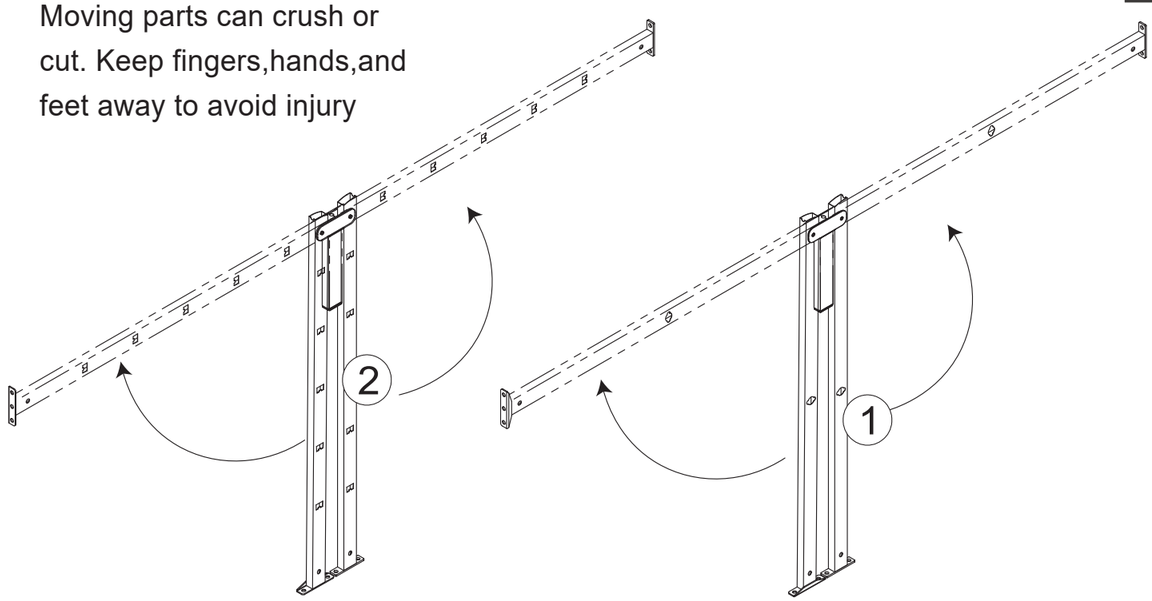Moving parts can crush or cut. Keep fingers,hands,and feet away to avoid injury




17

X2


WARNING!

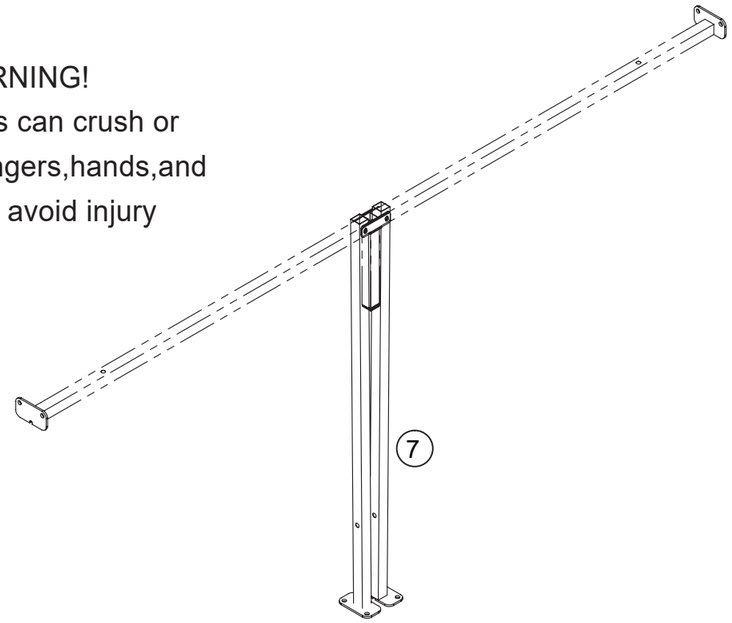Moving parts can crush or cut. Keep fingers,hands,and feet away to avoid injury




18

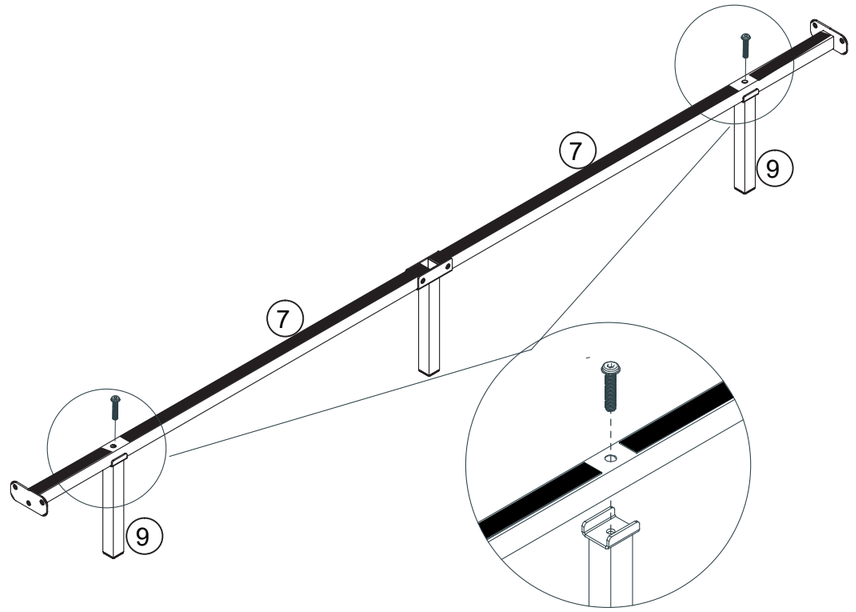X2




G	M8x40	4PCS

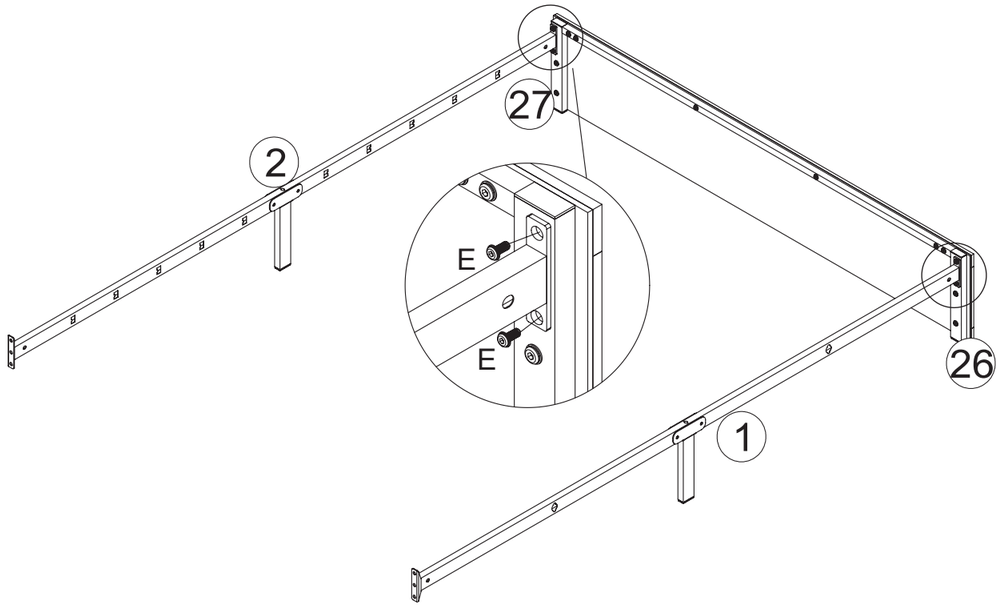
19



E	M8x18	4PCS

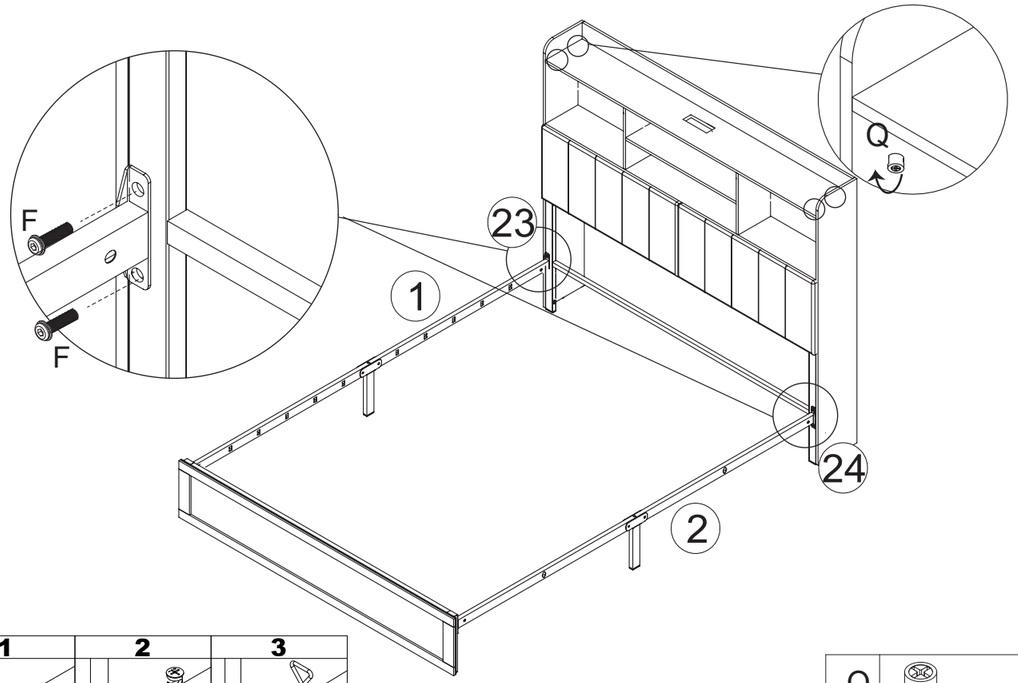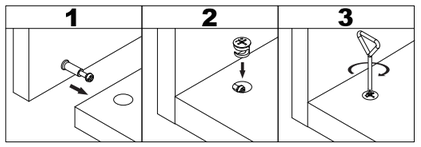
20





Q	φ15x9.5	4 pcs
F	M8x30	4PCS

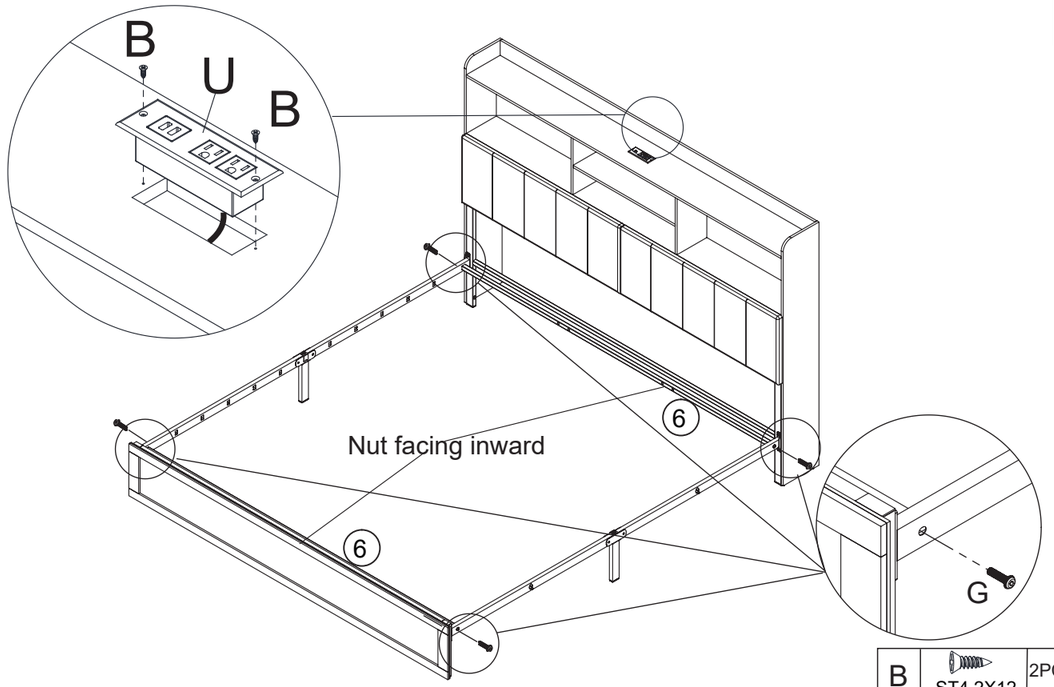
21



B	ST4.2X12	2PCS
G	M8x40	4PCS


Note that the screws in this step can be locked properly!

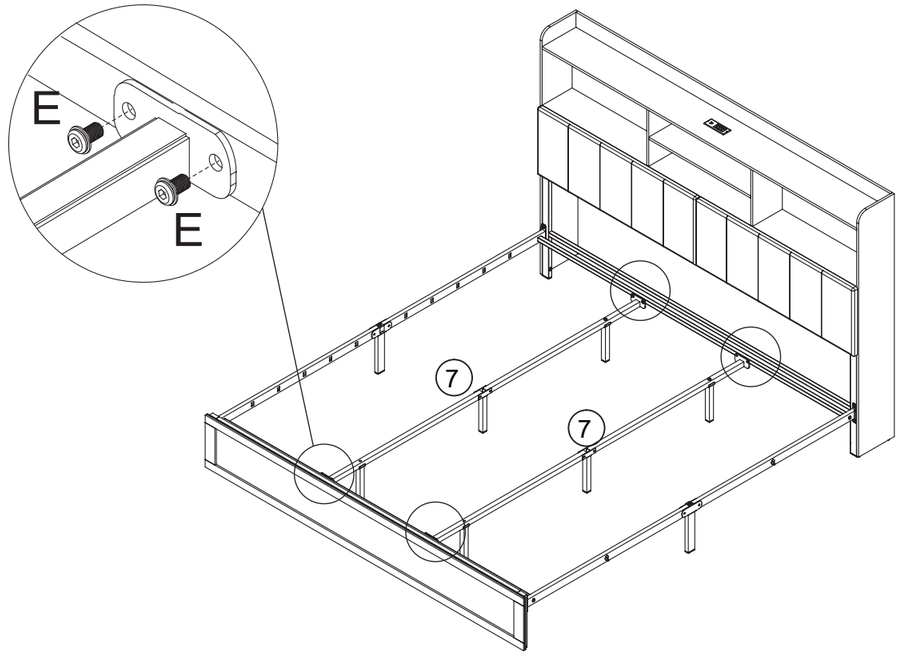22




E	M8x18	8PCS

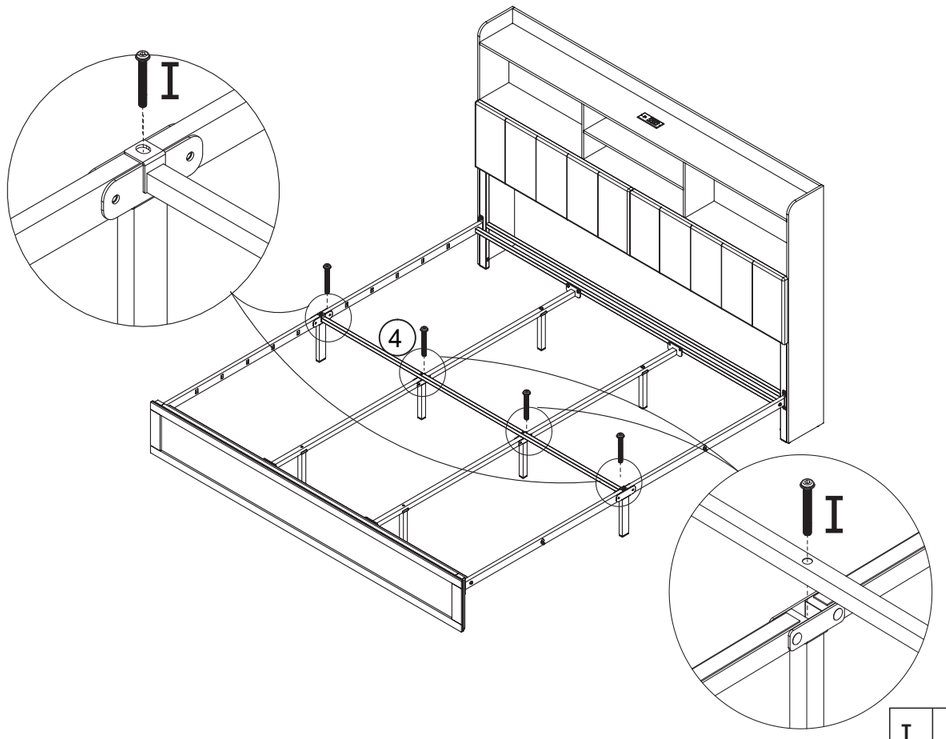23




I	M8x60	4PCS

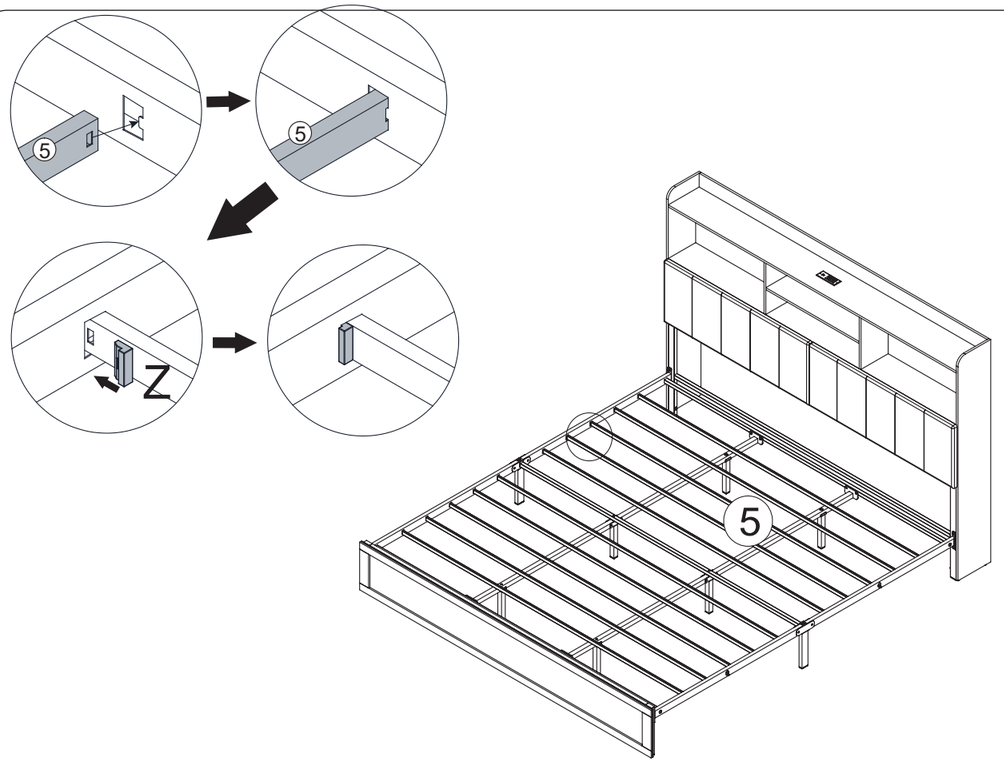24



X4 25

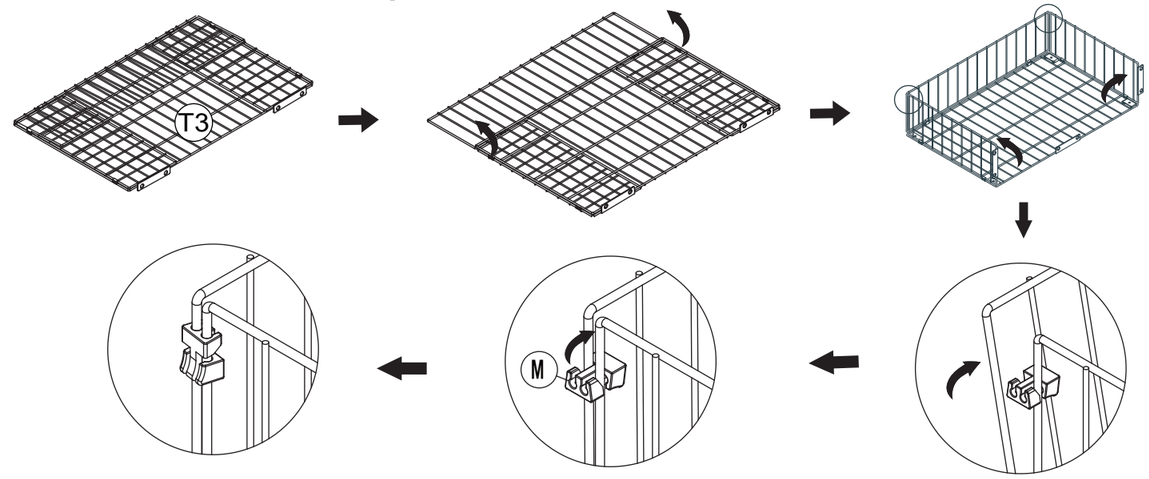
Open the metal frame



rotates part M at 90 degress and
lock the metal frame as shown on the graph

M		8PCS

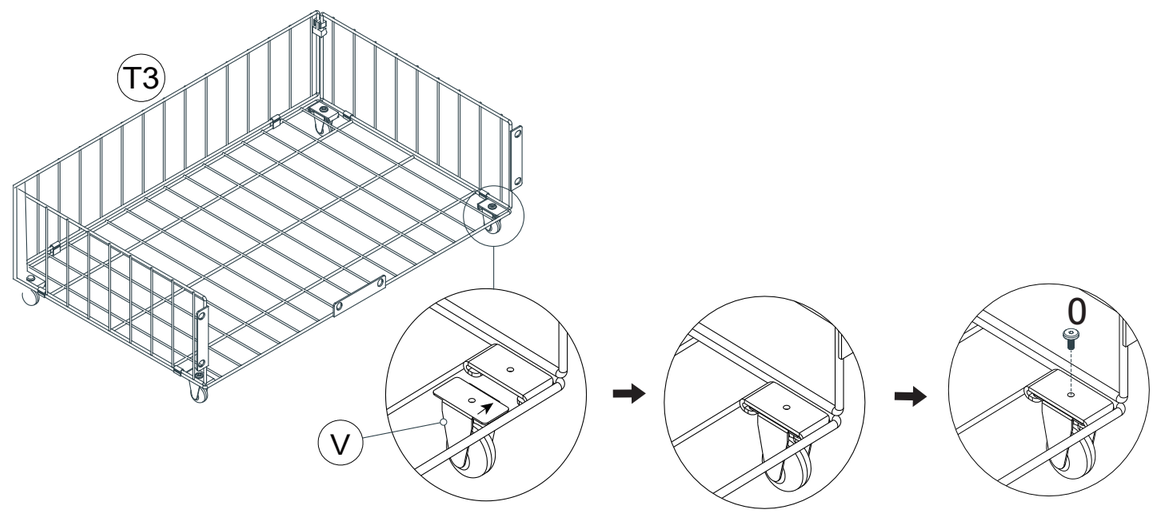
X4 26



O	M4x10	16PCS

27

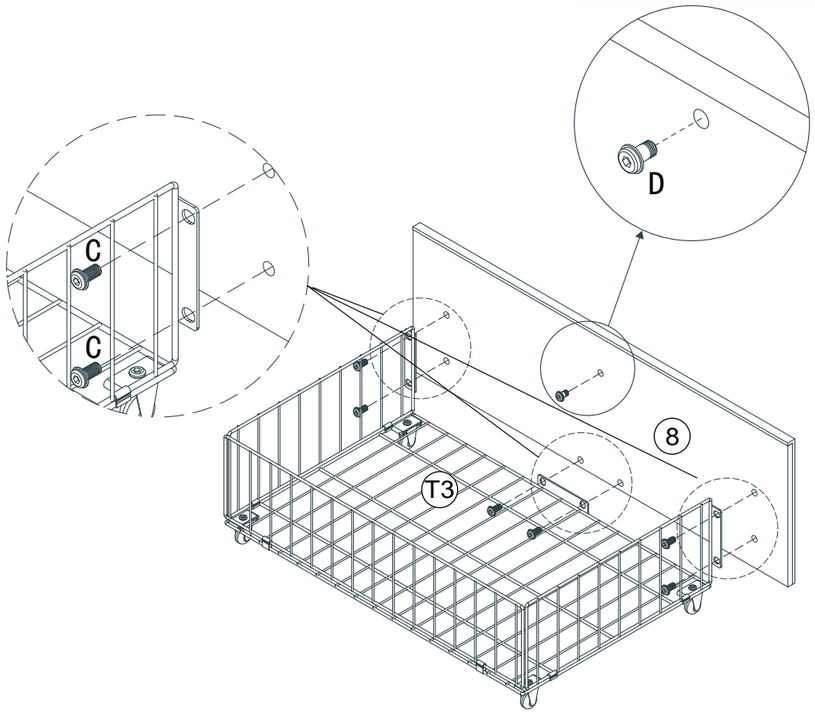
X4




		white zinc	
C	M8x12		24pcs
D	M8x14	Colored Zinc	4pcs

28

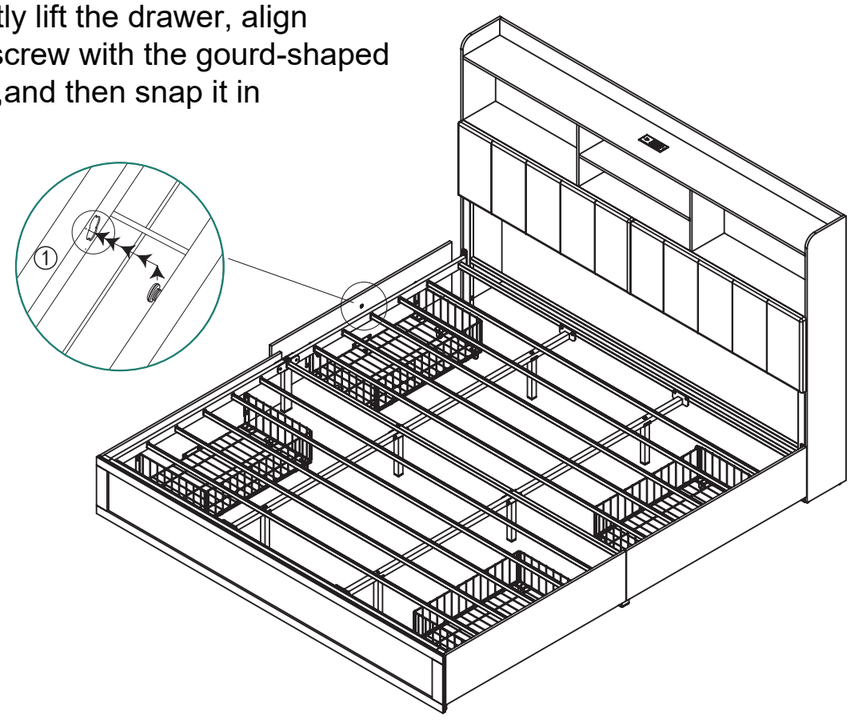
Gently lift the drawer, align the screw with the gourd-shaped hole,and then snap it in



29

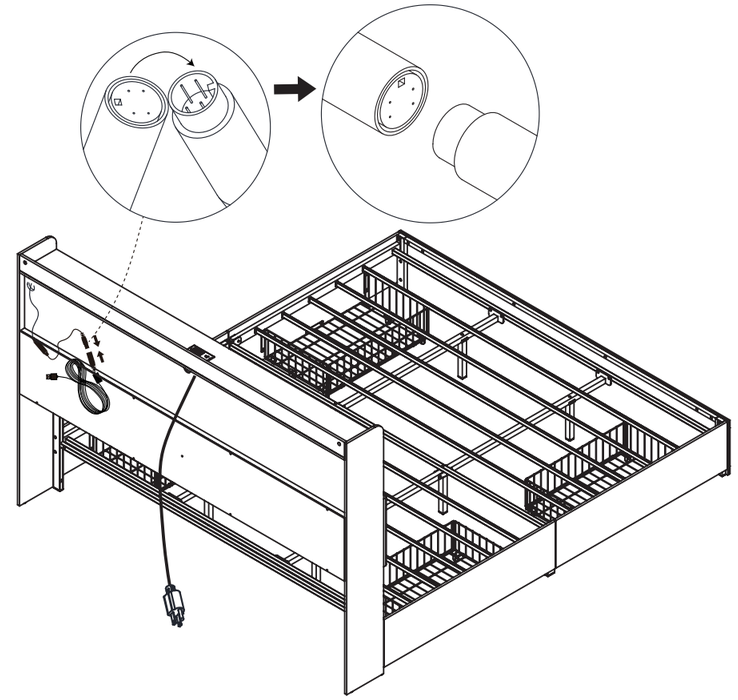

30

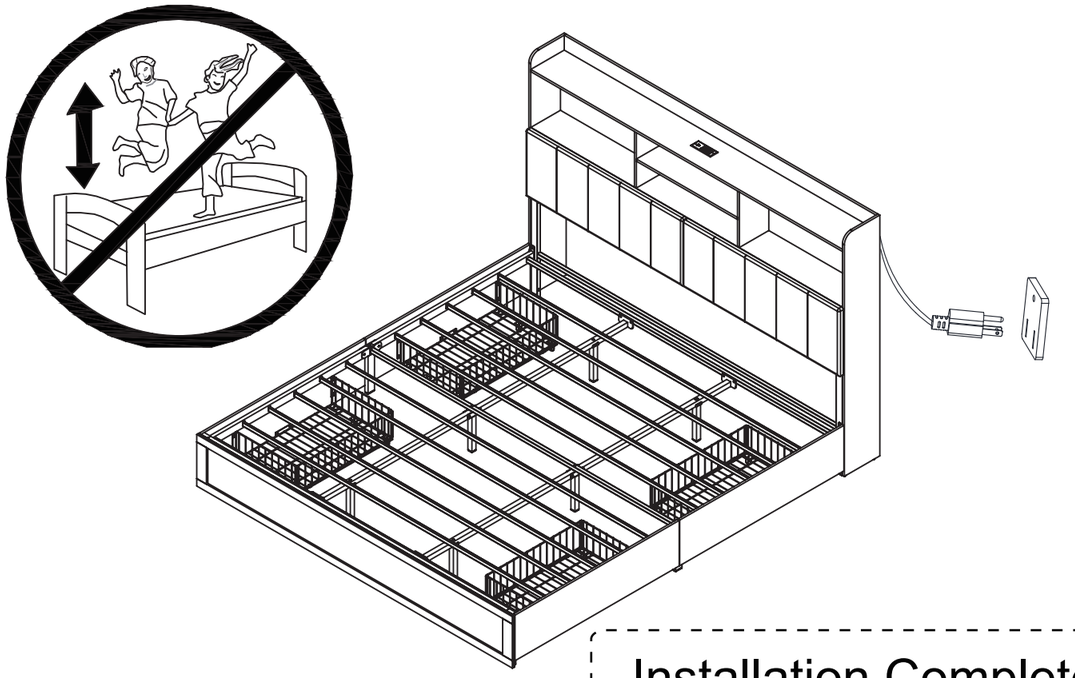

Installation Complete