Lighting


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING:TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.


NOTES:

1. Before installing,consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.
3. Always switch off the electricity supply and allow to cool for 10 minutes before changing the light bulbs.

CHANDELIER

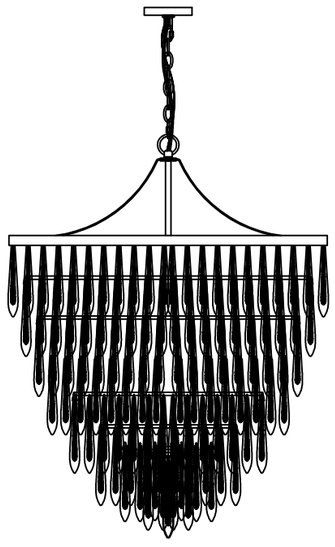

TOOLS REQUIRED

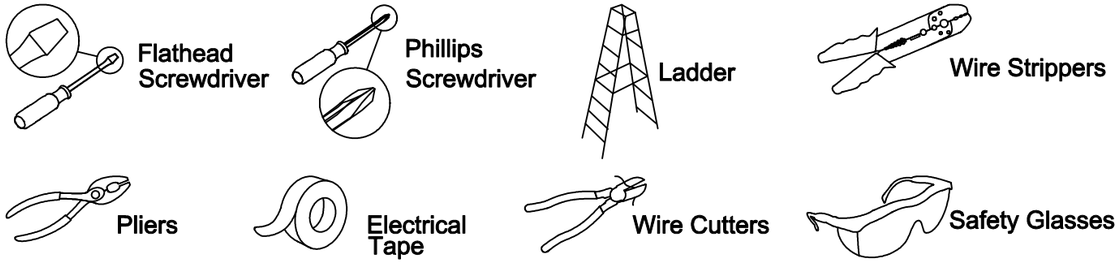

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.When the lamp is not installed finish,please don't throw away the package,so as not to leave the parts in the package.

PART LIST AND HARDWARE LIST

PIECE	DESCRIPTION
A	Crystal
B	Fixture body
C	Threaded rod
D	Tube
E	Countersunk screw
F	Frame
G	Plain washer
H	Rod loop
I	Metal ring
J	Hex nut
K	Plain washer

PIECE	DESCRIPTION
L	Threaded rod
M	Teeth washer
N	Steel cable buckle
O	Steel cable buckle
P	Cluster
Q	Threaded rod
R	Canopy
S	Collar loop
T	Canopy ring
U	Chain
V	Wire nut

INSTALLATION

1. Pass wire and steel wire rope through the frame (F),the plain washer (G),the rod loop (H),the metal ring(I), the Chain (U),Canopy ring (T),Canopy(R), Collar loop(S),threaded rod (Q) and out from side hole of Cluster (P).Attach tube (C) to fixture body(B) and Fix the frame (F) to the fixture body(B) with countersunk screw(E),and attach rod loop (H) to threaded rod(C).Attach the threaded rod (Q) to the Cluster (P).
2. Raise the threaded rod (L) and the teeth washer (M) thread to the cluster (P), then attach to the ceiling, secure with metal washer (K) and hex nut (J). Wrap the steel wire rope around the beam and lock it with the steel cable buckle(N) and (O).Then fix Collar loop (S) to the threaded rod (Q).
3. Attach the supply circuit ground wire (green or bare copper wire) to the the fixture ground wire,black to (smooth) and white to (ribbed).
4. Attach the end of the chain (U) to the rod loop (H) and attach the other end of the chain (U) to Collar loop (S) with chain link (U1).
5. Attach the canopy (R) through the collar loop (S) to the junction box with canopy ring (T).
6. Install the 60W MAX type B10 bulbs (not included) into each socket.
7. Install crystal (A) to fixture body (B) from bottom to up.
8.Install the metal ring(I) to the fixture body(B).

