
260808

Assembly Instruction

US-CBN279A

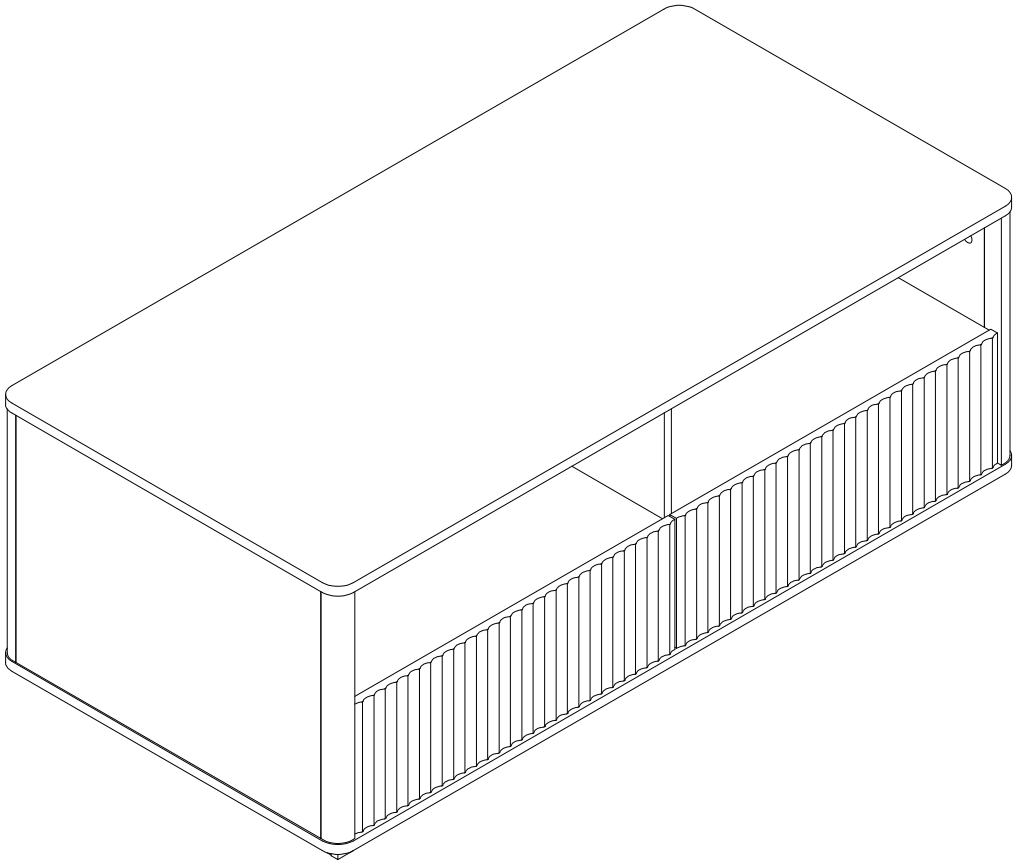

EN

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Keep this manual for future reference. If the product is transferred to another owner, please pass this manual along with it.
- This summary may not include every detail of all variations and assembly steps. If you need further information or assistance, please contact us.


Notes

- For indoor use only. This product must be assembled and used according to this manual. Personal injury or product damage may occur if the product is used for unintended purposes or altered from its original design. We are not responsible for injury or damage caused by incorrect assembly, misuse, or unauthorized modifications.
- Avoid prolonged exposure to moisture or damp environments to help prevent mildew.
- Keep the product away from open flames, heat sources, and direct sunlight.
- Do not place hot items directly on the product surface.
- If any parts are missing or damaged, stop assembly immediately and contact us.
- Assemble the item on a clean, soft, flat surface. Do not place unprotected parts directly on the floor to avoid damage.
- Do not stand or sit on the panels.
- Wear gloves during assembly or disassembly to help protect your hands from sharp edges.
- Match each part and piece of hardware with the part numbers shown in this manual.
- If the part does not match the fitting, please check the piece as specified in this manual.
- During assembly, loosely install all screws into the corresponding pre-drilled holes first, then tighten them one by one.
- Periodically check that all screws remain tight during use. Retighten if needed to maintain structural stability.
- If water or other liquid is spilled on the surface, wipe it clean immediately with a dry cloth.
- Keep the product away from sharp objects and corrosive substances to prevent damage.
- Place the item on a level, stable surface during use.


Warnings

- During assembly, keep all small parts out of the reach of children. Small parts may be fatal if swallowed or inhaled.
- Children should not climb on or play with the product to avoid tipping over the furniture and causing serious injury.
- To avoid the risk of suffocation, keep all packaging materials, including plastic bags, film, and foam, away from babies and children.
- Do not use or store sharp objects near the product to prevent injury.
- Do not shake or move the product violently during use, as this may cause it to tip over.


Parts List(EN)

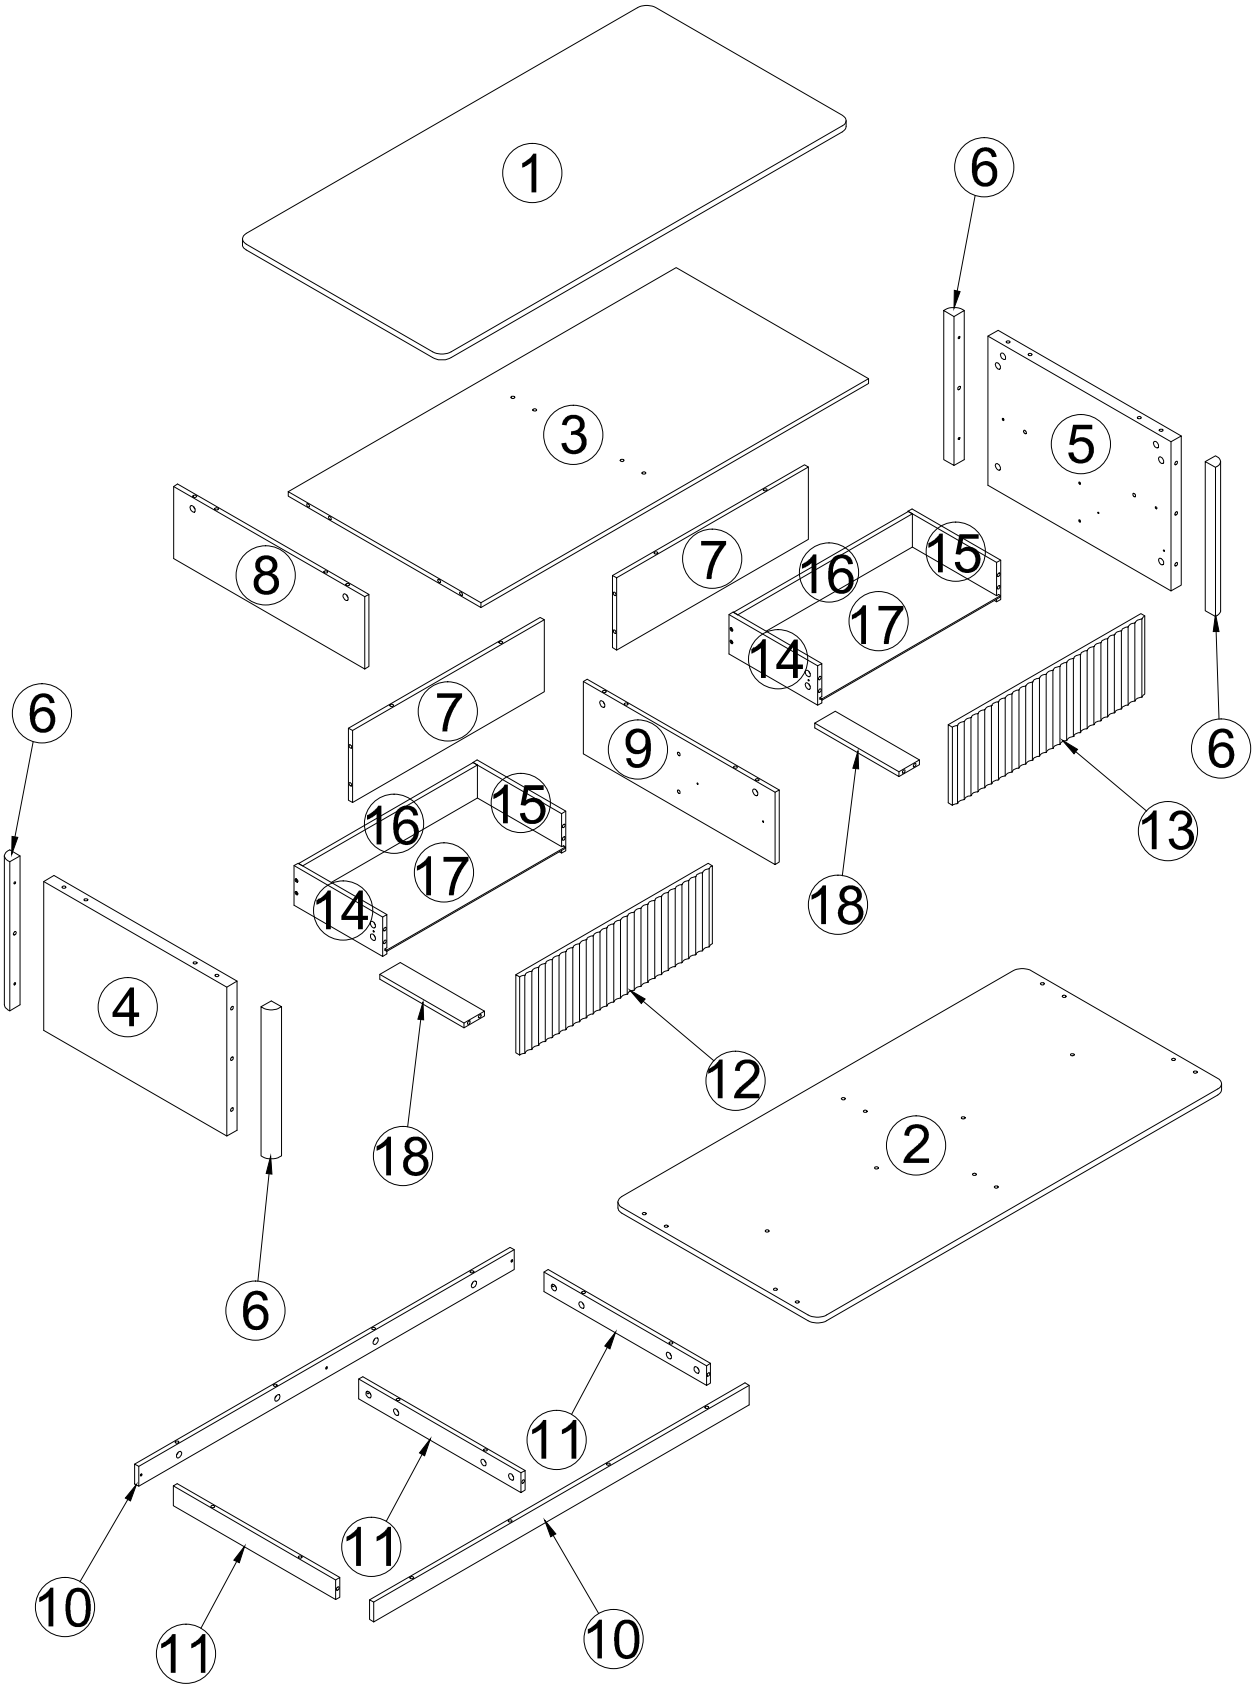


Parts List(EN)

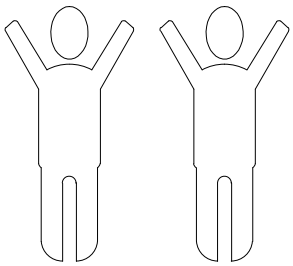


It takes two people to work together to assemble the product.

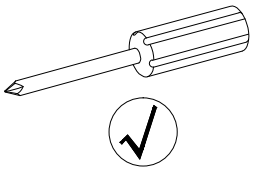


Recommended to use a screwdriver to assemble the product

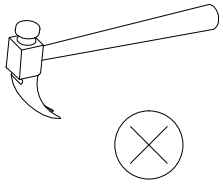



Do not use a hammer, it might damage the board.

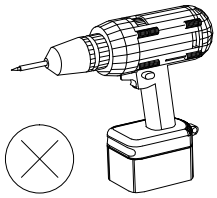


The use of an electric wrench is not recommended.If used, please set the torque to the minimum.


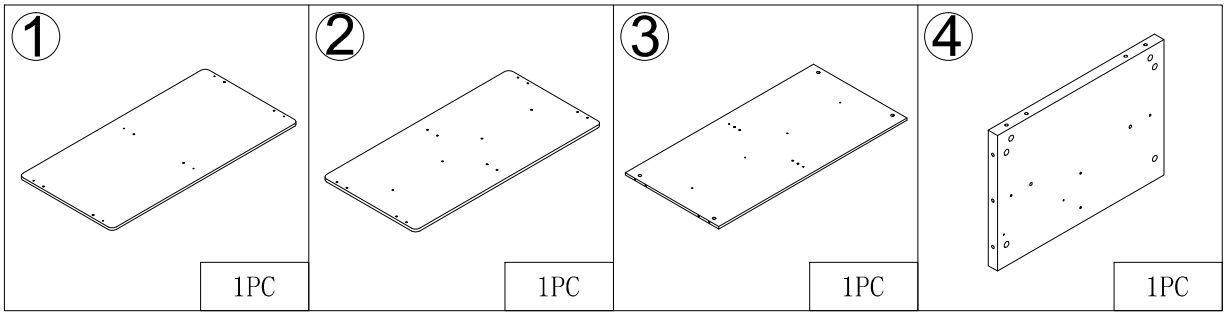


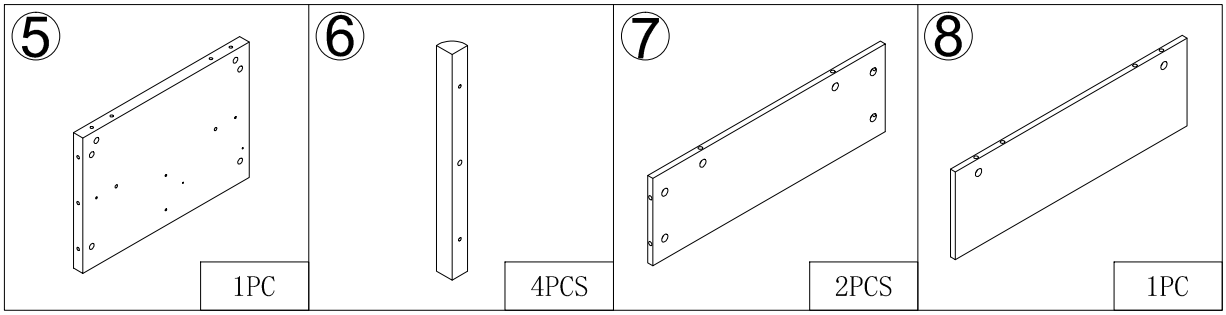








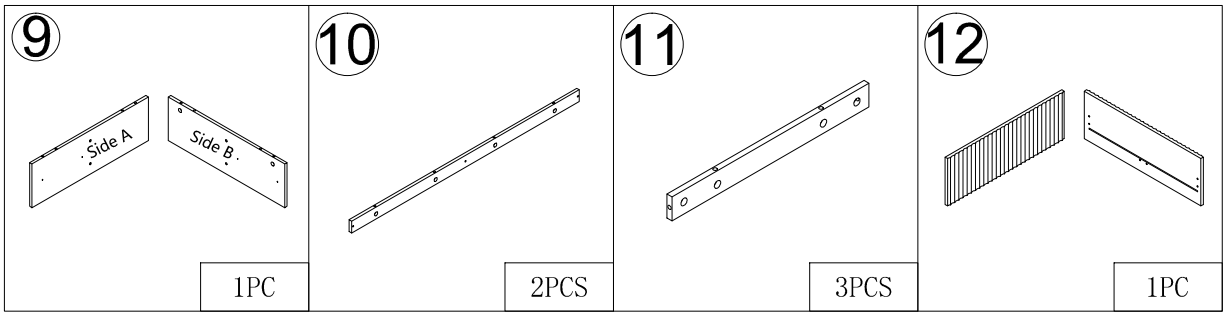


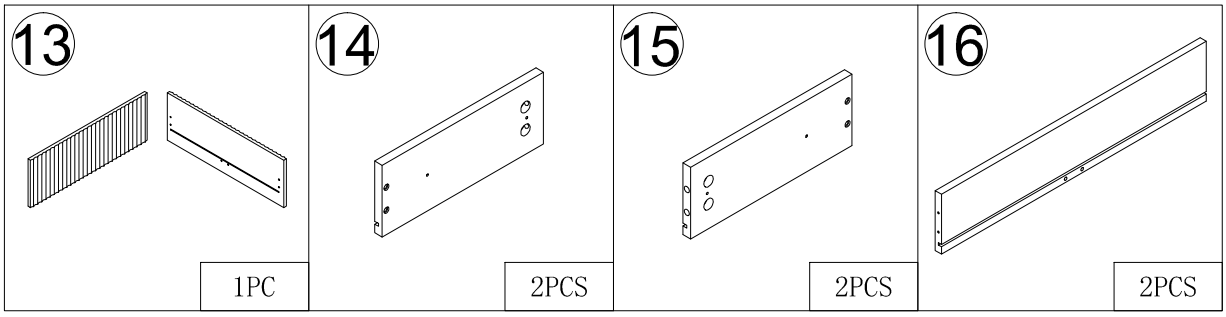


Parts List(EN)

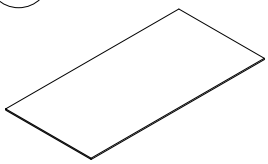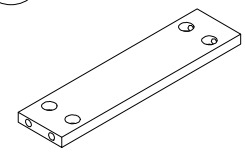17  2PCS	18  2PCS		

Parts List(EN)

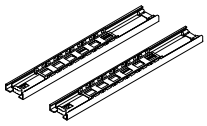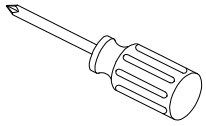No. A Quantity:64+4 pcs Cam Lock Dowel 8*28mm 	No. B Quantity:68+4 pcs Cam φ15 	No. C Quantity:32+3 pcs Sticker Ø20 	No. D Quantity:24+2 pcs Dowel 8*30mm 
No. E Quantity:2 sets Drawer Slider 10" 	No. F Quantity:16+1 pcs Screw M3.5*12mm 	No. G Quantity:8+1 pcs Screw M4*30mm 	No. H Quantity:2+1 pcs Double-ended rod 5*68mm 
No. I Quantity:6+1 pcs Foot Pad Ø12 	No. J Quantity:12+1 pcs Screw M6*40mm 	No. K Quantity:1 pc Allen Key 4# 	No. L Quantity:1 pc Screwdriver 

Instructions for Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required

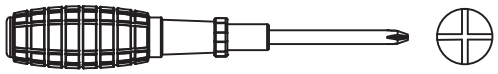


INSERTING AND TIGHTENING CAM-BOLT

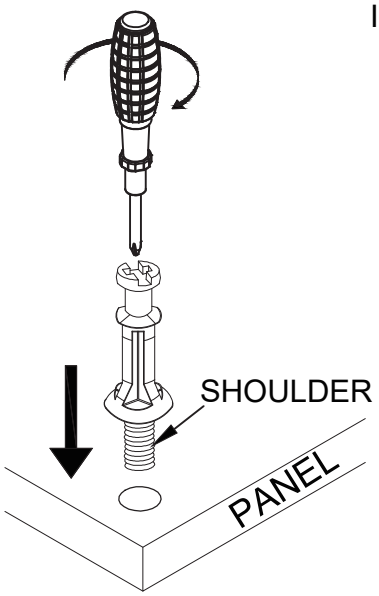

Place Cam-bolt on pre-drilled hole and screw in vertically

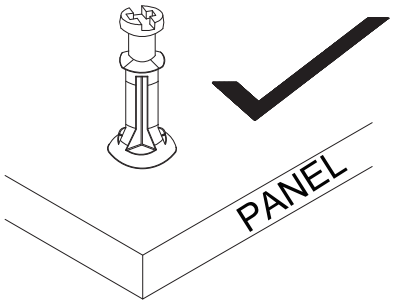


The shoulder is flush with the panel.

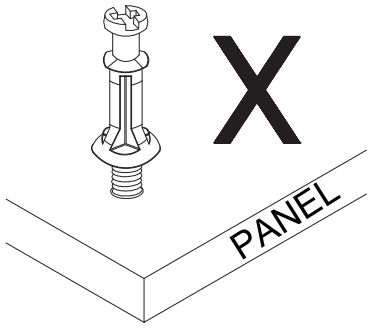


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips screwdriver to screw the CAM-BOLT in vertically until the shoulder is flush with the panel.

INSERTING CAM-LOCK

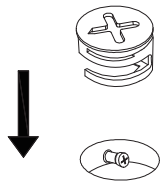


Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.

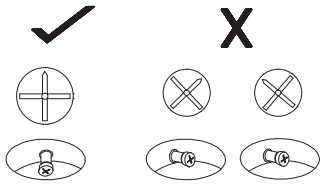

CORRECT WRONG


Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.

TIGHTENING CAM-LOCK

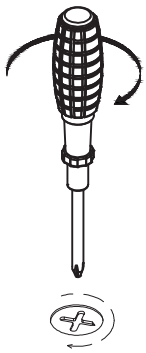



Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4 of a turn) -- over-tightening could damage the Cam-lock and/or Cam-bolt.


STEP 1

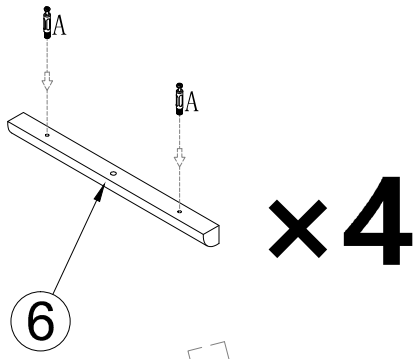


×4

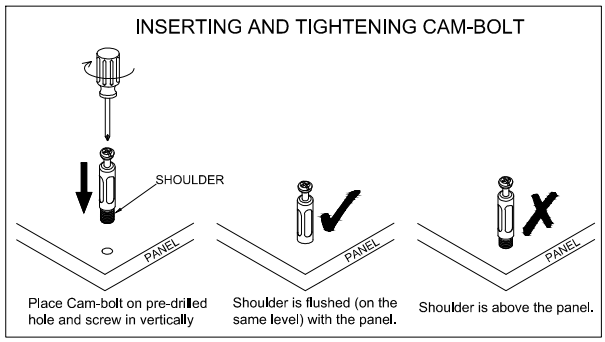


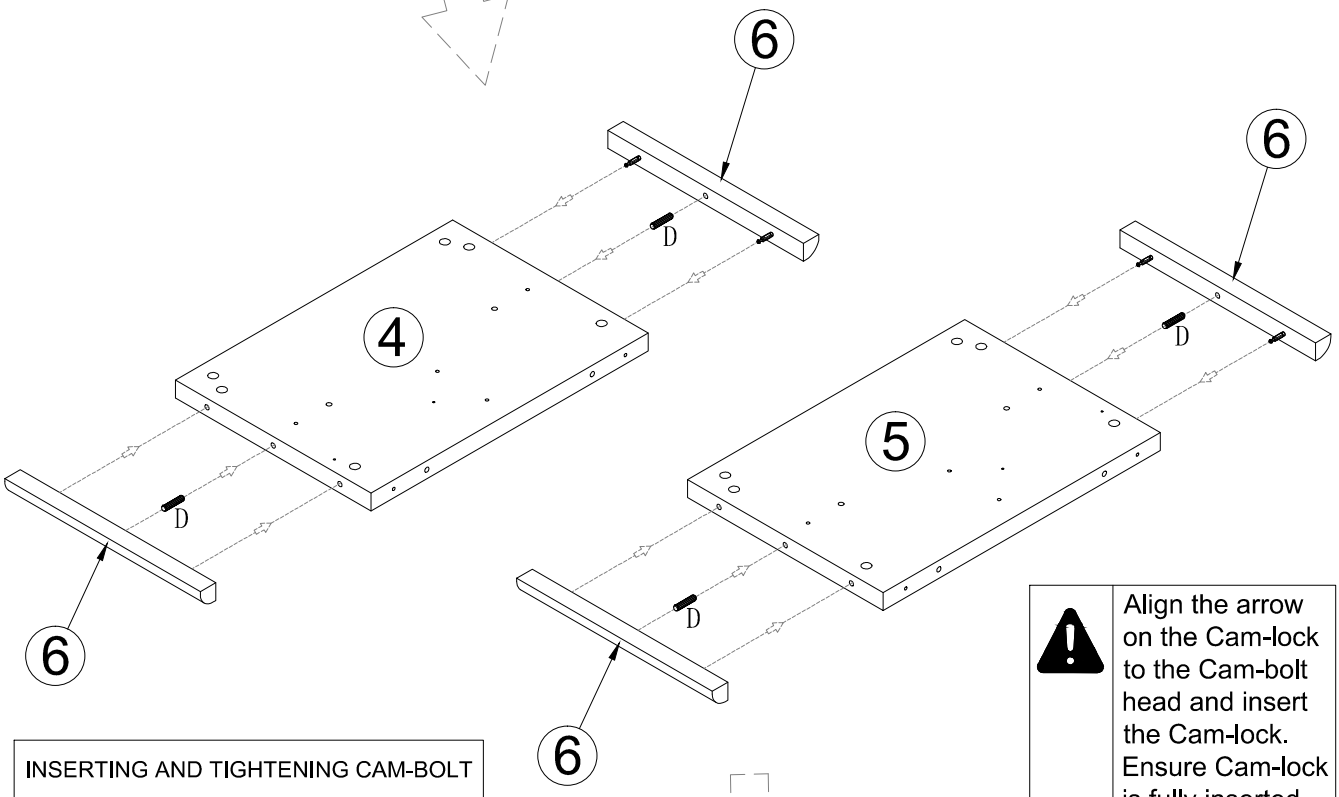

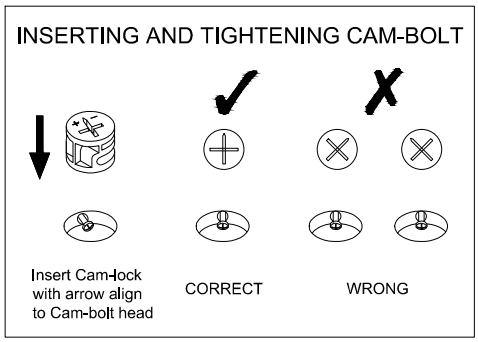

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

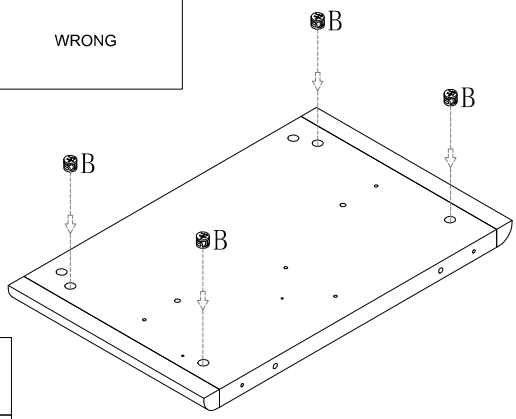

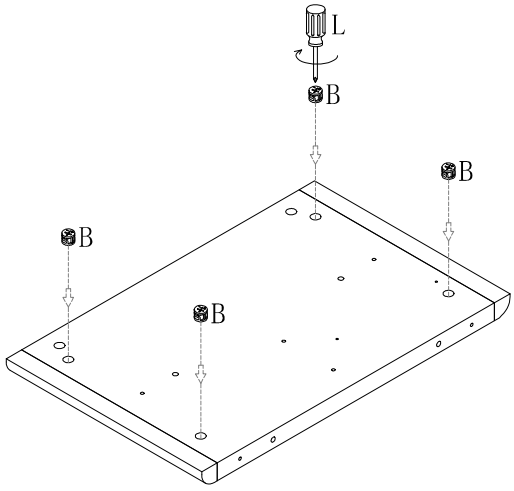


	A×8PCS
	B×8PCS
	D×4PCS

STEP 2

Before Assembly


Tips Before Your Start


How to separate the drawer slider：

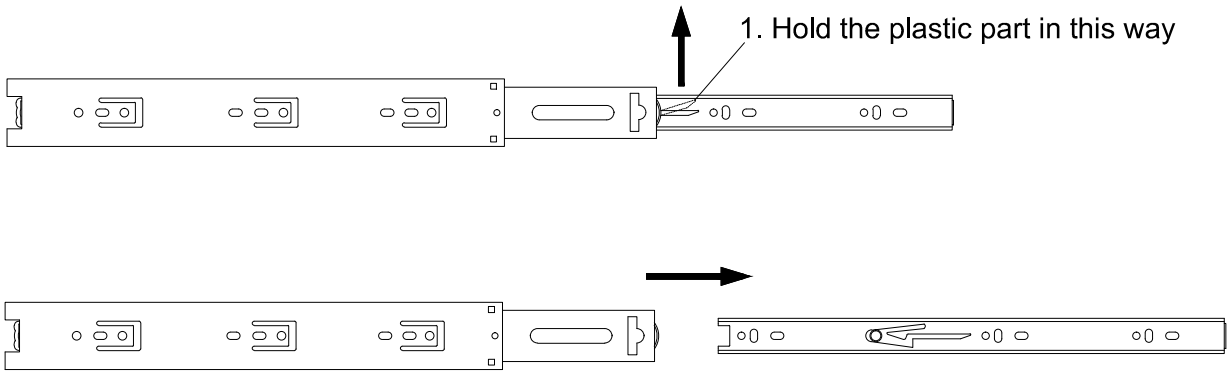


2. Pull out the inner slider for drawer box fixing


STEP 3

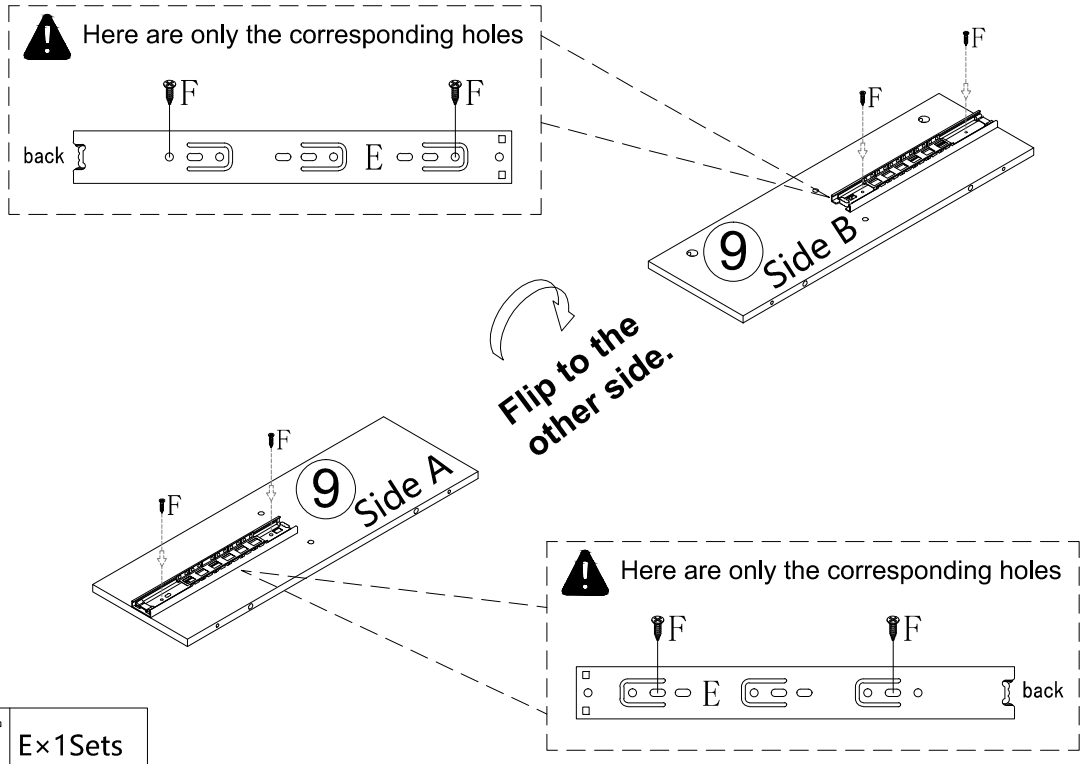



	E×1Sets
	F×4PCS


STEP 4

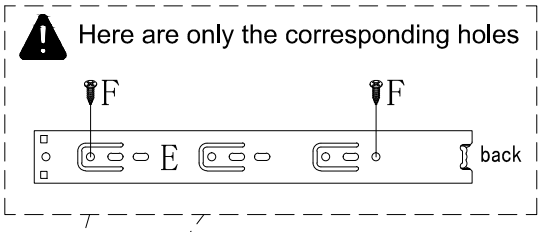

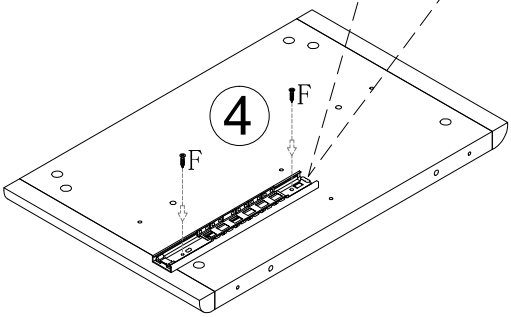


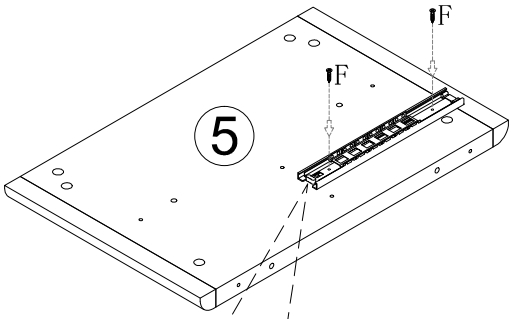


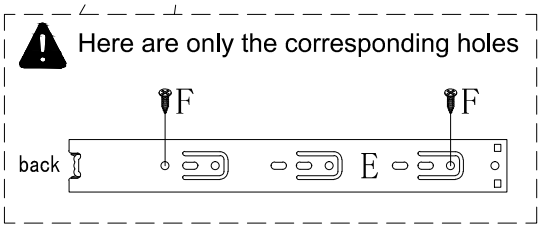


	E×1Sets
	F×4PCS

STEP 5

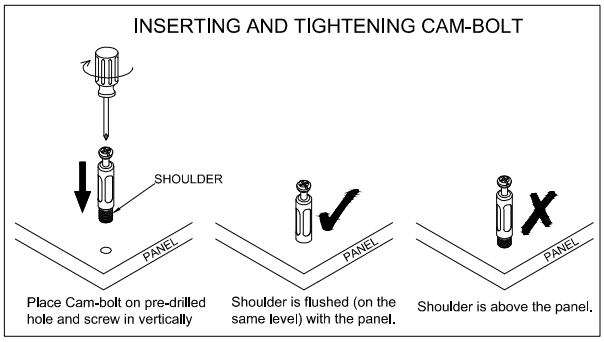


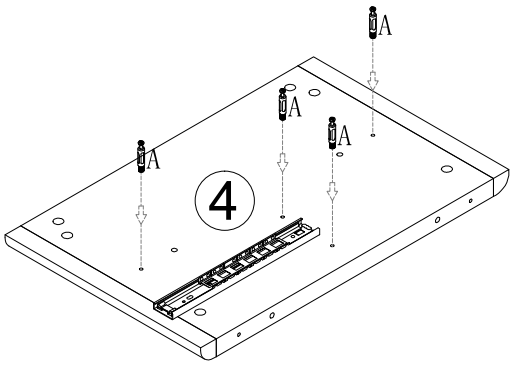


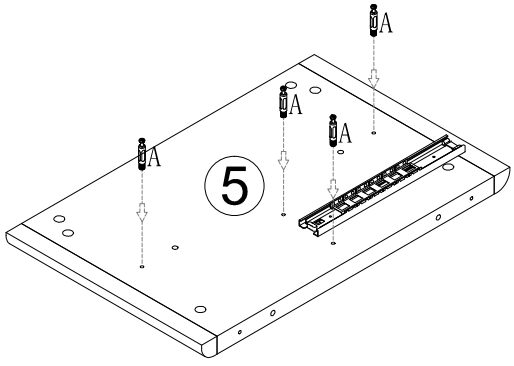



	A×8PCS



STEP 6

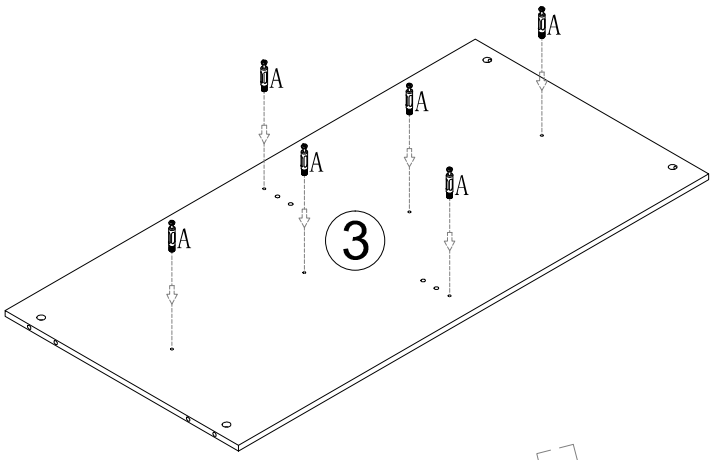

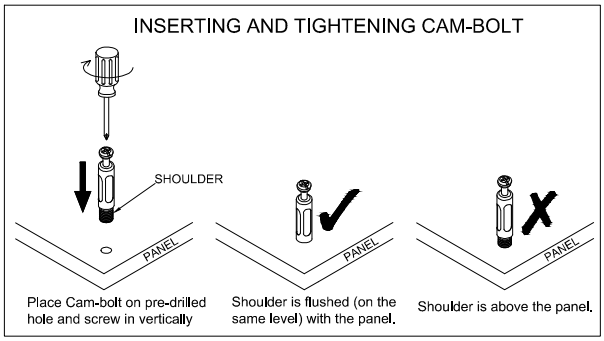


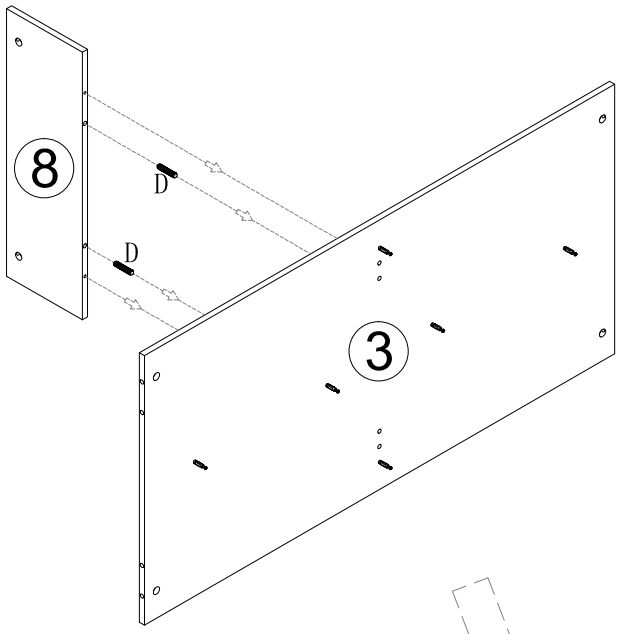

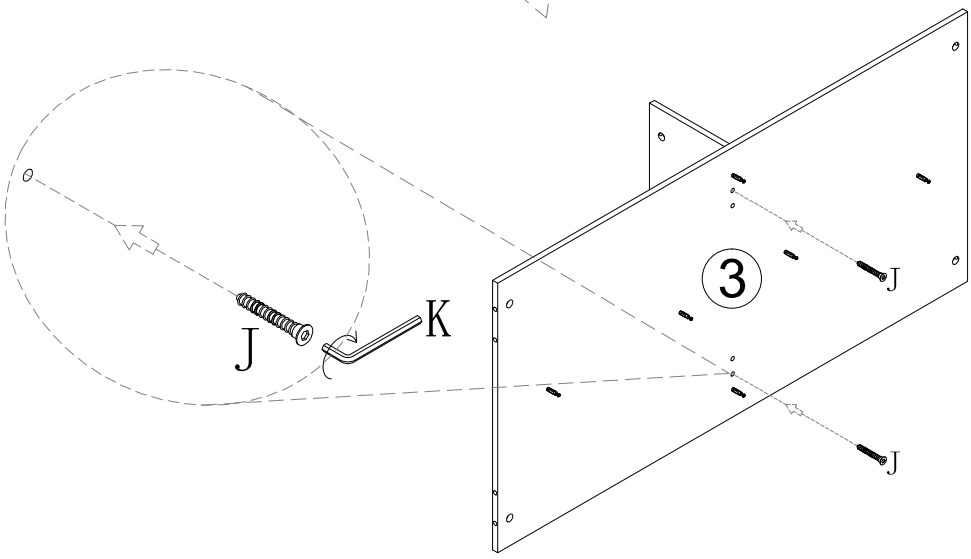

	A×6PCS
	D×2PCS
	J×2PCS
	K×1PC


STEP 7

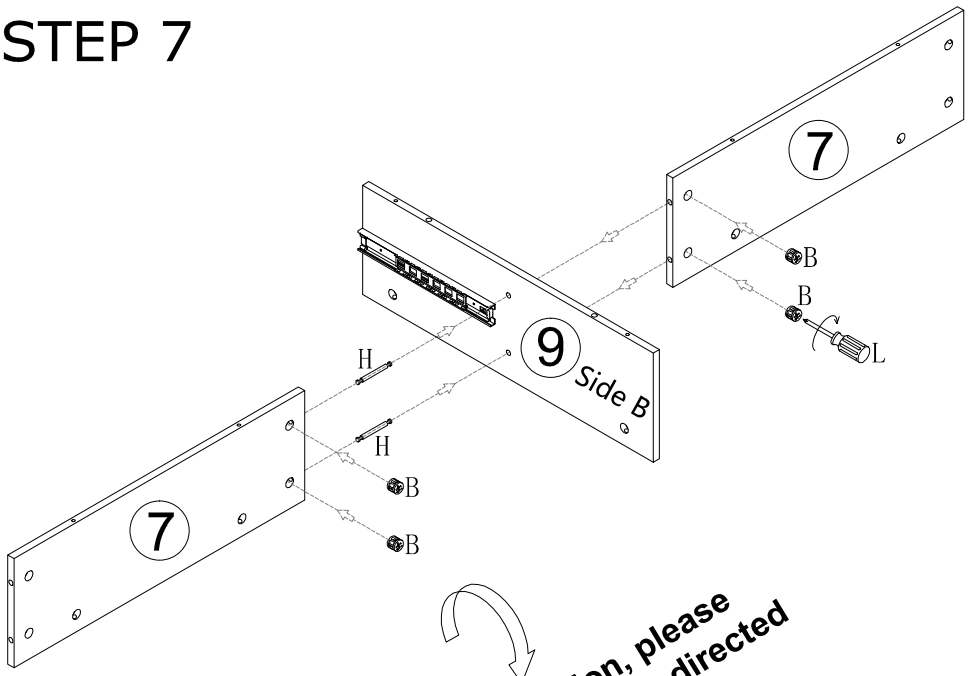



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.



After installation, please stand it upright as directed for the following steps.

This step requires two people, or more people together, to install.

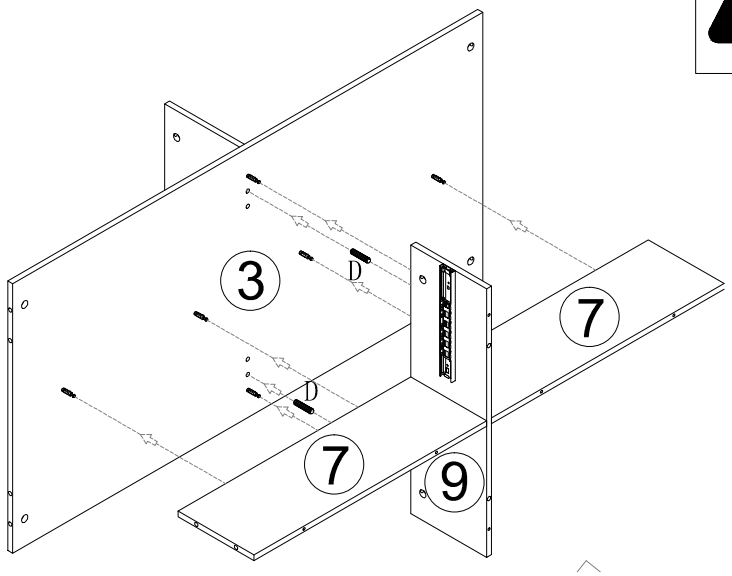


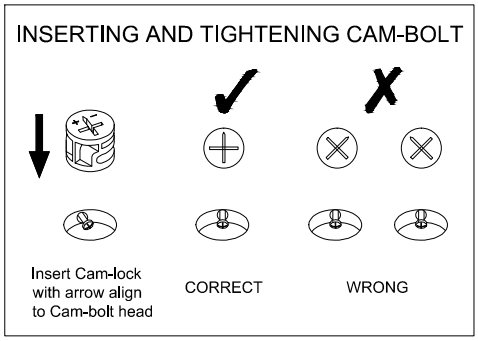

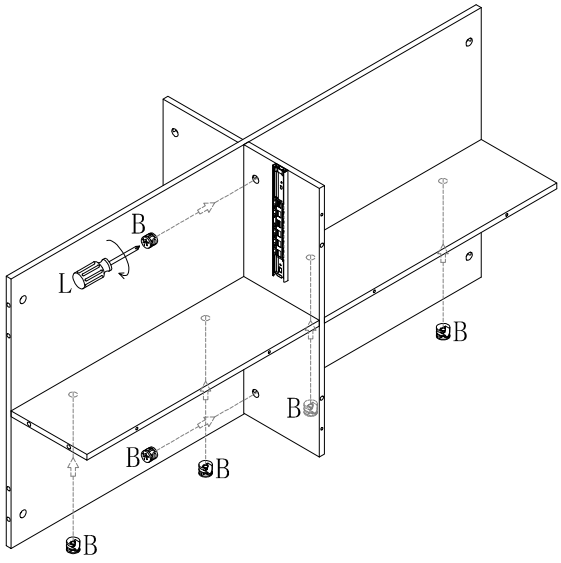


	B×10PCS
	D×2PCS
	H×2PCS


STEP 8

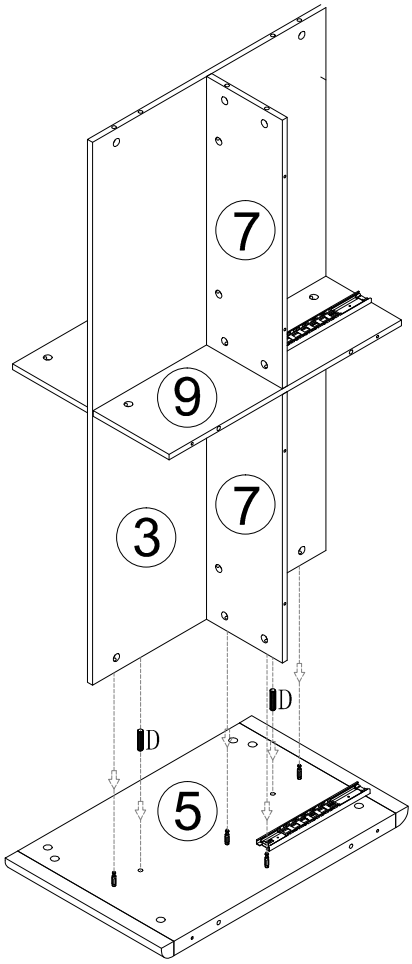

This step requires two people, or more people together, to install.


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

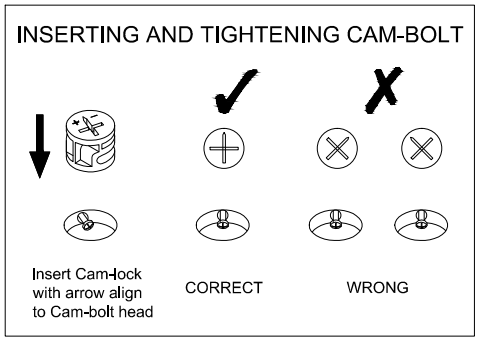

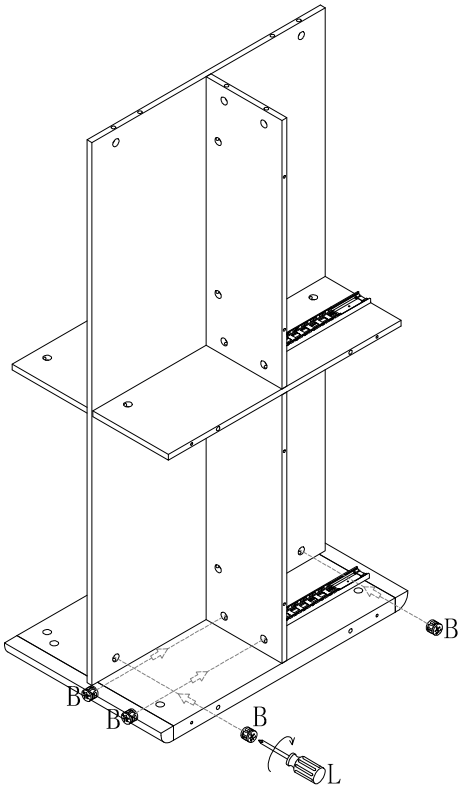



	B×4PCS
	D×2PCS

STEP 9

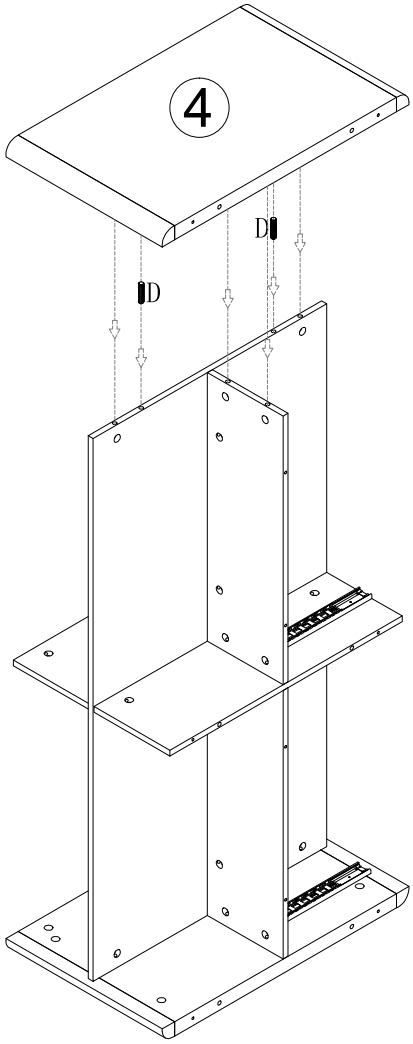


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

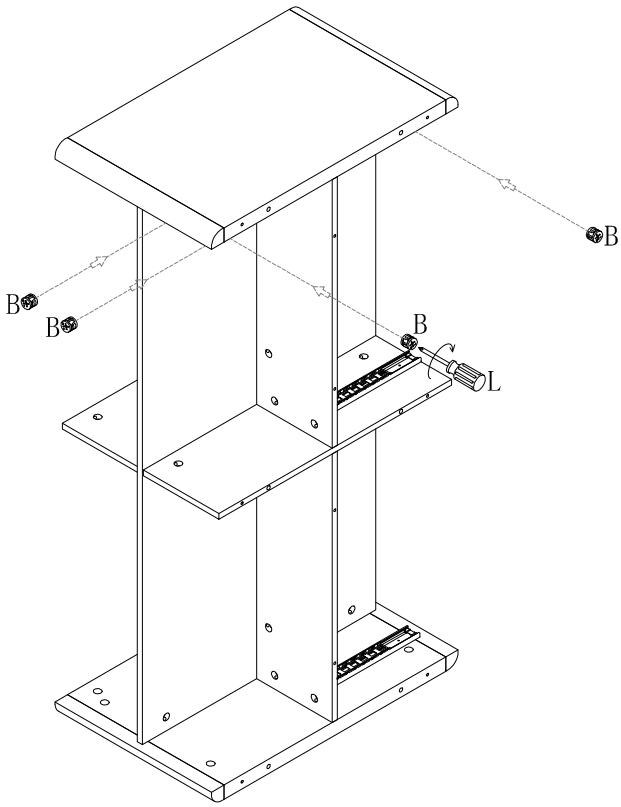


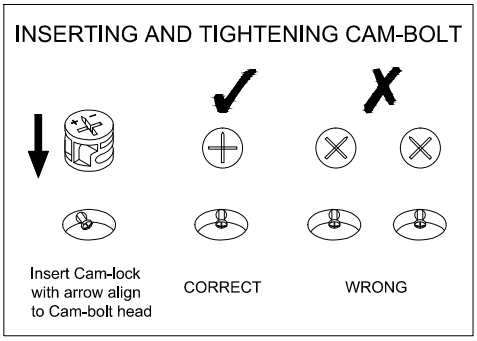



	B×4PCS
	D×2PCS


STEP 10

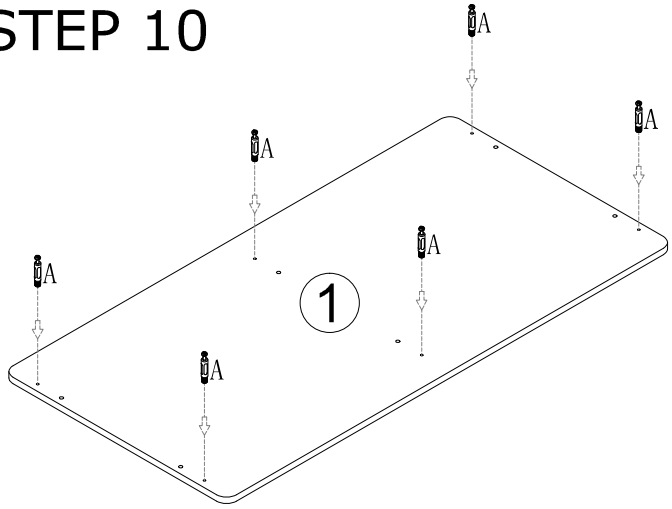

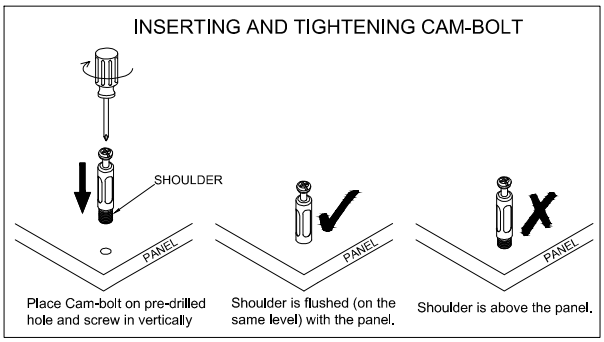

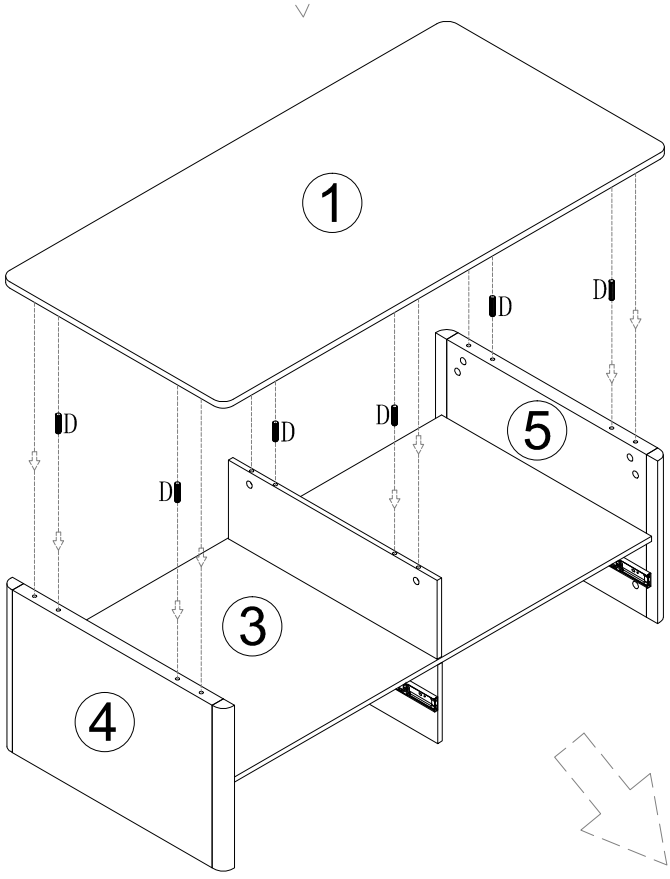

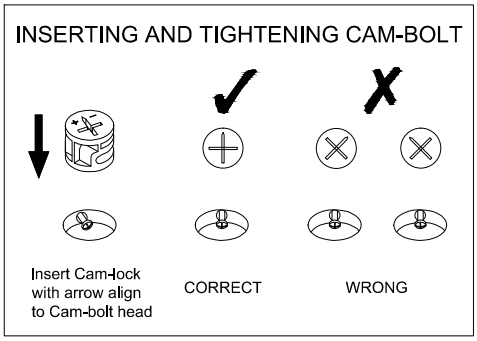

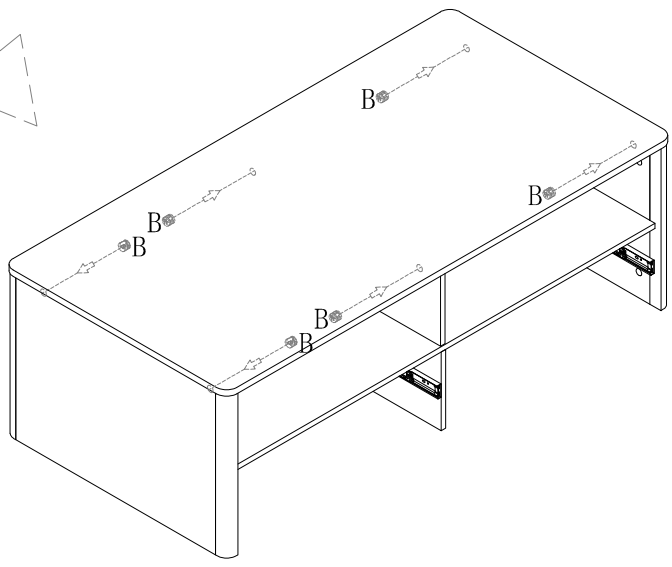



	A×6PCS
	B×6PCS
	D×6PCS


⚠	Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


STEP 11


Note: This board has holes on both sides, so make sure to tell them apart.

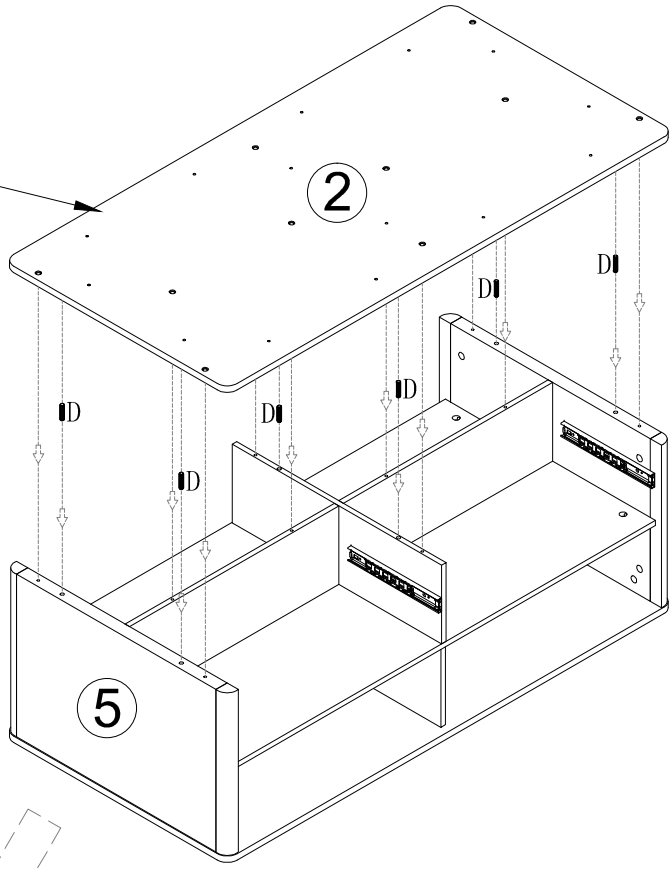

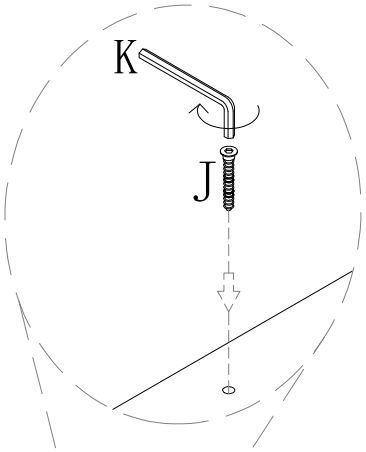

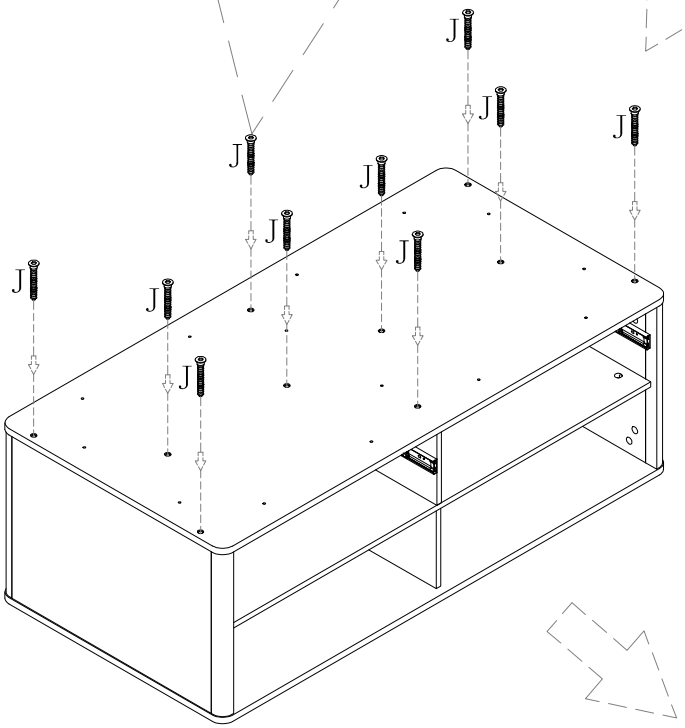


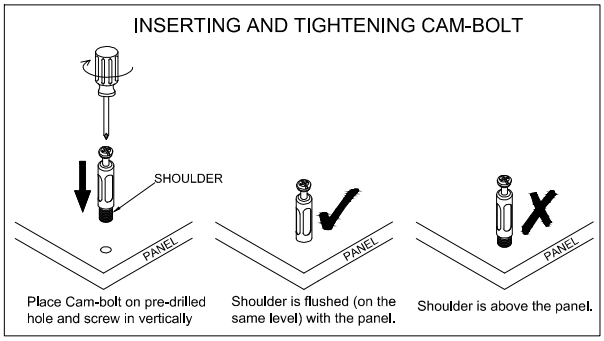


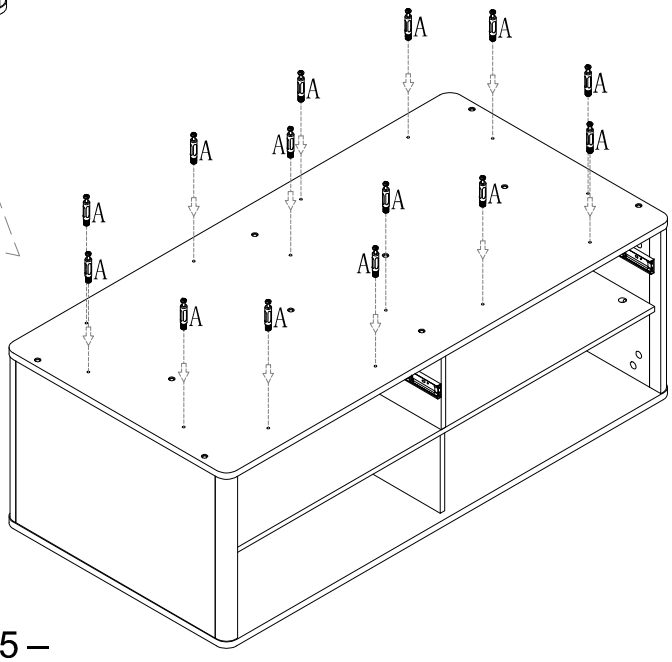


	A×14PCS
	D×6PCS
	J×10PCS
	K×1PC

STEP 12

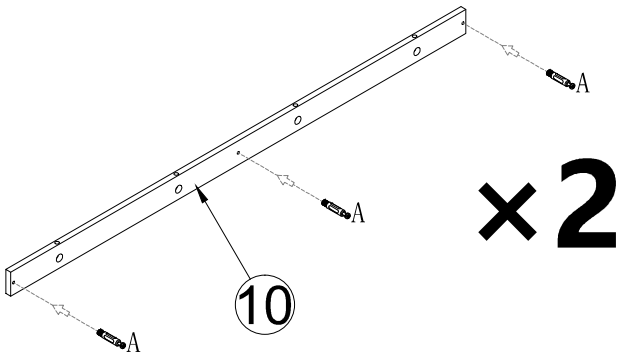


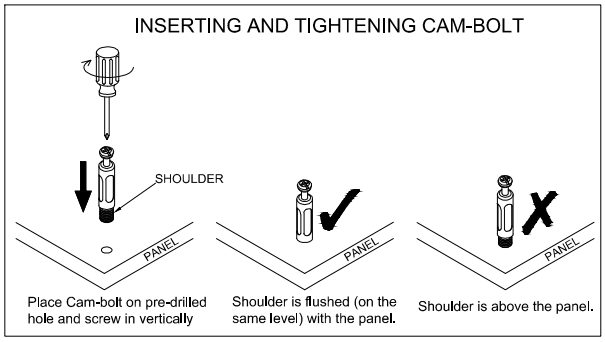


Please note that during installation, the guide hole should be installed facing upwards.

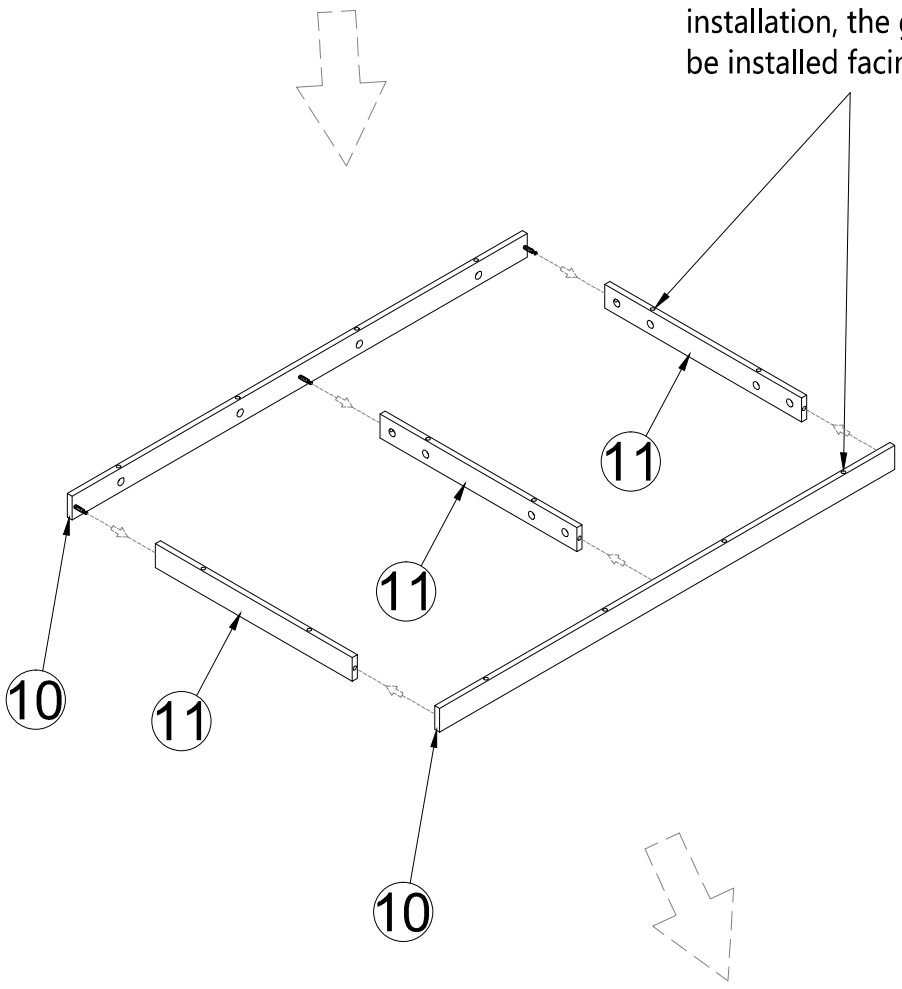


⚠	Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

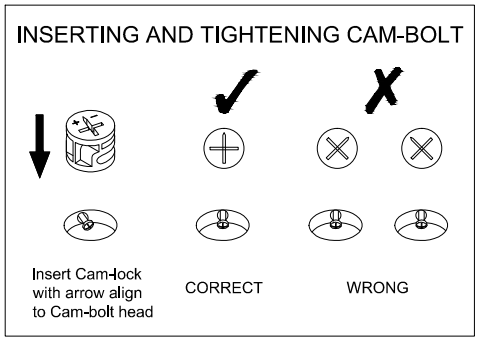

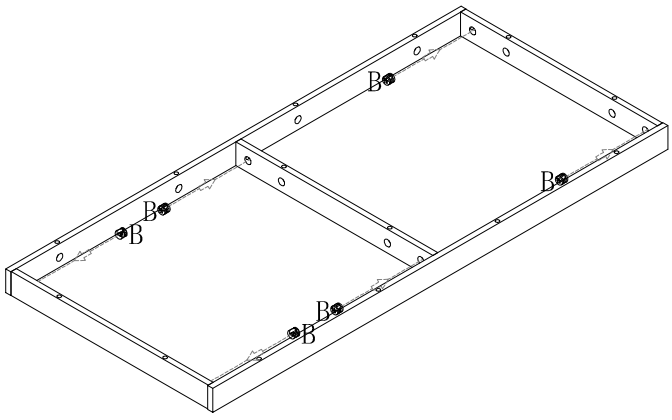


	A×6PCS
	B×6PCS


STEP 13

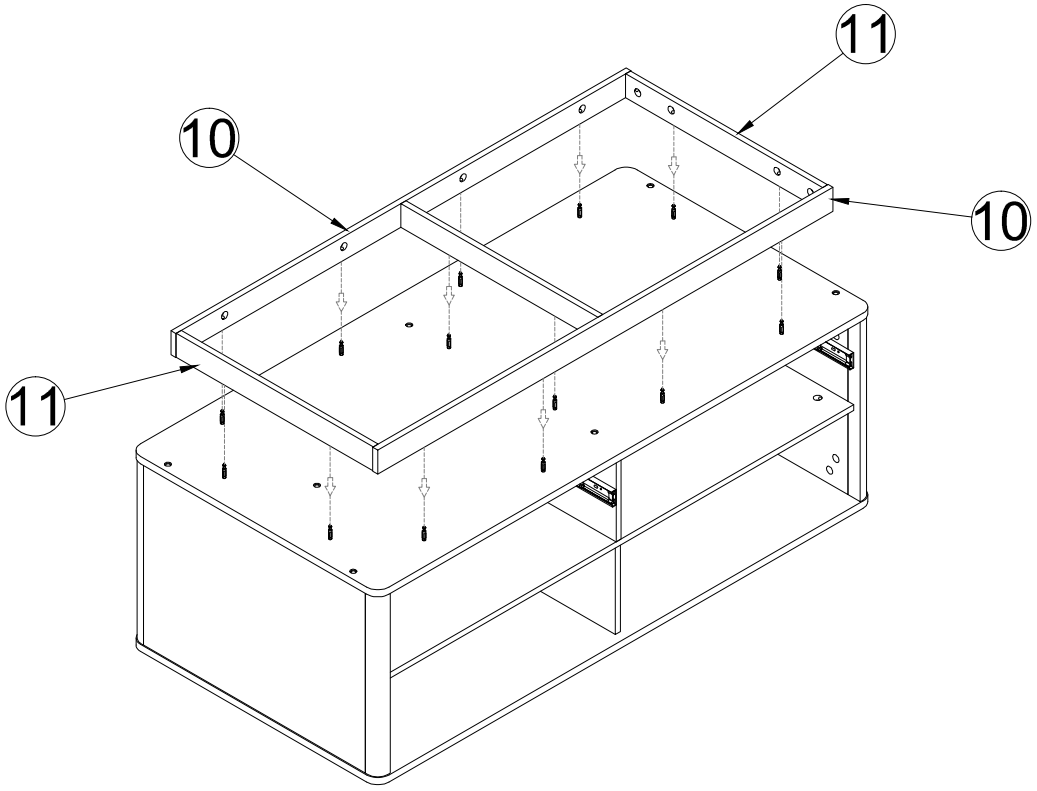




	Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

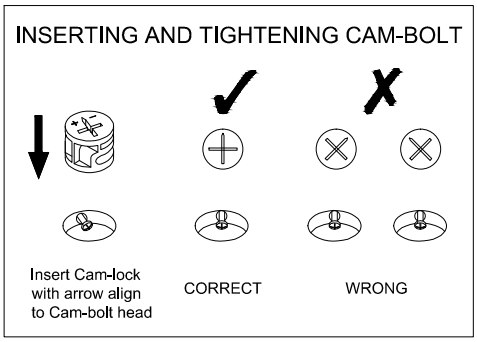

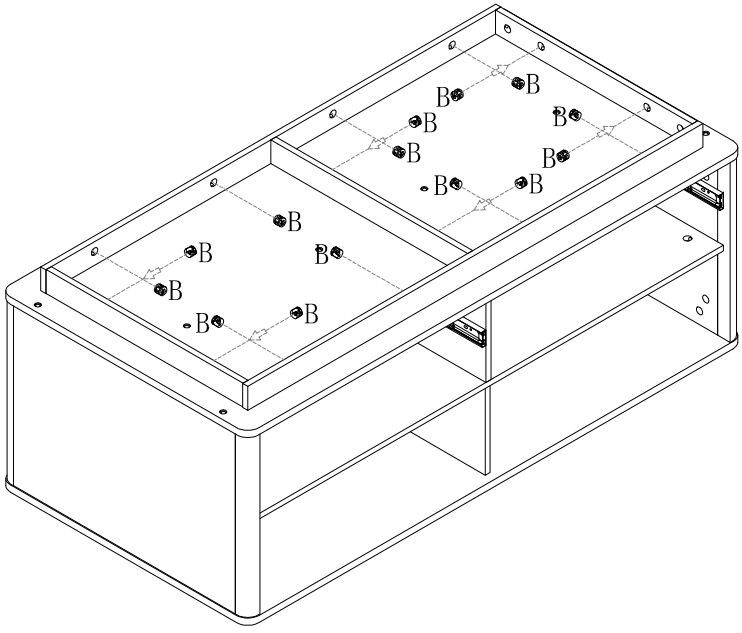


	B×14PCS

STEP 14

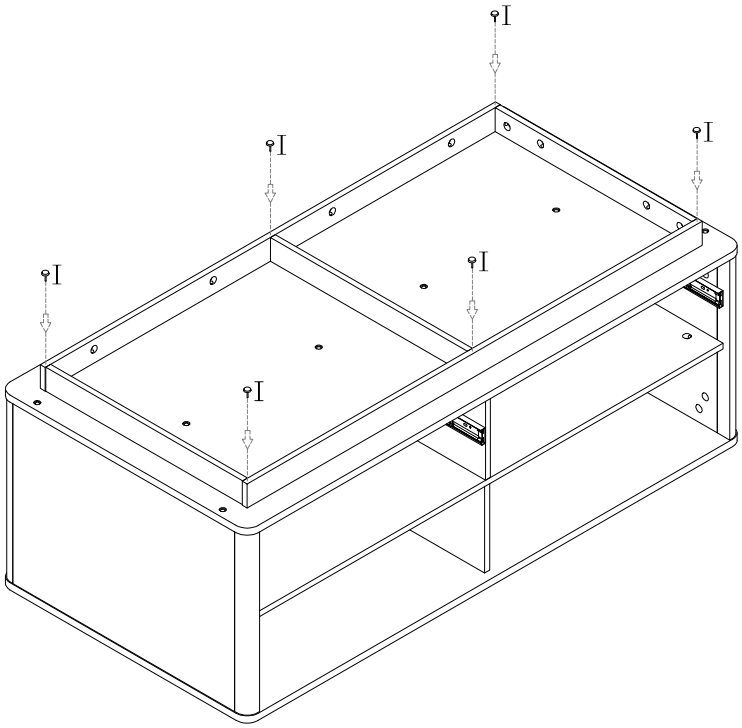


	I×6PCS


STEP 15

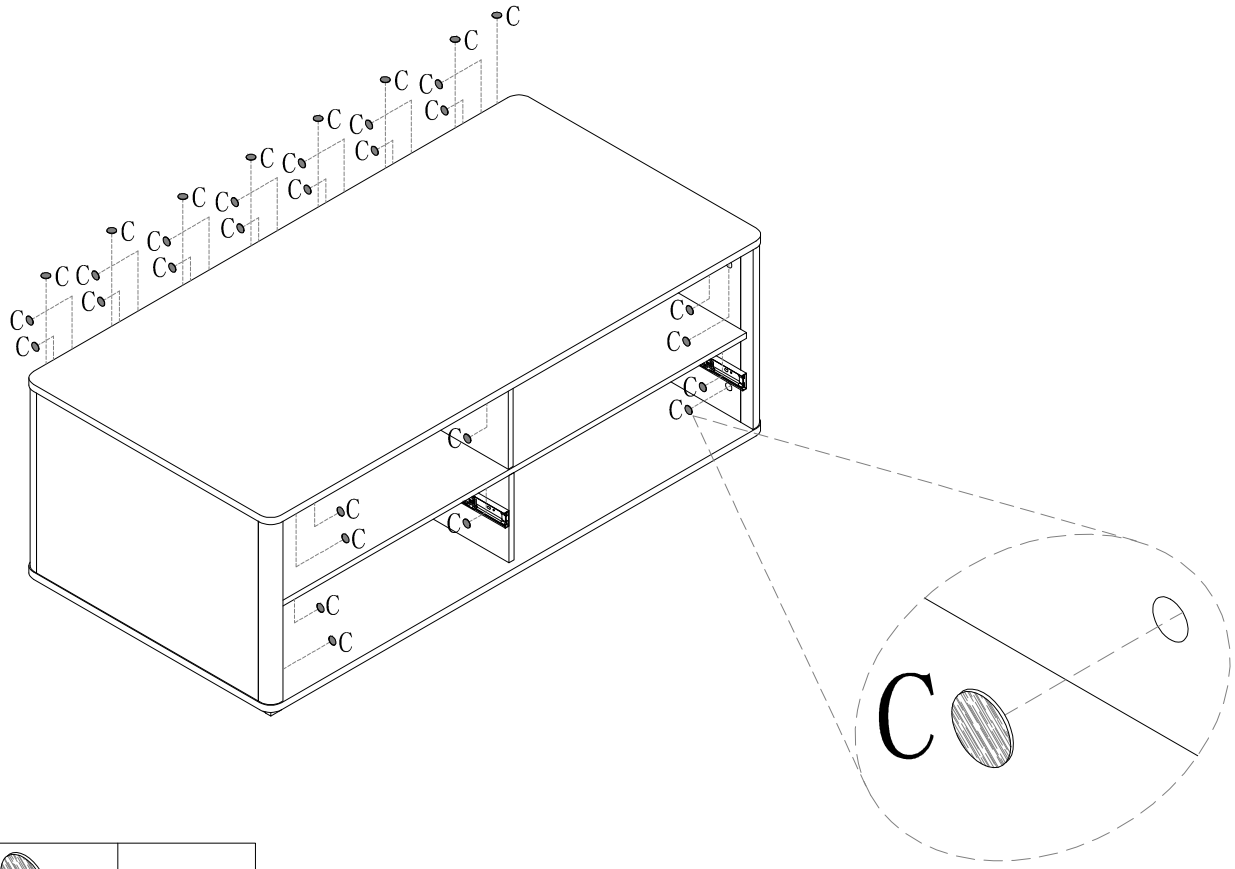


	C×32PCS


STEP 16

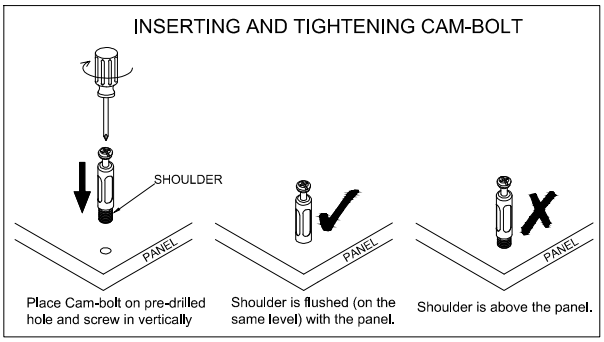


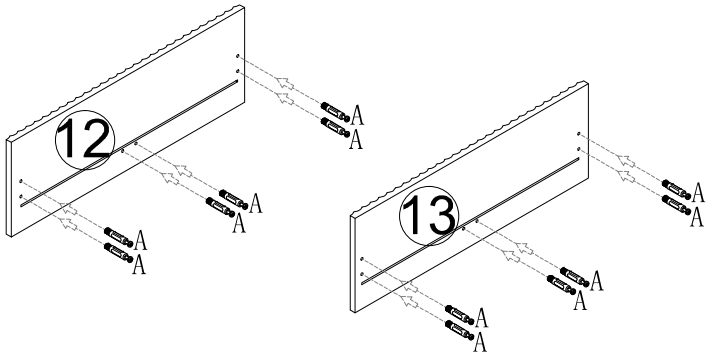


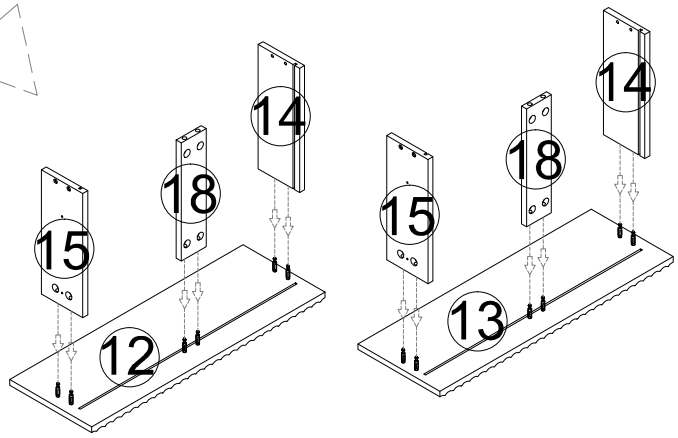

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

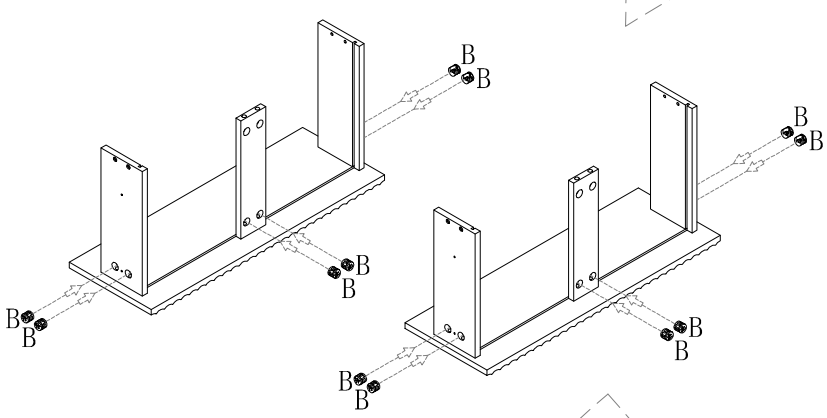


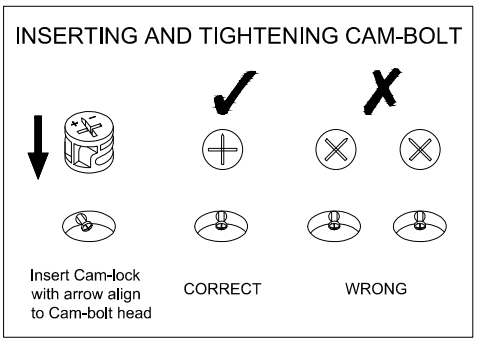

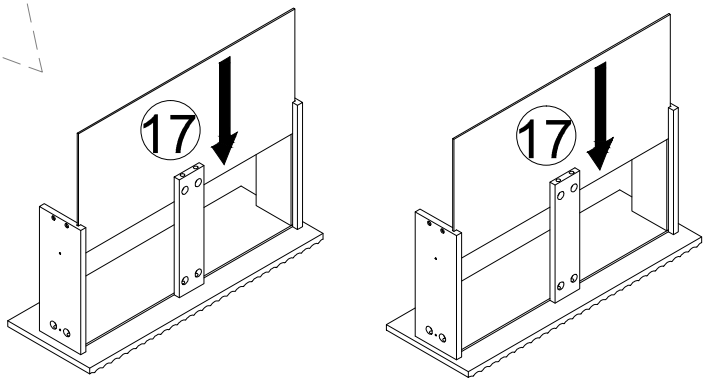



	A×12PCS
	B×12PCS


STEP 17

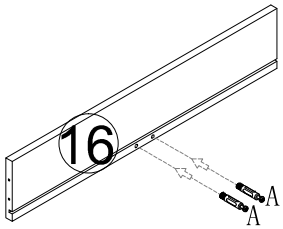


×2

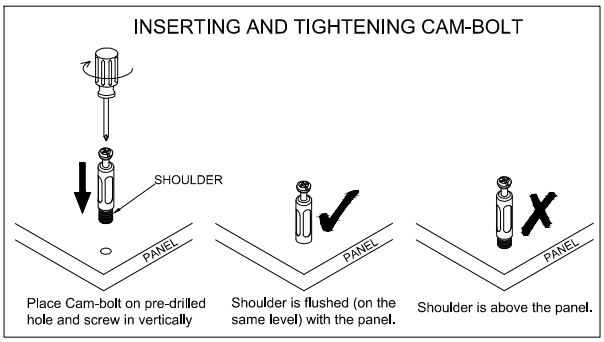

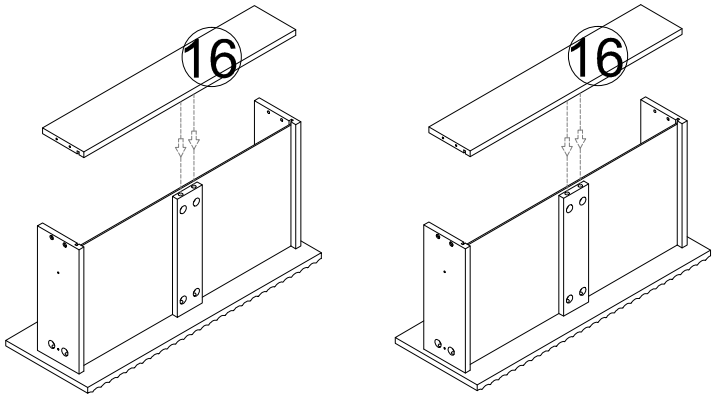

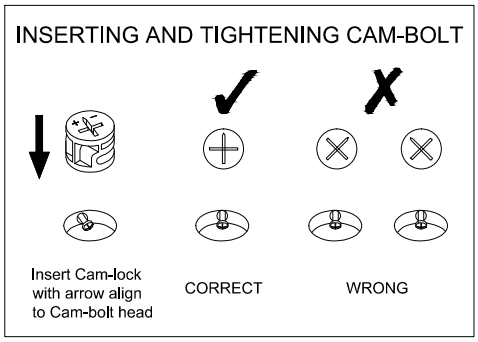


!	Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

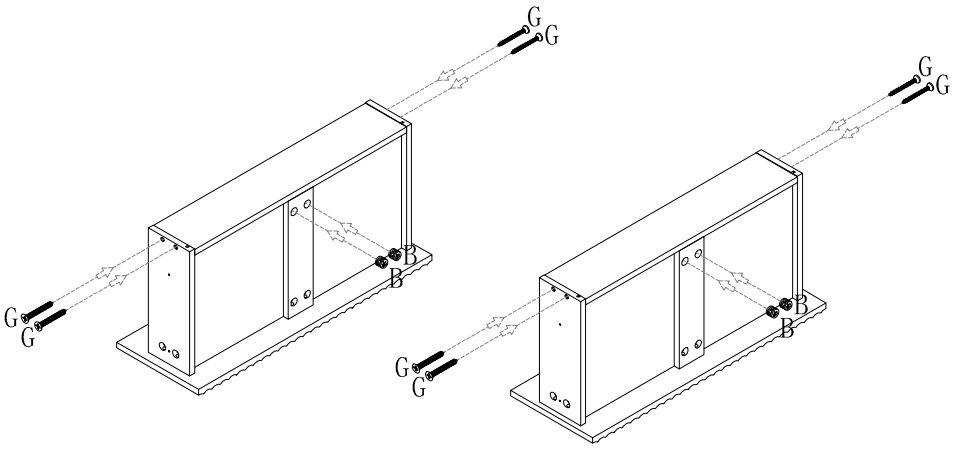


	A×4PCS
	B×4PCS
	G×8PCS

STEP 18

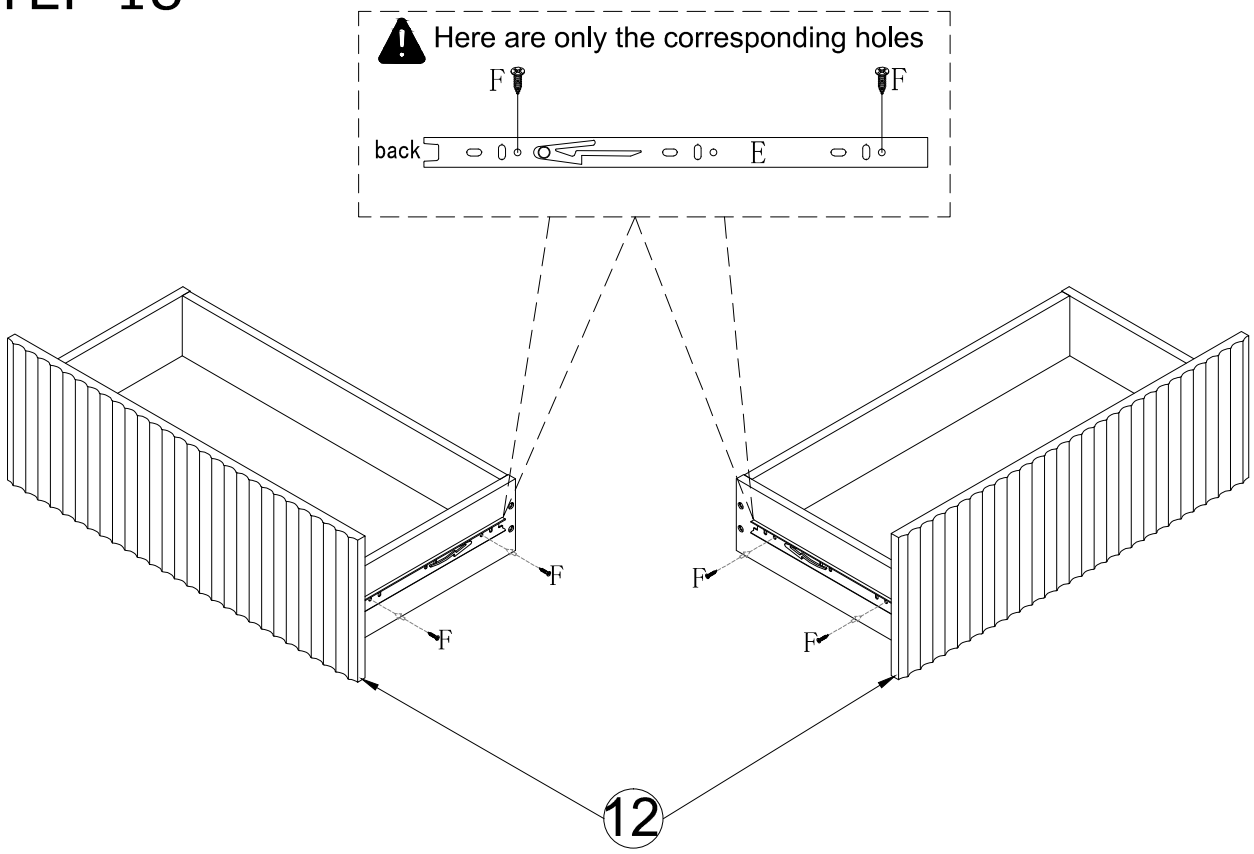


	F×4PCS

STEP 19

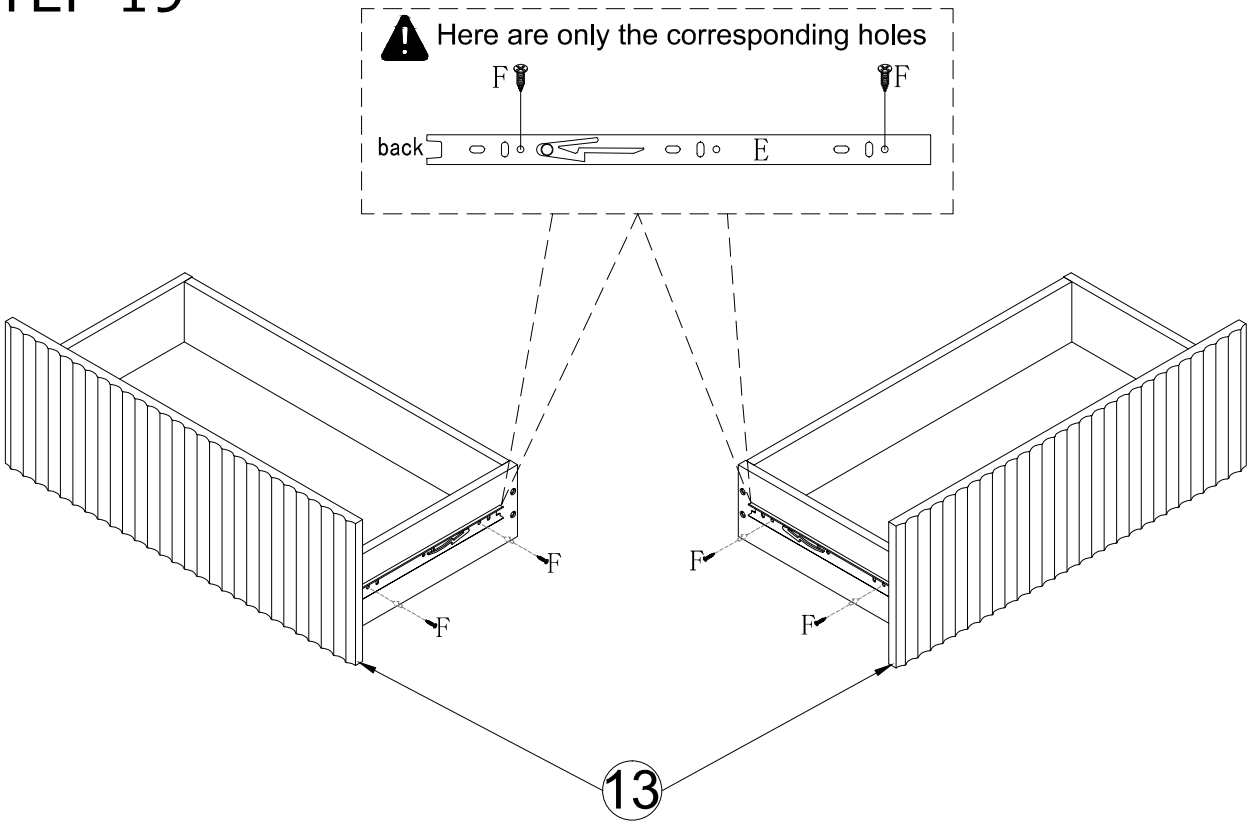

	F×4PCS

STEP 20

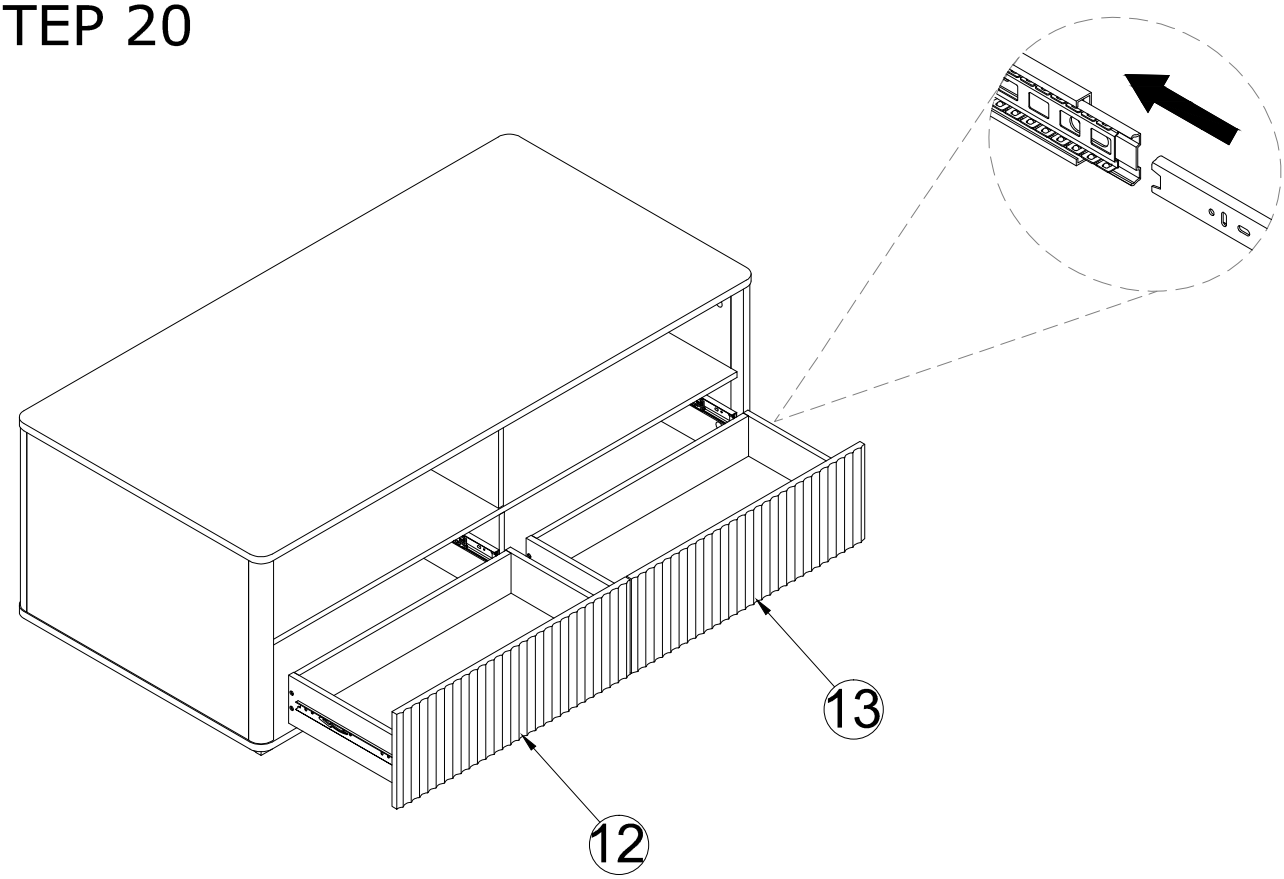

STEP 21

