


INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS
SKU: MF197037AAD/197038AAD

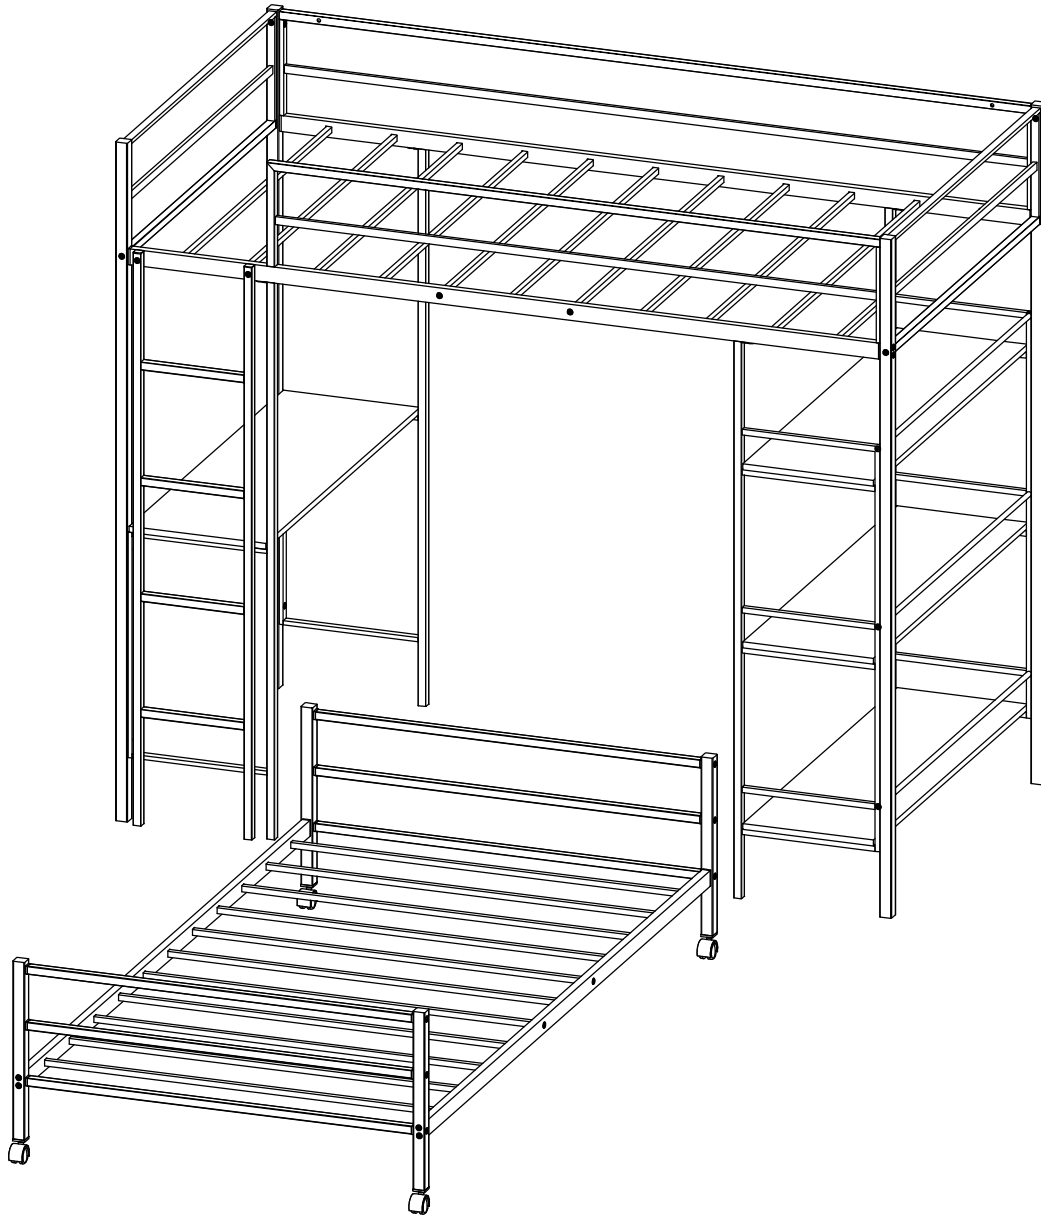

PLEASE DO NOT RETURN PRODUCT TO THE STORE


If you have any problem or concerns, please feel
free to contact our customer service department.

We will reply you as soon as possible.




E-mail : wmcsr@comptree.net
Tell: 626-912-8886 Ext. 100

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS

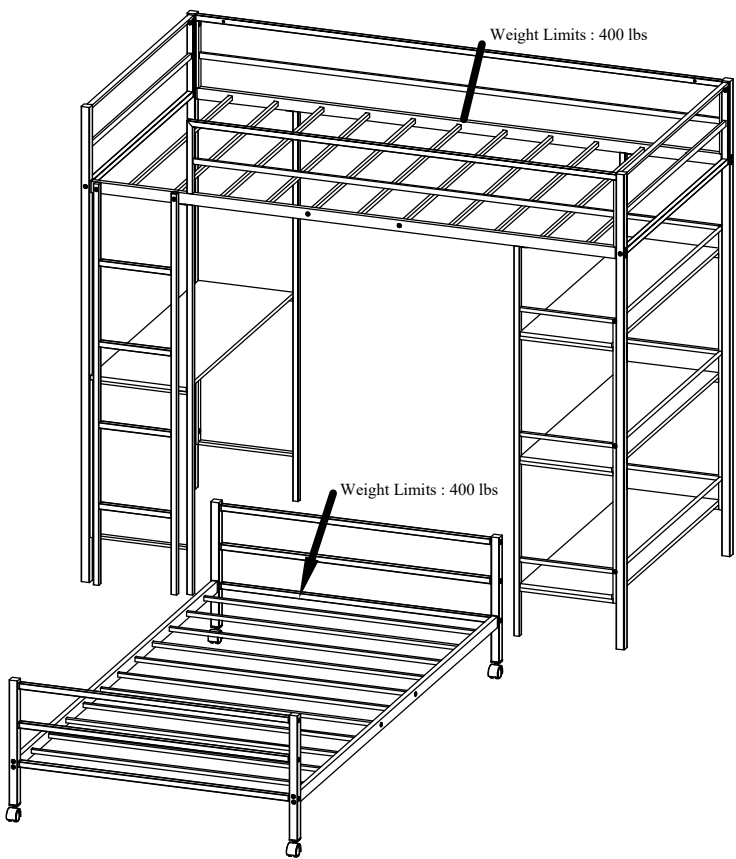


PART LIST

1

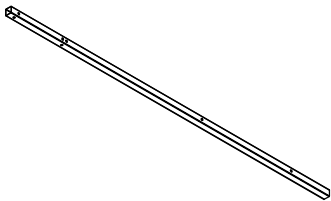


1 PC

2

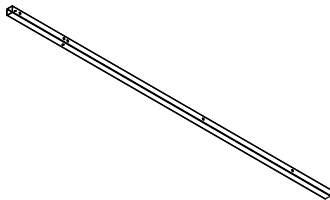


1 PC

3

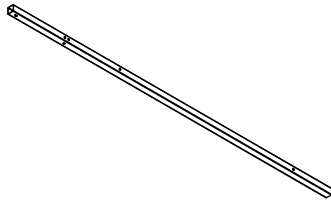


1 PC

4

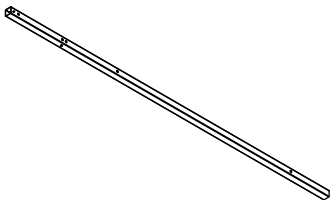


1 PC

5

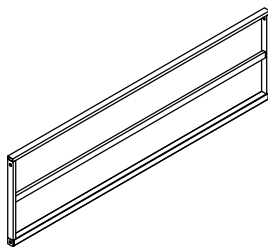


2 PCS

6

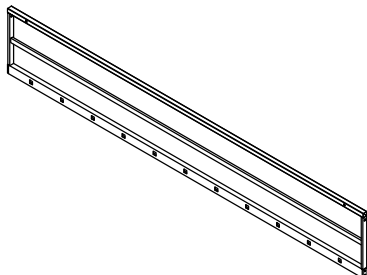


1 PC

7

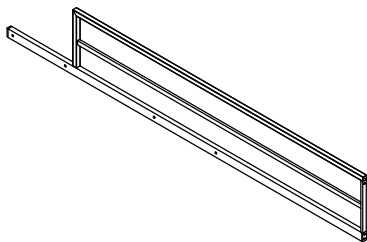


1 PC

8



2 PCS








9





2 PCS

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK

ASSEMBLY INSTRUCTIONS

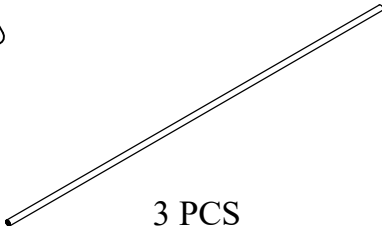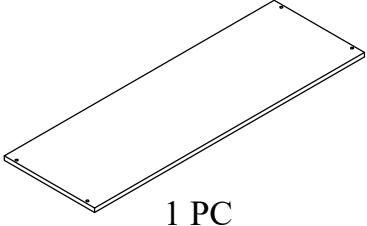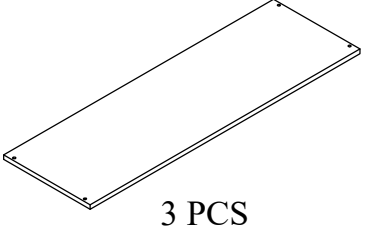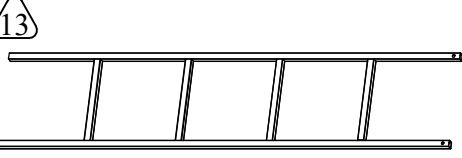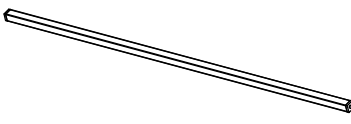 3 PCS	 1 PC	 3 PCS
 1 PC	 4 PCS	 18 PCS
 4 PCS	 2 PCS	 6 PCS



HARDWARE LIST

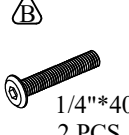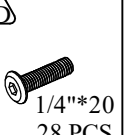 1/4"*50 32 PCS	 1/4"*40 2 PCS	 1/4"*30 21 PCS	 1/4"*20 28 PCS	 30x30x10 12 PCS	 20x20x10 8 PCS	 1/4"*60 =4 PCS (4 lock)	 4x60 2 PCS	 13x60 1 PCS	 1/4" x50 2 set
--	--	---	---	--	---	--	---	--	---

IMPORTANT SAFETY NOTICE: READ CAREFULLY BEFORE BEGINNING ASSEMBLY!


-  Hardware packs and small components should be away from the children, avoid eating and being injured
-  Please, follow with the assembly steps in order
-  Please, do not tighten any screw before each assembling unit is well placed at appropriate position
-  Please, make sure all components are fixed firmly locked without any potential safety hazard After assembly and before using
-  Please, use this product correctly, according to its purpose to avoid danger happened
-  Please, do not stand on any component of this product, except the ladder of this product after fixing locked safely
-  Such as the wall fastening devices are essential parts of this product. Please fix firmly locked without any potential safety hazard before using
-  Please check all contents of this product inside of carton (s) carefully, small parts may have been lost during shipment, if any! contact further with the retailer from which you purchased this product to obtain, do not use any substitute part
-  This assembly instructions booklet contains important safety information, please read and keep for further reference
-  This products is designed referring to overall loading of each set final product, Please avoid to load on single point of final product making damaged
 product name : INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK overall loading: 400 LBS (maximum)
 product name : INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK overall loading: 400 LBS (maximum)

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS

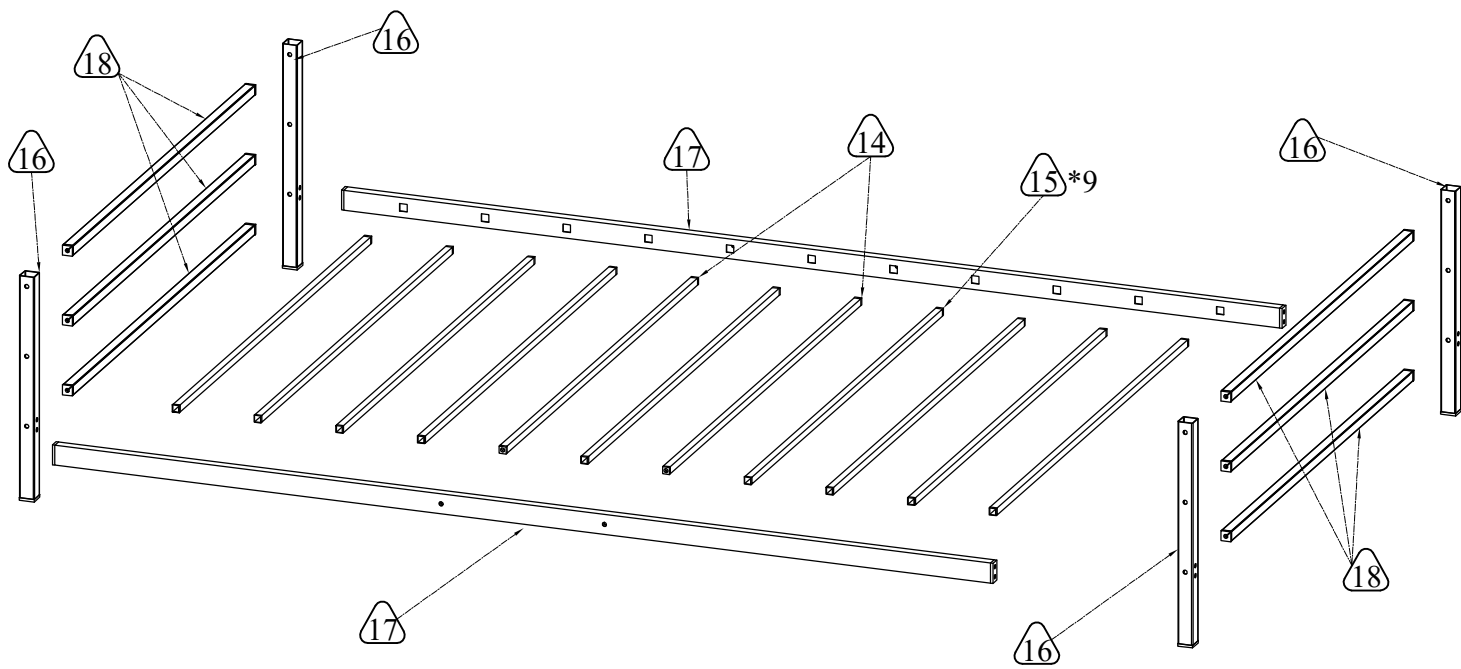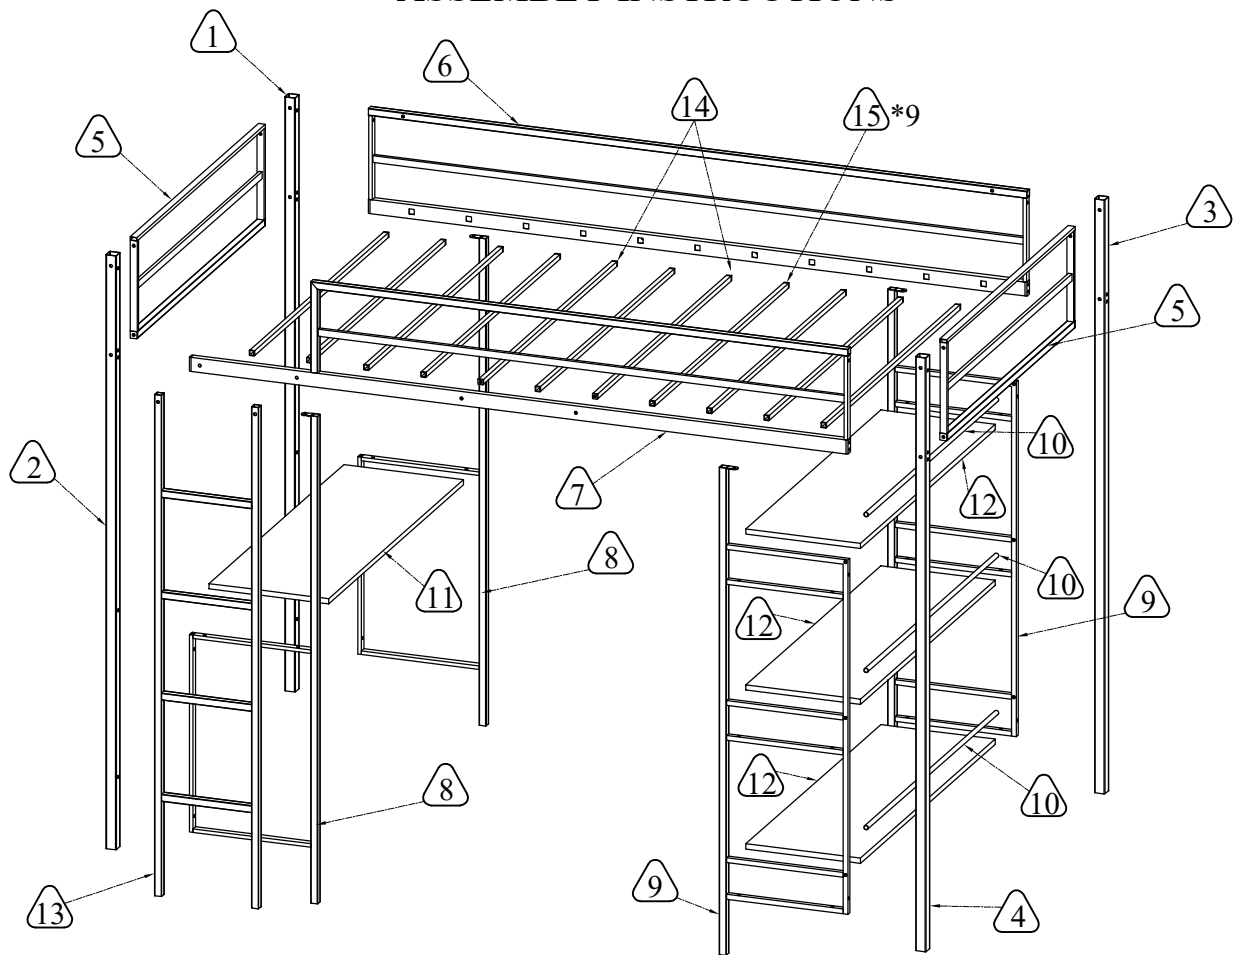


INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS


STEP 1

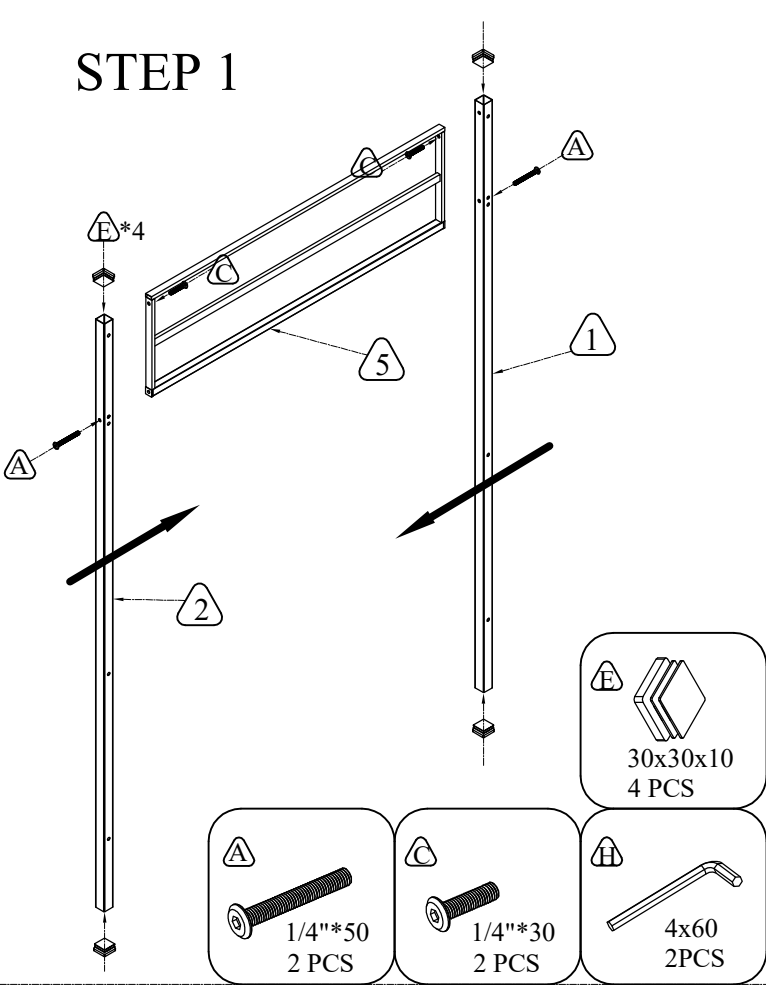

STEP 2


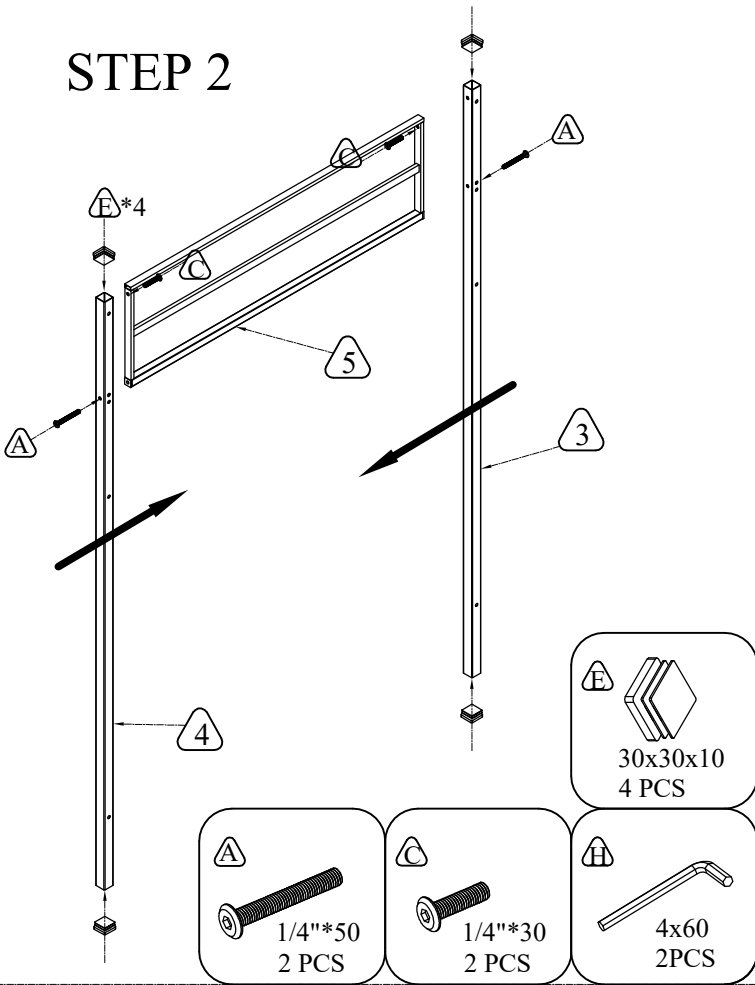


STEP 3

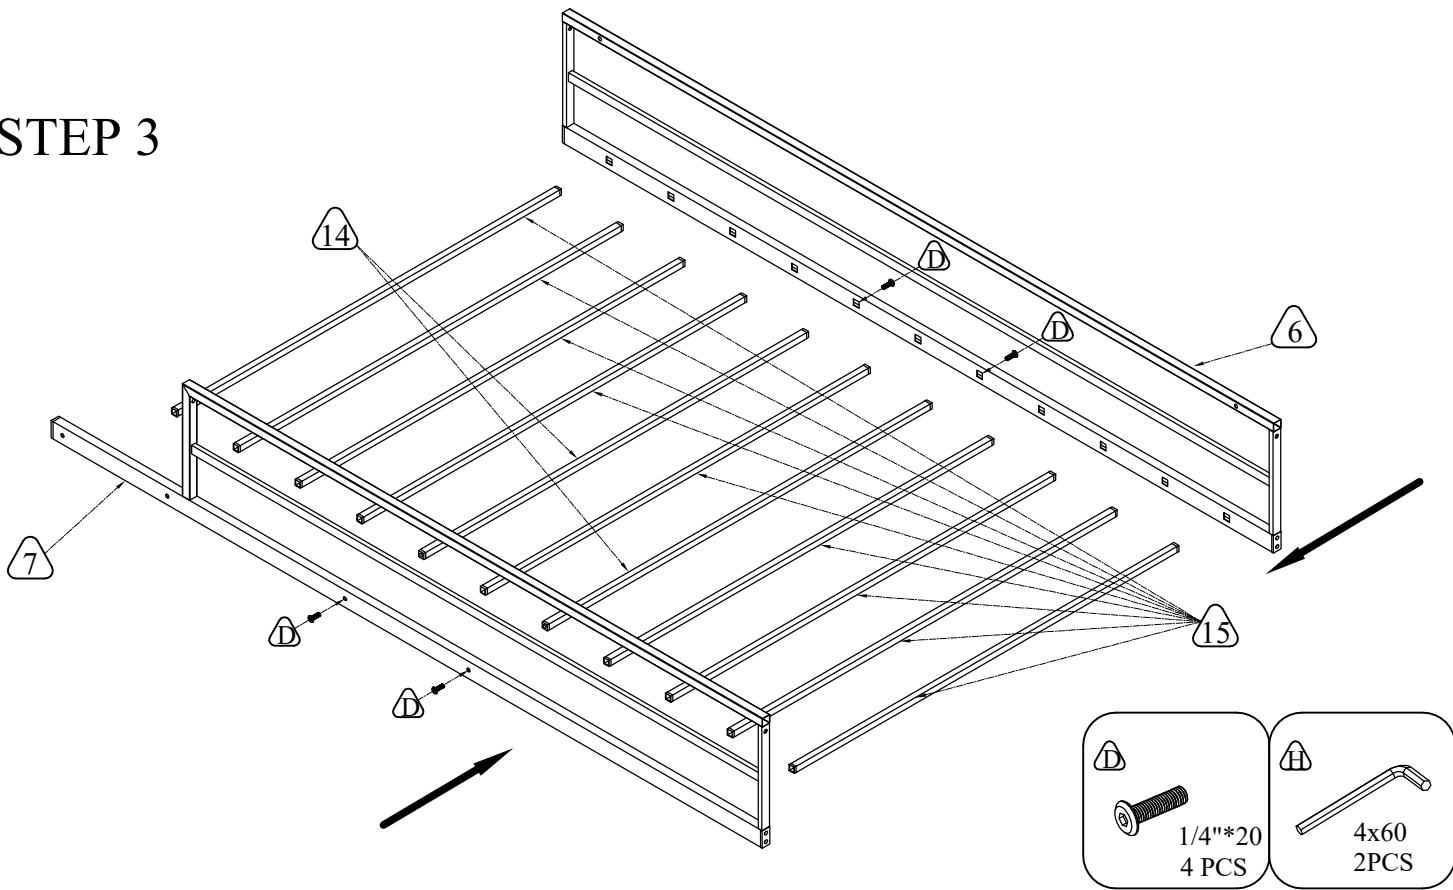


INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS

STEP 4

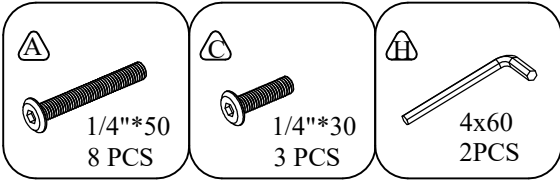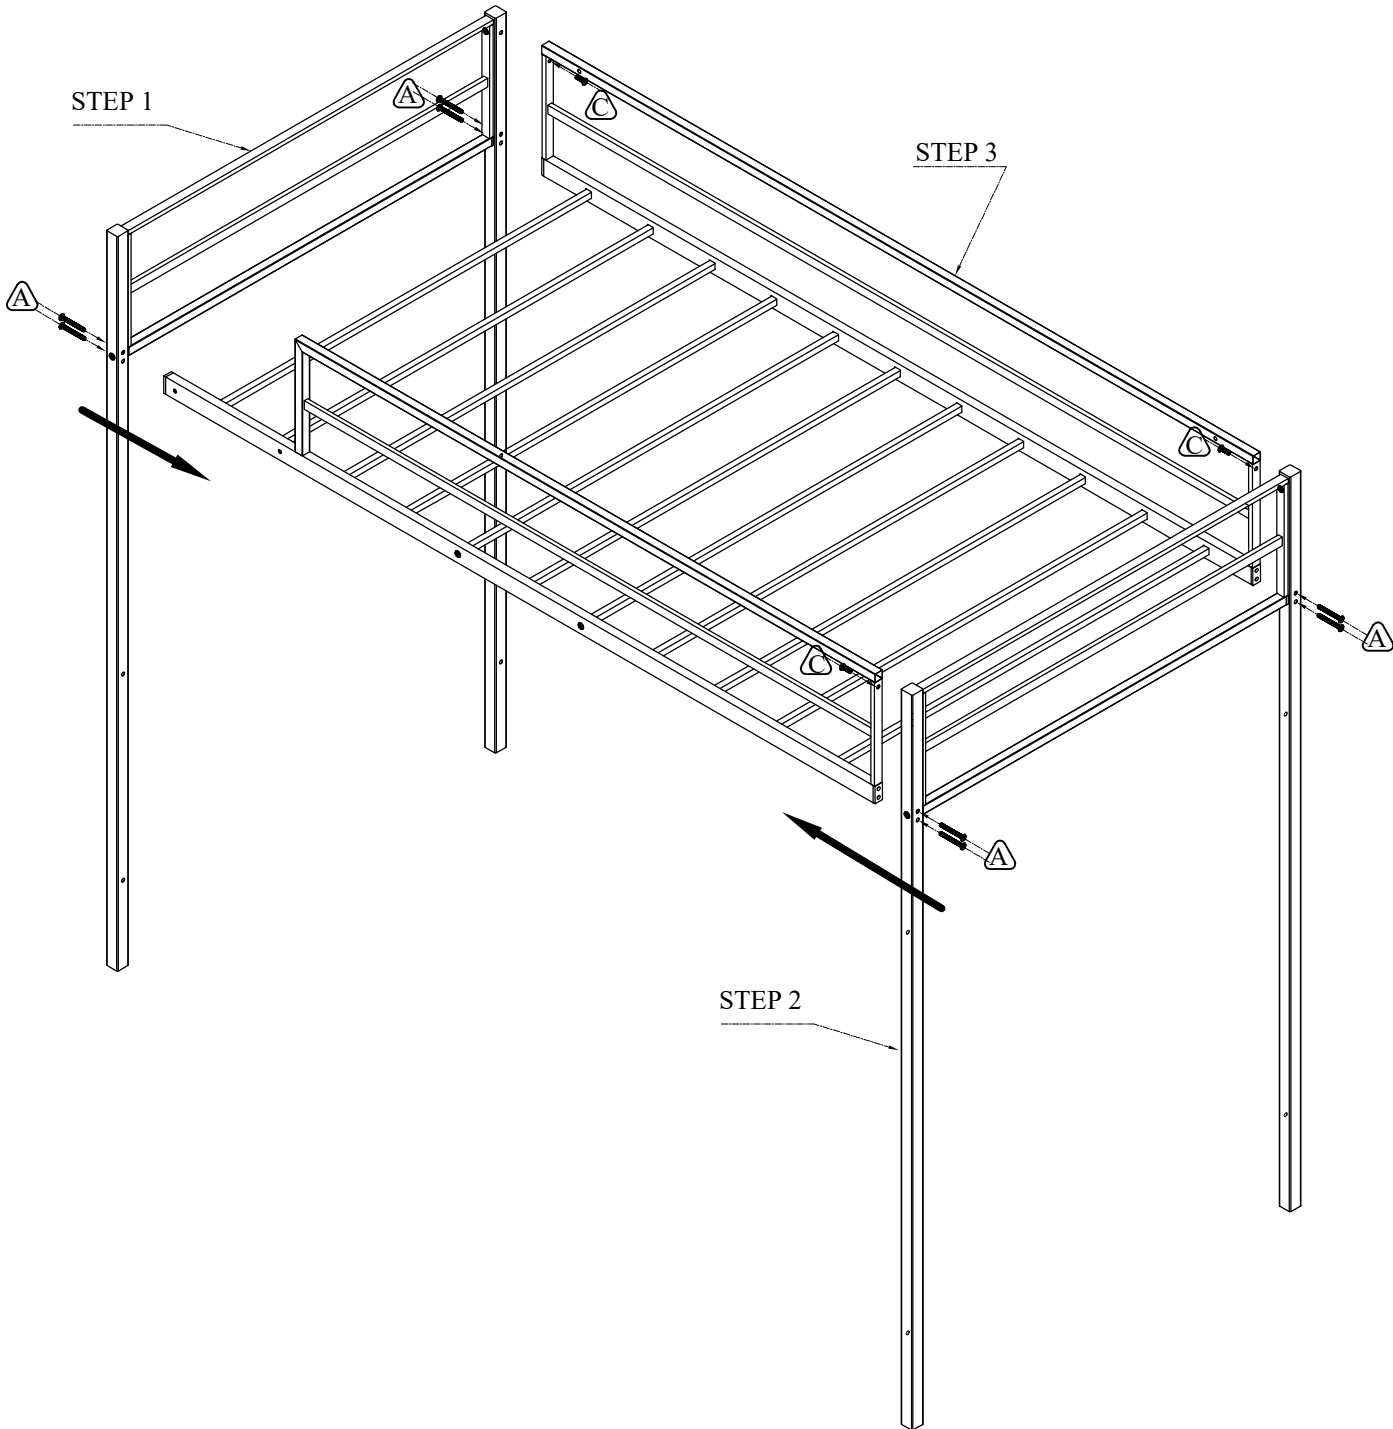

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS



STEP 5

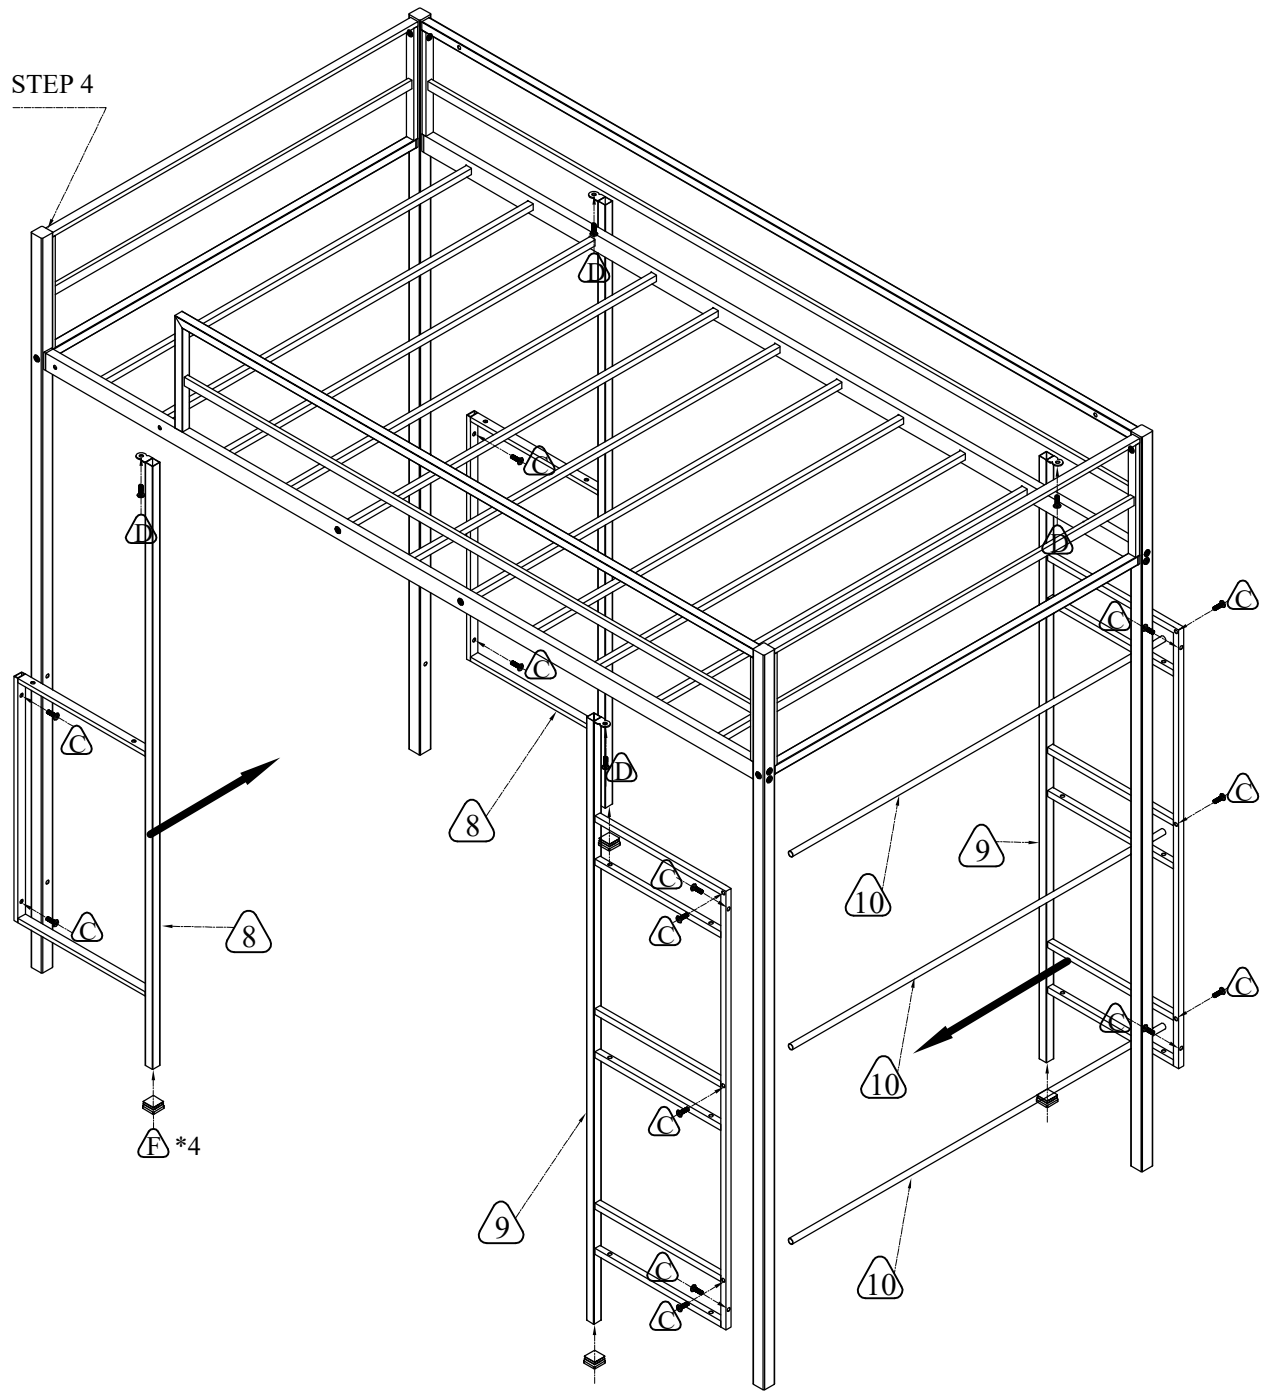

 20x20x10 4 PCS	 1/4" x 30 14 PCS	 1/4" x 20 4 PCS	 4x60 2 PCS
-----------------------	-------------------------	------------------------	-------------------

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS



STEP 6

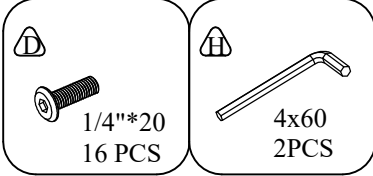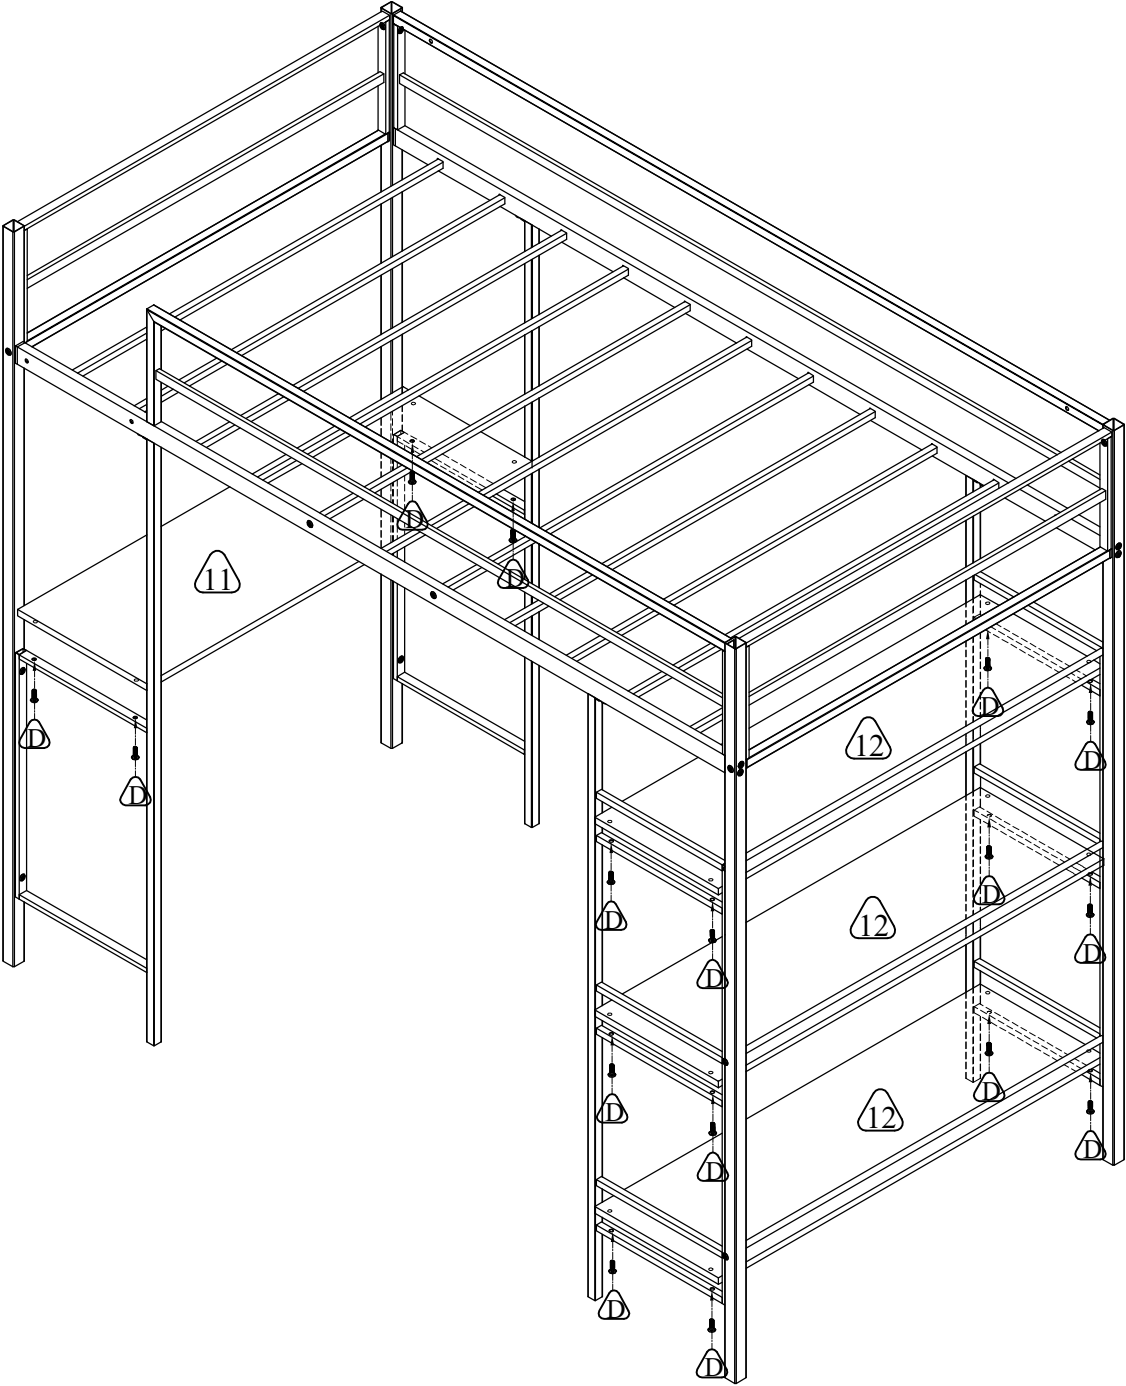


INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS

STEP 7



Attached to the wall for
the bed to be firmer
when used if necessary

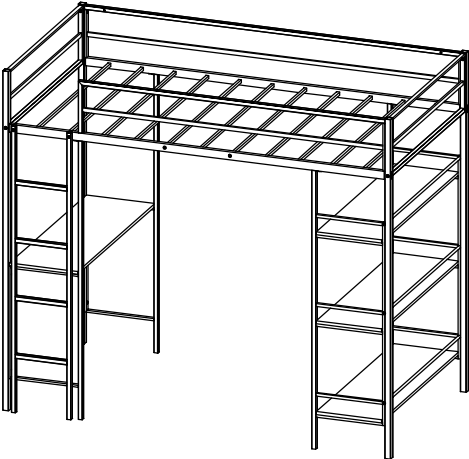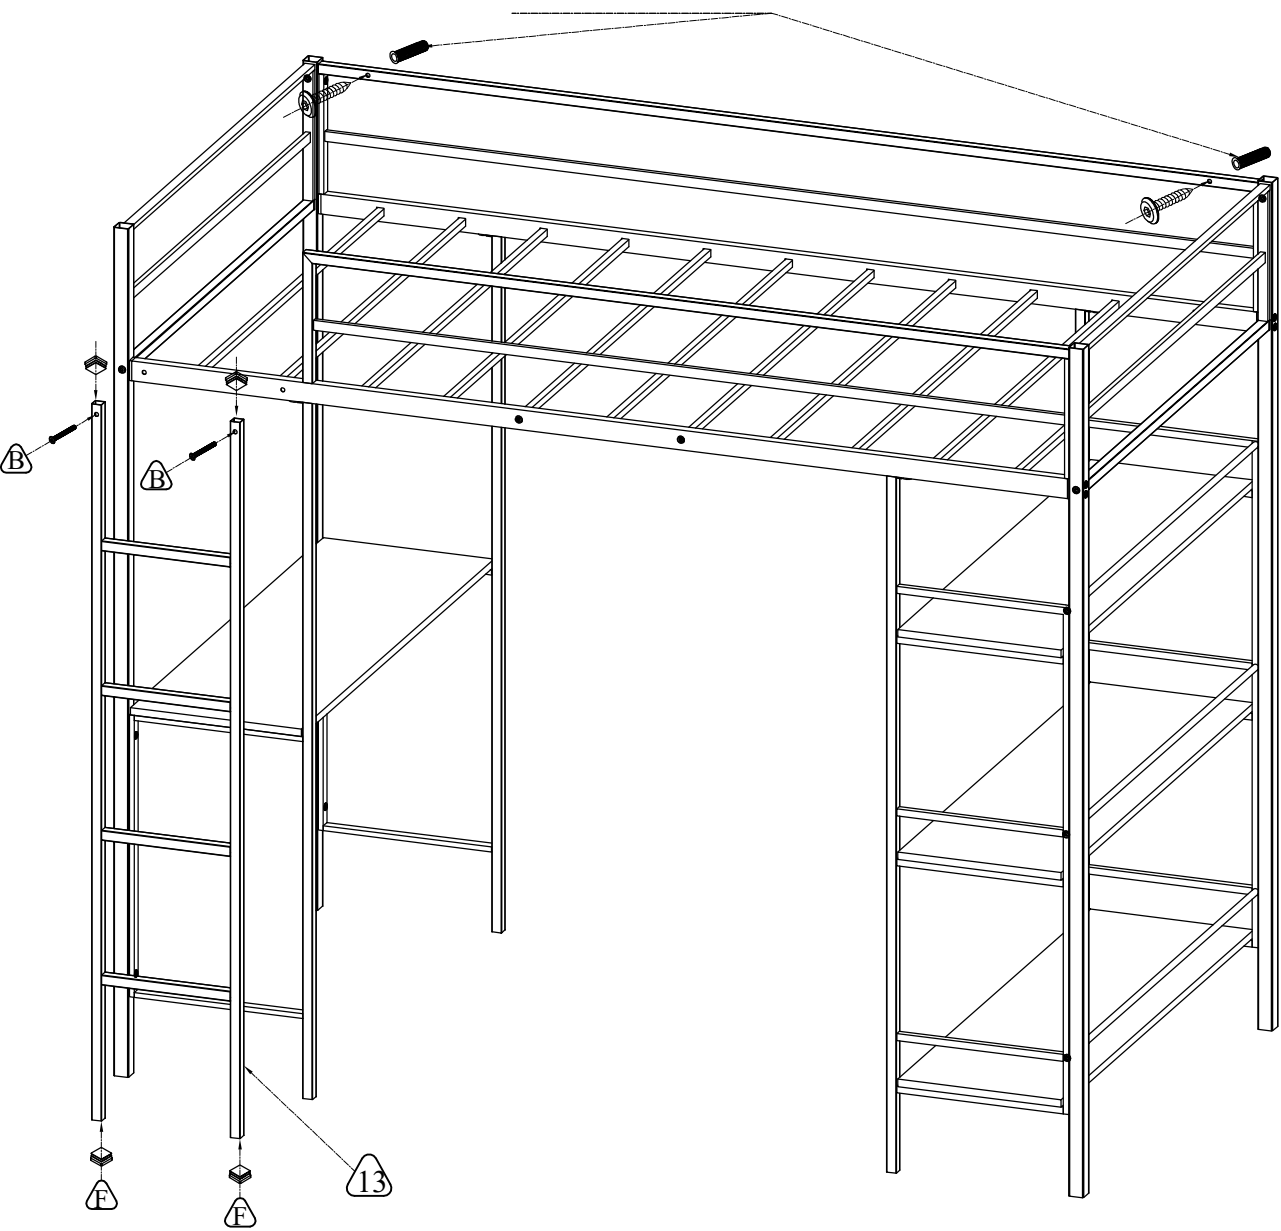



 $\frac{1}{4}$ x50 2 set	 20x20x10 4 PCS	 $\frac{1}{4}$ "*40 2 PCS	 4x60 2PCS
---	--	--	---

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS

STEP 8

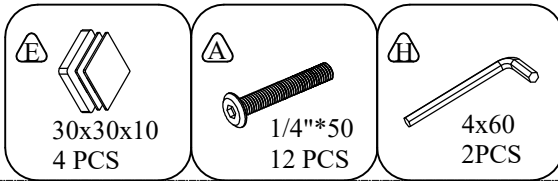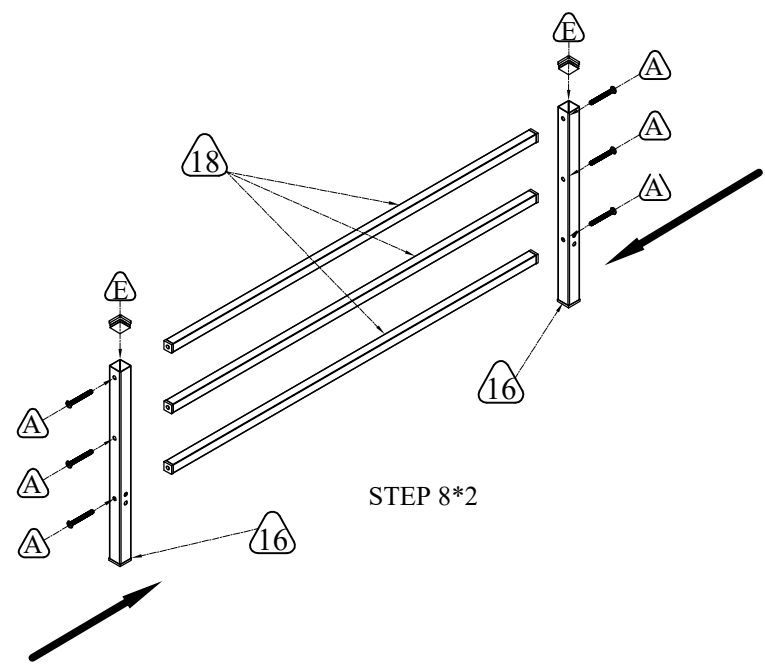




STEP 9

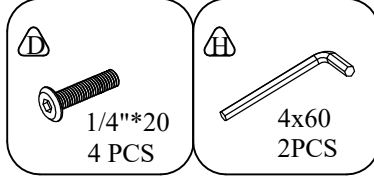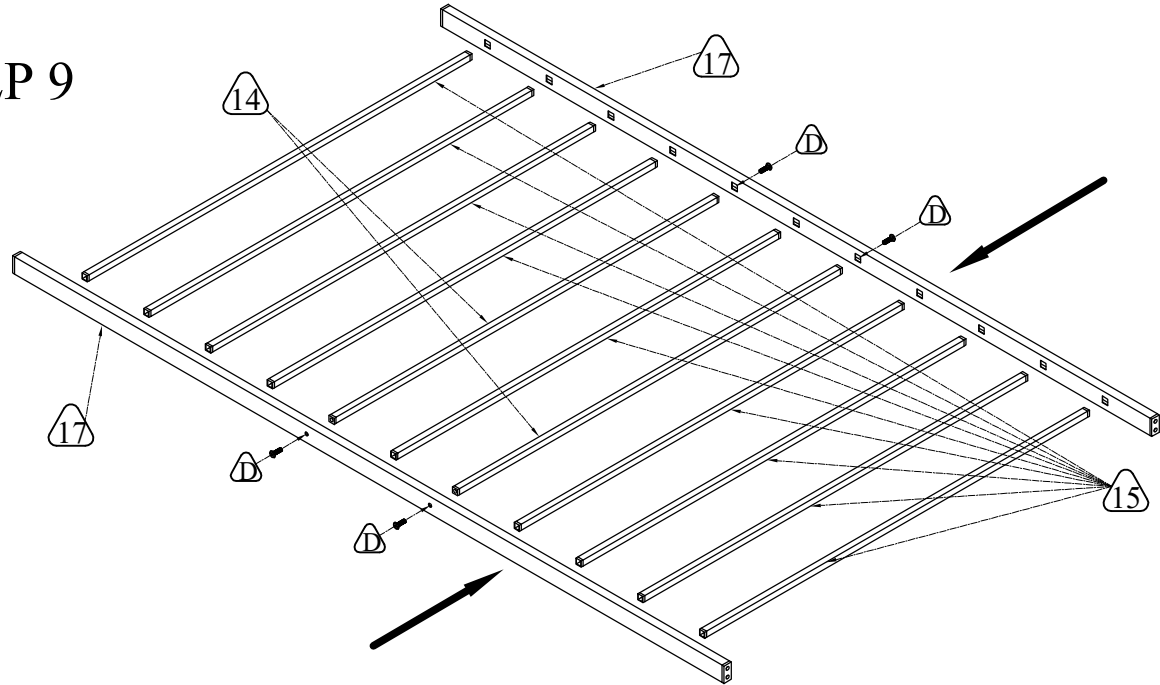

INDUSTRIAL LOFT STUDY BUNK WITH 1 DESK
ASSEMBLY INSTRUCTIONS

STEP 10

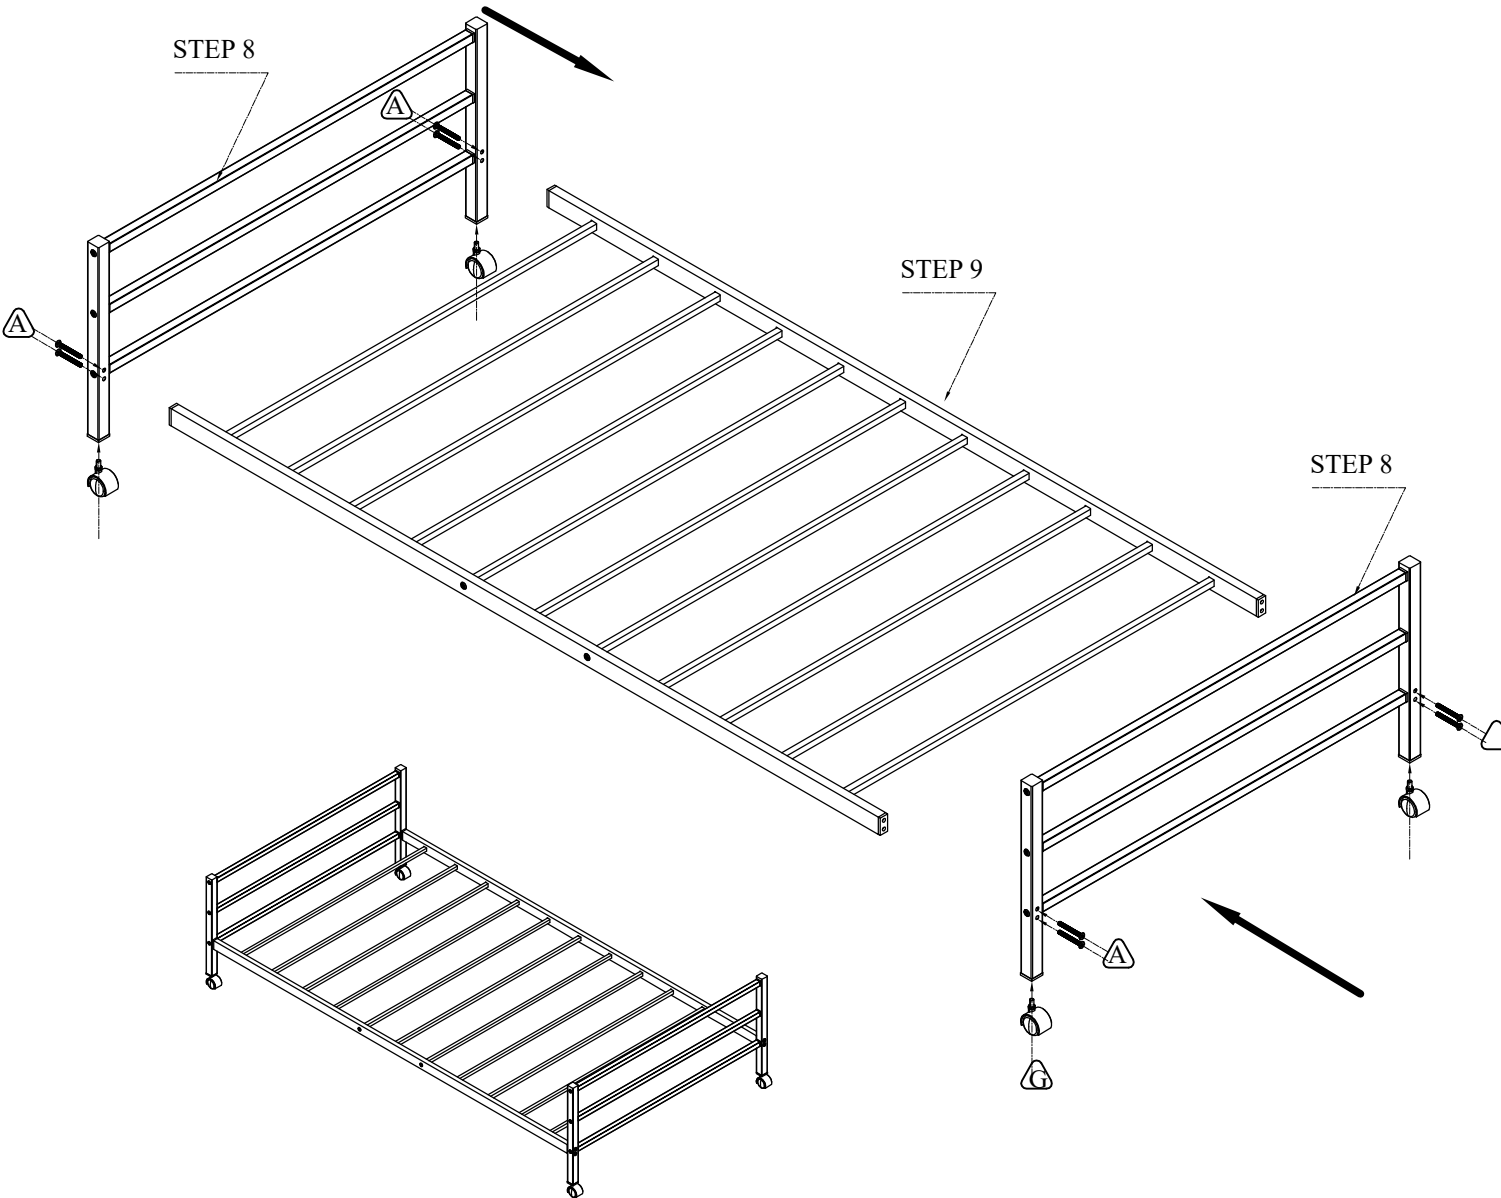

  10x60 1 PCS	  $\frac{1}{4}$ "*60=4 PCS (4 lock)	  $\frac{1}{4}$ "*50 8 PCS	  4x60 2PCS
--	--	---	--