




2 Large Drawer File Cabinet

Assembly Instructions

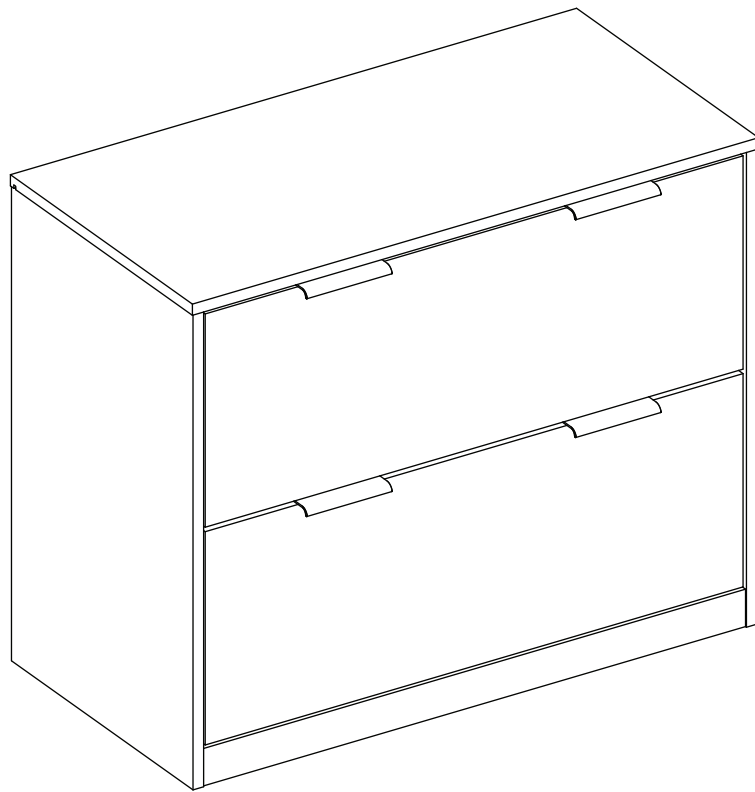

Save these instructions.



A buddy is helpful for assembly.



50 minutes



Phillips Screwdriver needed. Not Included.

Thank You for your Purchase

- This user manual contains important and useful information to accompany your purchase. This product is intended for indoor, household use only. Failure to follow the instructions outlined may result in personal injury or damage to the product which the manufacturer or vendor cannot be held responsible.
- Please ensure you keep the instruction manual in a safe place so you can refer to the instructions at any time in the future. Adult assembly required. During assembly, children should always be kept away due to possible risk of injury. Please use caution and care when lifting the product to avoid personal injury and/or damage. Please ensure that you have enough space and people to assemble your product safely. Do not stand on the product or use as a stepladder.
- For ease and speed of assembly, we recommend that you identify all parts required for that step before begin. All items are to be assembled near the area which they will be placed in use to avoid moving the product unnecessary once assembled.
- For the protection of your furniture, we recommend that the product be assembled on a protected surface to prevent any damage. During assembly please take care not to over-tighten any fittings, as this may damage the product. Always place the product on a flat and stable surface.

Safety Precautions
















- **READ ALL INSTRUCTIONS BEFORE ASSEMBLING PRODUCT FOR INDOOR, RESIDENTIAL USE ONLY ADULT ASSEMBLY REQUIRED**
- **DO NOT** throw away packaging material before you finish assembling to ensure that parts are not thrown out by mistake
- **DO NOT** use accessories or attachments that are not provided or recommended by manufacturer.
- **NEVER** force any parts or hardware into place when assembling.
- **KEEP CHILDREN** well away from plastic bags and packing materials this item was shipped in.
- **SAVE** these instructions for future reference.
- **DO** anchor product on the wall with at least 1 anchor in contact with stud
- **DO** not place items, such as toys and remote controls on top of dressers, TVs and other large furniture. Also, make sure that all cords are out of the reach of children. Visit <https://www.anchorit.gov/> for more information.



Parts







Removing your **File Cabinet** from the carton is best accomplished with help from a friend. Gently lay the cart on on its side, preferably on a carpeted floor. Remove all packaging material and set aside. Make sure all parts and hardware are present before assembly . 2 person assembly is recommended.

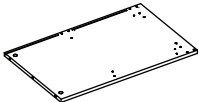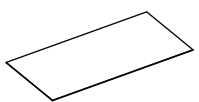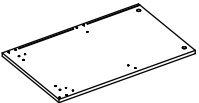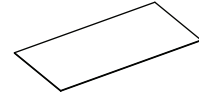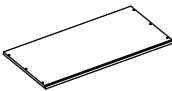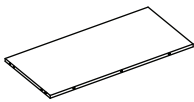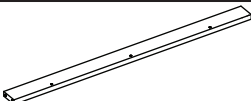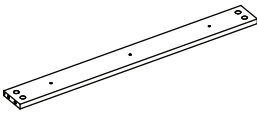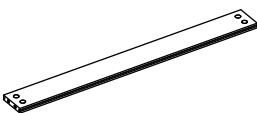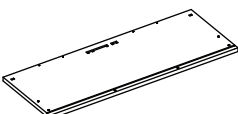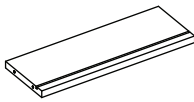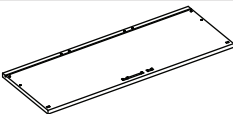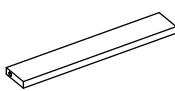PART	NAME	Q'TY	PART IMAGE	PART	NAME	Q'TY	PART IMAGE
A	LEFT PANEL	1		Y	BACK PANEL	2	
B	RIGHT PANEL	1		Z	DRAWER BOTTOM	2	
C	TOP SHELF	1					
D	BOTTOM SHELF	1					
E1	BOTTOM SUPPORT BAR (FRONT)	1					
E2	BOTTOM SUPPORT BAR (BACK)	1					
F	MIDDLE SUPPORT BAR	1					
G	FRONT DRAWER PANEL	2					
H	LEFT DRAWER PANEL	2					
I	RIGHT DRAWER PANEL	2					
J	BACK DRAWER PANEL	2					
K	DRAWER SUPPORT BAR	4					



Save these instructions.

Hardware

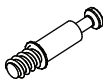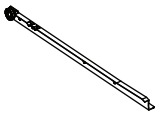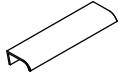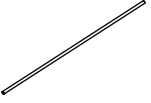
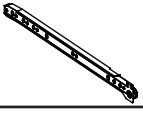
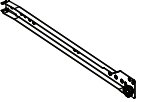
PACKAGE	NAME	Q'TY	IMAGE	PACKAGE	NAME	Q'TY	IMAGE
1	CAM BOLT	34		12	METAL DRAWER SLIDE DL (350MM)	2	
2	CAM LOCK	34			METAL DRAWER SLIDE DR (350MM)		
3	SCREW M5 X 40MM	16		13	BACKPLY	12	
4	SCREW M3.5 X 12MM	8					
5	EURO SCREW M5 X 8MM	12					
6	SCREW M3.5 X 16MM	20					
7	WOOD WOVEL M6 X 30MM	10					
8	HANLDE (SILVER)	4					
9	STUD NAIL	8					
10	ALUMINIUM ROD Ø6 X 360MM	8					
11	METAL DRAWER SLIDE CL (350MM)	2					
	METAL DRAWER SLIDE CR (350MM)						

We have included extra piece of Part type of screws




Save these
instructions.

Safety Precautions

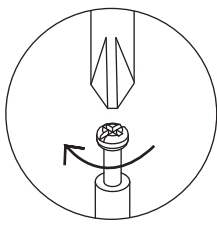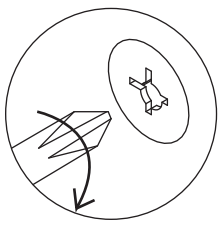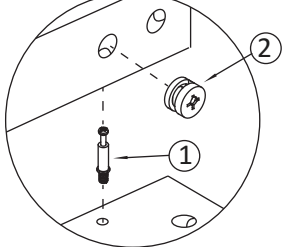	Step 1	Step 2	Step 3
 Risk of damage or injury. Cam Lock and Bolt system is a multi steps process. Please follow these directions closely. Hidden Cams must be completely tightened. Hidden Cams that are not completely tightened may loosen and parts may separate.	 Gently screw Cam Bolt into the threaded anchor at the specified location. Tighten with a Phillips screwdriver until threads are not visible	 Gently insert Cam Lock in the pre-drill holes at the specified location with arrow pointing toward the receiving hole or toward the closest edge. Use a Phillips screwdriver to turn as needed. Make sure Cam Lock is flushed with the board	 Insert Cam Bolt into the predrilled hole on the side of the Cam Lock board. Turn Cam Lock to engage the locking system

Specifications

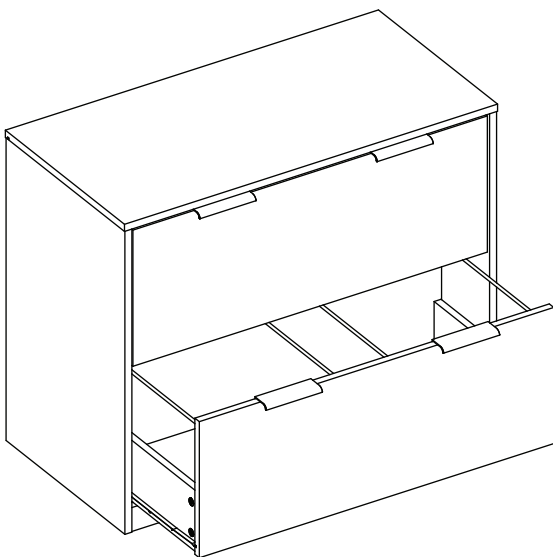




Maximum load capacity as follows:

PART	NAME	Maximum Weight Capacity
C	TOP SHELF	50 lbs
Z	DRAWER BOTTOM	30 lbs



Save these instructions.

Parts

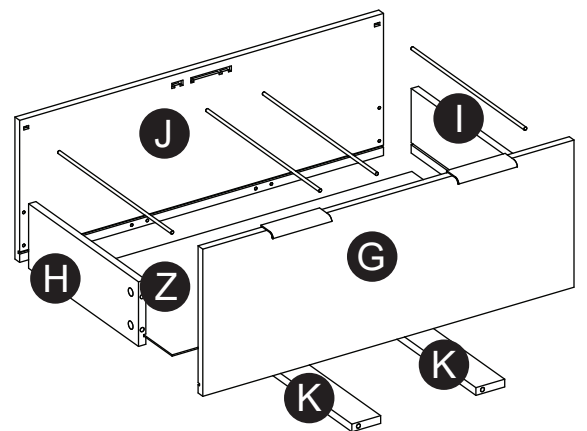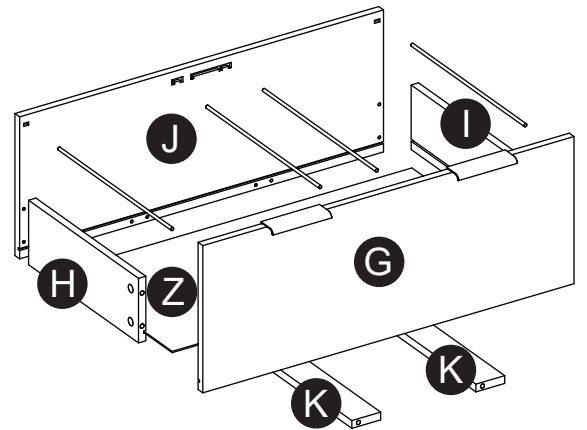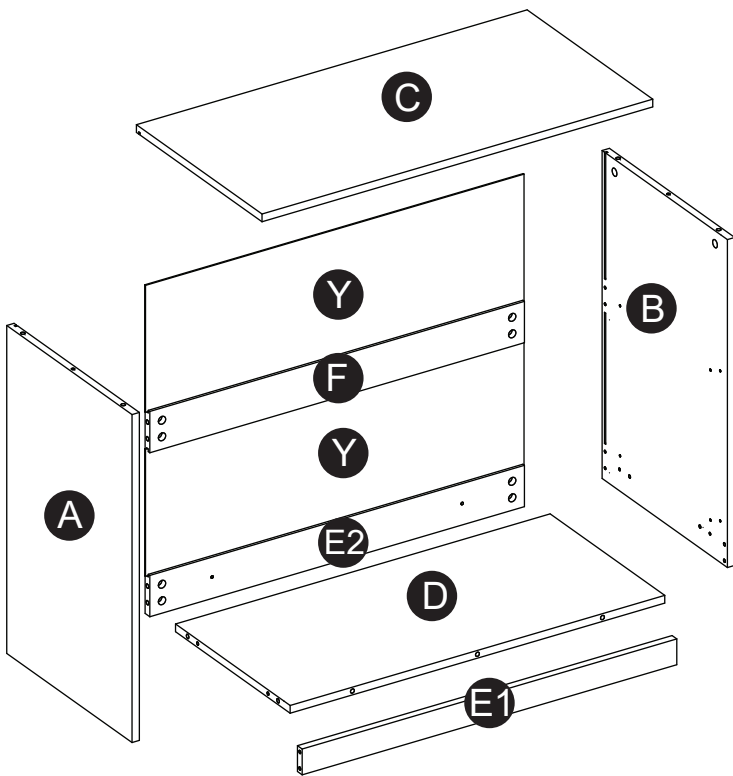

Save these instructions.

Assembly Instructions


ASSEMBLY TIPS:

1. Remove hardware from box and make sure all your parts are there, prior to assembly.
2. To avoid damage to parts and components, layout and assembly should be done on a flat surface.
3. Please check and distinguish each part before assembly.
4. This product is intended for home use only and not intended for commercial establishments.
5. **DO NOT** attempt to repair or modify parts that are broken or defective. Please contact customer service immediately

Step 1

Build Cam Bolts

- Tighten 34x Cam Bolts (1) to top shelf (C), front drawer panel (G), left panel (A), right panel (B), front support bar (E1), back support bar (E2) at the specified locations using a screwdriver.




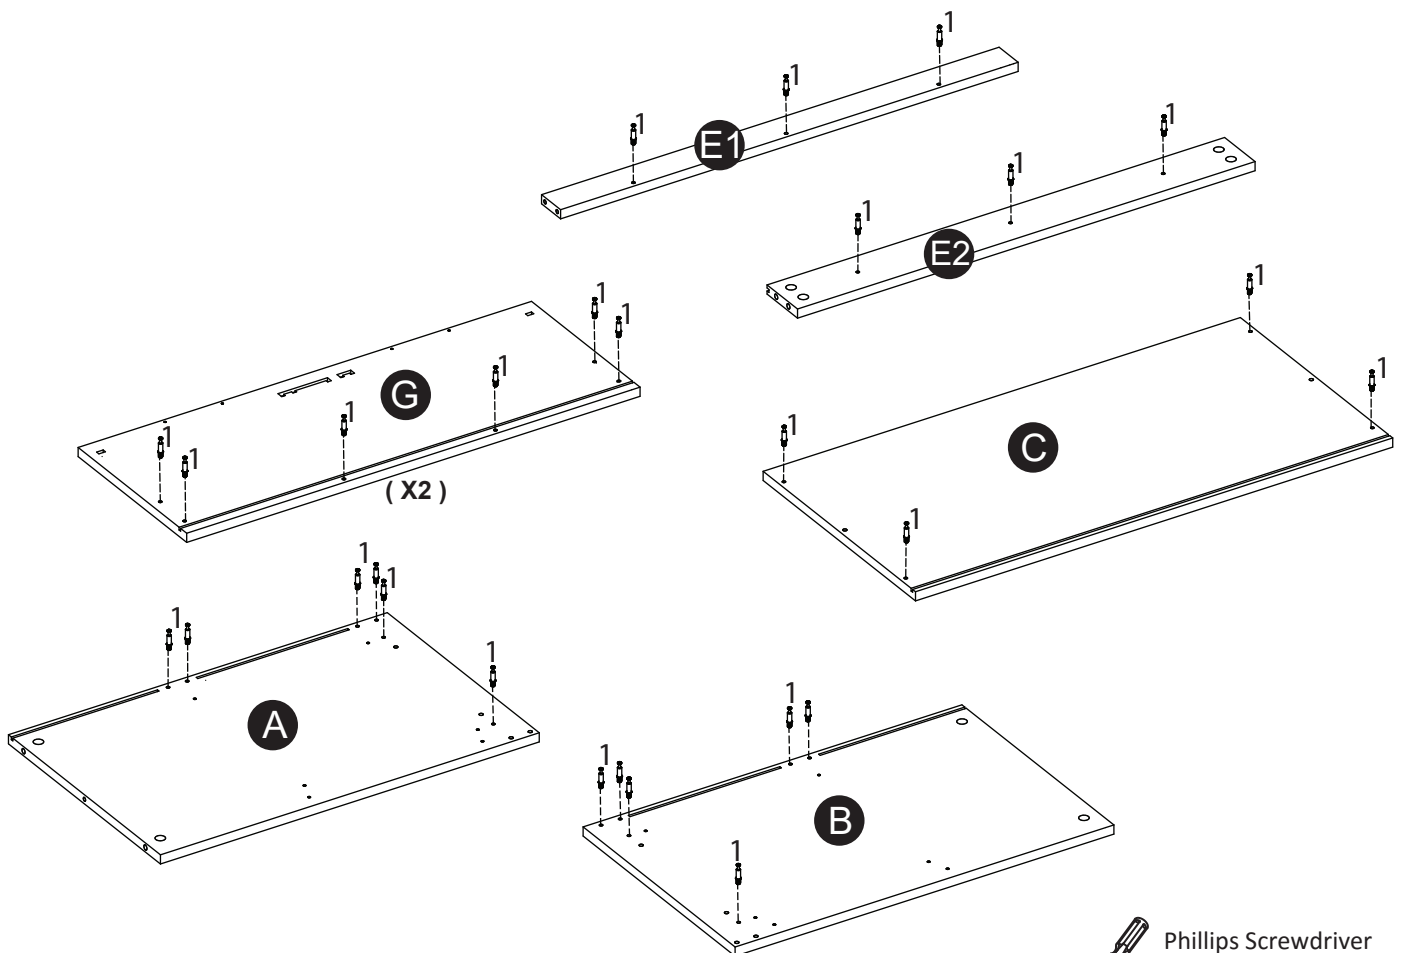


Save these
instructions.

Step 2

Assemble Drawer Slide

- Carefully identify left cabinet slide (CL), right cabinet slide (CR) and assemble direction following below diagram.
- Fasten left cabinet slide (CL) to right panel ①, right cabinet slide (CR) to left cabinet ② with 12x Euro screw(5) and tighten with a Phillips screwdriver.

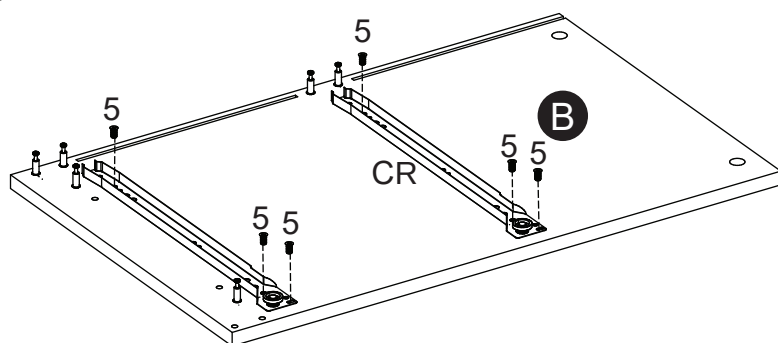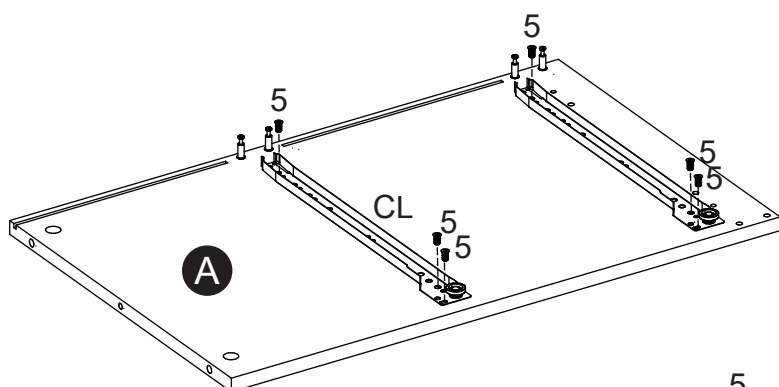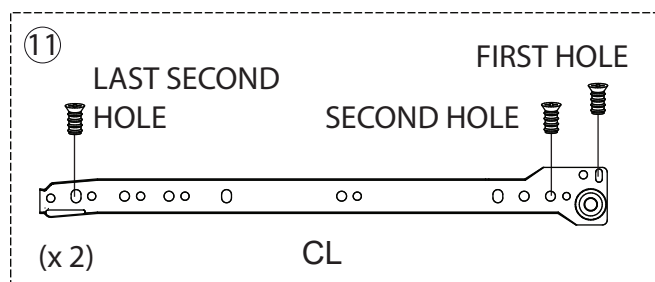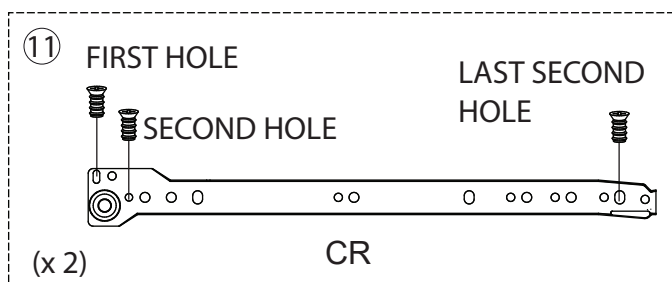

Phillips Screwdriver

11	X2	5	X12




Save these
instructions.

Step 3

Build Bottom Shelf


- Connect front support bar (E1) and back support bar (E2) to bottom Shelf (D), insert 6x cam locks (2) to bottom shelf and turning all cam locks to engage.

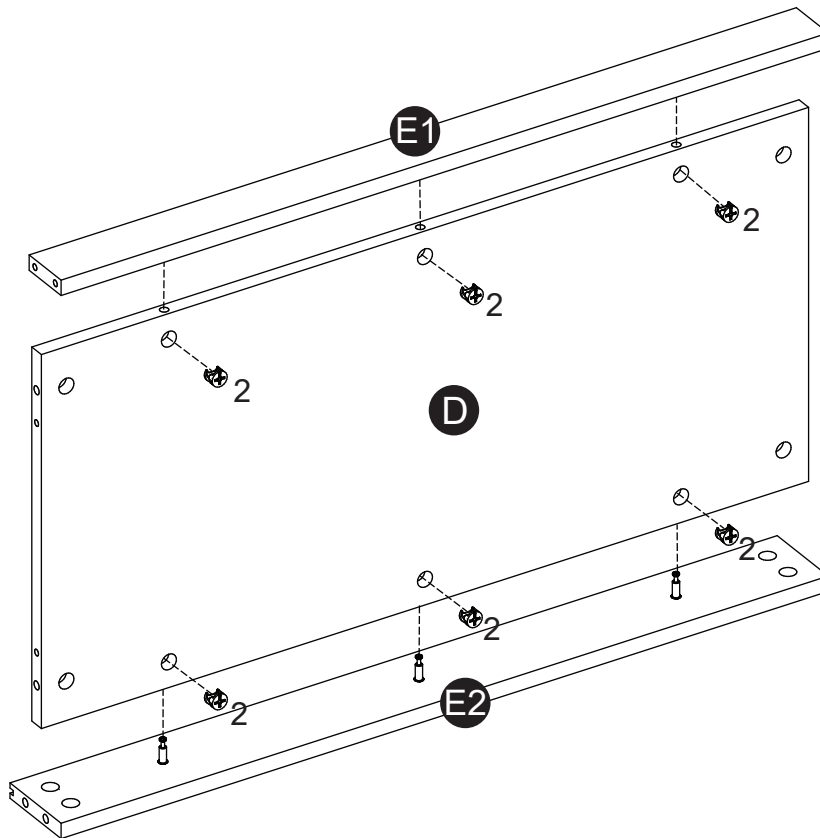

Phillips Screwdriver
needed. Not Included.



Follow the Cam Lock
safety precautions




Save these
instructions.

Step 4

Build Exterior Panel

- Insert 4x Wood Dowels (7) to back support bar (E1) and bottom panel (D) at the specified locations.
- Insert 4x Cam Locks (2) to back support bar (E2) and bottom panel (D). Carefully align wooden dowels to pre-drill holes, Cam Bolts to Cam Lock.
- Connect assembled cabinet bottom to right panel (B) and turning all cam locks to engage.

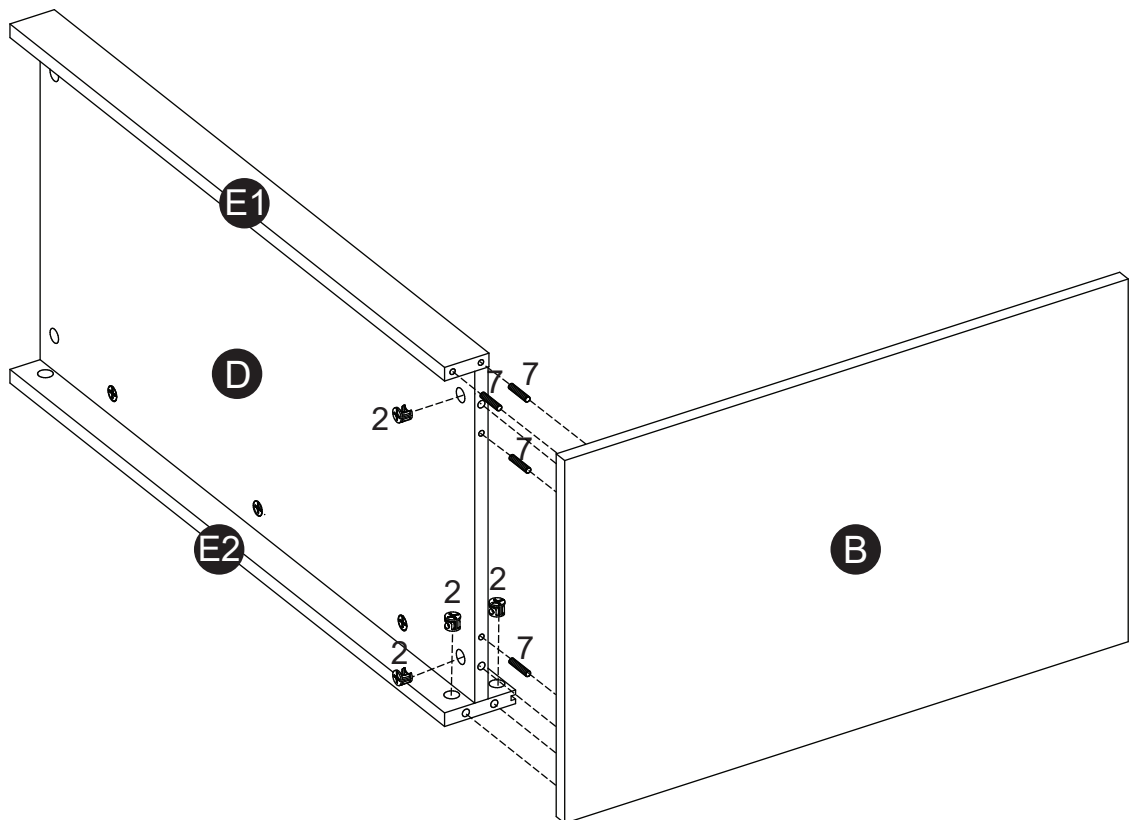

Phillips Screwdriver
needed. Not Included.



Follow the Cam Lock
safety precautions

7	X4	2	X4




Save these
instructions.

Step 5

Connect Support Bar


- Insert 2x cam locks (2) to middle support bar (F) at the specified locations. Carefully align Cam Bolts to Cam Lock.
- Connect middle support bar (F) to right panel (B) and turning all cam locks to engage. Follow cam lock safety precautions.

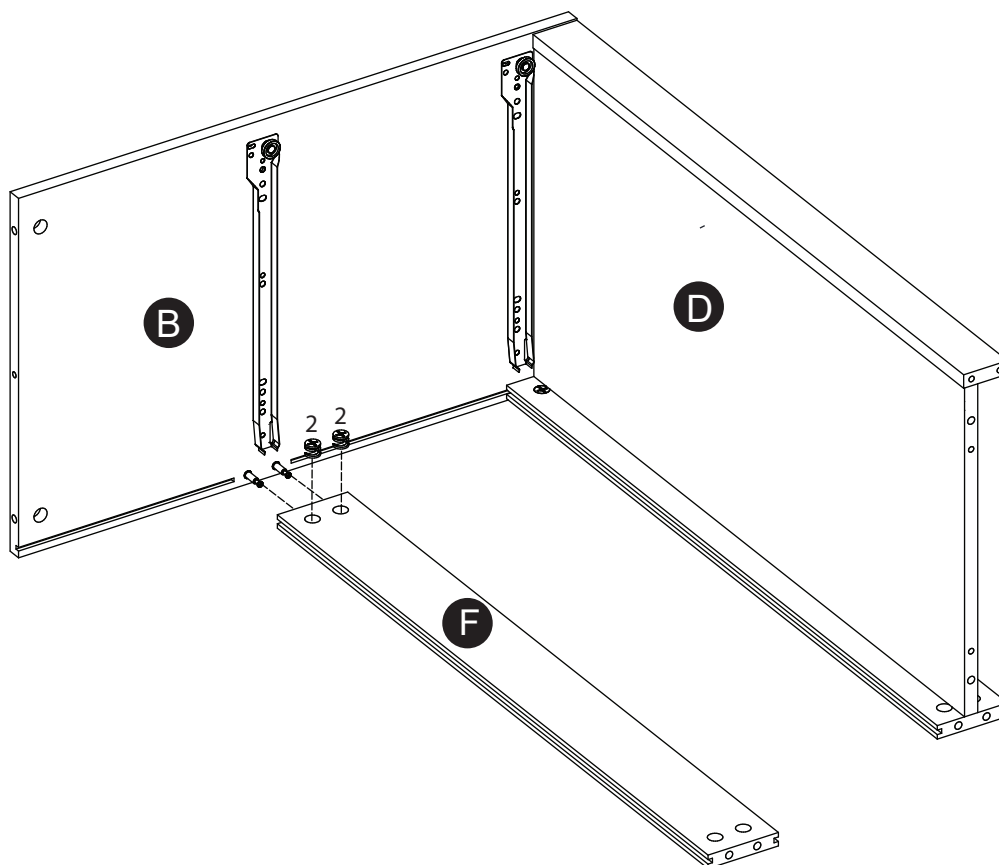

Phillips Screwdriver
needed. Not Included.



Follow the Cam Lock
safety precautions




Save these
instructions.

Step 6

Assemble Back Panel


- Insert 2x back panels (Y) to the grooves at middle support bar (F), back support bar (E2) and right panel (B).

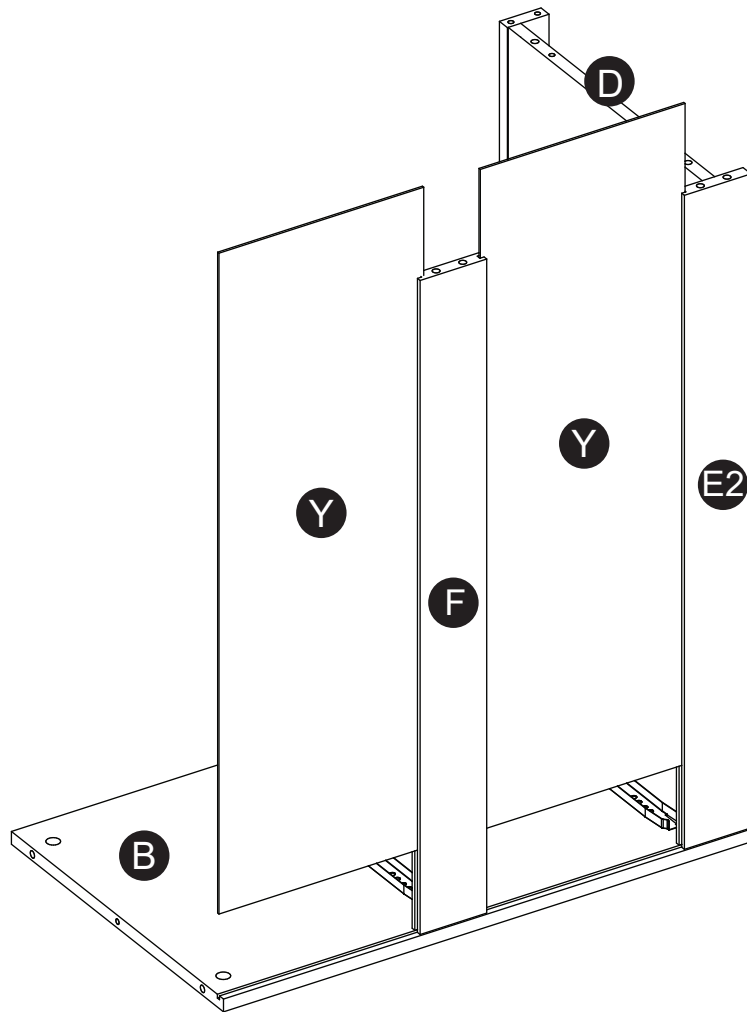

Step 7

Build Left Panel

- Insert 4x wood dowels (7) to front support bar (E1) and bottom shelf (D) at the specified locations.
- Insert 6x cam locks (2) to middle support bar (F), bottom shelf (D) and front support bar (E2).
- Carefully align wooden dowels to pre-drill holes, cam bolts to cam locks.
- Connect left panel (A) to assembled unit and turning all cam lock (2) to engage. Following Cam Lock safety precautions.

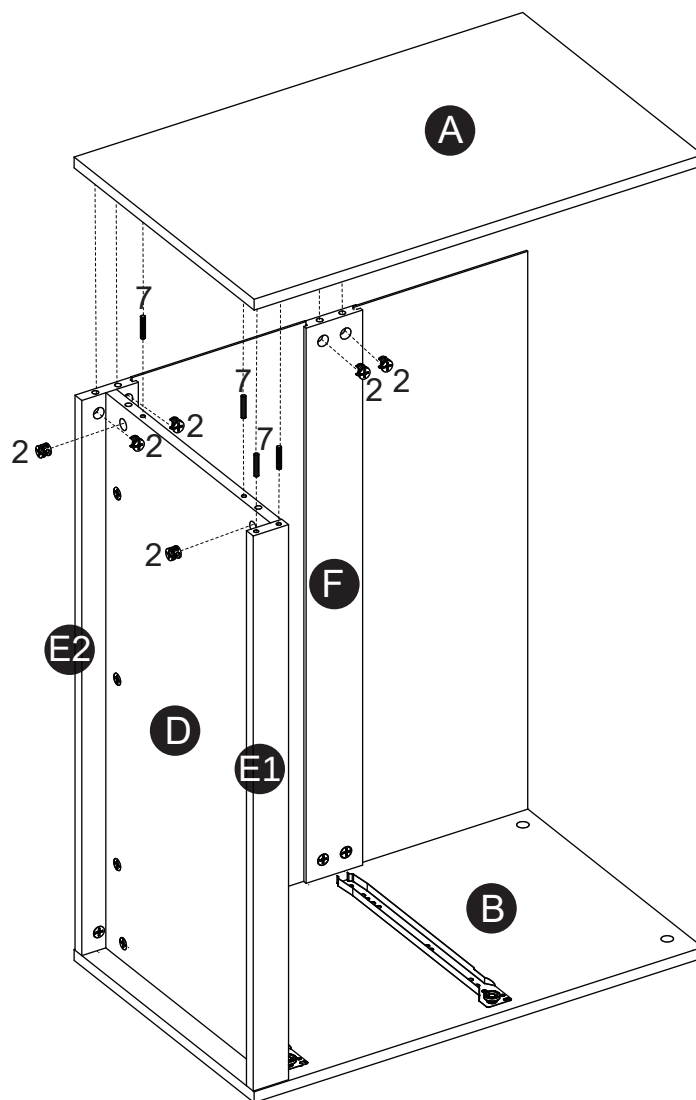

Phillips Screwdriver
needed. Not Included.



Follow the Cam Lock
safety precautions

7	X4	2	X6




Save these
instructions.

Step 8

Build Top Shelf

- Flip over the assembled unit up.
- Insert 2x wood dowel (7) to left panel (A) and right panel (B) at the specified location.
- Insert 4x Cam Lock (2) to left panel (A) and right panel (B) at the specified location.
- Carefully align wood dowel (7) to pre-drill holes,Cam Bolt(1) to Cam lock (2).
- Attach top panel (C) to left panel (A) and right panel (B) by turning all cam locks to engage. Following cam lock safety precautions.

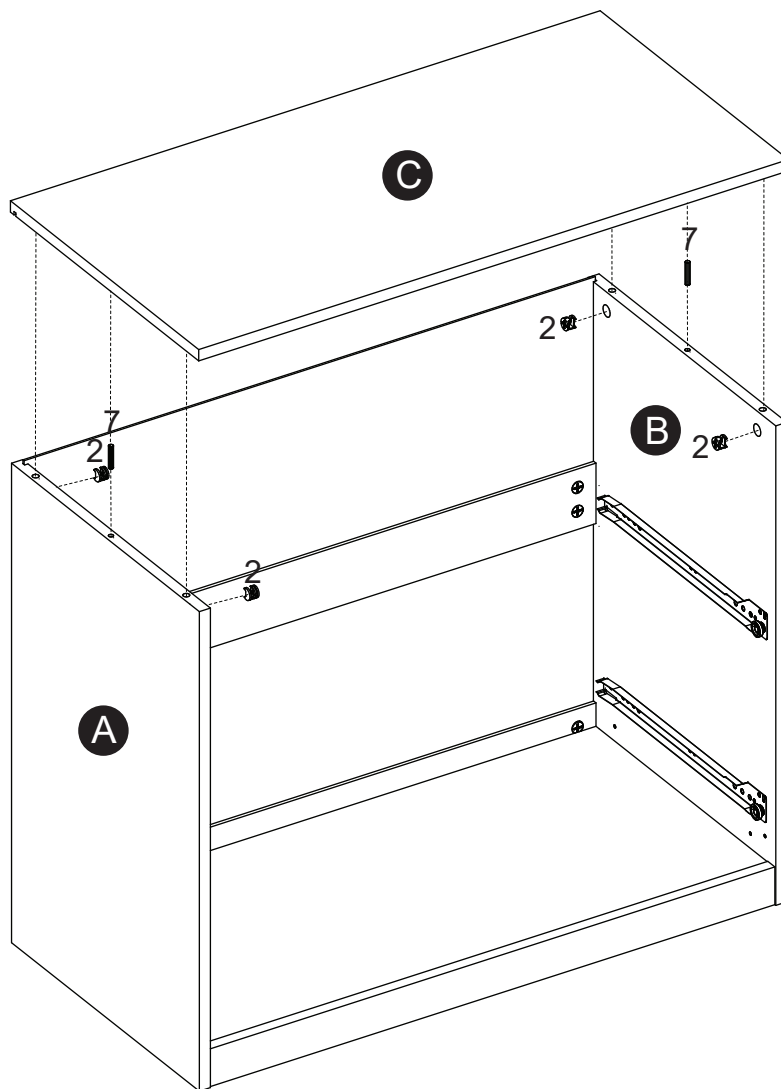

A buddy is helpful for assembly.



Phillips Screwdriver needed. Not Included.



Follow the Cam Lock safety precautions

7	X2	2	X4
			




Save these instructions.

Step 9

Assemble Backply and Stud Nail

- Fasten 12x Backply (13) to cabinet back with 12x screws (6) and tighten with a Phillips screwdriver.
- Lay the cabinet flat. Knock in 8x stud nails (9) to the bottom as below diagram .

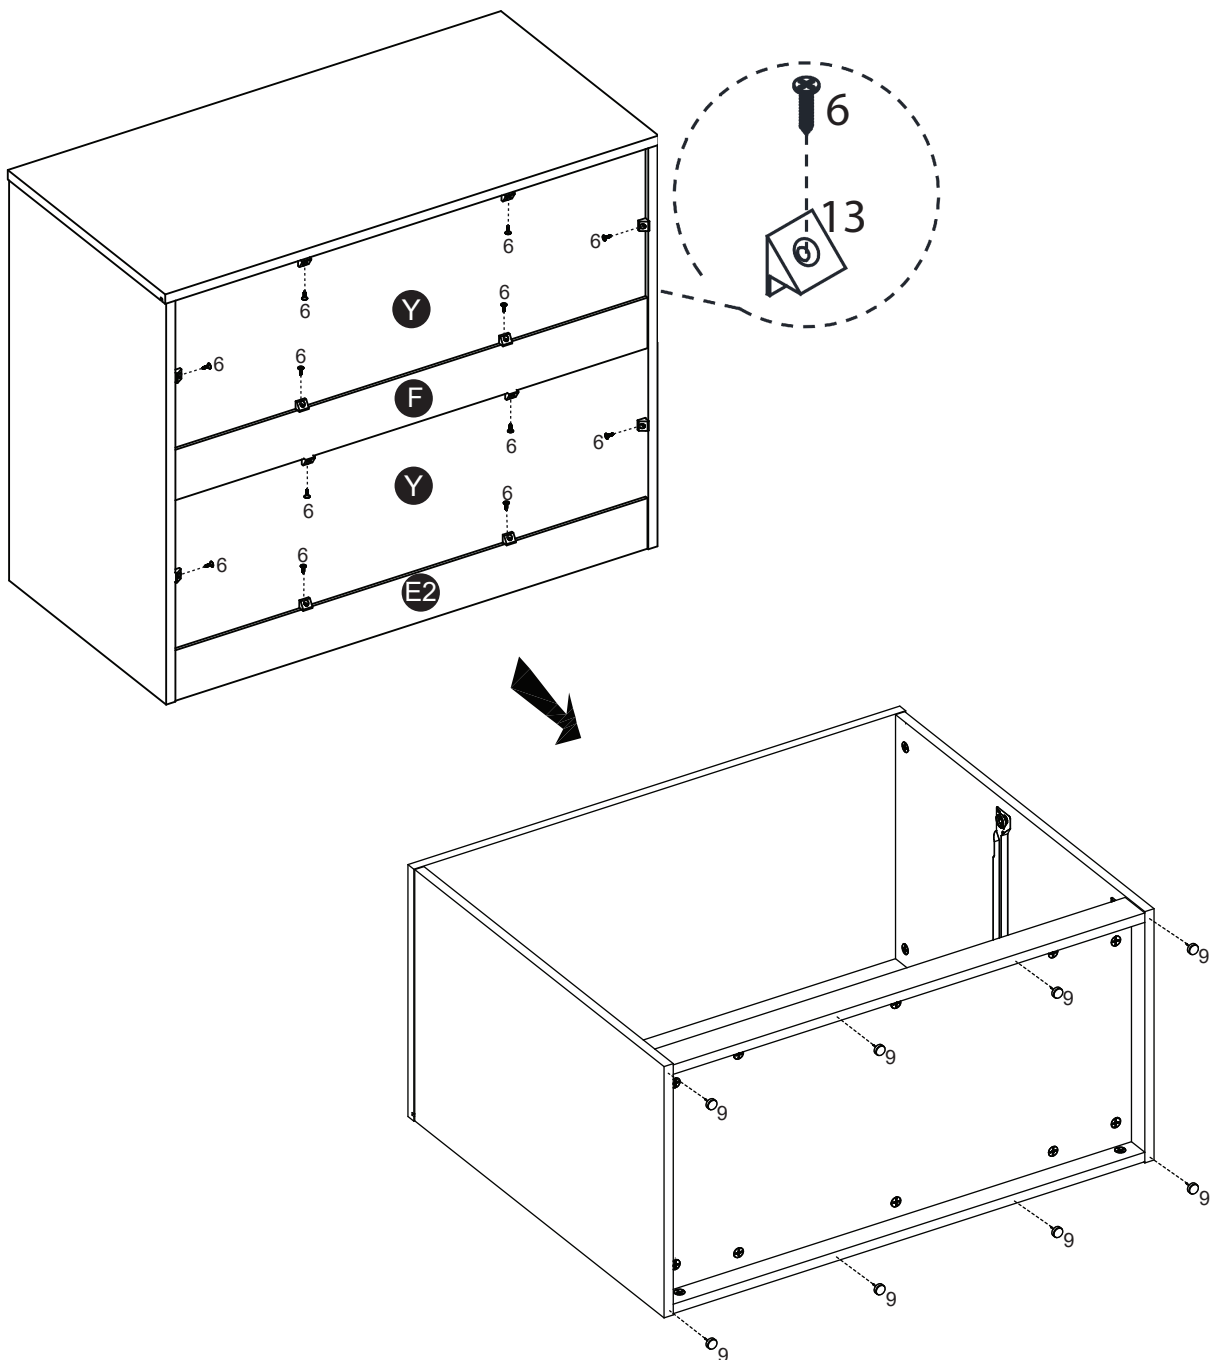

9	X8	6	X12	13	X12
					





Save these
instructions.

Step 10

Build Drawer

- Fasten left drawer panel (H) and right drawer panel (I) to back drawer panel (J) with 4x screws (3) and tighten with a Phillips screwdriver
- Fasten 2x drawer support bar (K) to back drawer panel (J) with 4x screws (3) and tighten with a Phillips screwdriver. Insert drawer bottom (Z) to the grooves at back drawer panel (J), left drawer panel (H) and right drawer panel (I).

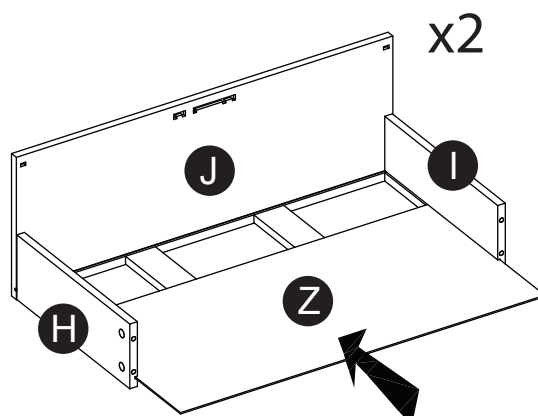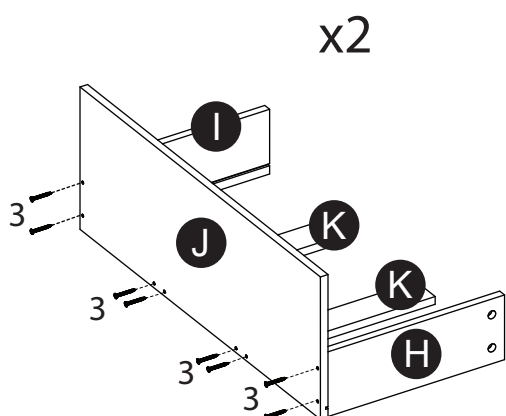

Phillips Screwdriver
needed. Not Included.





Save these
instructions.

Step 11

Build Drawer

- Insert 6x Cam locks(2) to left drawer panel (H) , right drawer panel(I)and 2x drawer support bar (K) at the specified locations.
- Carefully align 4x aluminium rods (10) to the holes at front drawer panel (G) and back drawer panel(J) at the specified location.
- Connect front drawer panel (G) to left drawer panel (H) and right drawer panel(I)by turning all Cam locks (2) to engage.
- Flip over the drawer , fasten 2x handles (8) to front drawer panel with 4x screws (6)and tighten.

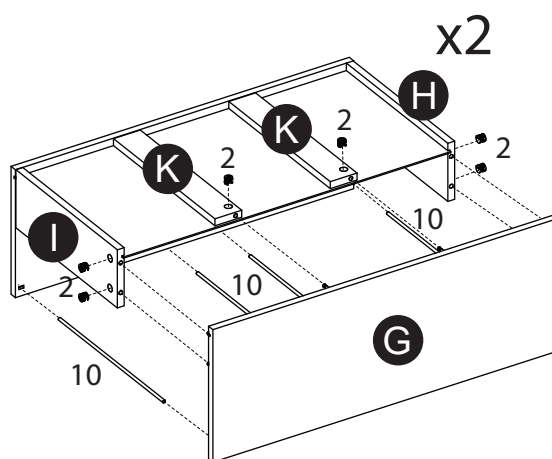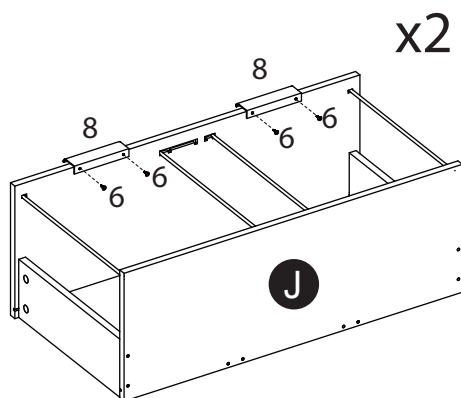

Phillips Screwdriver
needed. Not Included.



Follow the Cam Lock
safety precautions

10	X8	8	X4	2	X12	6	X8




Save these
instructions.

Step 12

Build Drawer Slide

- Identify Left drawer slide(DL) and Right drawer slide(DR) following below diagram.
- Fasten Left drawer slide(DL) to left drawer panel (H) and right drawer slide (DR) to right drawer panel I○ with 4x screws (4) and tighten with a Phillips screwdriver.

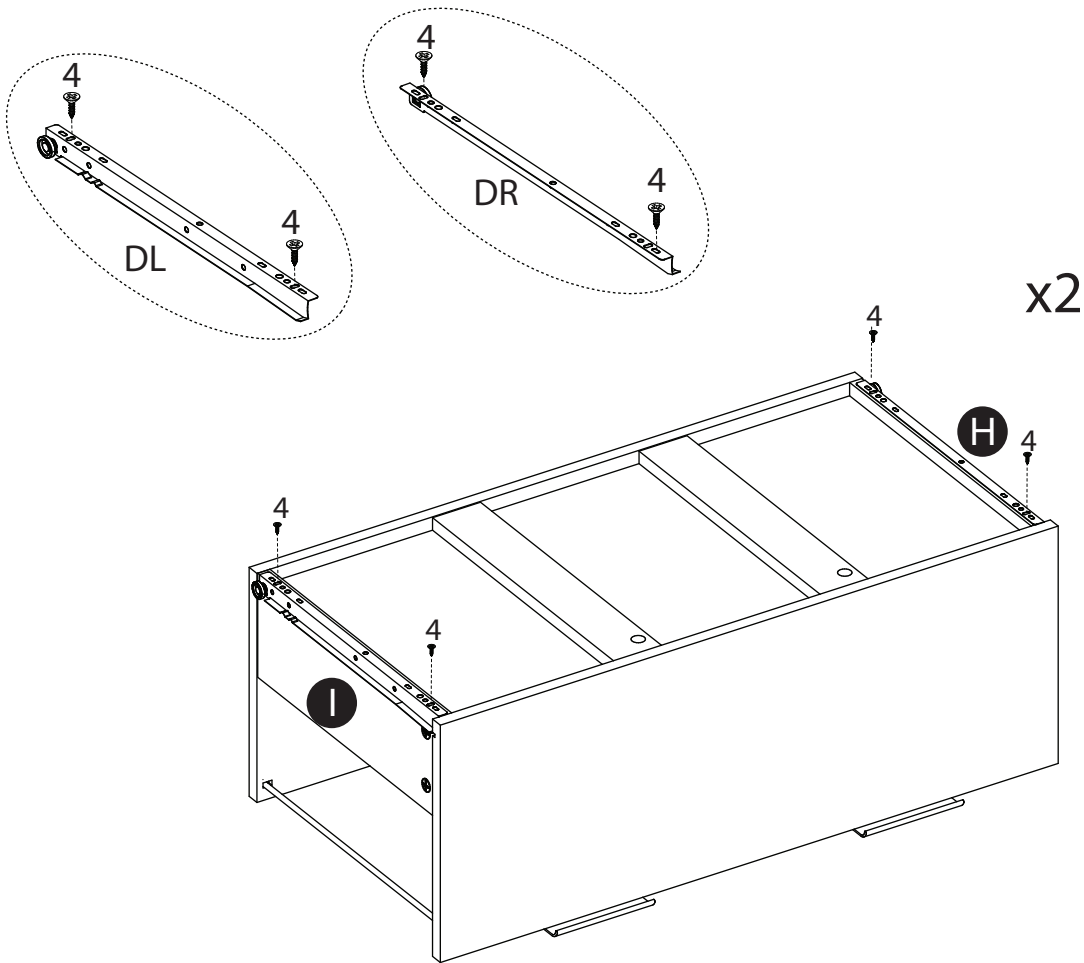

Phillips Screwdriver
needed. Not Included.

4	X8	12	X2




Save these
instructions.

Step 13

Assemble Drawer

•Insert the drawer into assembled unit, lift the front of the drawer up and slide it into the unit.

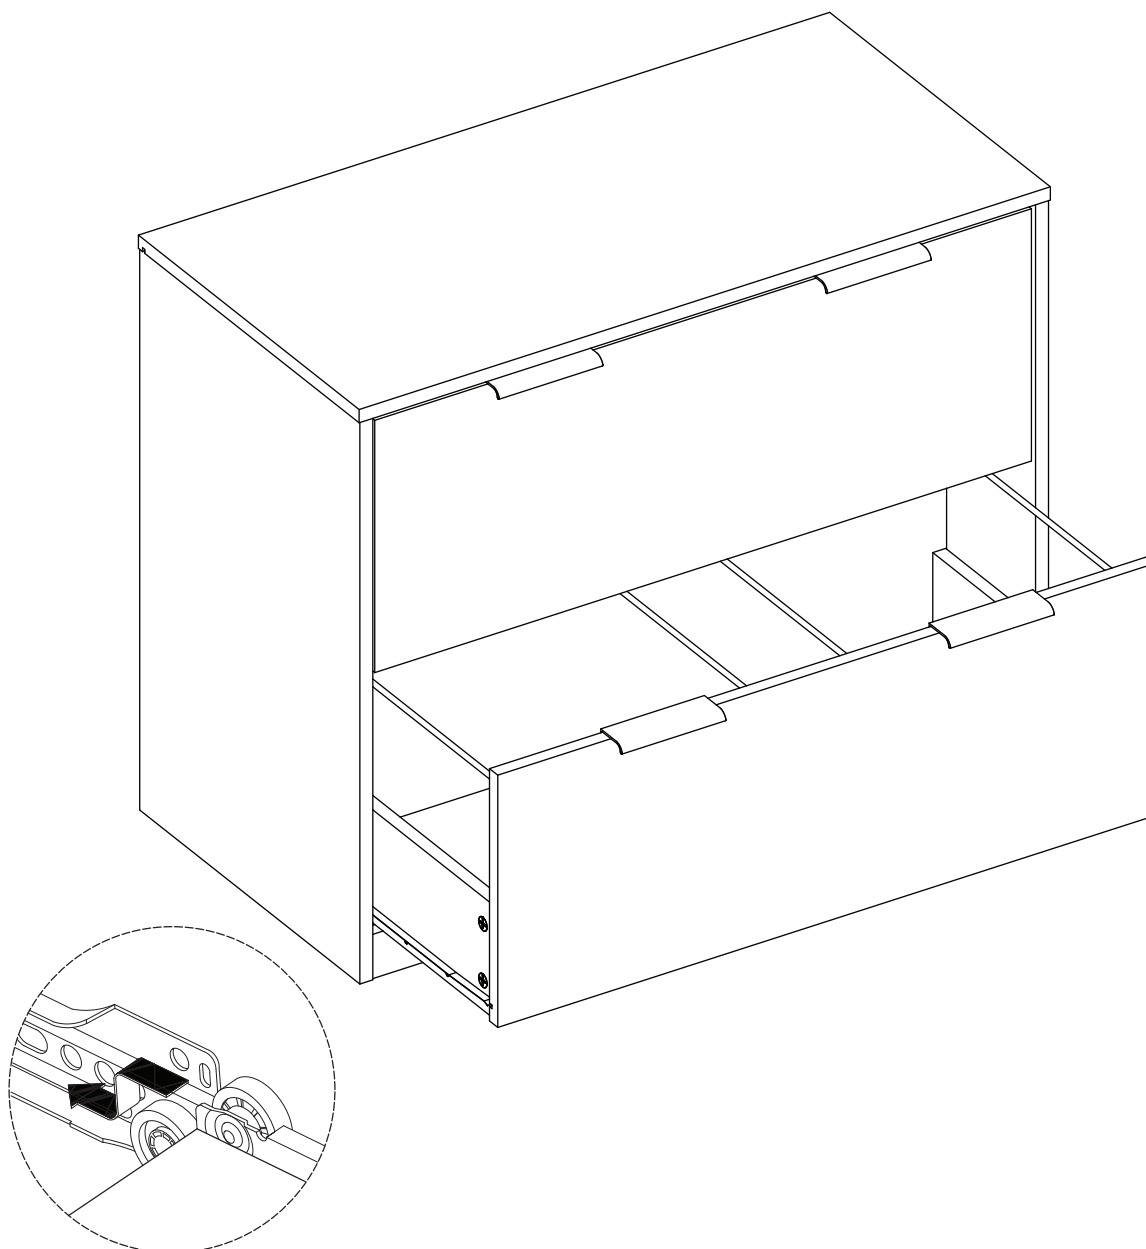

Care & Maintenance

- Regularly check all fastenings to ensure that they are properly tightened.
- Clean with a damp soft cloth, then use a soft lint free cloth to dry.
- Hot or wet items should not be placed directly on the furniture surface.
- Do not clean furniture with harsh cleaners or polish.
- Do not place furniture in direct sunlight or near heating/cooling vents.
- To protect the surface, use a pad when writing on top of the furniture.
- For indoor residential use, do not place furniture outside.
- Do not stand on the product or use as a step ladder.
- Children should not climb on furniture.

