

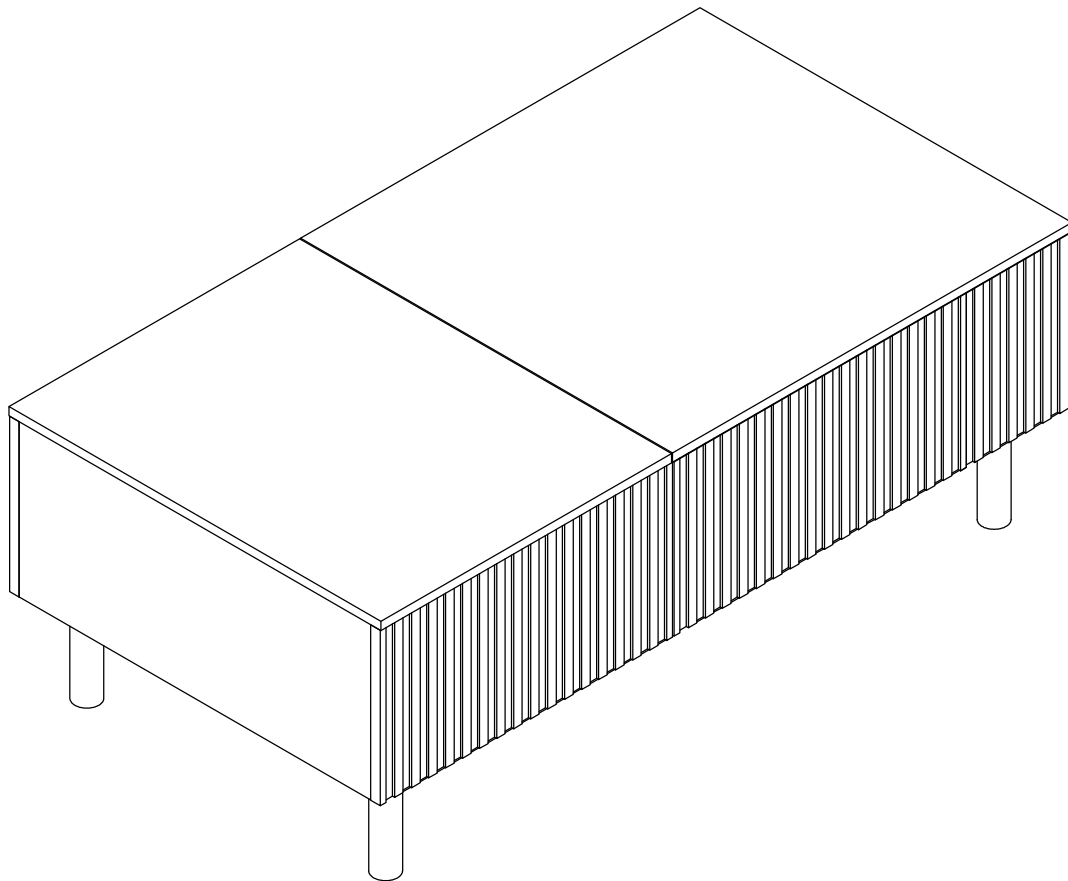
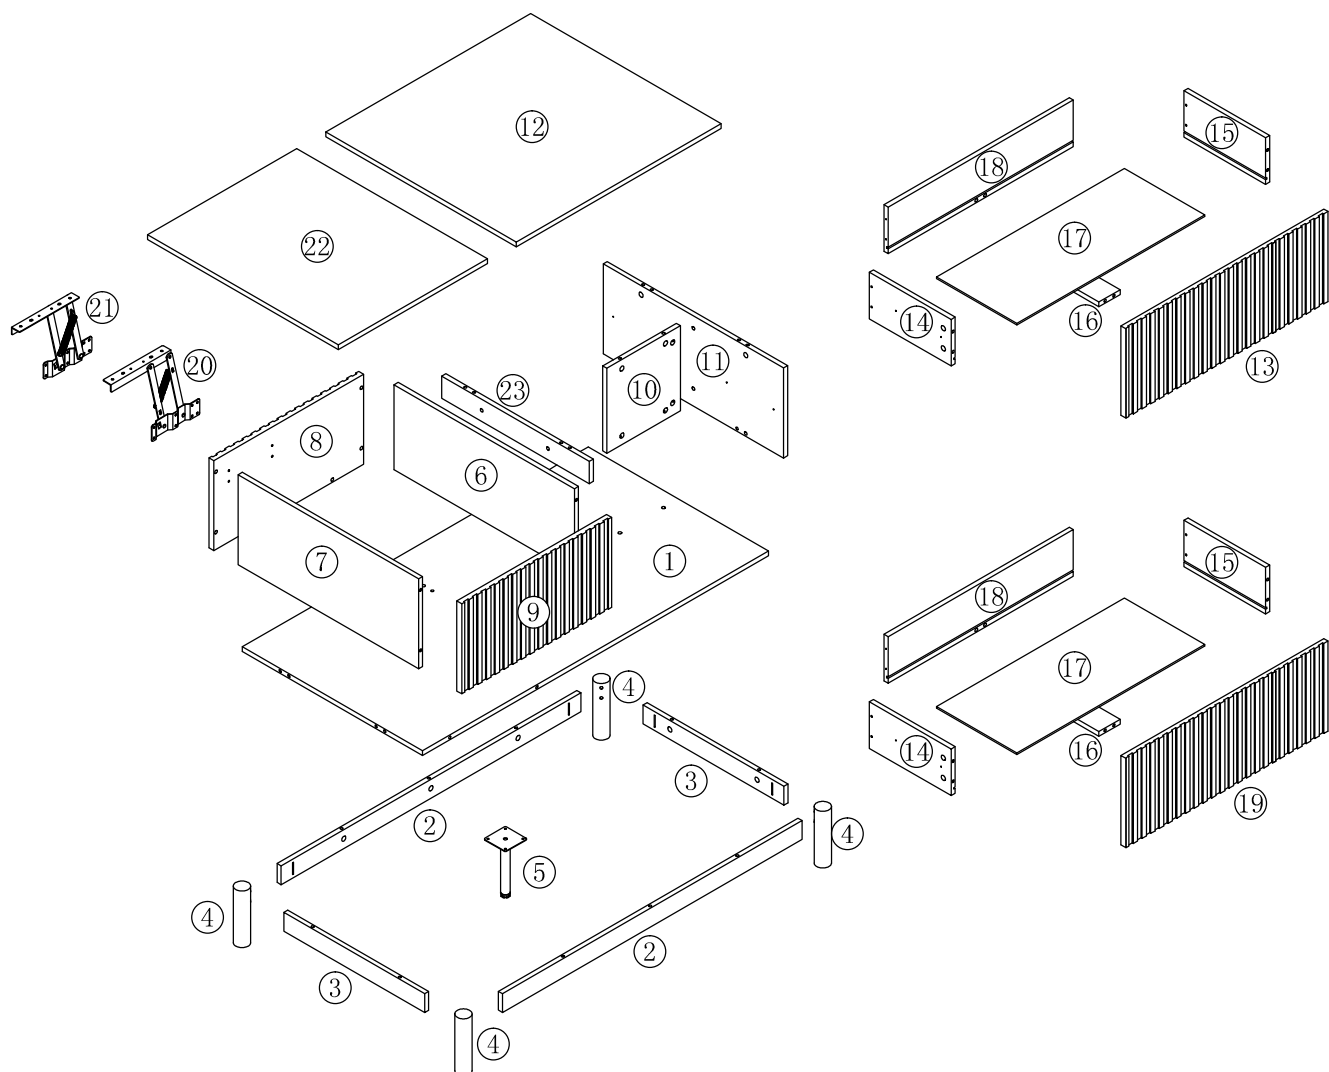





Coffee table


Installation Instructions






A 54PCS  ø6*35mm	B 54PCS  ø15*10mm	C 48PCS  ø3.5*14mm	D 4PCS 	E 10PCS  M6*25mm	F 4PCS  12"
G 10PCS  ø8*30mm	H 8PCS  ø3.5*40mm	I 4PCS  M4*12mm	J 12PCS  ø4*15mm		

1

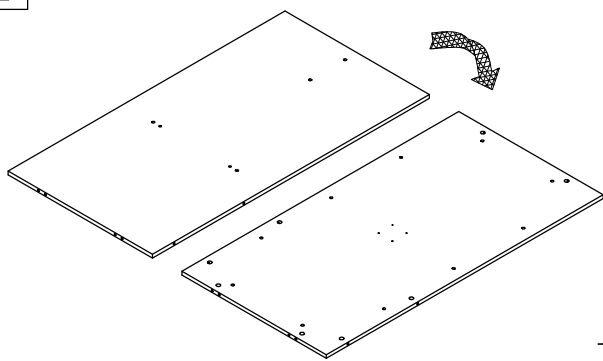


1PC

2

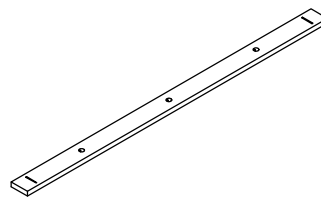

2PCS

3



2PCS

4




4PCS

5




1PC

6

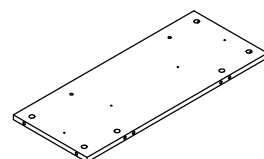


1PC

7

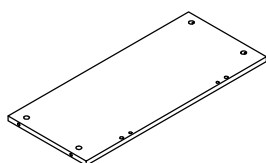


1PC

8

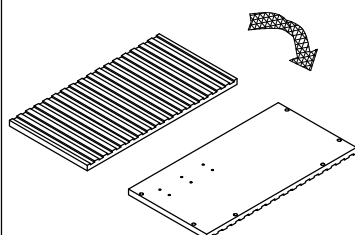


1PC

9

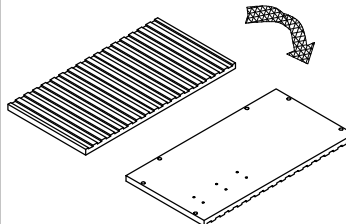


1PC

10




1PC

11

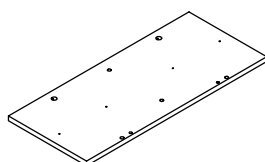


1PC

12

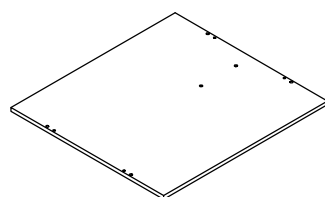


1PC

13

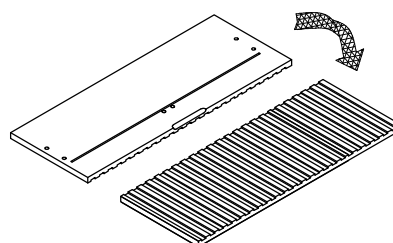


1PC

14




2PCS

15




2PCS

16




2PCS

17

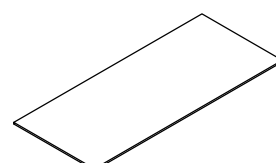


2PCS

18

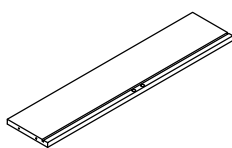


2PCS

19

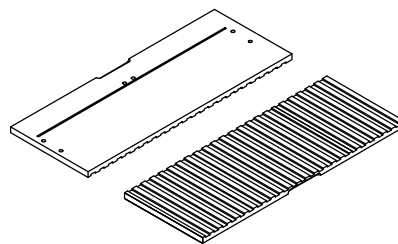

1PC

20




1PC

21




1PC

22

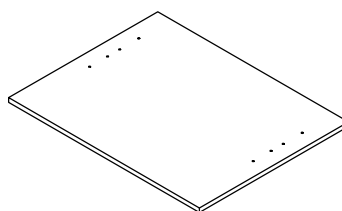

1PC


23



1PC


"A" Hardware installation example

I




This part cannot be separated,
please install in strict
accordance with the assembly
requirements


II

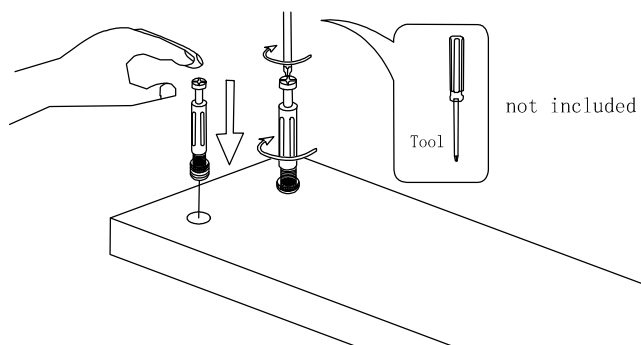




III

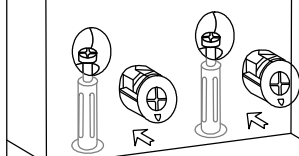

IV



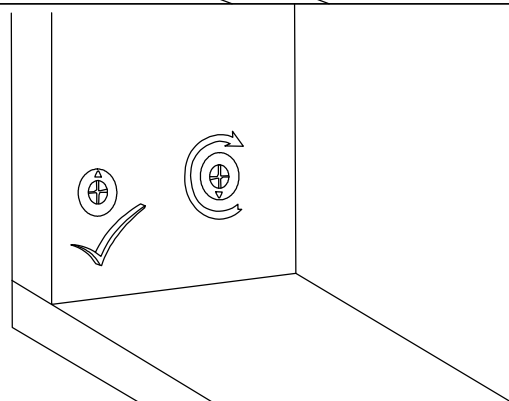


Step 1

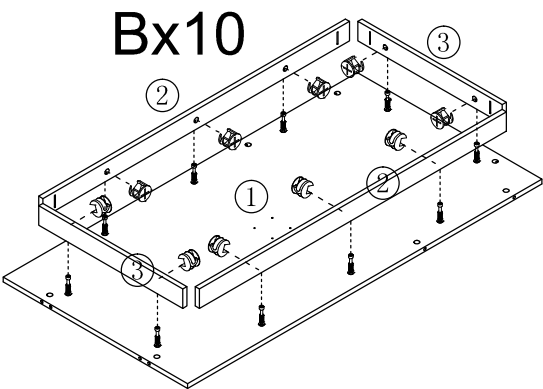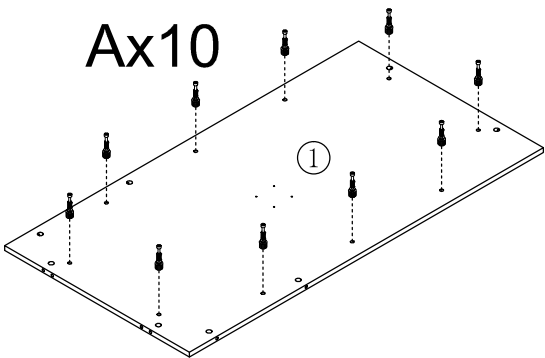

A	10PCS
	
$\varnothing 6 \times 35 \text{mm}$	
B	10PCS
	
$\varnothing 15 \times 10 \text{mm}$	










Step 2

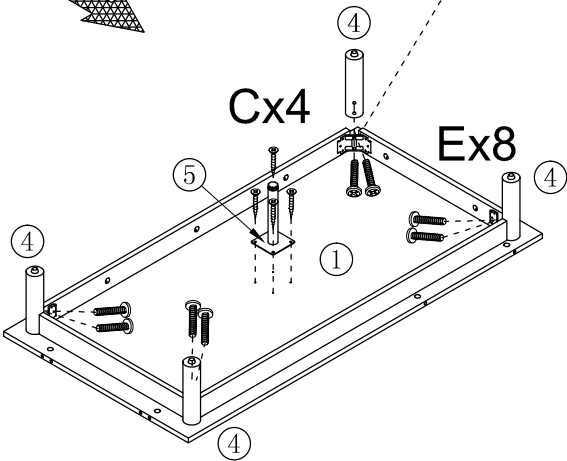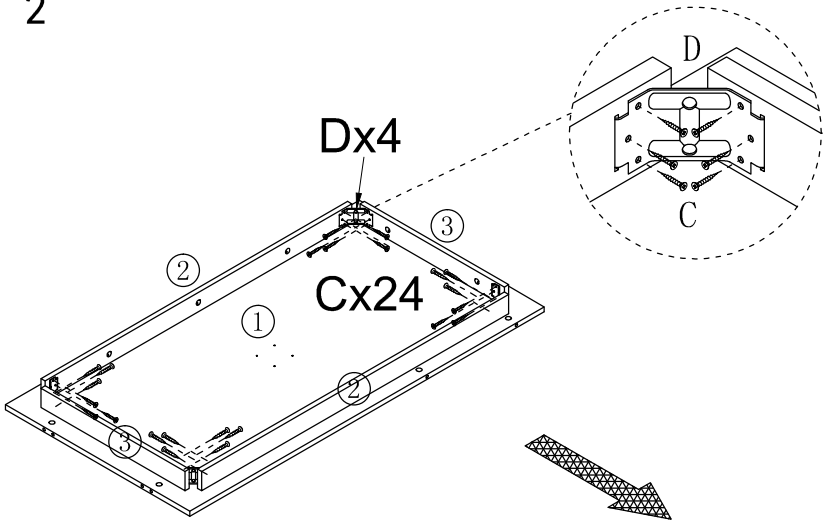

C	28PCS
	
$\varnothing 3.5 \times 14 \text{mm}$	
D	4PCS
	
E	8PCS
	
$M6 \times 25 \text{mm}$	


Step 3

A	44PCS
	
Ø6*35mm	

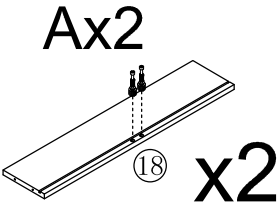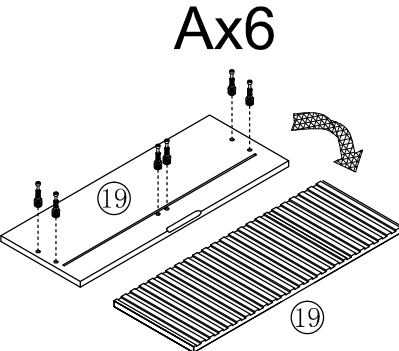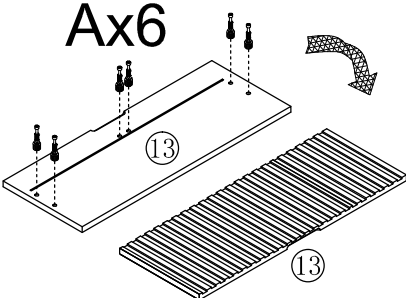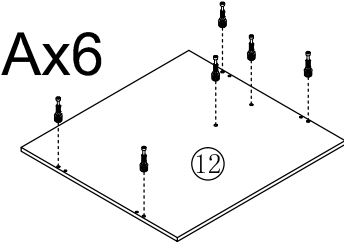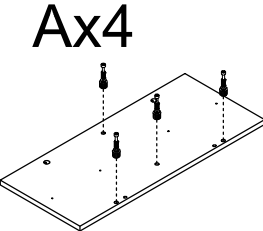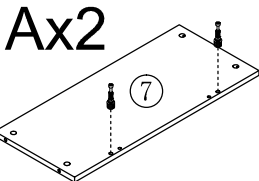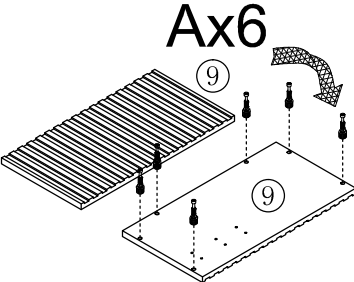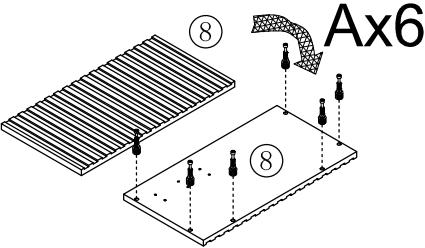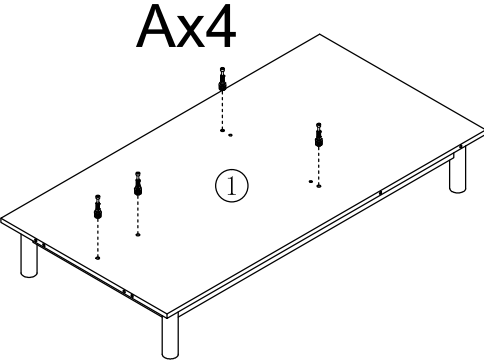


Step 4

F	4PCS
	
12"	

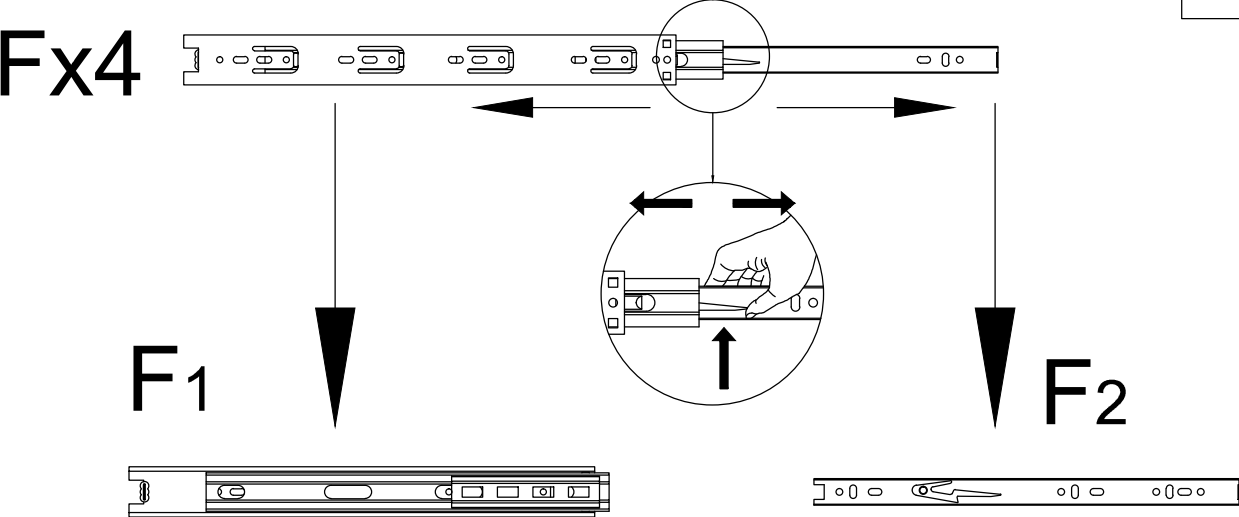


Step 5

C	8PCS
	
Ø3.5*14mm	
F1	4PCS
	
12"	

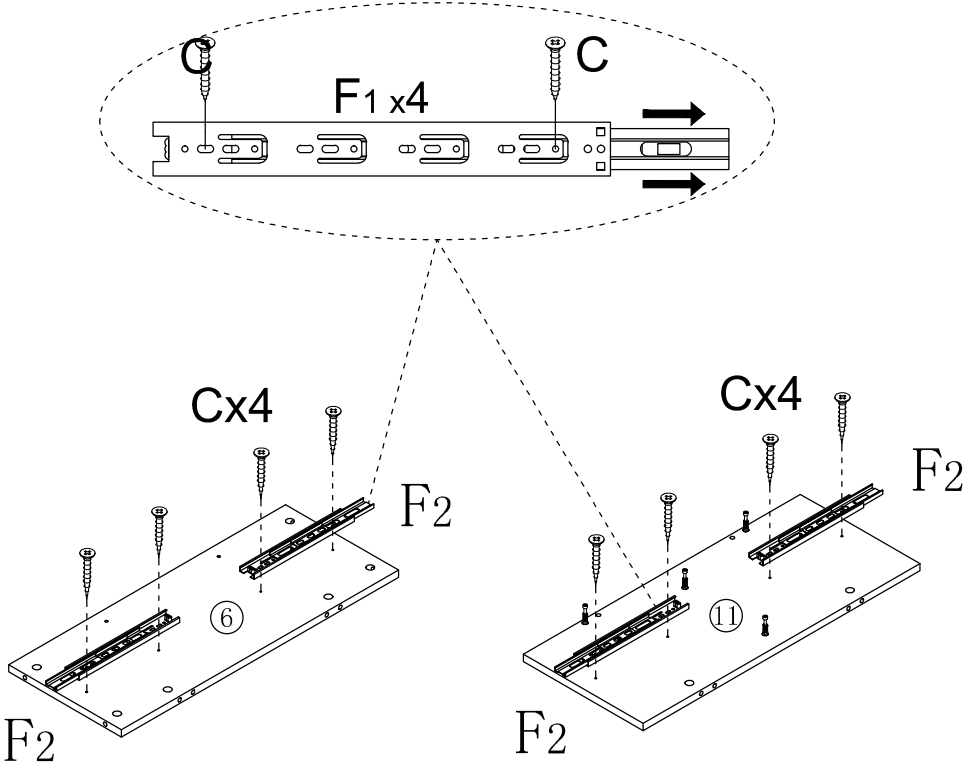


Step 6

B	2PCS
	
Ø15*10mm	
G	2PCS
	
Ø8*30mm	
E	2PCS
	
M6*25mm	

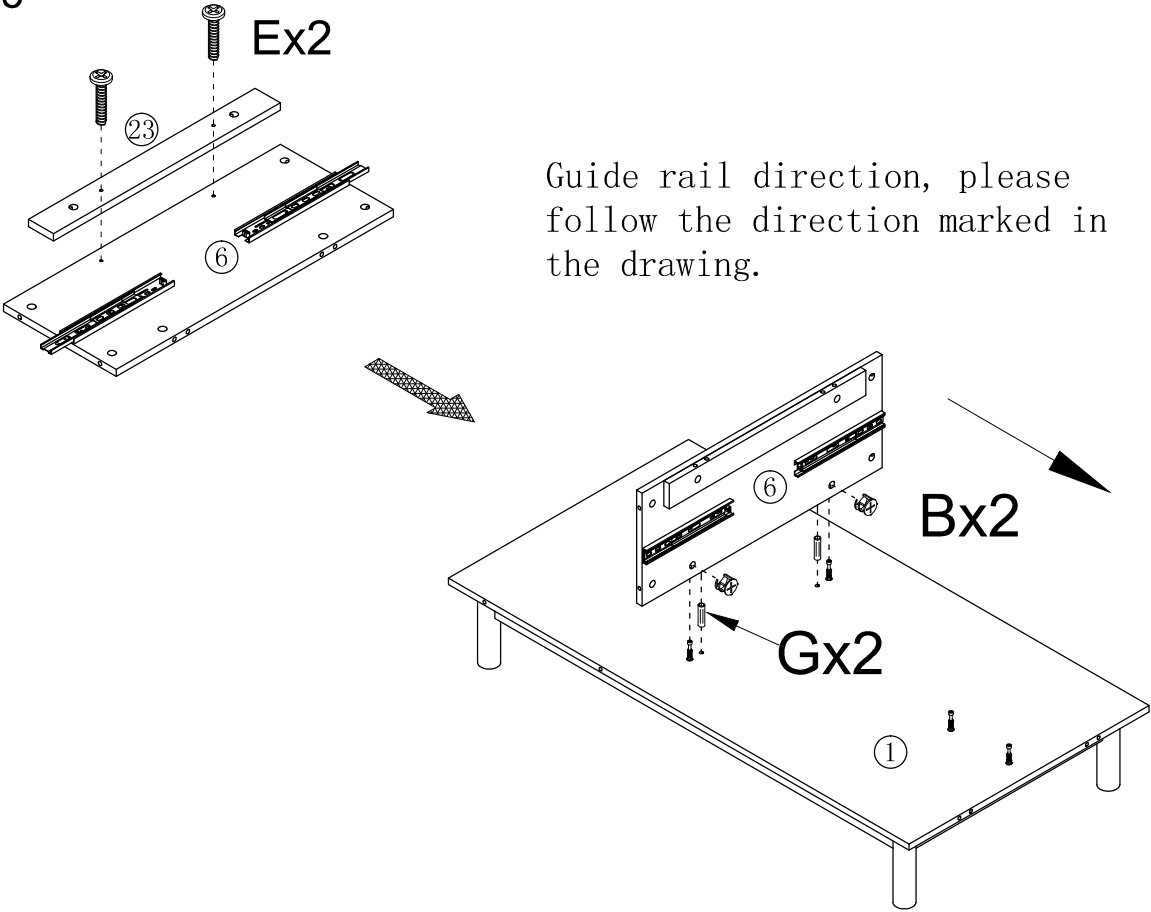

Step 7


B	2PCS
	
Ø15*10mm	
G	2PCS
	
Ø8*30mm	

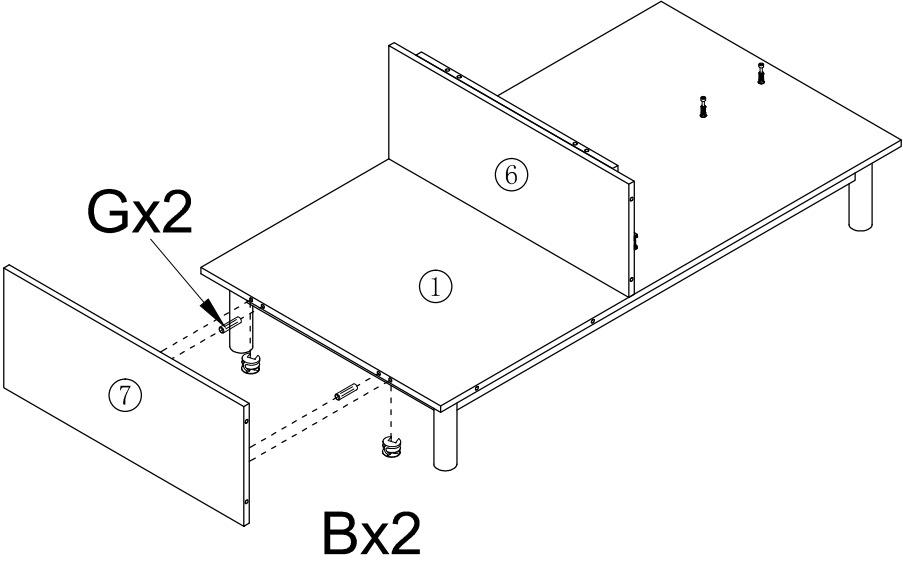

Step 8


B	12PCS
	
Ø15*10mm	

Note the position of the screw holes.

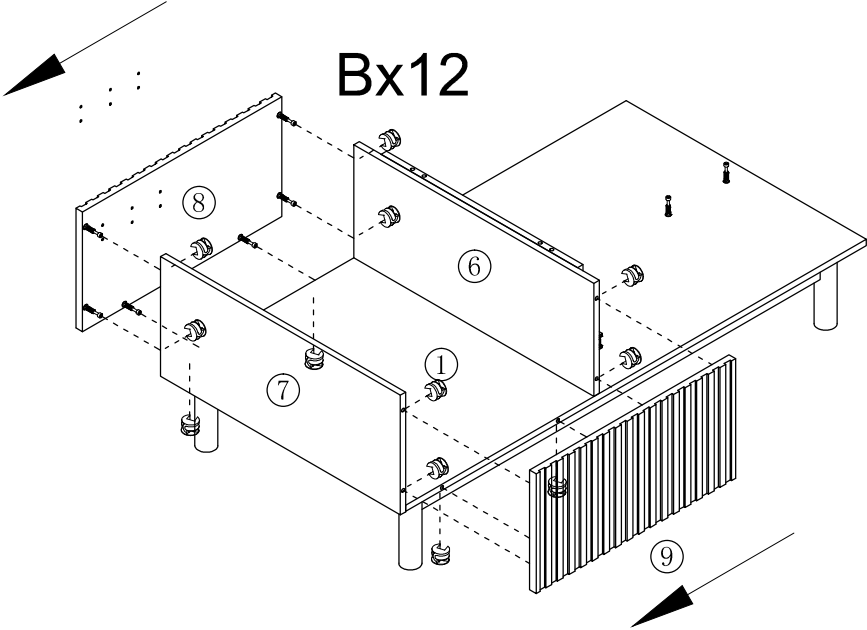


Step 9

B	2PCS
	
Ø15*10mm	

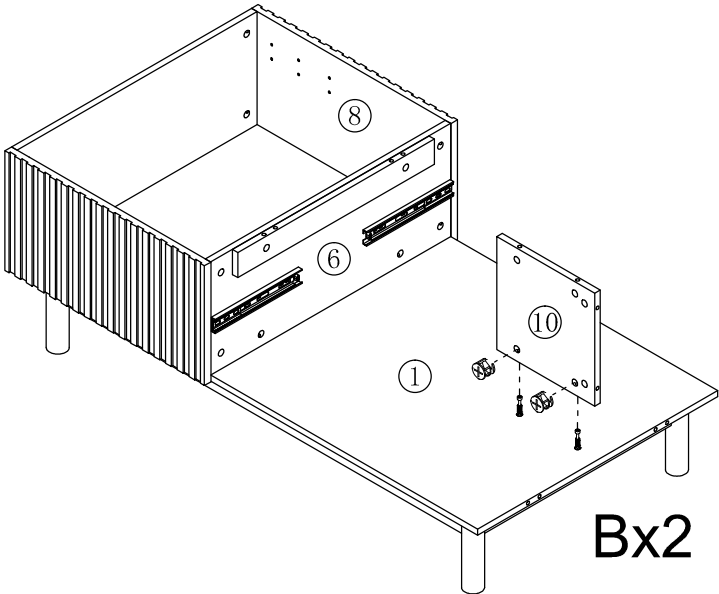


Step 10

B	4PCS
	
Ø15*10mm	
G	2PCS
	
Ø8*30mm	

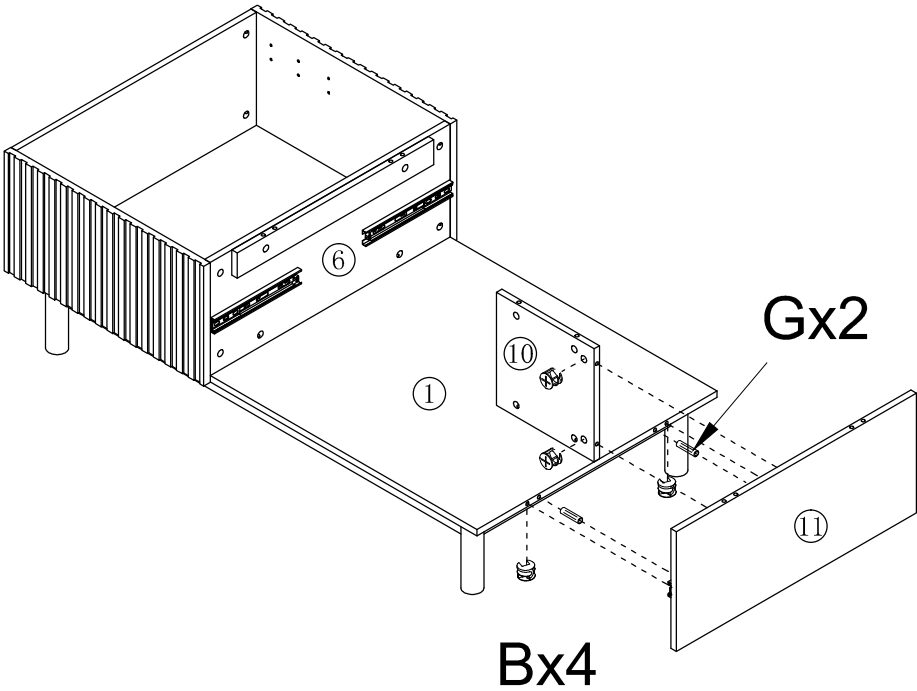


Step 11

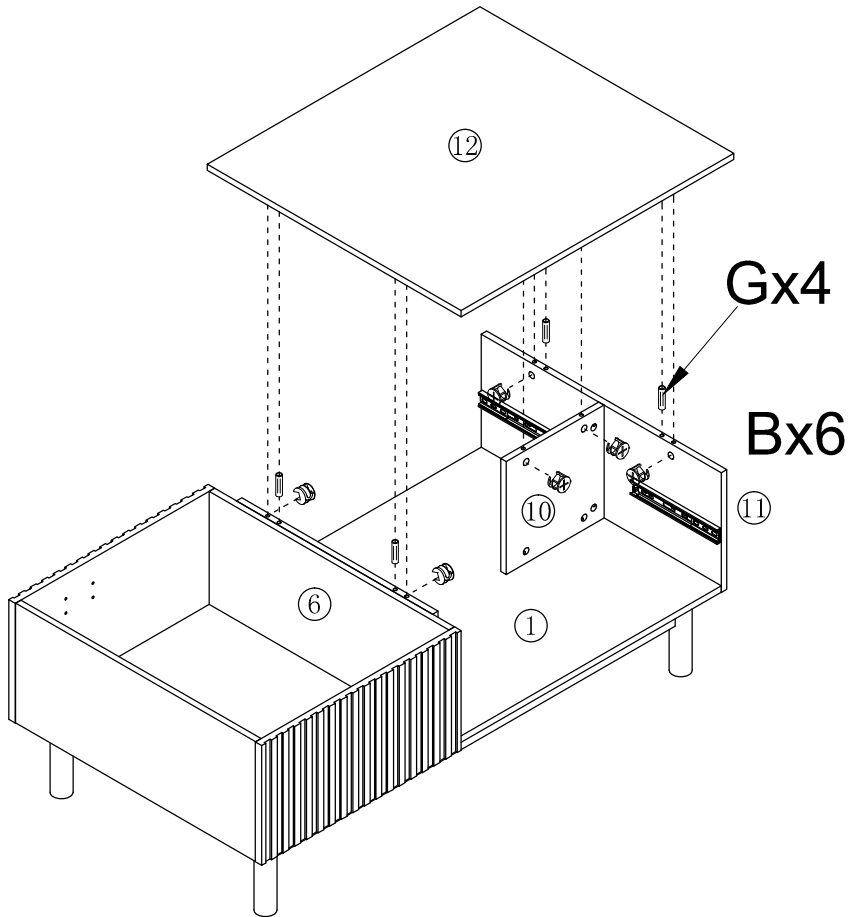

B	6PCS
	
Ø15*10mm	
G	4PCS
	
Ø8*30mm	


Step 12

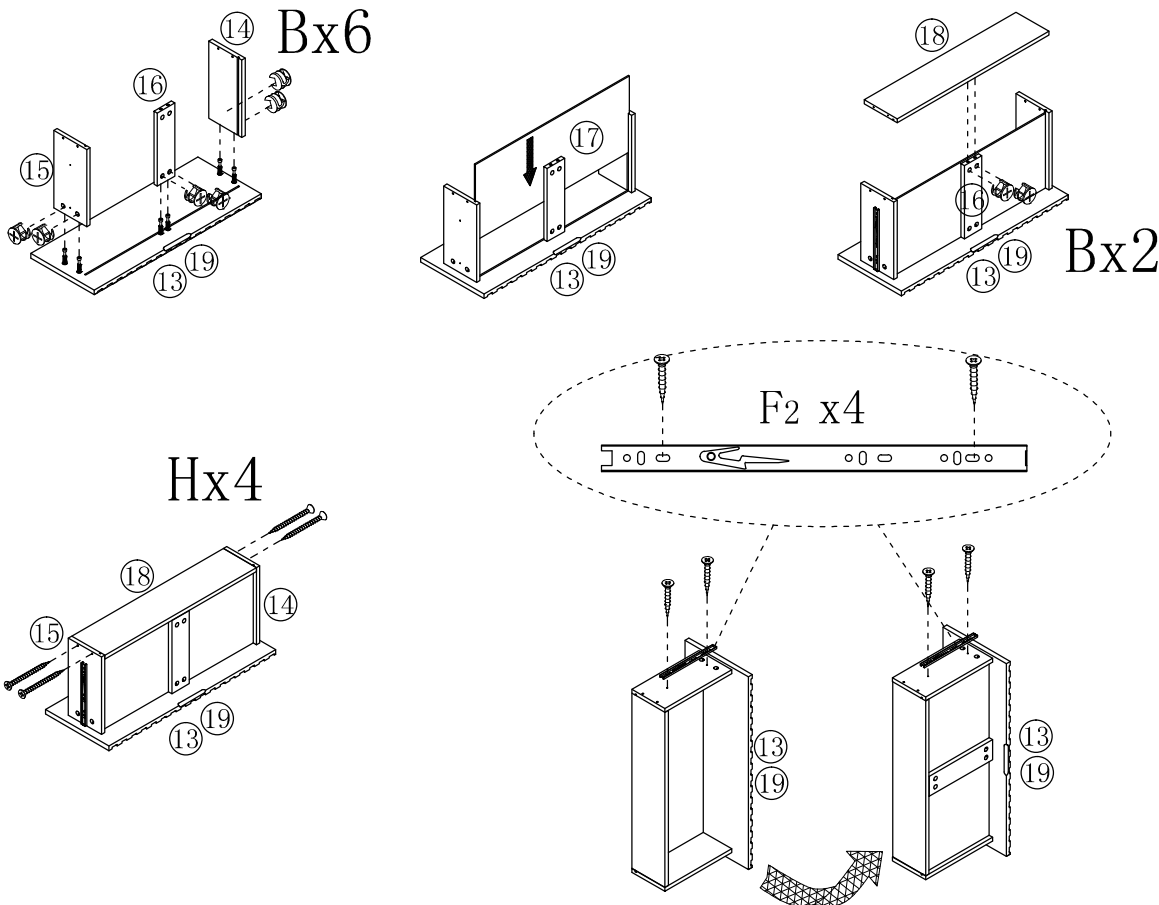

B	16PCS
	
Ø15*10mm	
C	8PCS
	
Ø3.5*14	
F2	4PCS
	
12"	
H	8PCS
	
Ø3.5*40	


x2

Step 13

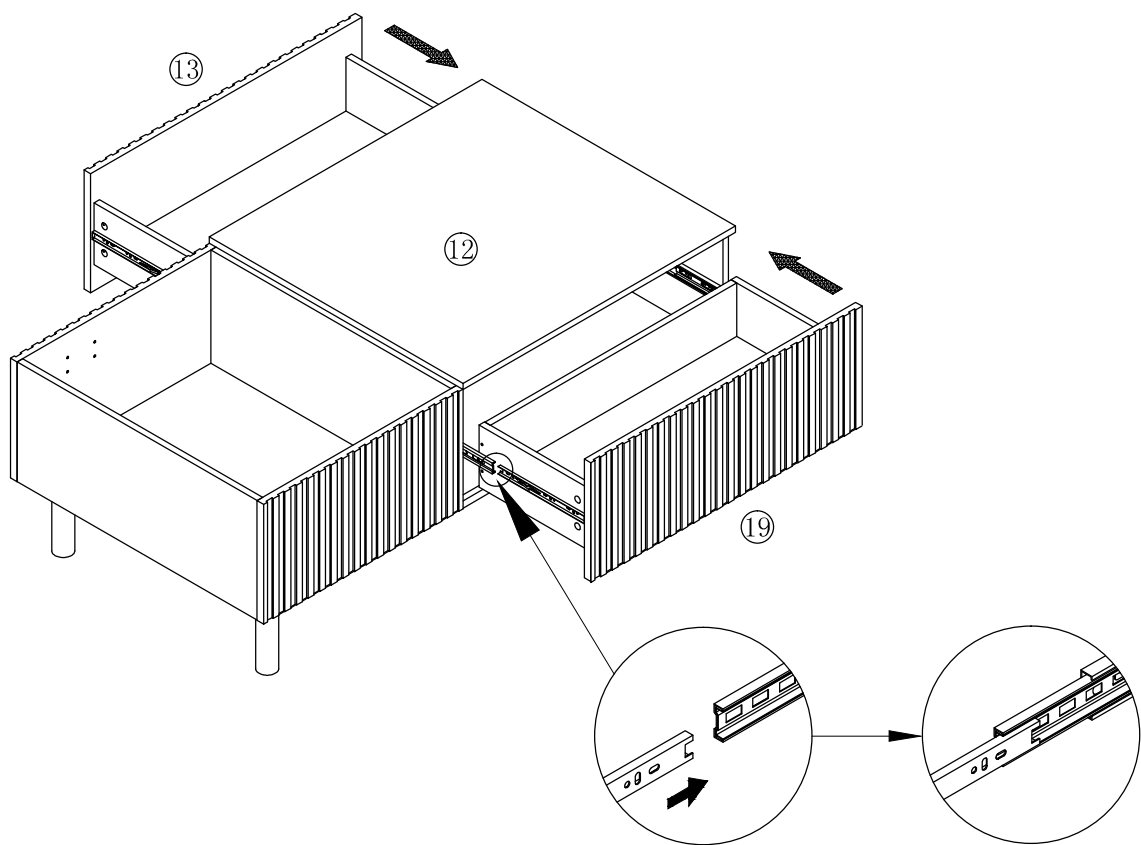


Step 14

J	12PCS
	
Ø4*15mm	

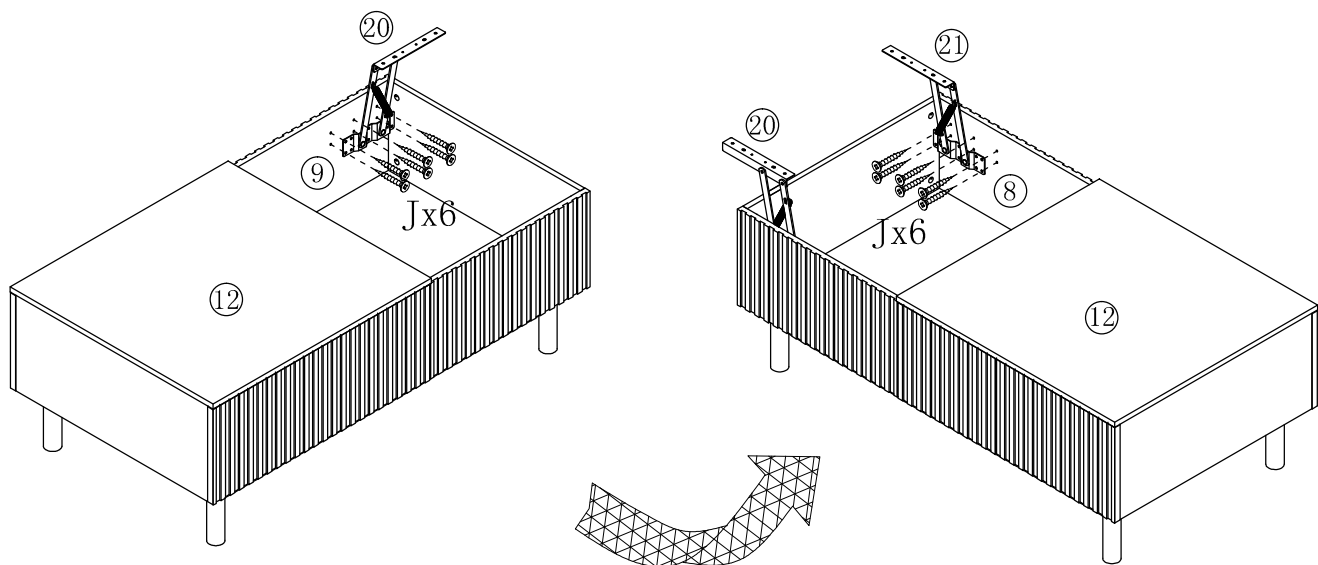


Step 15

Install Panel 22 by first attaching Screw I, then closing the panel. Check and adjust the gaps on the tabletop. Once the gaps are properly aligned, finally tighten Screw I and Screw C securely.

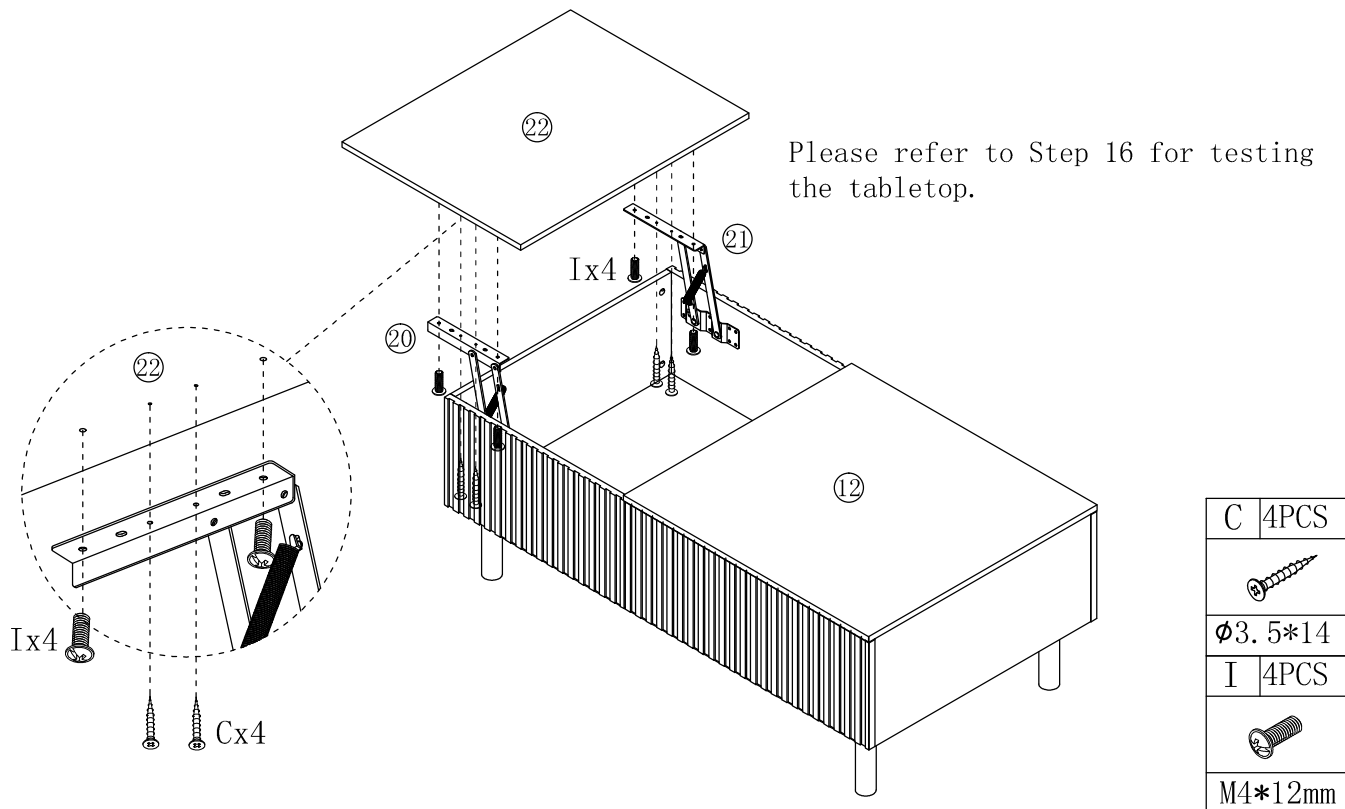

Step 16

To close the tabletop, gently push it forward in the direction of the arrow. Do not apply excessive downward force, as this may damage the components.

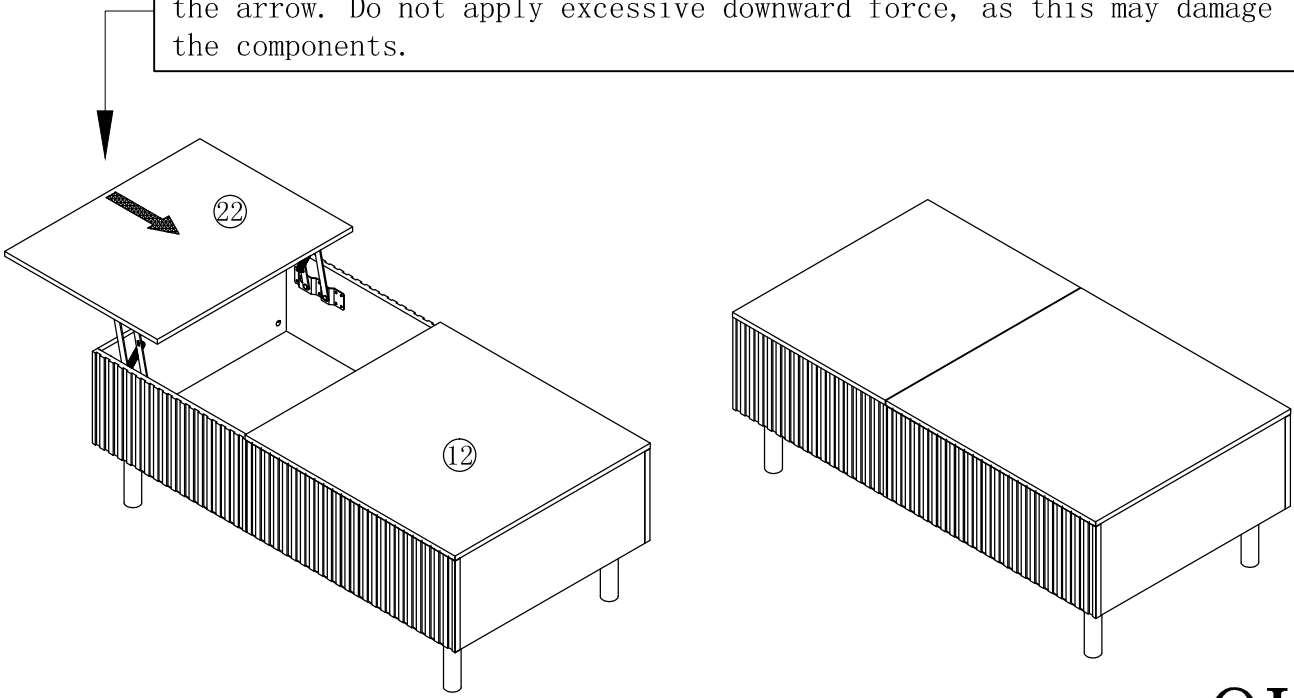

OK