JAMIE YOUNG Co

CHATEAU MIRROR

SAFETY, INSTALLATION AND CARE INSTRUCTIONS

ITEM DESCRIPTION:	
ITEM NO: 6CHAT-MIWH	NAME: CHATEAU MIRROR
MATERIAL TYPE: BONE & MDF	
FINISH: ANTIQUE & NATURAL	
ITEM NET WEIGHT: 10.100 KG	

PARTS INCLUDED

(A)Anchors (4)

(B)Screws (4)

(C)Wall Bracket (1)

(D)Mirror (1)

(A) 

(B) 

(C) 


TOOLS NEEDED
(IF APPLICABLE)

(a) Electronic Stud Finder

(b) Drill with Phillips Bit

(c) Pencil

(d) Bubble Level

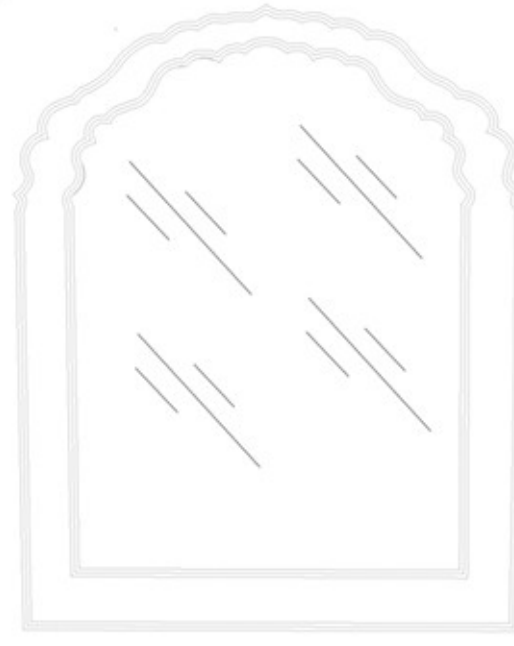(D) 


JAMIE YOUNG Co

CHATEAU MIRROR

SAFETY,INSTALLATION AND CARE INSTRUCTIONS


WARNING

YOUNG CHILDREN MAY BE INJURED BY TIPPING PRODUCTS, SO THE USE OF TIPPING RESTRAINTS IS HIGHLY RECOMMENDED. THIS PRODUCT IS ONLY A DETERRENT AND NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. THE MANUFACTURER ASSUMES NO LIABILITY FOR IMPROPER INSTALLATION OR EXCESSIVE LOADS PLACED ON SCREWS, BRACKETS, OR STRAPS. WHEN PROPERLY INSTALLED, THIS RESTRAINT WILL HELP PREVENT THE PRODUCT FROM TIPPING OVER.

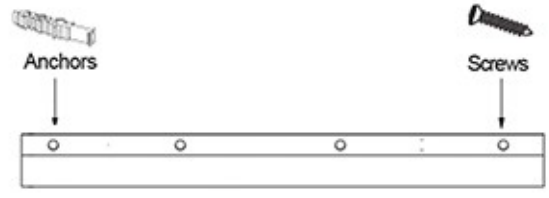


SAFETY INSTRUCTIONS

THIS HANGING SYSTEM IS INTENDED FOR DRYWALL STUD MOUNTING ONLY. IF YOUR WALLS ARE MADE OF CONCRETE, BRICK, OR PLASTER, PLEASE CONSULT YOUR LOCAL HARDWARE STORE FOR ASSISTANCE. FOR SAFETY AND EASE OF INSTALLATION, WE RECOMMEND HAVING TWO PEOPLE PERFORM THE INSTALLATION.

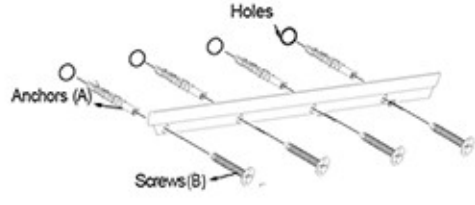

ASSEMBLY INSTRUCTIONS

1. Unpack all the parts and place them on a protected work surface.
2. Hold mirror (D) at desired location, so that mounting bracket (C) will be over a stud. With a pencil, mark the center-top of the mirror (D) on the wall.
3. Measure down from the center-top of the panel to the center-top of the mounting bracket on the back of the panel, and mark this point on the wall. Make a hole in the wall with the use of a drill. Before drilling additional holes, put the bubble level on the wall bracket (C) to test and make sure the wall bracket is level. Then hold the wall bracket (C) against the wall and drill holes for all anchors (A) as shown in the illustration. Place the respective anchors (A) in the holes, then set the wall bracket (C) on top of them.
4. Attach the wall bracket (C) by screwing screws (B) into the inserted anchors. Then, tightly screw all mounting screws (B) through remaining holes of wall bracket (C).
5. Mount the mirror (D) to the wall by sliding the mirror until the mounting bracket rests on the wall bracket (C).
6. Installation is complete.

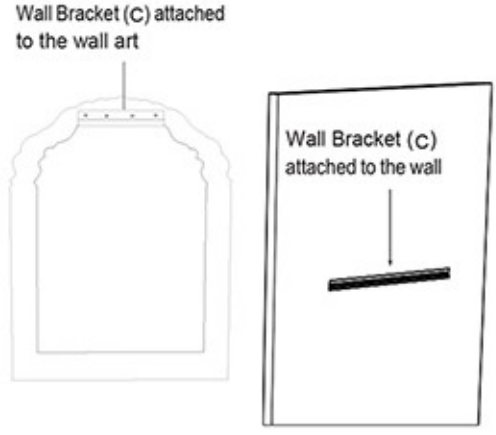

CARE INSTRUCTIONS

To clean, wipe gently with soft, dry cloth. Avoid the use of harsh chemicals or abrasive cleaners, as they may damage the finish.