


# INSTALLATION INSTRUCTIONS FOR FIFTH FLOOR FILE CABINET

**⚠ WARNING!** For smooth assembly you can use a power screwdriver, wear safety glasses and gloves when using tools.

Attention! Attention! The J door panels and K door panels are embedded inside the C side panels and D side panels; they need to be taken out during assembly.

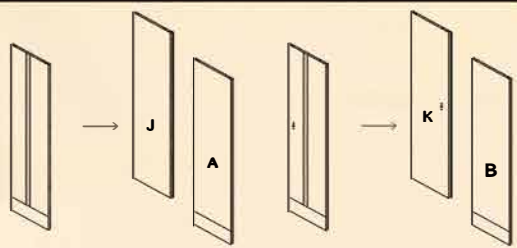


## Before you start, here are a few quick pointers:

The installation requires two people. so call a friend to join the fun!

For more stability, it's best to anchor the cabinet to the wall.  
In this case, along with the items provided you will also need a Level, Percussion Drill and a Hammer



**SUGGEST  
2 PEOPLE**

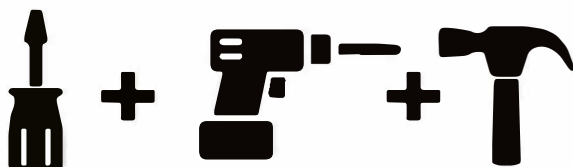






















**TOOLS  
REQUIRED**



**WE ARE  
GLAD TO  
HELP**

# PARTS LIST

Name		Part	Qty.	Name		Part	Qty.
A	Left back panel		1	N	Bottom fixing parts		4
B	Right back panel		1	O	Laminated buckle		16
C	Left side panel		1	P	Partition pin		2
D	Right side panel		1	Q	Anti-collision soft plug		4
E	Top bar		1	R	Anti tipping		2
F	Bottom bar		1	V	Top door fixing parts		2
G	Top cover		1	W	Glove		1
H	Bottom cover		1	X	Screwdriver		1
I	Partition board		4				
J	Left door		1				
K	Right door		1				
L	Screw		35				
M	Nut screw		4				




# STEP 1

Connect panel **A** and panel **B** to each other, align the hole position, and secure with screw **M**.




## STEP 2

Connect panel **C** to panel **A** and panel **D** to panel **B**, then align the hole position and secure with screw **L**.

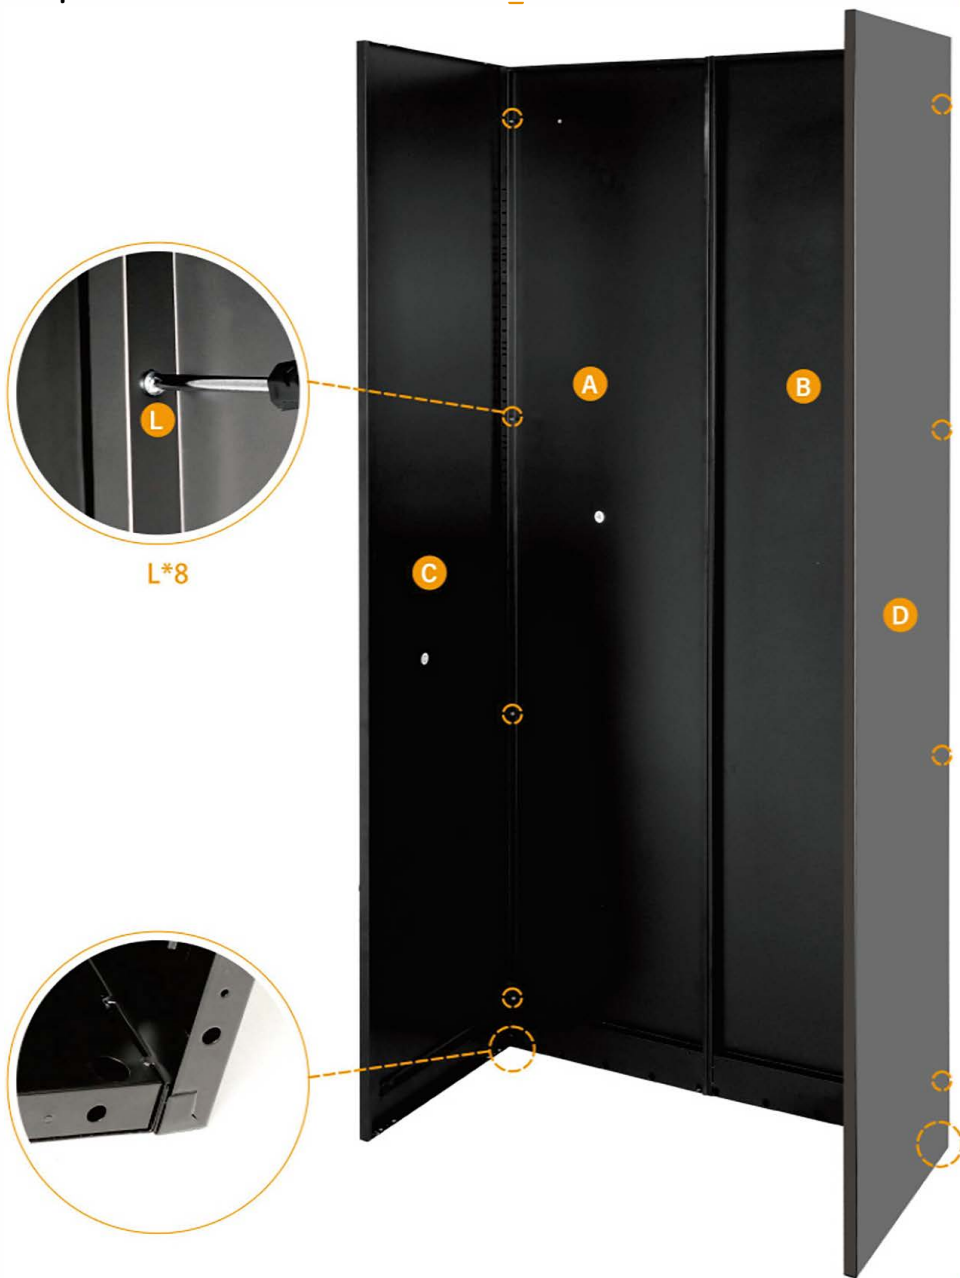


## STEP 3

Set the frame **E** at the top of the **C** **D** position. Drive two screws on each side.

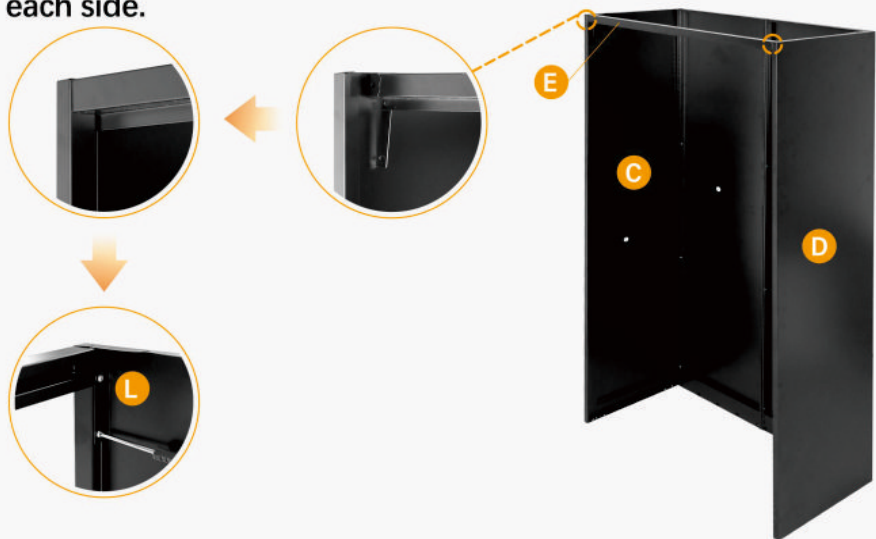


## STEP 4

Install the frame **F** to the bottom of the **C** and **D**, and push the bottom opening position of the **C** and **D** up with the screw.

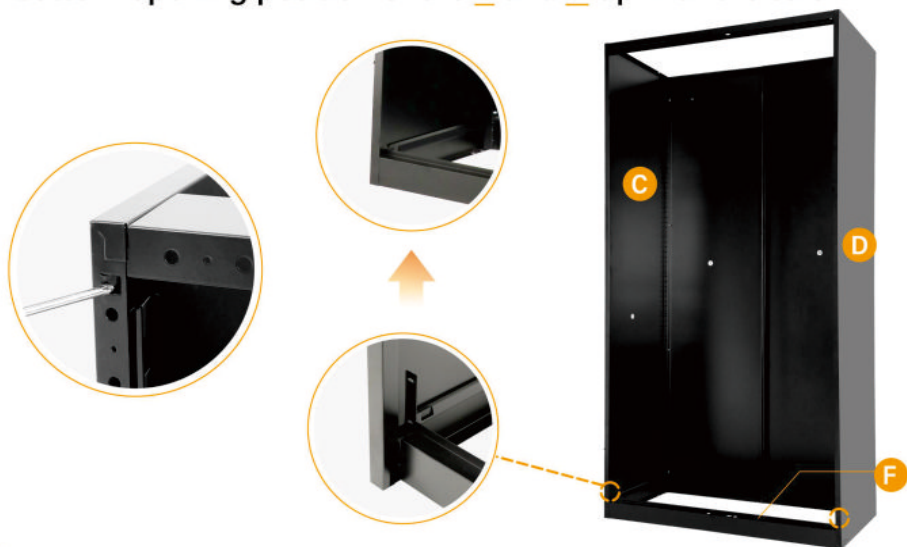


## STEP 5

Connect **C** to **F** and **D** to **F** with four screws **L**.

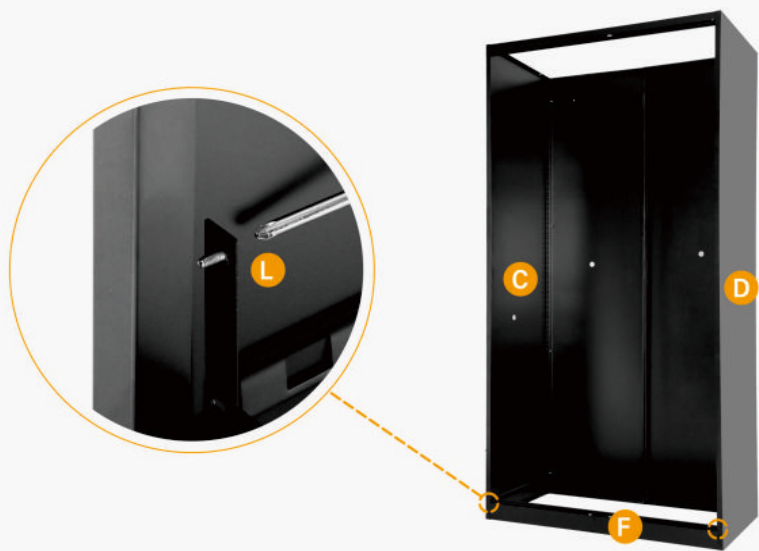


## STEP 6

Push the top **G** from the bottom to the top position. Fixed with 7 screws **L**.

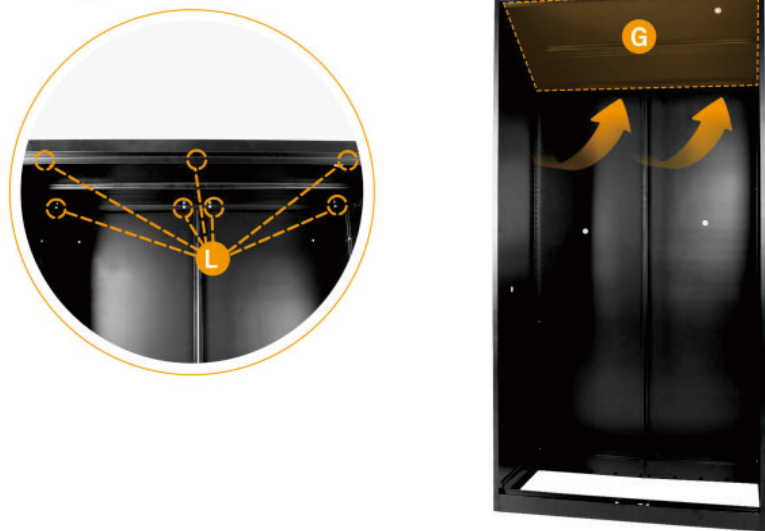


## STEP 7

Install Bottom Panel **H**

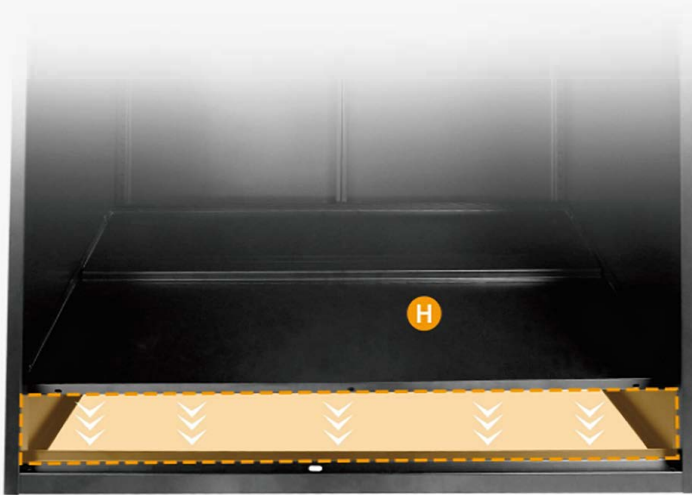

## STEP 8

Secure 4 screws **L** in the bottom plate hole position.

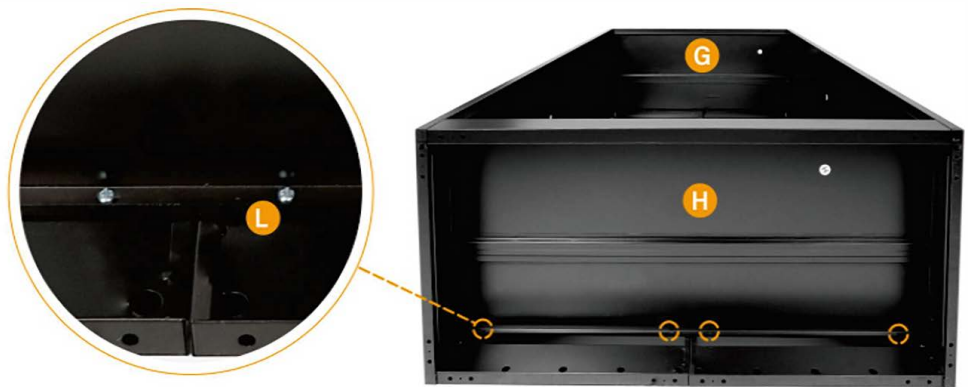


## STEP 9

Fix the four standing feet **N** to the four bottom feet with screws **L**.



## STEP 10

First install the laminate **O** buckle and then put the shelf **I** on

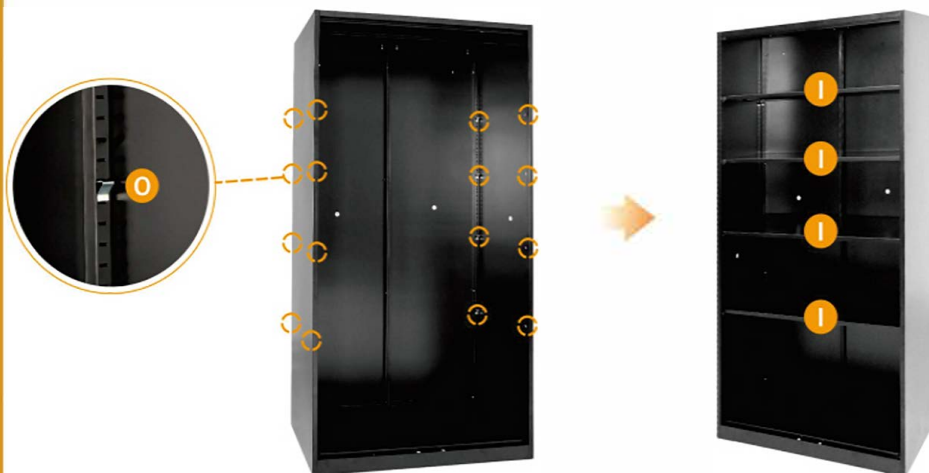

# STEP 11

Insert **P** into the bottom holes on both sides, press the spring door shaft to align it with the **E** hole for installation, and finally install **Q** above **J** and **K**

