
ASSEMBLY INSTRUCTIONS


NIGHT STAND

(BOX 1)

| NO | ITEM | QTY |
|----|-------------|-------|
| A | NIGHT STAND | 1 pc |
| В | BUN FOOT | 4 pcs |

STEP 1: Pull the drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Night Stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

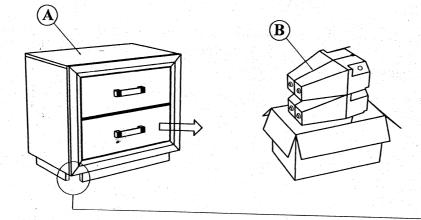

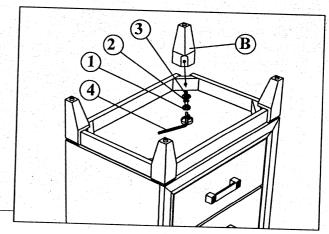

(BOX 1) HARDWARE LIST

| NO | ITEM | QTY |
|----|---------------------------------|----------|
| | JCBC M6 x 50mm | |
| 1 | | 4 PCS |
| 2 | Spring Washer 1/4" Rbw | |
| | | PCS |
| | Flat Washer 1/4"ID x 19mmOD Blk | |
| 3 | | 4 |
| | | PCS |
| 4 | ALLEN KEY m4x65mm Blk | |
| | | 1 pc |



COMPLETED ASSEMBLY