



6Drawer Dresser

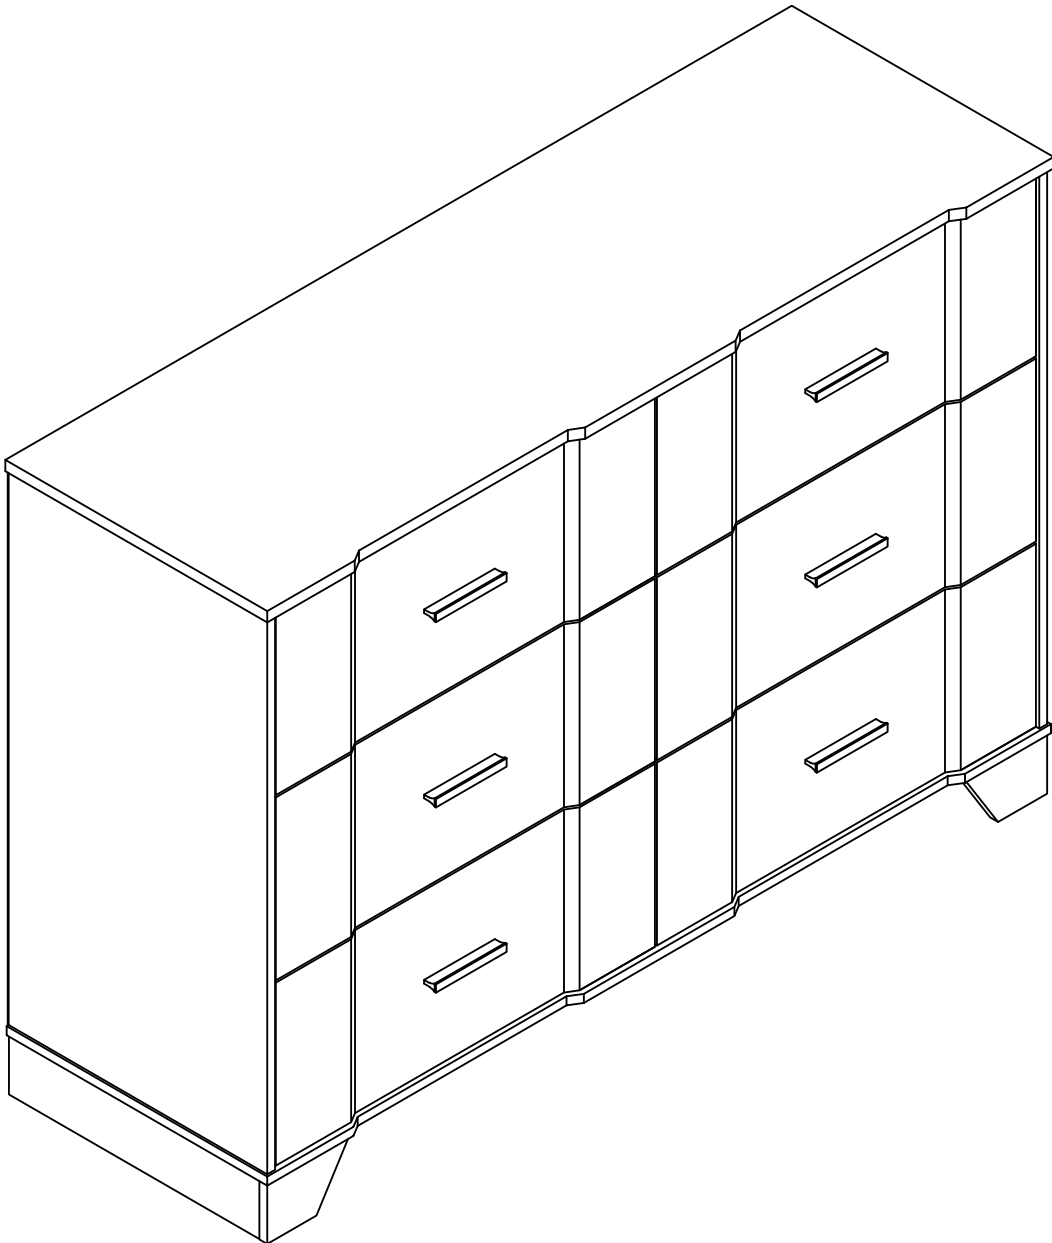


PACKAGE INCLUDE

STRUCTURE FOR REFERENCE TO ASSEMBLY

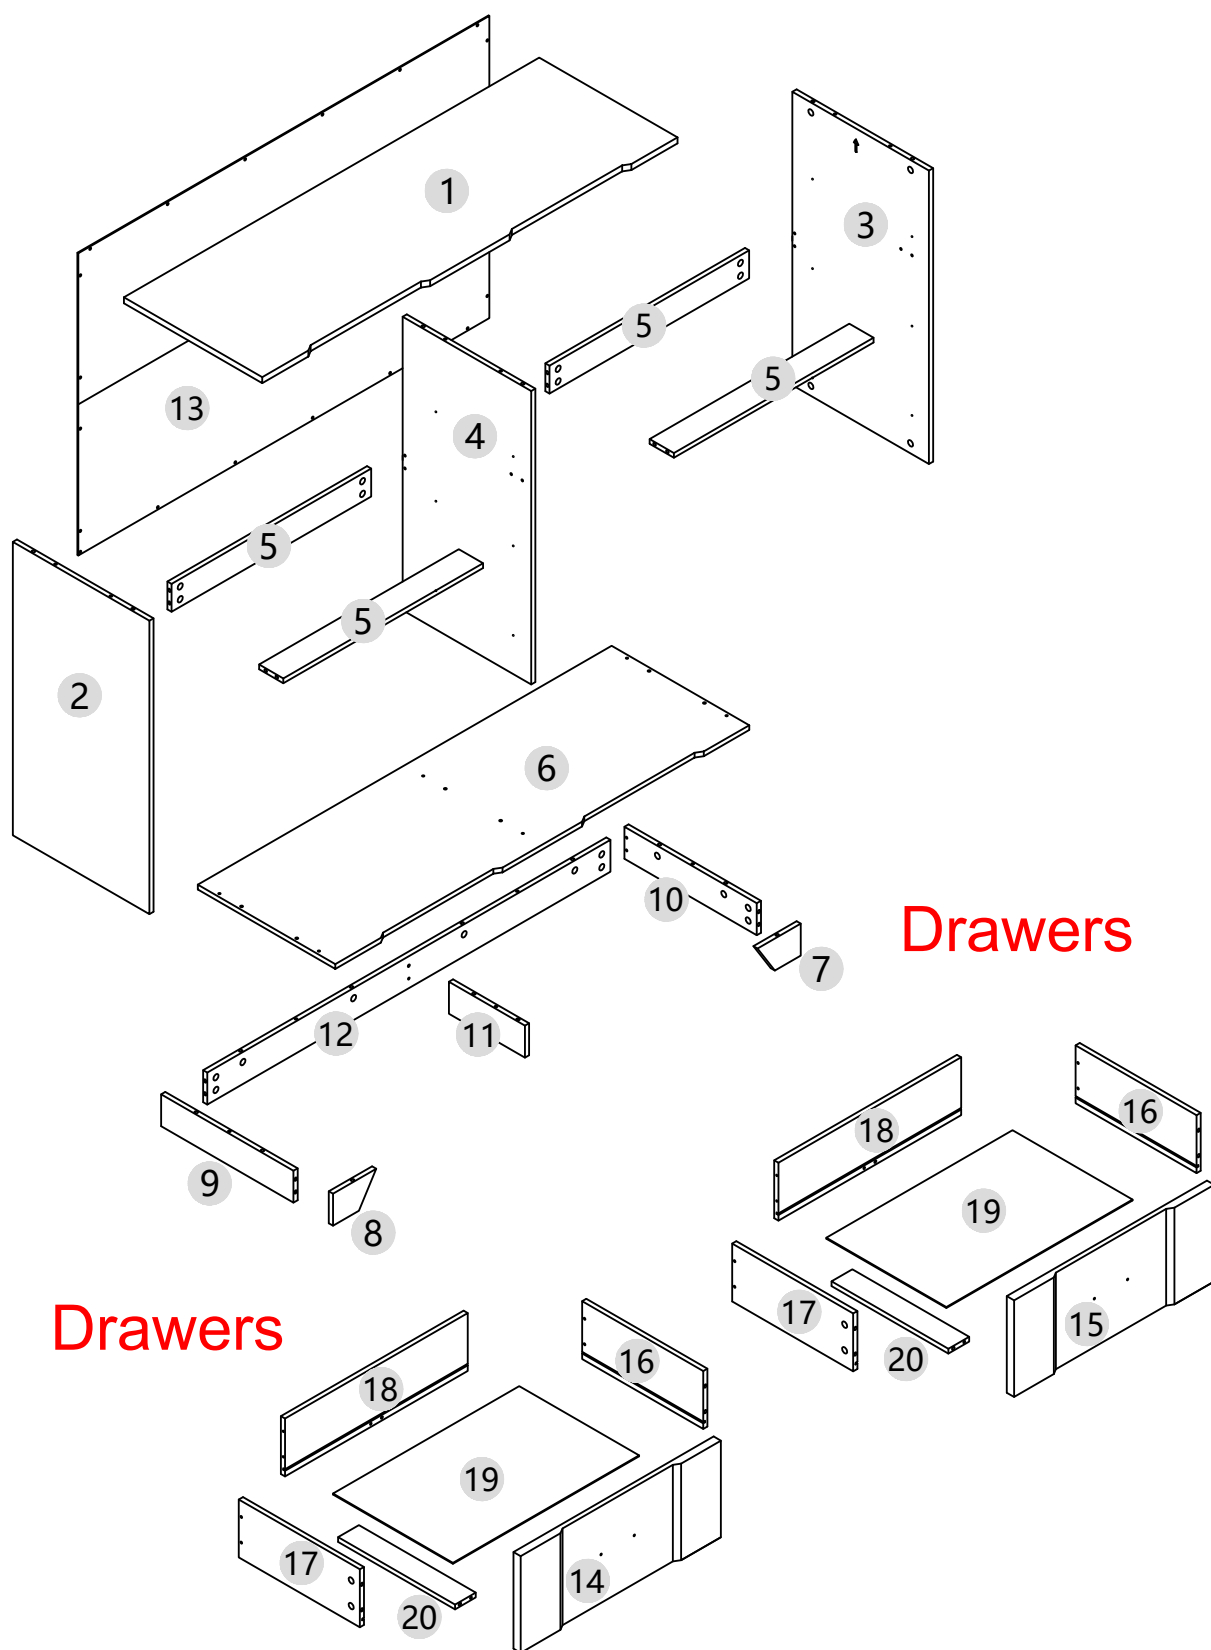

PACKAGE CONTENT



A

98x+1


Ø15x9MM



B

98x+1

Ø8x30MM



C

17x+1

Ø3.5x35MM



D

24x

Ø3.0x12MM



E

48x+1


Ø3.5x14MM



F

24x+1


14"

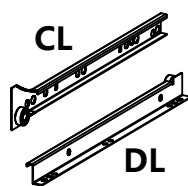

G


6x

14"

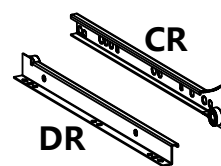

G

6x



H


6x

Ø4x16MM



I

12x

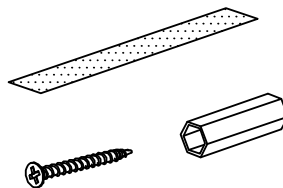

J


2x




K

12x


How to use the cam lock system

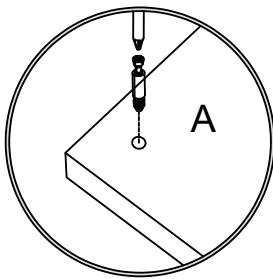


1. Screw cam bolt into panel

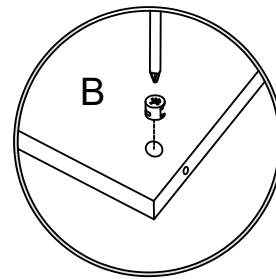


2. Push cam into panel - arrow feature on cam top points to panel edge

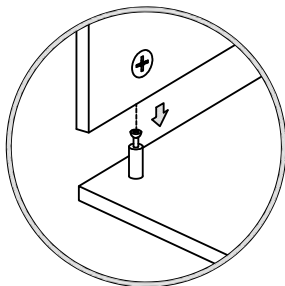

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)




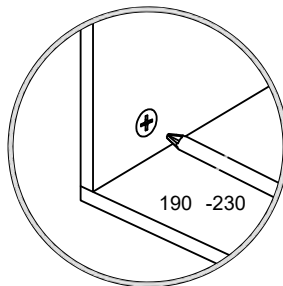


4. Rotate cam(s) clockwise 190 -230 to lock panels together

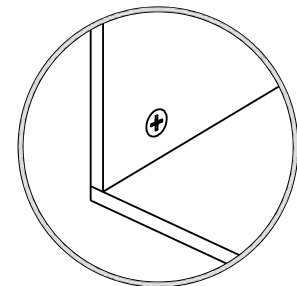

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

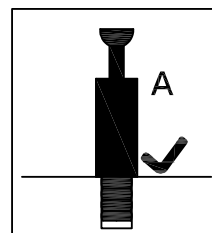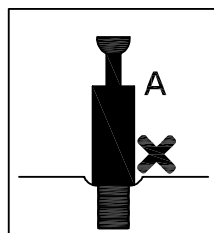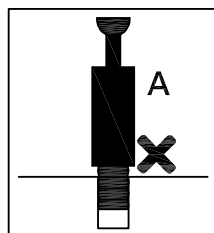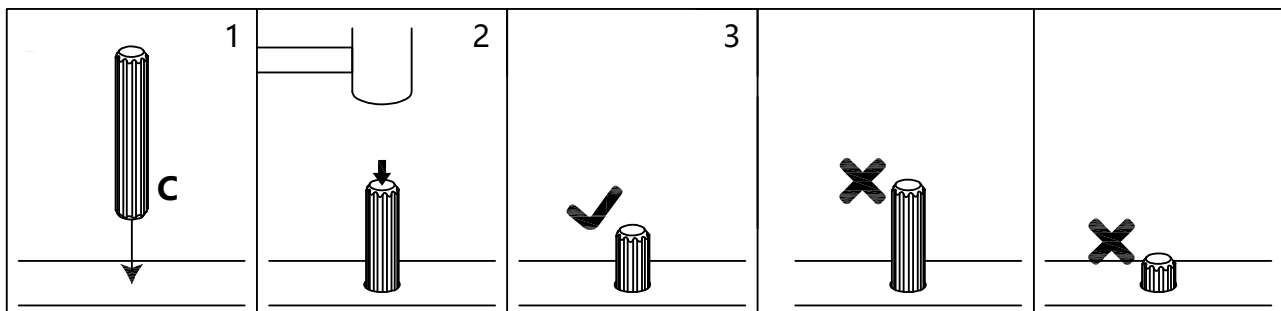

WARNING

Unit must be placed on a level surface or leveled with included hardware (when applicable).

Do not sit or stand on or allow children to climb, sit or stand on the assembled product.

For safety reasons, it is imperative that this unit be mounted to the wall.

Do not use without installing the tip restraint.

Unit can tip over causing severe injury or death.

Do not exceed the recommended weight limits.


Evenly distribute the weight on each level and always keep the heavier loads on the bottom.

Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

You are now ready to assemble the dresser


Before installation, please have an overall view of the installation instructions, observe the structure of this nightstand, imagine how to install it faster, hope this will help. This nightstand, consists of two main parts, please assemble the chest first, and then install the drawer. Finally, take a look at the finished look and check against the instructions to make sure it is installed correctly.

We recommend using a power drill to assemble.


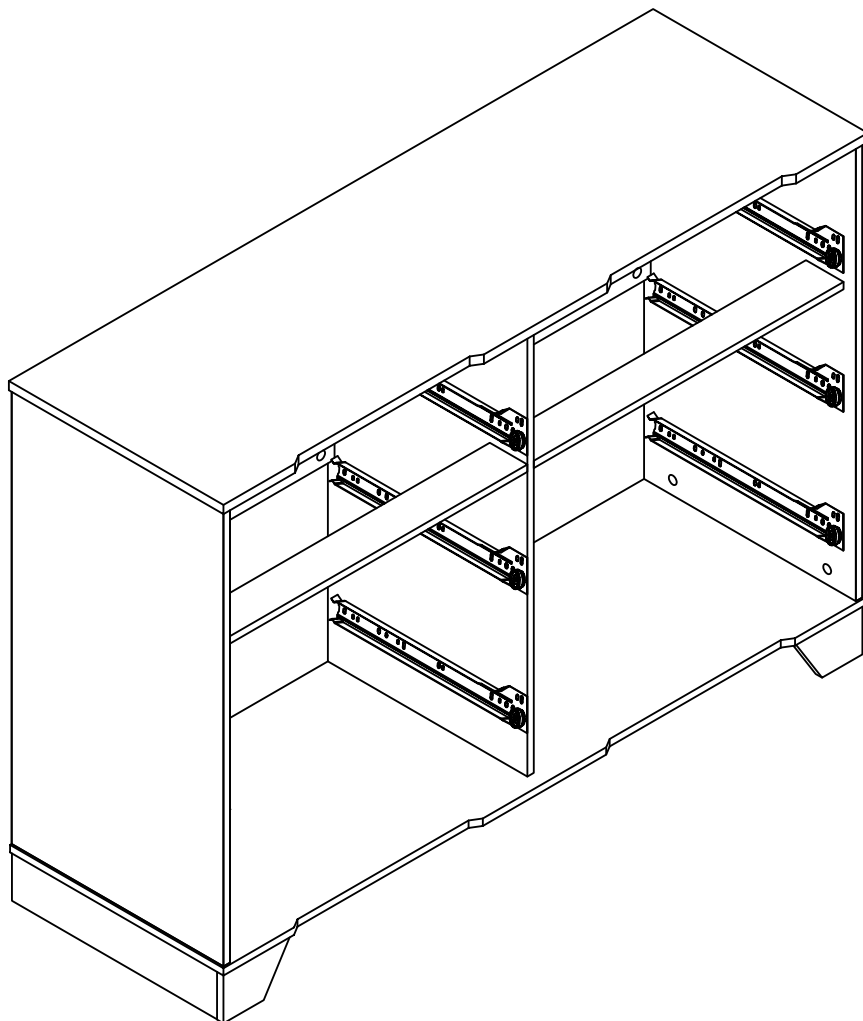


STEP 1



	
C 5x	A 22x

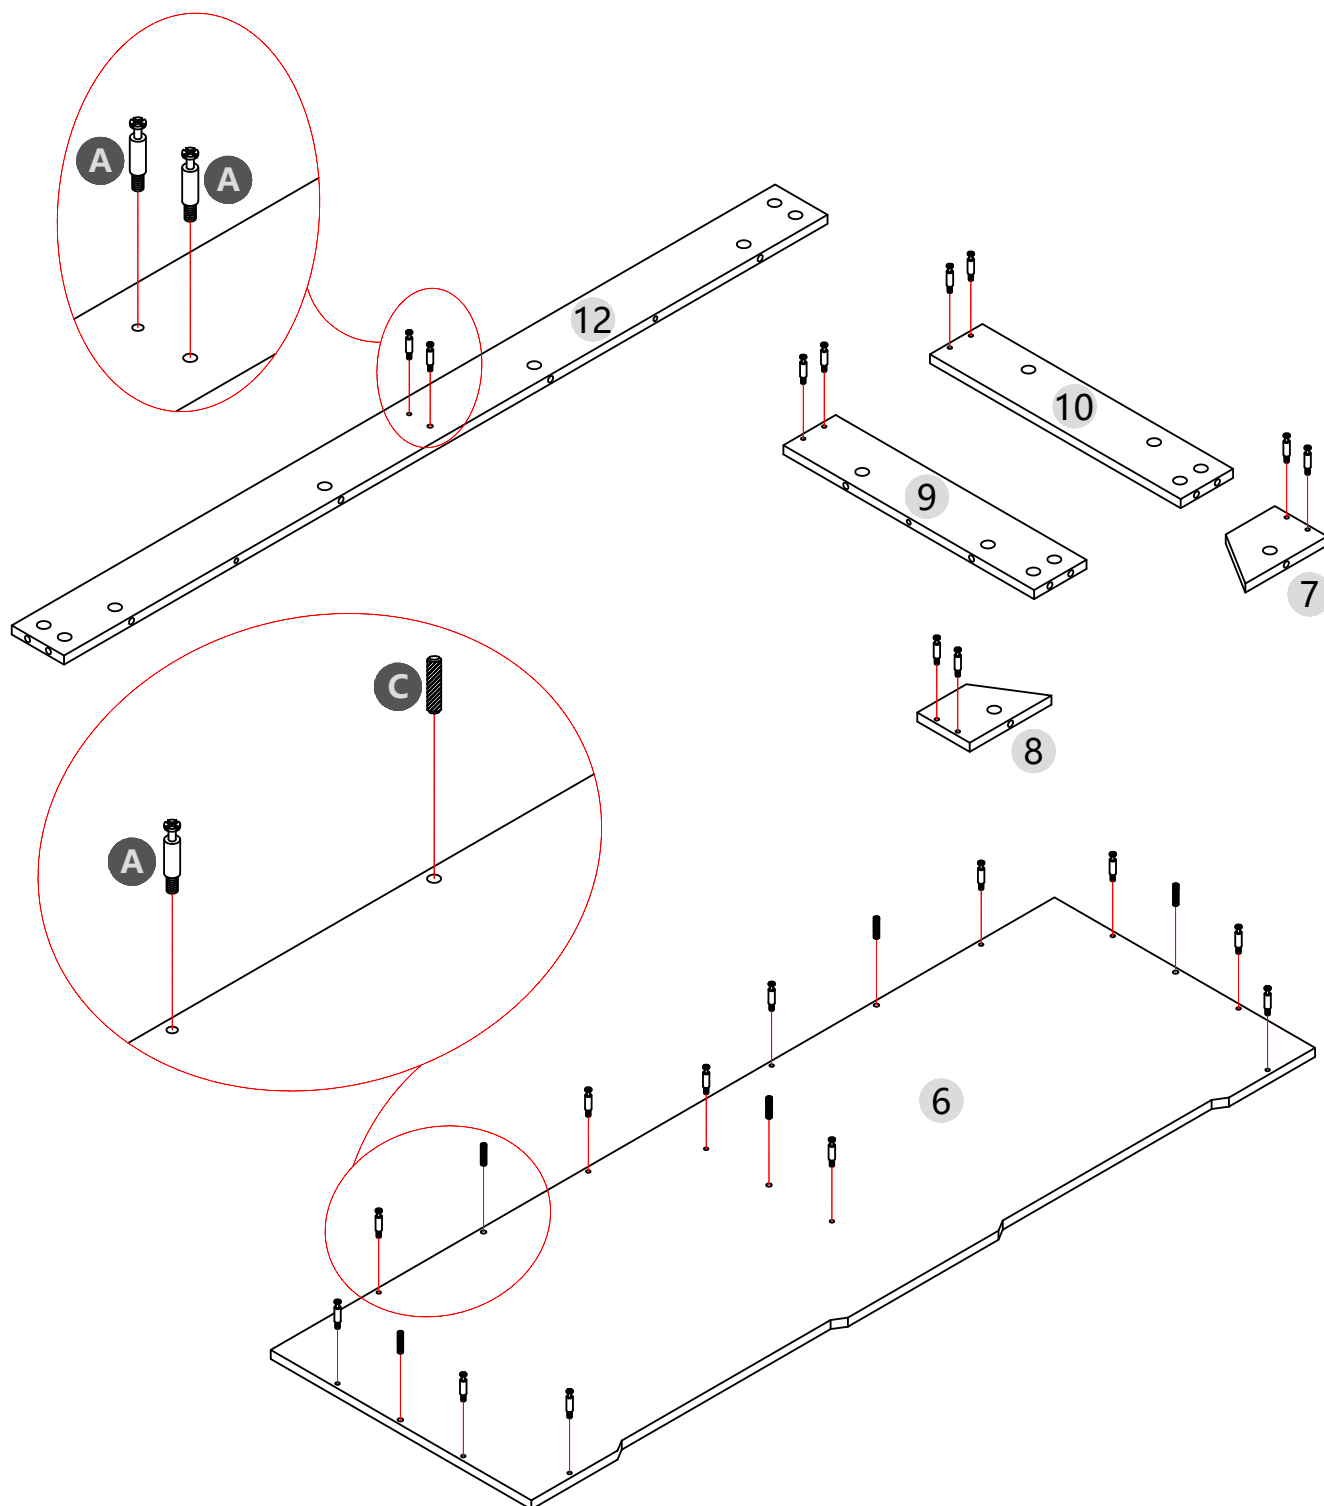



STEP 2

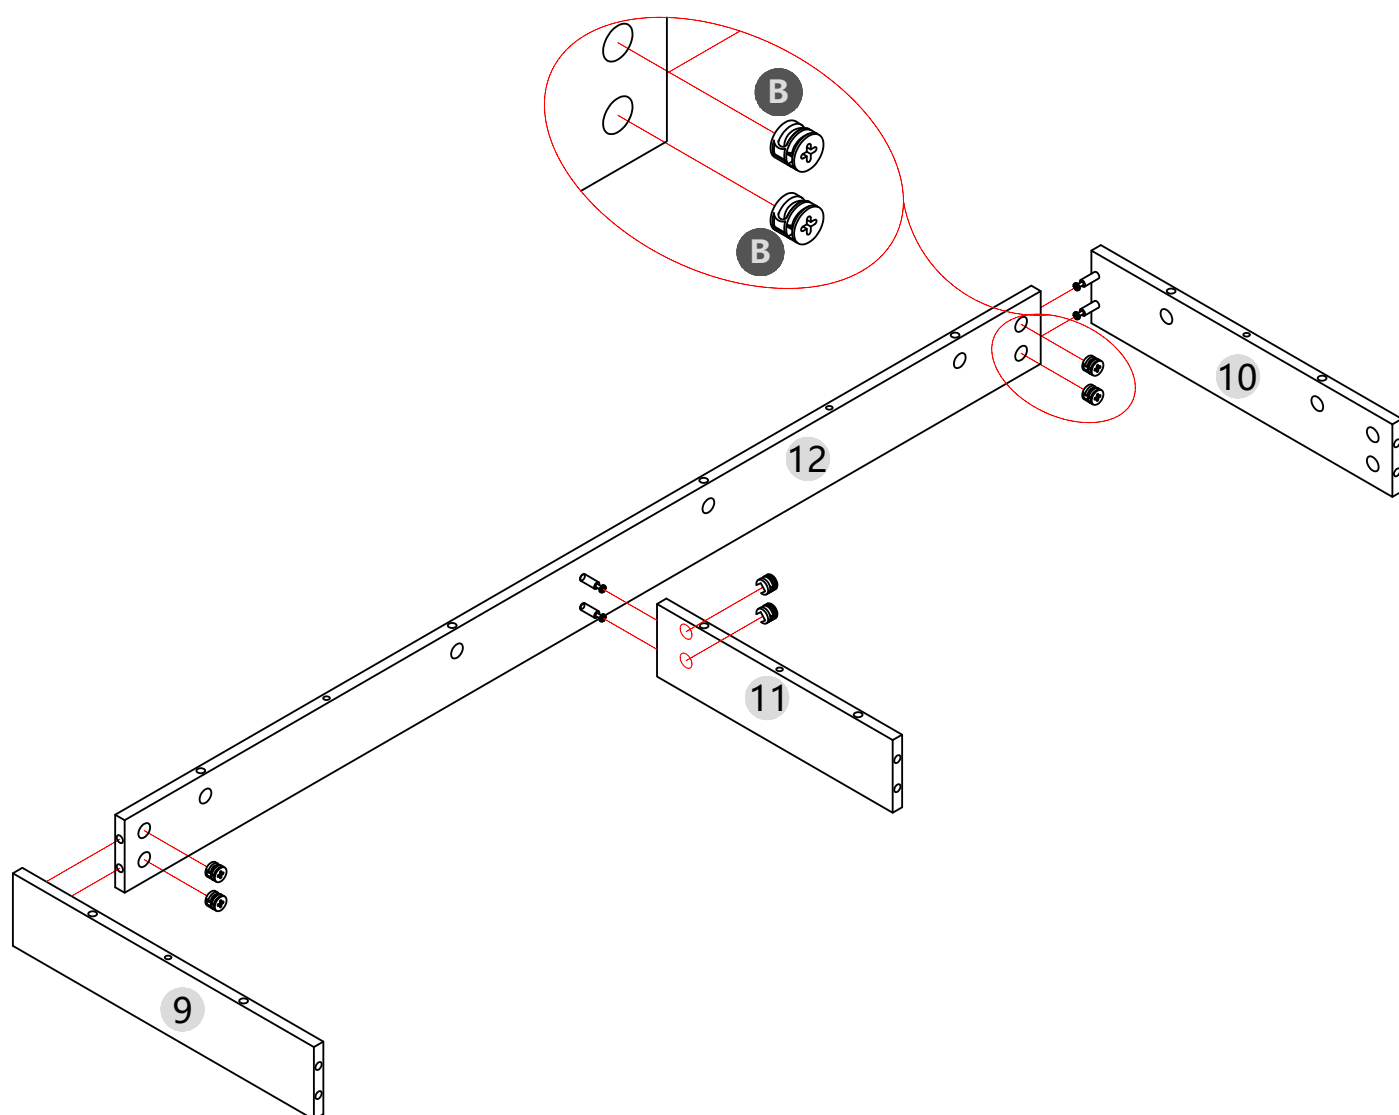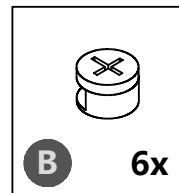



STEP 3

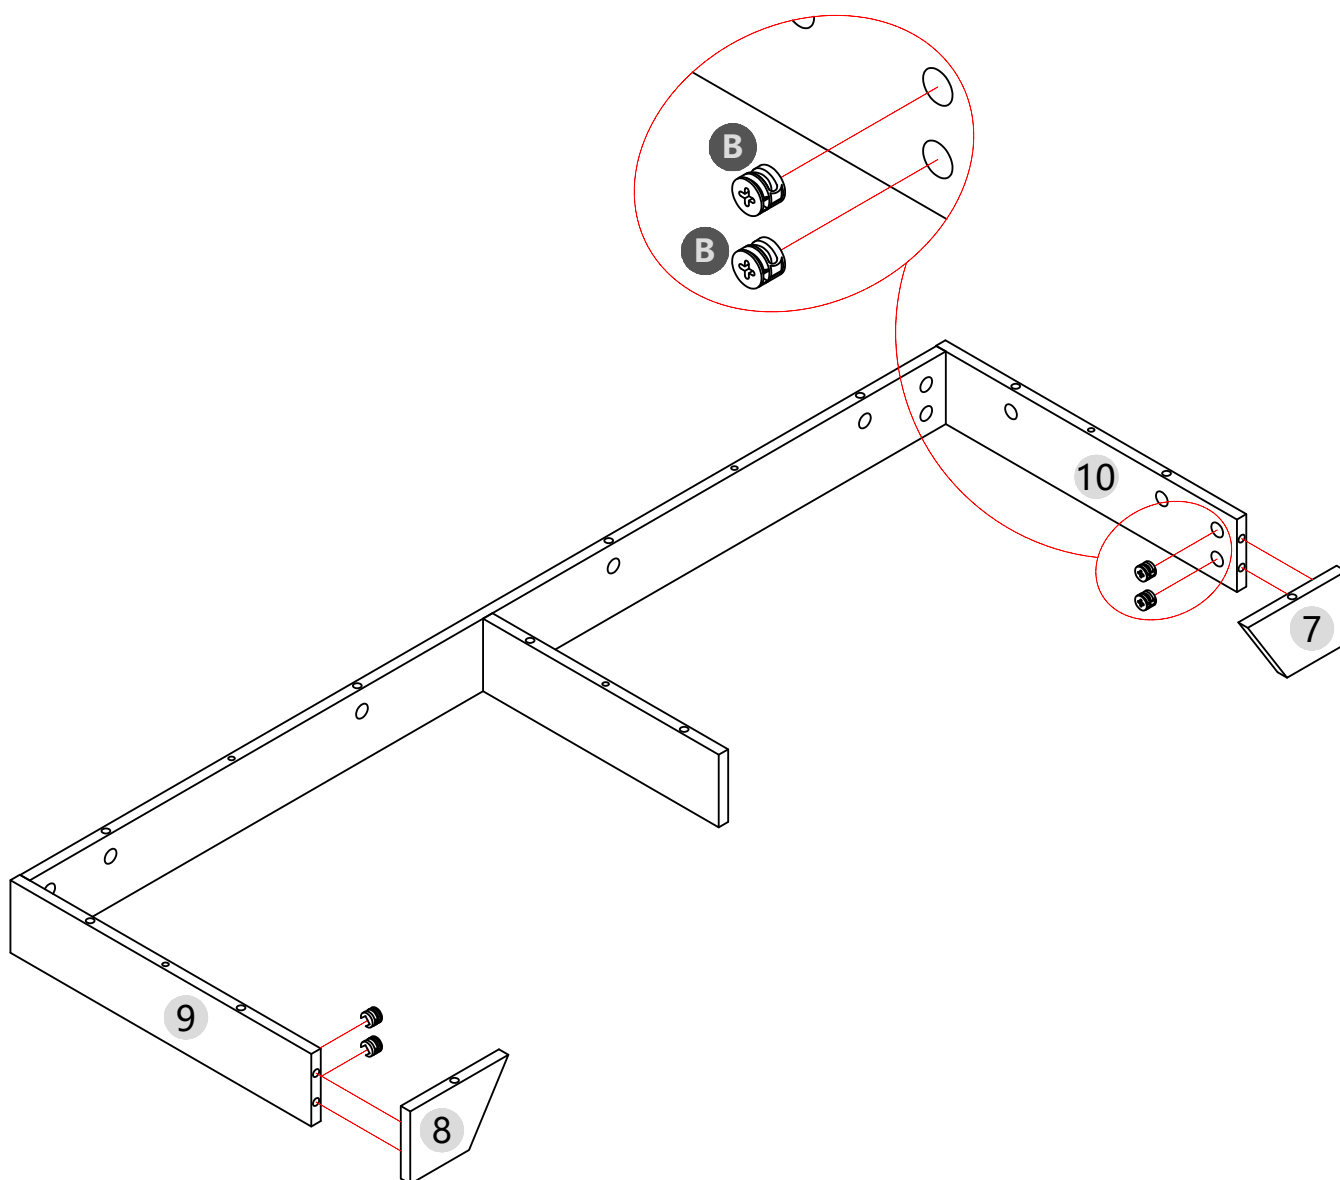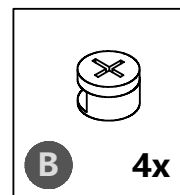


STEP 4

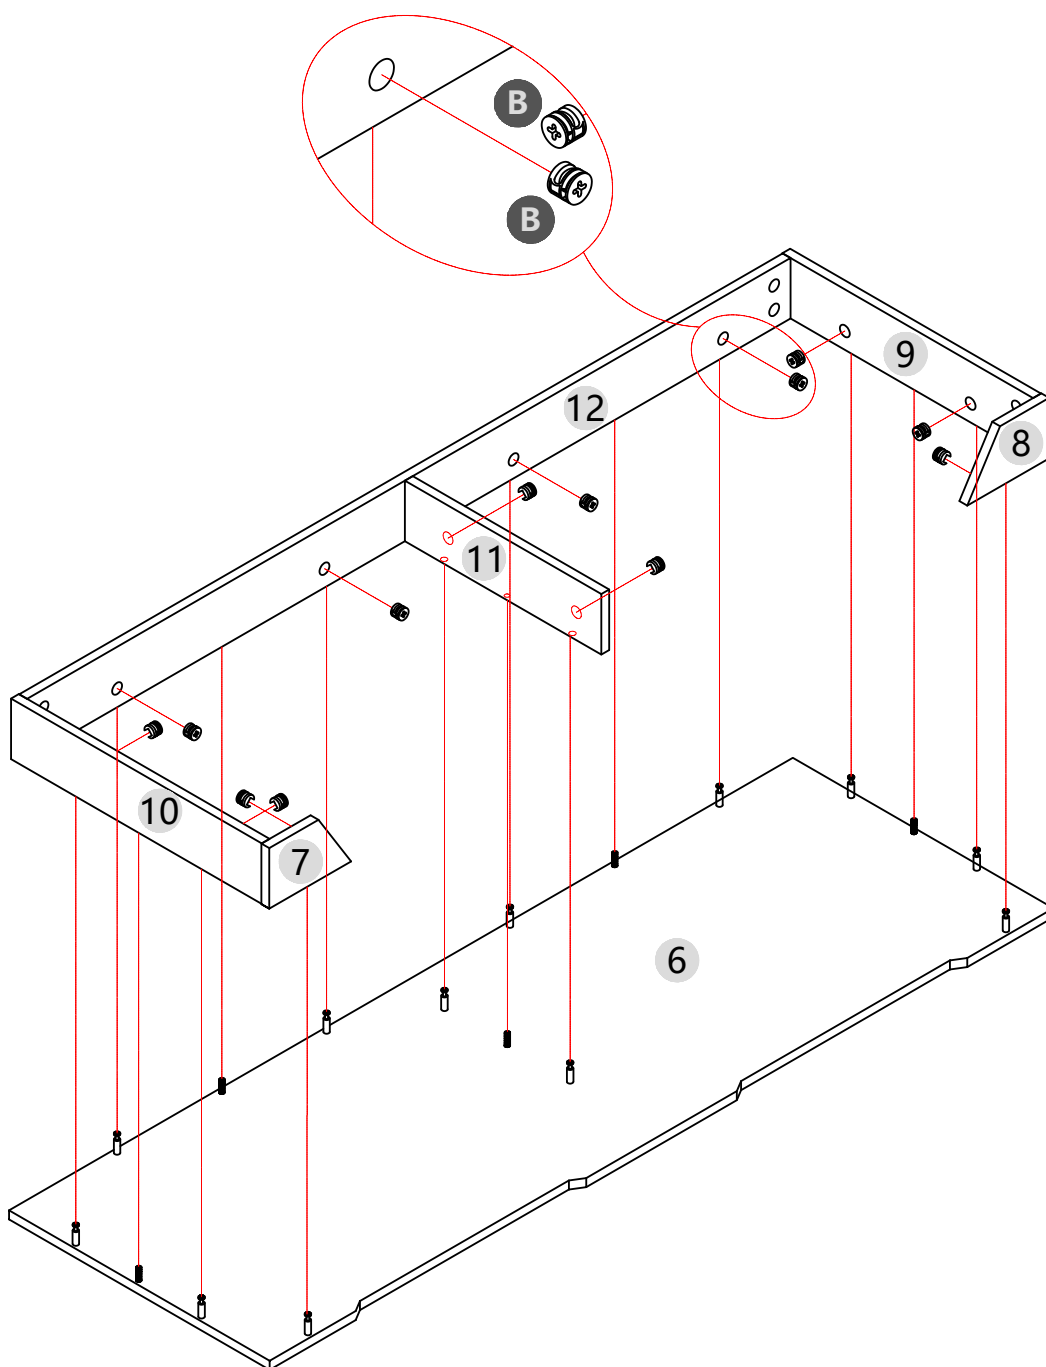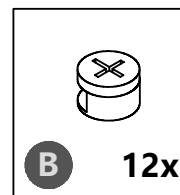


STEP 5

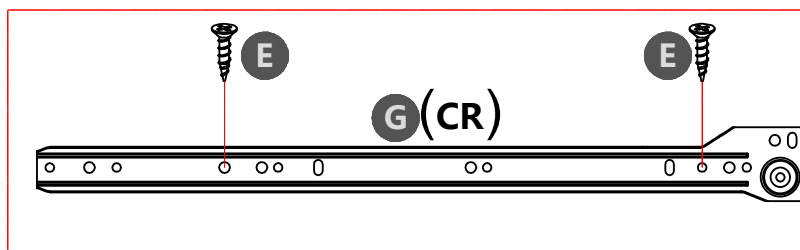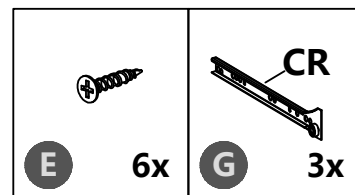

Note: Screw E can only be installed in the 3rd hole at the front of the CR and the 4th hole at the the end


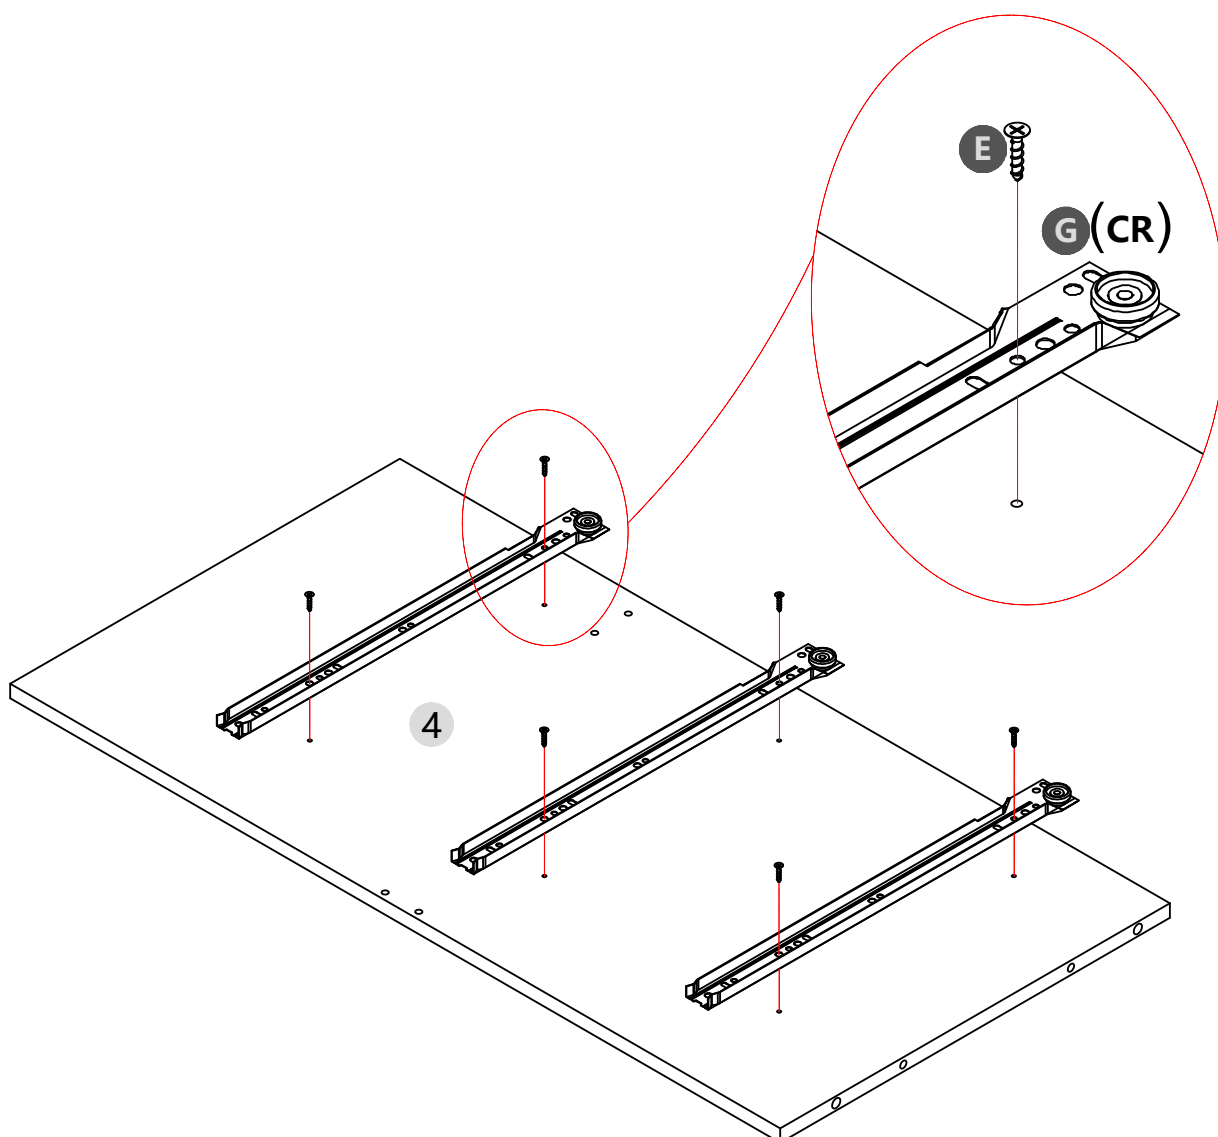


STEP 6

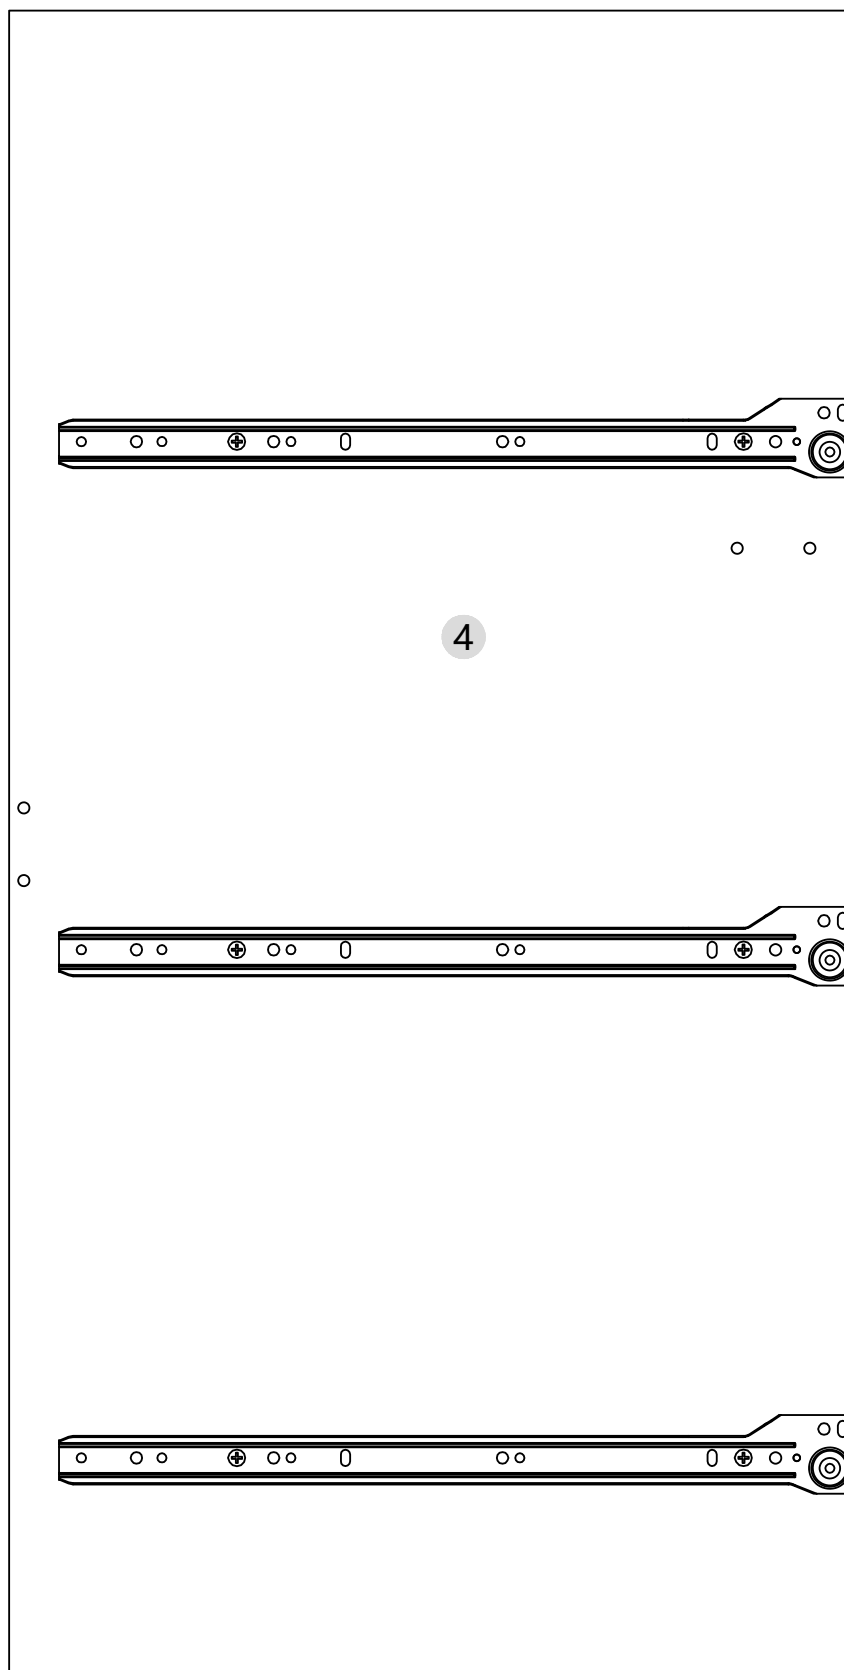


If you are confused, you can also refer to the position of this slide in the wood board.


STEP 7

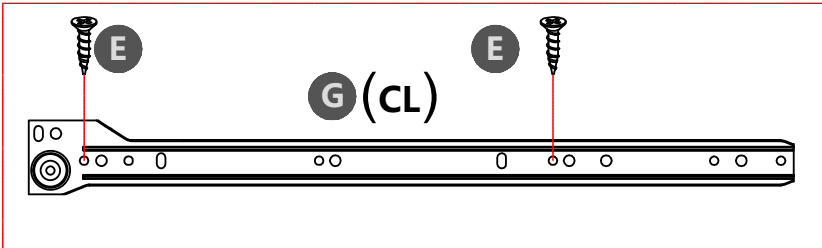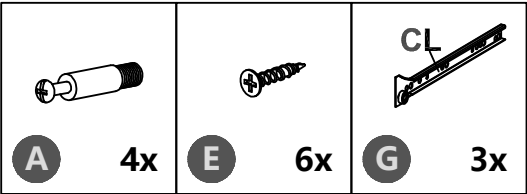

Note: Screw E can only be installed in the 1st hole at the front of the CL and the 6rd hole at the end


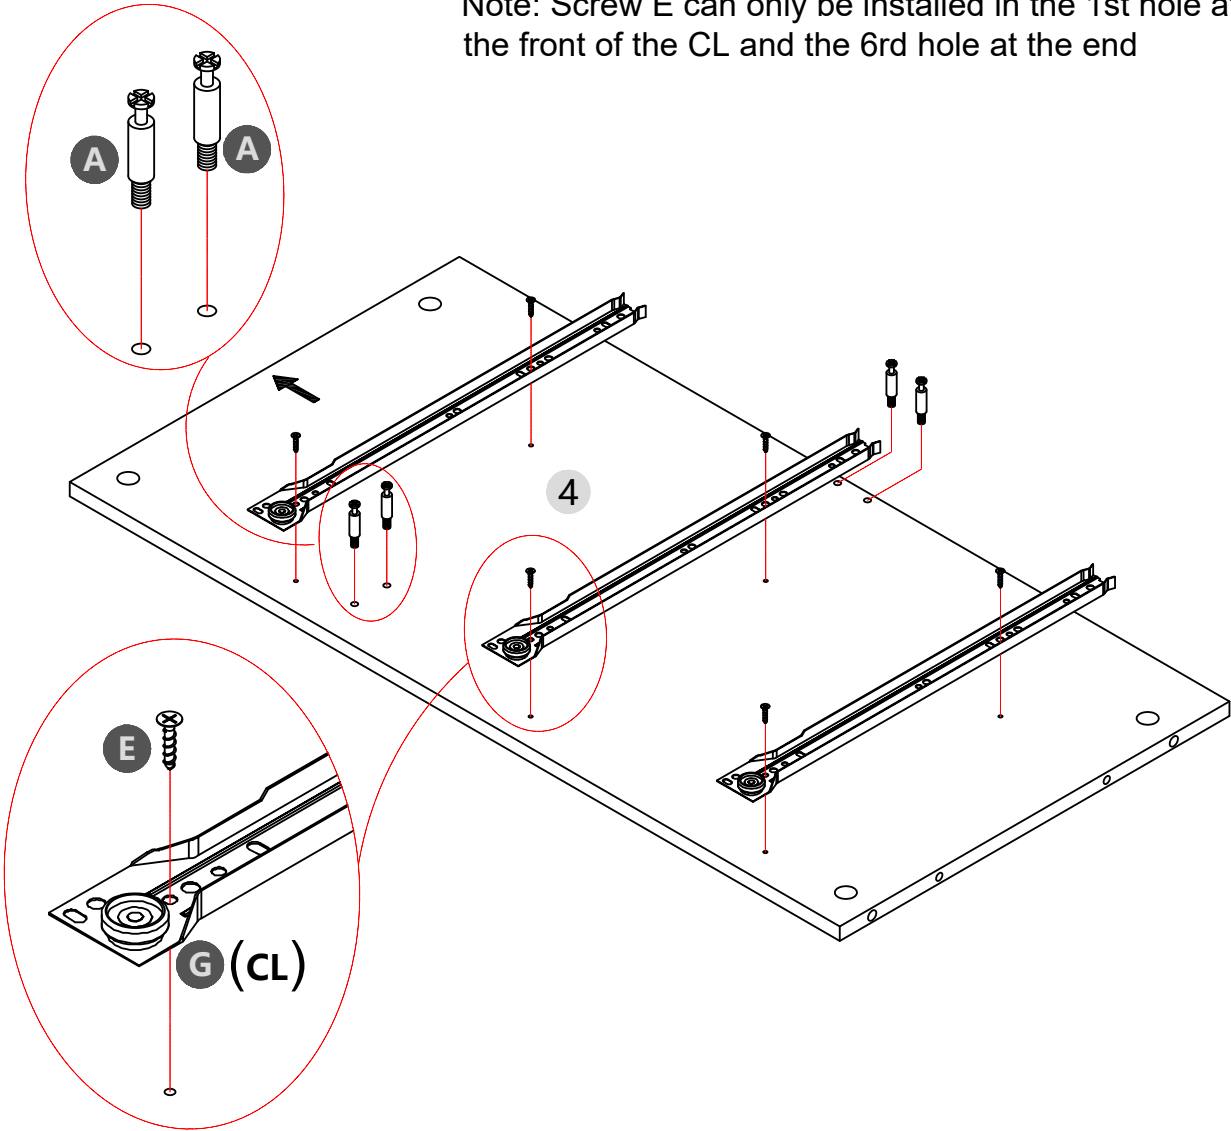


STEP 8


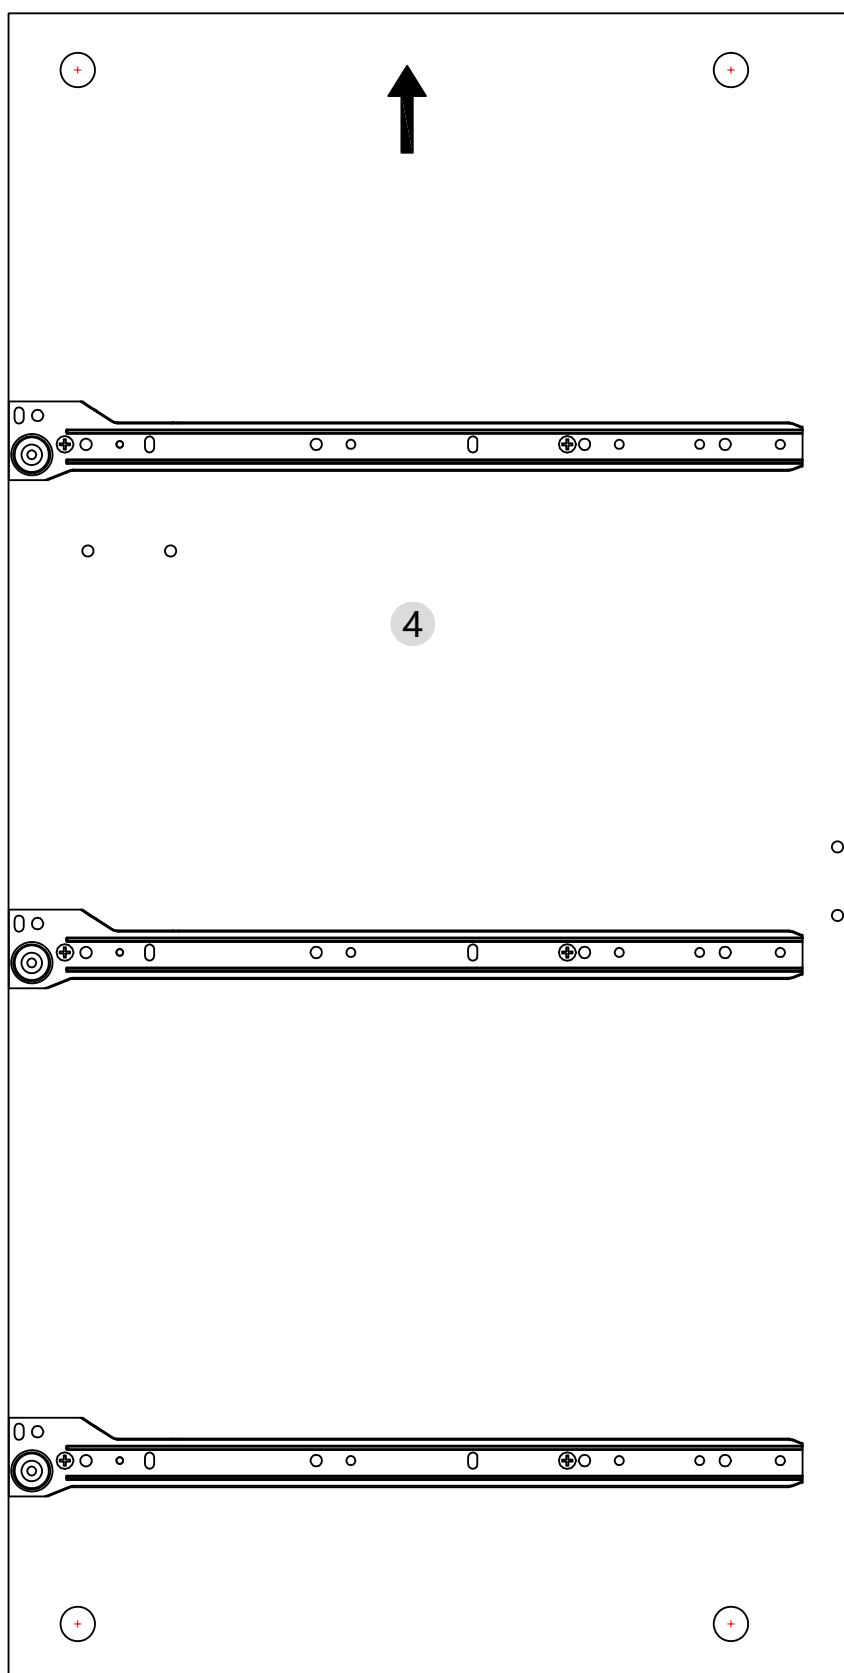


If you are confused, you can also refer to the position of this slide in the wood board.



STEP 9

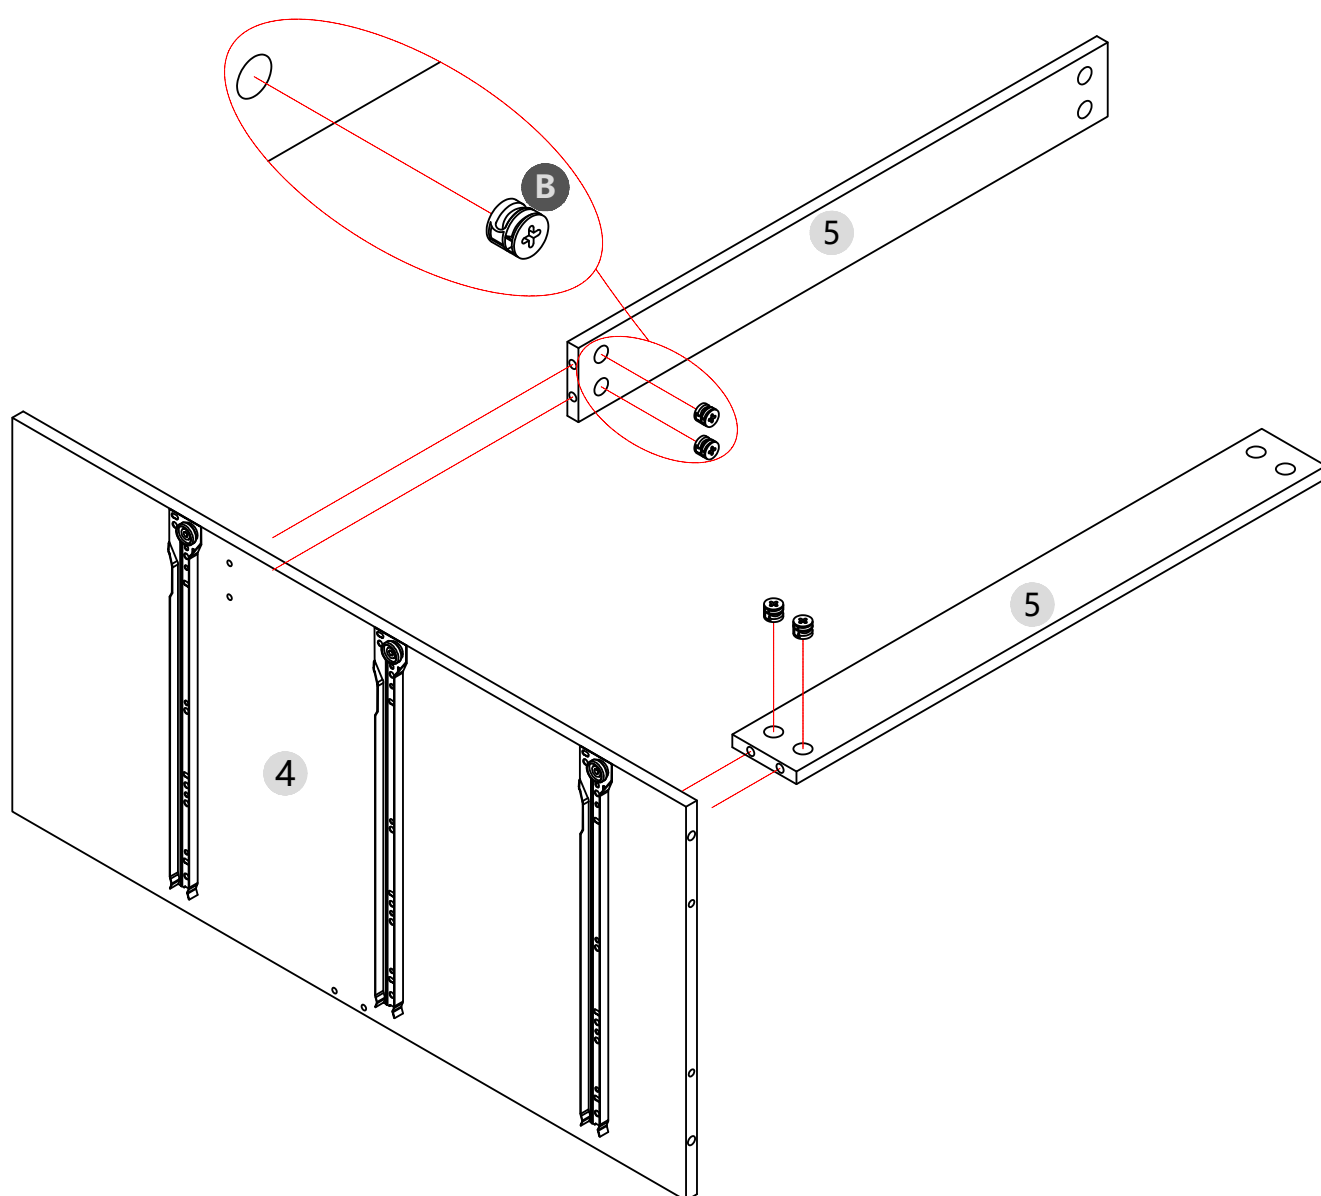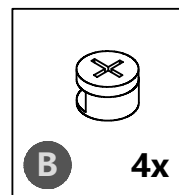

STEP 10

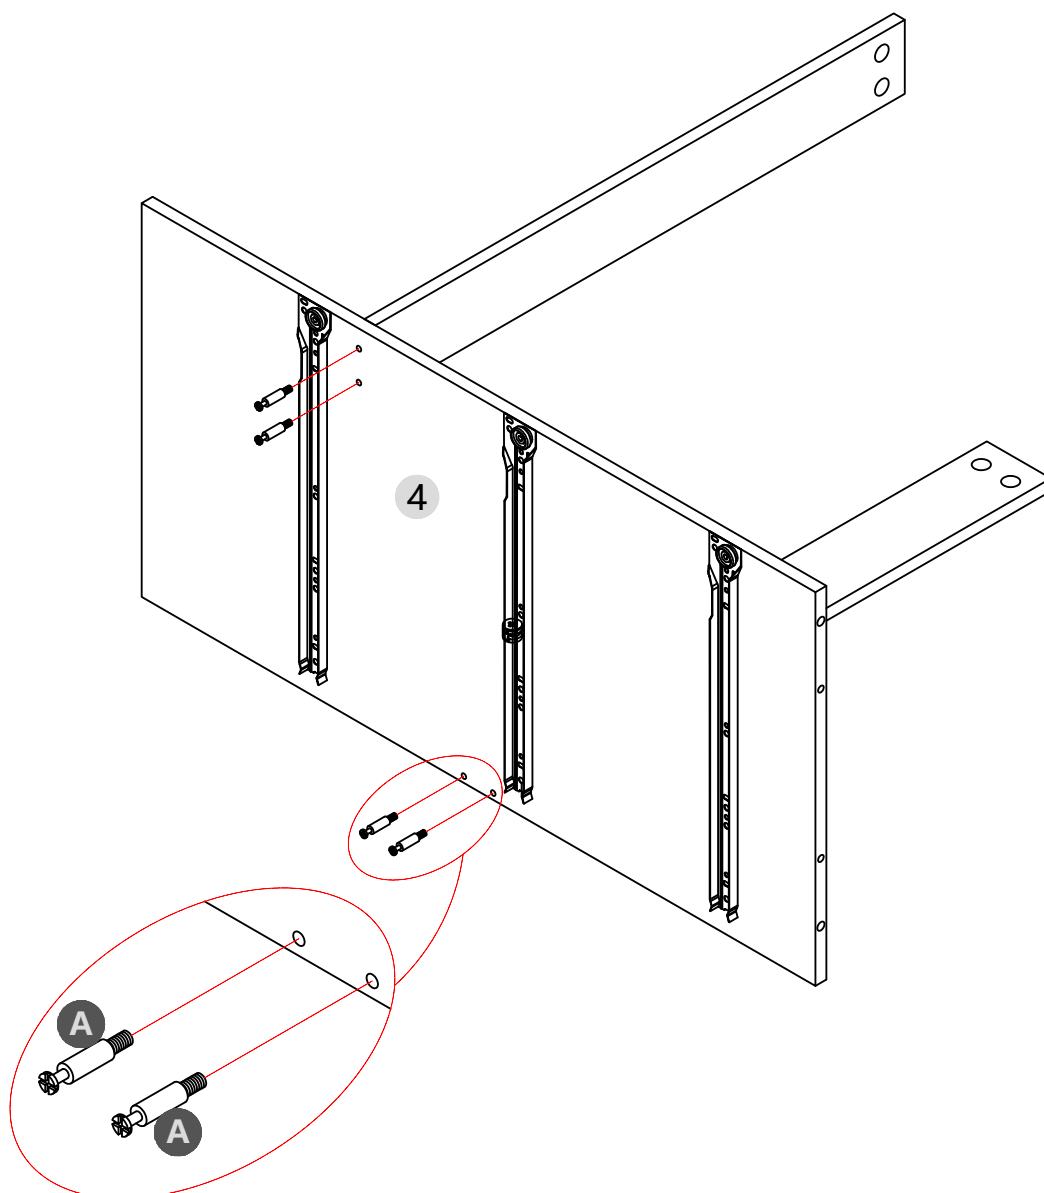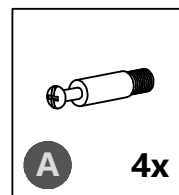


STEP 11

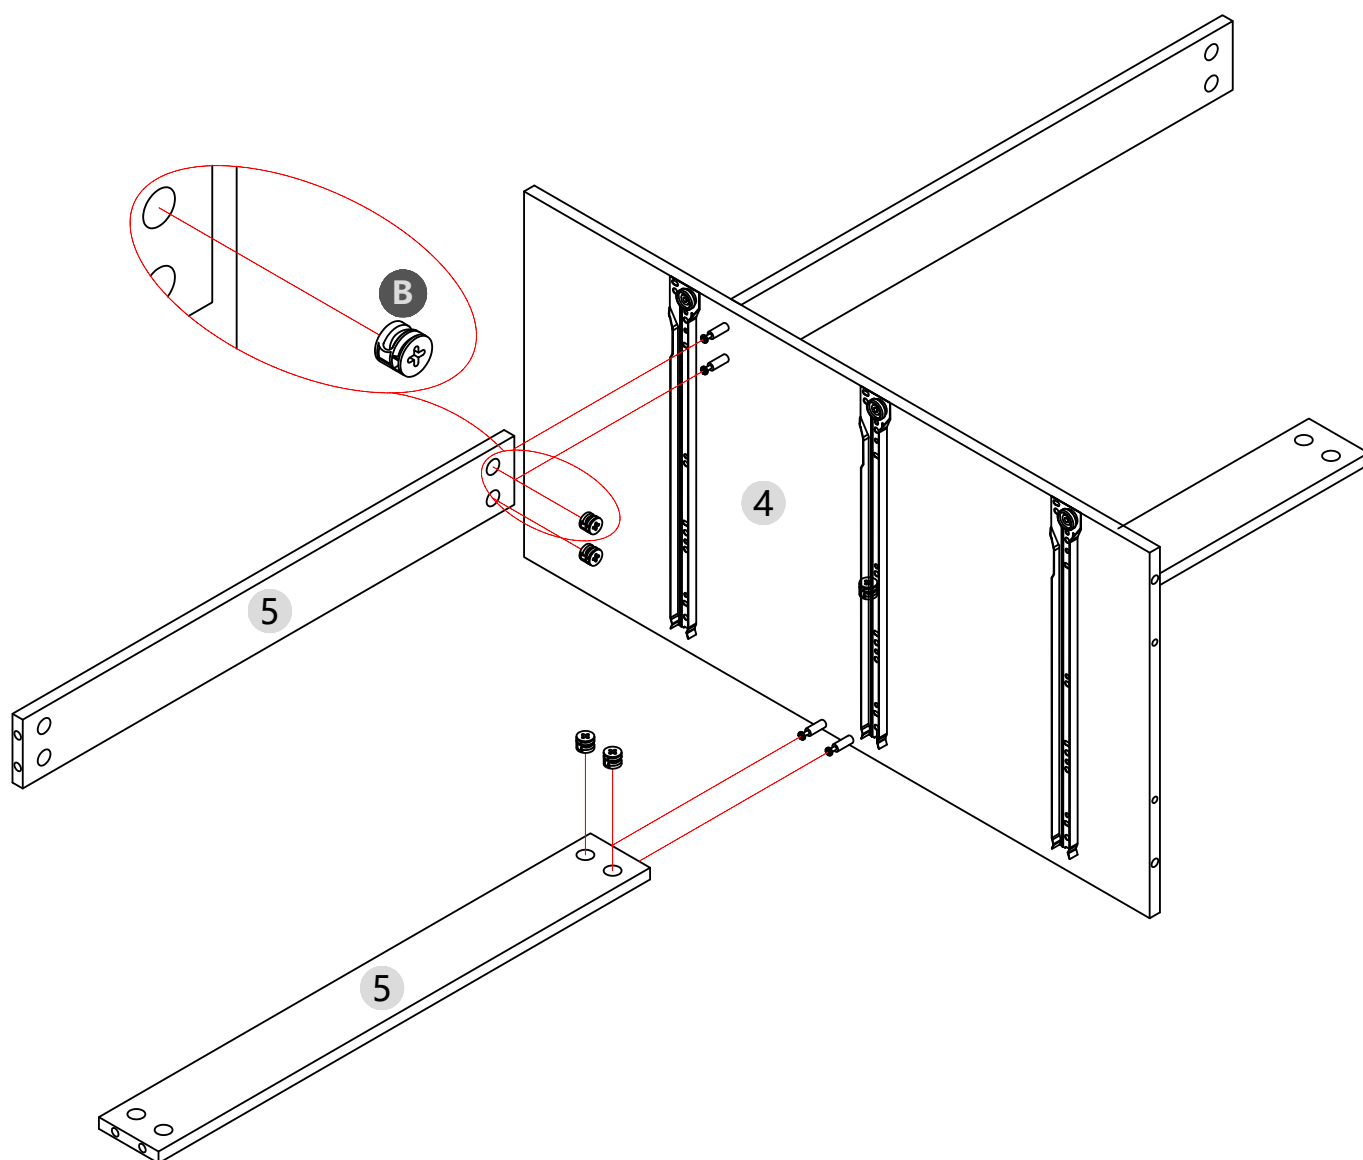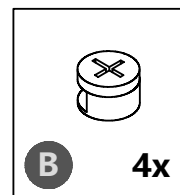


STEP 12


		
A 4x	E 6x	G 3x

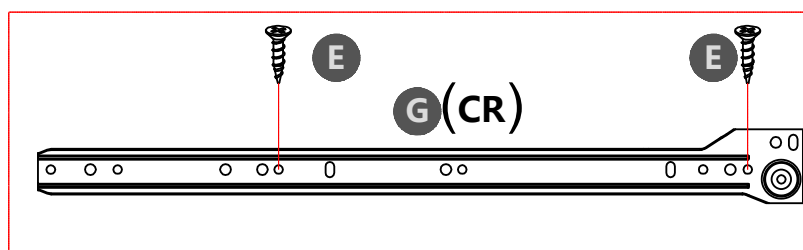

Note: Screw E can only be installed in the 1st hole at the front of the CR and the 6rd hole at the end

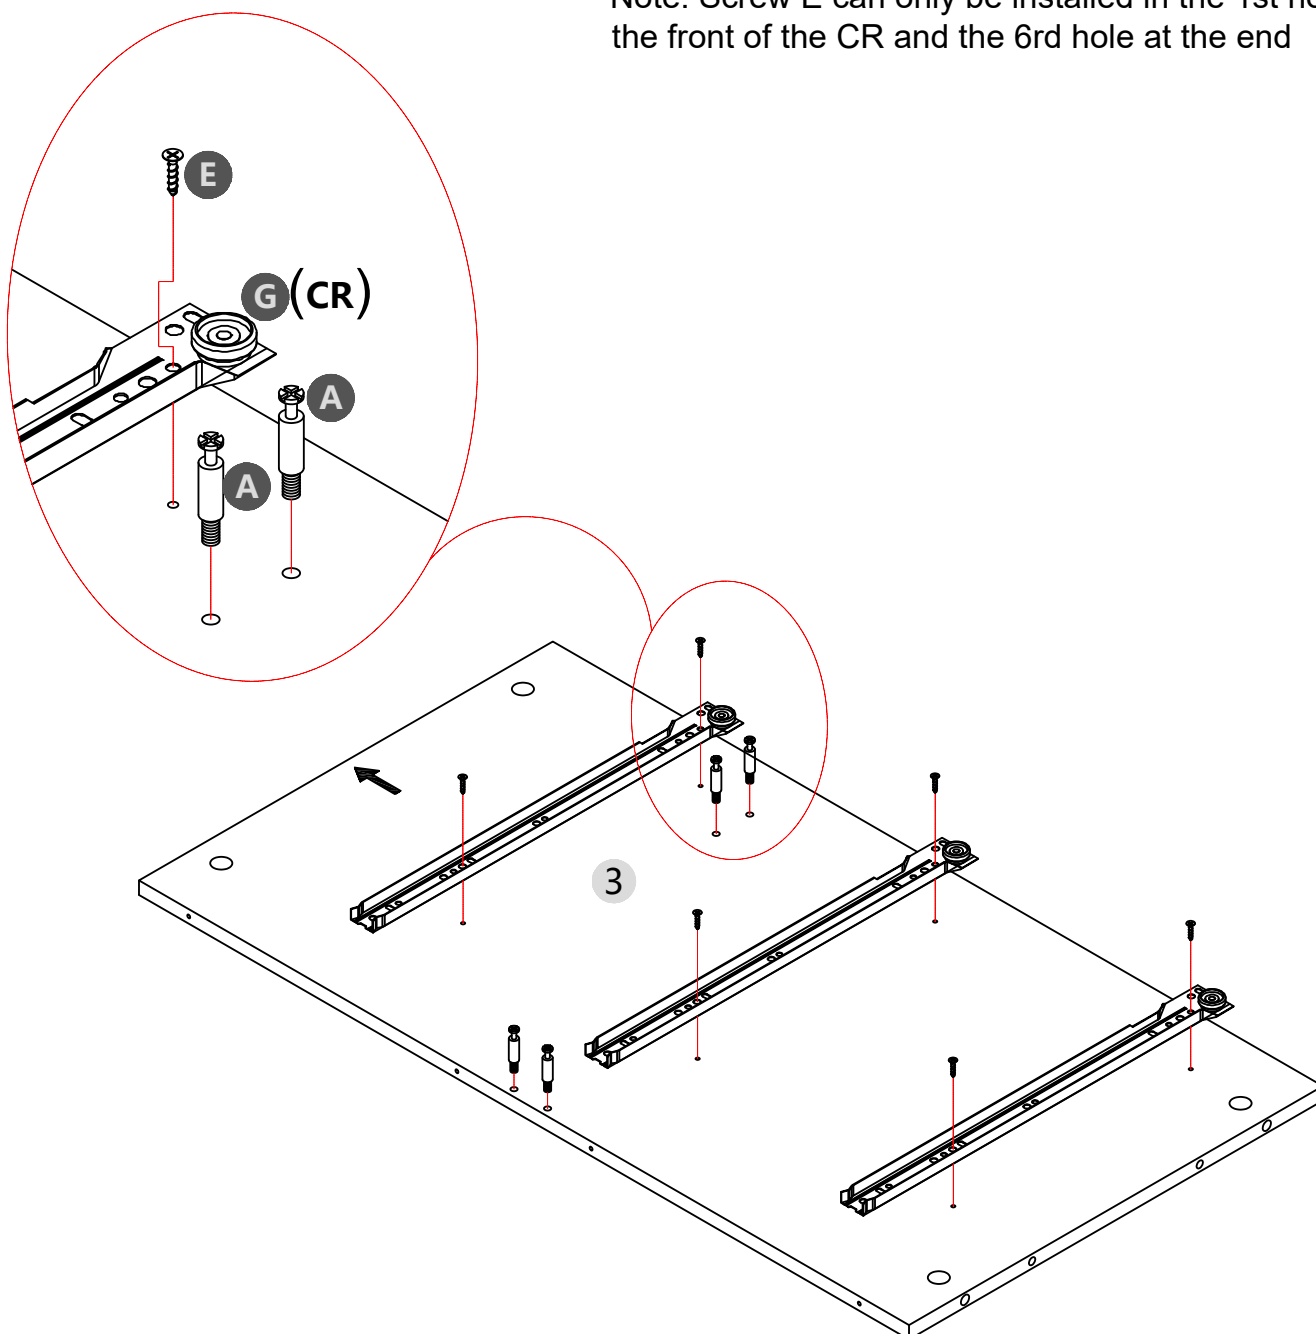


STEP 13

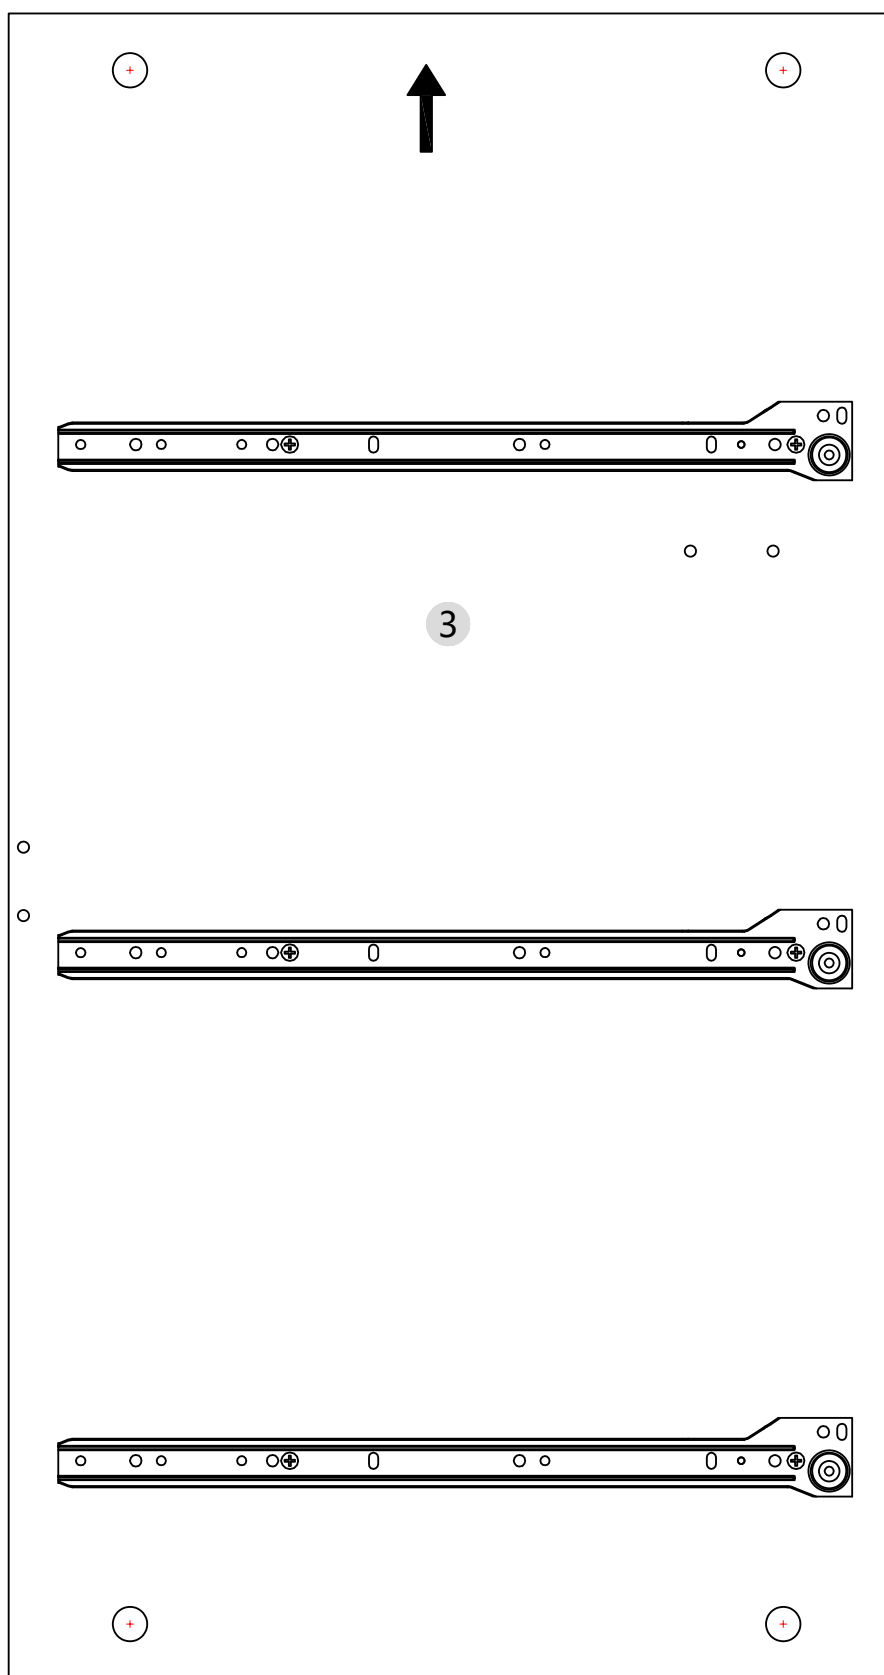



If you are confused, you can also refer to the position of this slide in the wood board.

STEP 14


		
A 4x	E 6x	G 3x

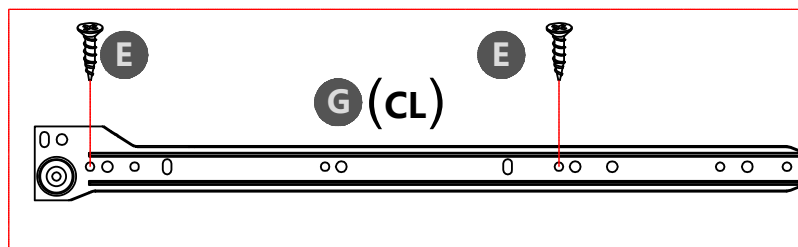

Note: Screw E can only be installed in the 1st hole at the front of the CL and the 6rd hole at the end

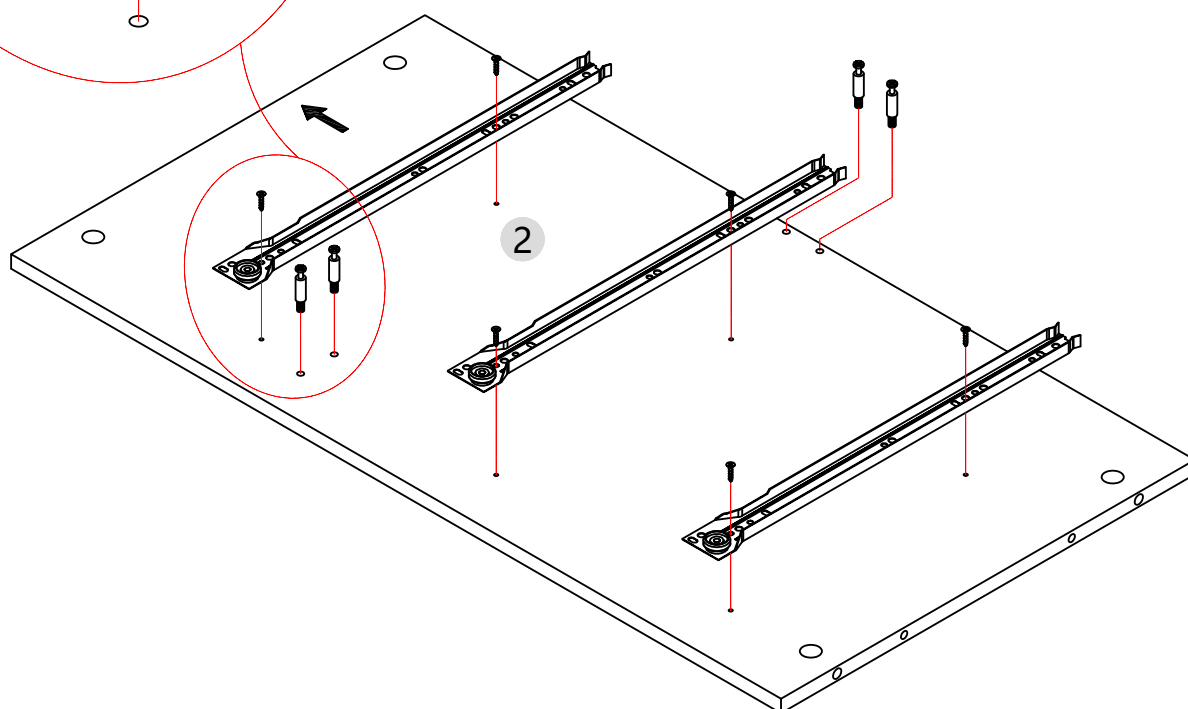
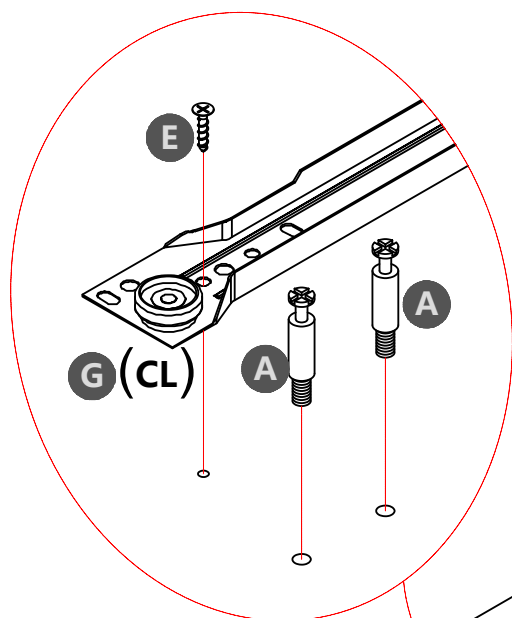


STEP 15


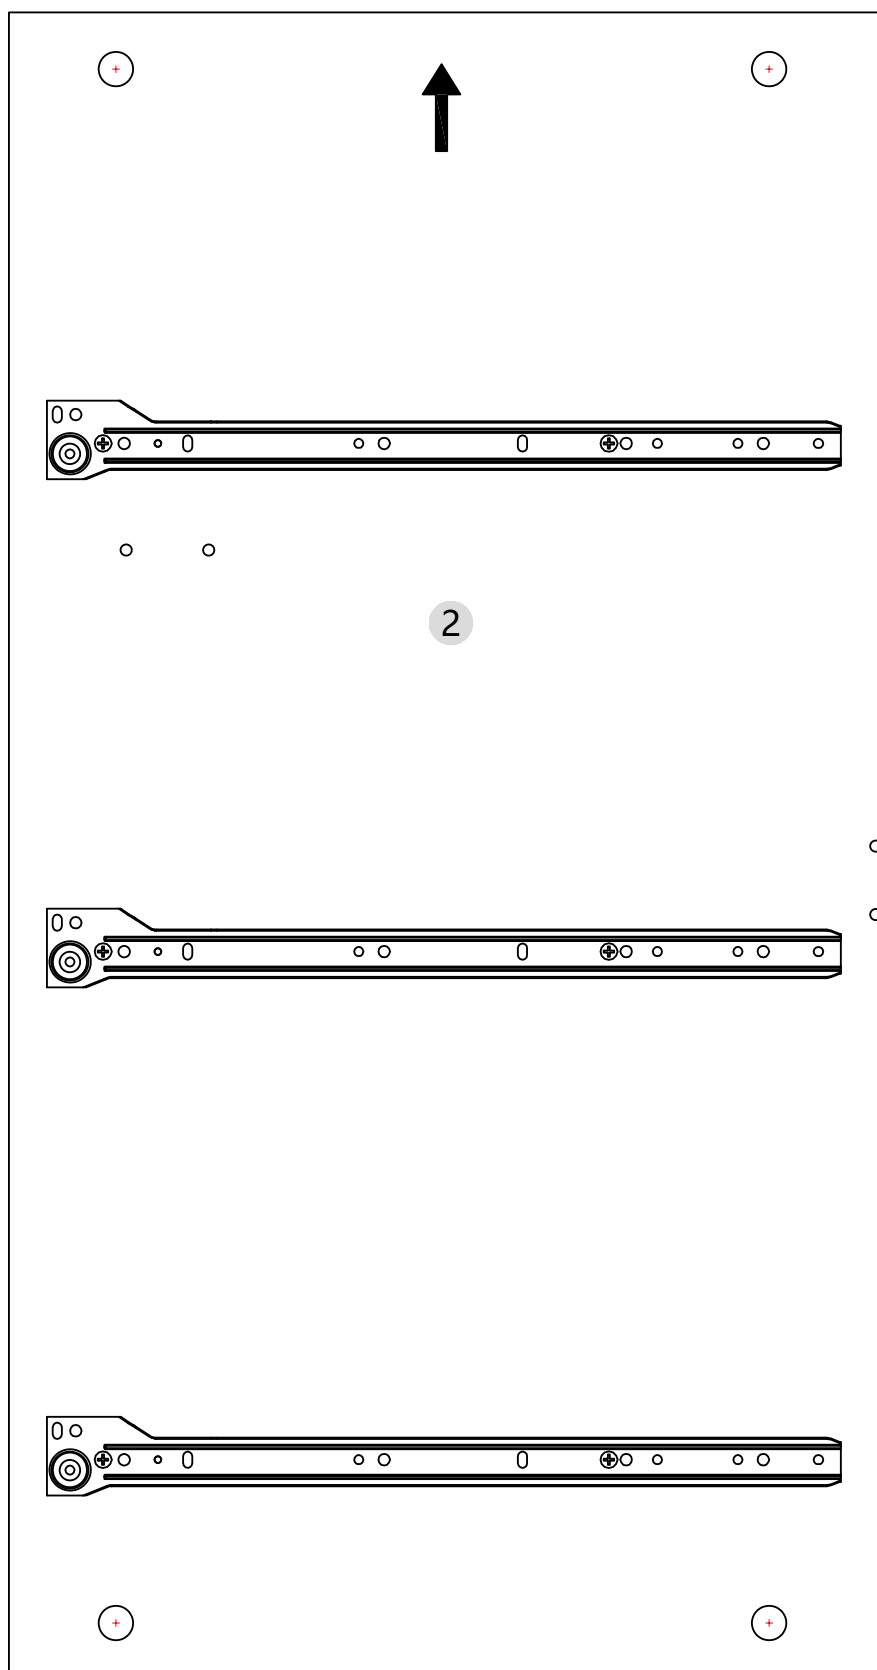


If you are confused, you can also refer to the position of this slide in the wood board.



STEP 16

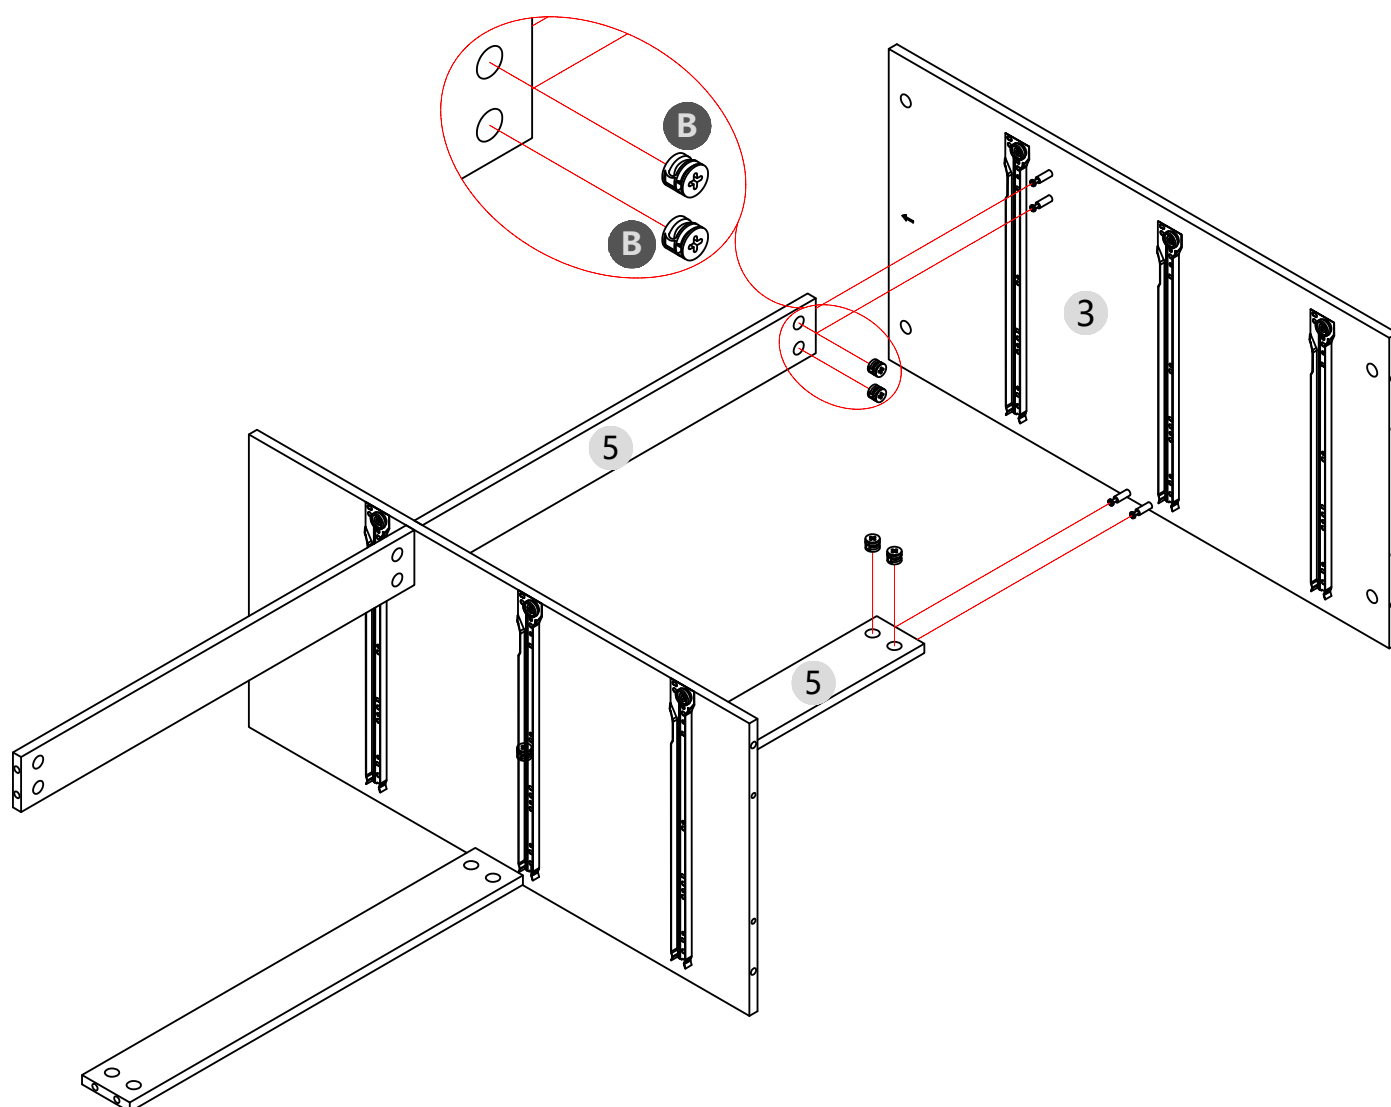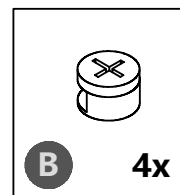



STEP 17

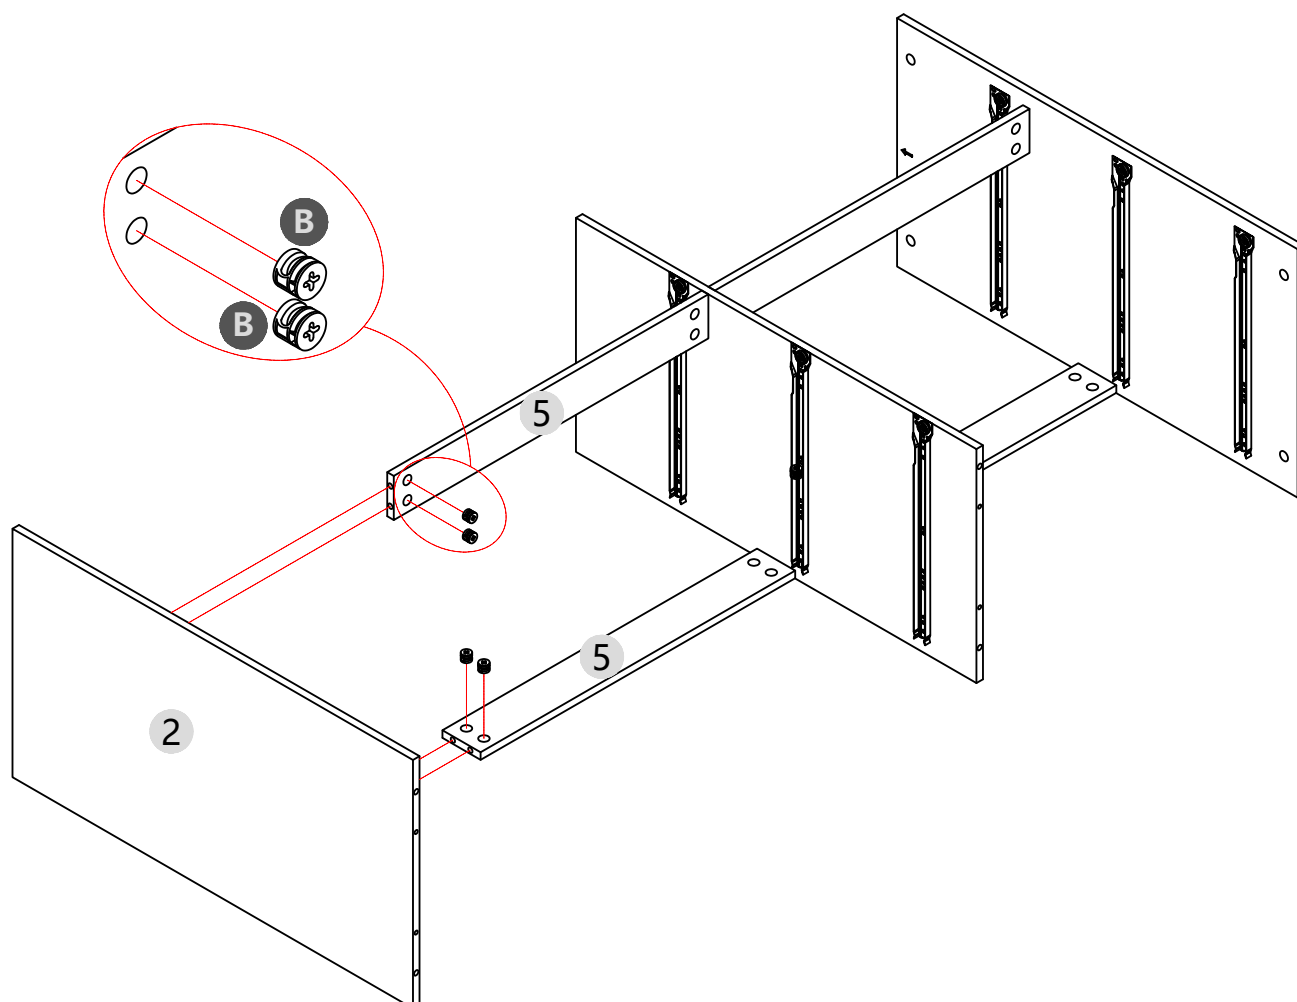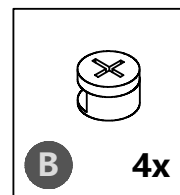



STEP 18

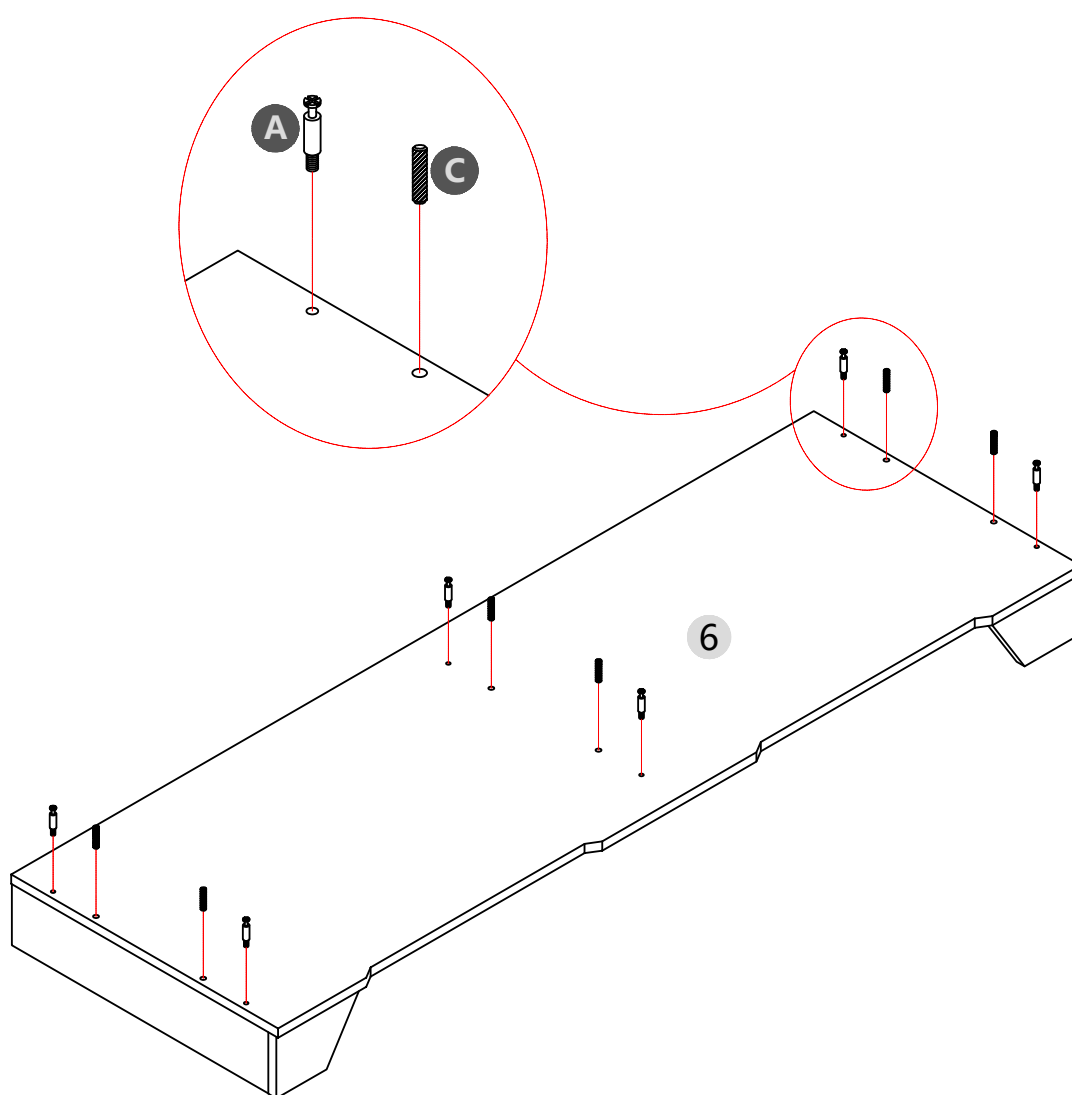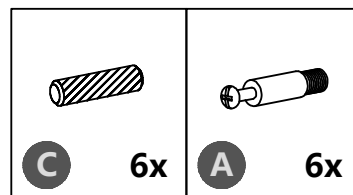



STEP 19

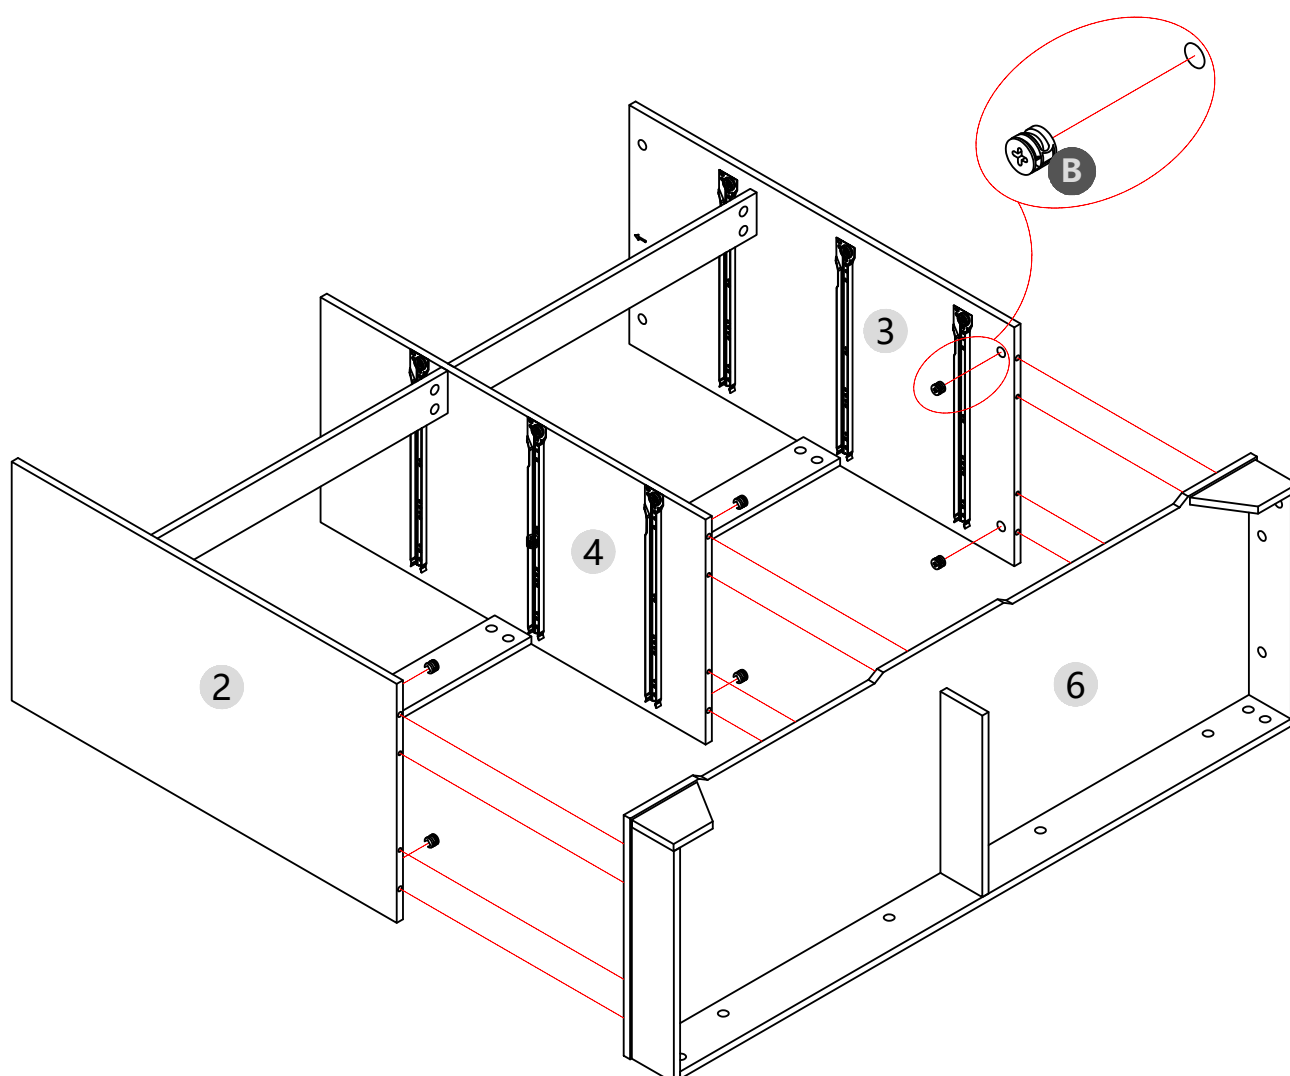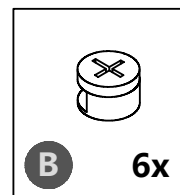


STEP 20

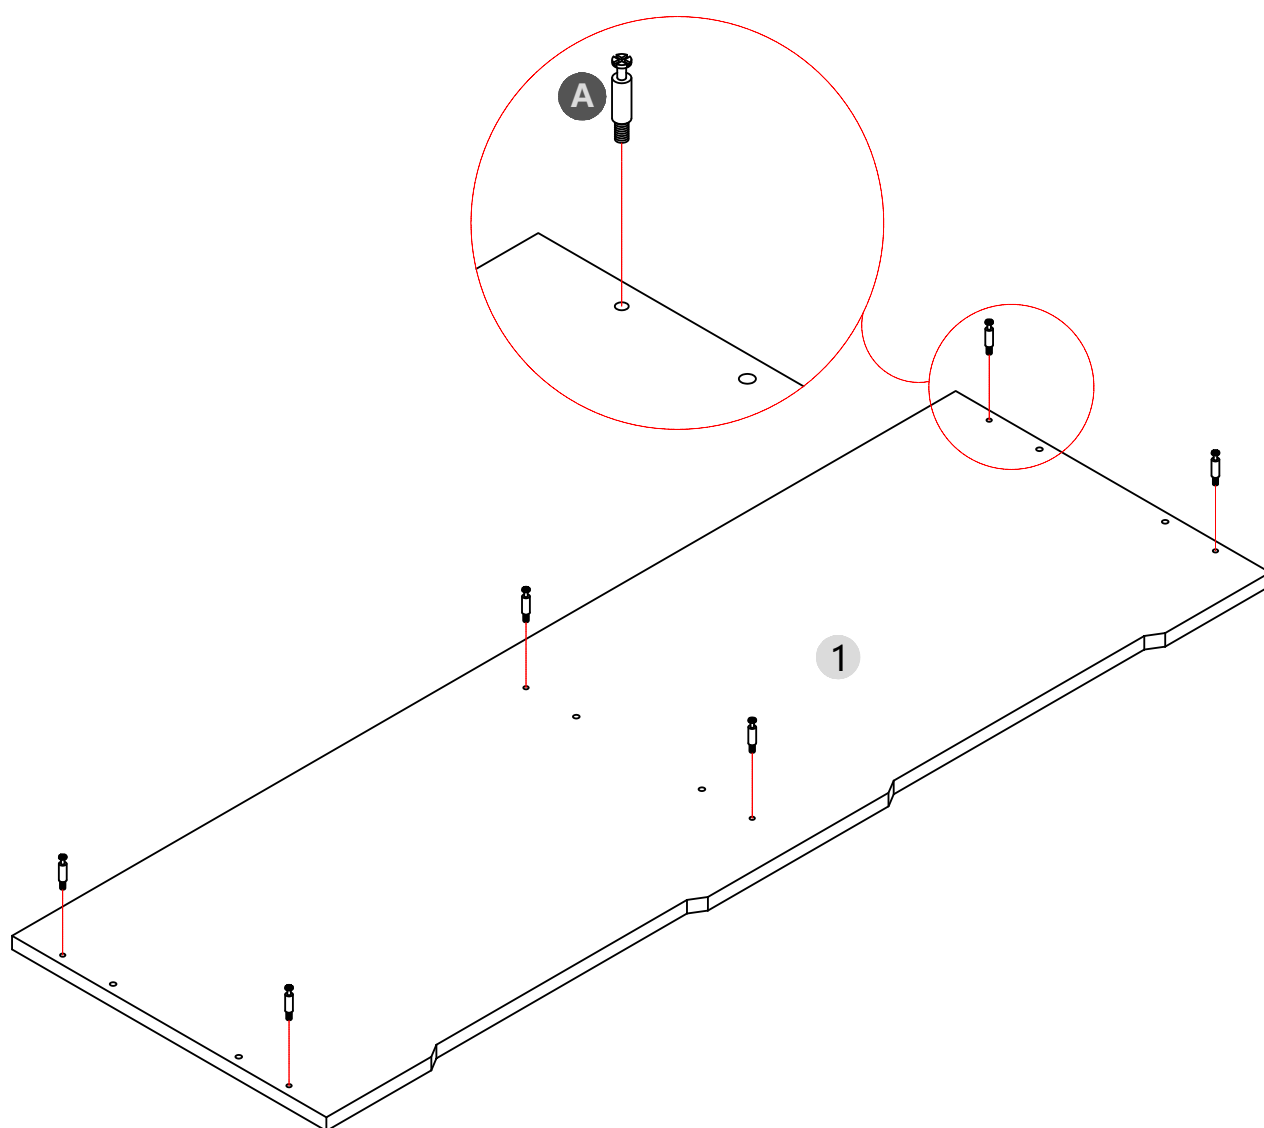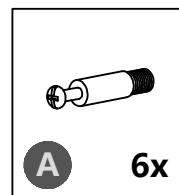


STEP 21

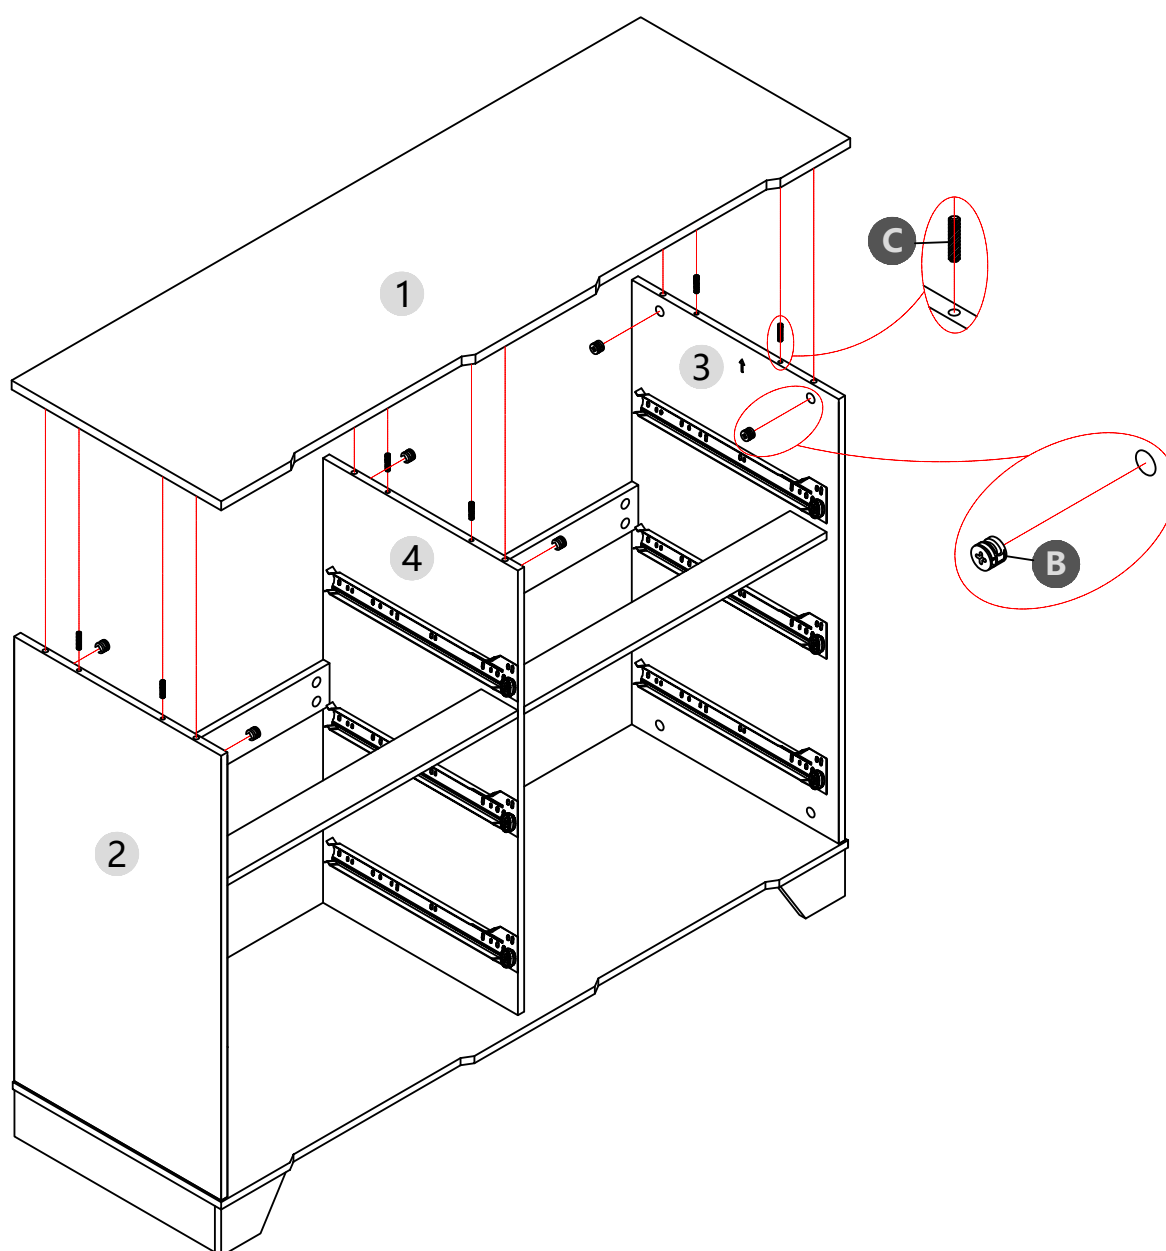
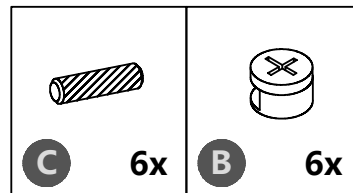


STEP 22




	
J 2x	F 24x

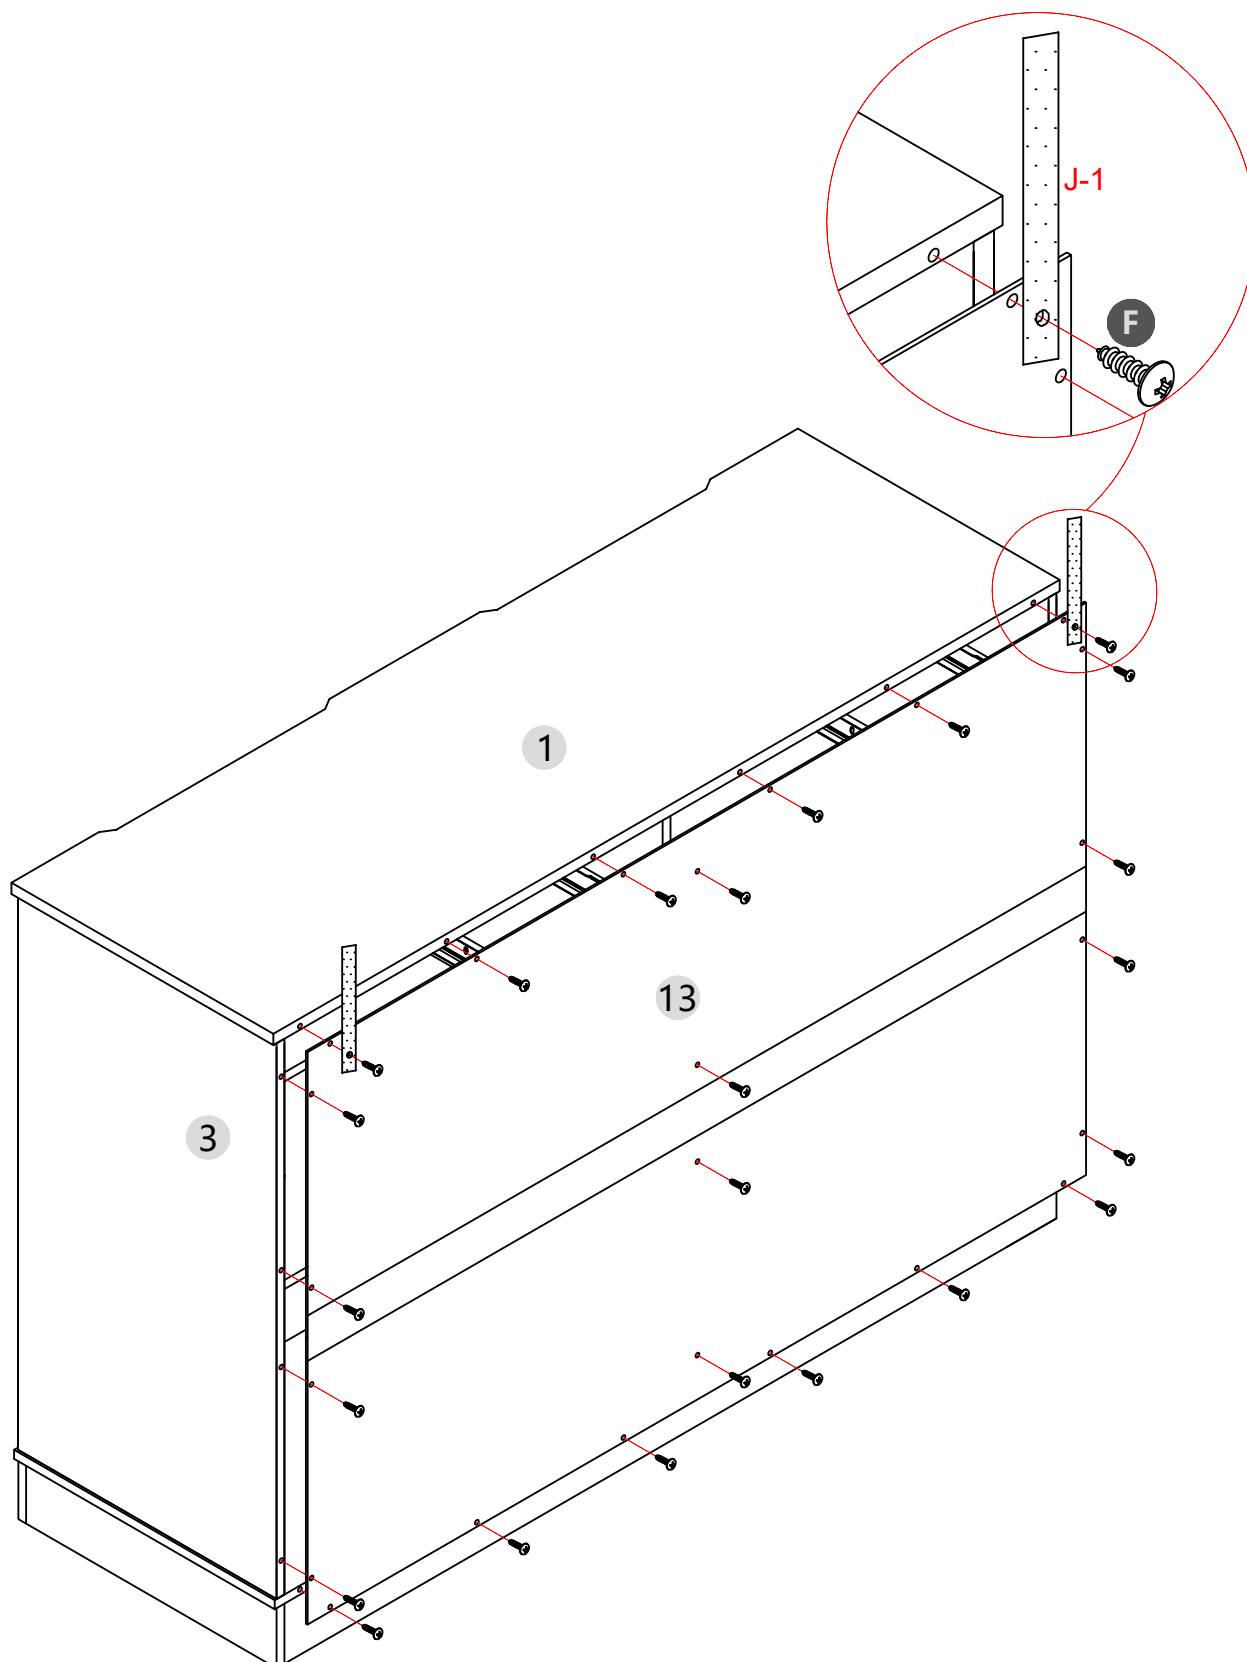



STEP 23

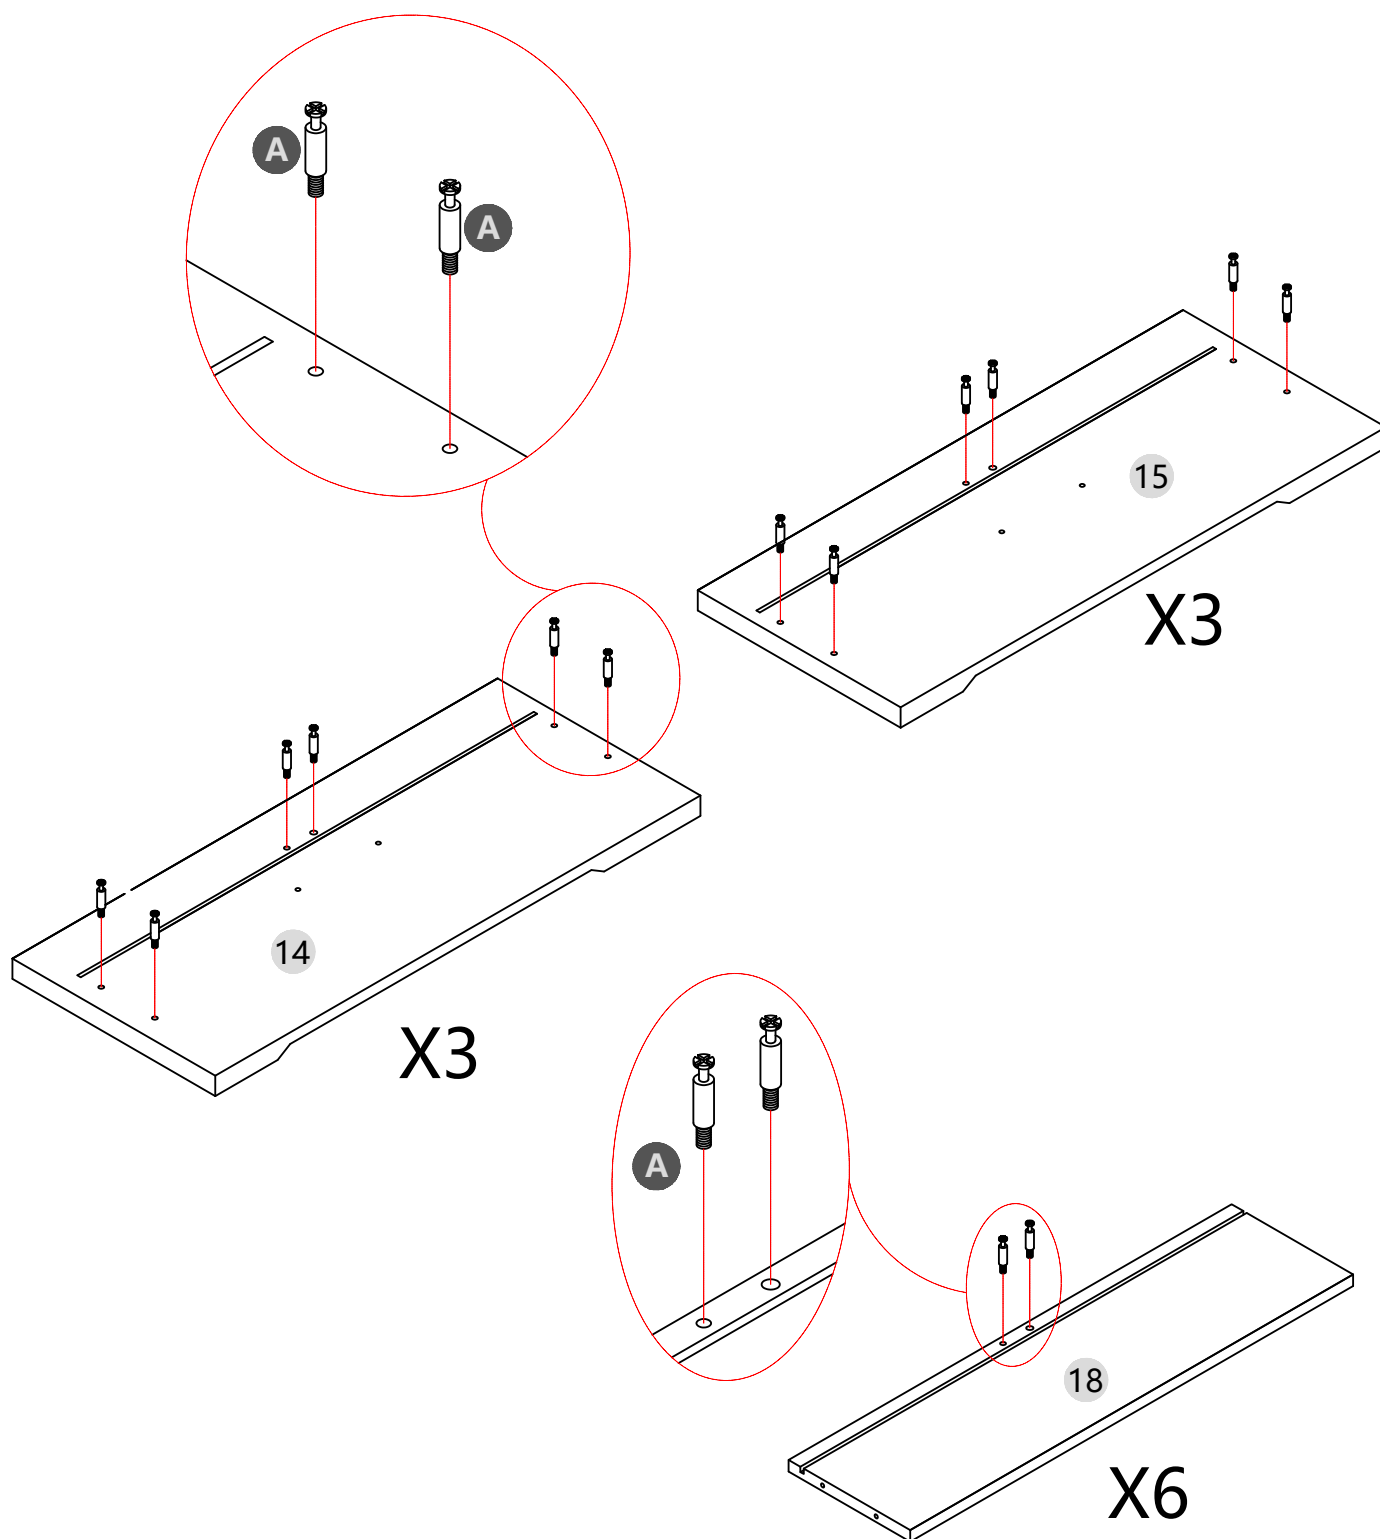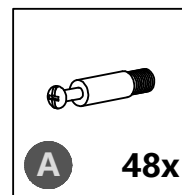




STEP 24

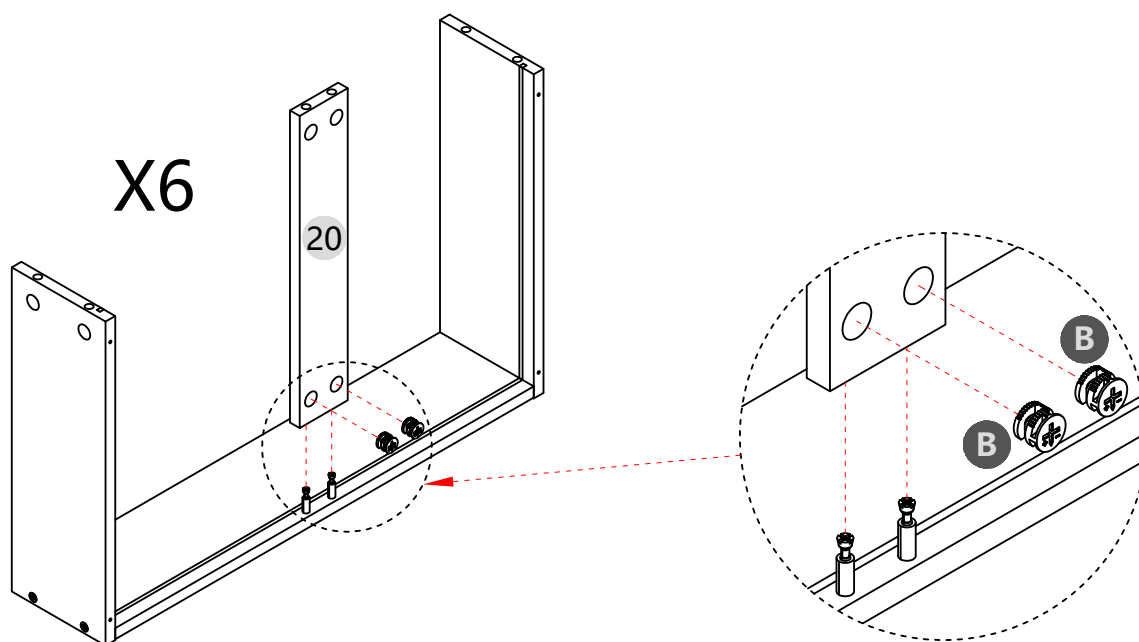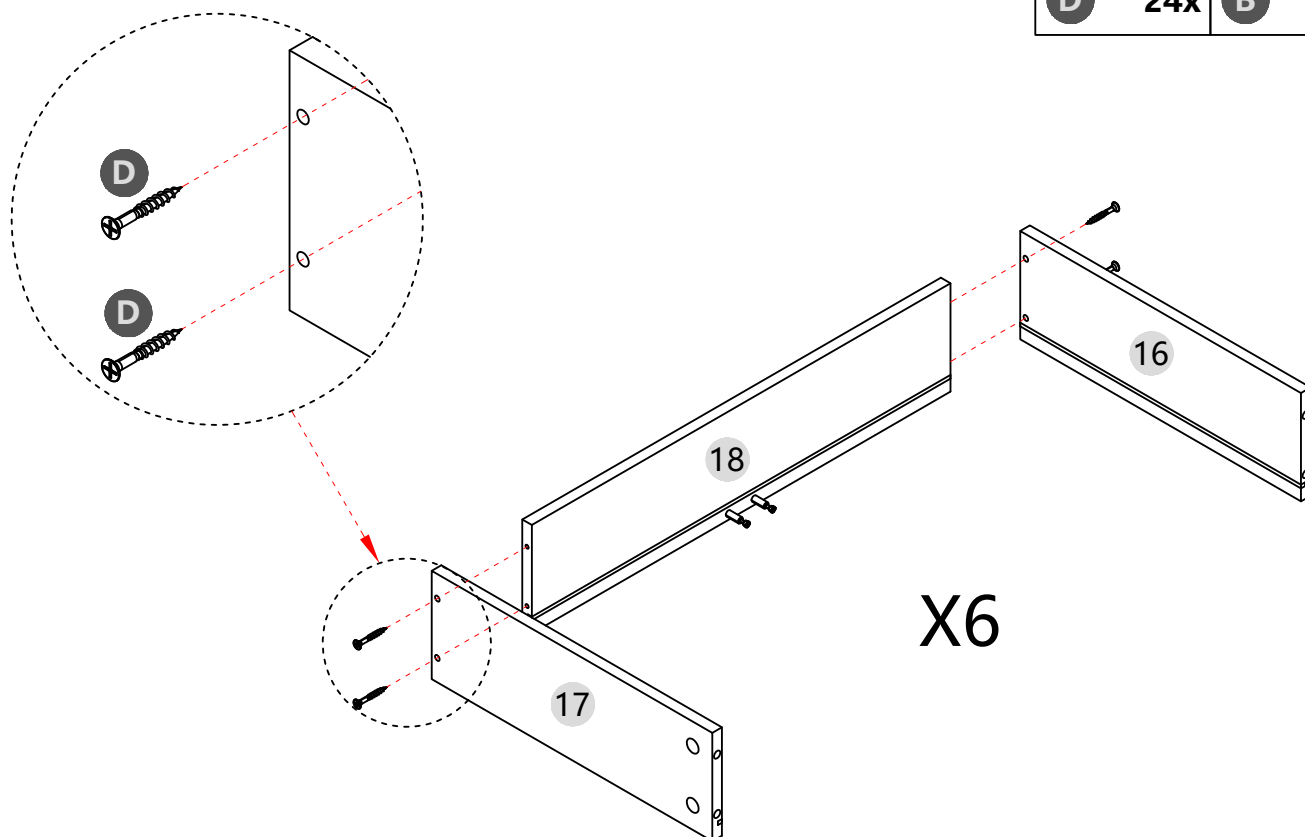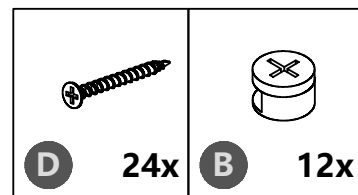

STEP 25

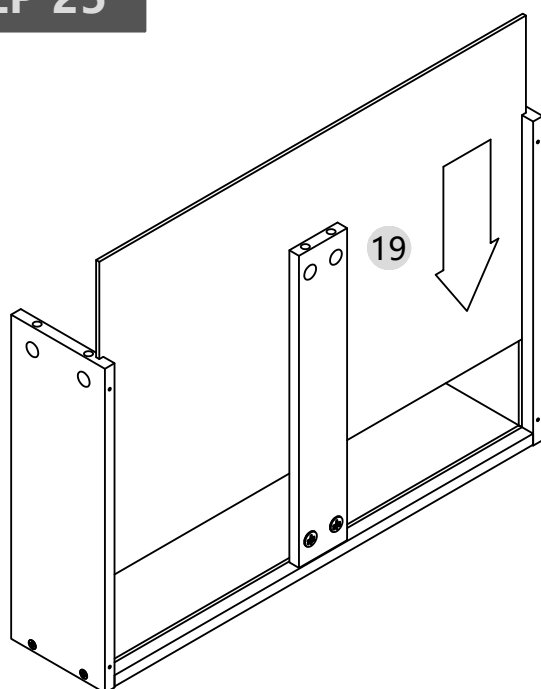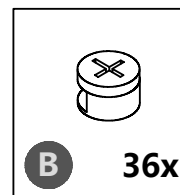


X6

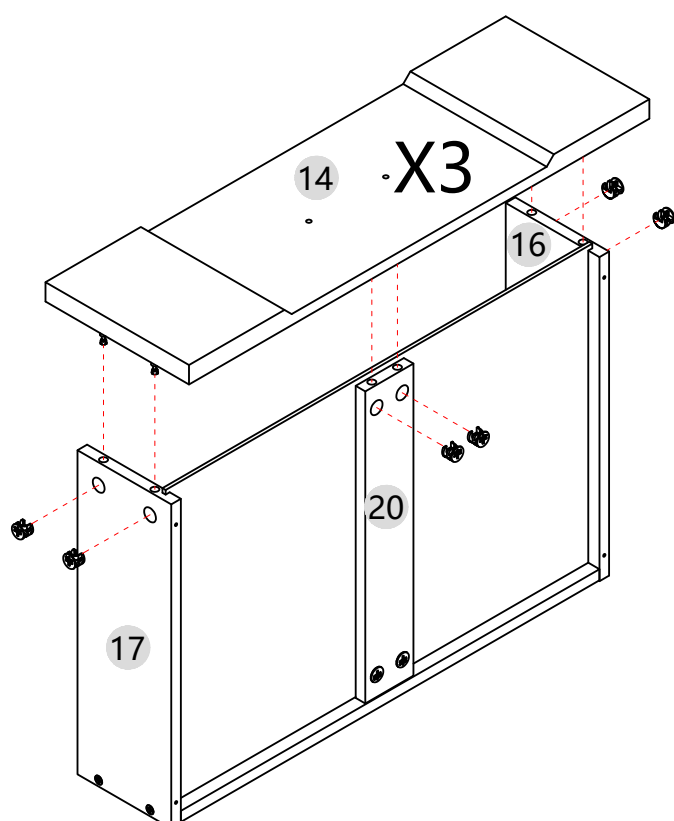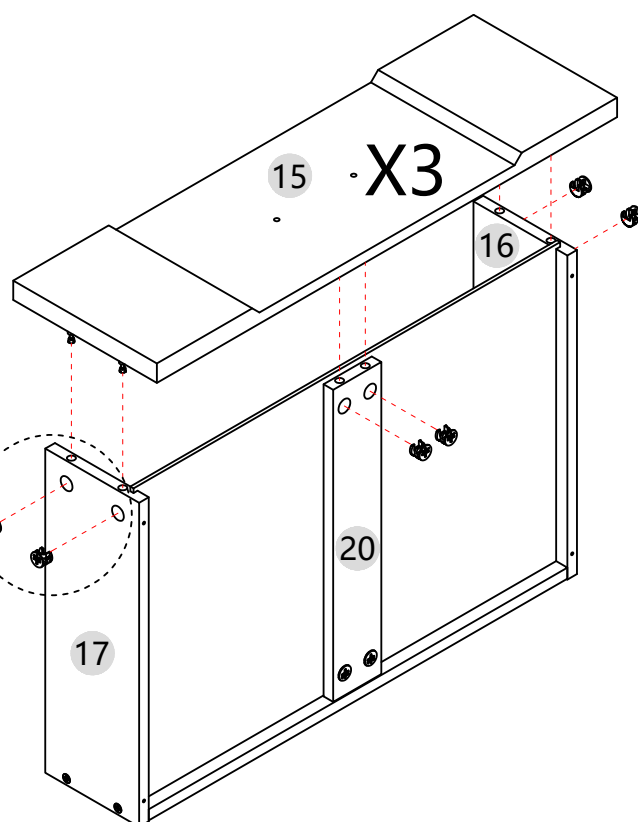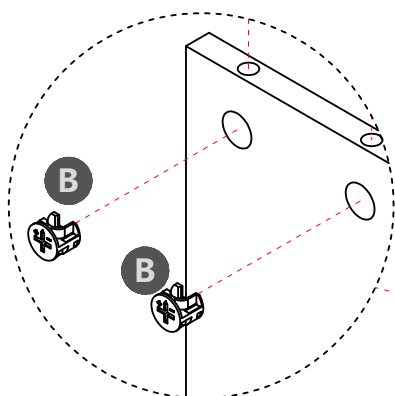


STEP 26

		
J 12x	H 6x	I 12x

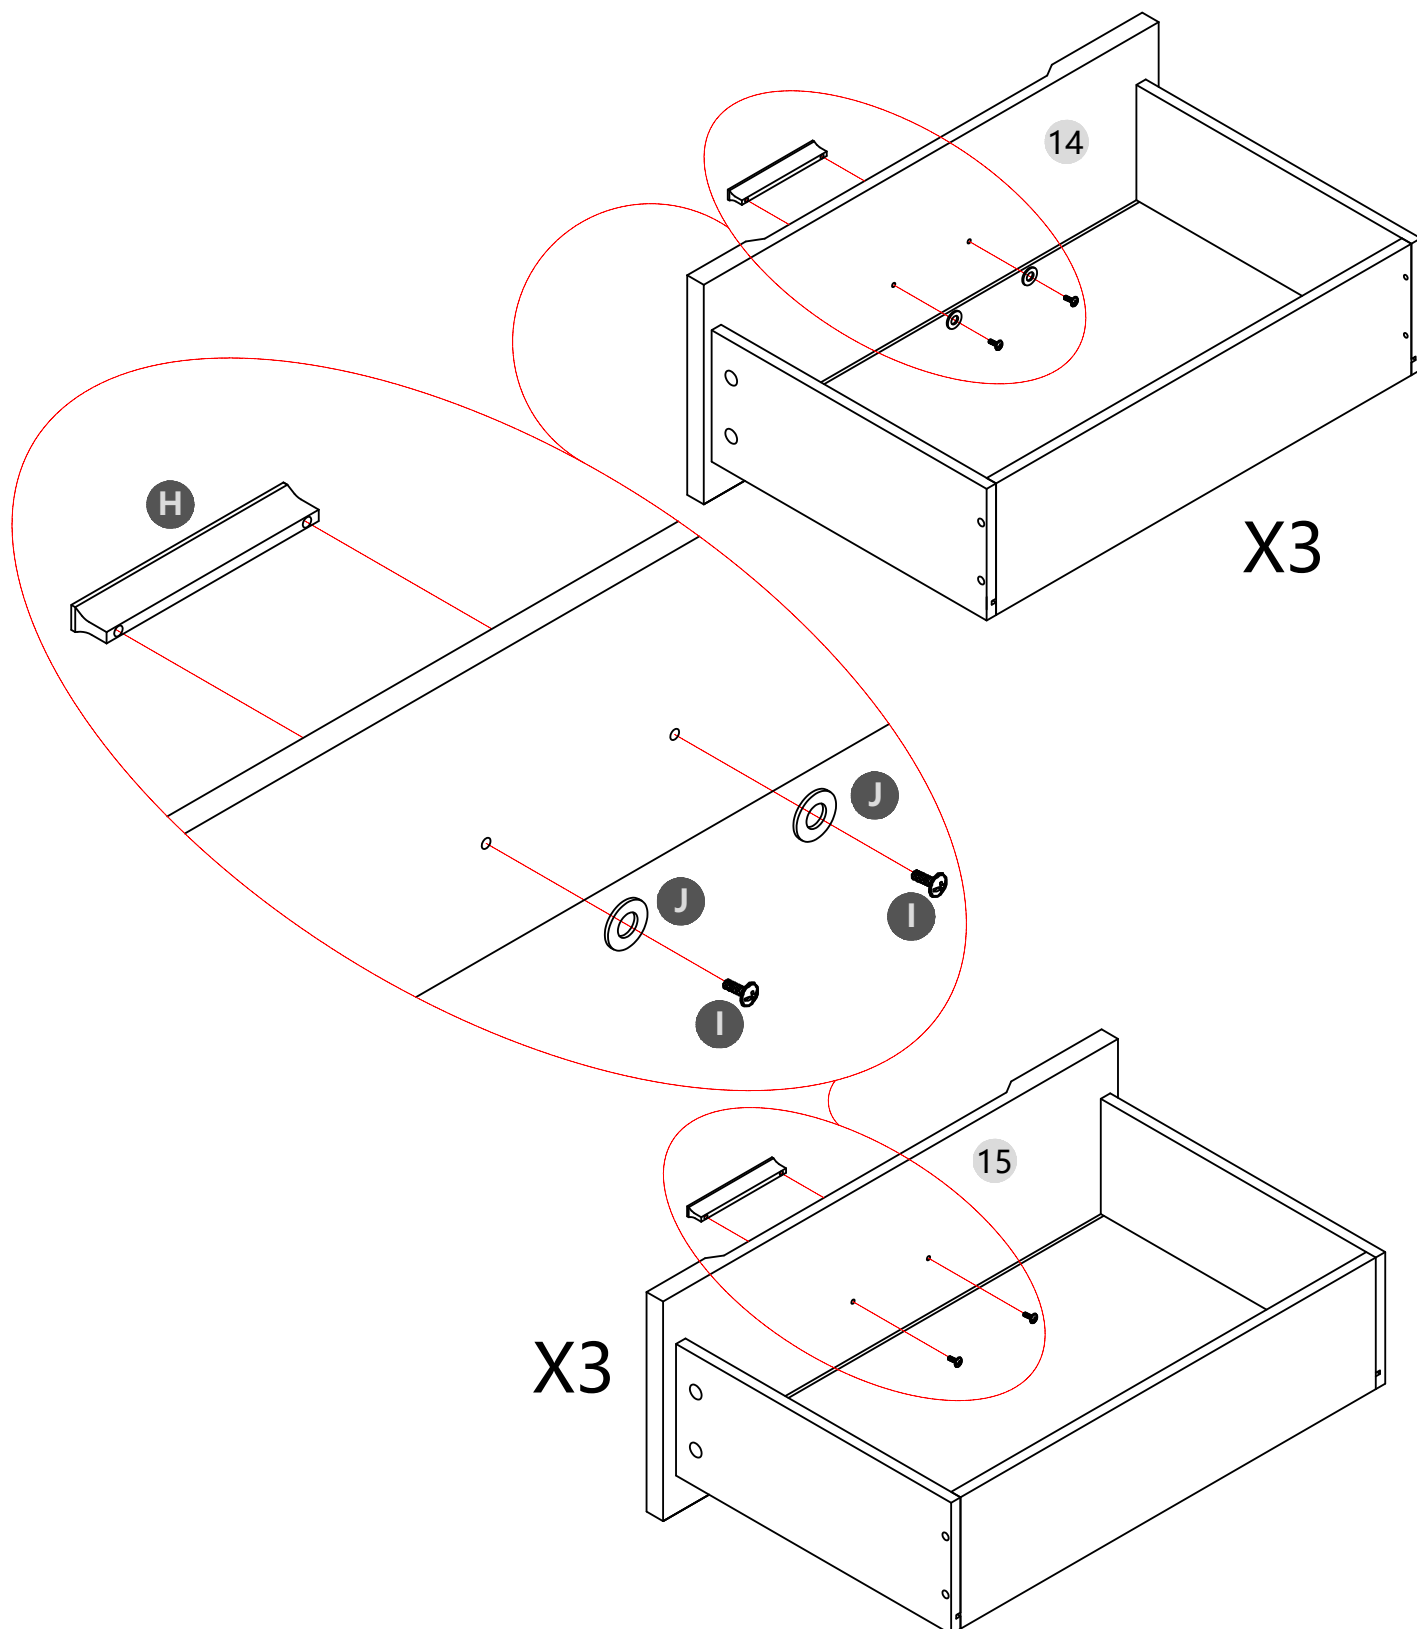



STEP 27

		
E 24x	G 3x	G 3x

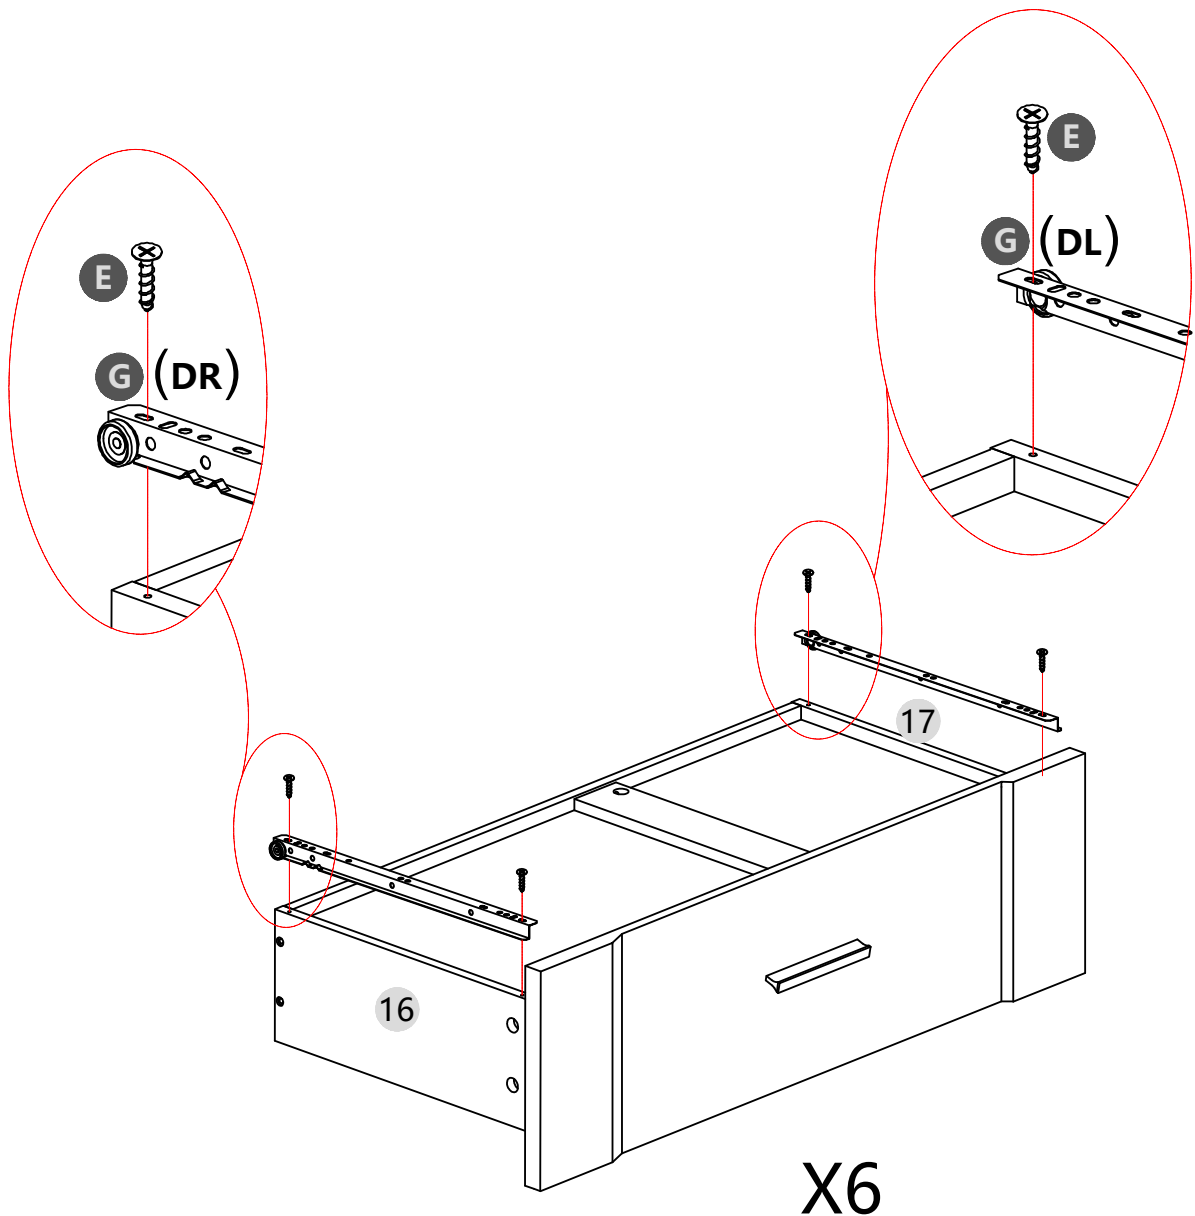



X6

STEP 28

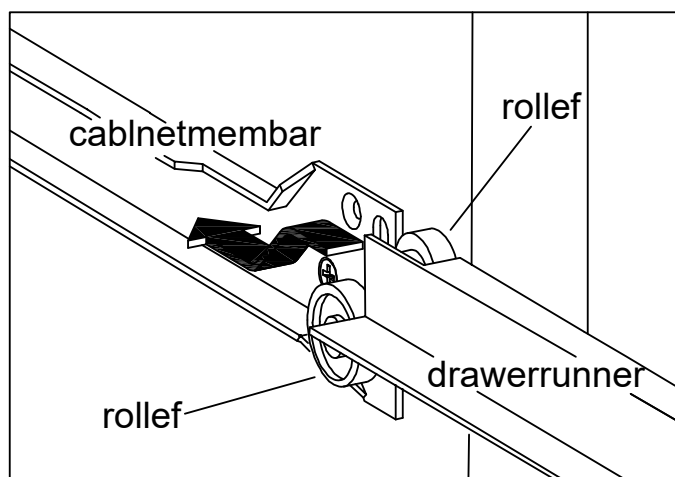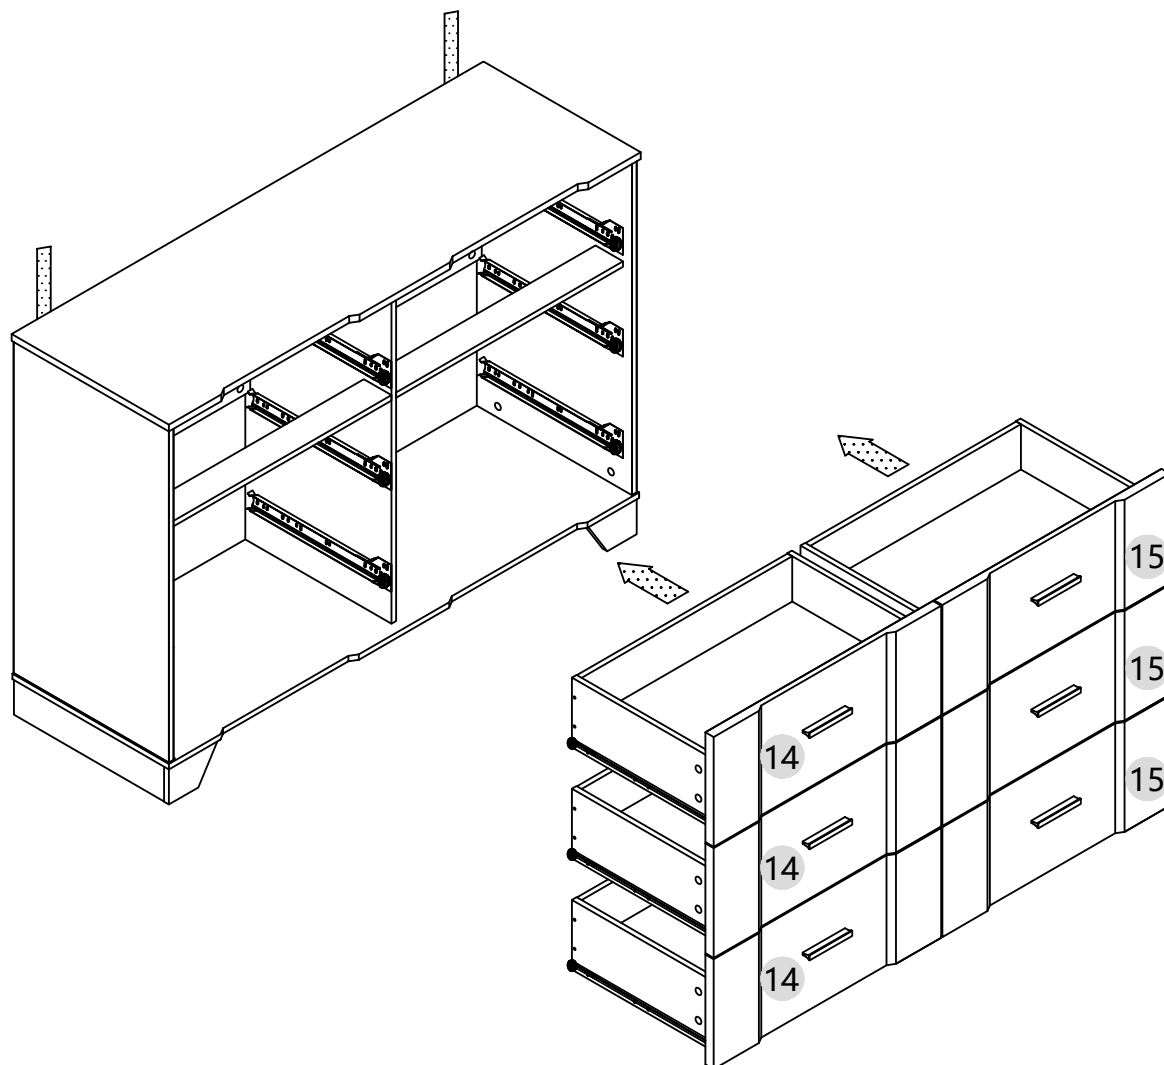

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

STEP 29

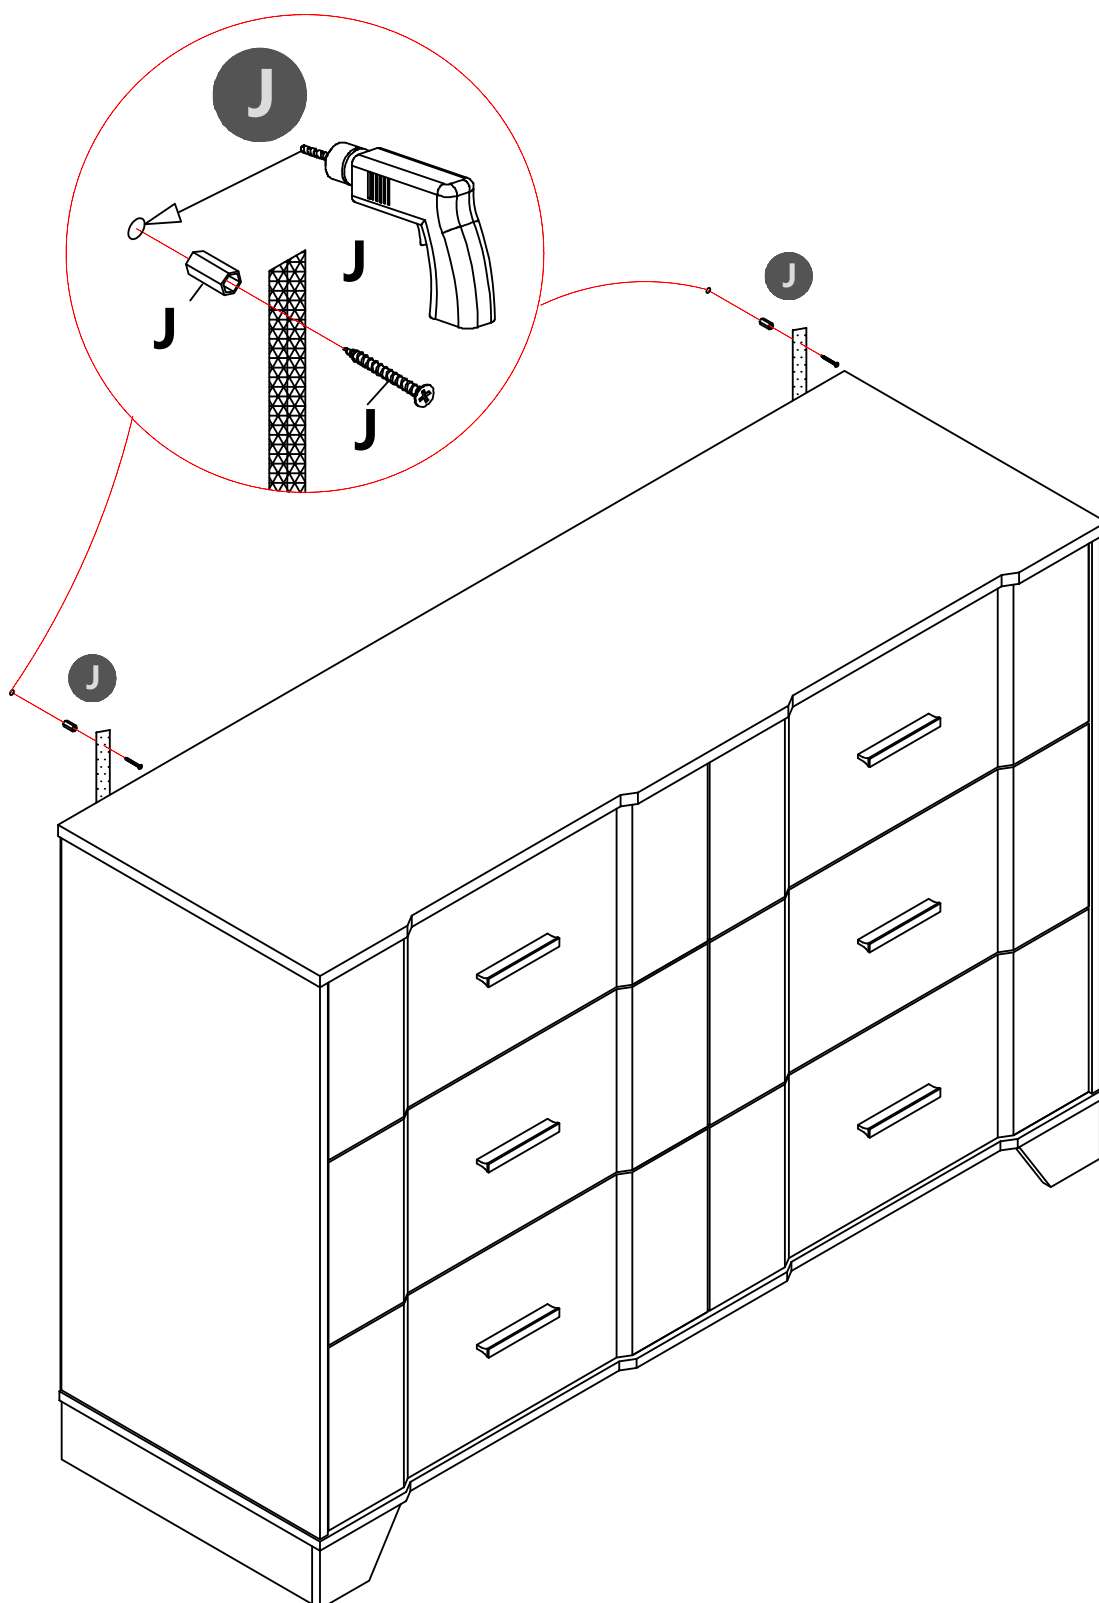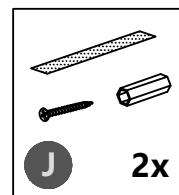

STEP 30

Finally, you got a 6Drawer Dresser !

