


ASSEMBLY INSTRUCTION FOR

Floor Lamp

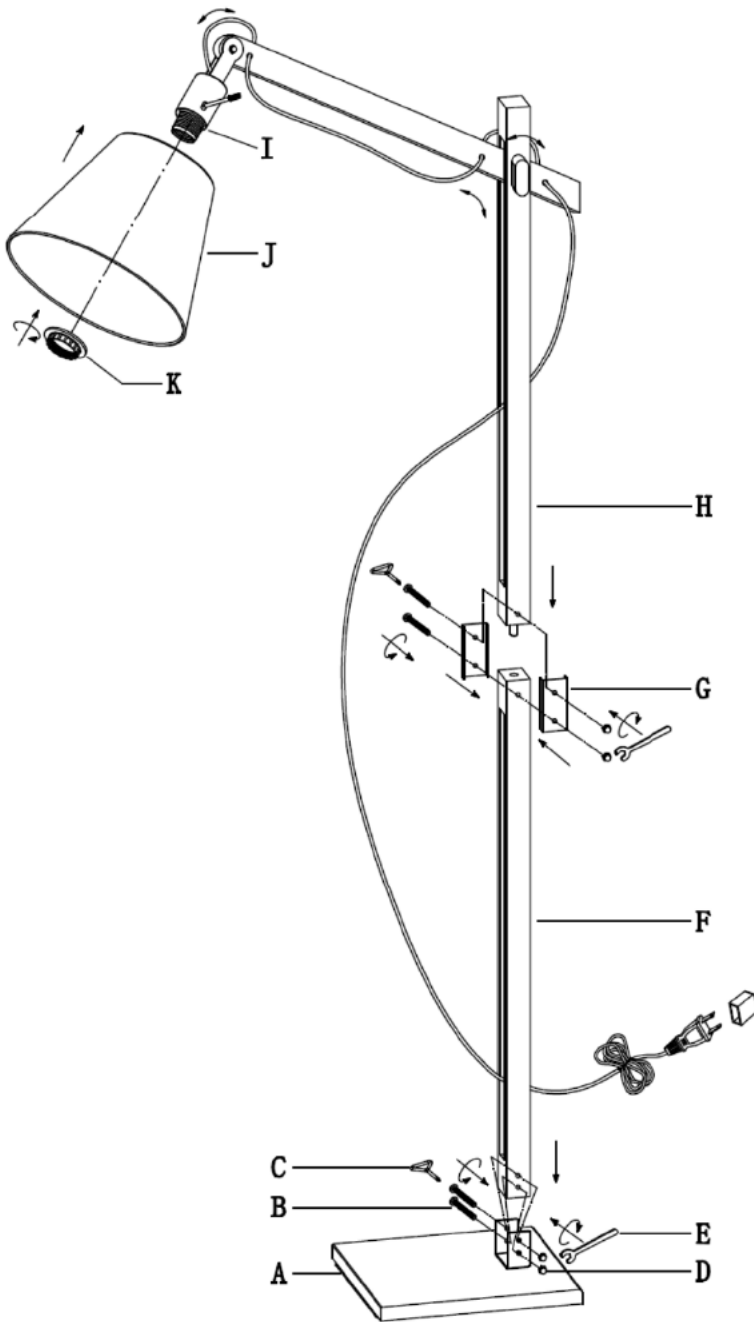

1. Place wooden pole (F) onto the U shape metal fixing on the base (A) .

2. Insert screw (B) through the hole and fix it by nut(D), then use the screw driver (C) and spanner (E) to tighten.

3. Place wooden pole(H) into pole(F) and fix it by metal cover (G). Then insert screw (B) through the hole and fix it by nut(D),and use the screw driver (C) and spanner (E) to tighten.

4. Place the shade (J) onto socket holder (I) and screw it by socket ring (K).

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG .**

BULB TYPE: Use only with one type A Max 100W bulb (bulbs not included).

PARTS DIAGRAM

- | | |
|----------------------|--------------------|
| (4) * Screw (B) | (4) Nut(D) |
| (1) Screw driver (C) | (1) Spanner (E) |
| (1) Metal cover(G) | (1) Socket ring(K) |