
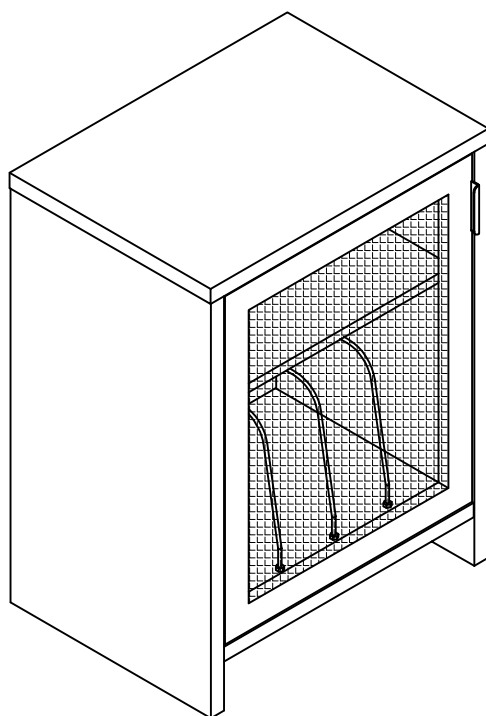
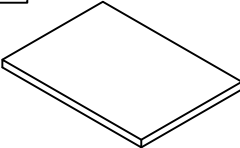

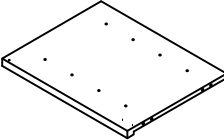
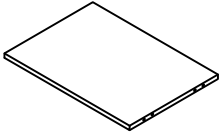






Small Record Player Cabinet with Vinyl Storage

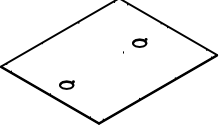

PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Shelf 1 PC
F 	G 	H 	I 	
Door 1PC	Back Panel 1 PC	Cover 2 PCS	Metal Wire 4 PCS	

HARDWARE LIST

#1 	#2 	#3 	#4 	#5 
Handle 1 PC	Magnet 2 PCS	Cam Bolt 12 PCS (Extra 1)	Cam Lock 12 PCS (Extra 1)	Wood Dowel 12 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
Hex Nut 8 PCS (Extra 1)	Round Head Screw 4 PCS (Extra 1)	Long Screw 2 PCS (Extra 1)	Short Screw 15 PCS (Extra 1)	Binding Post 2 SETS (Extra 1)
#11 	#12 	#13 	#14 	
Allen Wrench 1 PC	Wrench 1 PC	Cam Sticker 12 PCS (Extra 1)	Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach magnets (part #2) to panels (parts A & D) using round head screws (part #7) and phillips head screwdriver.

Insert cam bolts (part #3) into pre-drilled holes of panels (parts A, B & C) using phillips head screwdriver.


Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

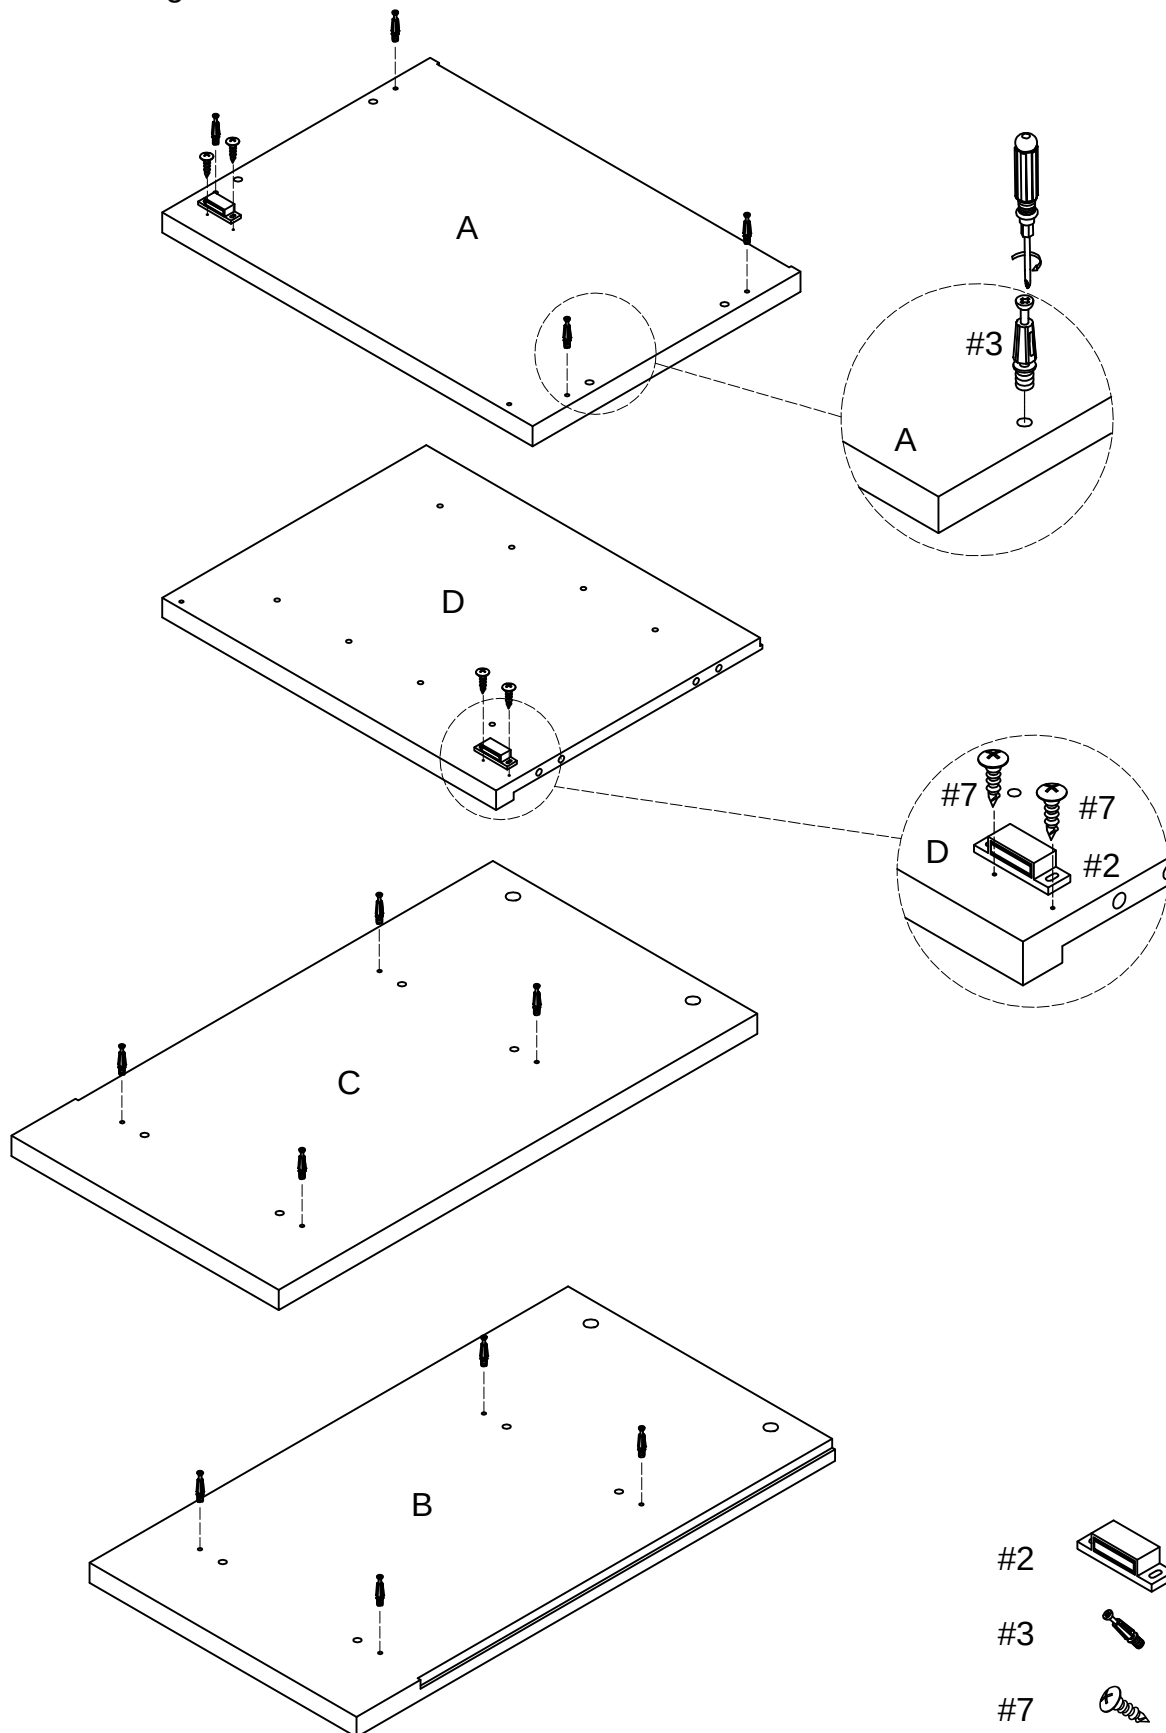


Step 2. Attach covers (part H) to back panel (part G) using binding posts (part #10) and allen wrench (part #11).

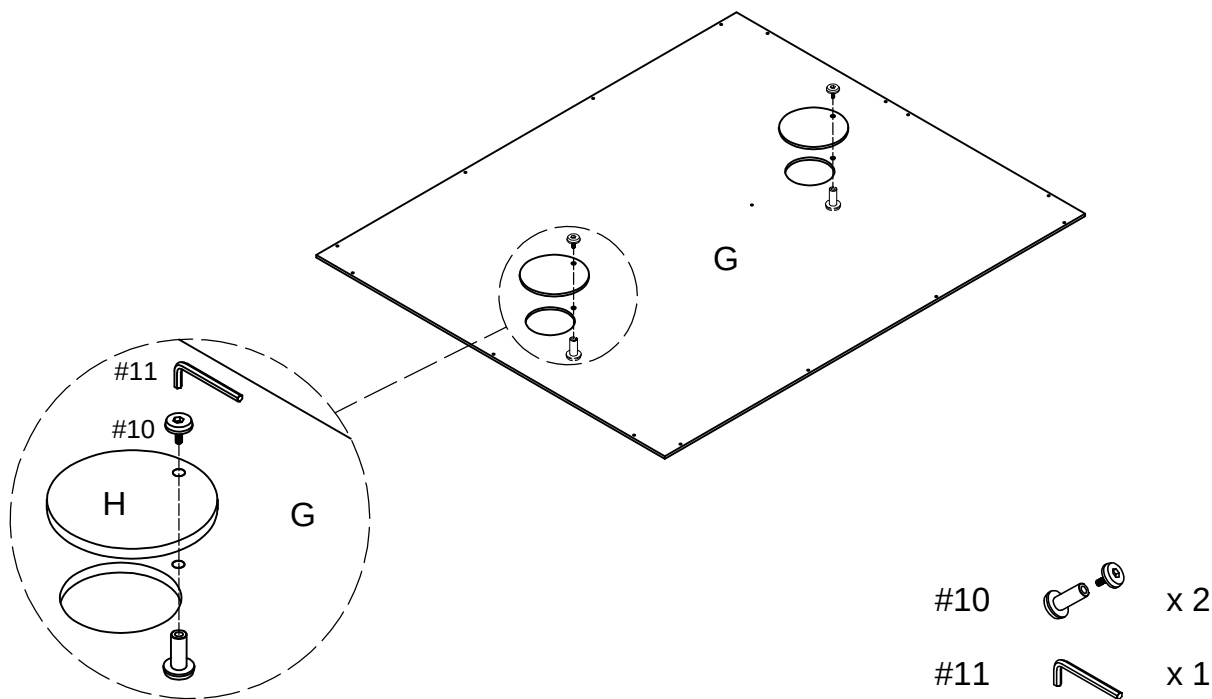

Step 3. Attach metal wires (part I) to bottom panel (part D) using hex nuts (part #6) and wrench (part #12).

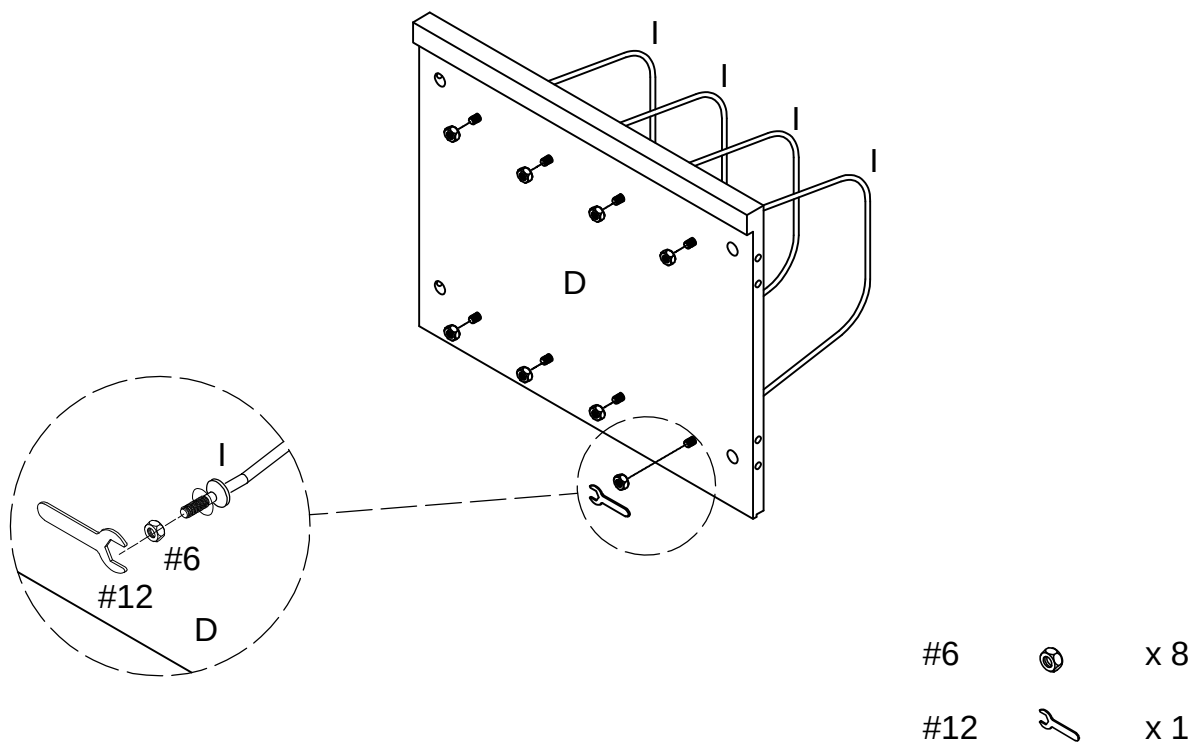

Step 4. Attach handle (part #1) to door (part F) using long screws (part #8) and phillips head screwdriver.


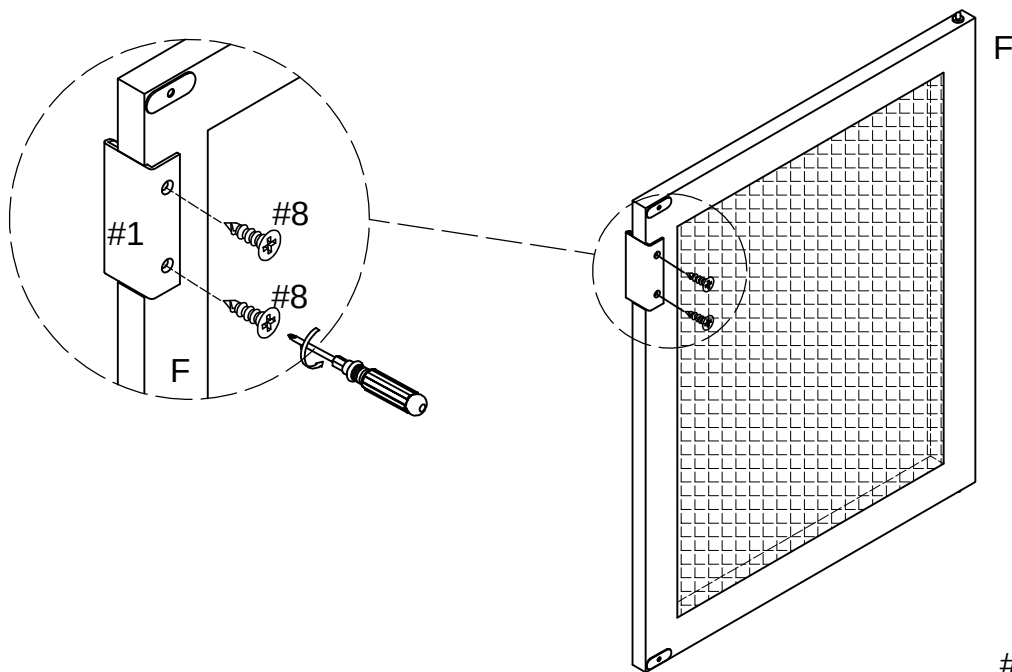


#1  x 1

#8  x 2

Step 5. Attach bottom panel (part D) and shelf (part E) to right panel (part C) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

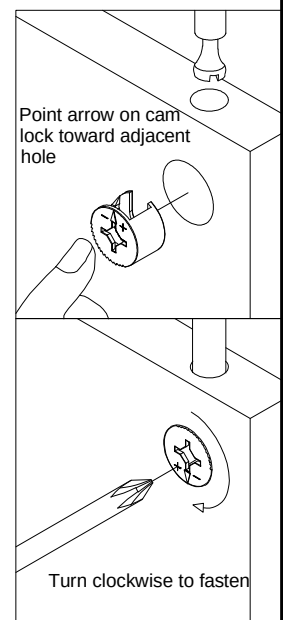
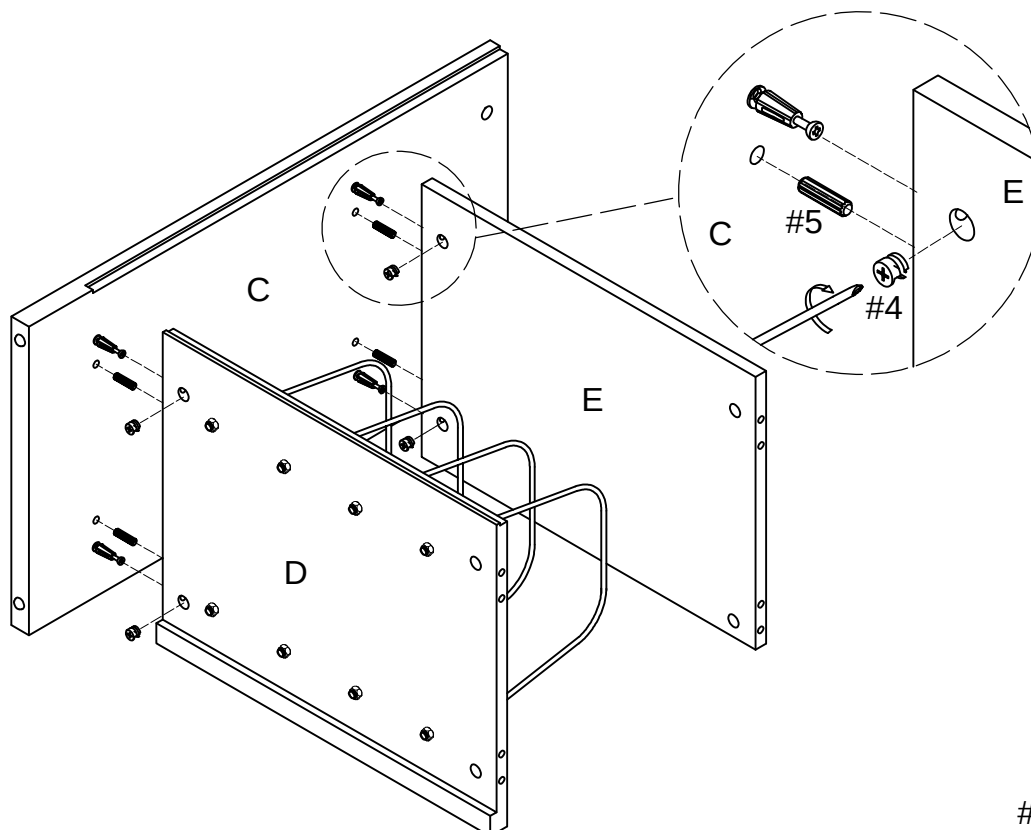


#4  x 4

#5  x 4

Step 6. Attach left panel (part B) to assembled unit (parts D & E) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

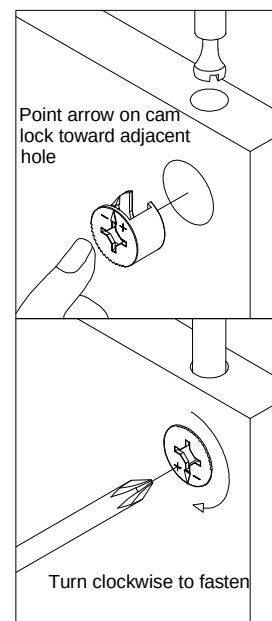
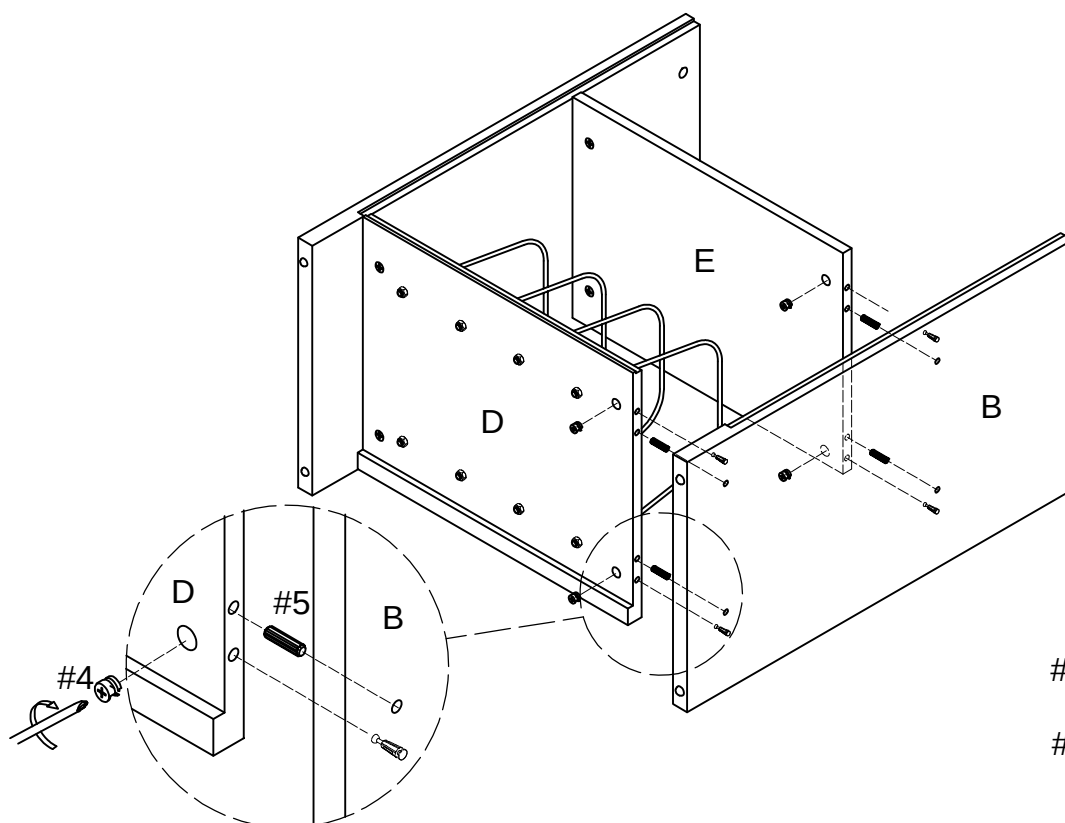


#4  x 4

#5  x 4

Step 7. Attach top panel (part A) to assembled unit (parts B & C) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

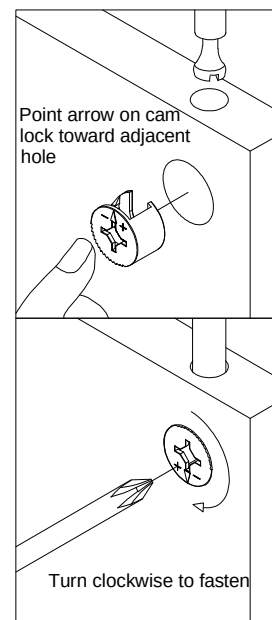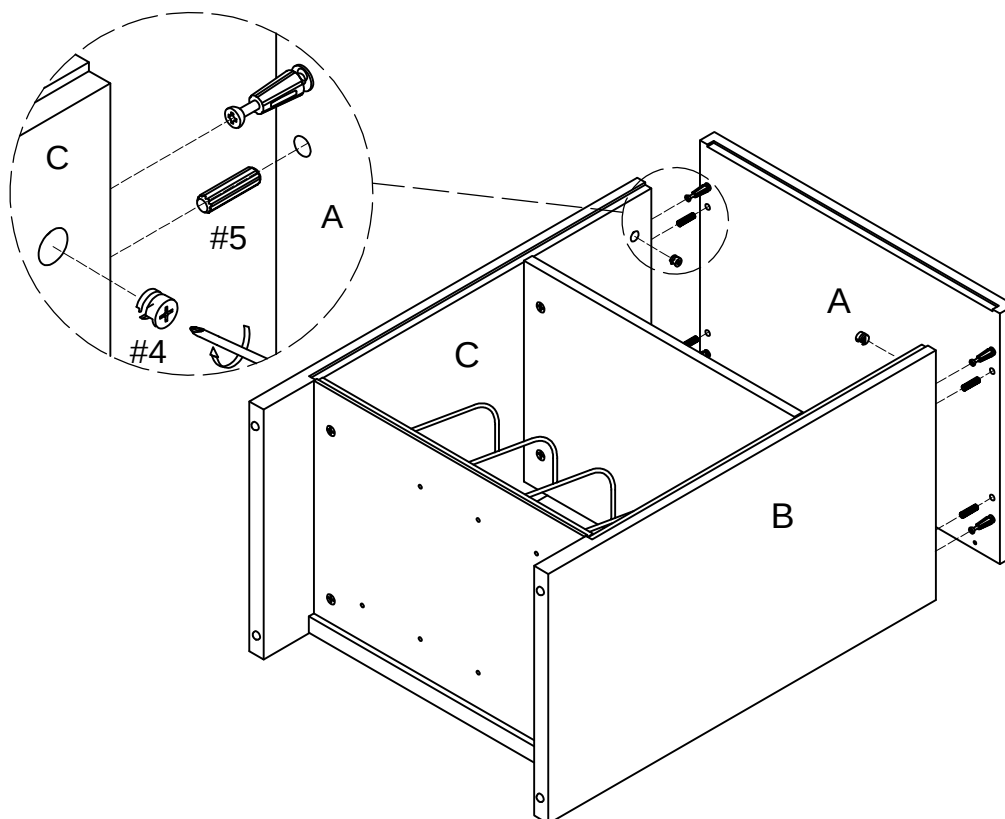


#4  x 4

#5  x 4

Step 8. Attach back panel (part G) to assembled unit (parts A, B, C, D & E) using short screws (part #9) and phillips head screwdriver.

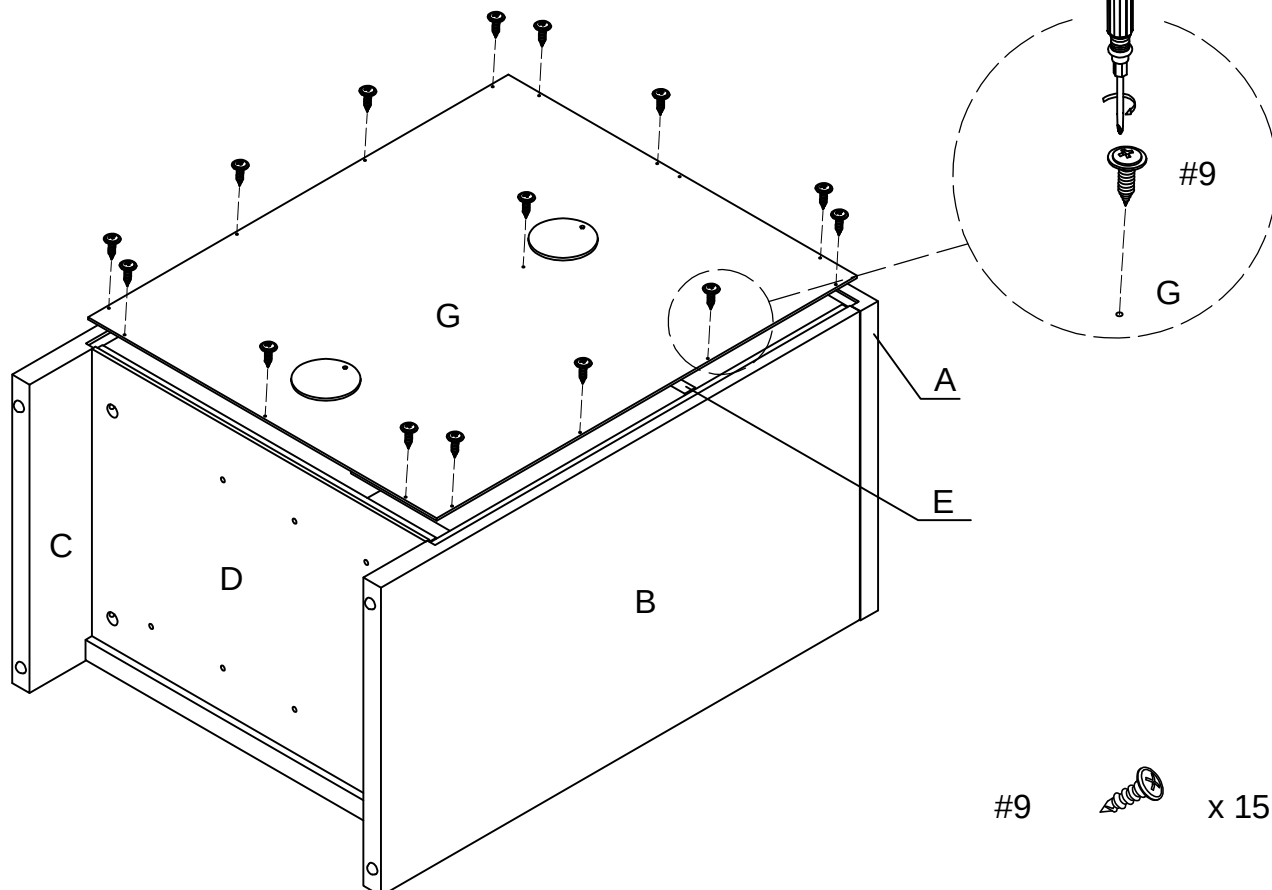


Step 9. Carefully turn unit upright. Attach door (part F) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).
NOTE: Be sure top and bottom pin hinges are fully extended to secure door in place.

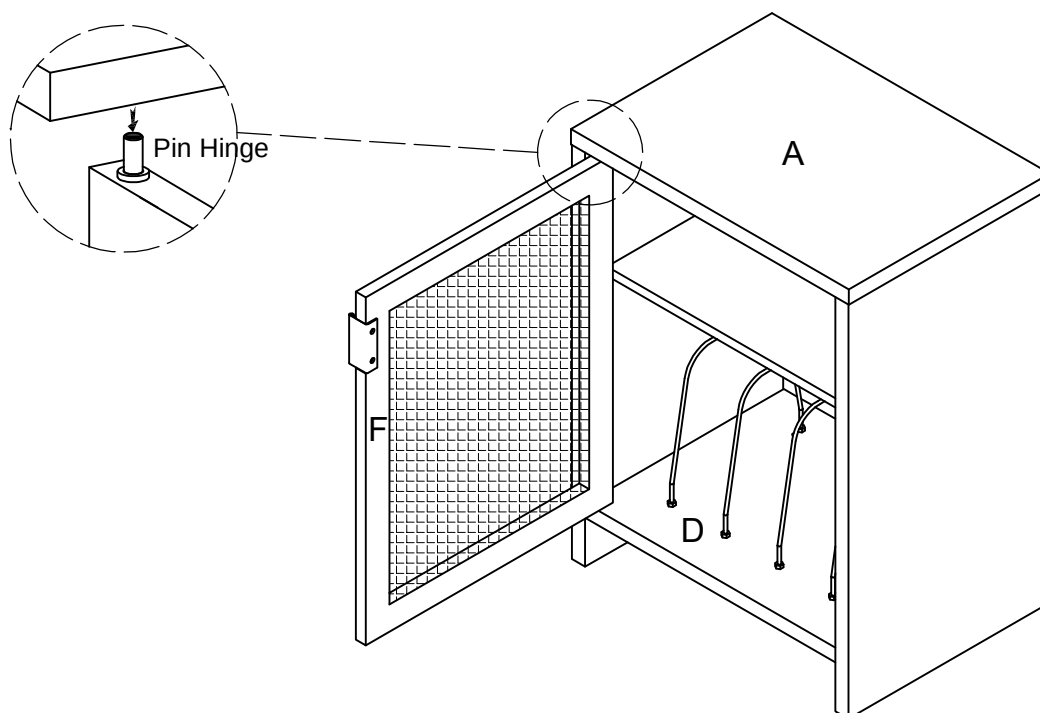


Step 10. Using cam stickers (part #13) cover cam locks (part #4).


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #14) must be installed to prevent tipping damage and/or injury.

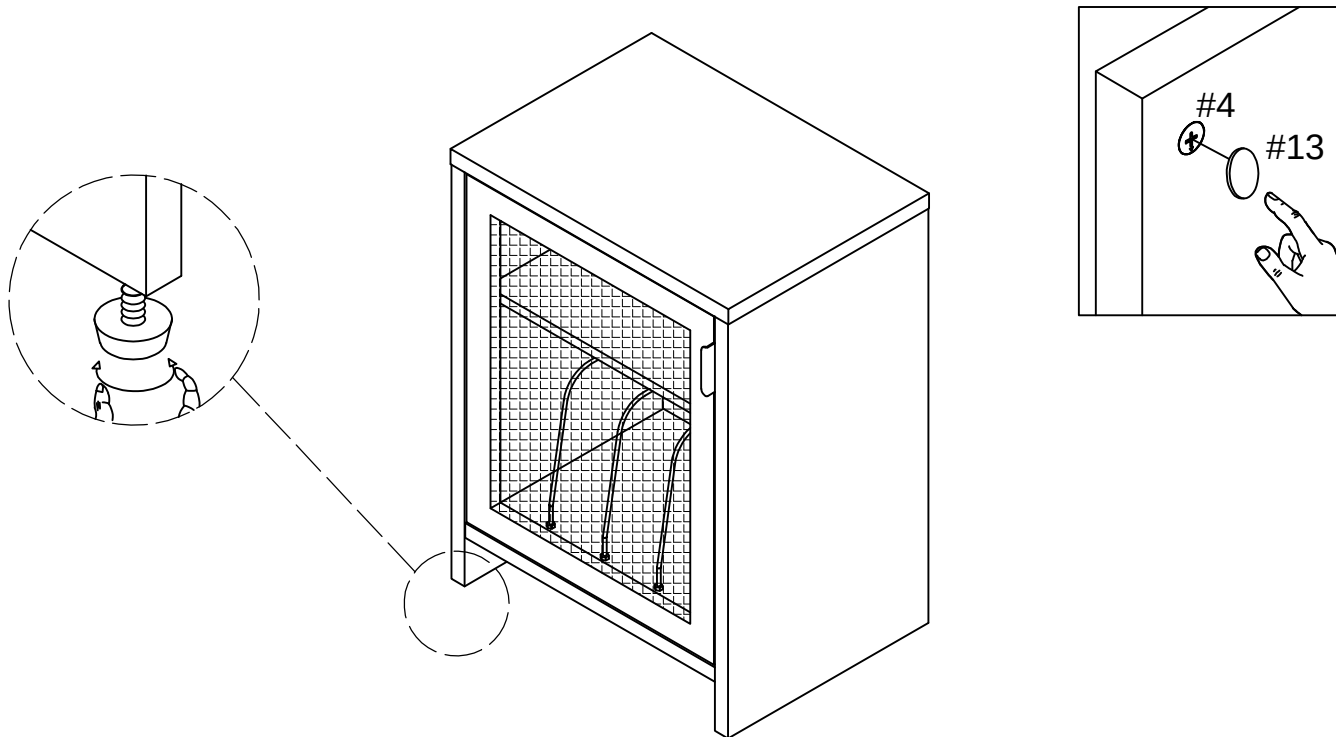

#13  x 12

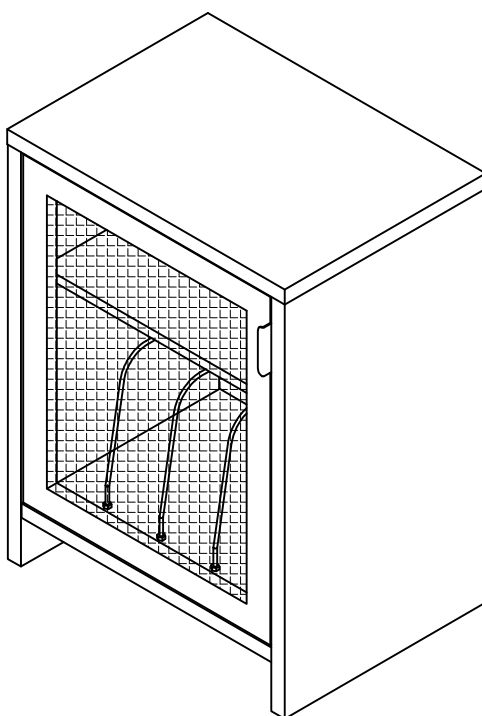

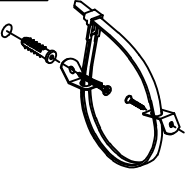
#14	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

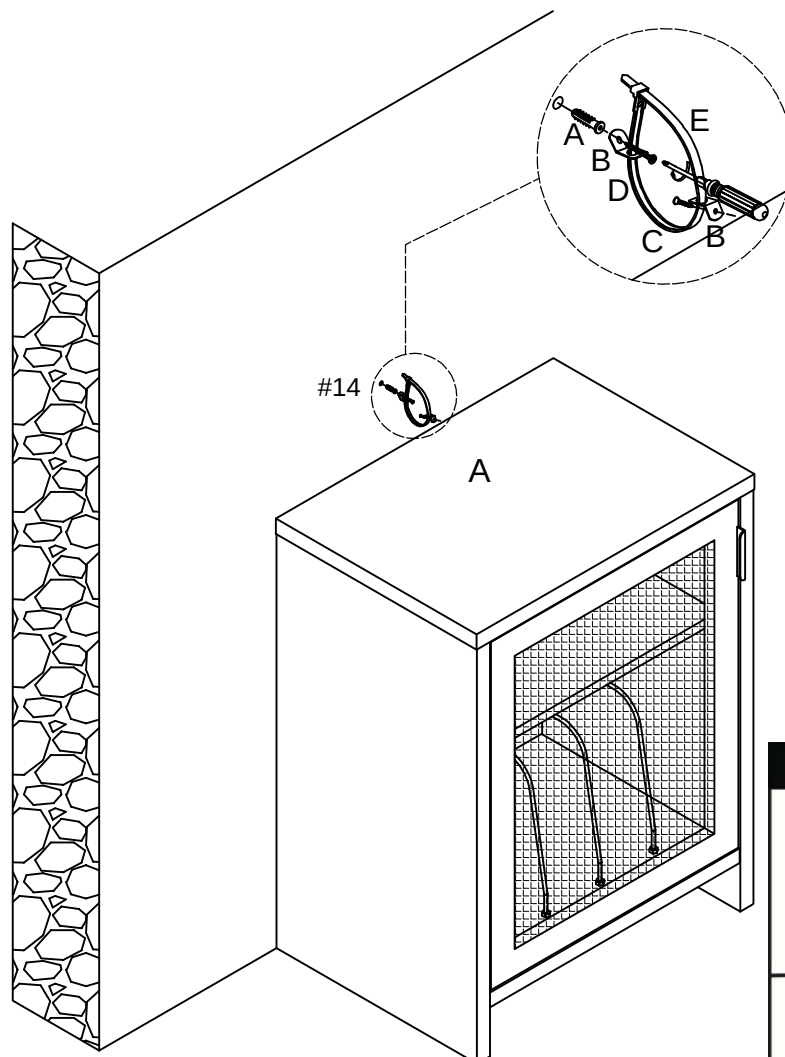

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>