




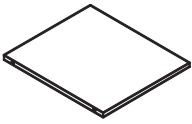
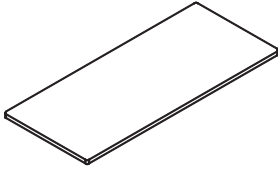

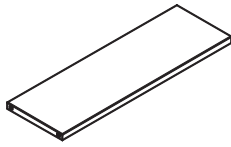

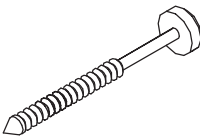


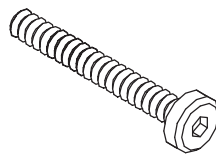



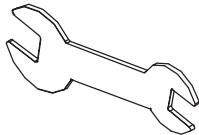
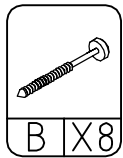
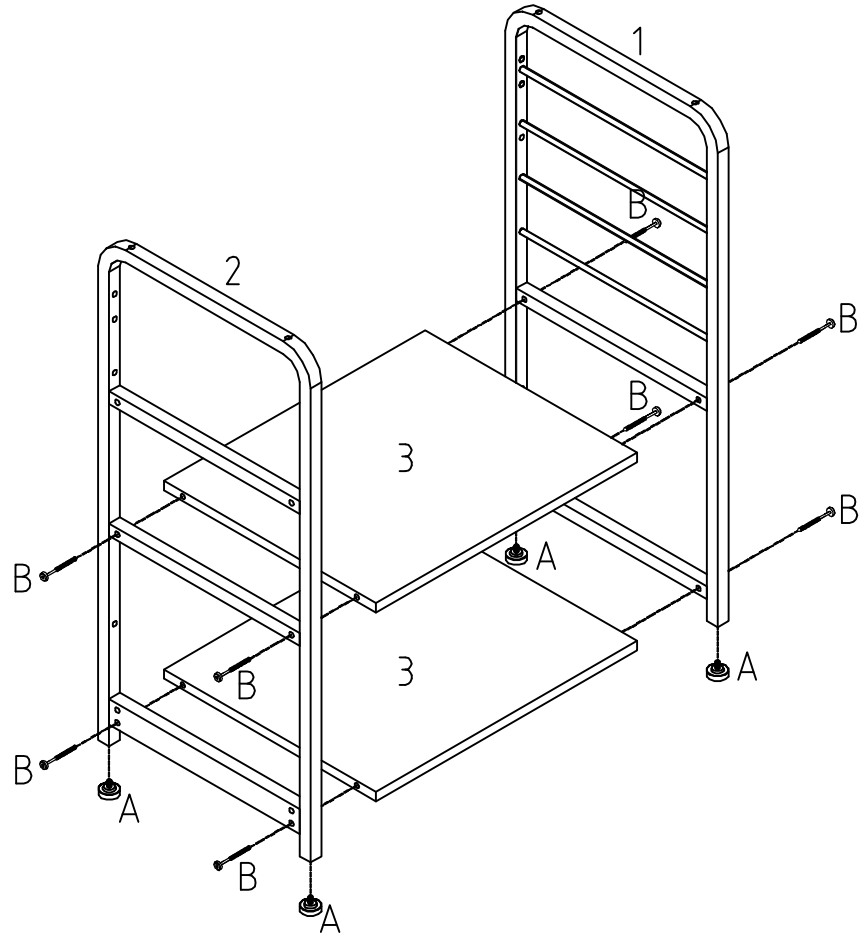


Instruction




Attention: Do not tighten the screws until all of them are in right positions

1  X1	2  X1	3  X2	4  X2	5  X1
6  X2	7  X1	8  X2	9  X1	A  X6
B  M5X50 X20	C  M6X12 X1	D  M6X28 X10	E  M6 X50 X4	F  M6 X9
G  X5				



1




2

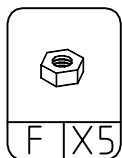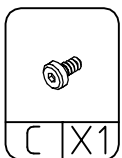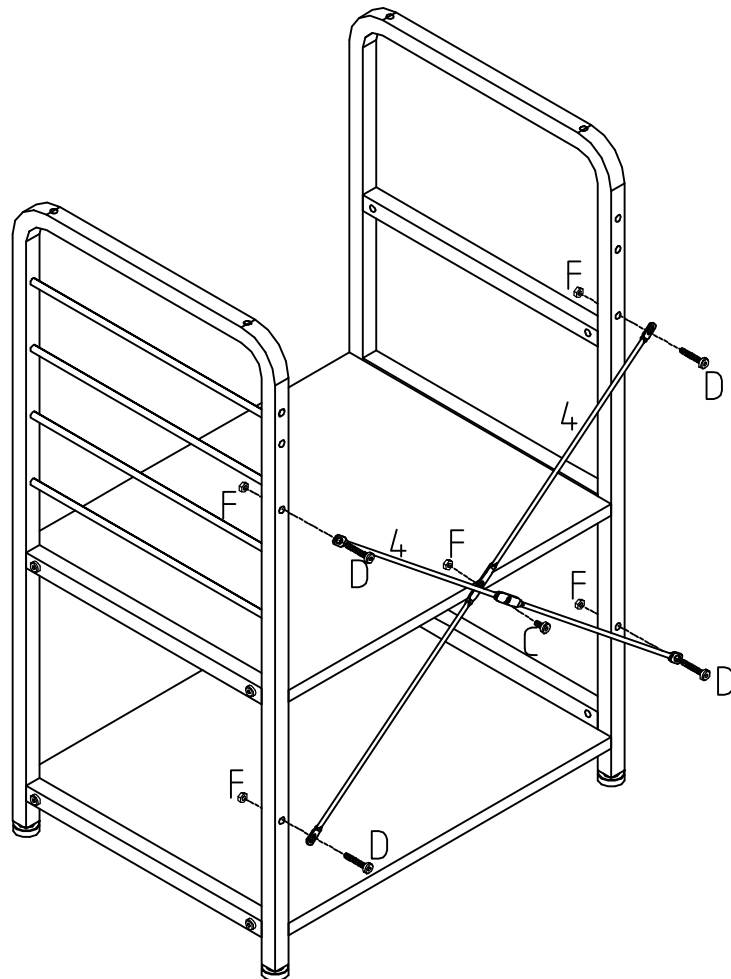





3

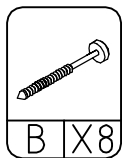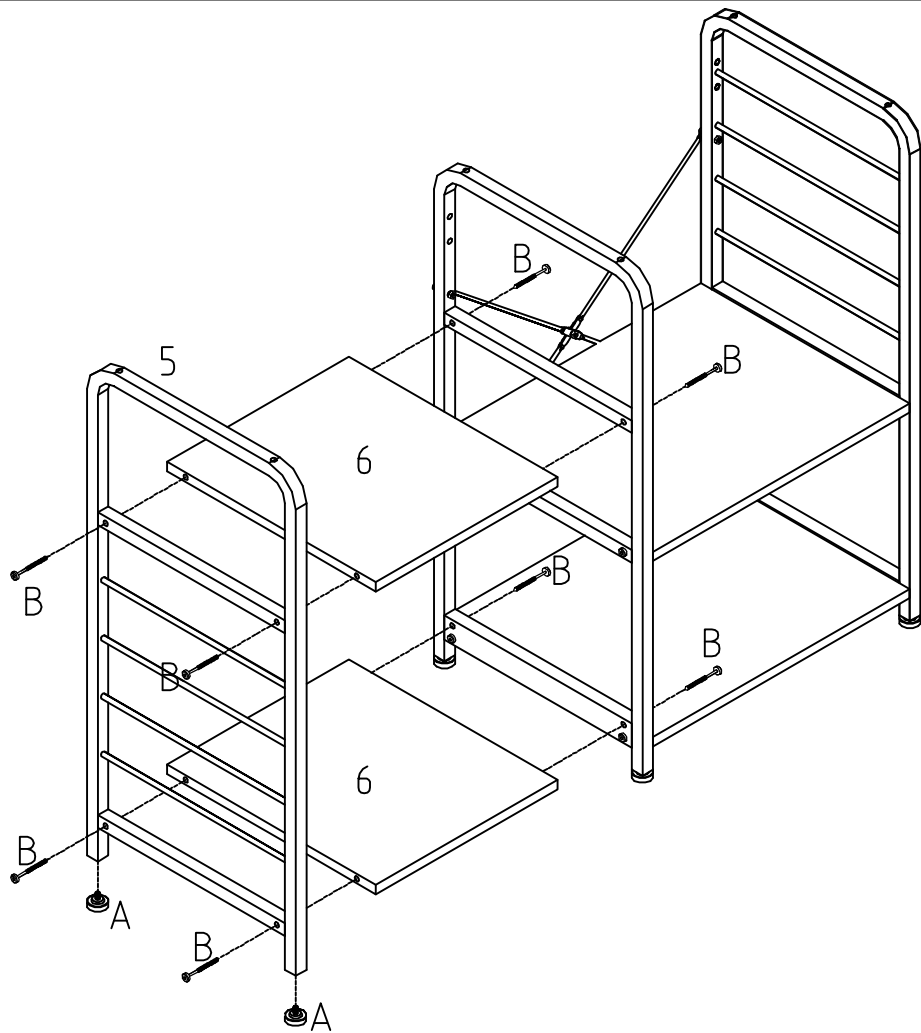

4

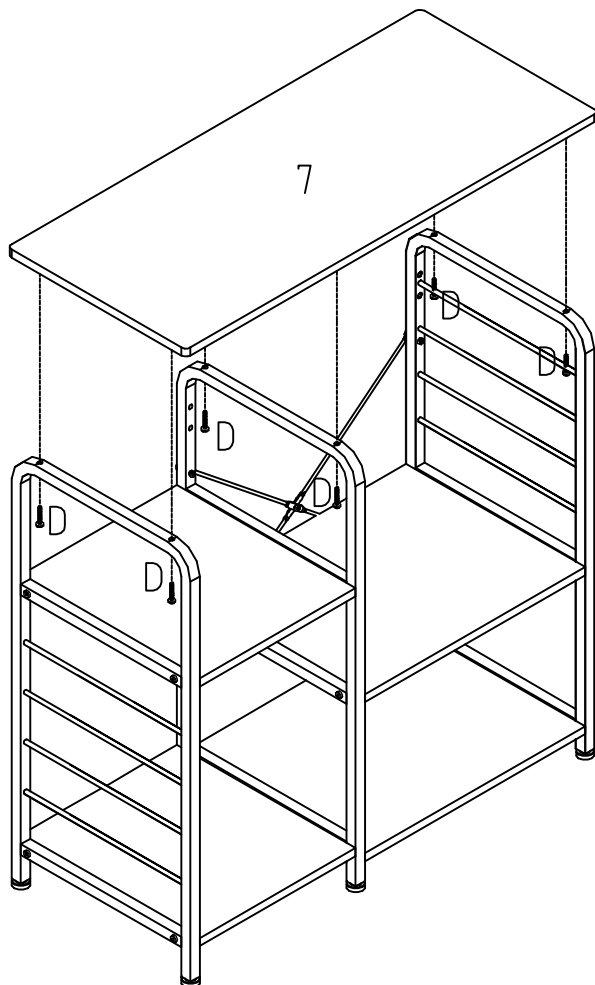

5

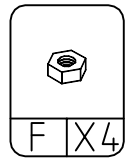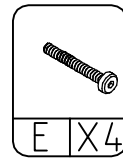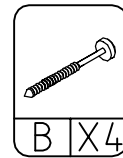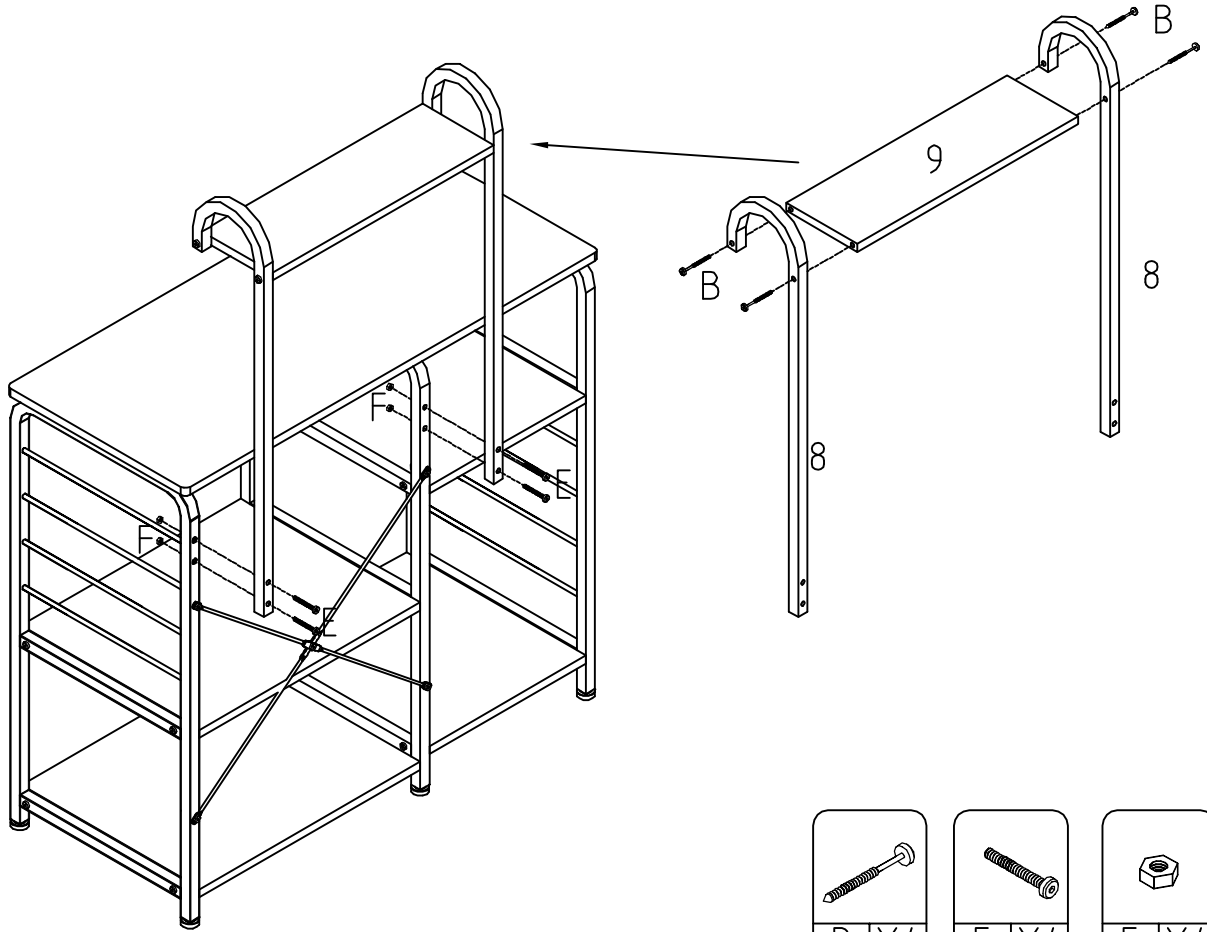

6

