

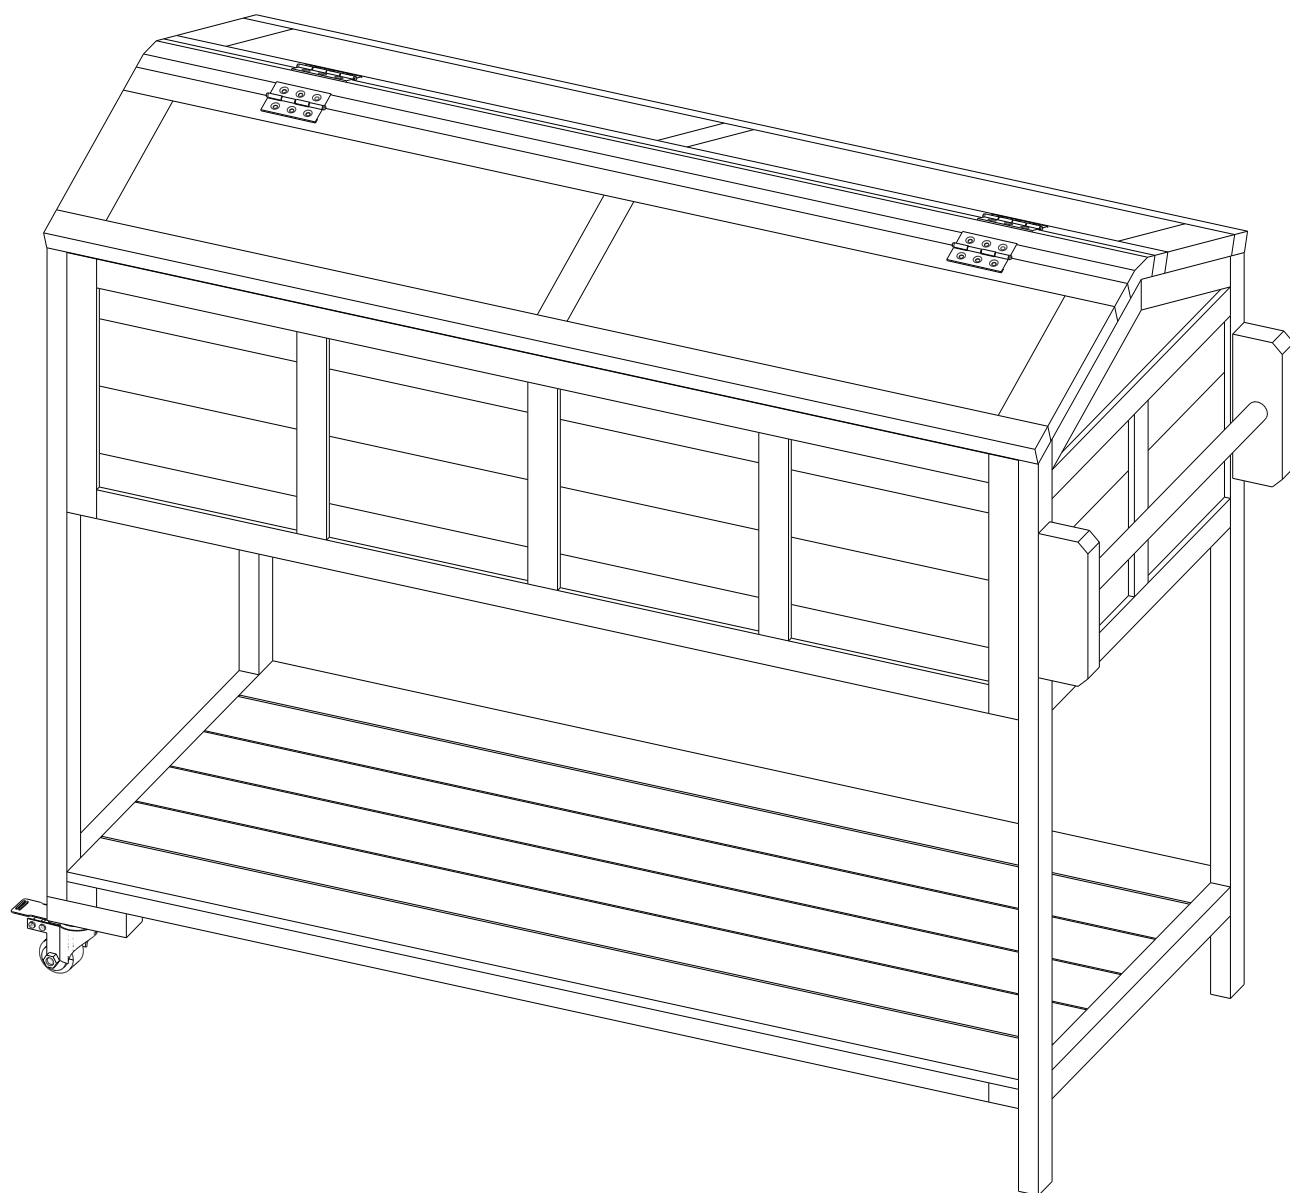
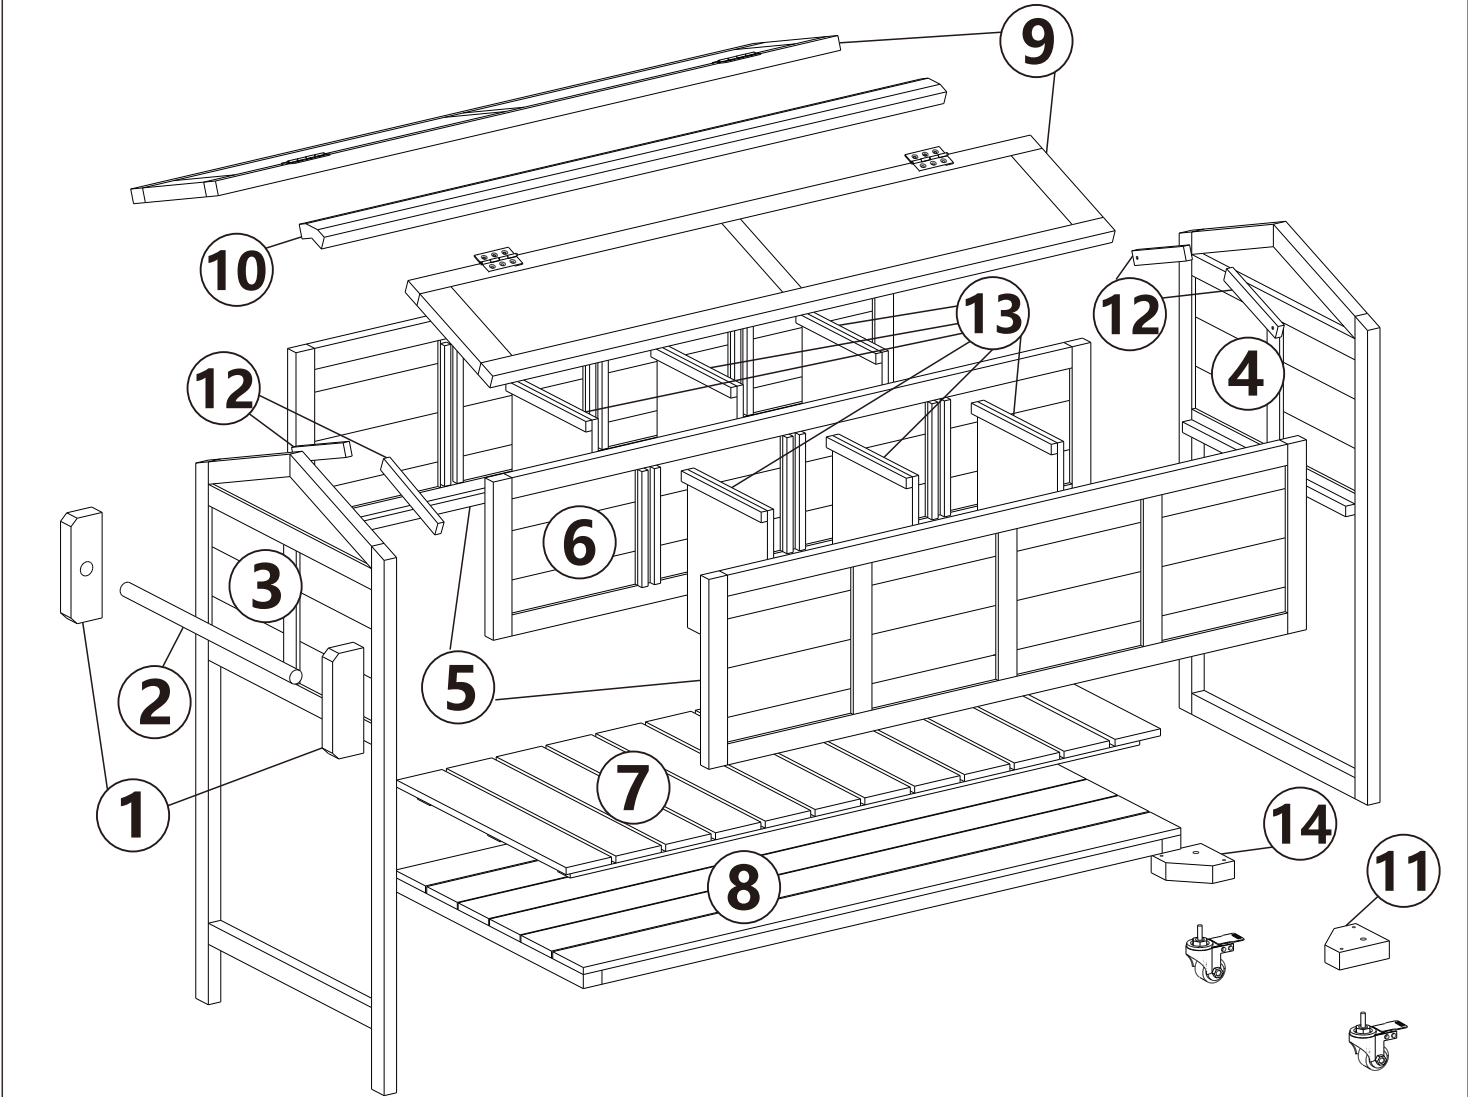


Installation Instruction

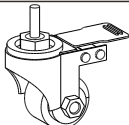


Packaging Details




A	x12+1	B	x4+1	C	x2+1	D	x24+1	E	x14	F	x4
											
3.0*16		3.0*25		3.0*35		3.5*40		ø6*20		M6*60	
G	x2	H	x8								
											

C	x2
 3.0*35	

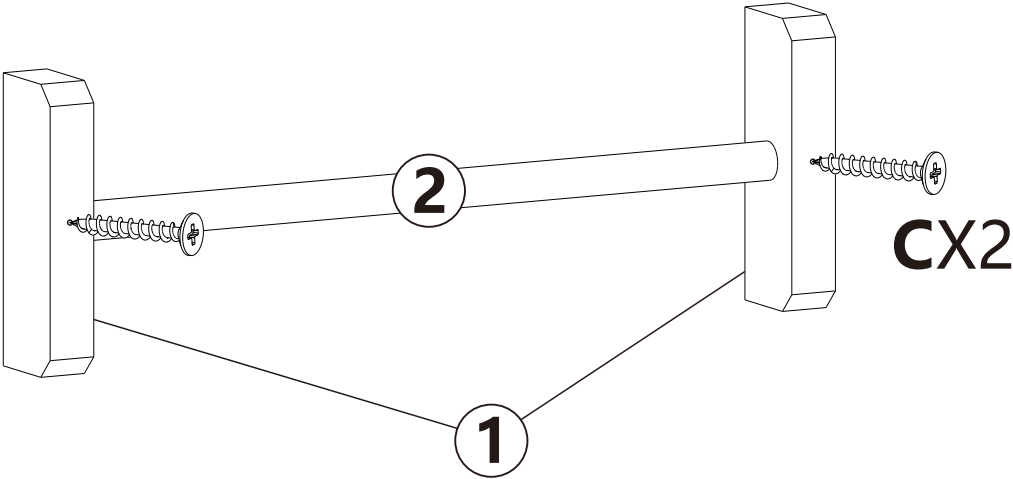


STEP 1

D	x4	E	x2
 3.5*40		 $\varnothing 6*20$	

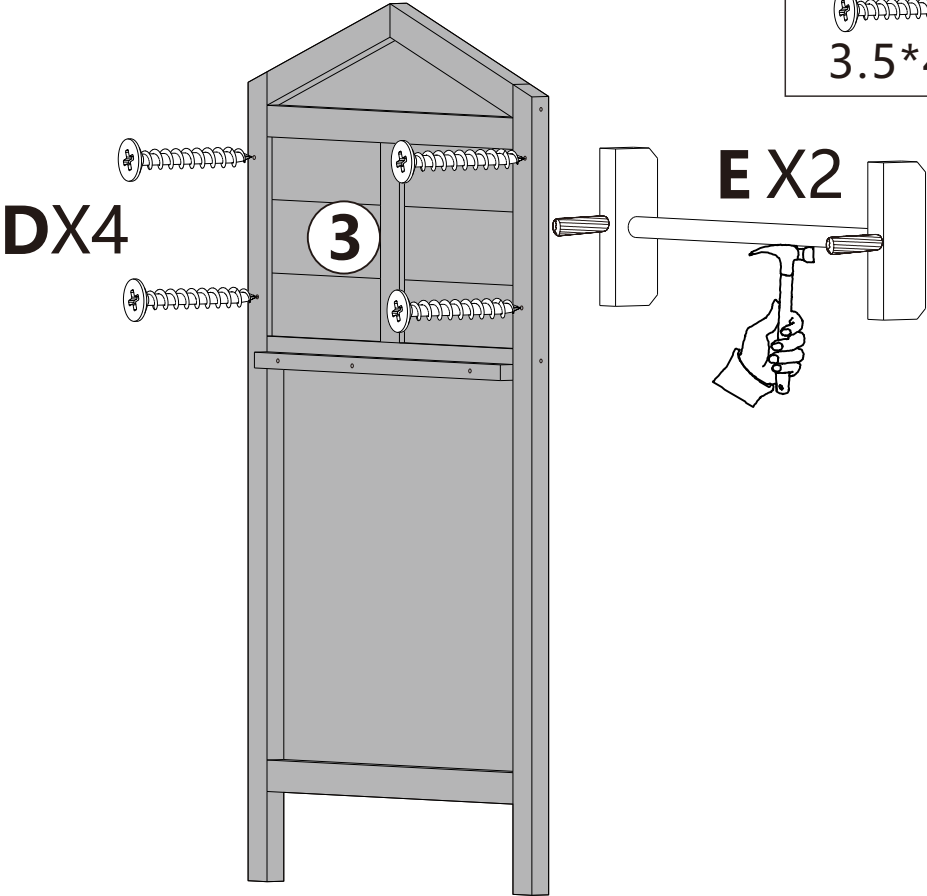

STEP 2


D	x2	E	x2
			
3.5*40		ø6*20	

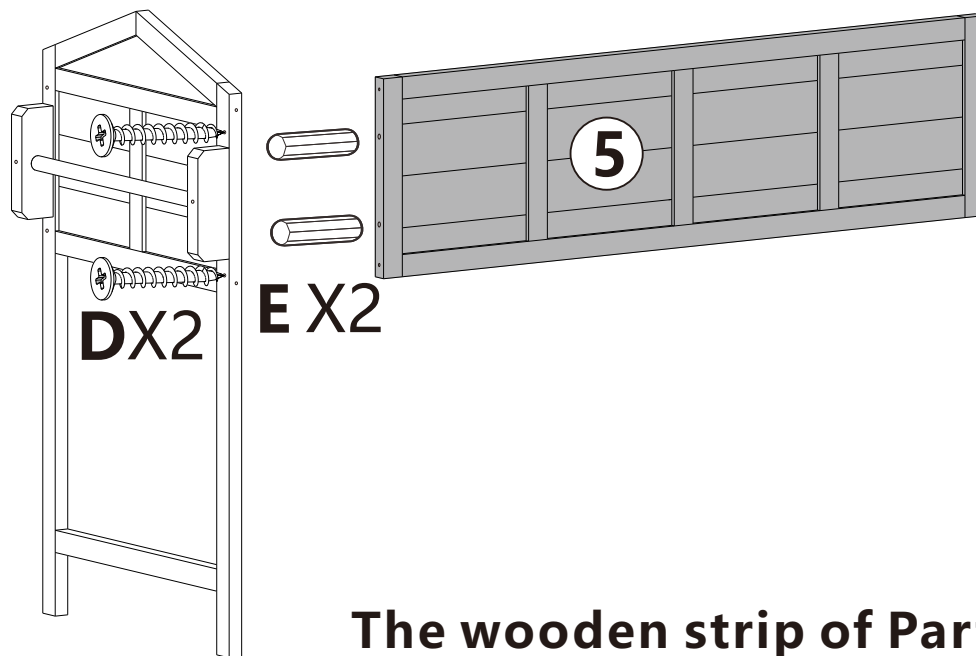

The wooden strip of Part 5 is located at the lower inner side


STEP 3

D	x2	E	x2
			
3.5*40		ø6*20	

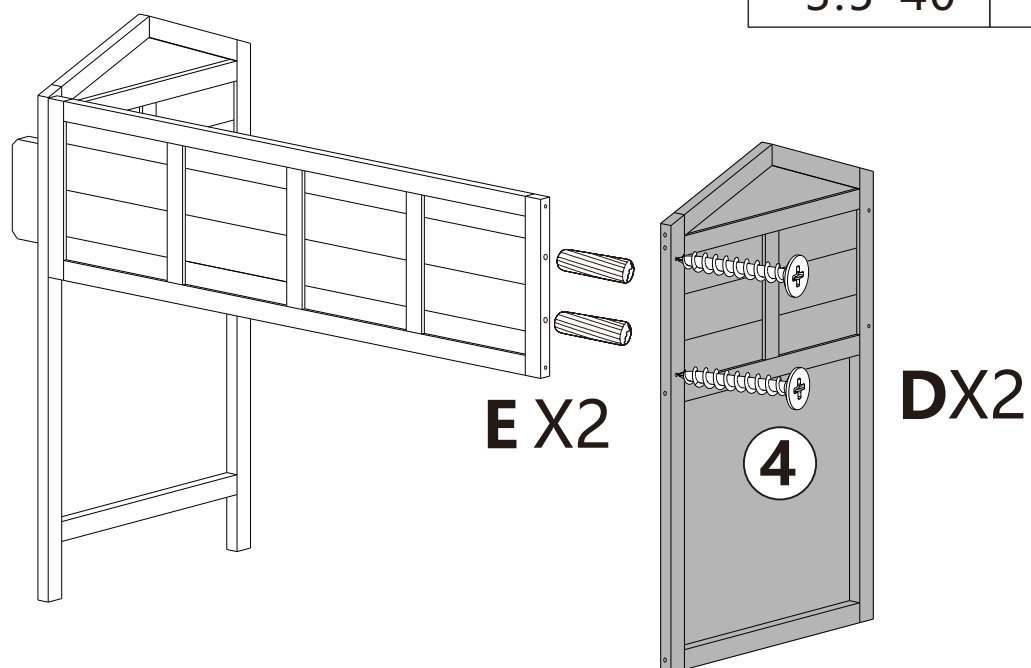



STEP 4

F	x4
 M6*60	

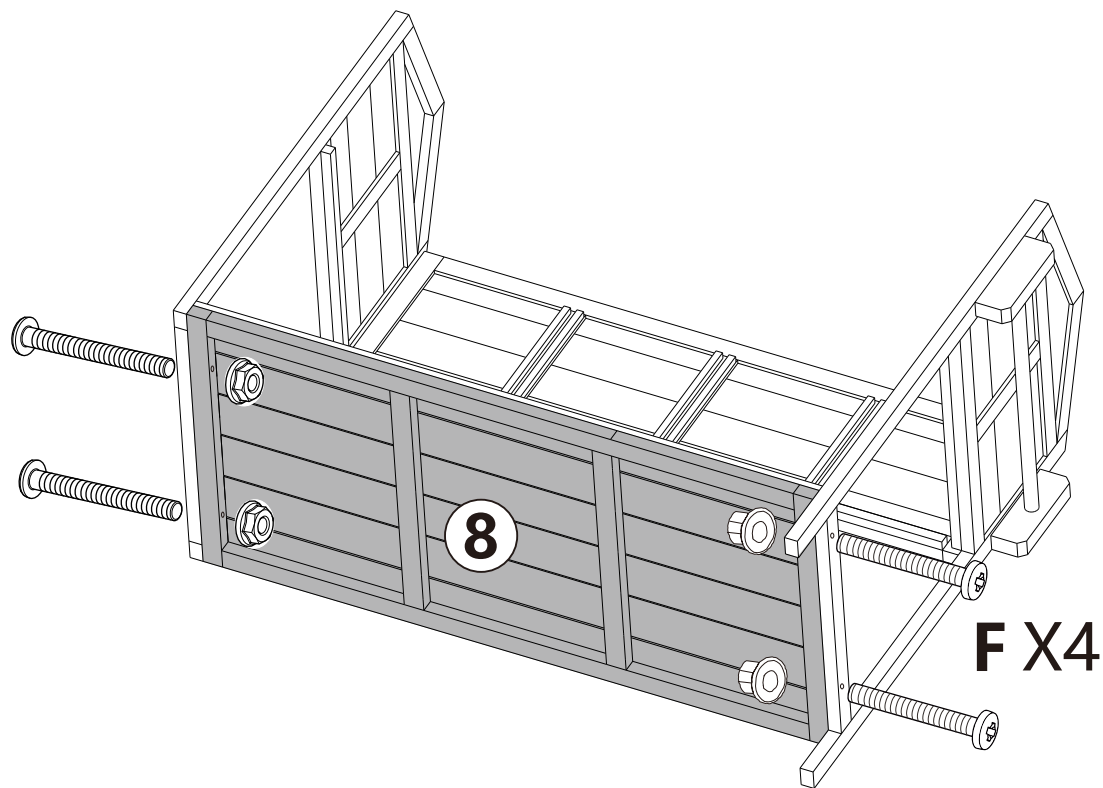


STEP 5

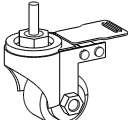
D	x4	G	x2
 3.5*40			

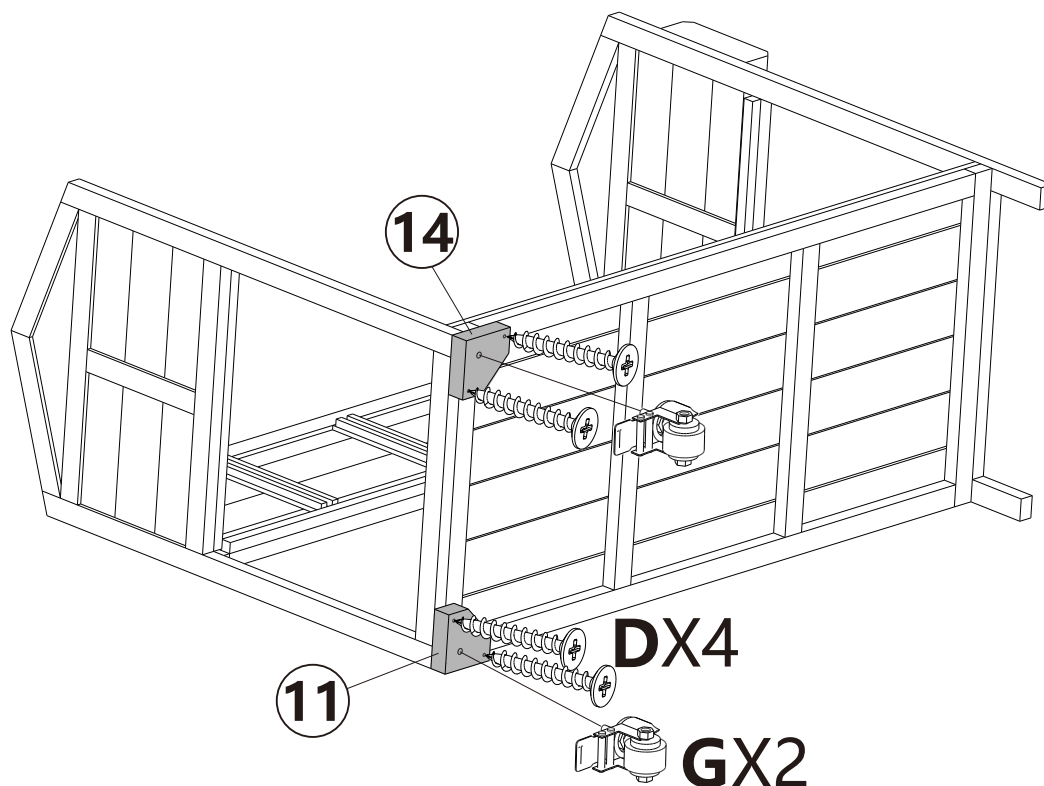

STEP 6

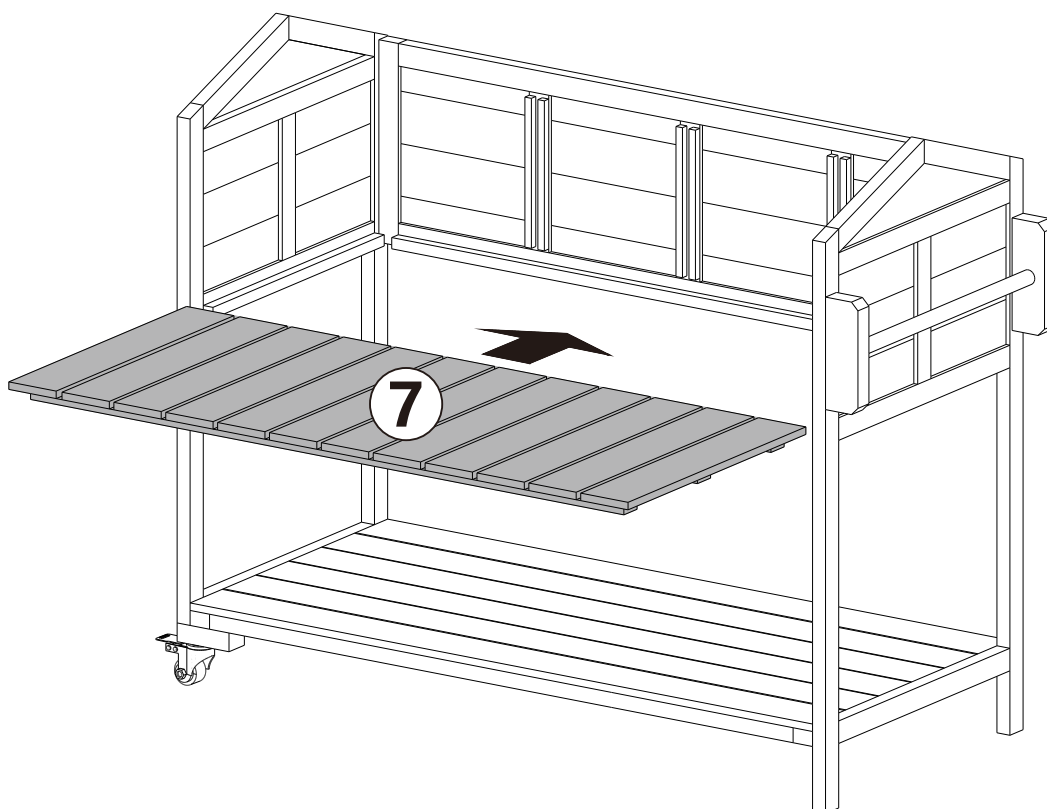

STEP 7

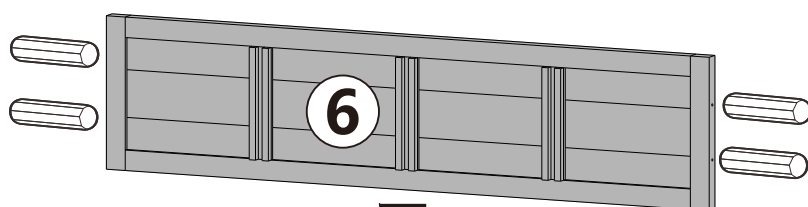


E x4




ø6*20


E X4

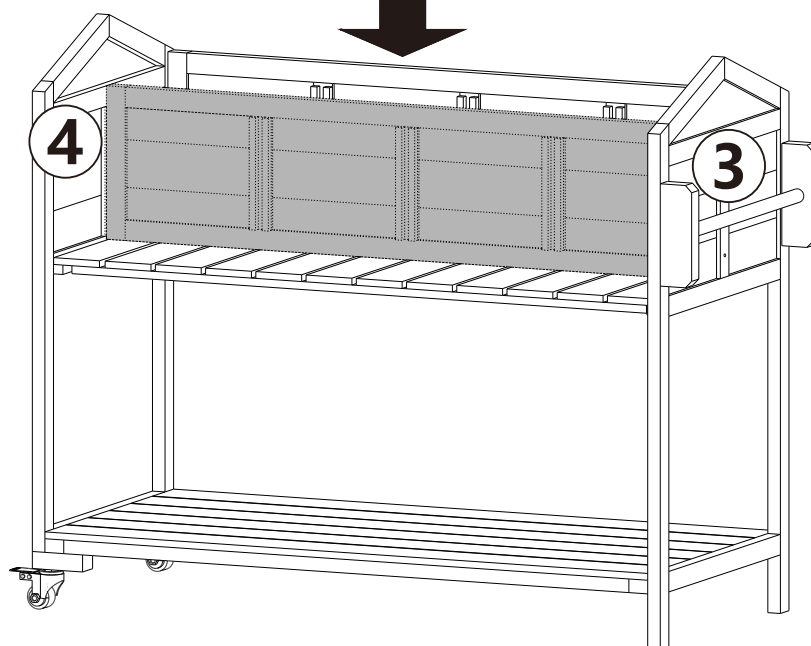


When installing Part 6,
STEP 8 Part 3 & 4 need to be extended outward a little

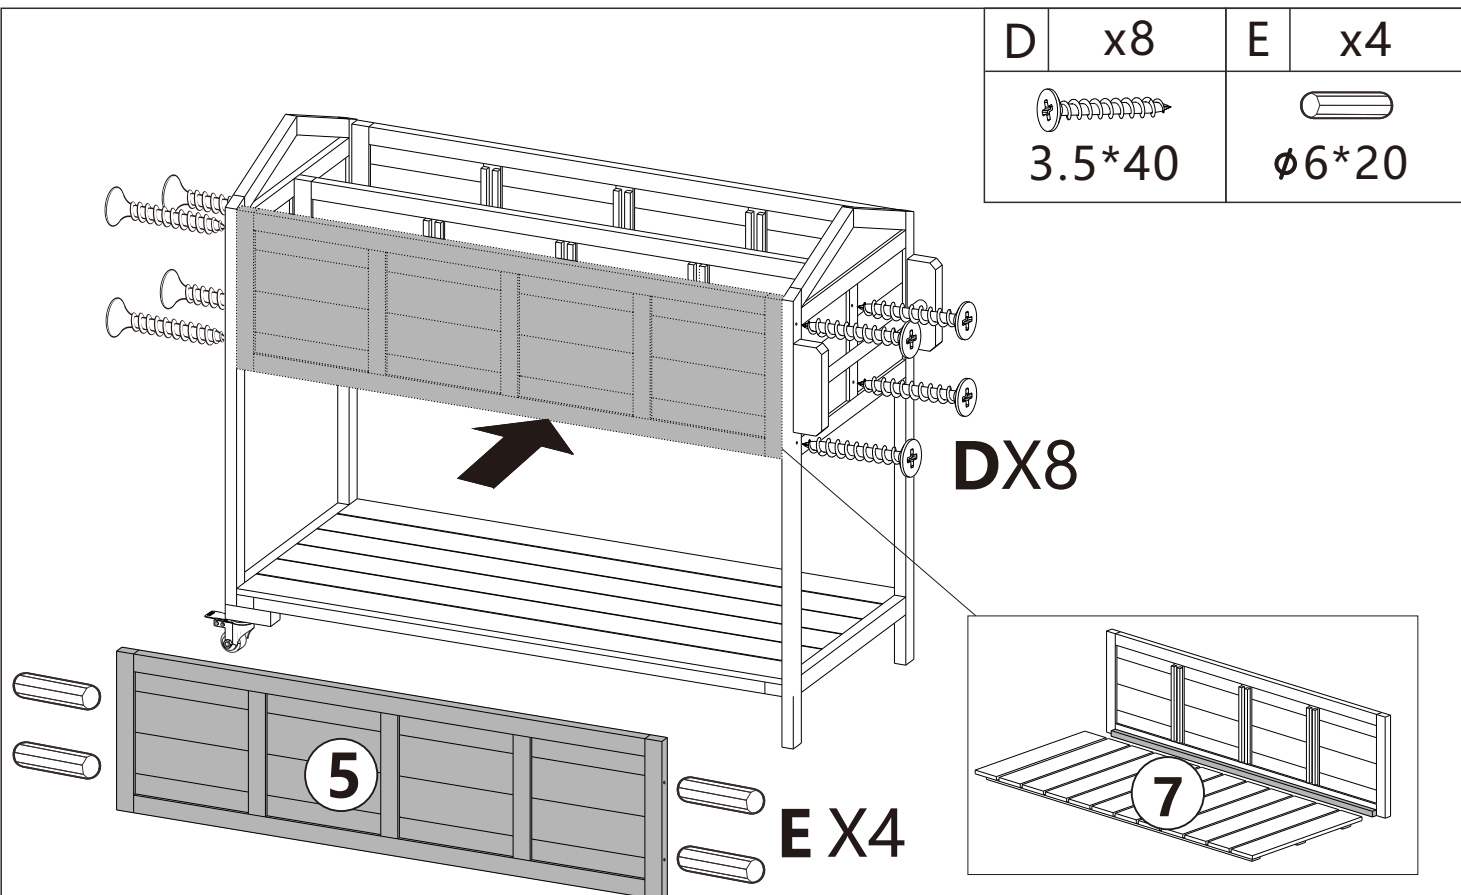

Note: The wooden strip of Part 5 is located at the lower inner side and is placed under Part 7

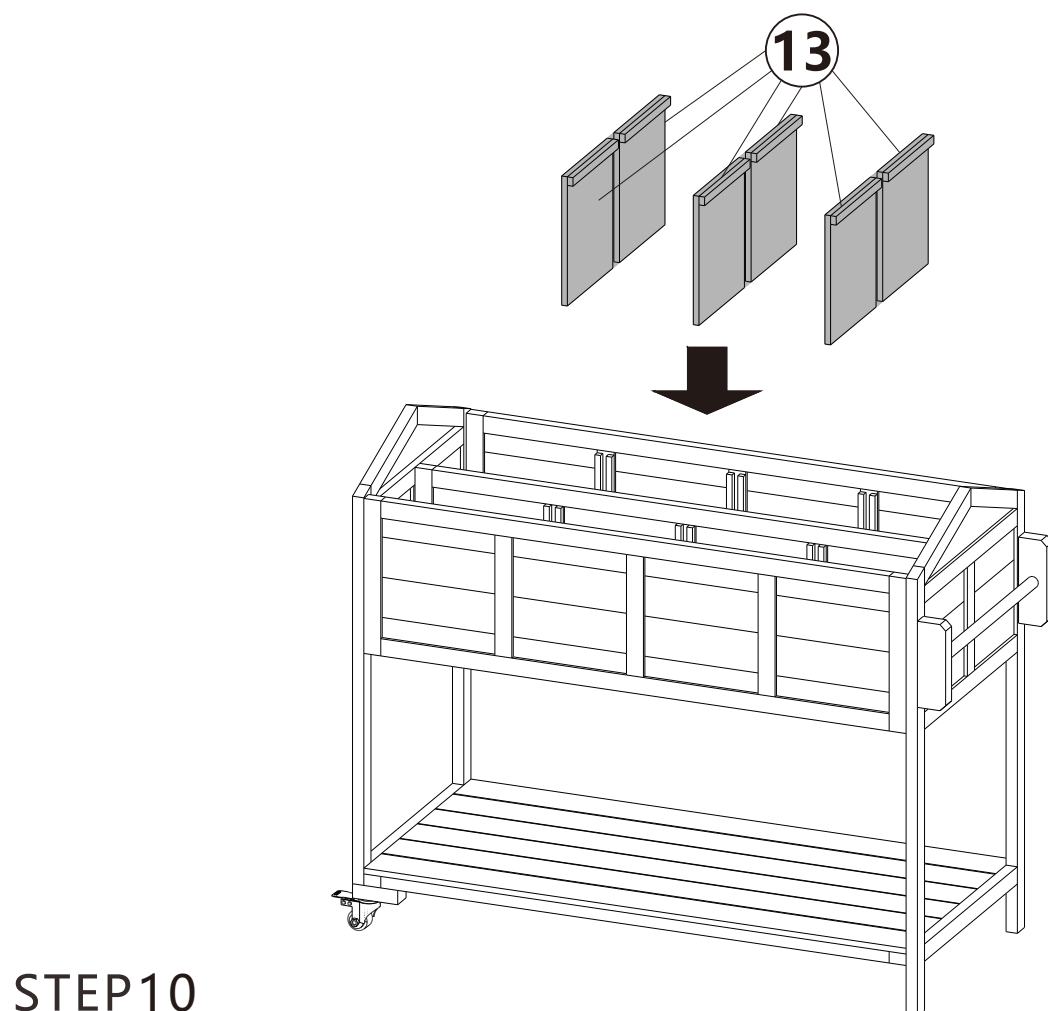


STEP10

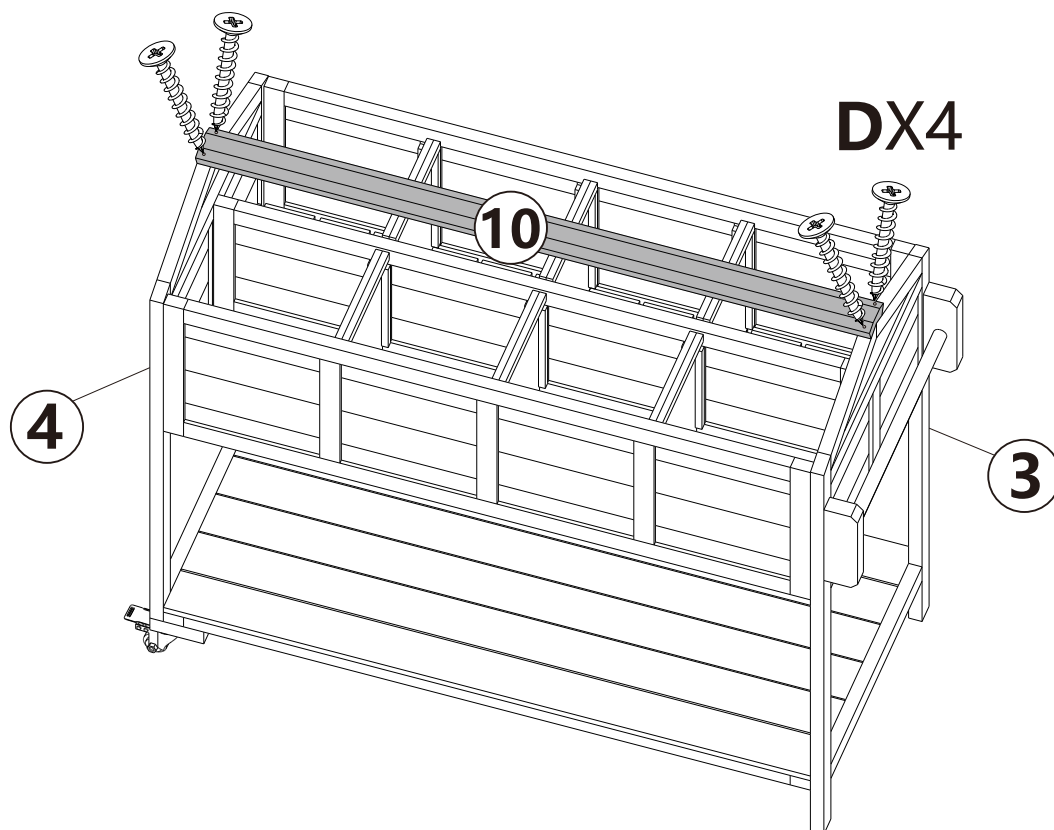

D	x4
 3.5*40	


Both ends of Part 10 should be flush with Part 3 & 4
STEP11

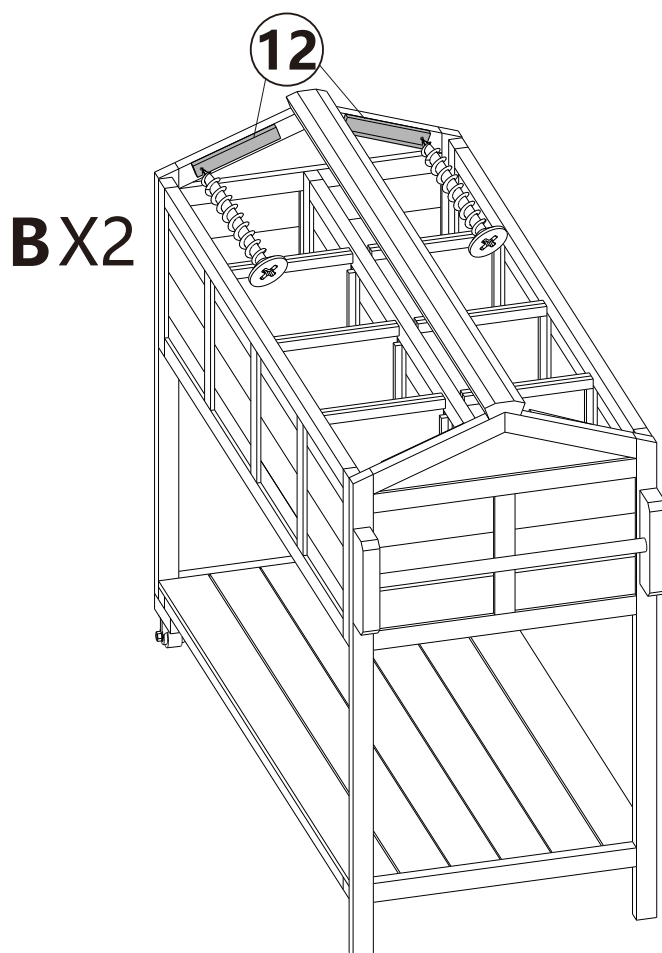


B	x2
 3.0*25	


STEP12

B	x2
 3.0*25	

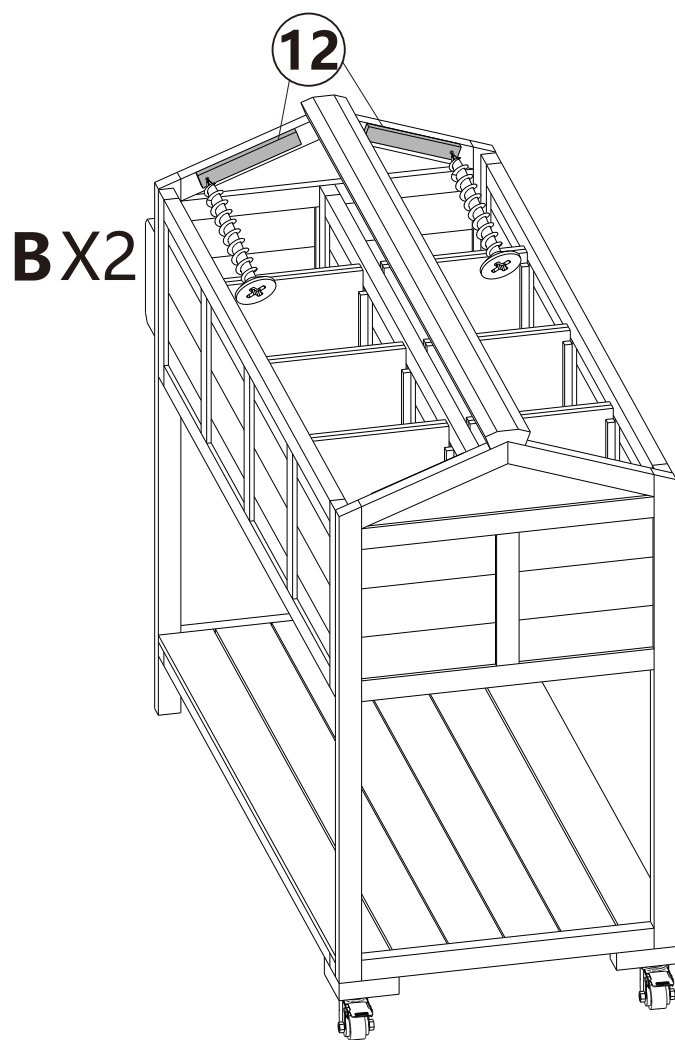

STEP13

H	x8
	

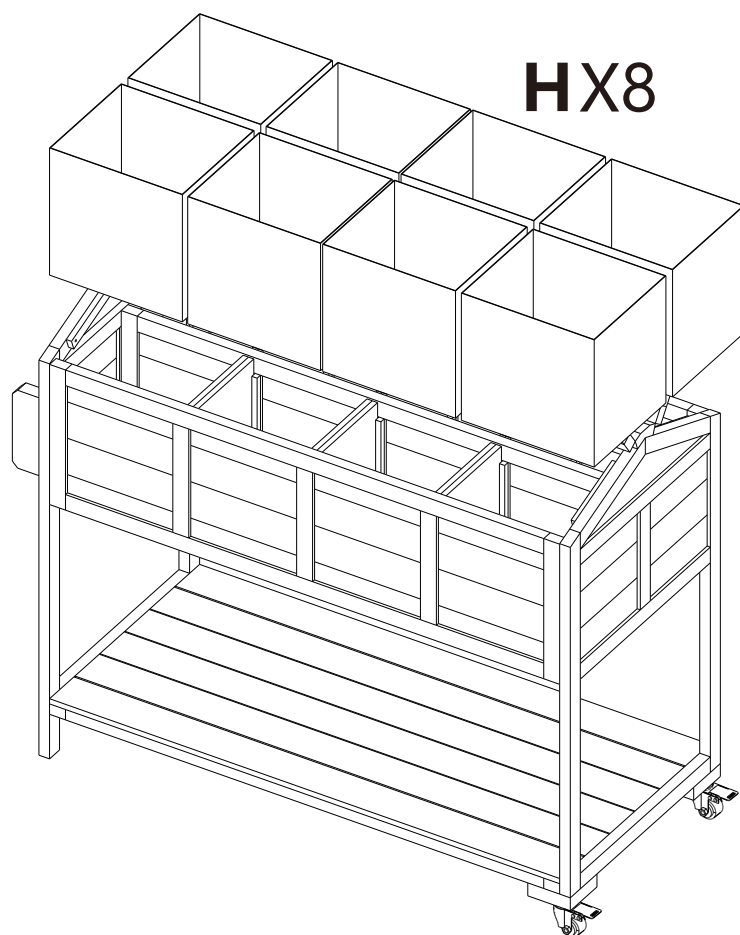


STEP14

A x12




3.0*16

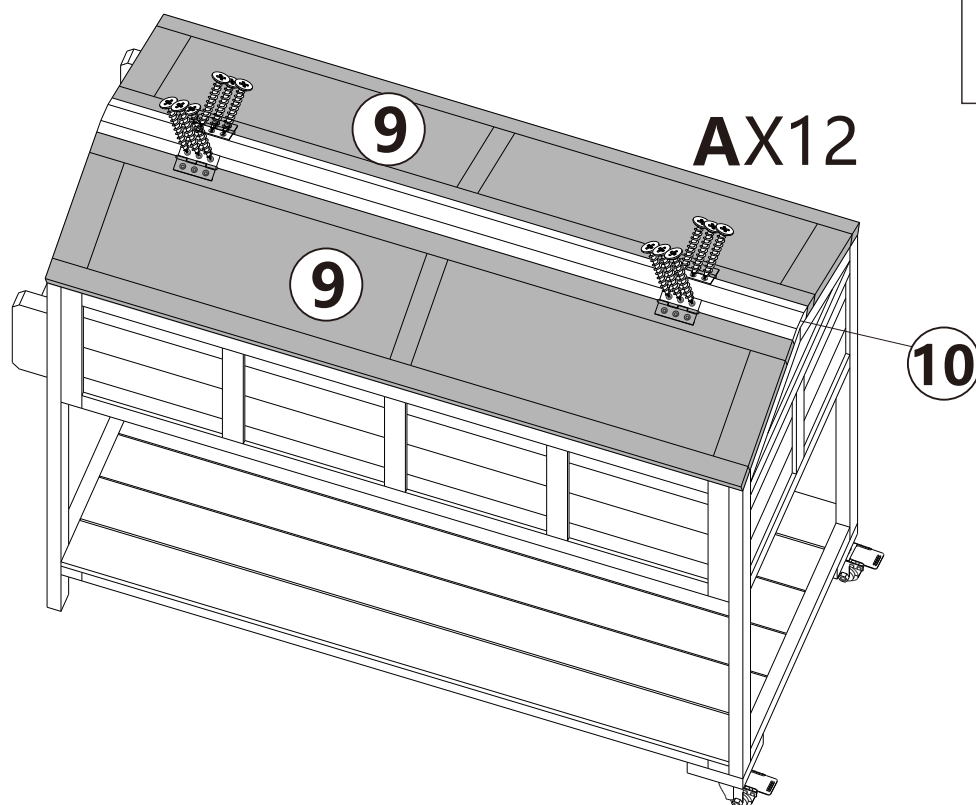

**Part 9 leans upward against Part 10,
with both ends flush**

STEP15

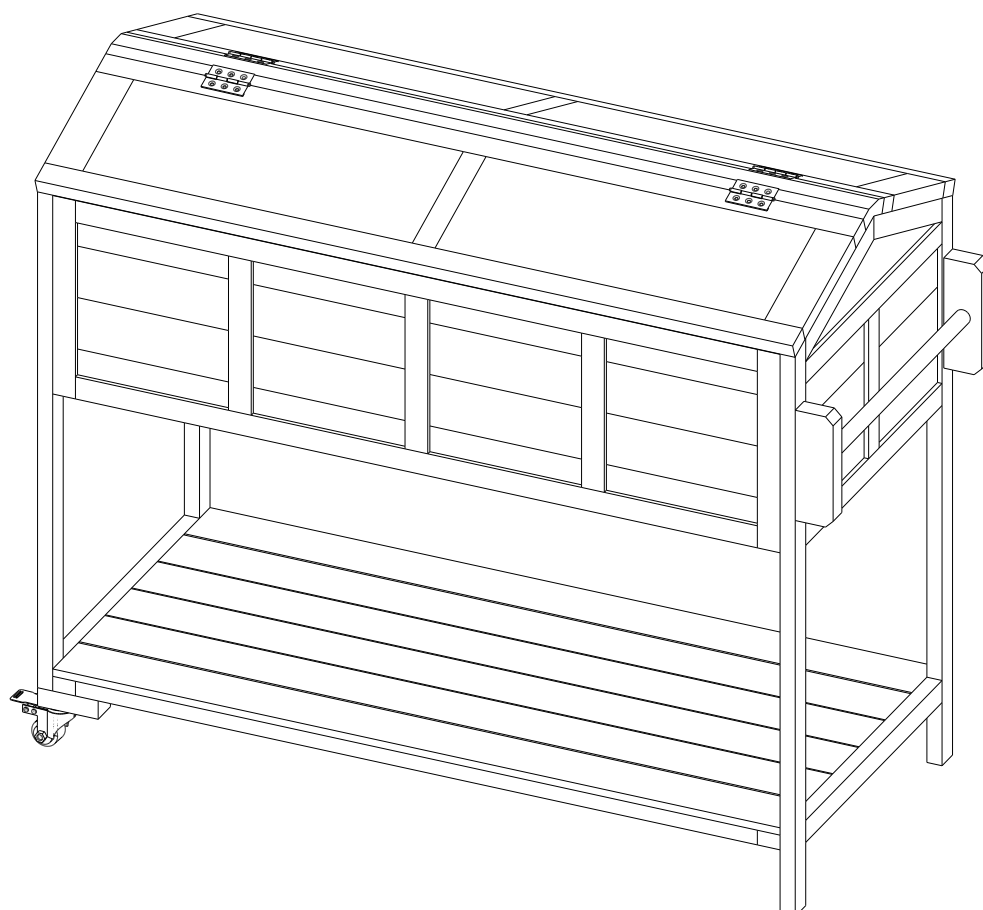

STEP16