

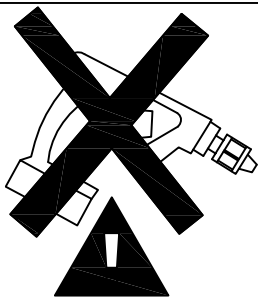
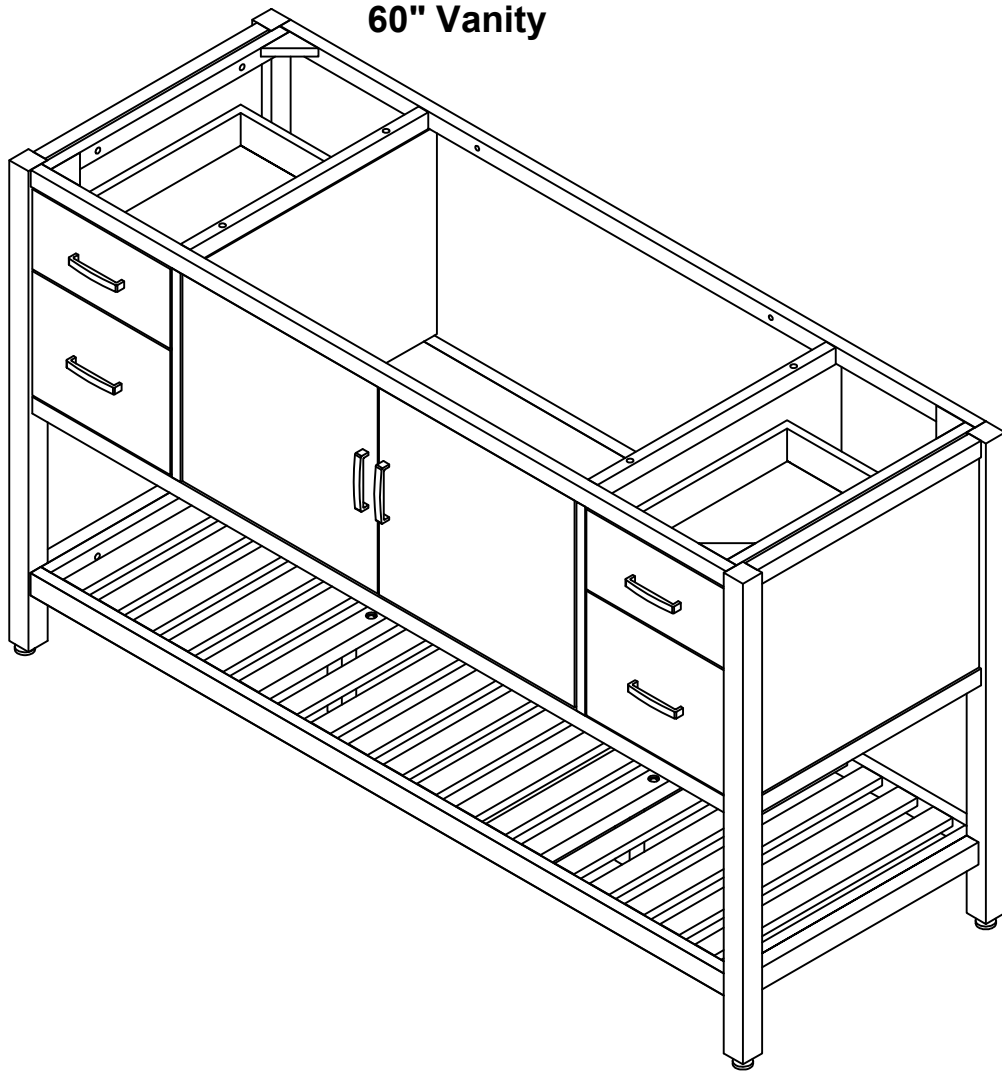


ASSEMBLY INSTRUCTION



60" Vanity




. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

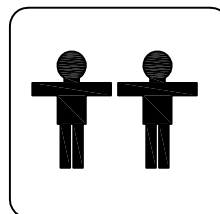

Tools Required

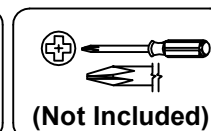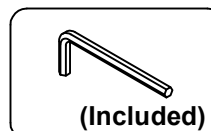

Part list - 60" Vanity

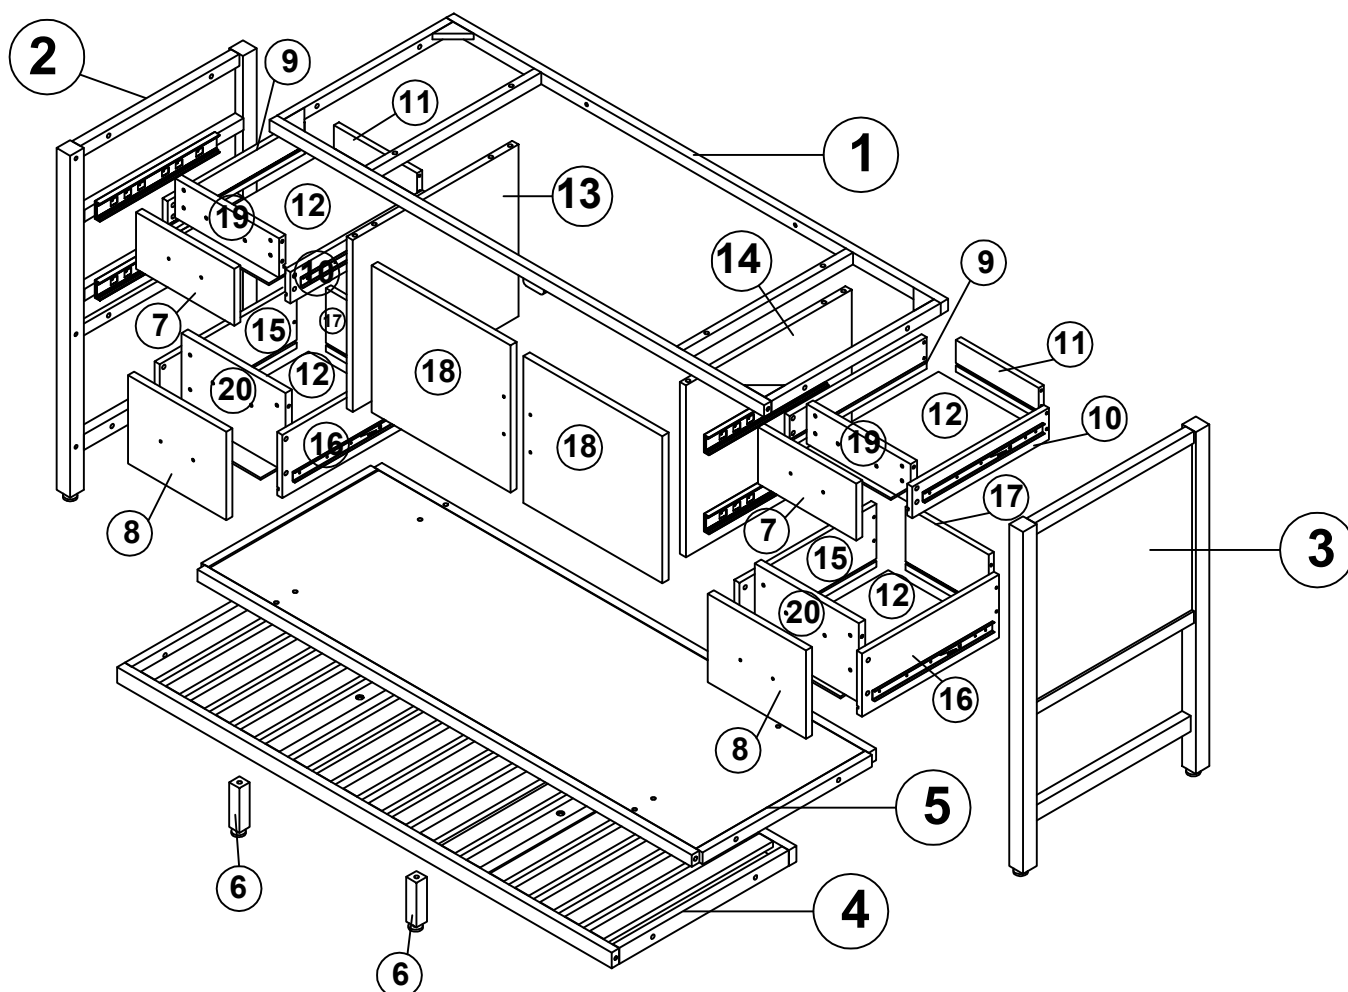


Identifying the hardware-Identify the hardware using the illustrations below

A  **14**
Ø8*30mm Wood Dowel

B  **22**
M6*45mm Bolt


C  **22**
Ø6*16mm Washer


D  **32**
4*25mm Screw


E  **88**
3.5*15mm Screw

F  **06**

G  **12**
4*25mm Screw

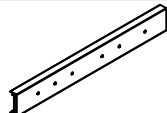H  **8**


I  **02**
4*50mm Screw

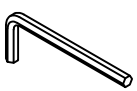K  **01**

L  **32**
Ø6*20mm Wood Dowel

M  **04**

N  **06**


O  **16**
4*20mm Screw

Step 01

H



08

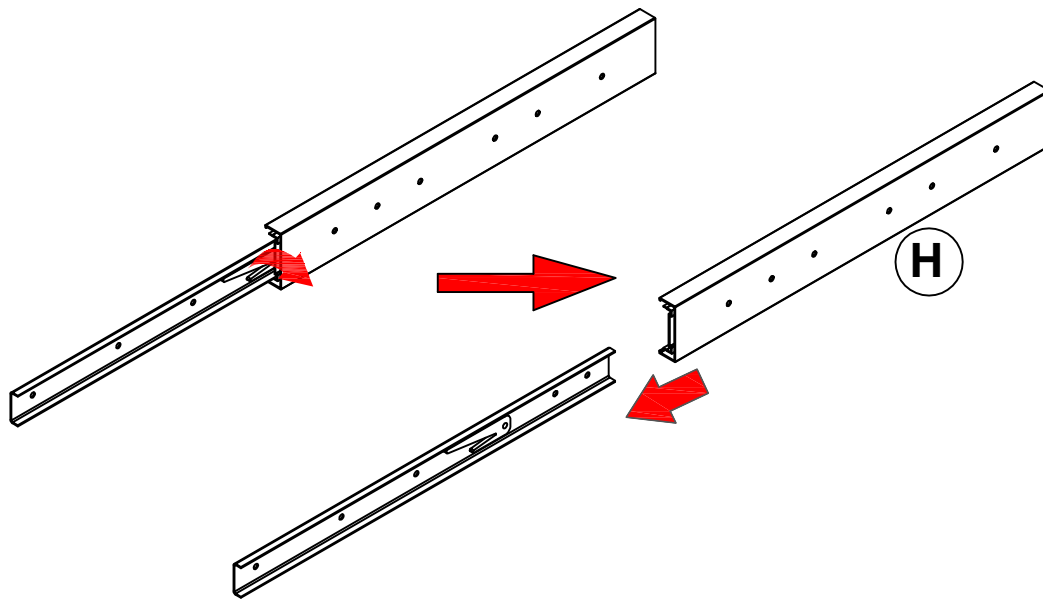

X8

Step 02

E



32

3.5*15mm Screw


H



08




01


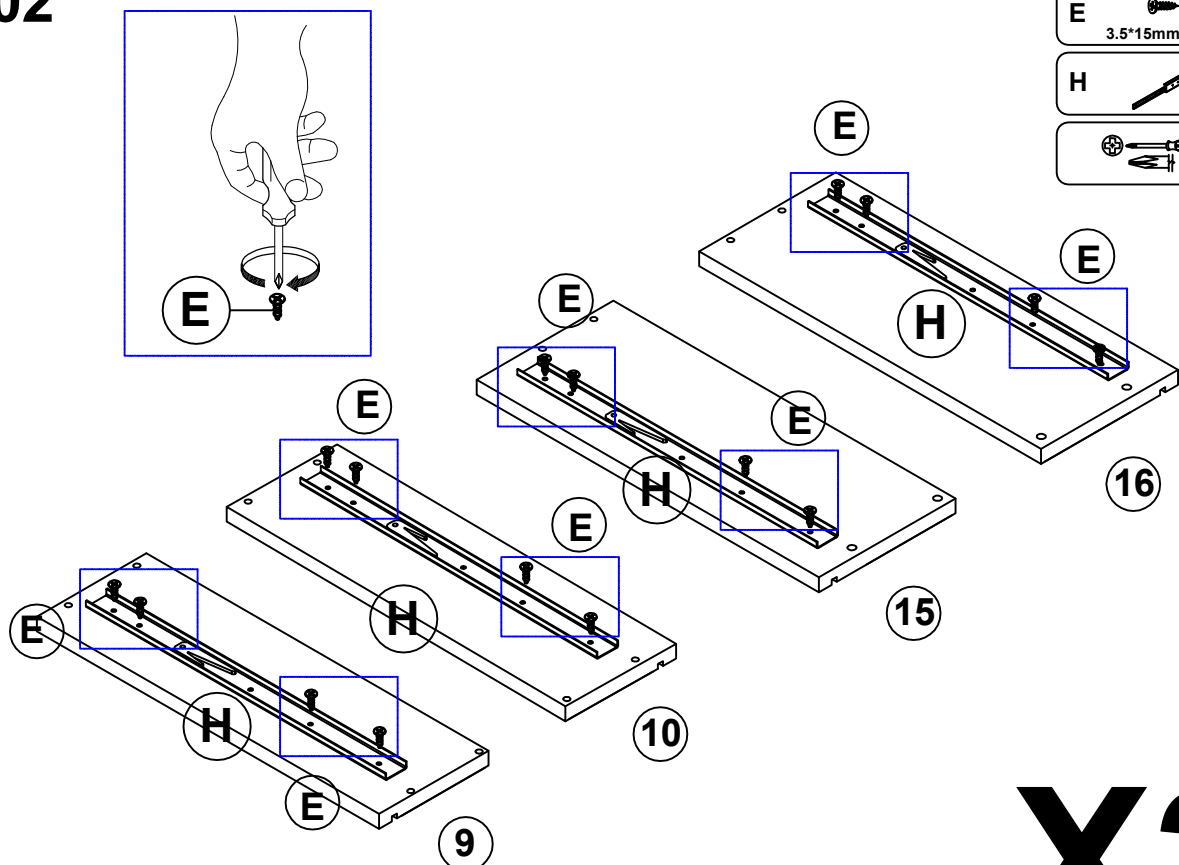


X2


Step 03

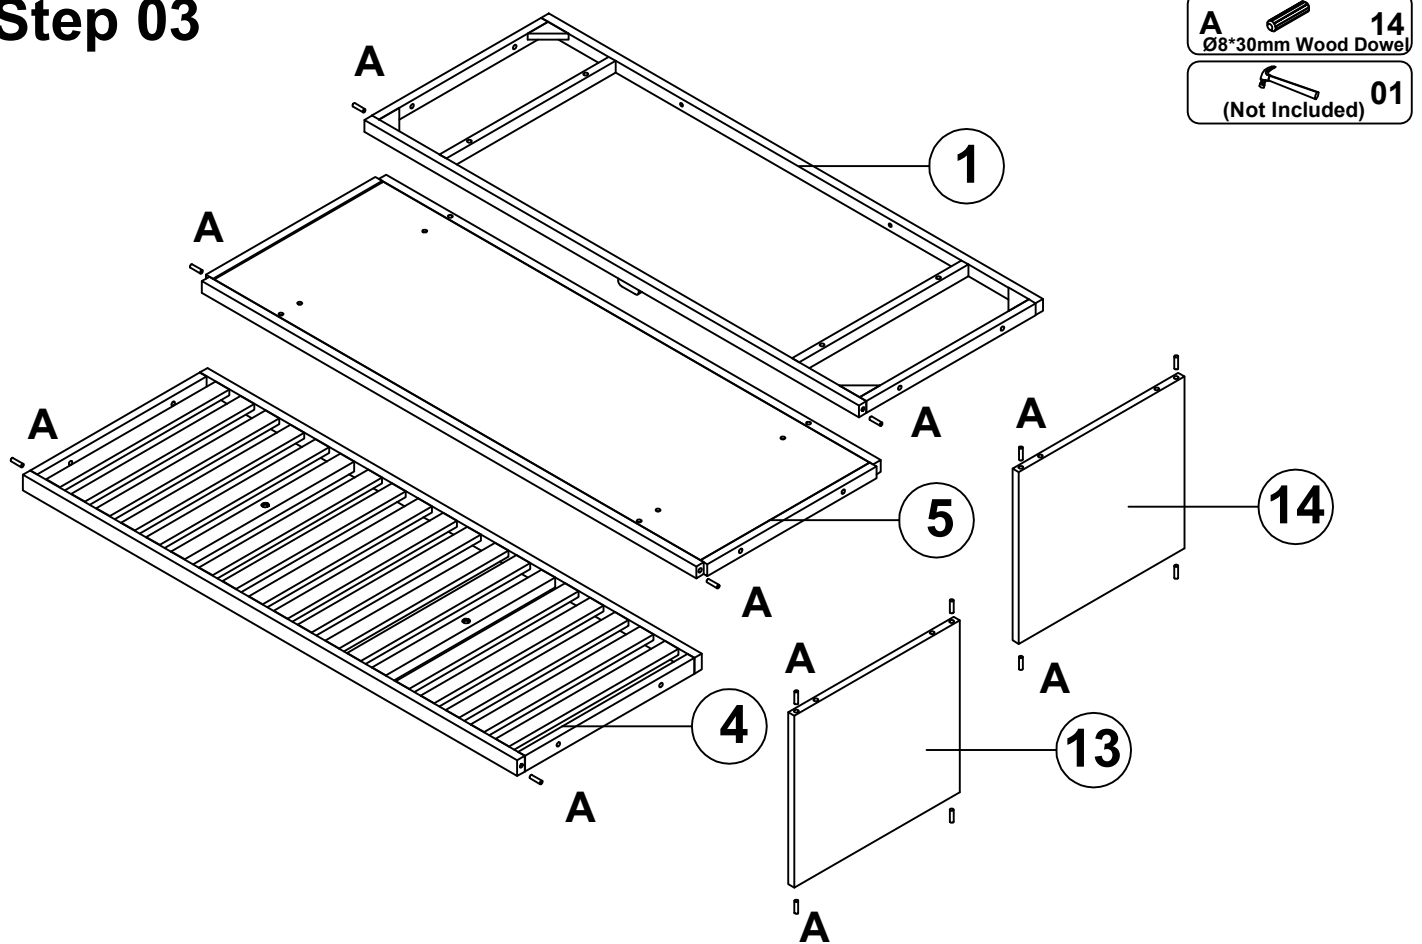


Step 04

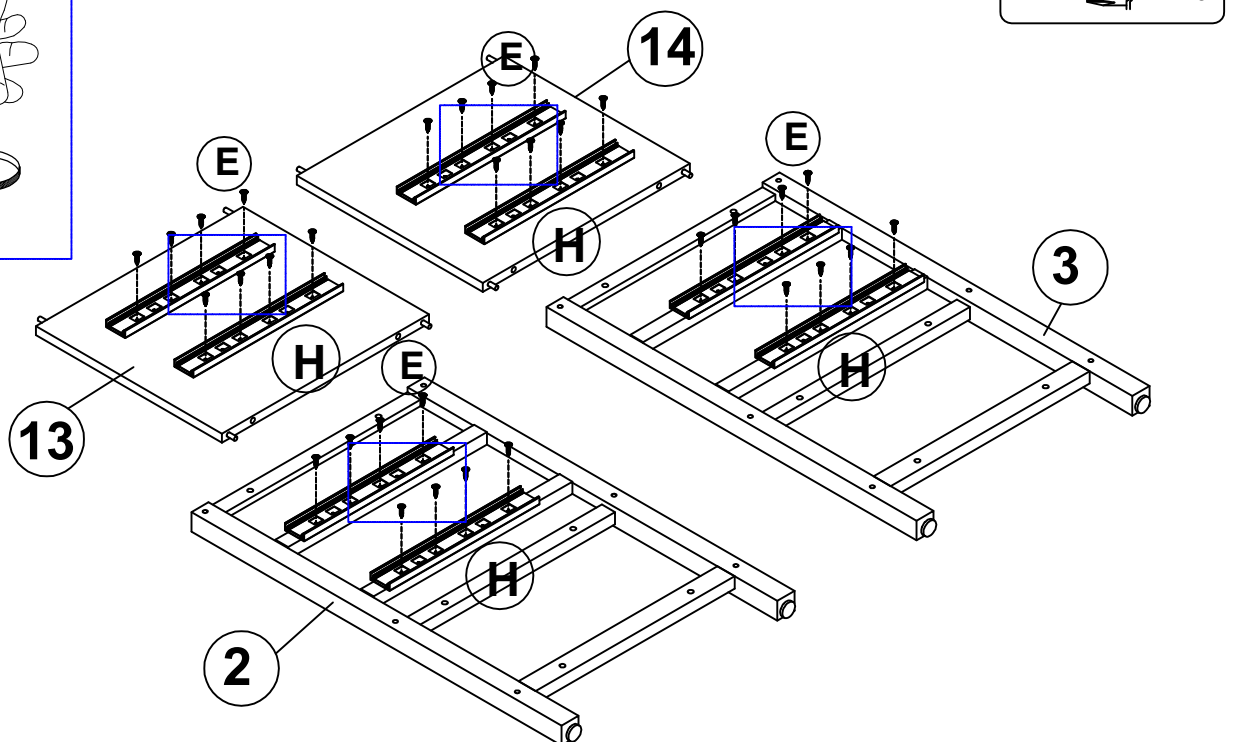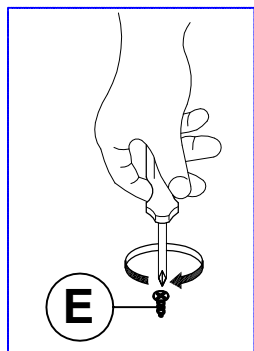

Step 05

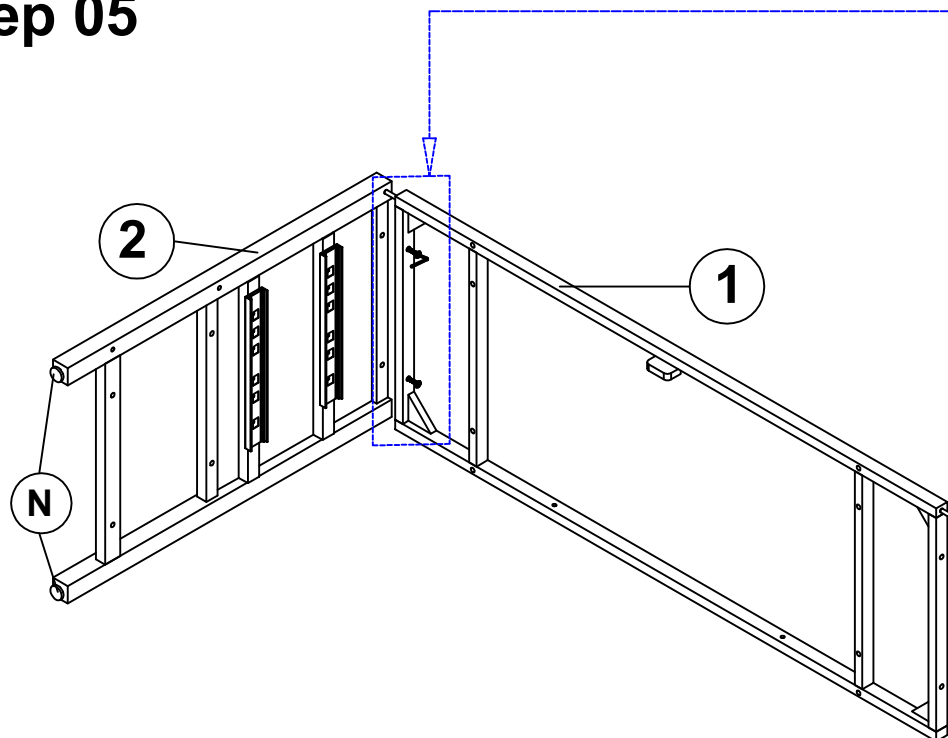


B		02
C		02
K		01

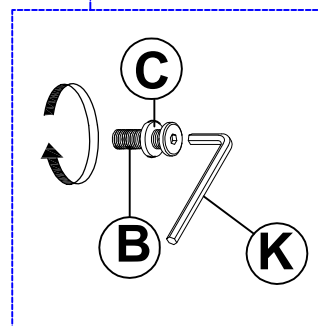


Note: Do not tighten bolts firmly at this time


Step 06

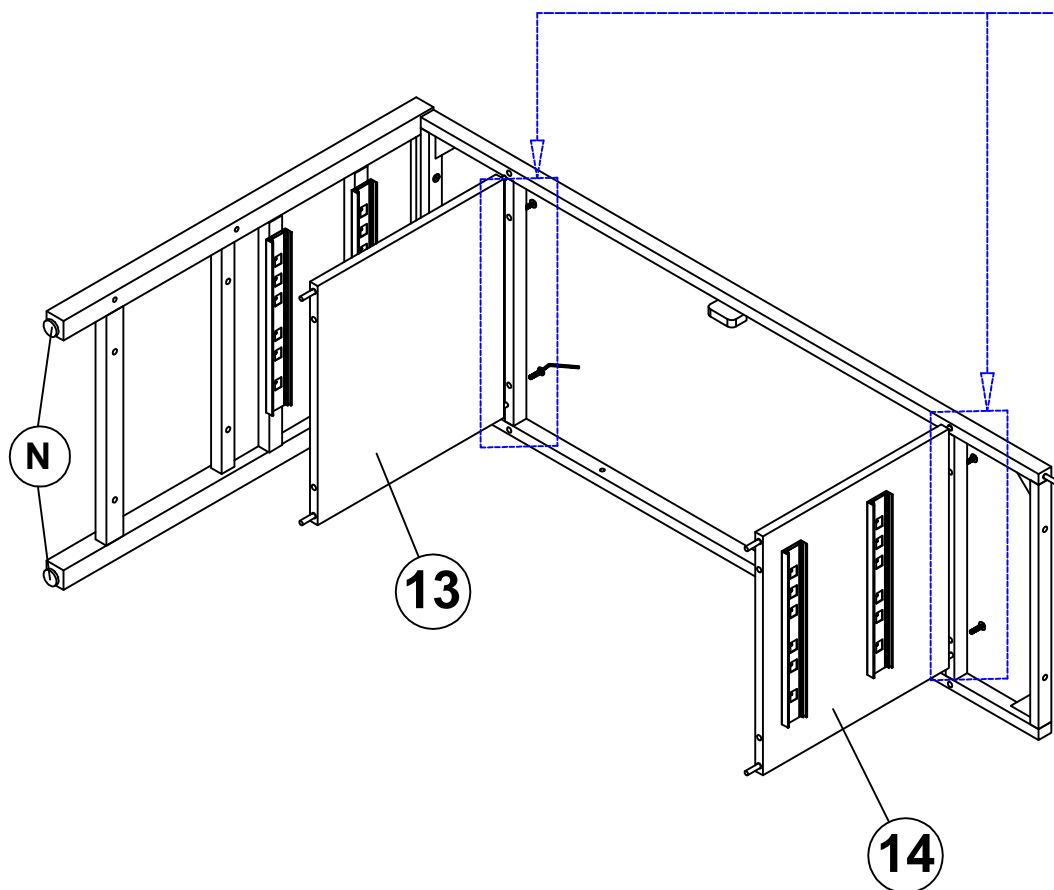


B		04
C		04
K		01

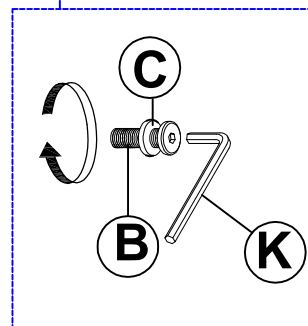


Step 07

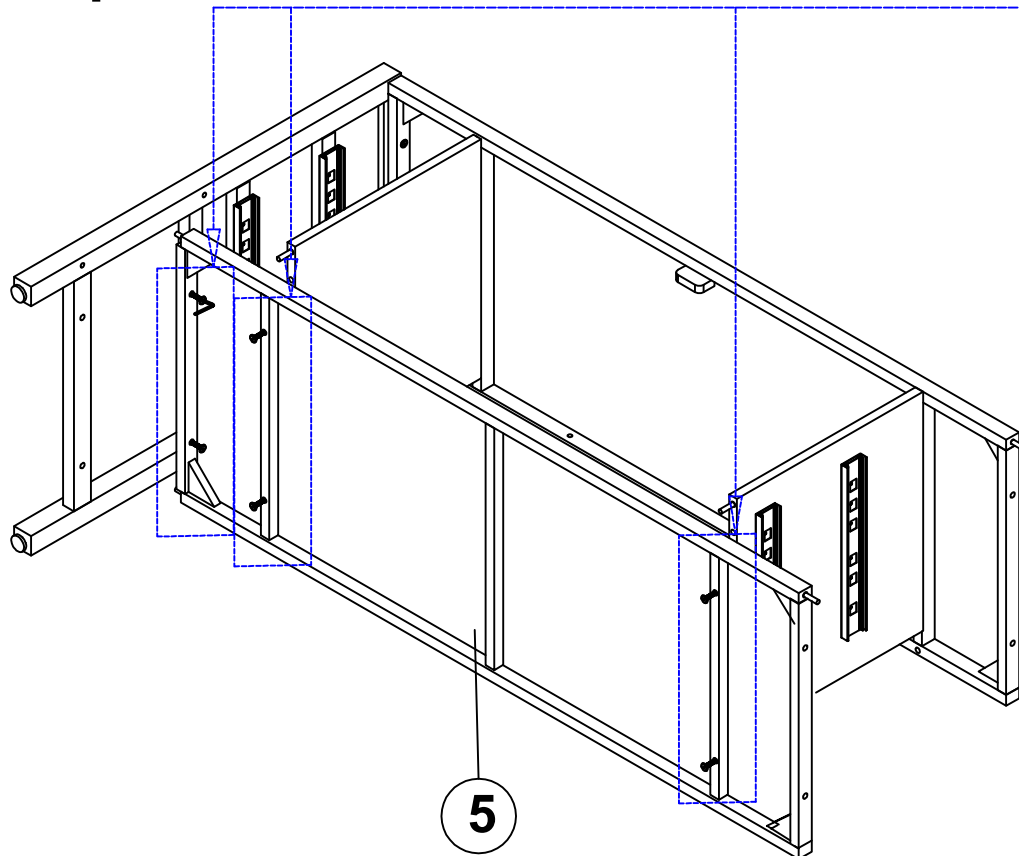


B		06
C		06
K		01

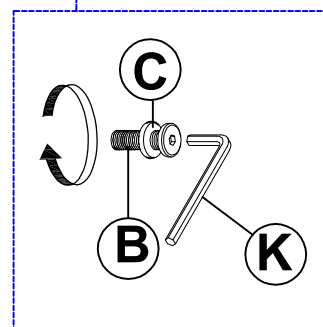

Step 08

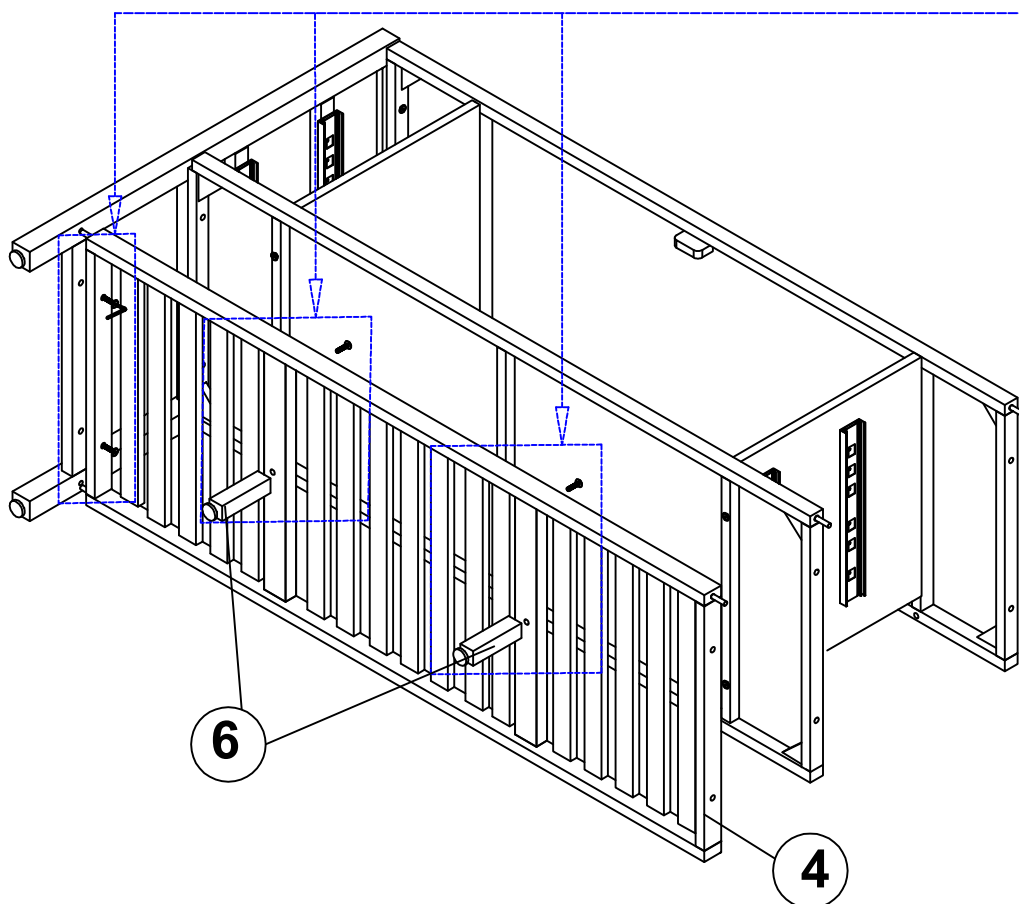


B		04
C		04
K		01

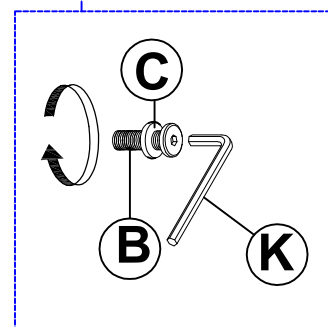

Step 09



B		06
C		06
K		01

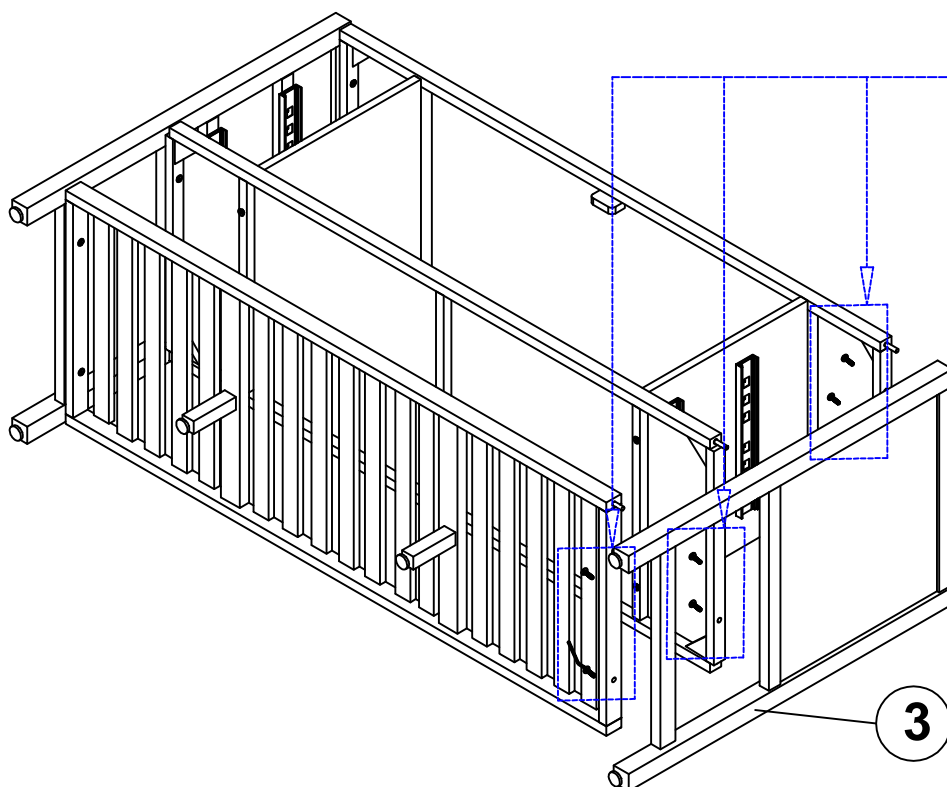

Note: Tighten all bolts at this time

Step 10

D		16
		01
L		16

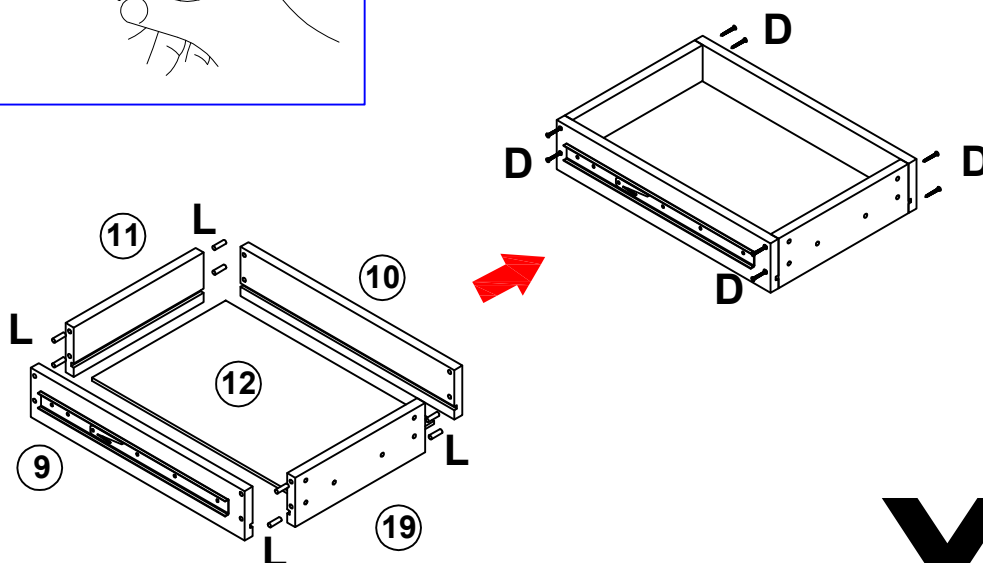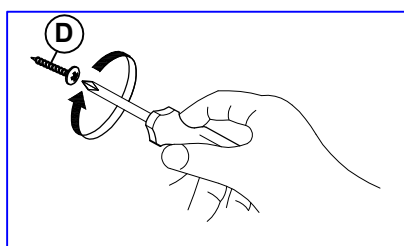

X2

Step 11

- D





16
- 

01
- L



16

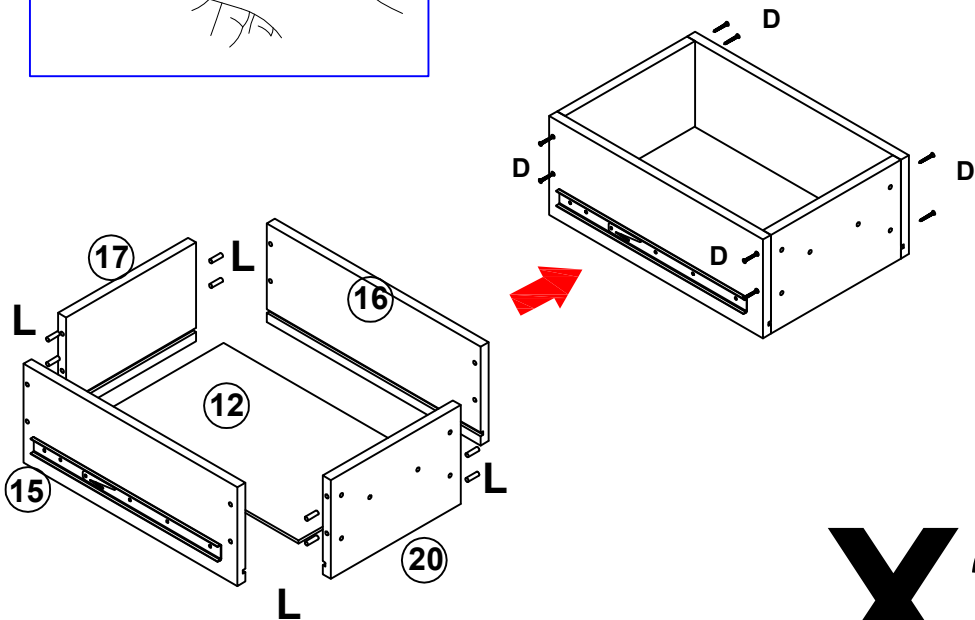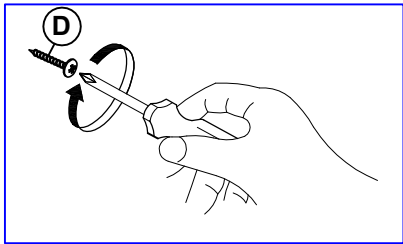

X2

Step 12

- E





08
- 

01
- M



04

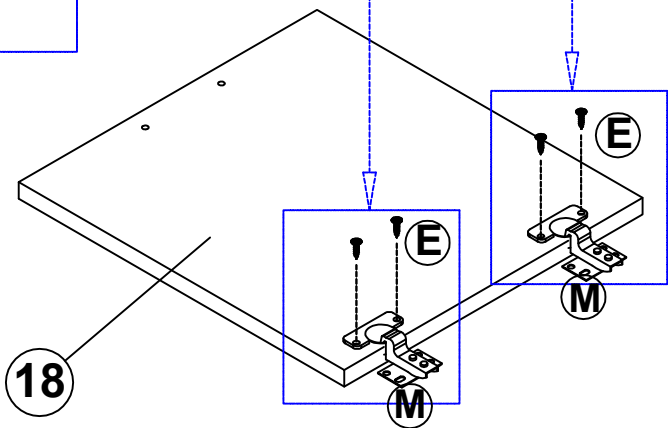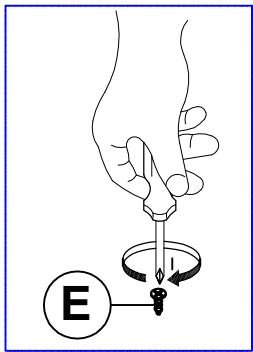

X2

Step 13


Diagram illustrating the assembly of the front panel (F) onto the lower cabinet structure (G). The front panel is shown being attached to the side rail of the lower cabinet. A detailed inset shows the front panel (F) being secured with a screw (G) into the side rail.

4

This diagram illustrates the fourth step of the assembly process. It shows the lower cabinet frame with two drawers being inserted. Red arrows indicate the front panels of the drawers. Two circular callouts provide detailed views: the top one shows a drawer being guided into the frame, and the bottom one shows a drawer being secured with a screw.

Step 15

F		04
G	 4*25mm Screw	08
		01
O	 4*20mm Screw	16

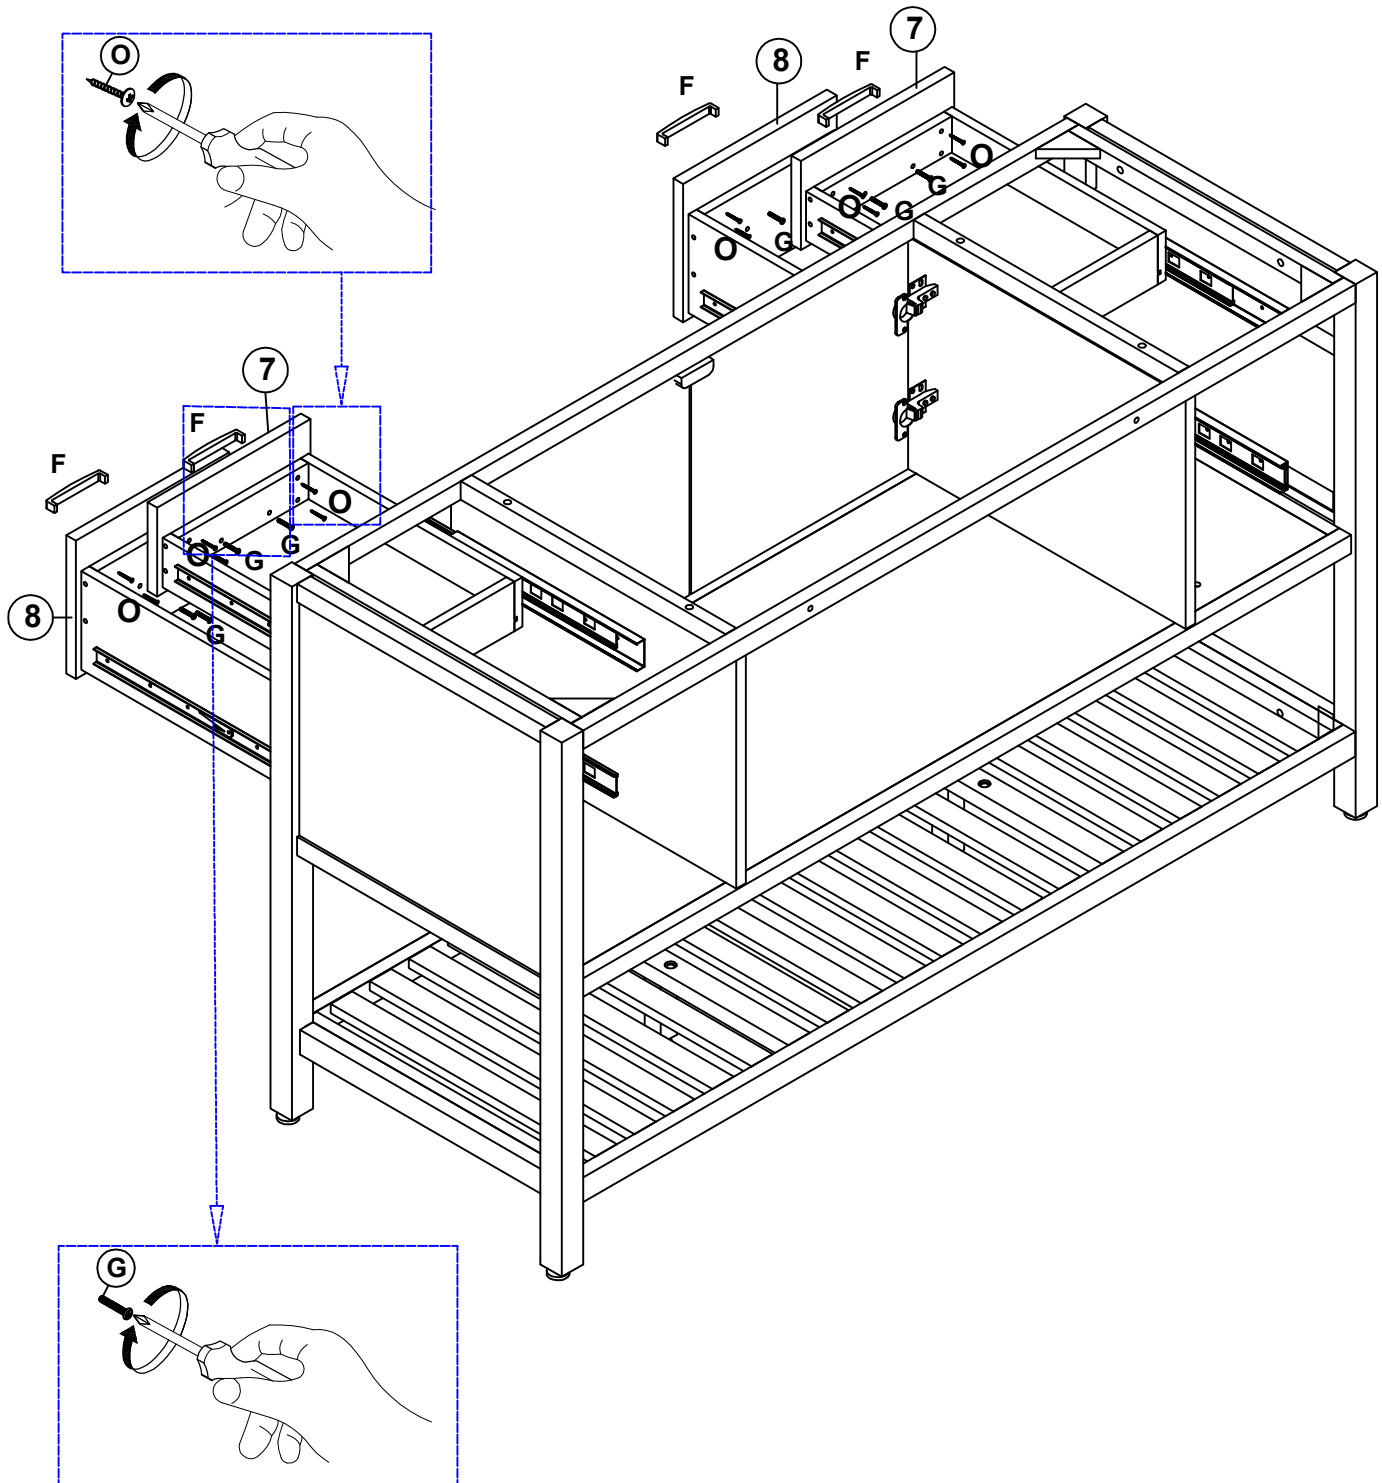

Step 16

I  02
4*50mm Screw

 01

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (I)
Make sure the screws align with the wall.

