

ASSEMBLY INSTRUCTION

A




M6*16mm×4

B

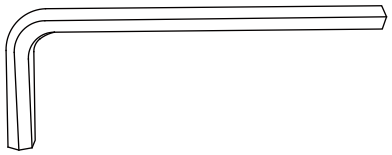


M6×1

STEP 1

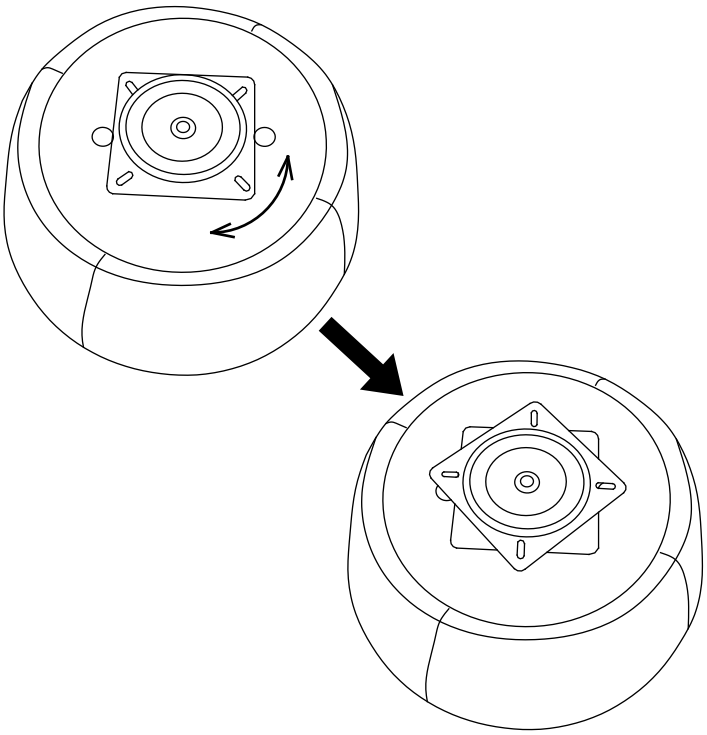


STEP 2

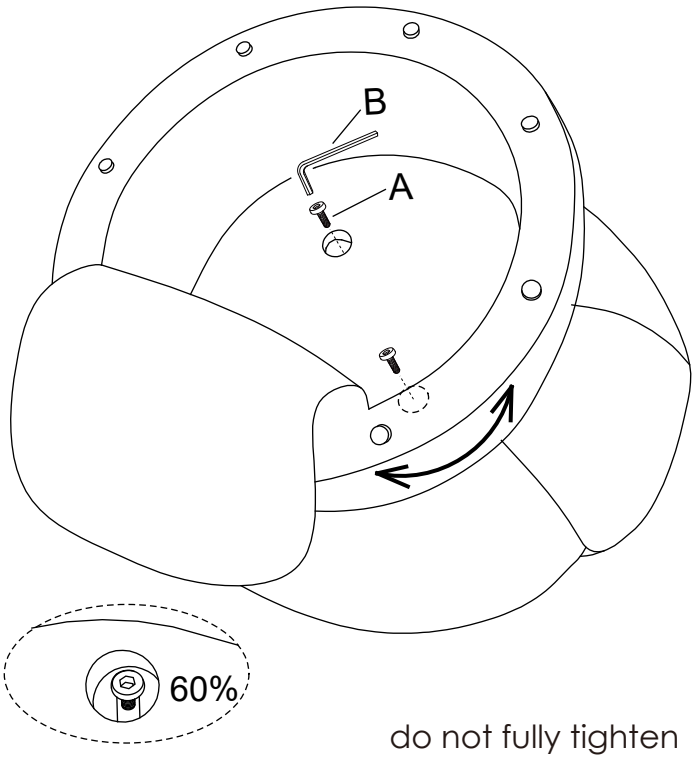


do not fully tighten

STEP 3

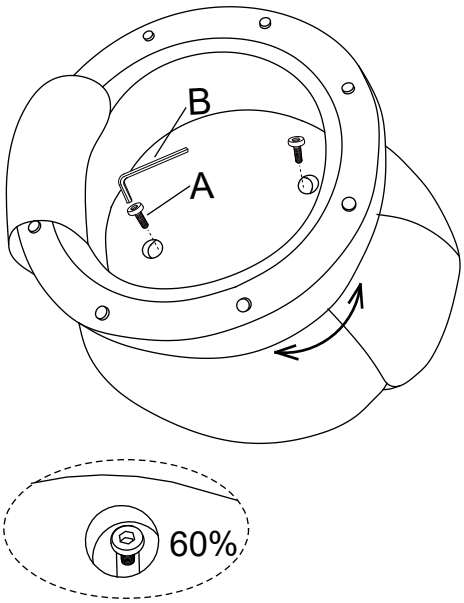

do not fully tighten

STEP 4

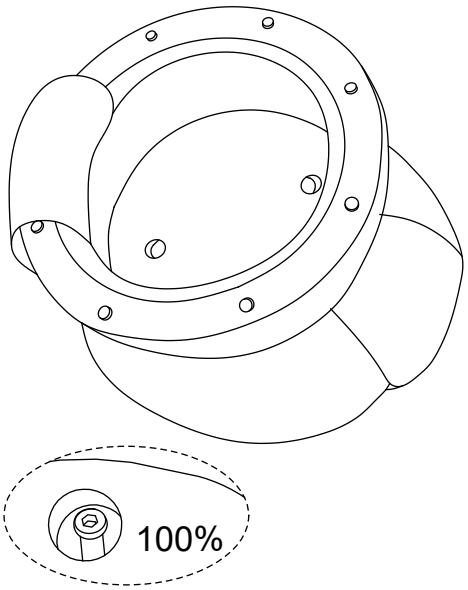

Tighten all the bolts which pre-attached on the step 2&3

STEP 5

