


# Assembly Instructions

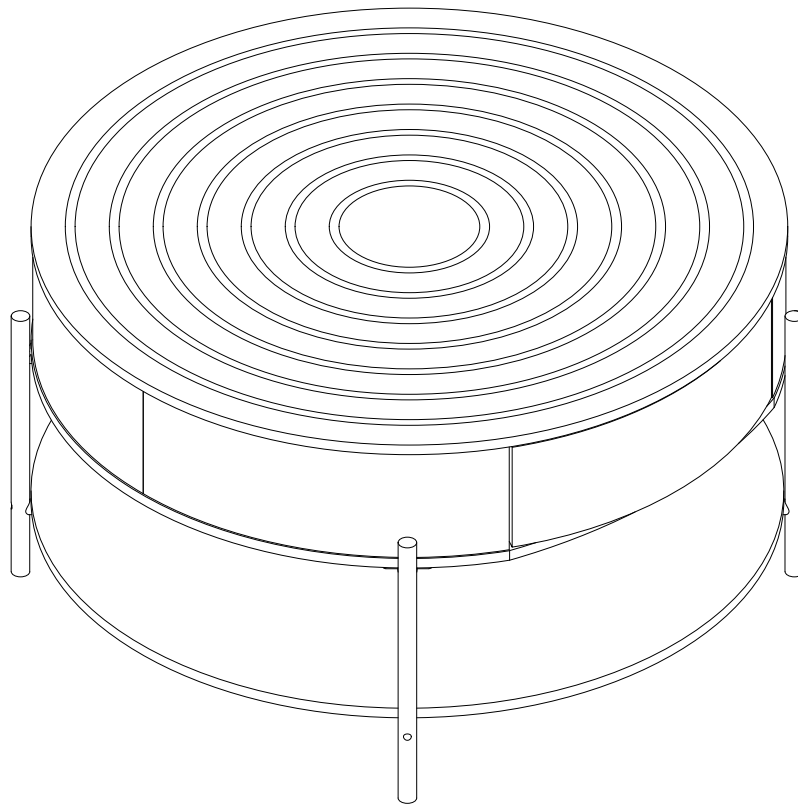


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

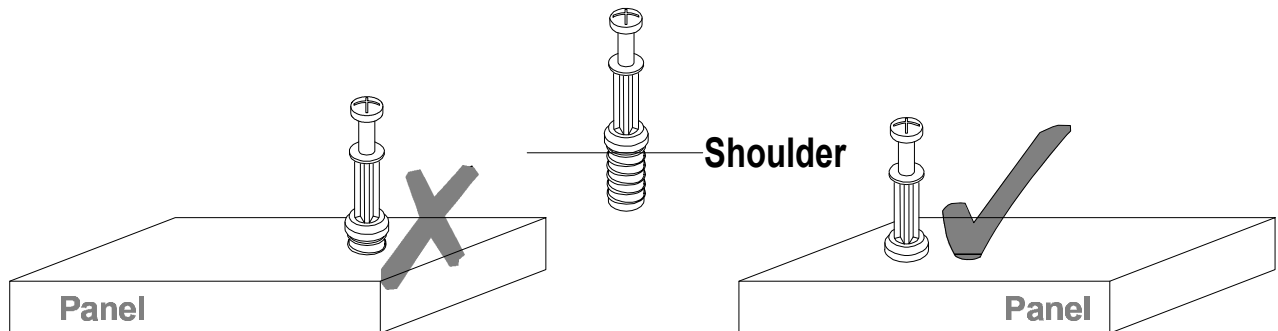

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

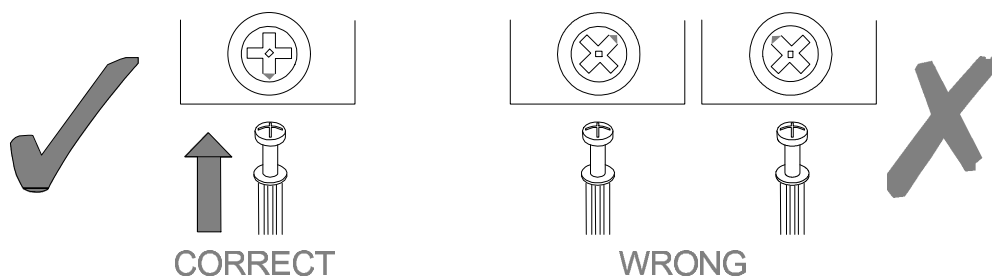

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT












Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

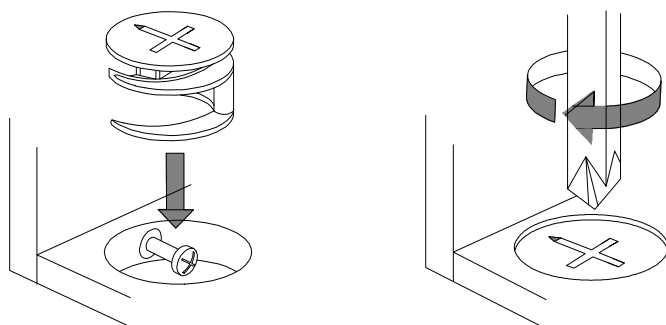


Turn cam lock clockwise to tighten.


# Part List
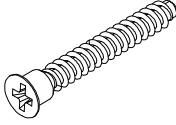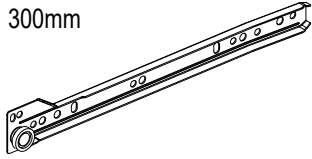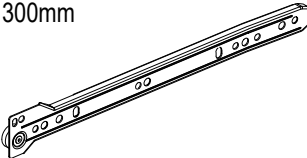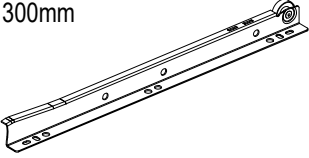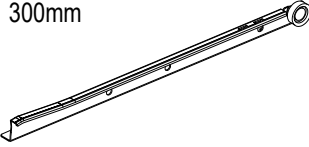
|                                                                                                                                                   |                                                                                                                                                   |                                                                                                                                                    |                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No. A</b><br>Quantity: 14+1 PCS<br>Cam Bolt<br>ø6x33.5mm<br>  | <b>No. B</b><br>Quantity: 14+1 PCS<br>Cam<br>ø15x9.5mm<br>       | <b>No. C</b><br>Quantity: 14+1 PCS<br>Sticker<br>ø20mm<br>       | <b>No. D</b><br>Quantity: 12+1 PCS<br>Dowel<br>ø6x30mm<br>      |
| <b>No. E</b><br>Quantity: 12+1 PCS<br>Screw<br>ø5x48mm<br>       | <b>No. F</b><br>Quantity: 24+2 PCS<br>Screw<br>ø3.5x12mm<br>     | <b>No. G</b><br>Quantity: 9 PCS<br>Bolt<br>M6x12mm<br>           | <b>No. H</b><br>Quantity: 18+1 PCS<br>Bolt<br>M6x25mm<br>       |
| <b>No. I</b><br>Quantity: 4 PCS<br>Bolt<br>M6x30mm<br>         | <b>No. J</b><br>Quantity: 1 PCS<br>Hex Key<br>4mm<br>          | <b>No. K</b><br>Quantity: 4 PCS<br>Bolt<br>M6x40mm<br>         | <b>No. CL</b><br>Quantity: 2 PCS<br>Drawer Slider<br>300mm<br> |
| <b>No. CR</b><br>Quantity: 2 PCS<br>Drawer Slider<br>300mm<br> | <b>No. DL</b><br>Quantity: 2 PCS<br>Drawer Slider<br>300mm<br> | <b>No. DR</b><br>Quantity: 2 PCS<br>Drawer Slider<br>300mm<br> | <b>No. L</b><br>Quantity: 8 PCS<br>Screw<br>ø4x30mm<br>       |


# Product structure

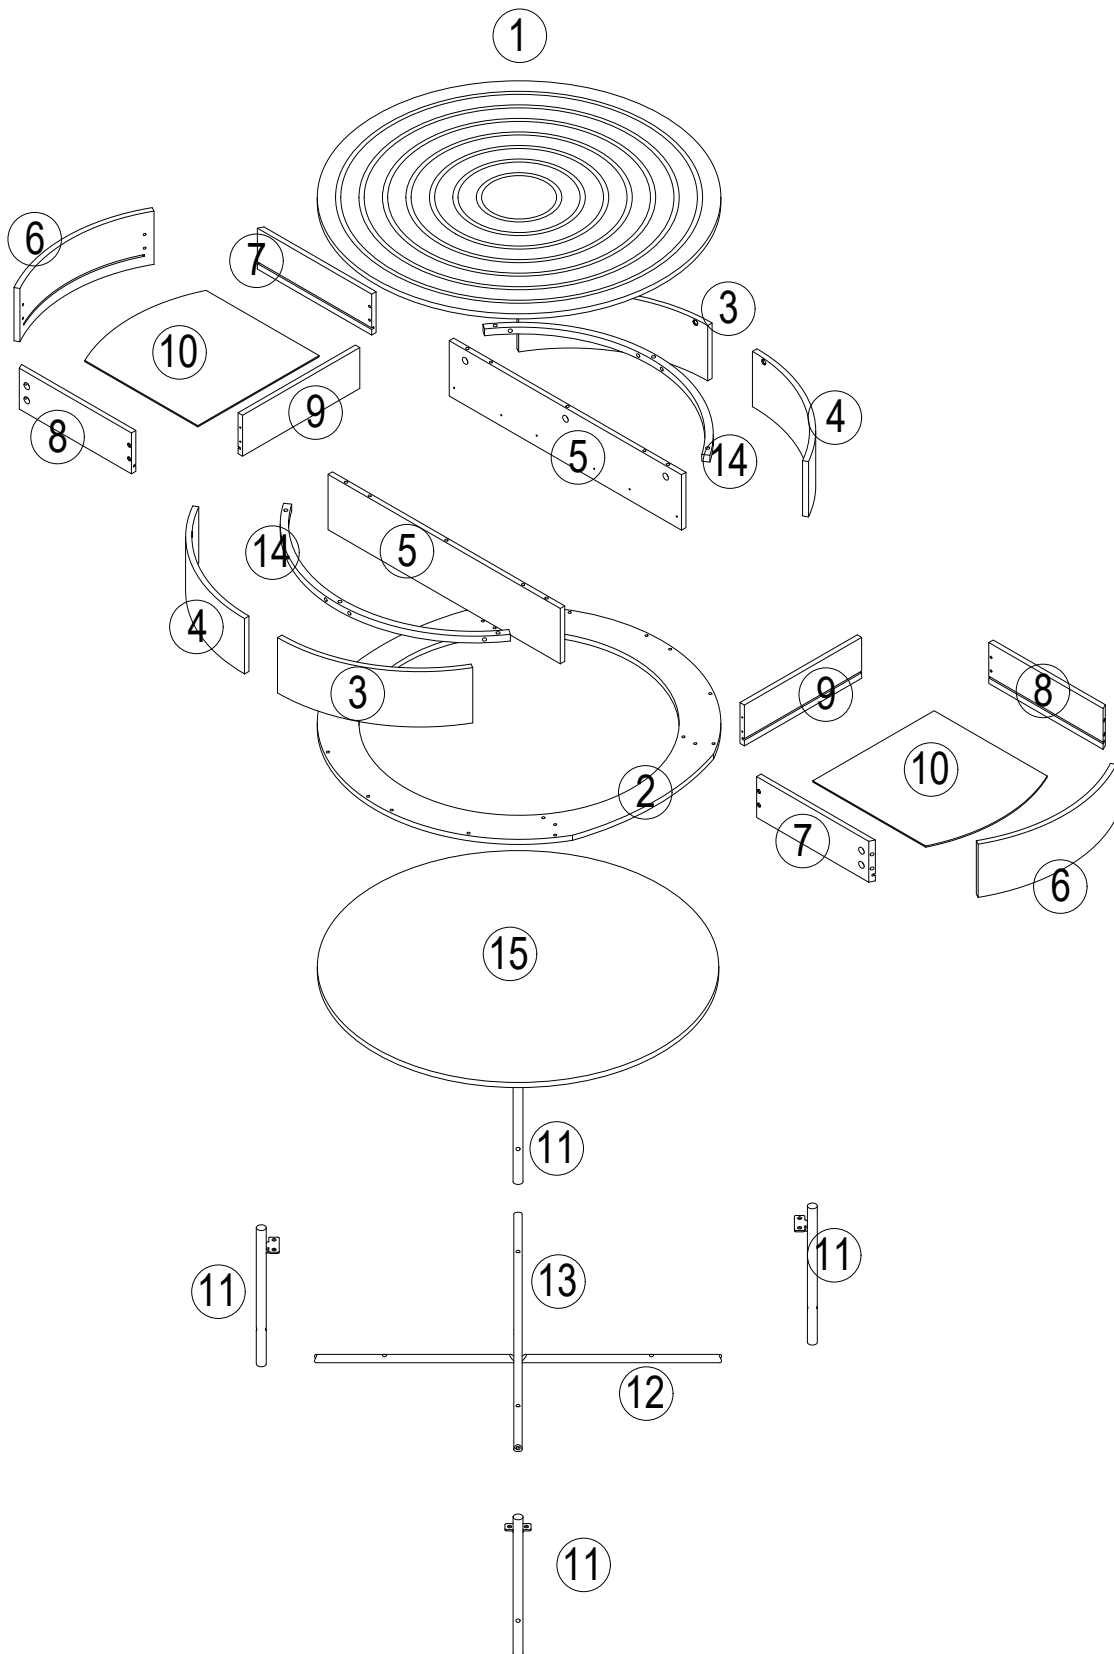


# STET 1

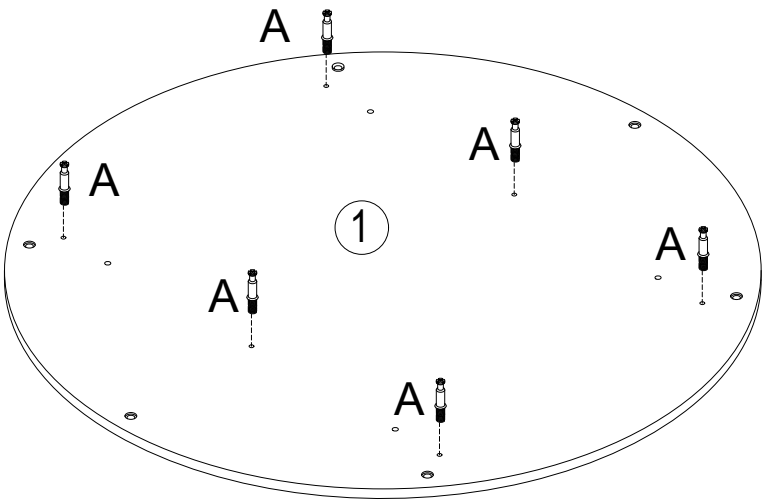


No. A  
Quantity: 6 PCS  
Cam Bolt  
ø6x33.5mm

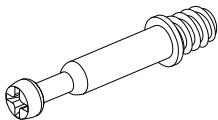

# STET 2

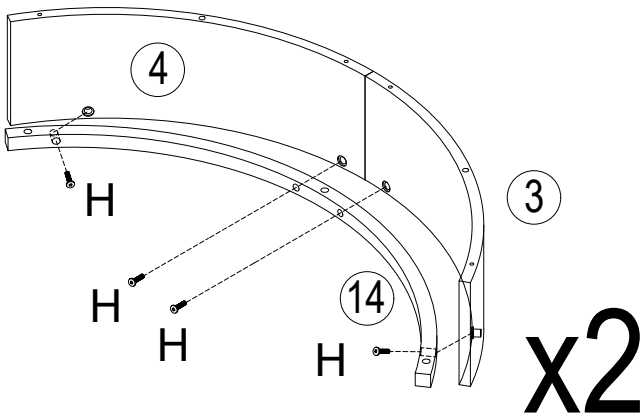


No. H  
Quantity: 8 PCS  
Bolt  
M6x25mm




No. J  
Quantity: 1 PCS  
Hex Key  
4mm



# STET 3



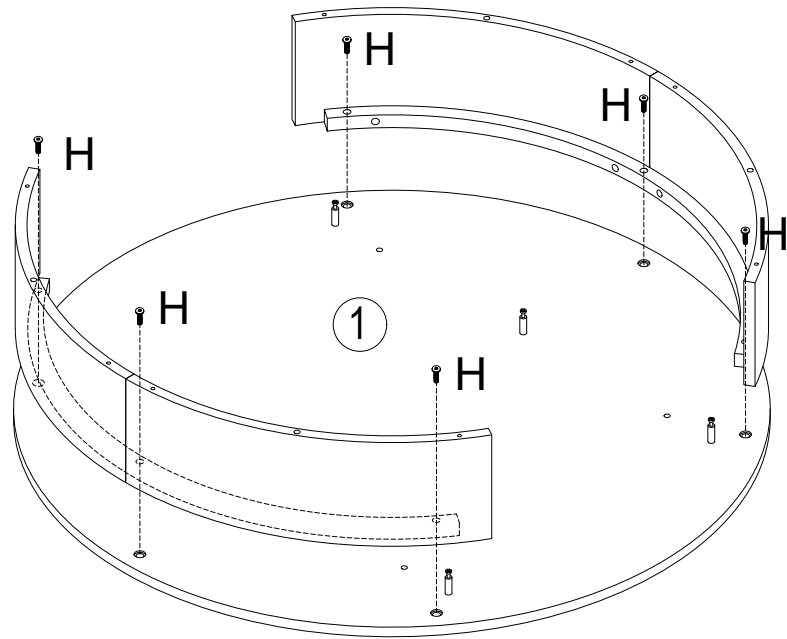


No. H  
Quantity: 6 PCS  
Bolt  
M6x25mm




# STET 4


x2

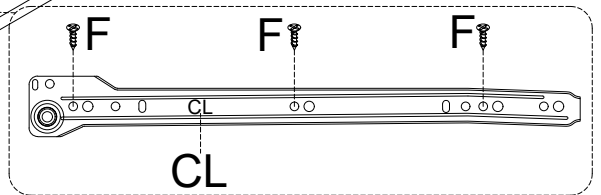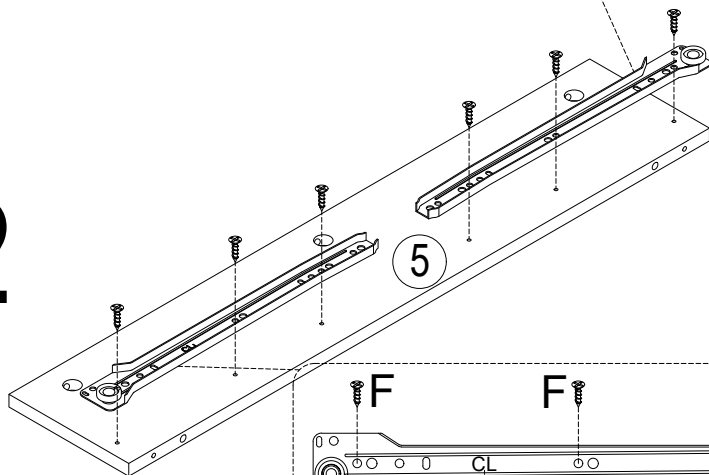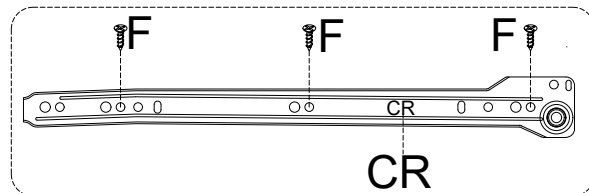


No. CL  
Quantity: 2 PCS  
Drawer Slider  
300mm

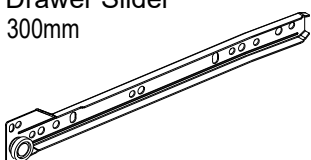


No. CR  
Quantity: 2 PCS  
Drawer Slider  
300mm

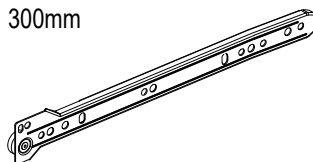


No. F  
Quantity: 12 PCS  
Screw  
ø3.5x12mm




# STET 5

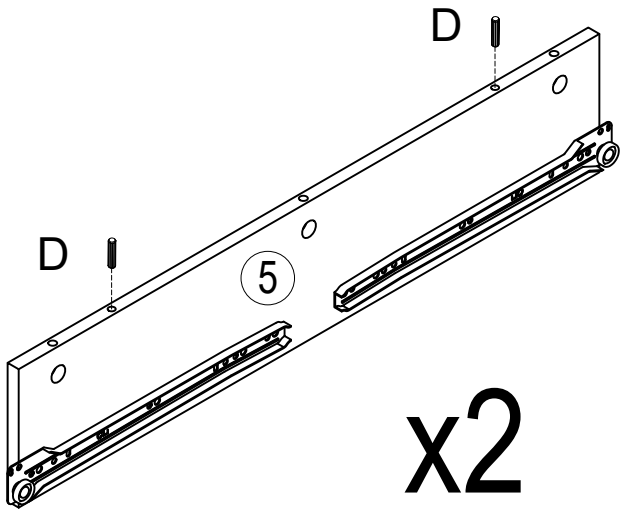


No. D  
Quantity: 4 PCS  
Dowel  
ø6x30mm




# STET 6

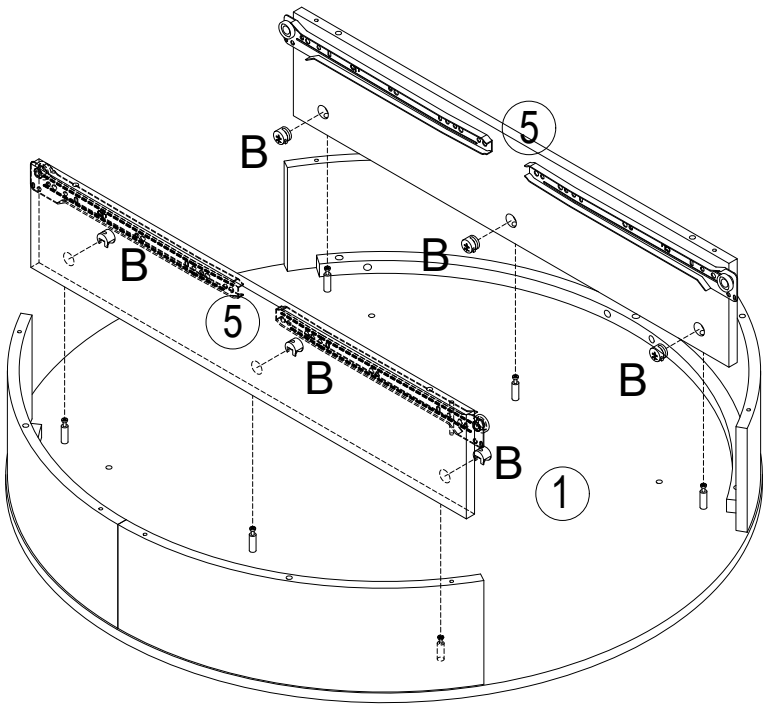


No. B  
Quantity: 6 PCS  
Cam  
ø15x9.5mm




# STET 7

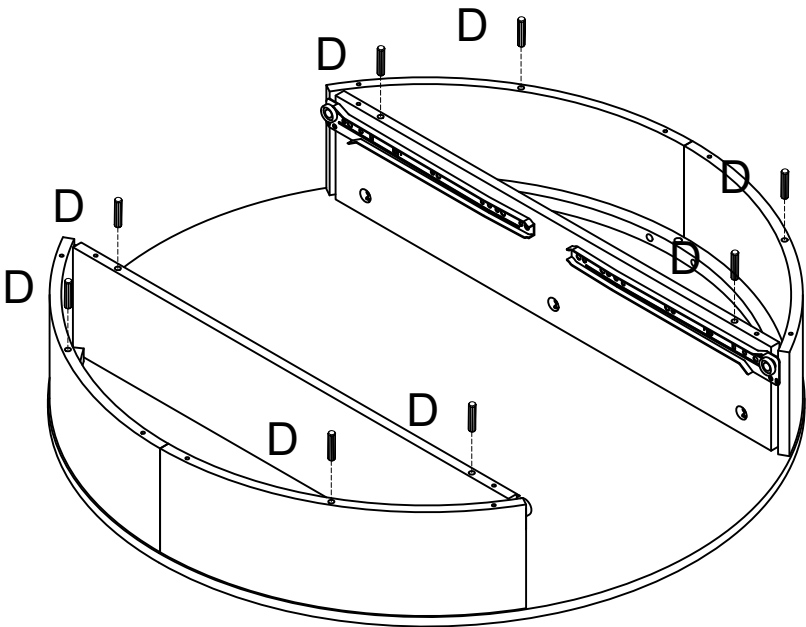


No. D  
Quantity: 8 PCS  
Dowel  
ø6x30mm




# STET 8

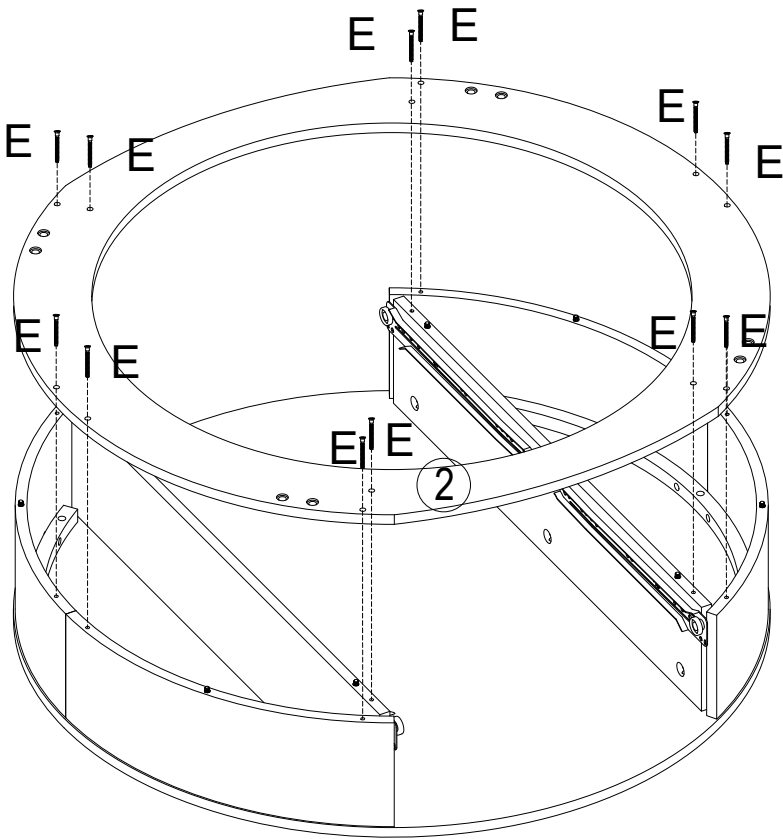


No. E  
Quantity: 12 PCS  
Screw  
ø5x48mm

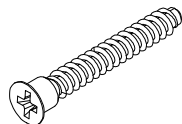


# STET 9

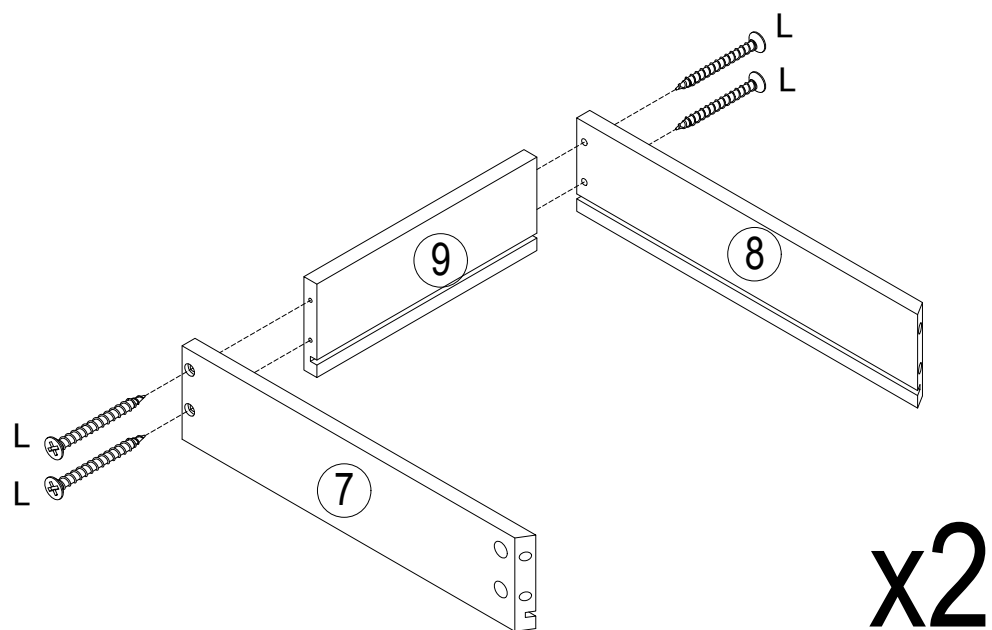


No. L  
Quantity: 8 PCS  
Screw  
ø4x30mm

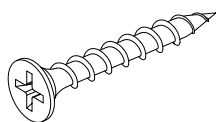


# STET 10

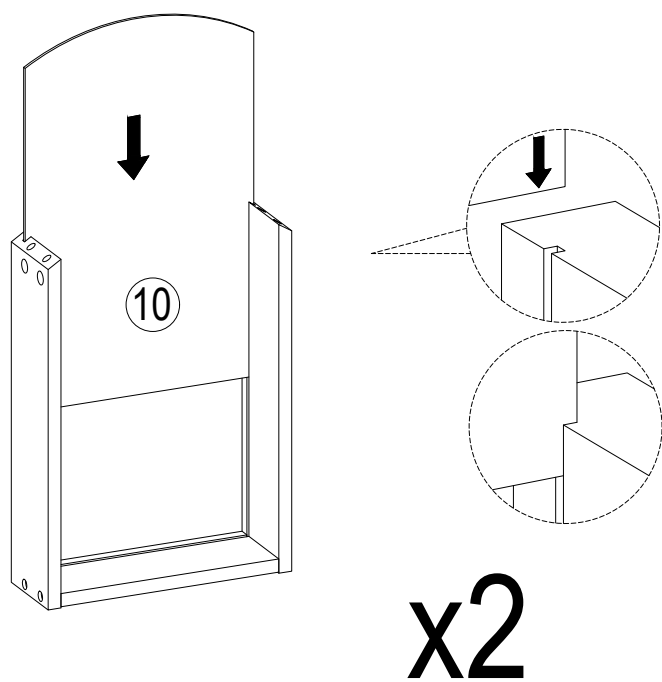

# STET 11

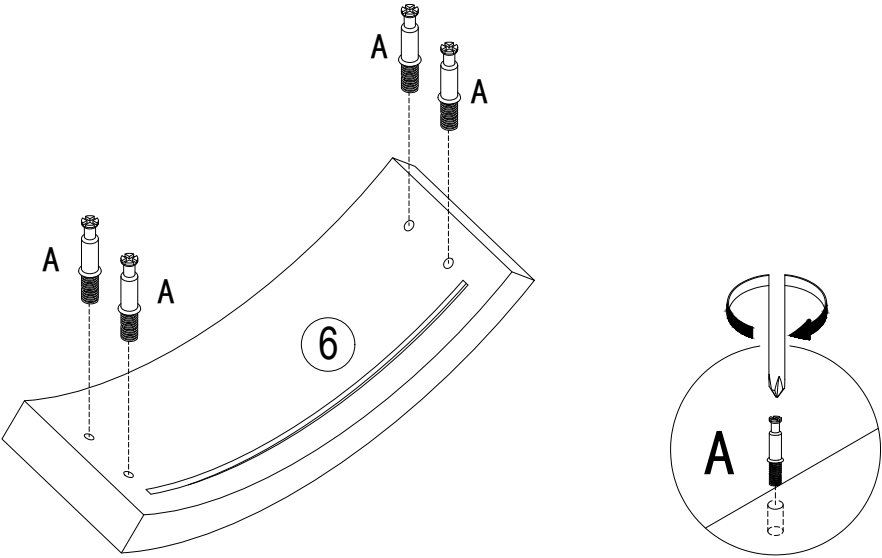


No. A  
Quantity: 8 PCS  
Cam Bolt  
ø6x33.5mm

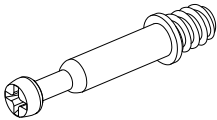

x2

# STET 12

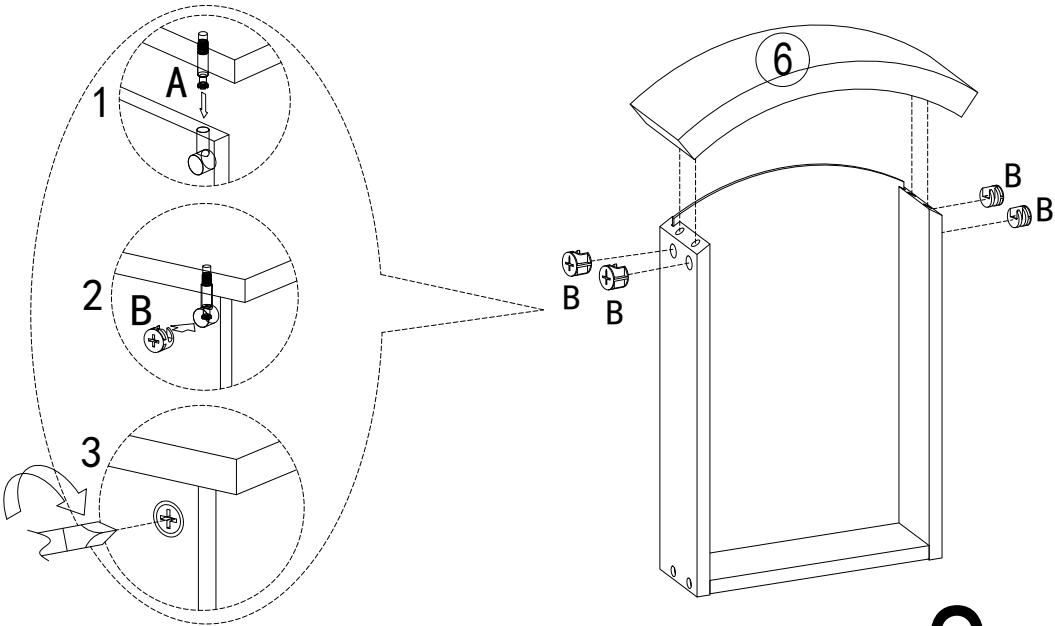


No. 8  
Quantity: 8 PCS  
Cam  
ø15x9.5mm




x2

# STET 13

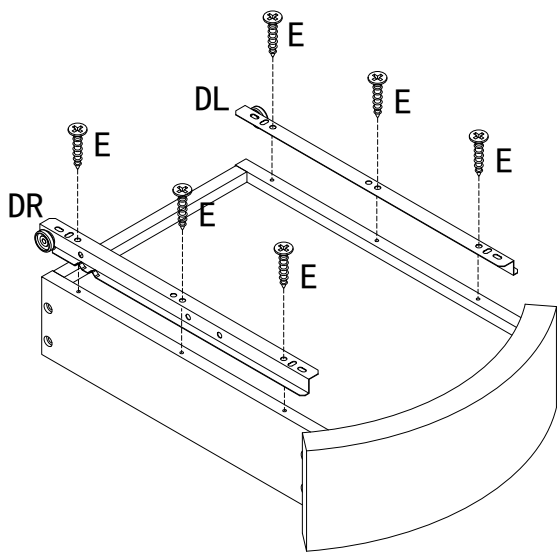


x2


No. DL  
Quantity: 2 PCS  
Drawer Slider  
300mm

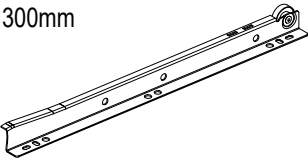


No. DR  
Quantity: 2 PCS  
Drawer Slider  
300mm

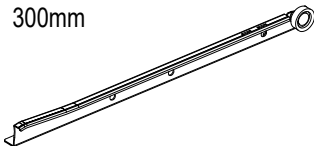

No. F  
Quantity: 12 PCS  
Screw  
ø3.5x12mm




# STET 14

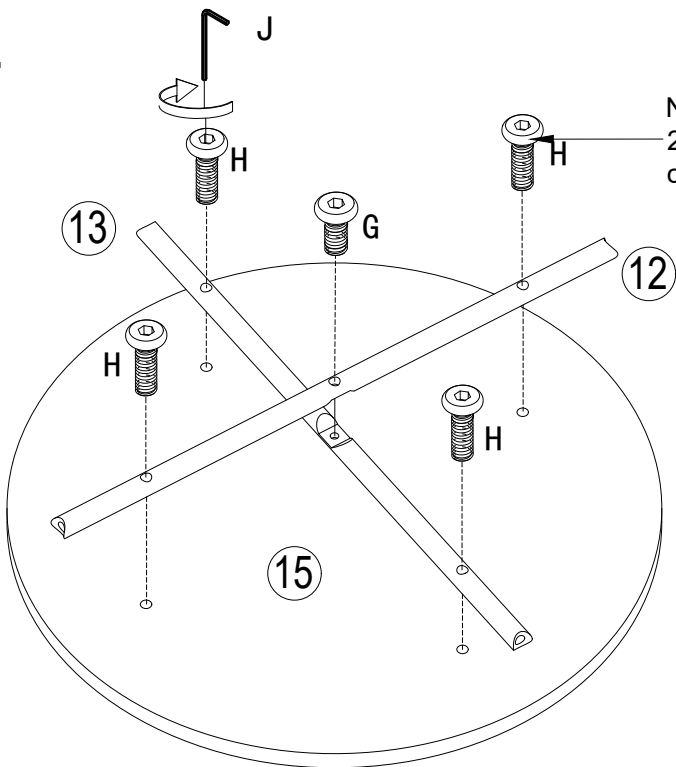


Noted the length of bolt (C) is 25mm, use other bolt maybe cause the shelf to bump


No. G  
Quantity: 1 PCS  
Bolt  
M6x12mm



No. H  
Quantity: 4 PCS  
Bolt  
M6x25mm




# STET 15

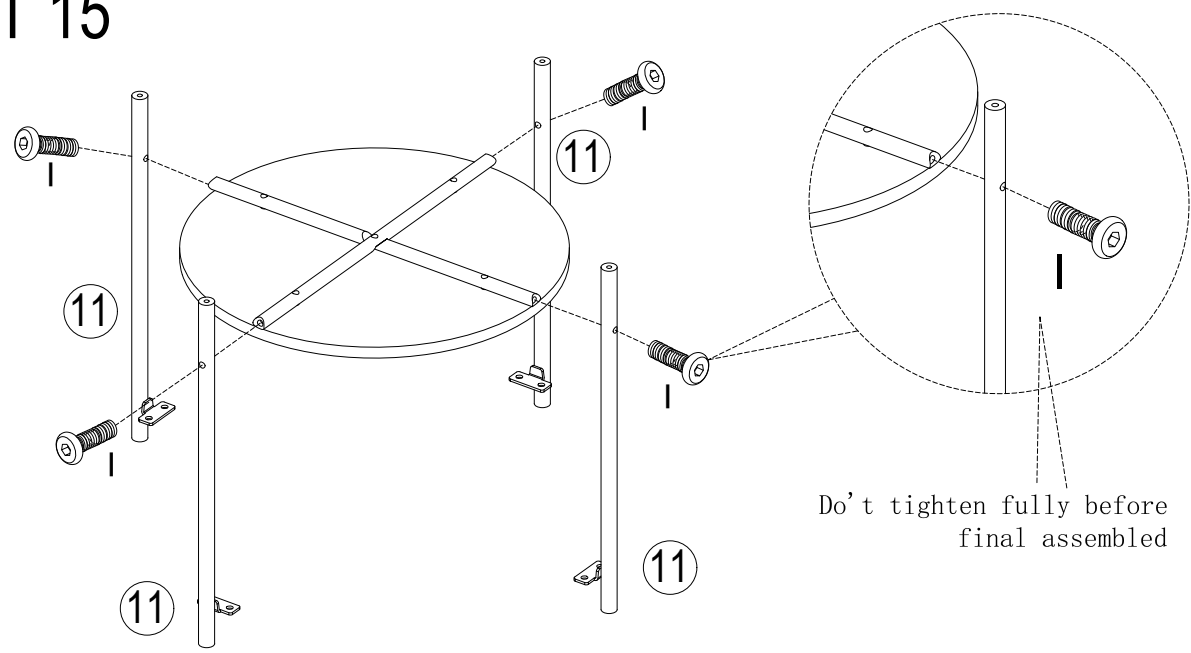


Do't tighten fully before  
final assembled


No. I  
Quantity: 4 PCS  
Bolt  
M6x30mm





# STET 16

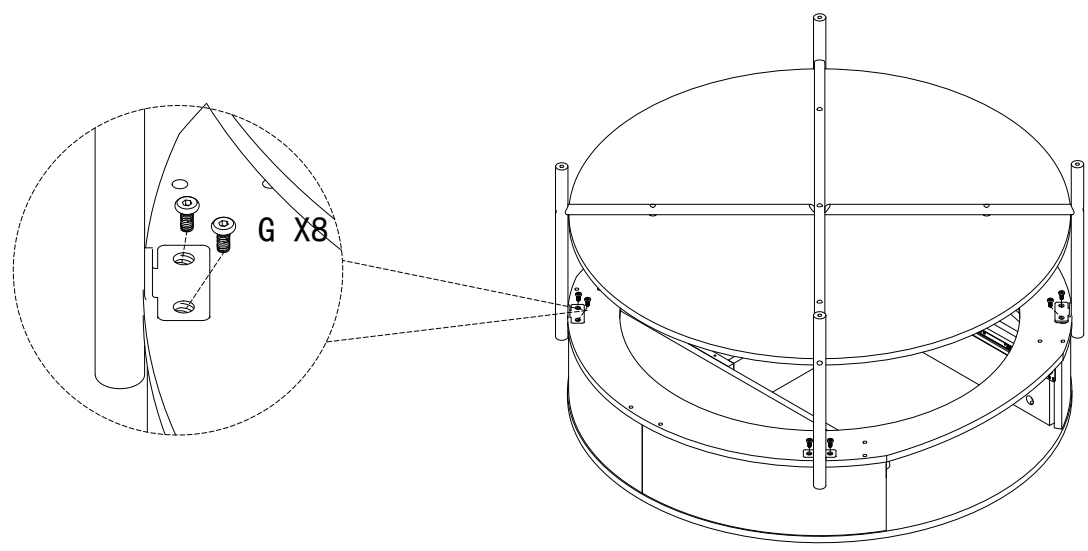

No. G  
Quantity: 8 PCS  
Bolt  
M6x12mm





# STET 17

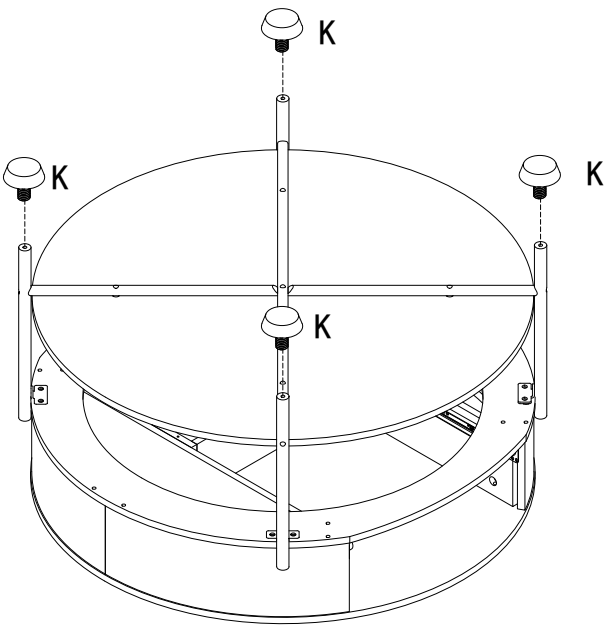

No. K  
Quantity: 4 PCS  
Bolt  
M6x40mm



# STET 18

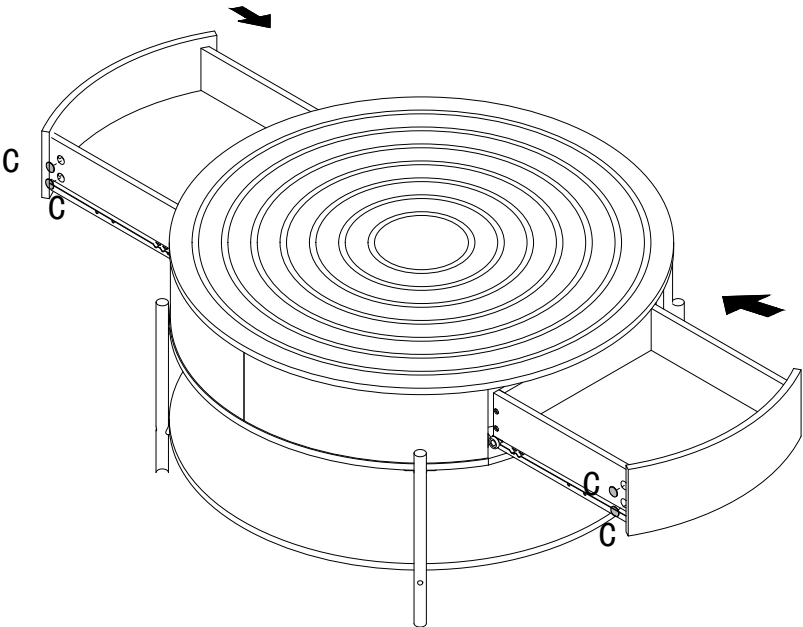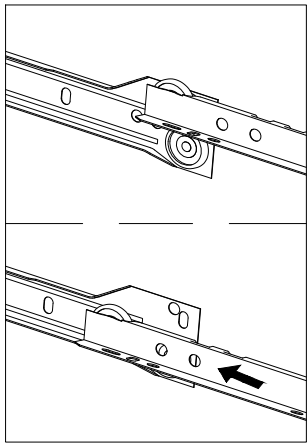

No. C  
Quantity: 14 PCS  
Sticker  
ø20mm

