
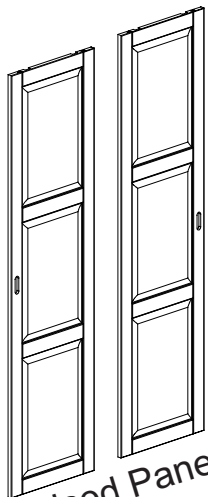


ASSEMBLY INSTRUCTIONS

2 SLIDING DOORS WARDROBE

SKU 5661R / 5661L / 5661M - White


SKU 5666R / 5666L / 5666M - Java

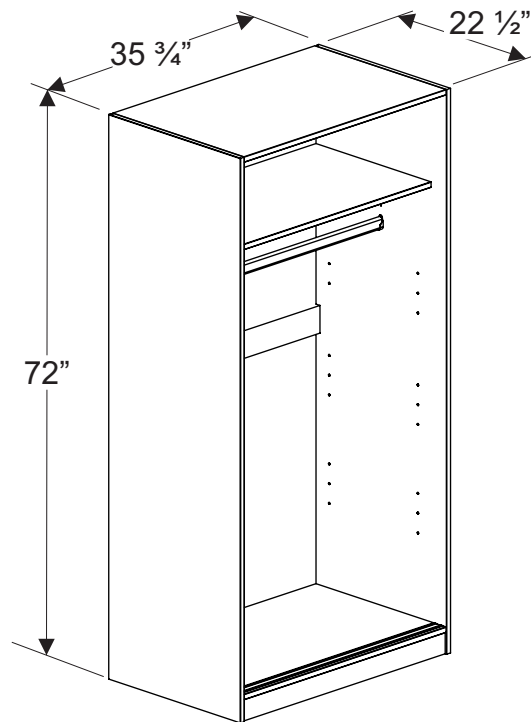



Raised Panel Doors



Louvered Doors

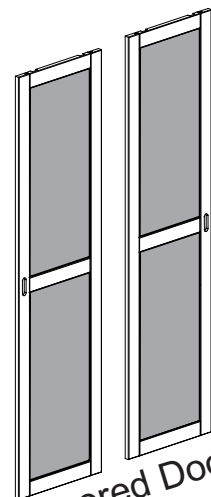


Mirrored Doors

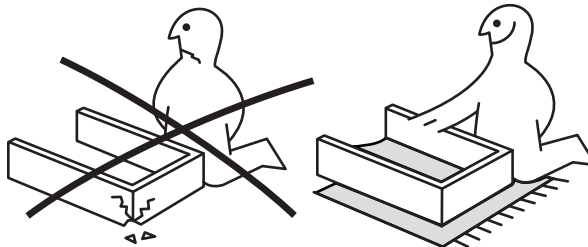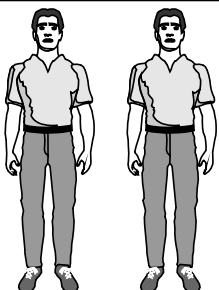

REV - 02/2023

PH #2

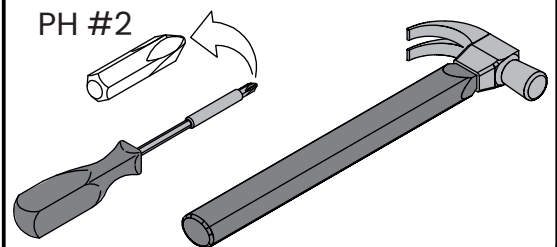


page 2/21






PRE-ASSEMBLY PREPARATION



- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceImportsInc.com
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

PARTS DIAGRAM

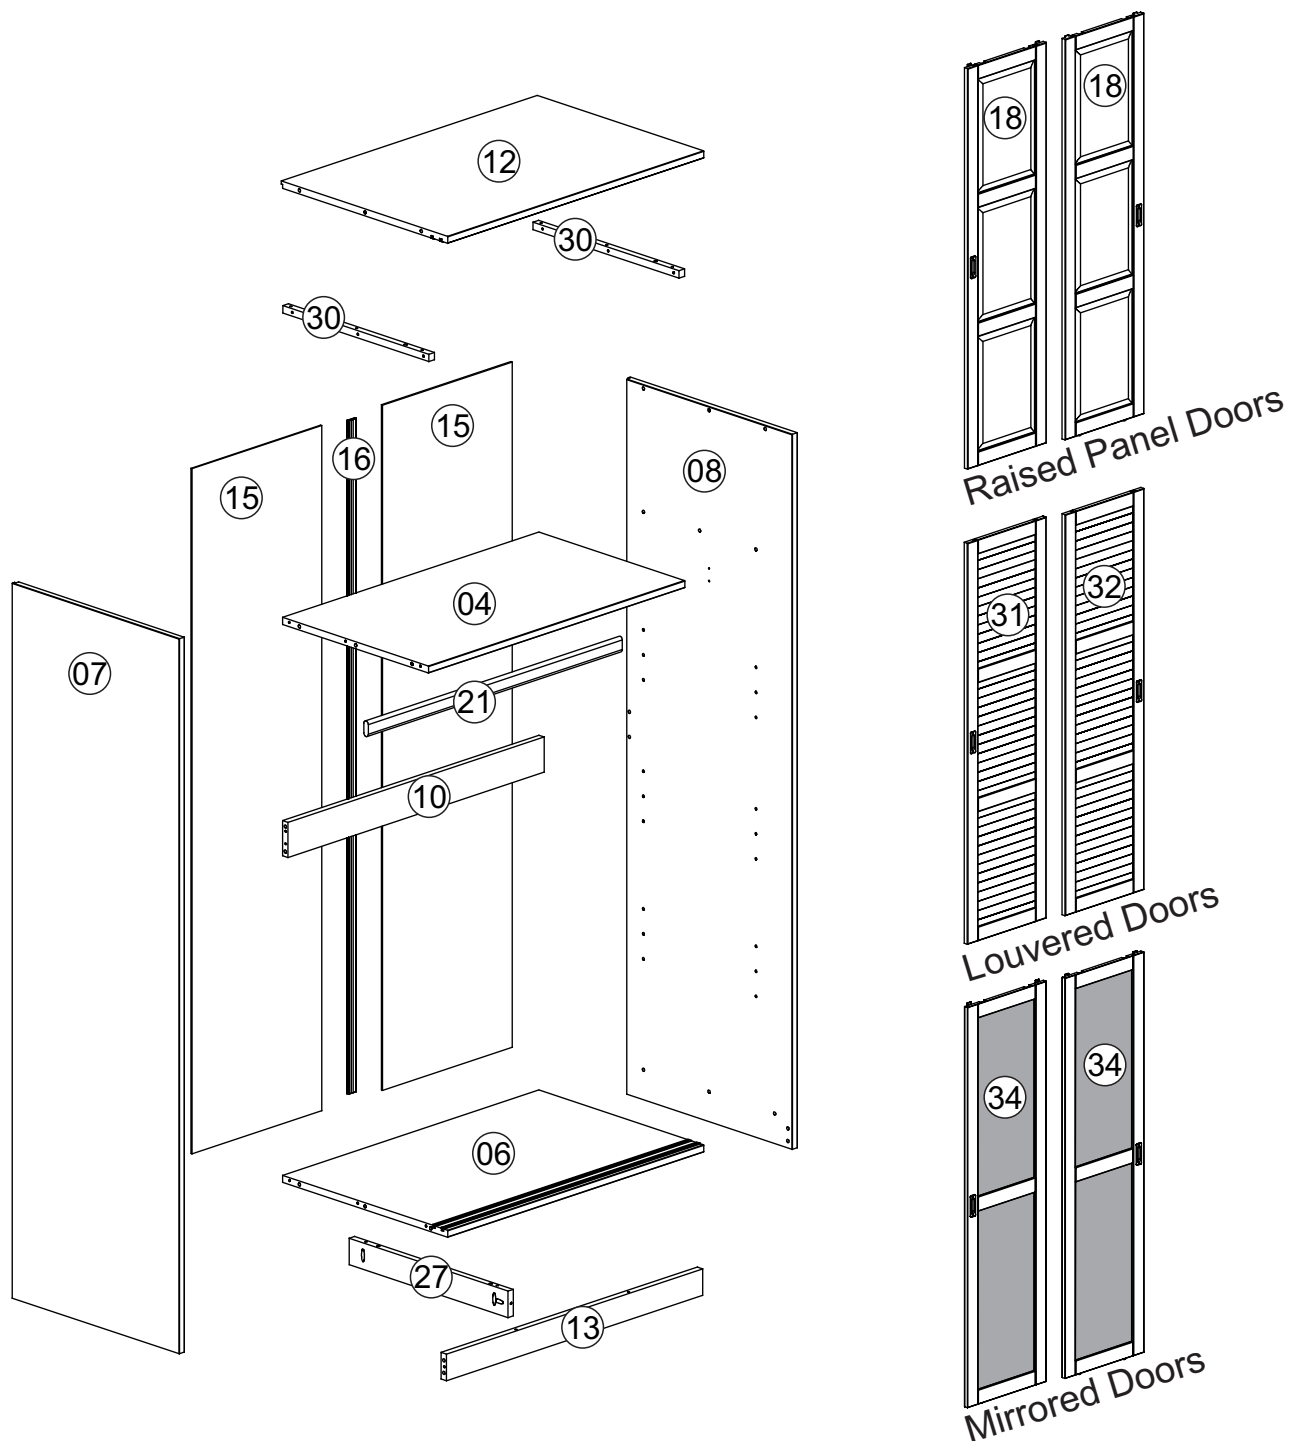

SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	36+1
A3	 3,0x16	04+1
A4	 3,5x14	04+1
A9	 3,5x16	20+1
C2	 8,0x25	32+1
D10		02
E15		04
E16		04
G1	 10x10	40
H2		02

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01








WARNING:
 **CHOKING HAZARD**
 Small Parts.
 Adult Supervision Required.
 Not for children under 3 years old.

WARNING:


**FURNITURE TIPOVER CAN RESULT
IN SERIOUS INJURY OR DEATH**


This wardrobe includes tipover-
prevention hardware that
MUST BE ATTACHED TO THE WALL
per the assembly instructions.

01)

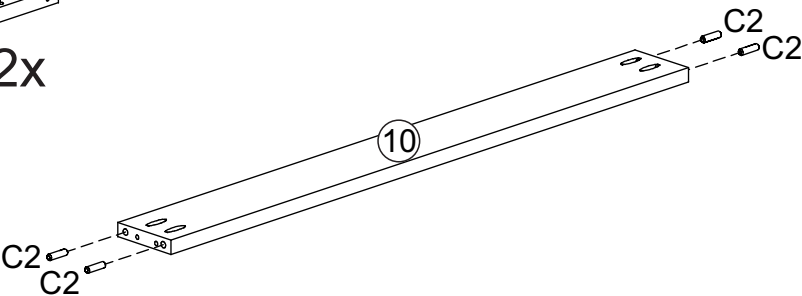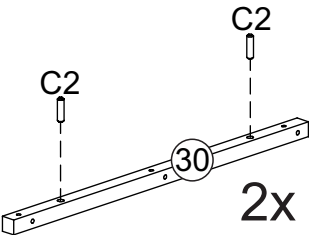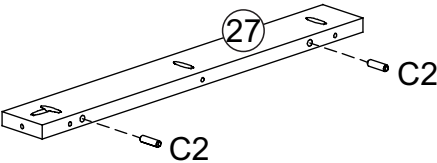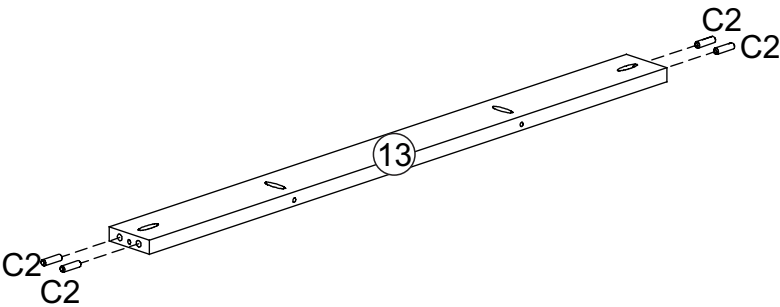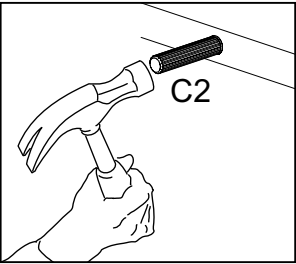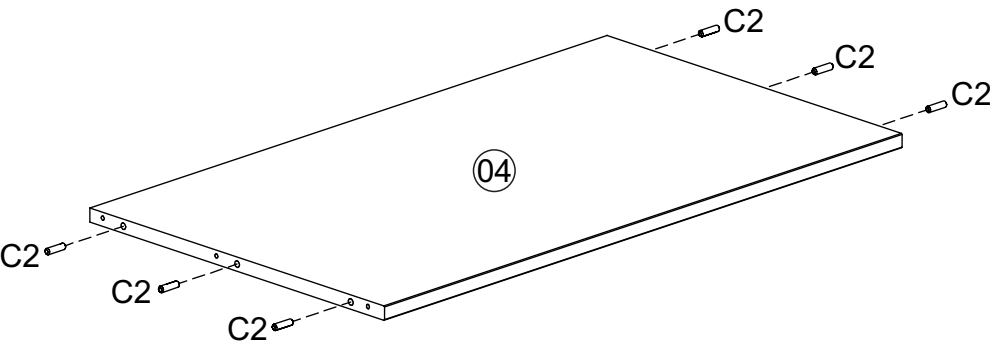
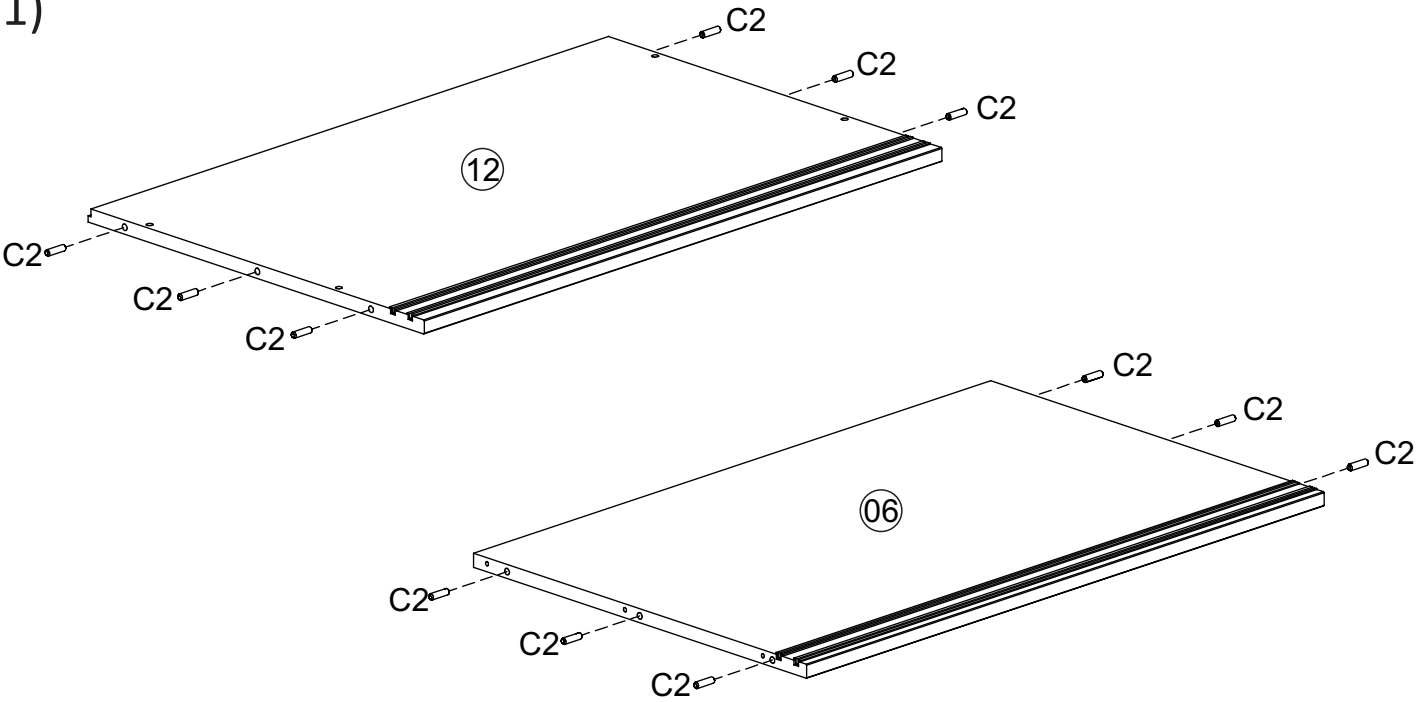


C2		32
8,0x25		


02)

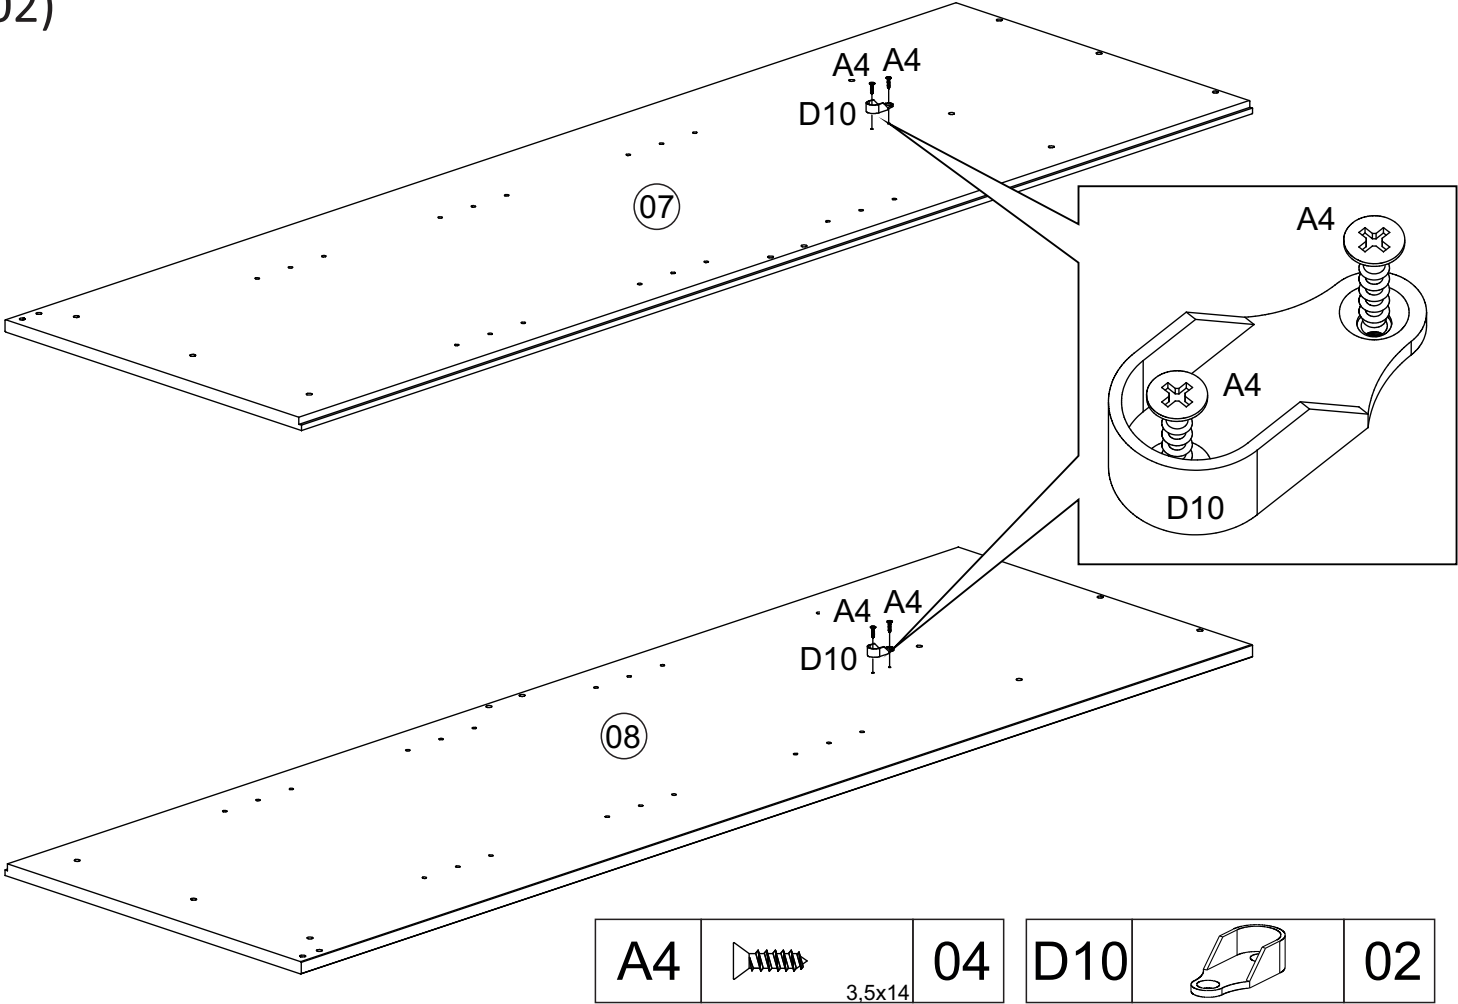


03)

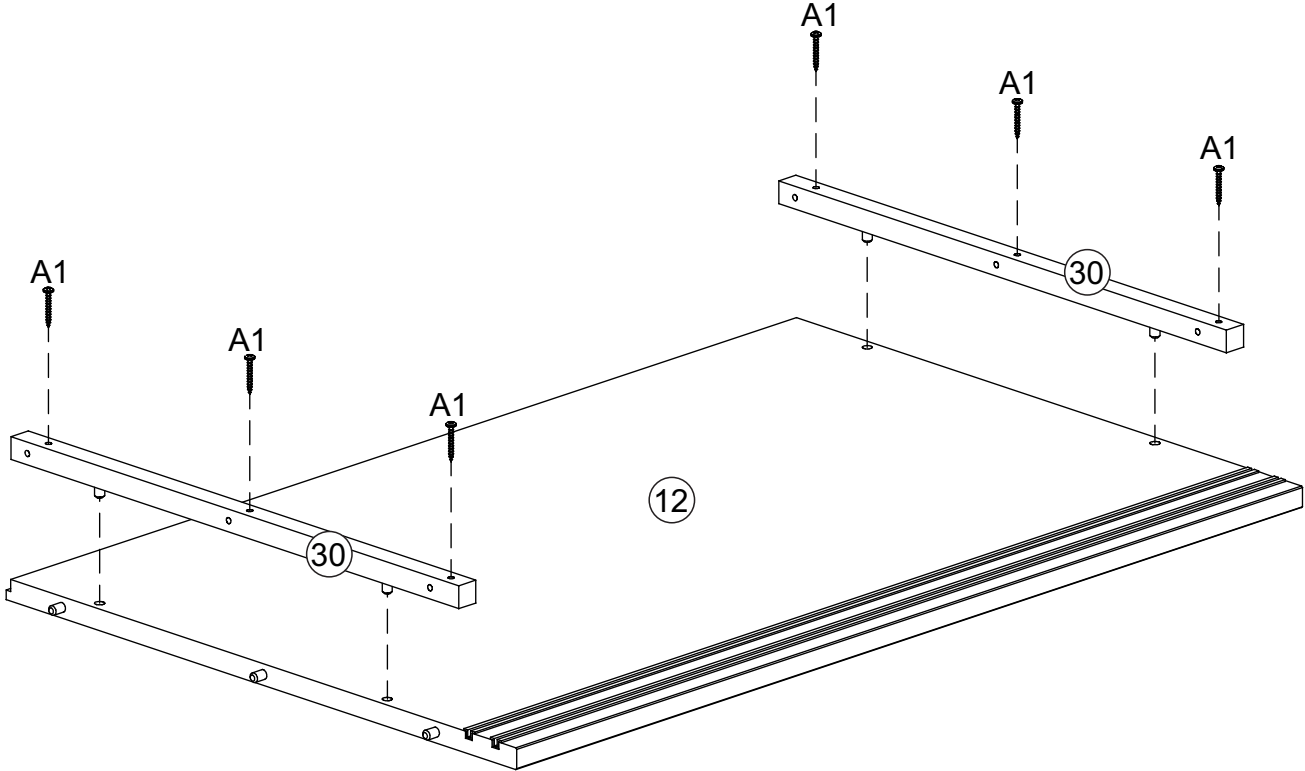





04)

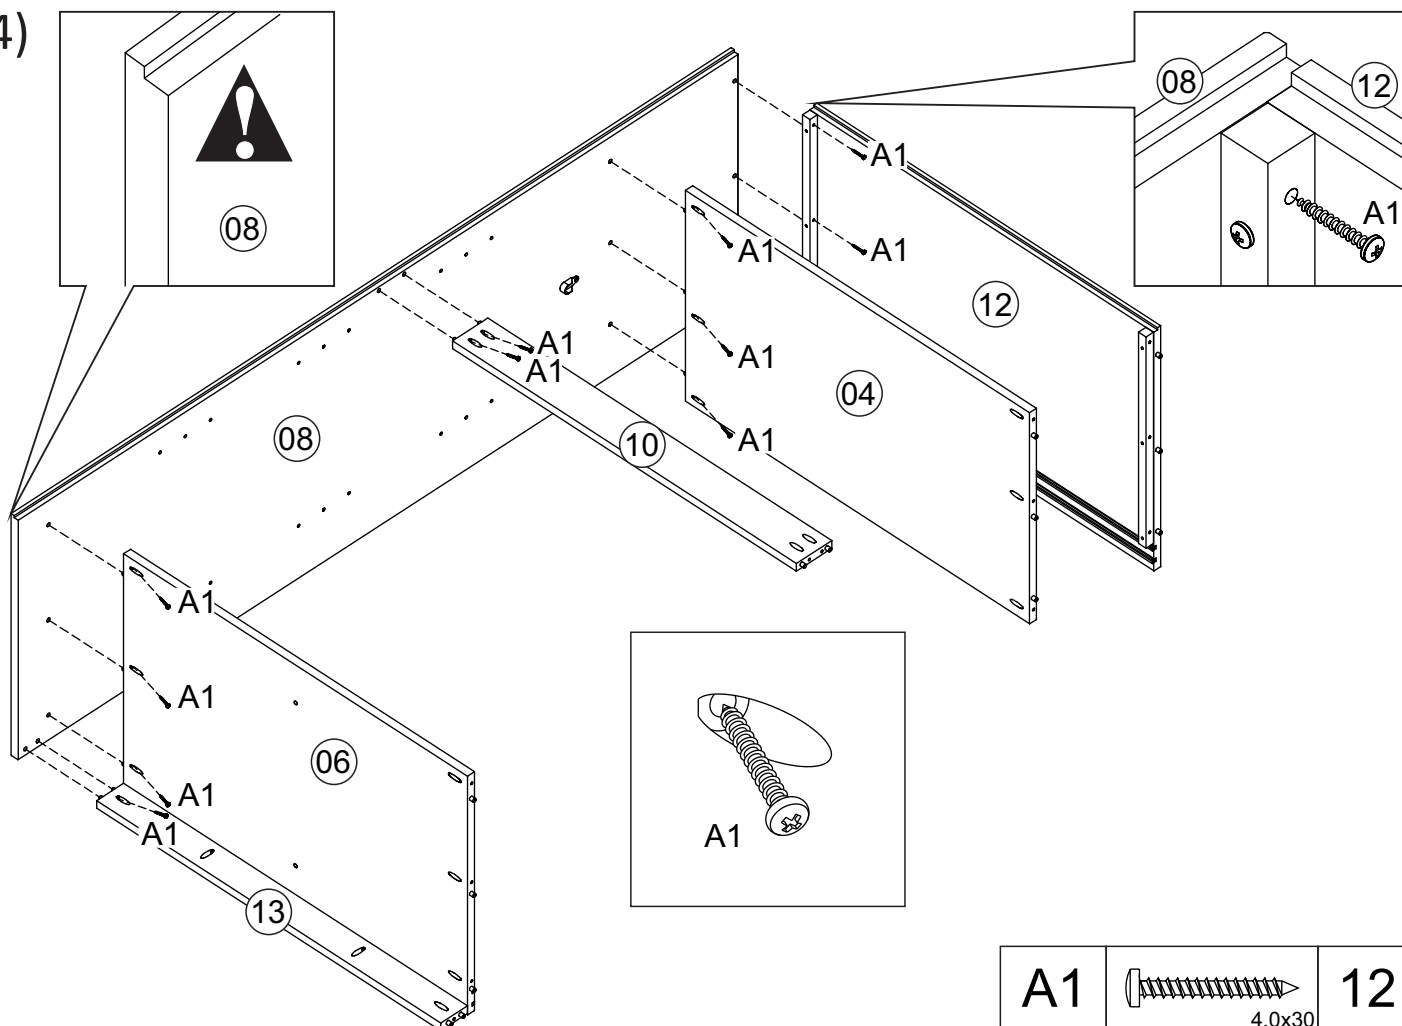




05)

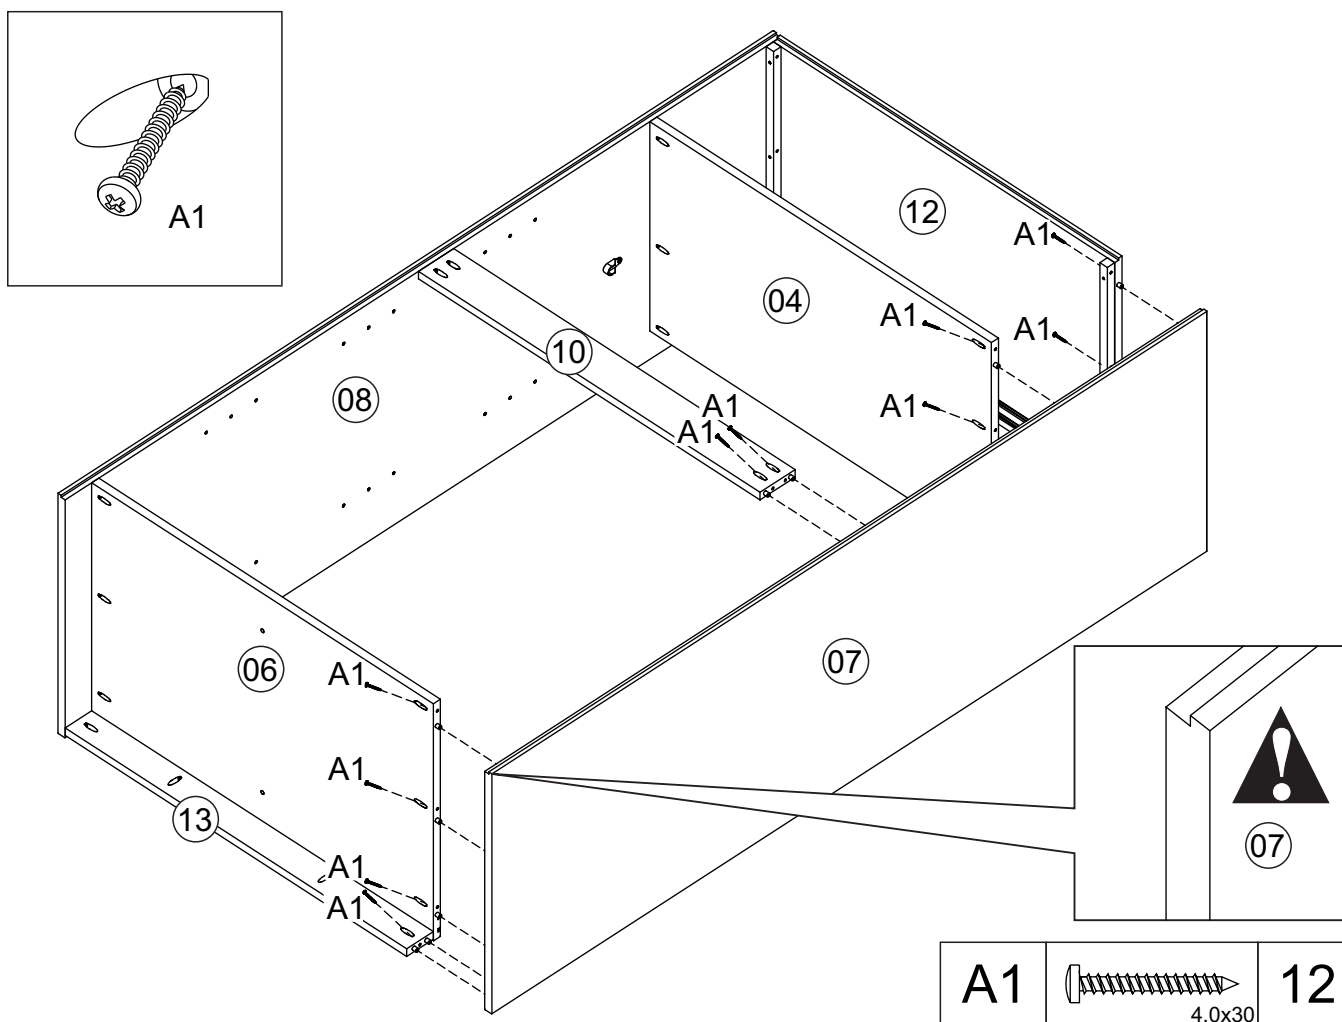




06)

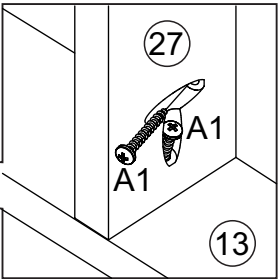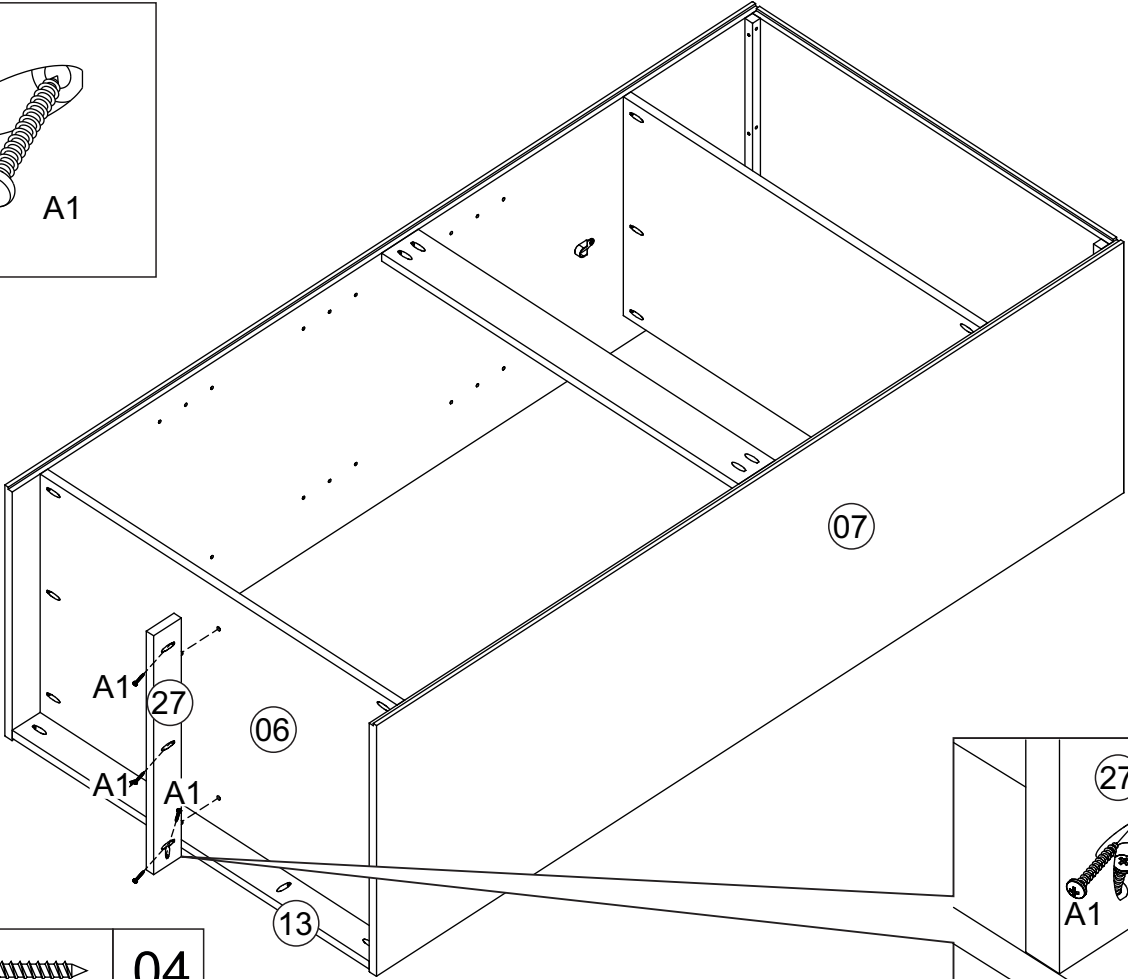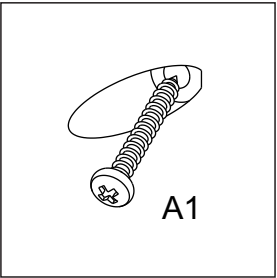




07)

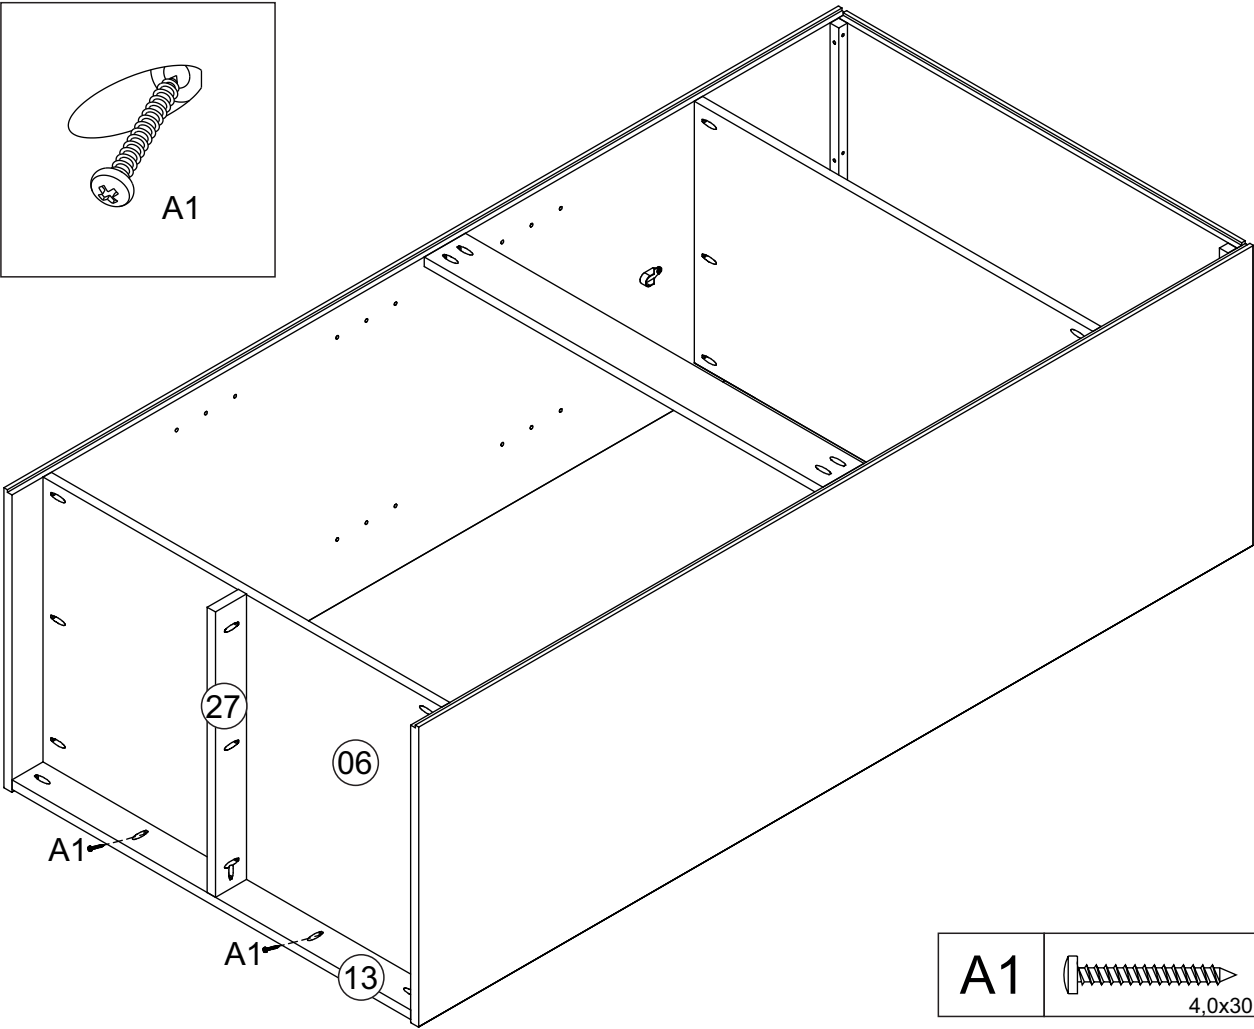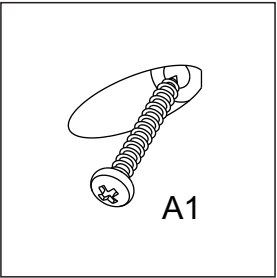



08)

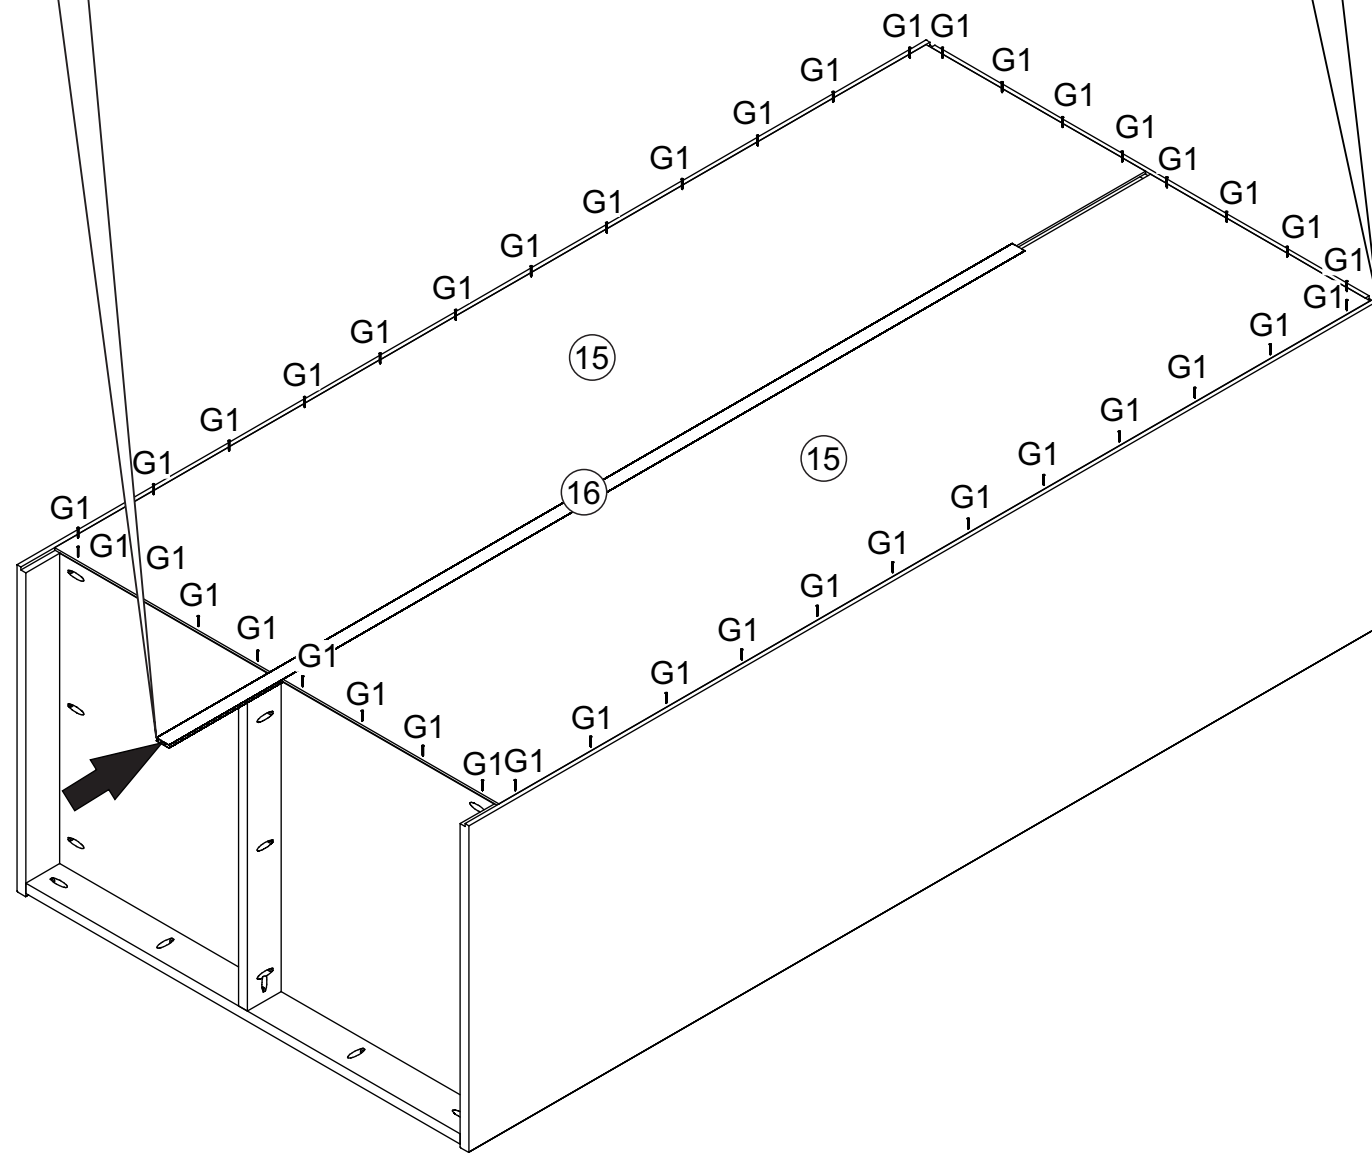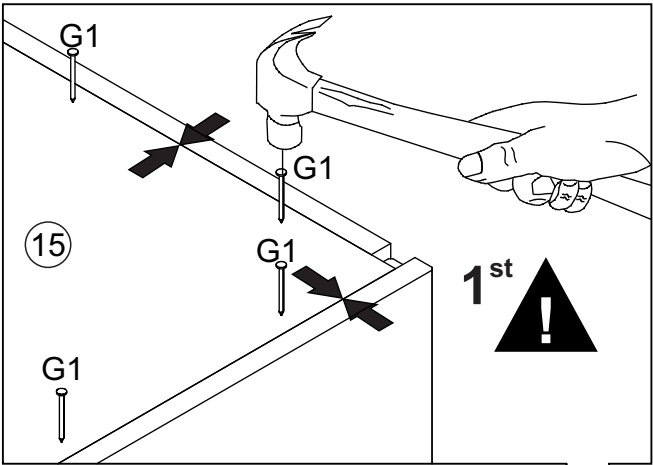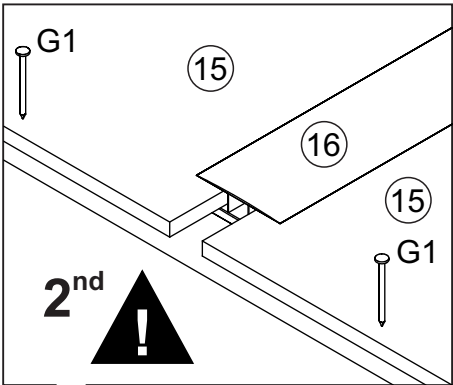


09)

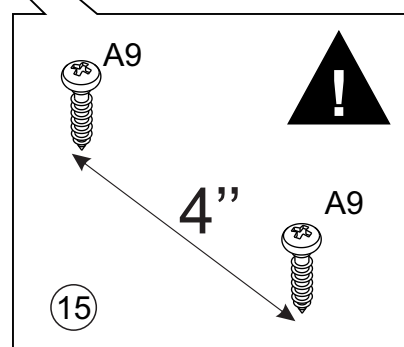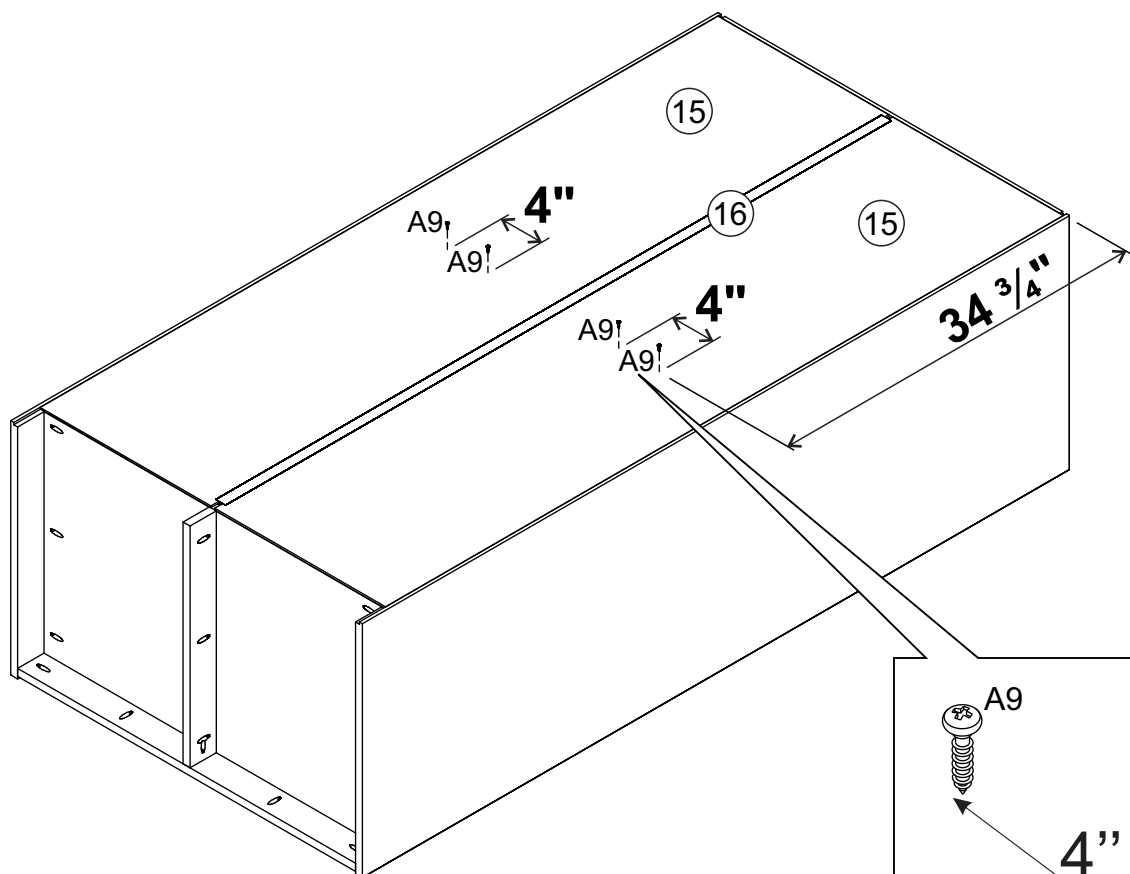


10)

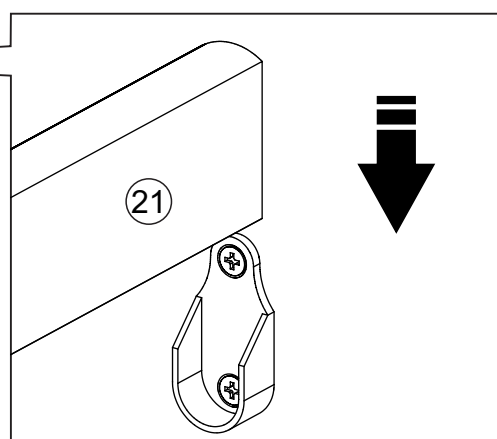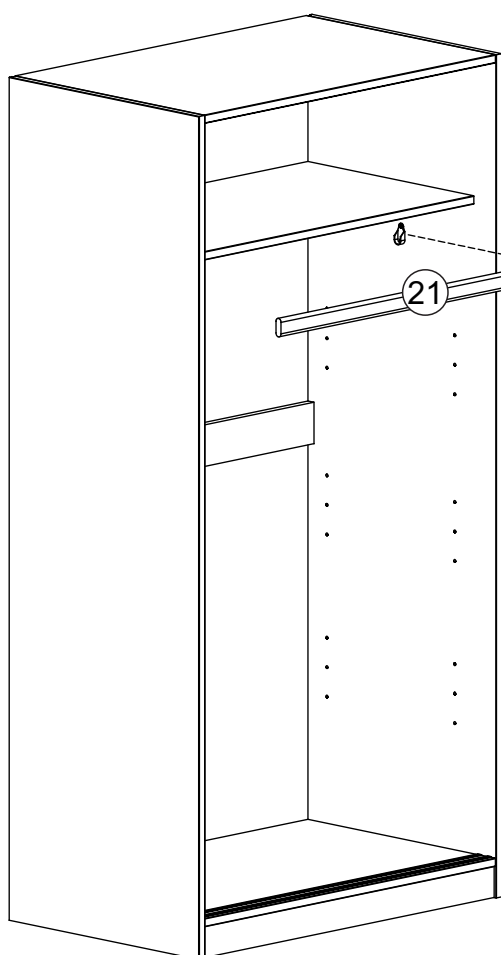


11) Raised Panel Doors

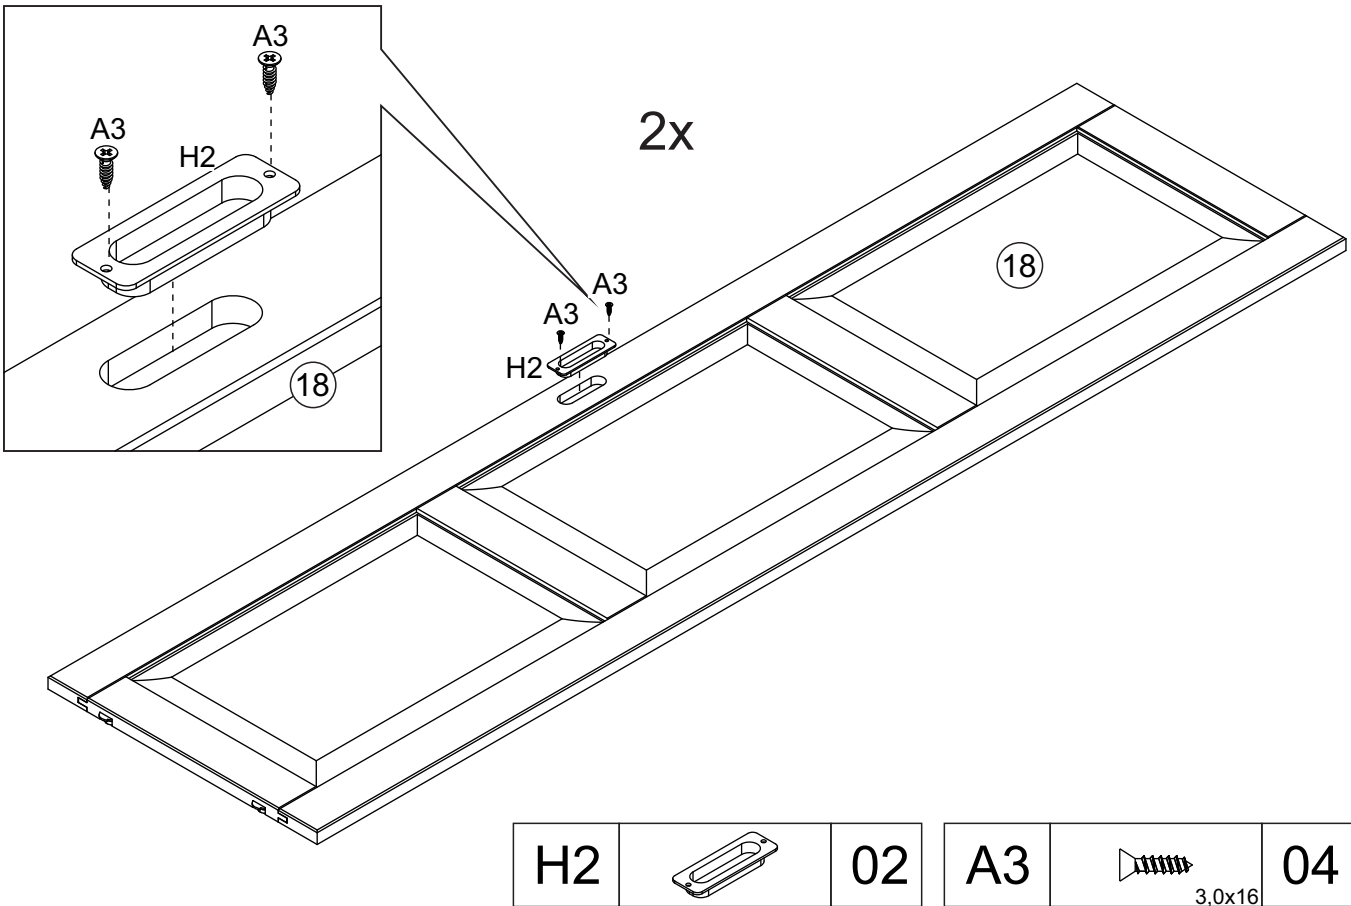


12) Raised Panel Doors

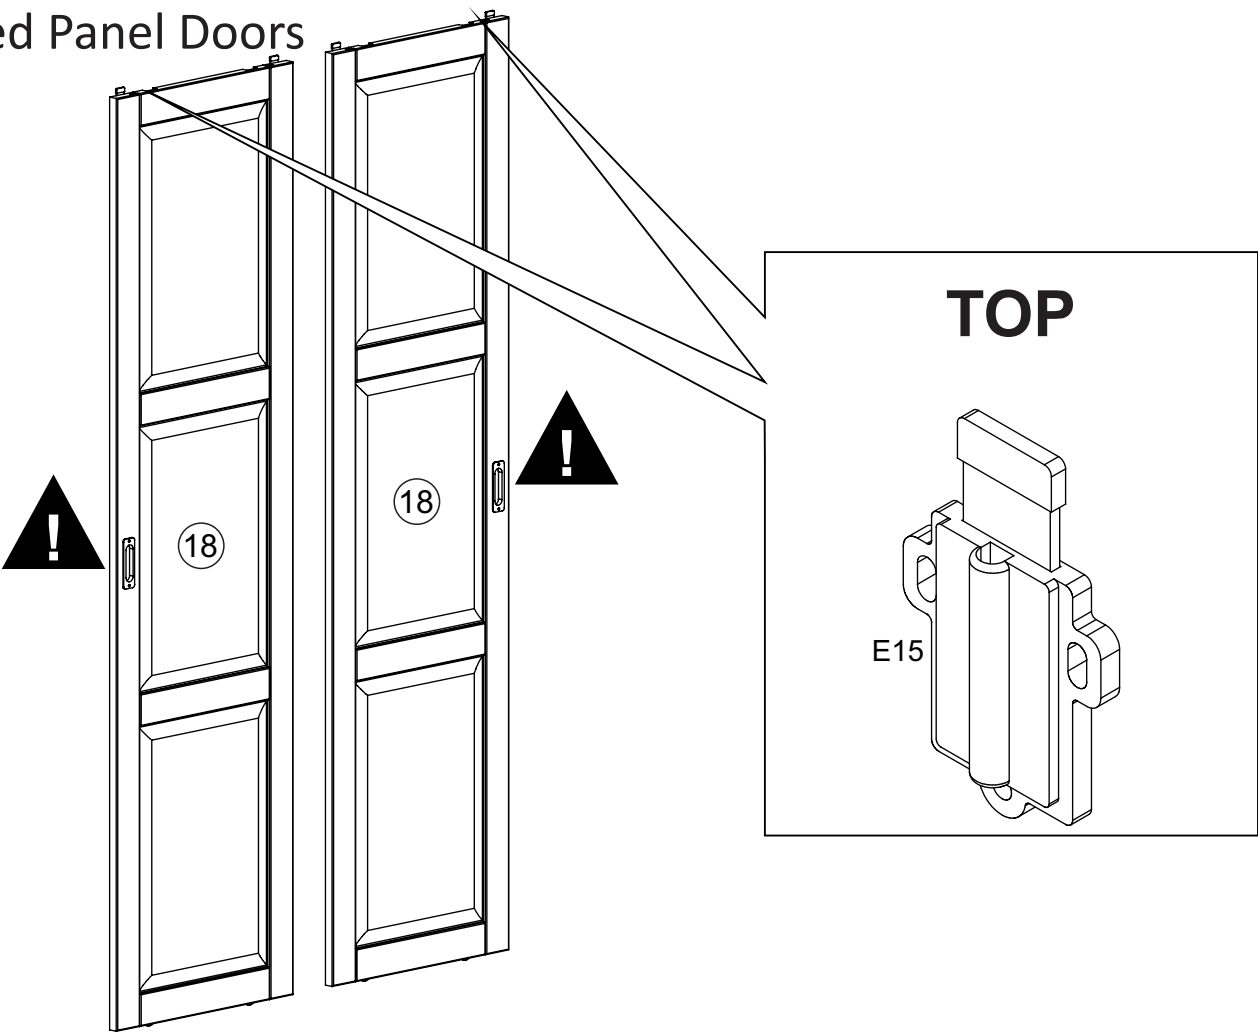


13) Raised Panel Doors

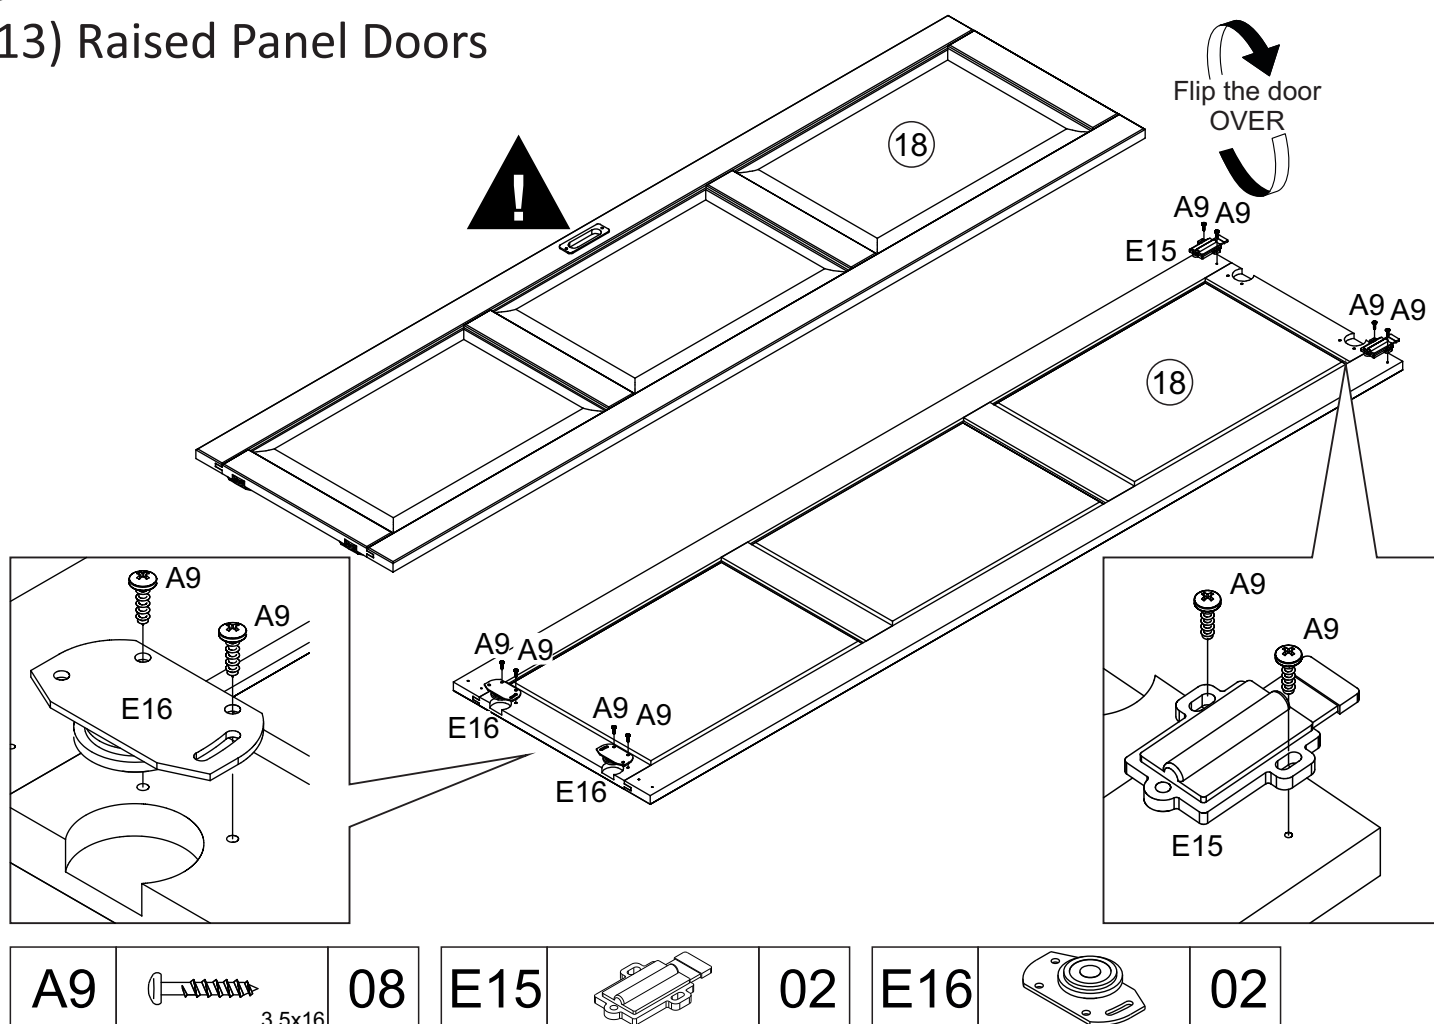


14) Raised Panel Doors

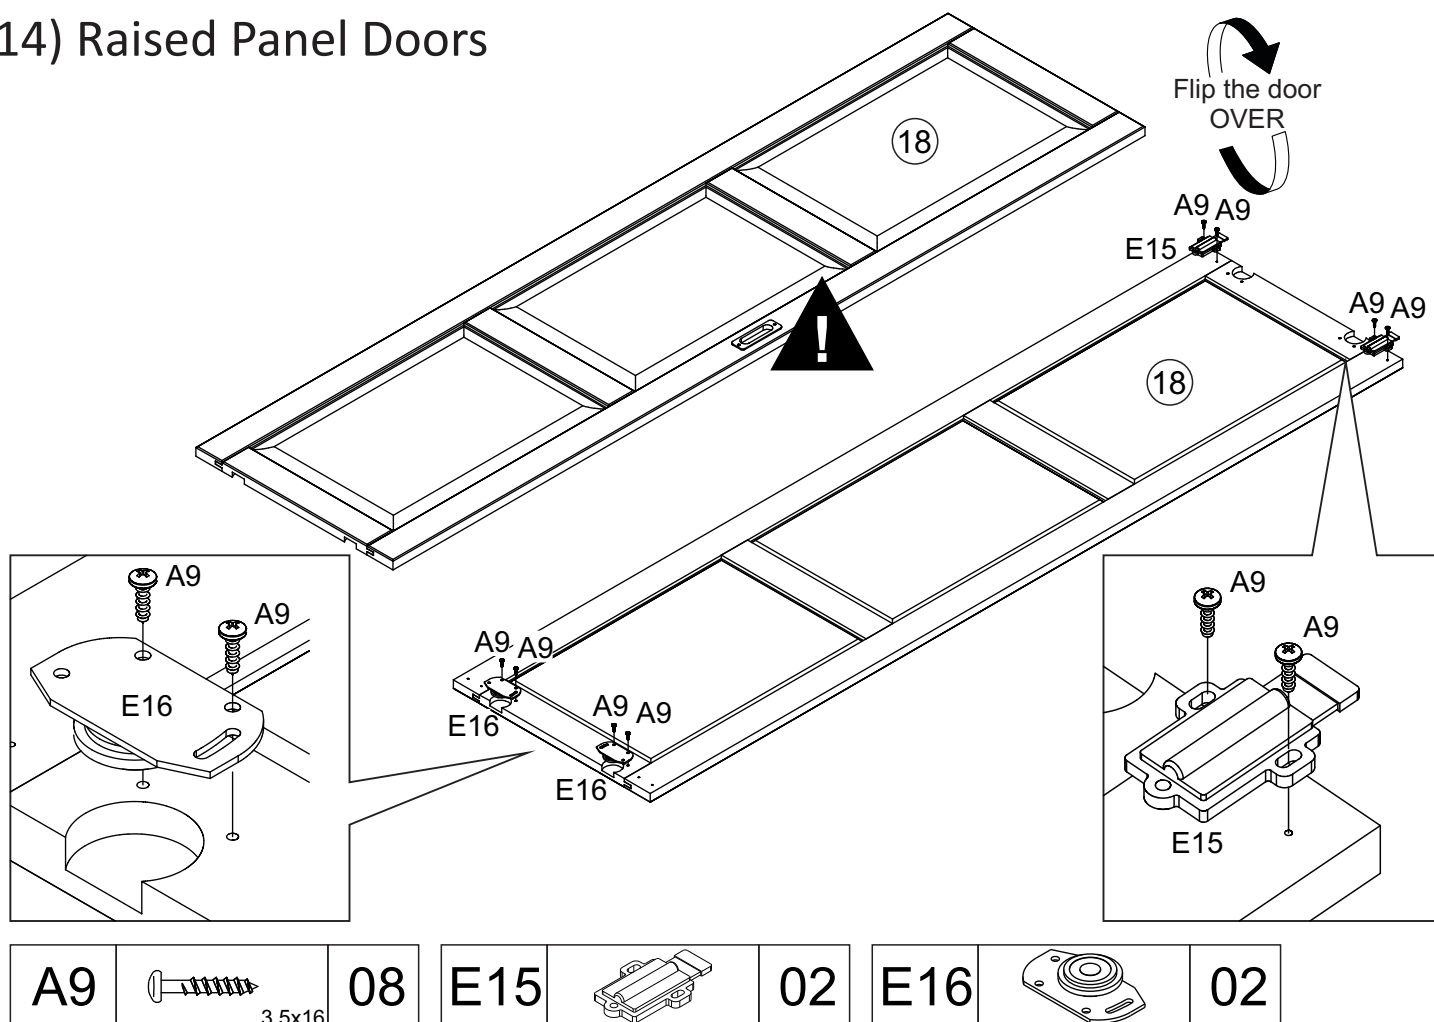


15) Raised Panel Doors

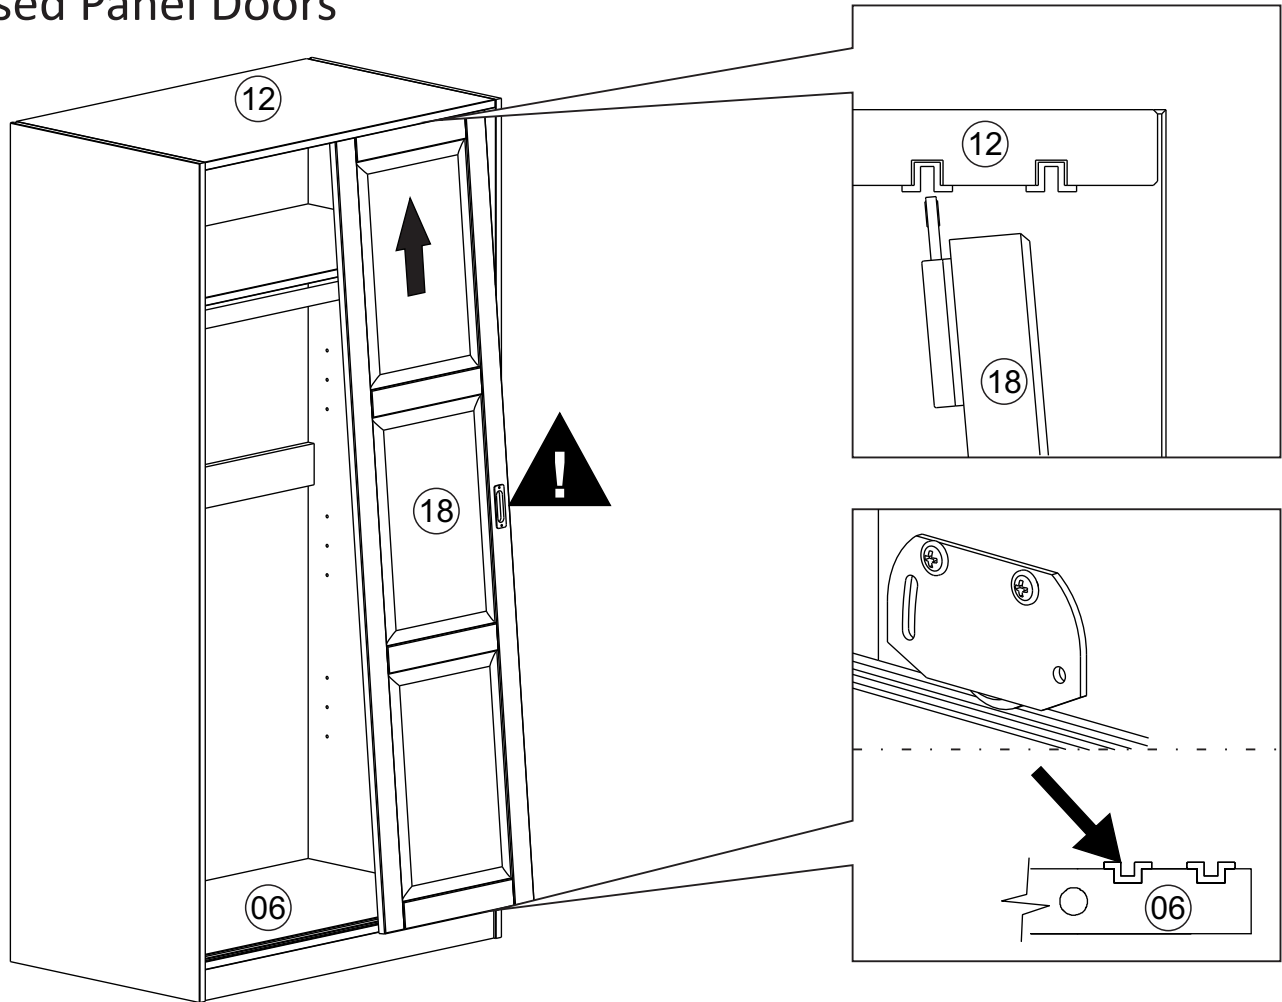

16) Raised Panel Doors

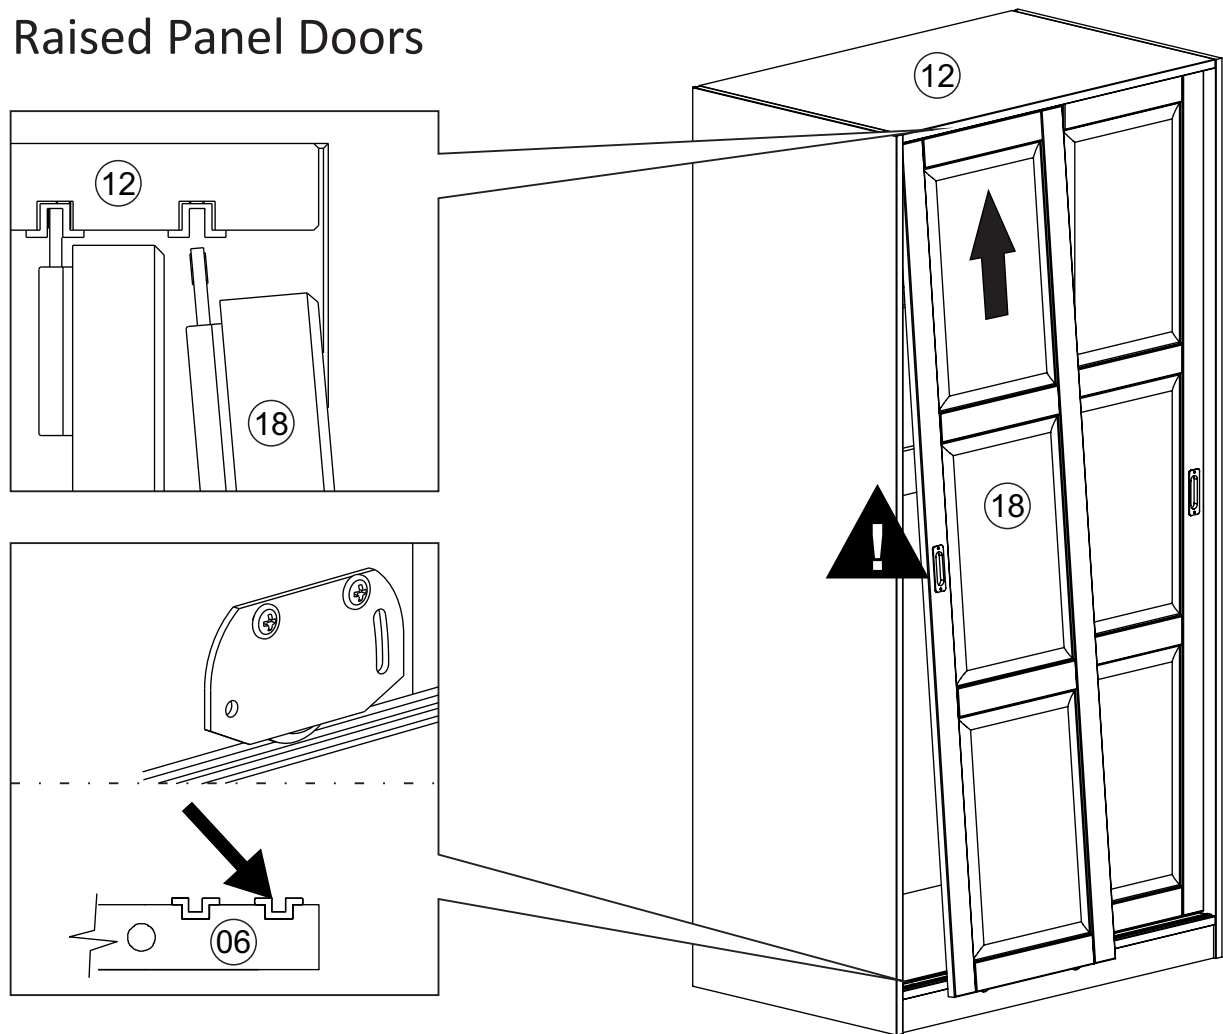


11) Louvered Doors

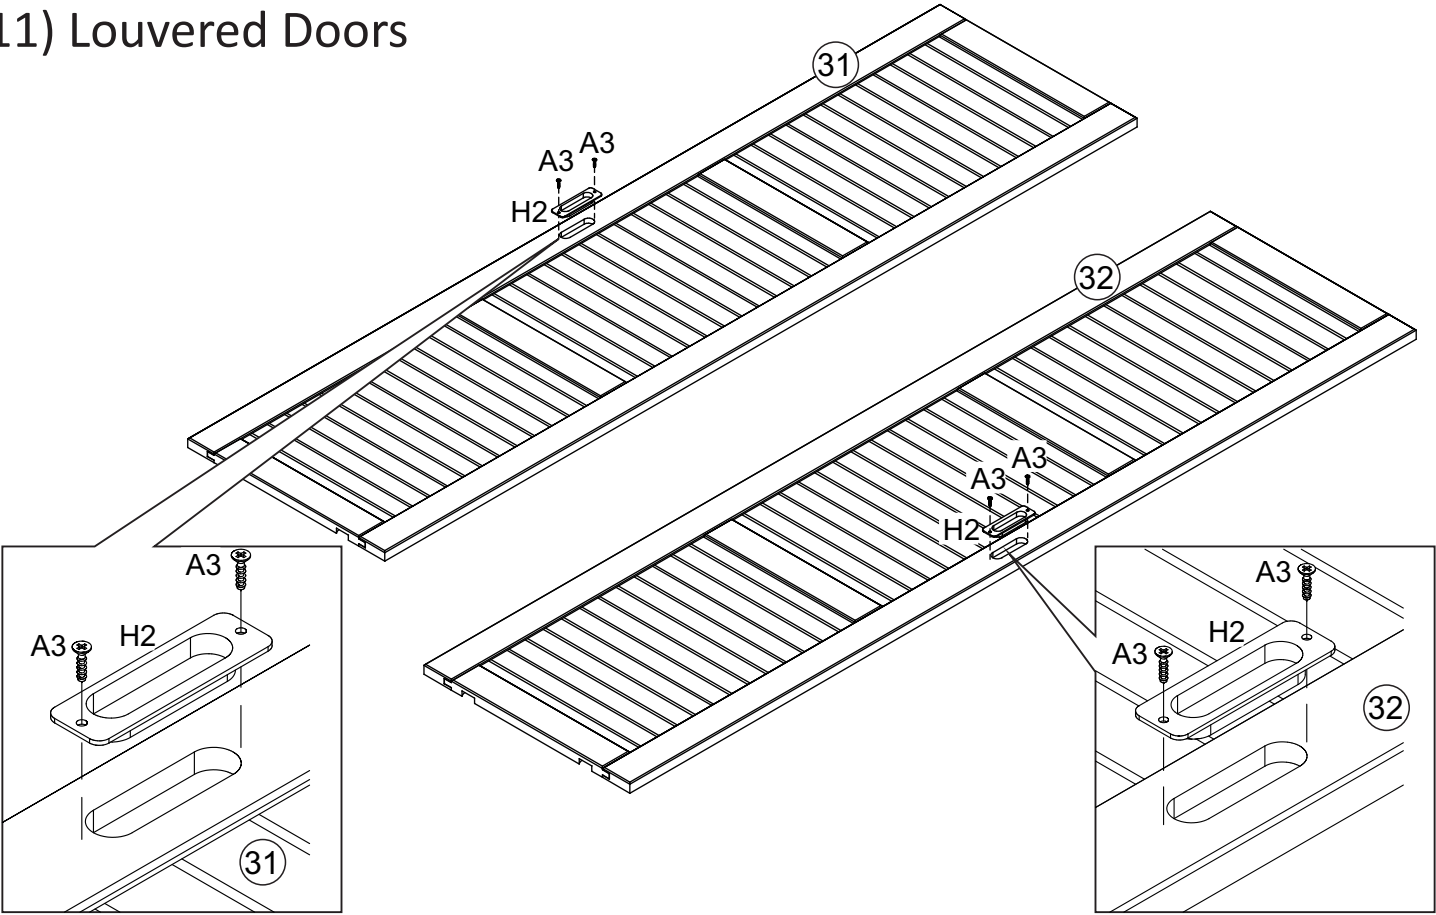


H2		02	A3		04
3.0x16					

12) Louvered Doors

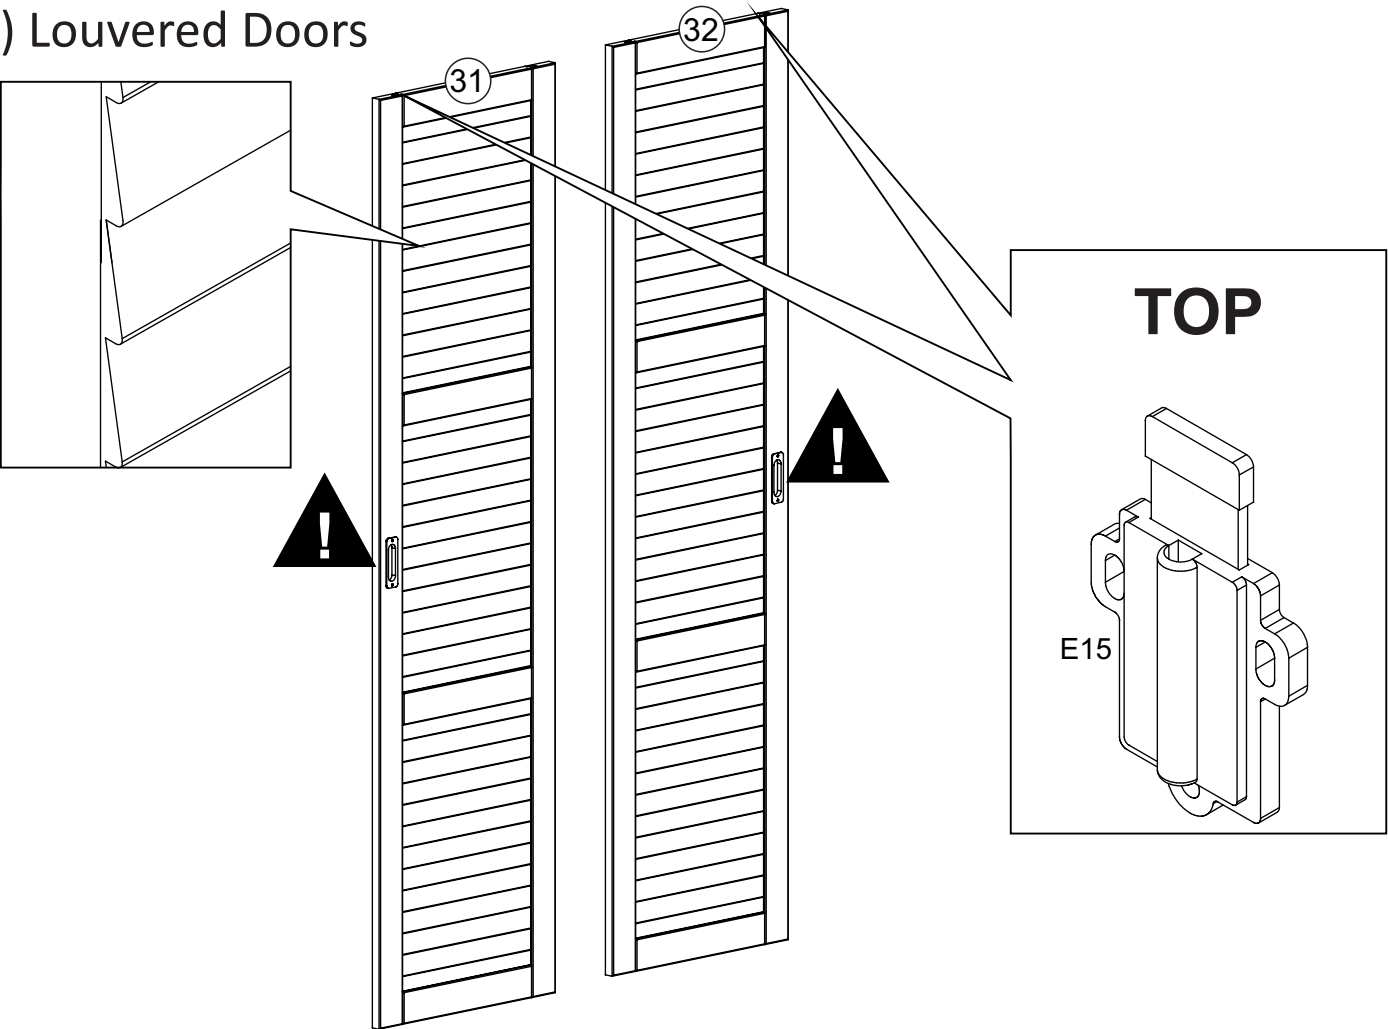


13) Louvered Doors

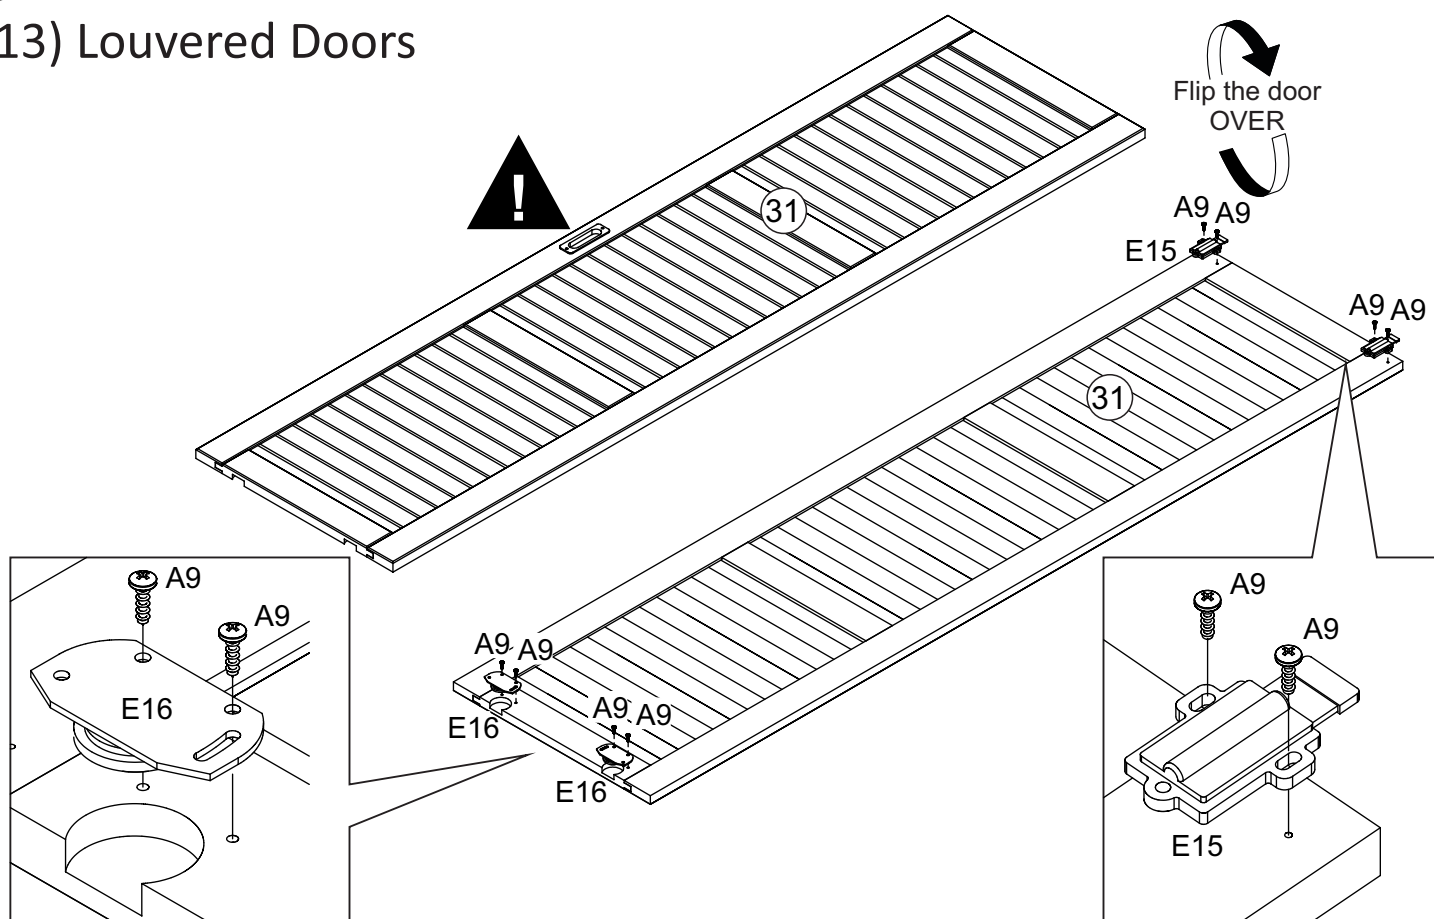


A9		08	E15		02	E16		02
----	--	----	-----	--	----	-----	--	----

14) Louvered Doors

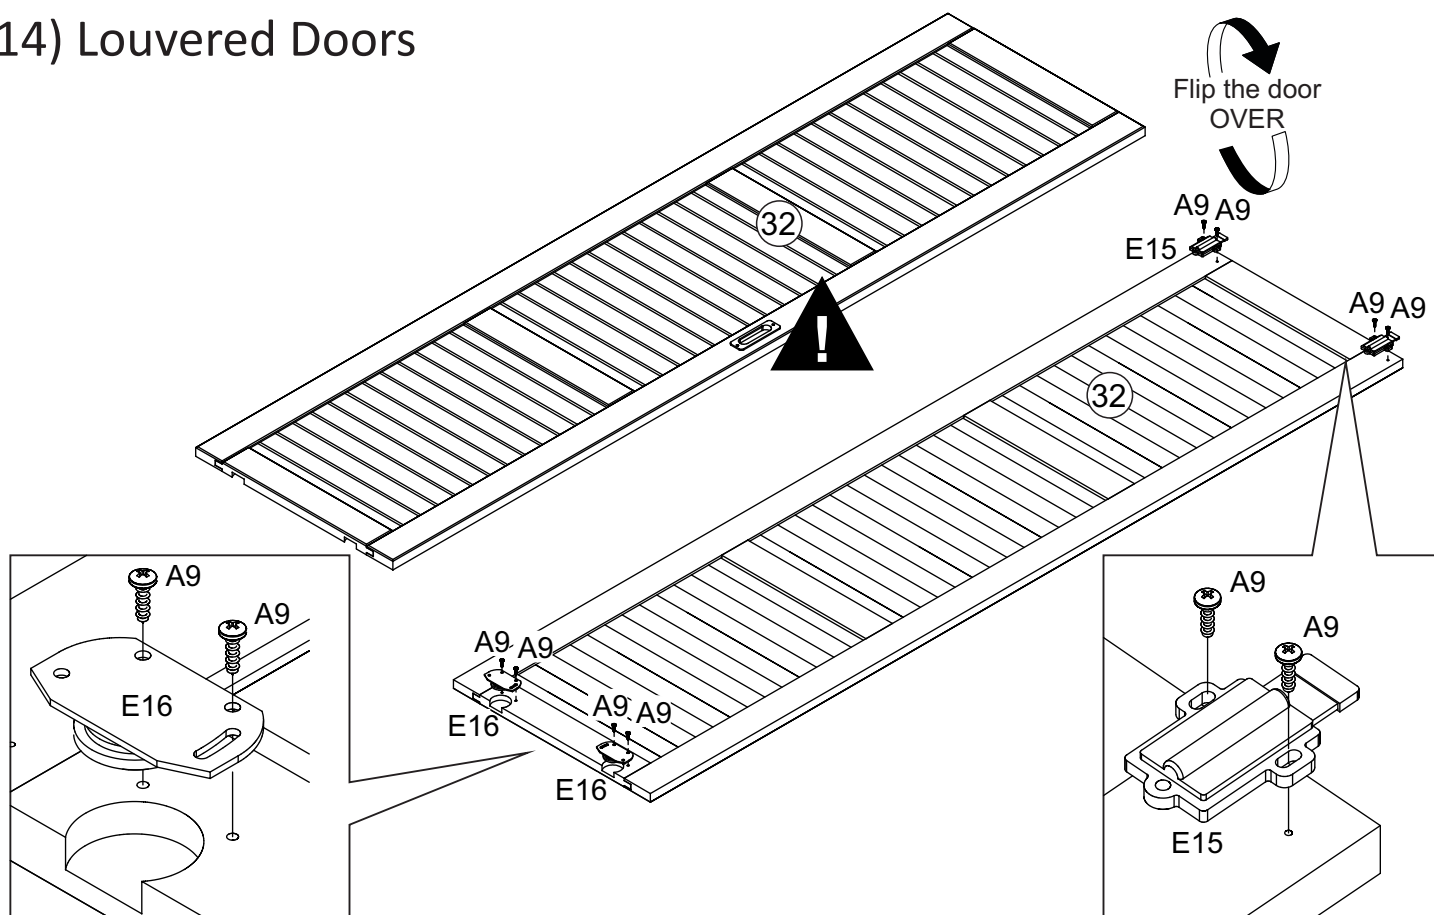


A9		08	E15		02	E16		02
----	---	----	-----	---	----	-----	---	----


15) Louvered Doors

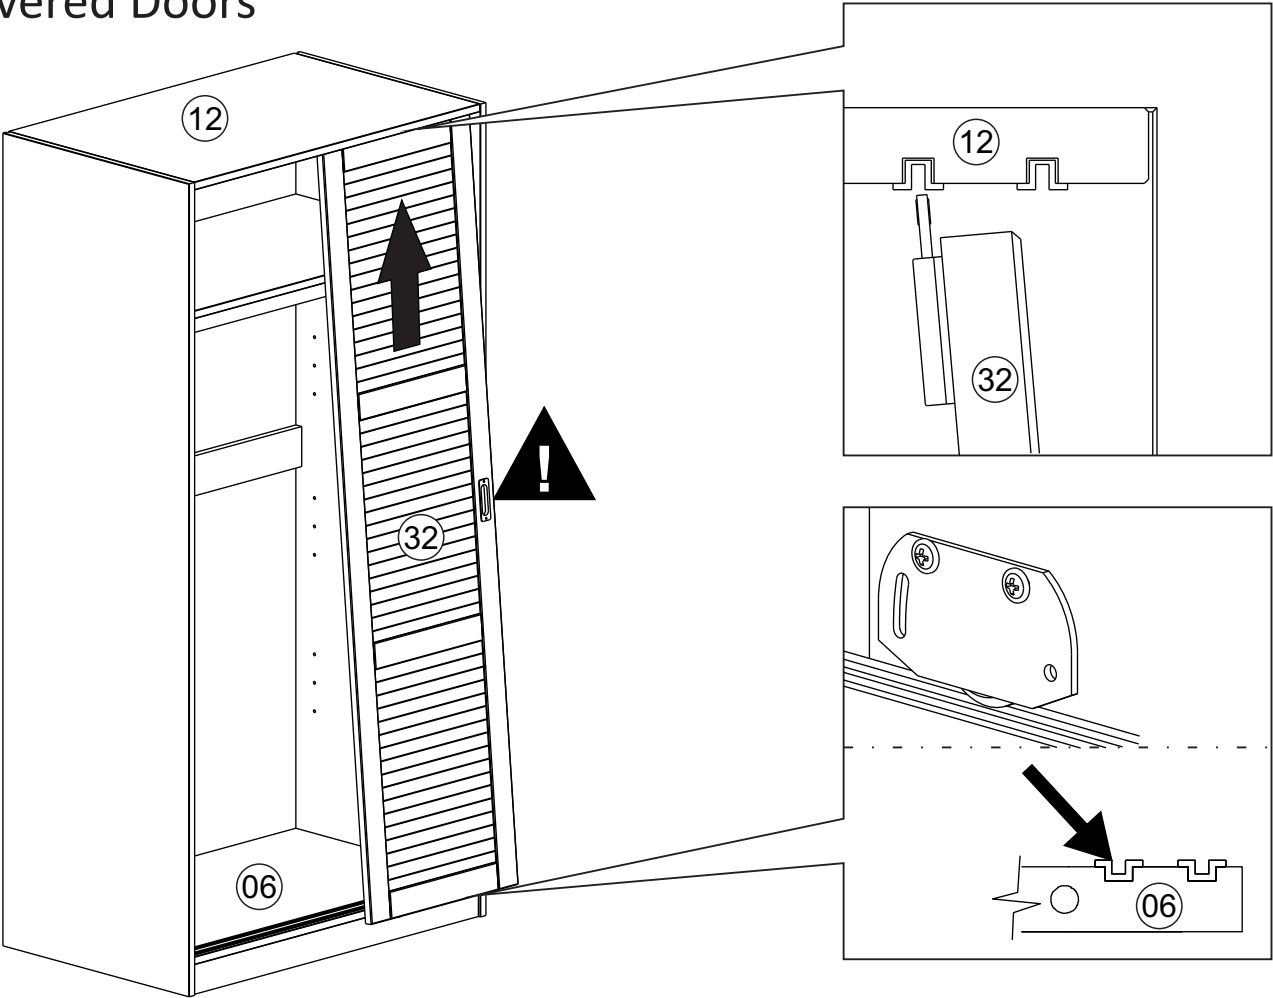


16) Louvered Doors

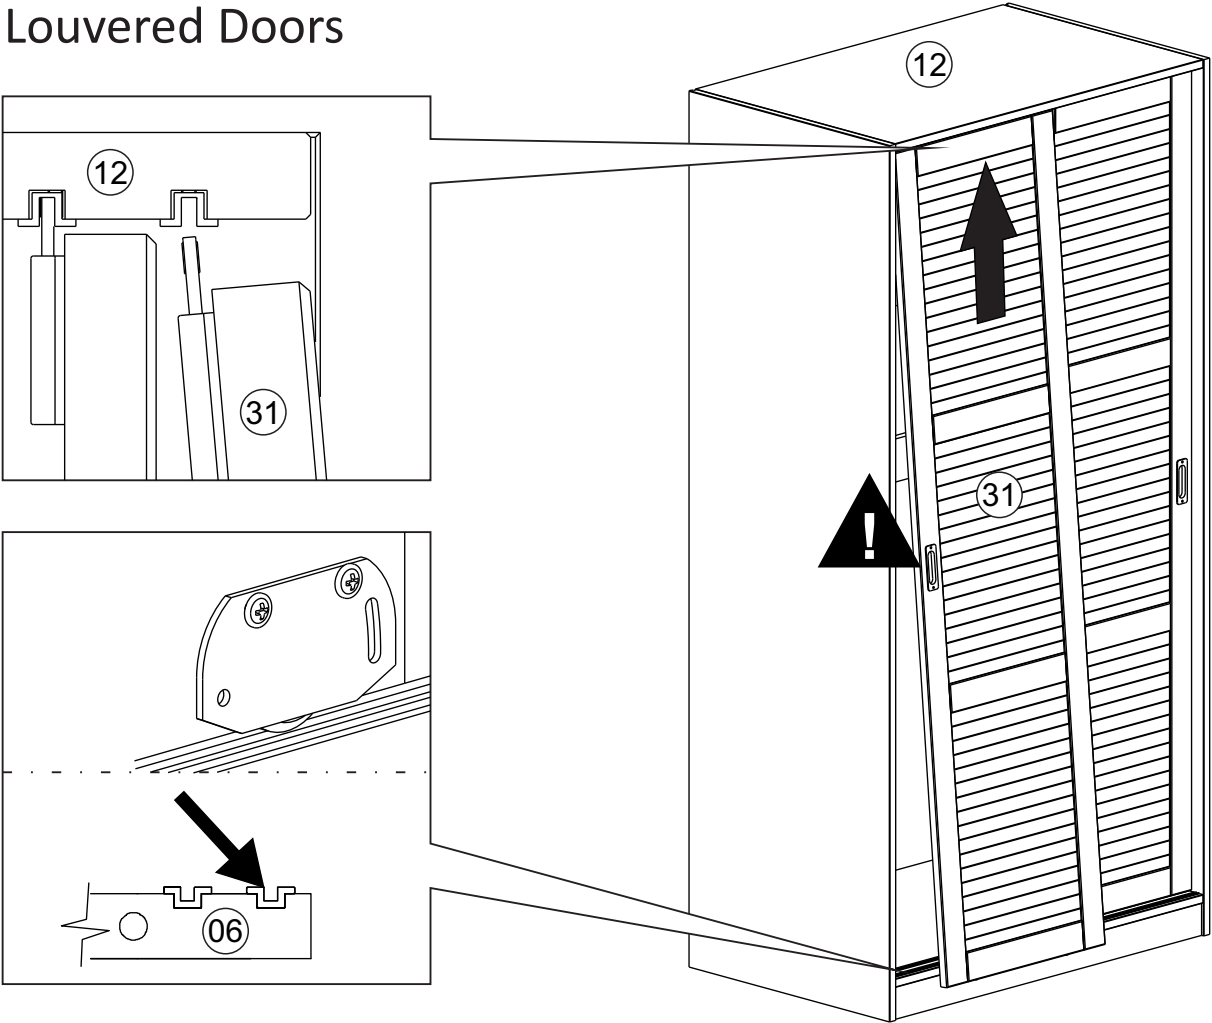


11) Mirrored Doors

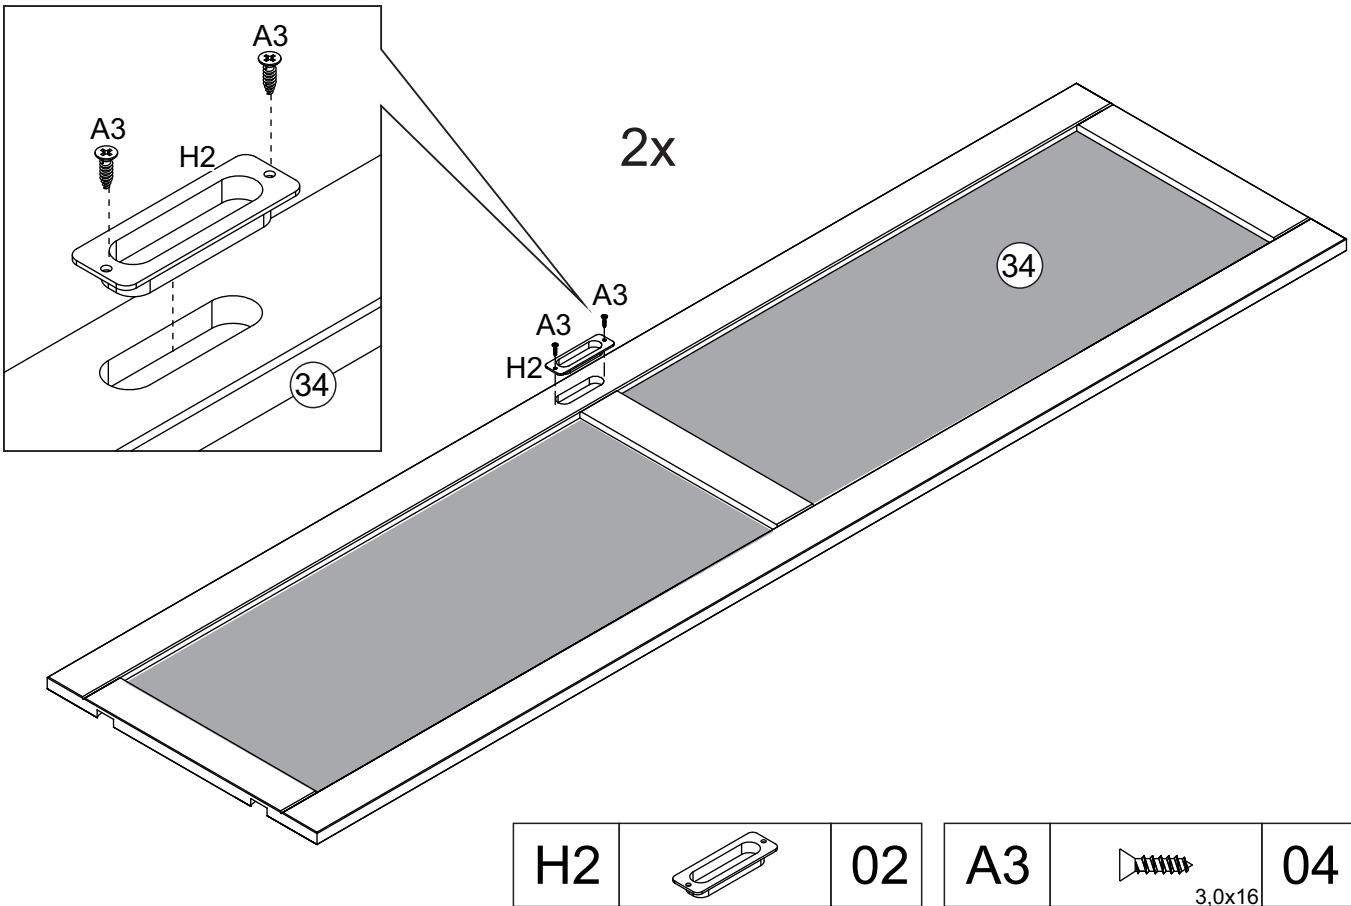


12) Mirrored Doors

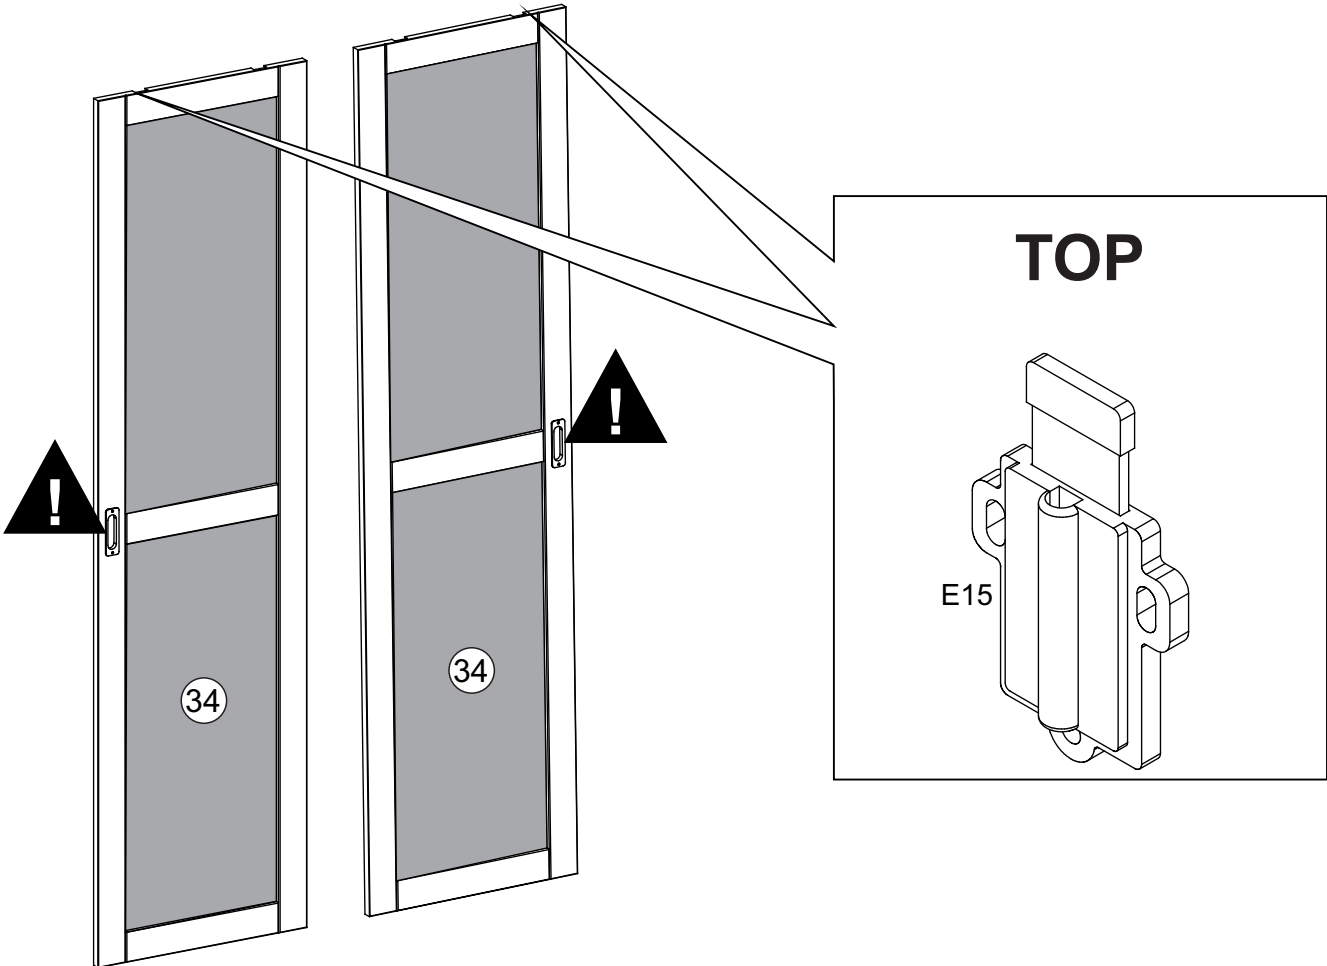


13) Mirrored Doors

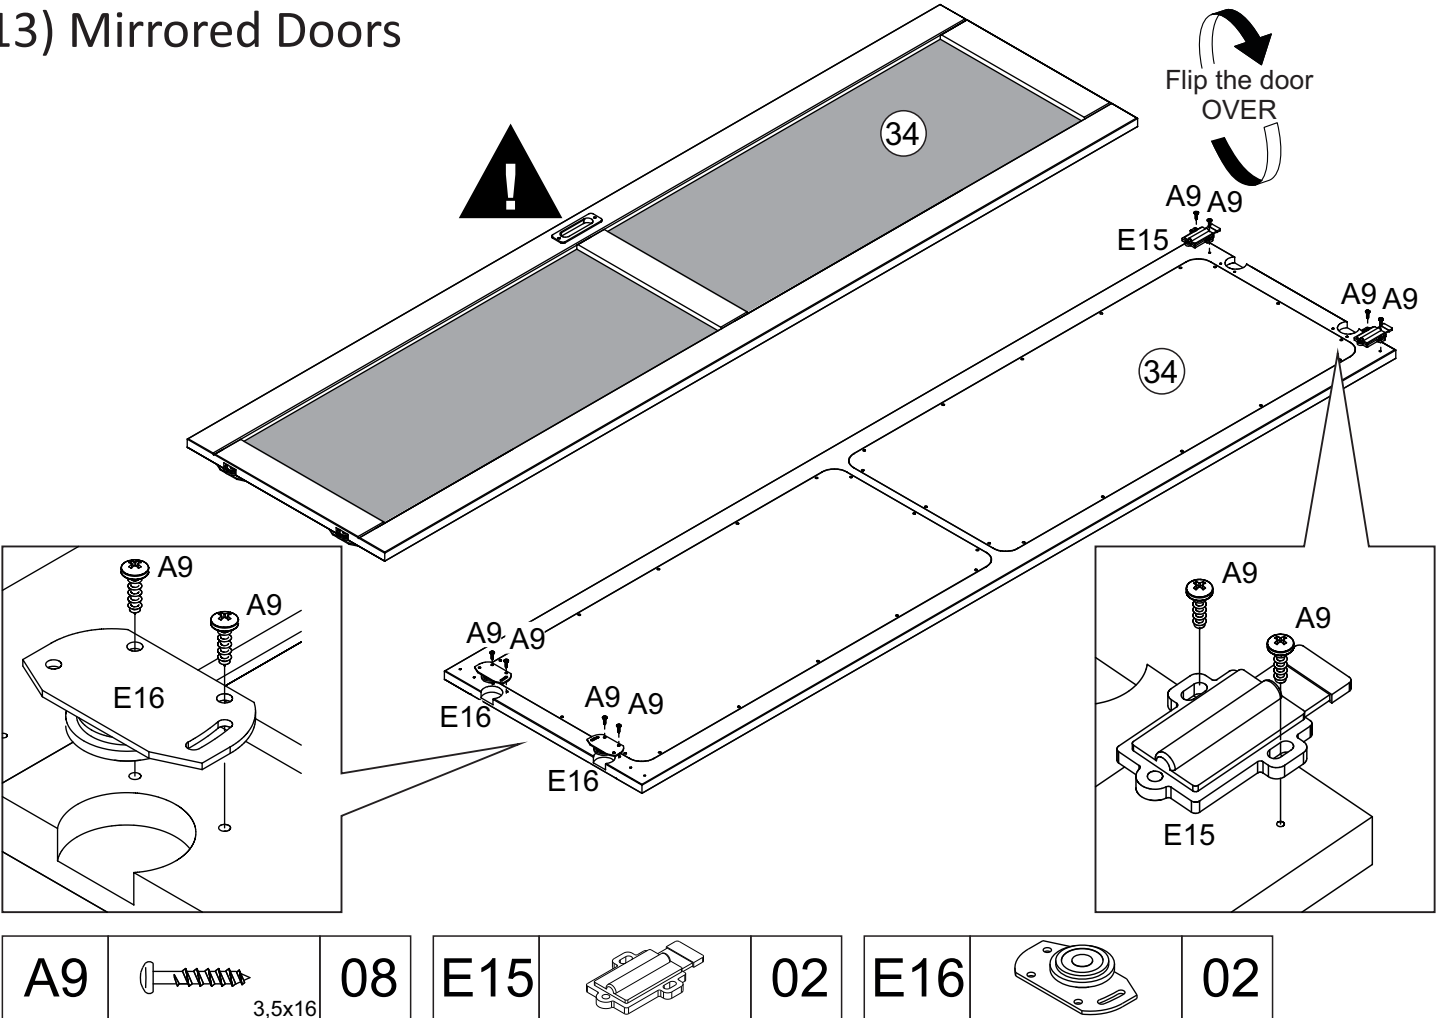


14) Mirrored Doors

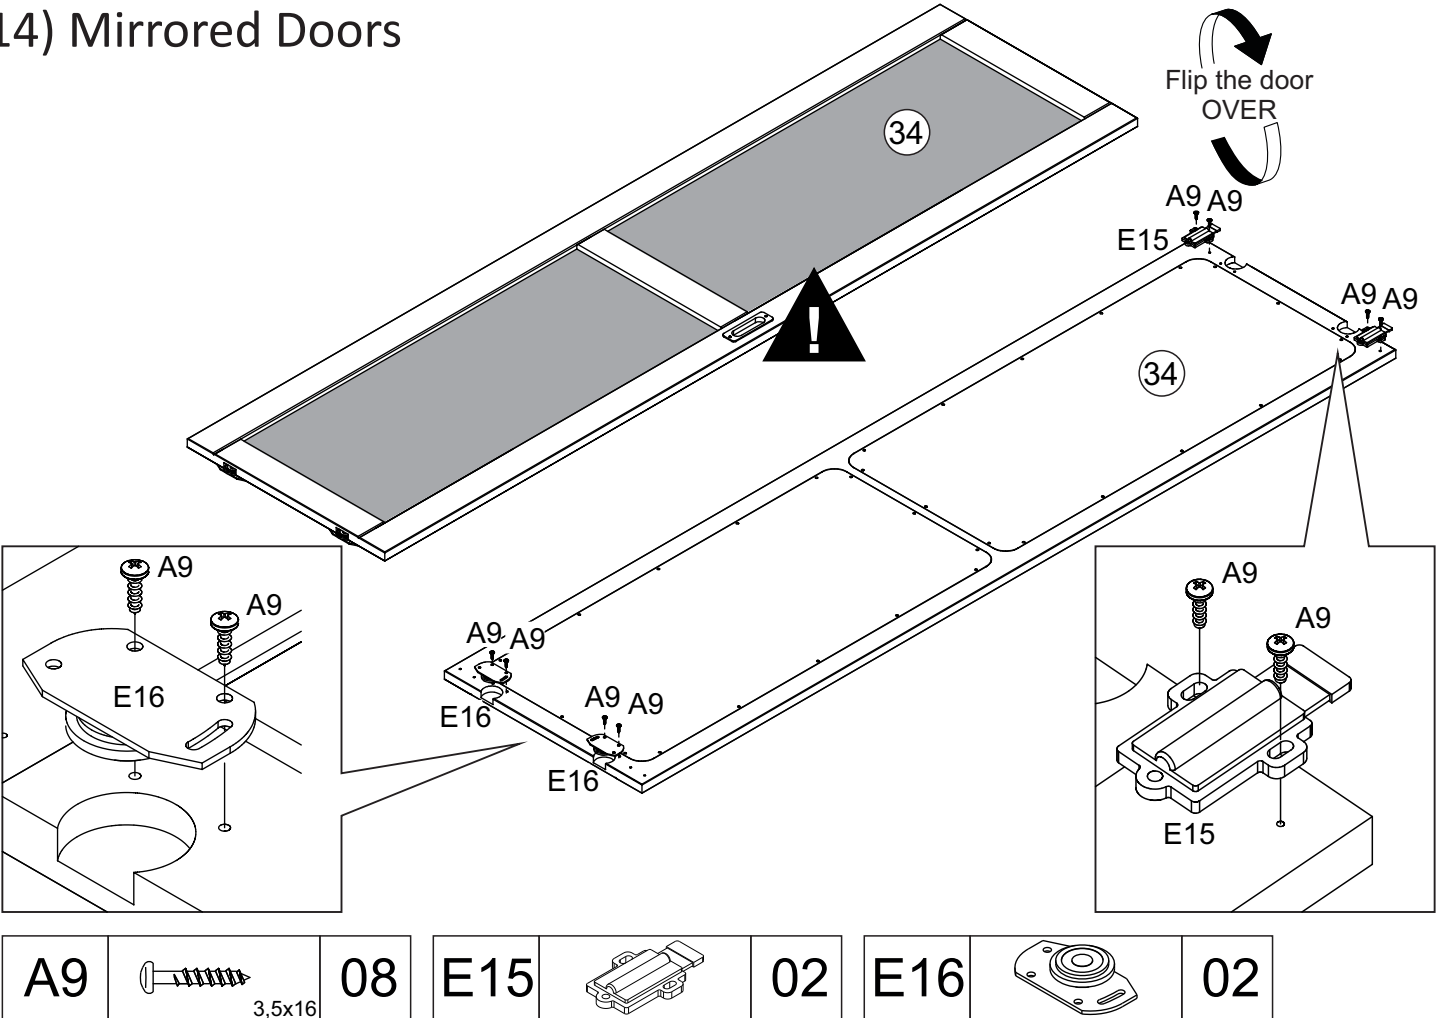

15) Mirrored Doors


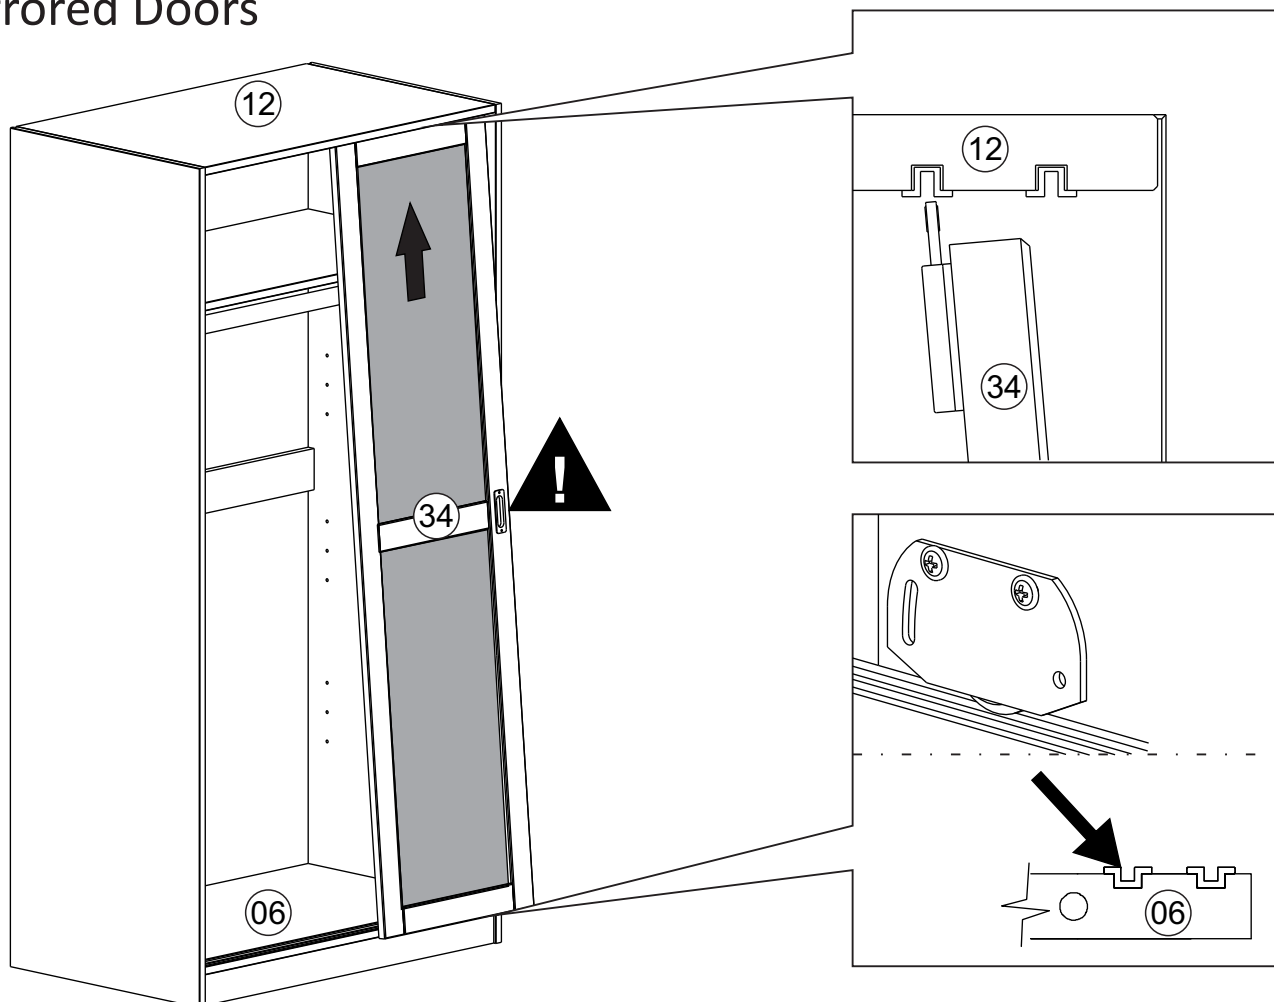


16) Mirrored Doors






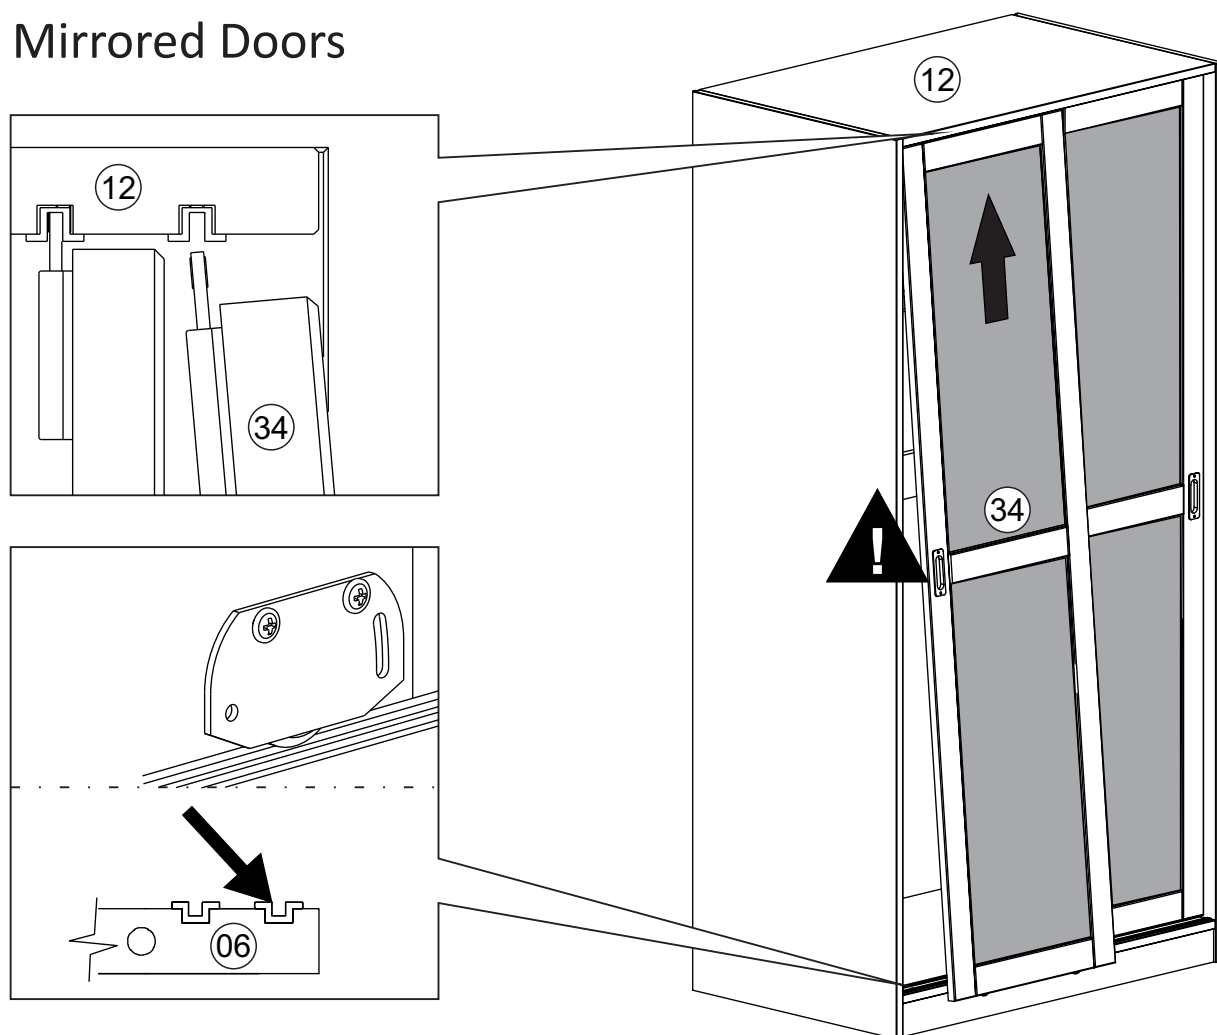



17)

Door adjustment

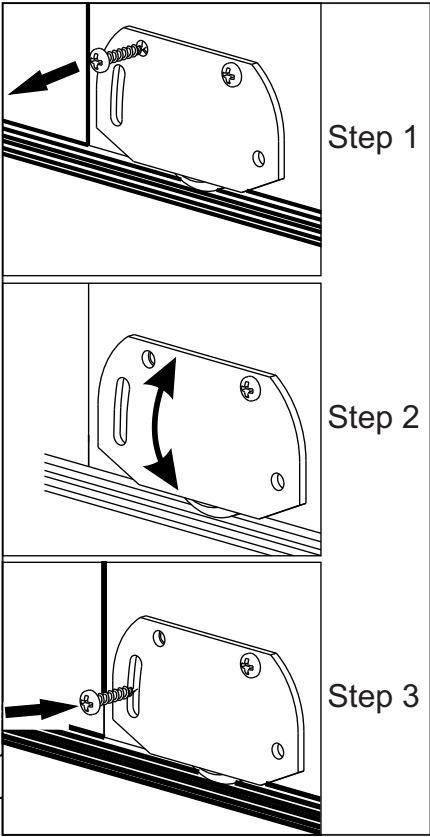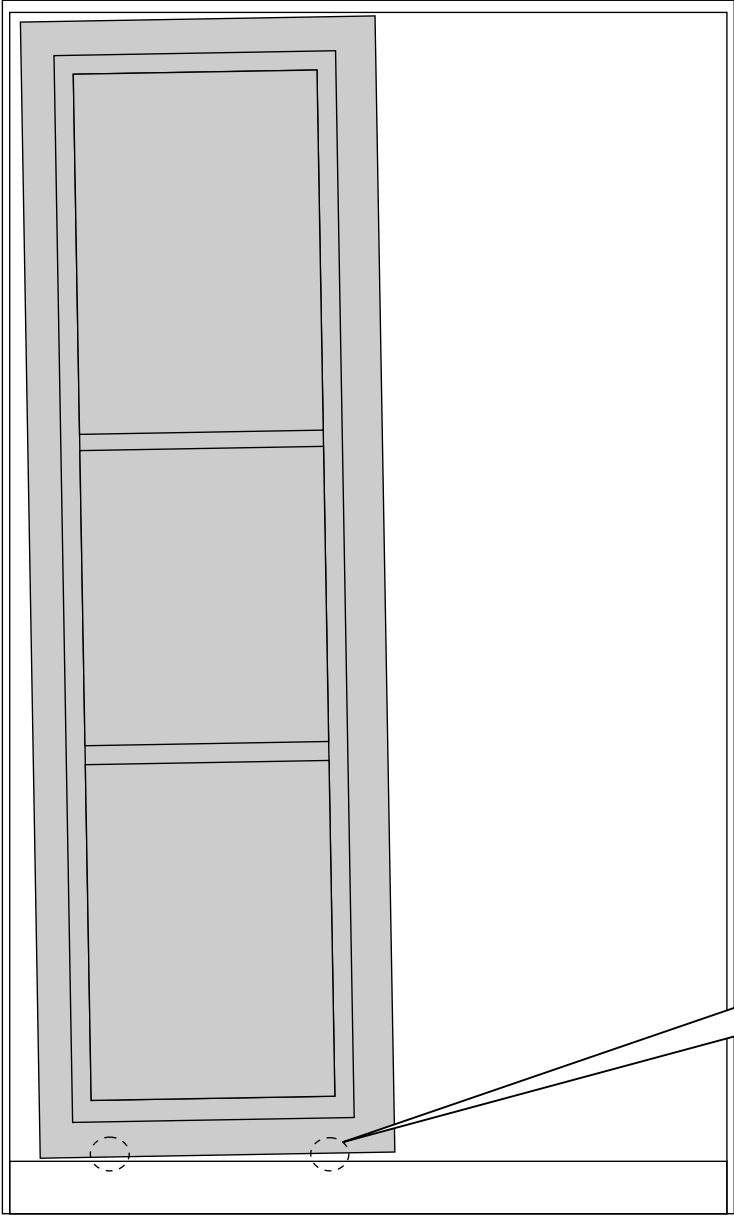

18) **FURNITURE TIPOVER PREVENTION KIT INSTALLATION**

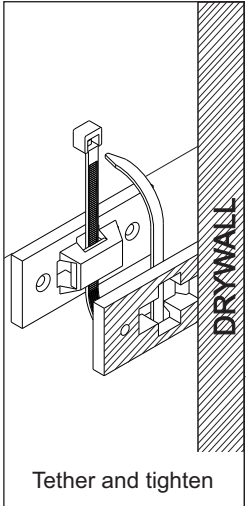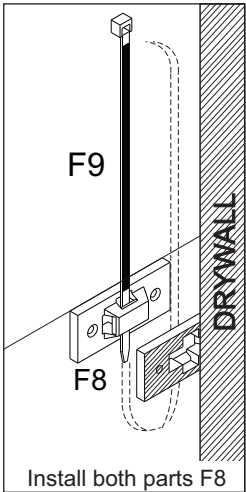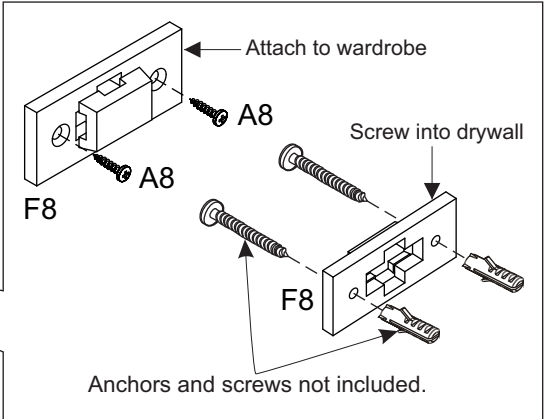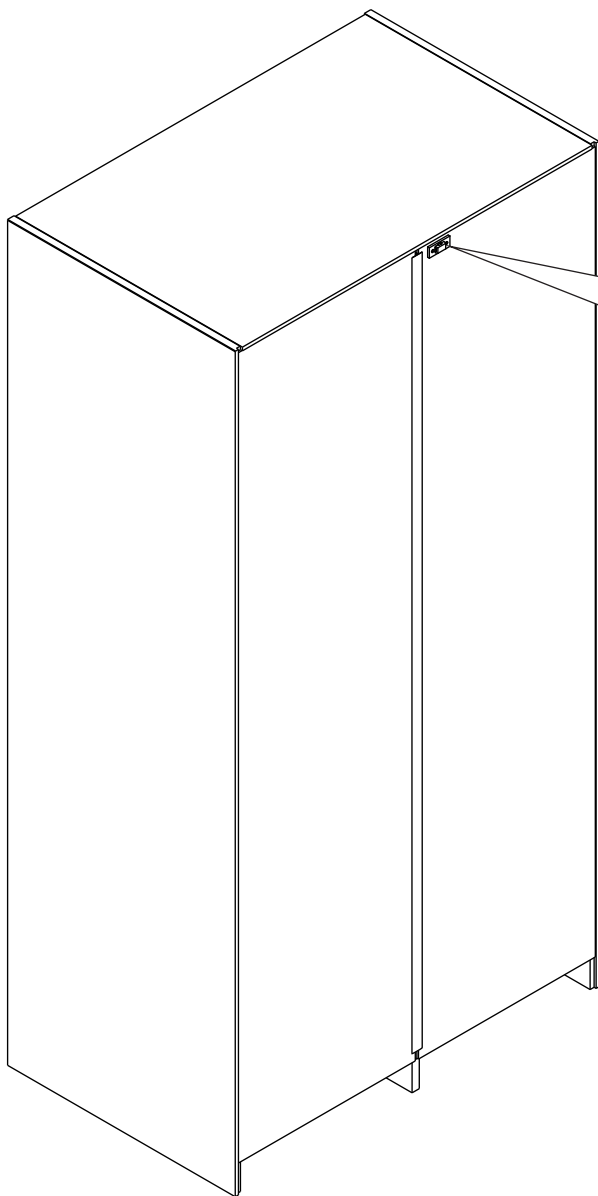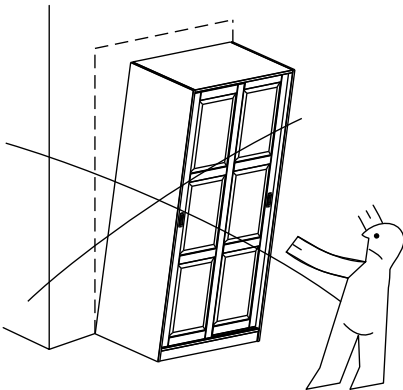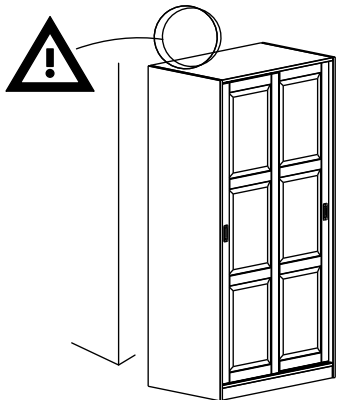

A8	 3,0x20	02
F8		02
F9		01