


INSTALLATION
Product Manual

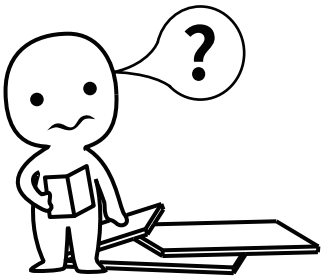

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

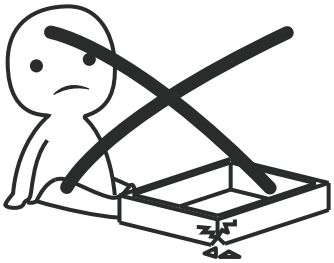


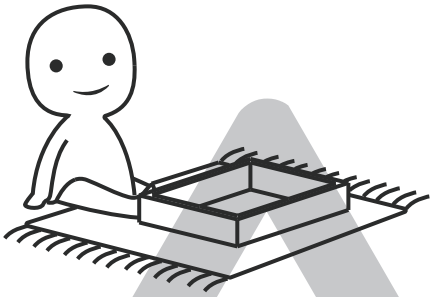

AVOID SCRATCHES!


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



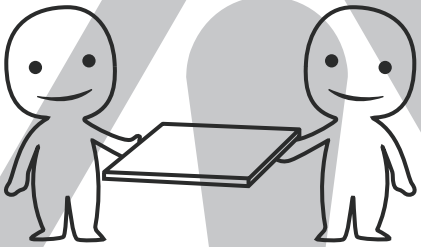

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

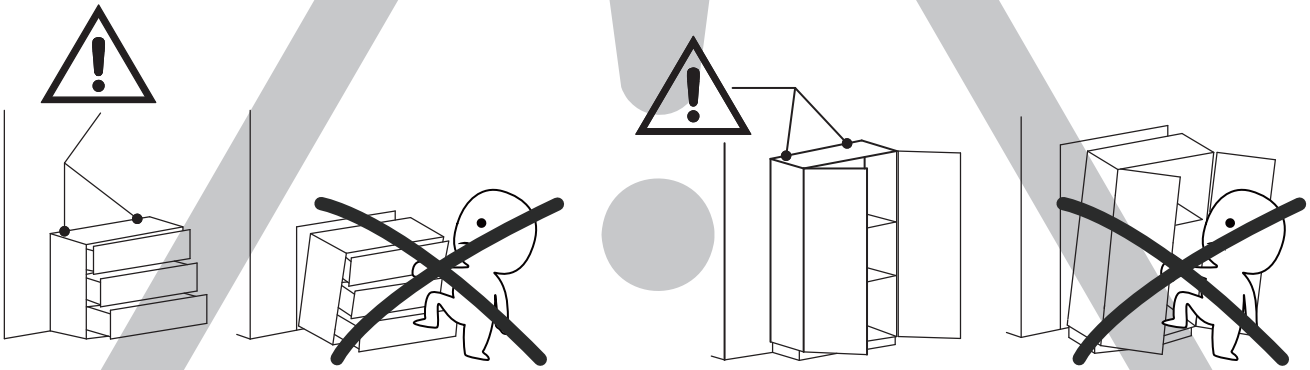

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.



For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

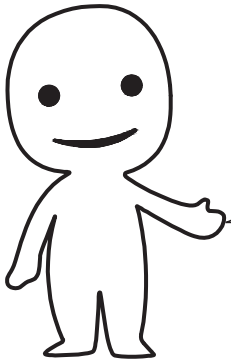

Please prepare the following tools

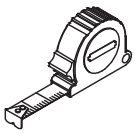

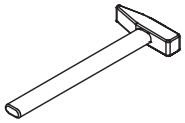



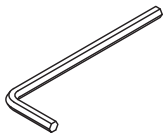










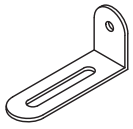



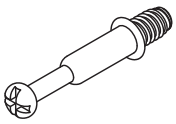

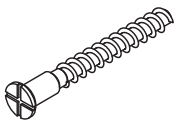






When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


A x 120	B x 120	C x 78	D x 184	E x 64
 CRB1595A	 CRA0635B	 CRF0630A		 CRC0540A



F x 52	G x 152	H x 8	J x 12	K x 70
 CRD3512A	 CRD3514A	 CRE0418A	 CRE0406A	 CRD0314A






L x 70	M x 4	N x 4	P x 20	Q x 9
			 CRE0316A	

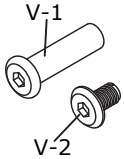
R x 2	S x 8	T x 9	U x 8	V x 12
		 M8	 DGA861C	

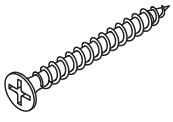
W x 10	X x 2	Y x 4	Z x 4	AA x 64
 96-104mm			 CRD3535A	 CRG0616A


AB x 8	AC x 10	AD x 9	AE x 12	AF x 4
 CRG0625A	 CRG0645A	 CRG0865A	 CRG0670A	

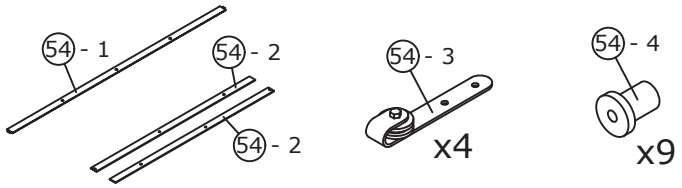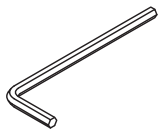AG x 10	54 x 1	AH x 1
		 M5

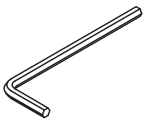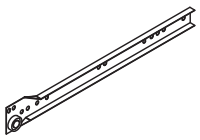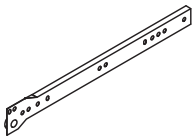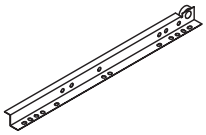AJ x 2	AK x 1	CL x 6	CR x 6	DL x 6
 M4	 M8	 WX1012A	 WX1012A	 WX1012A

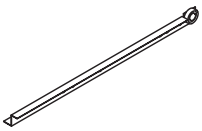DR x 6
 WX1012A

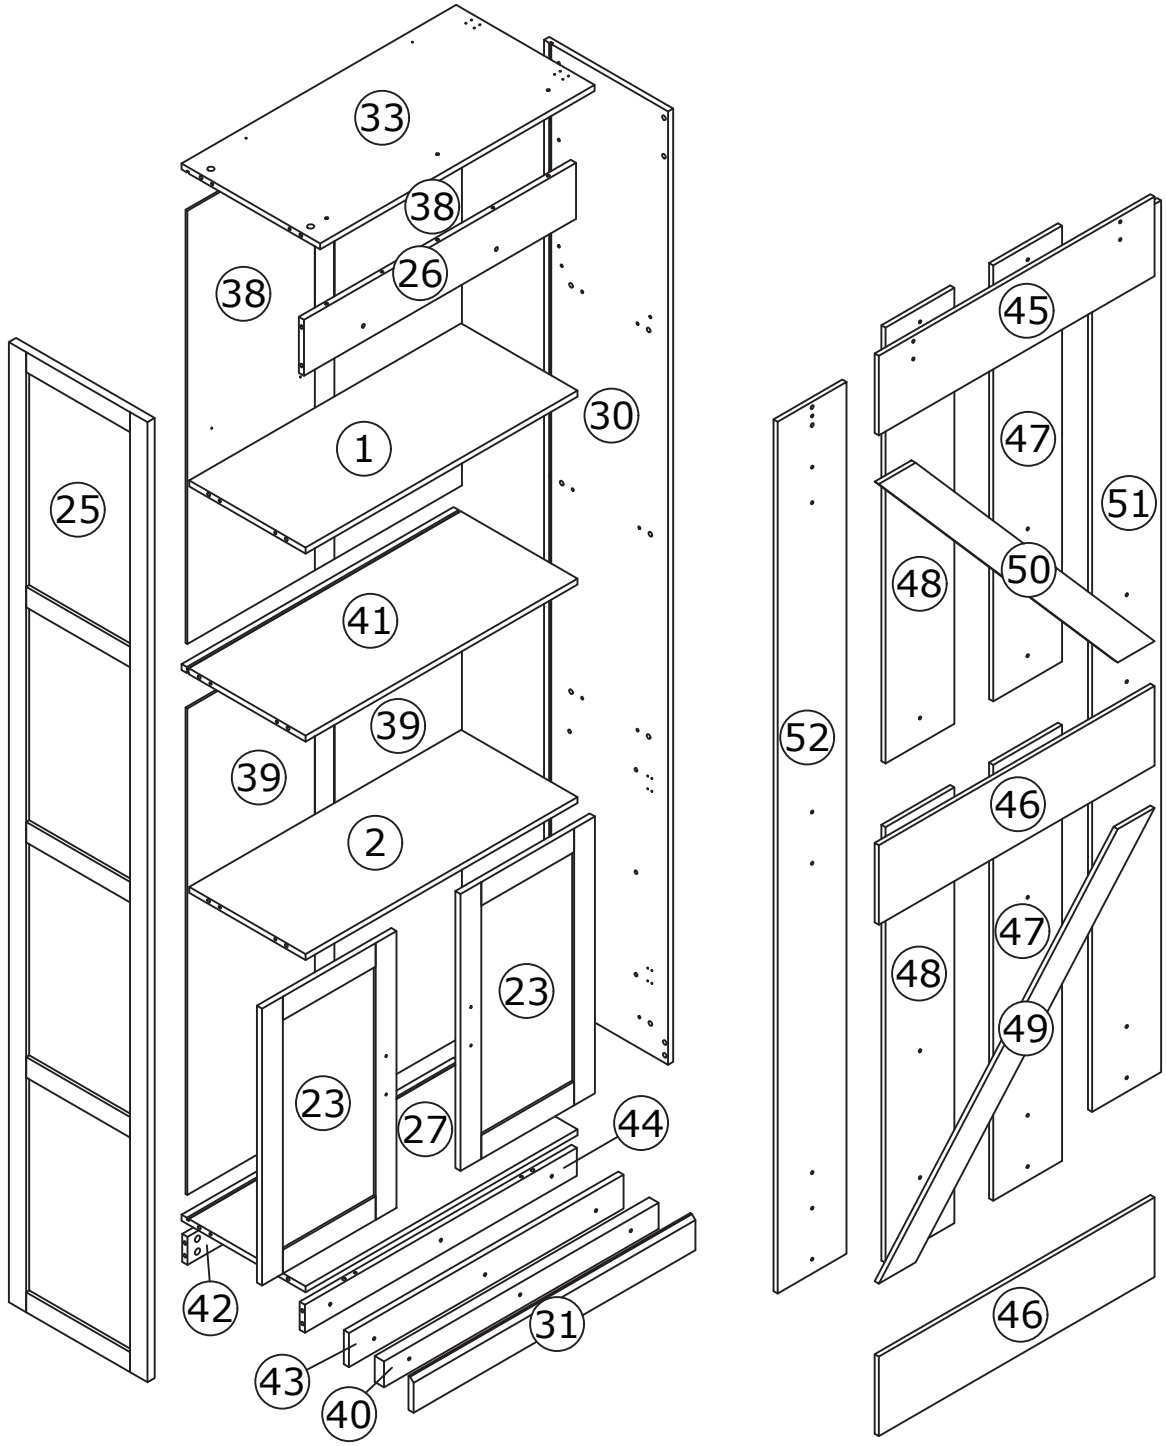

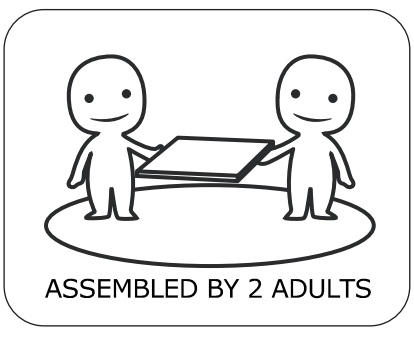

⚠WARNING







Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

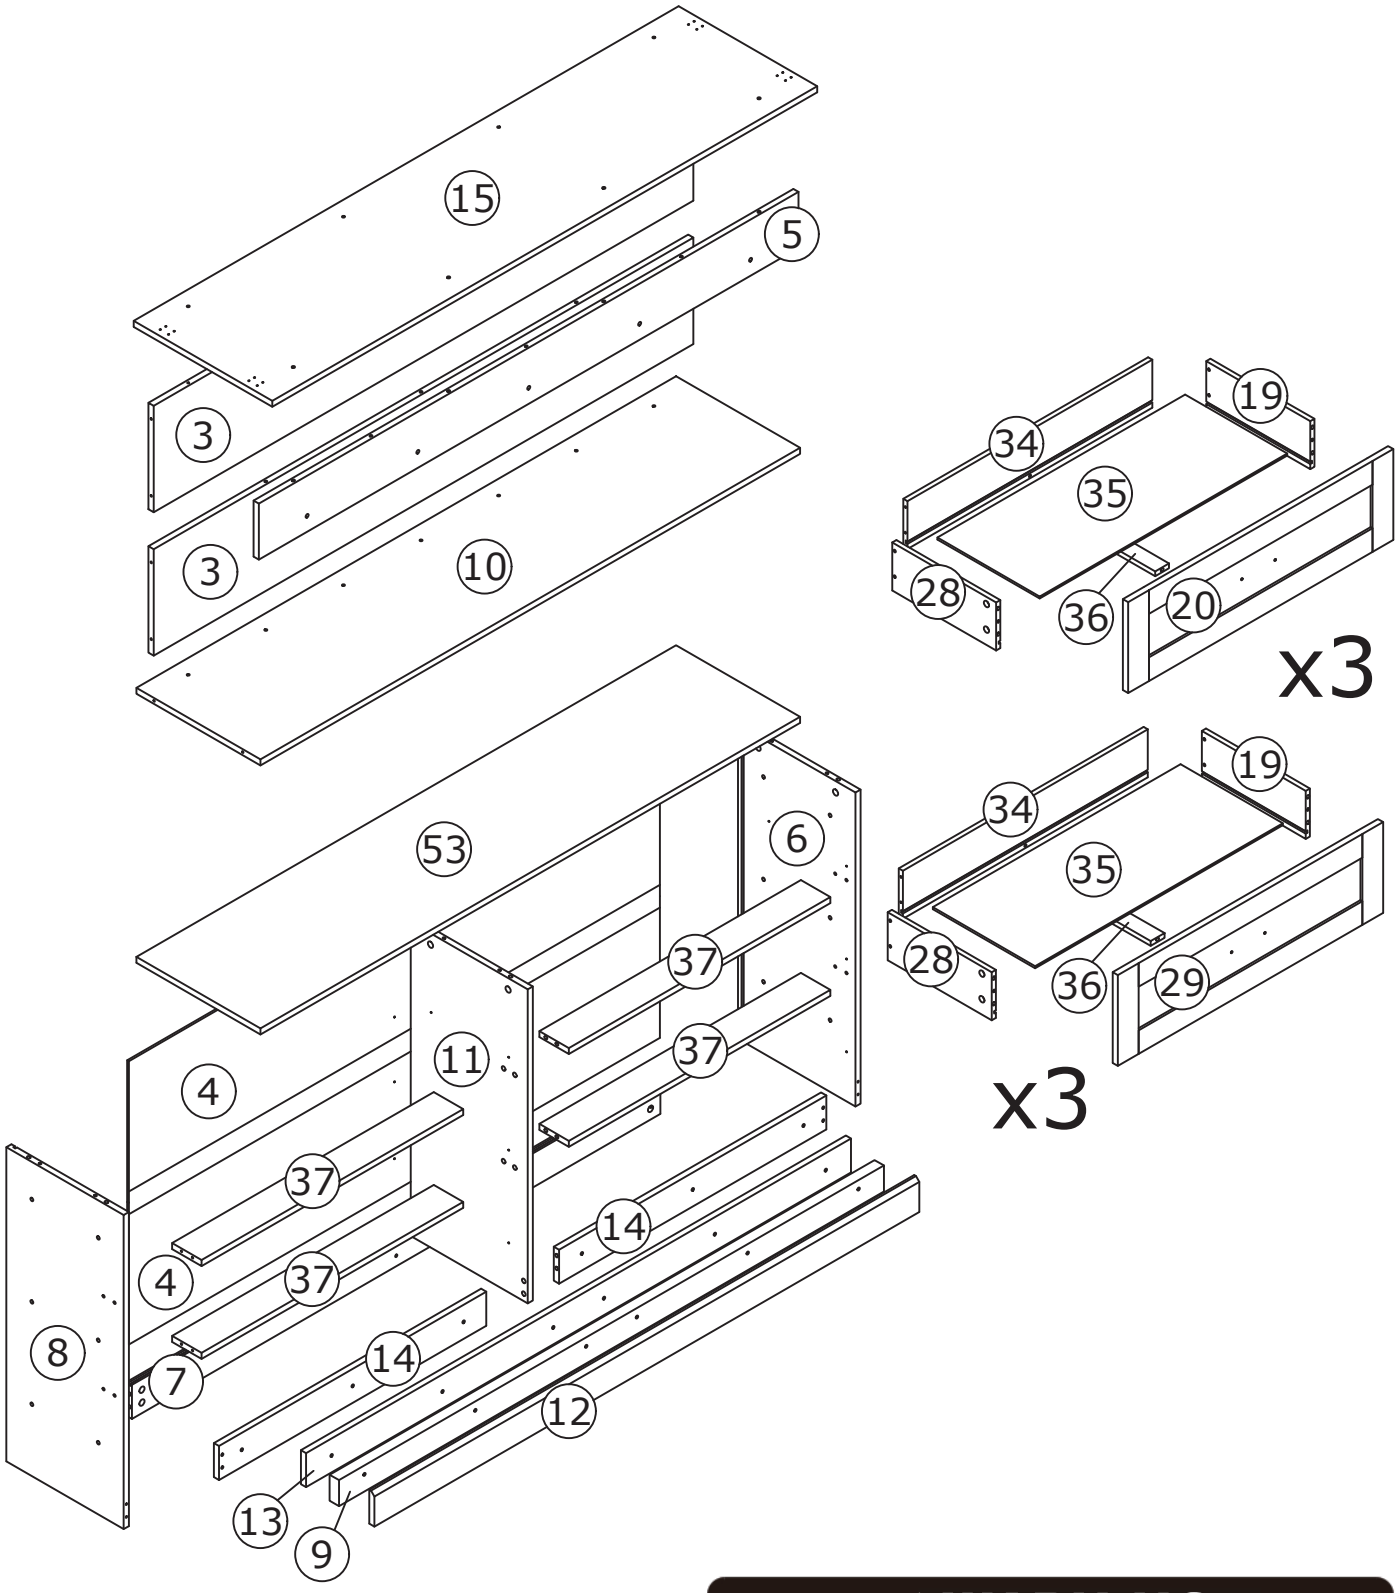

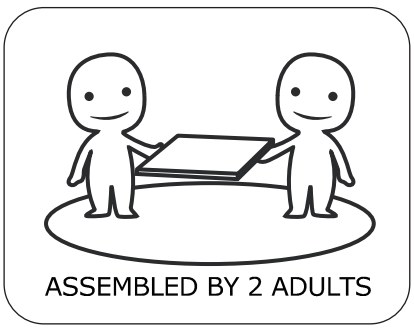


⚠WARNING





Children have died from furniture tipover.To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

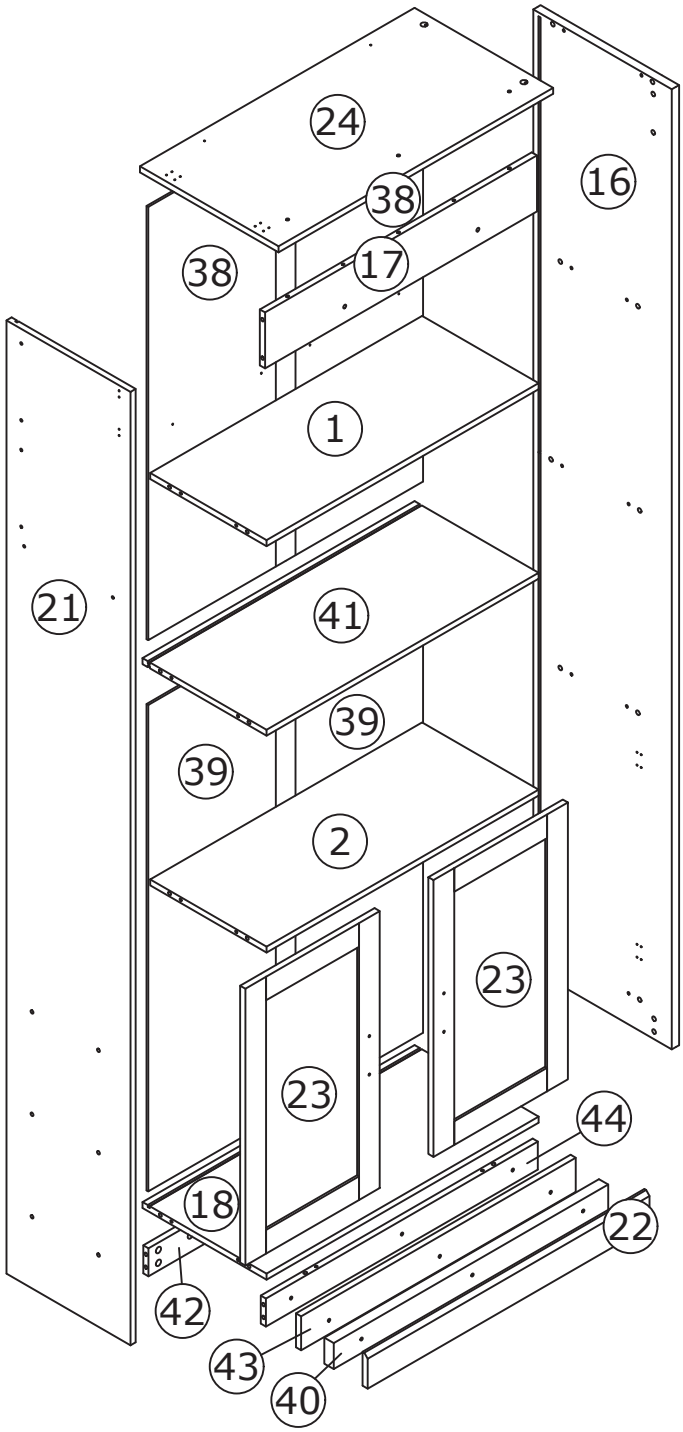

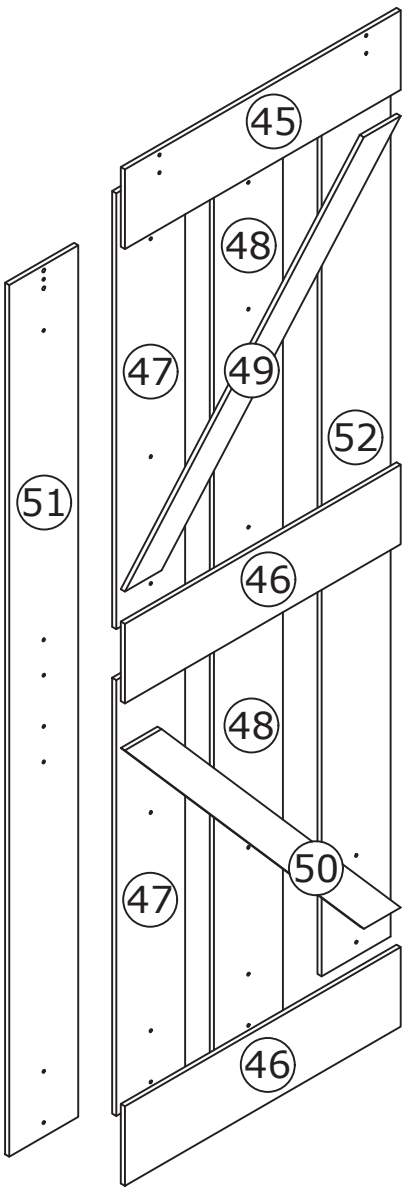

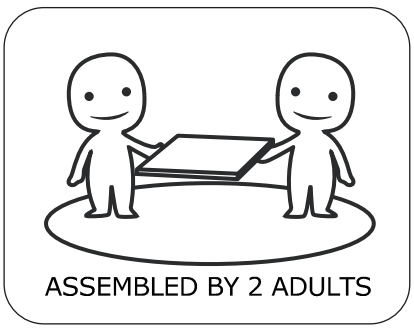


⚠WARNING





Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

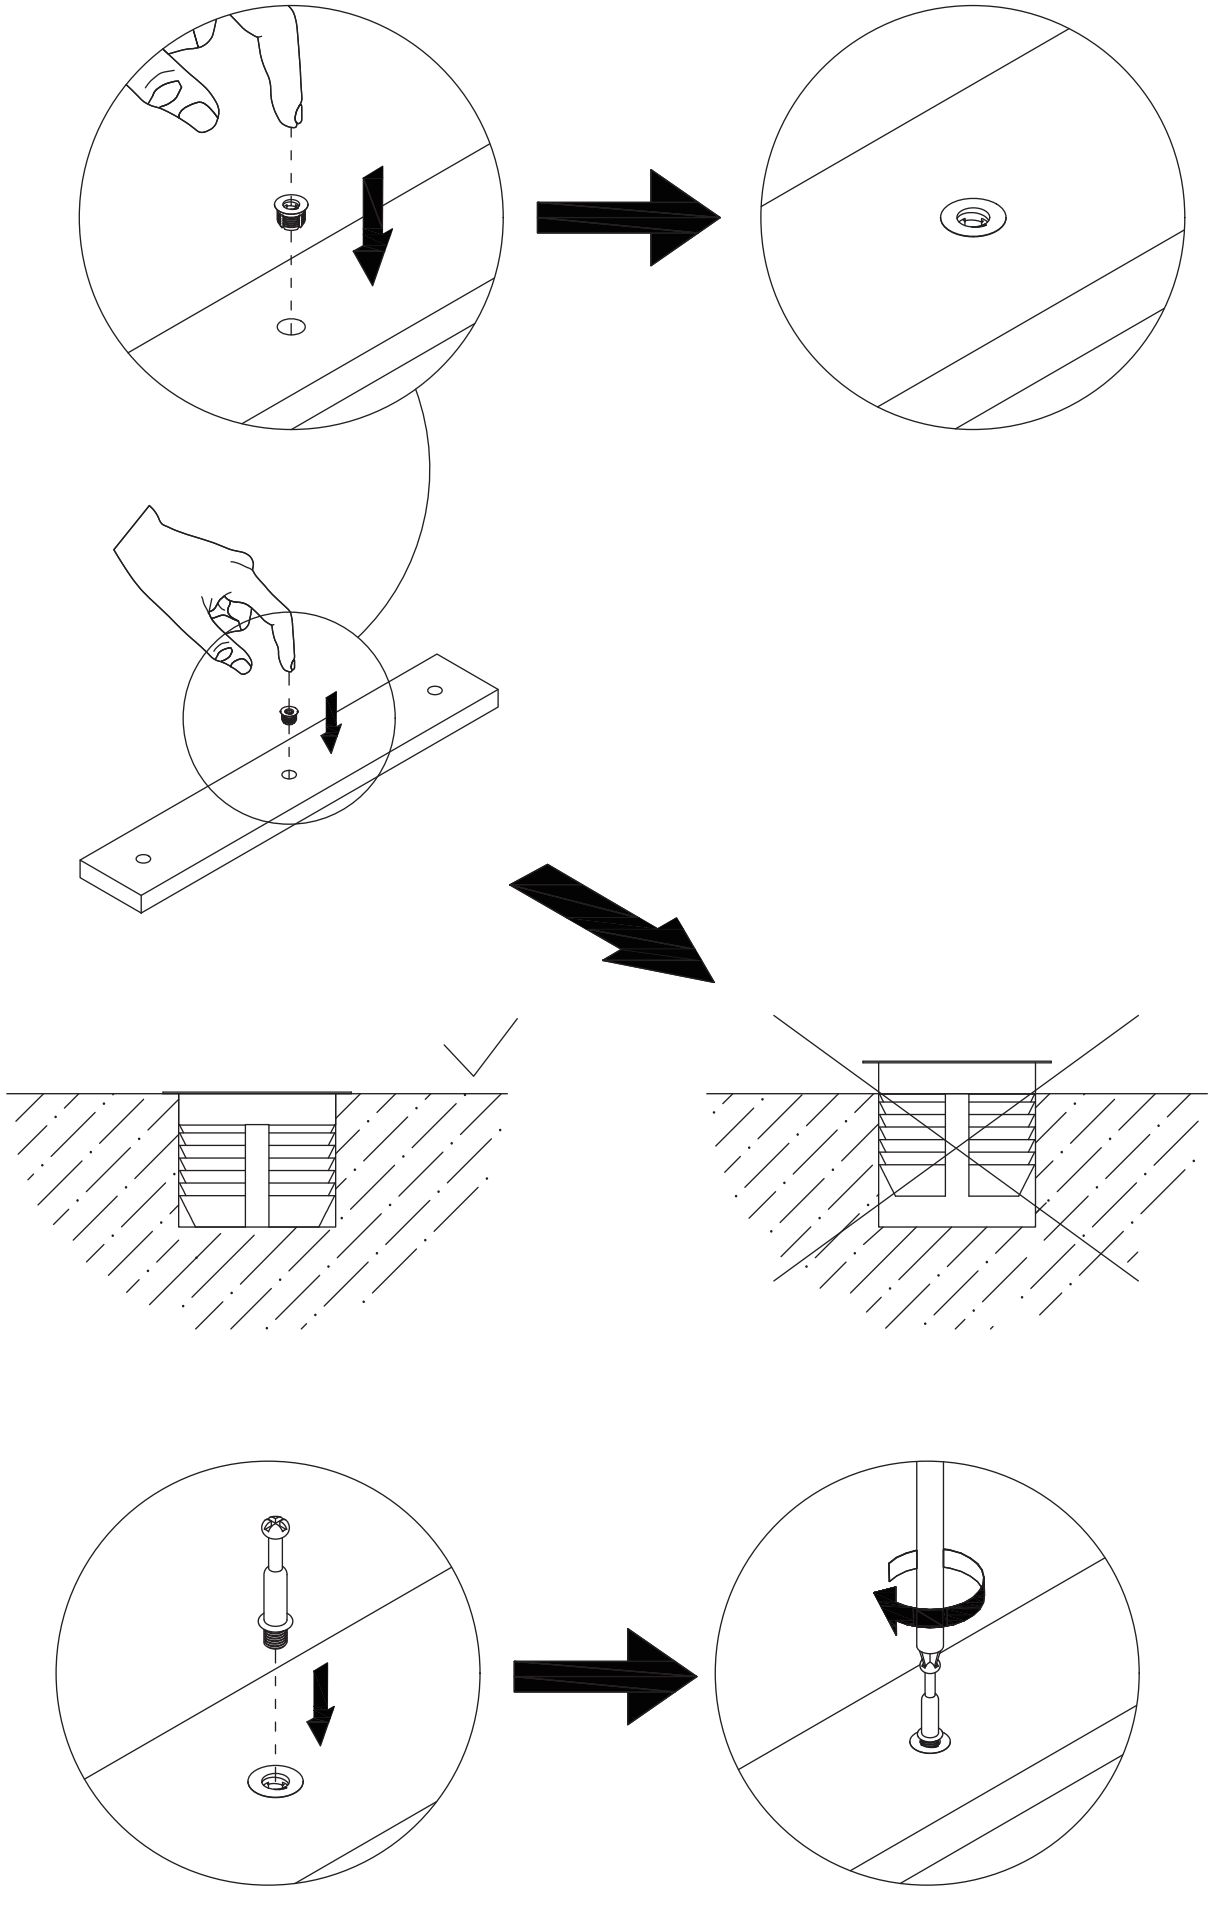


1



B x 20	D x 20	
 CRA0635B		

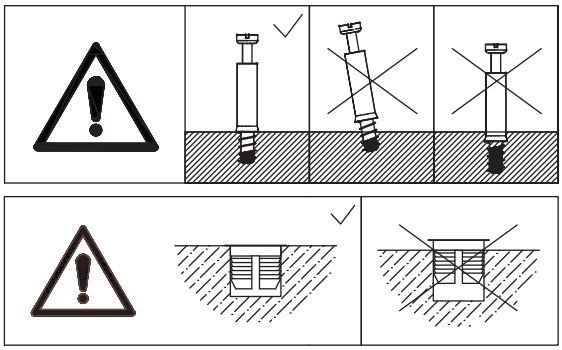


First, attach plug (D) to panels 16 and 18, then screw self-tapping rod (B) onto the plugs.

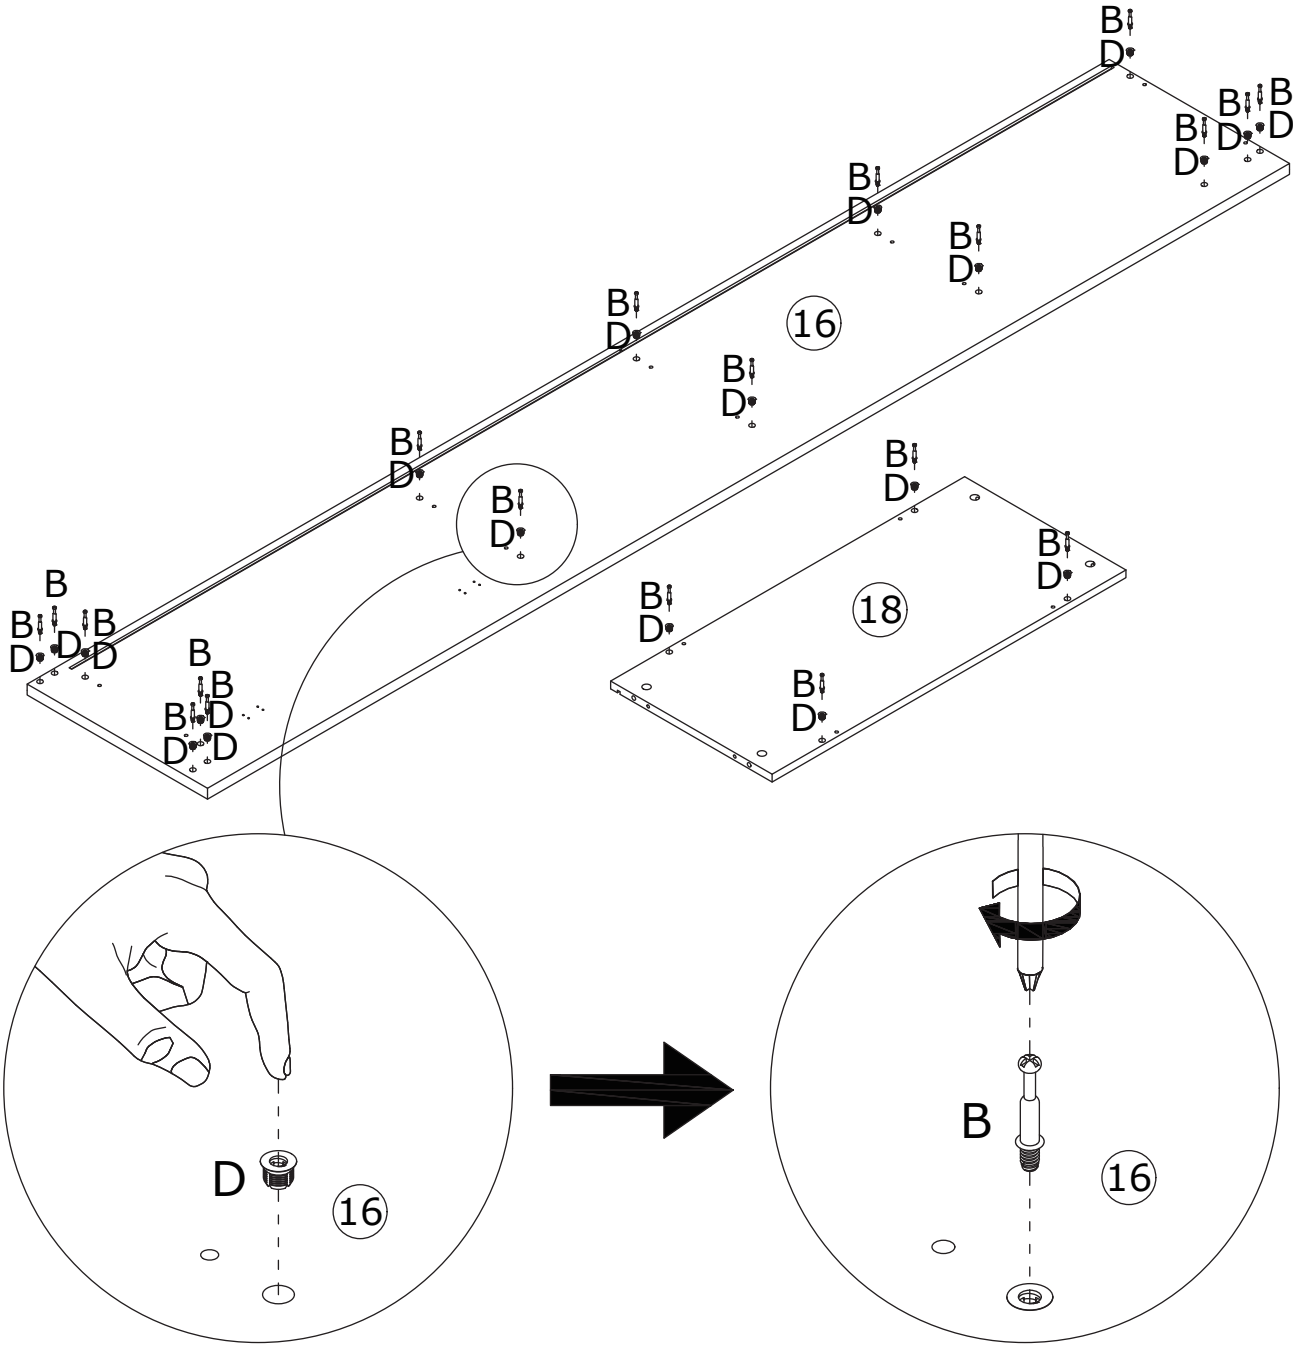


2


A x 4	C x 4	
 CRB1595A	 CRF0630A	

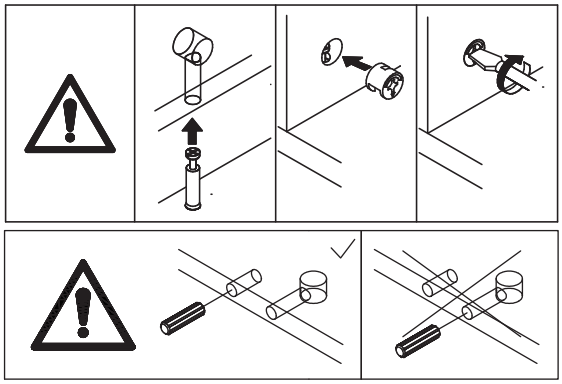

Connect panels 42 and 44 to panel 18 using wooden dowel (C), and tighten by turning eccentric wheel (A) clockwise.

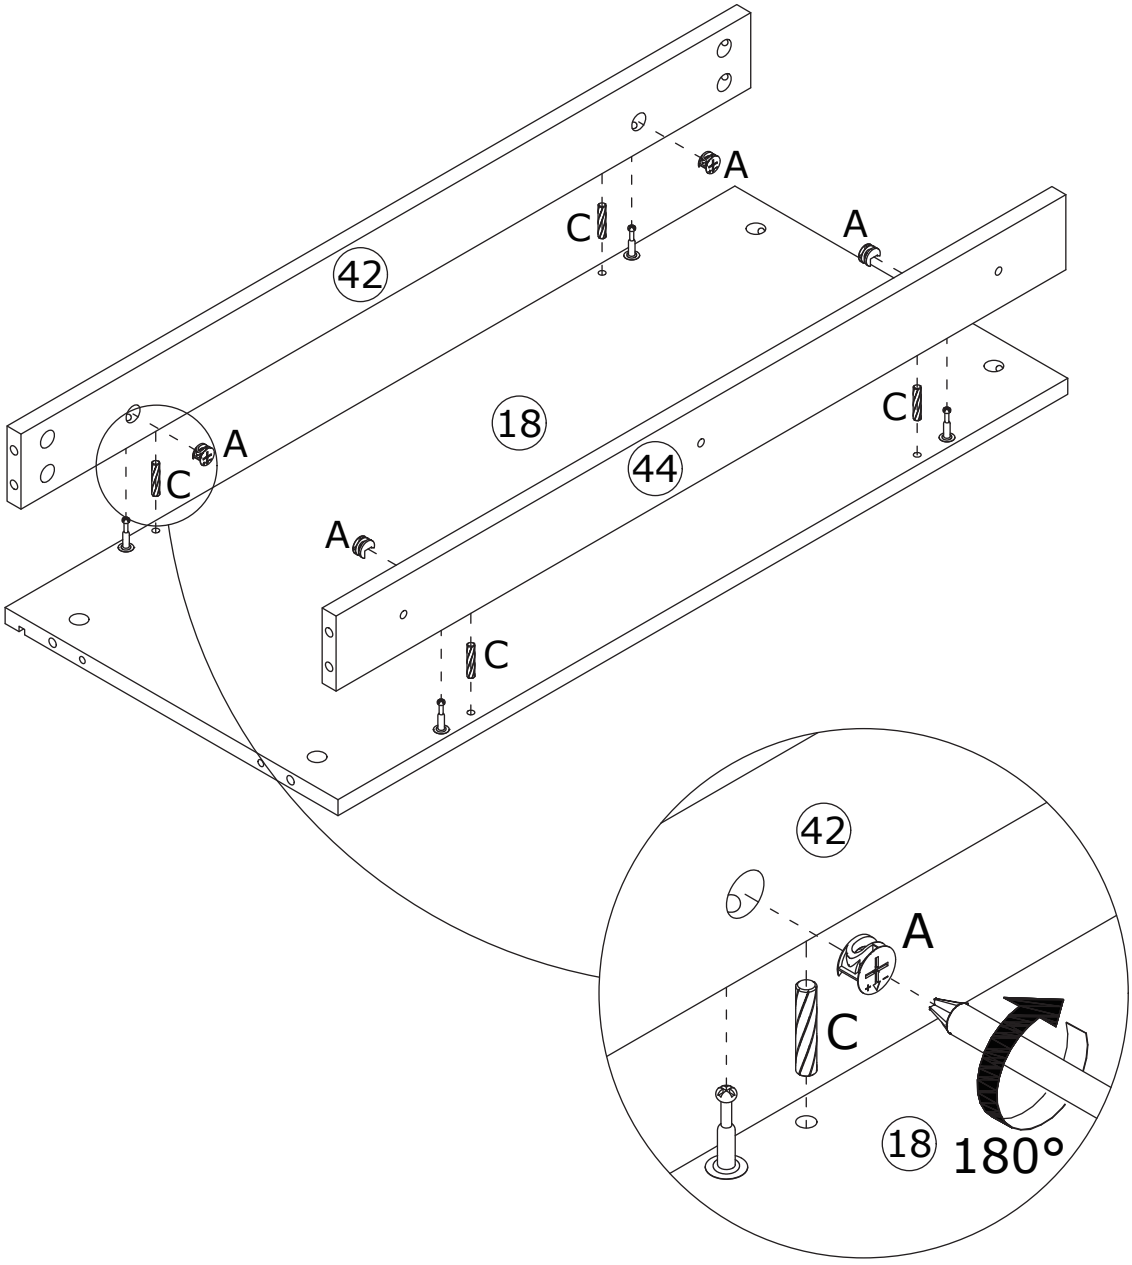


3

F x 4	R x 2	
 CRD3512A		

	F	G	K
			
	CRD3512A	CRD3514A	CRD0314A


Secure part (R) to panel 2 using screw (F).

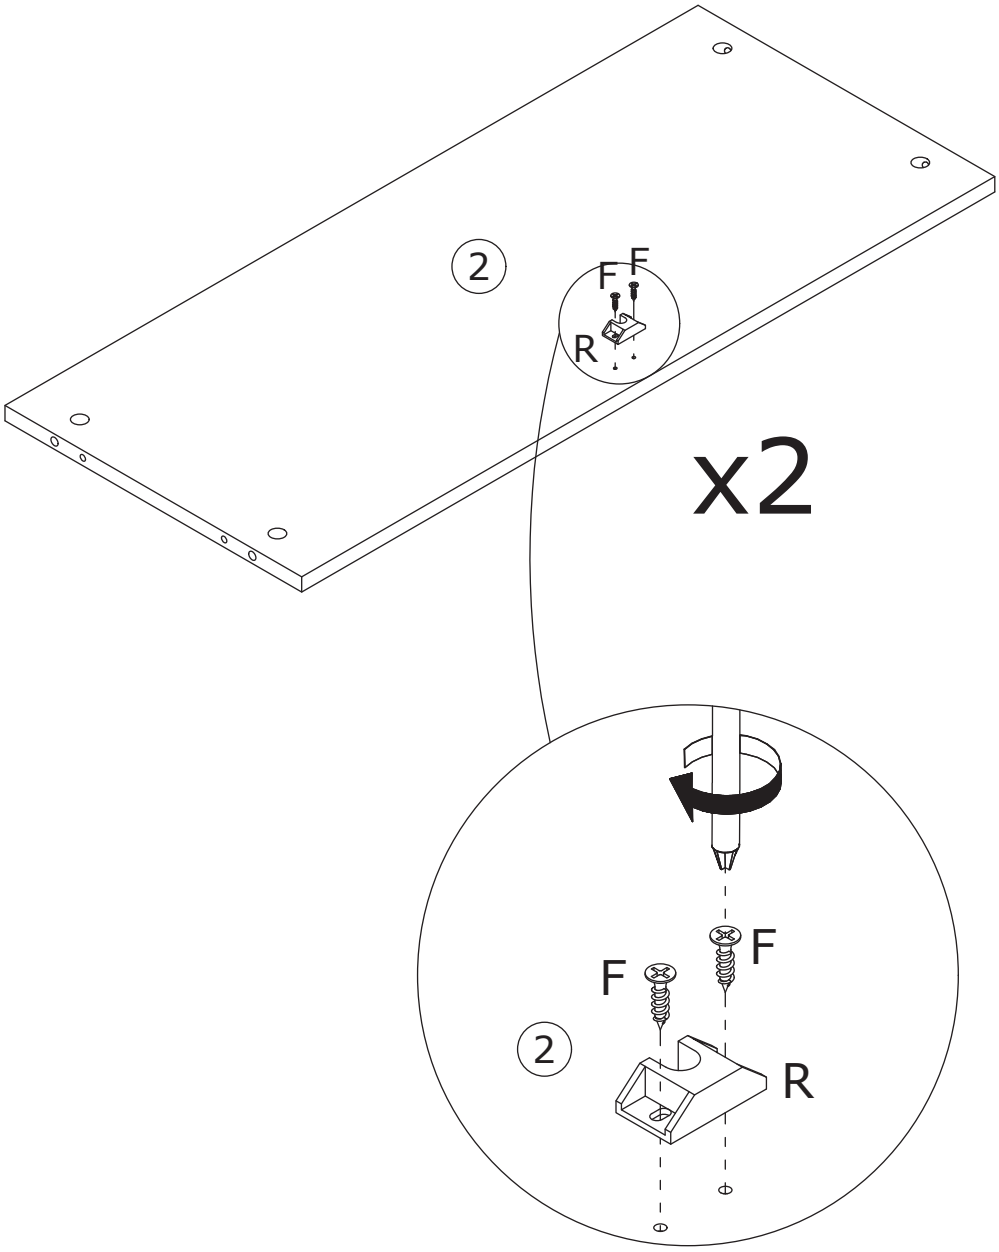


4

AG x 3








Install nut (AG) onto panel 17.

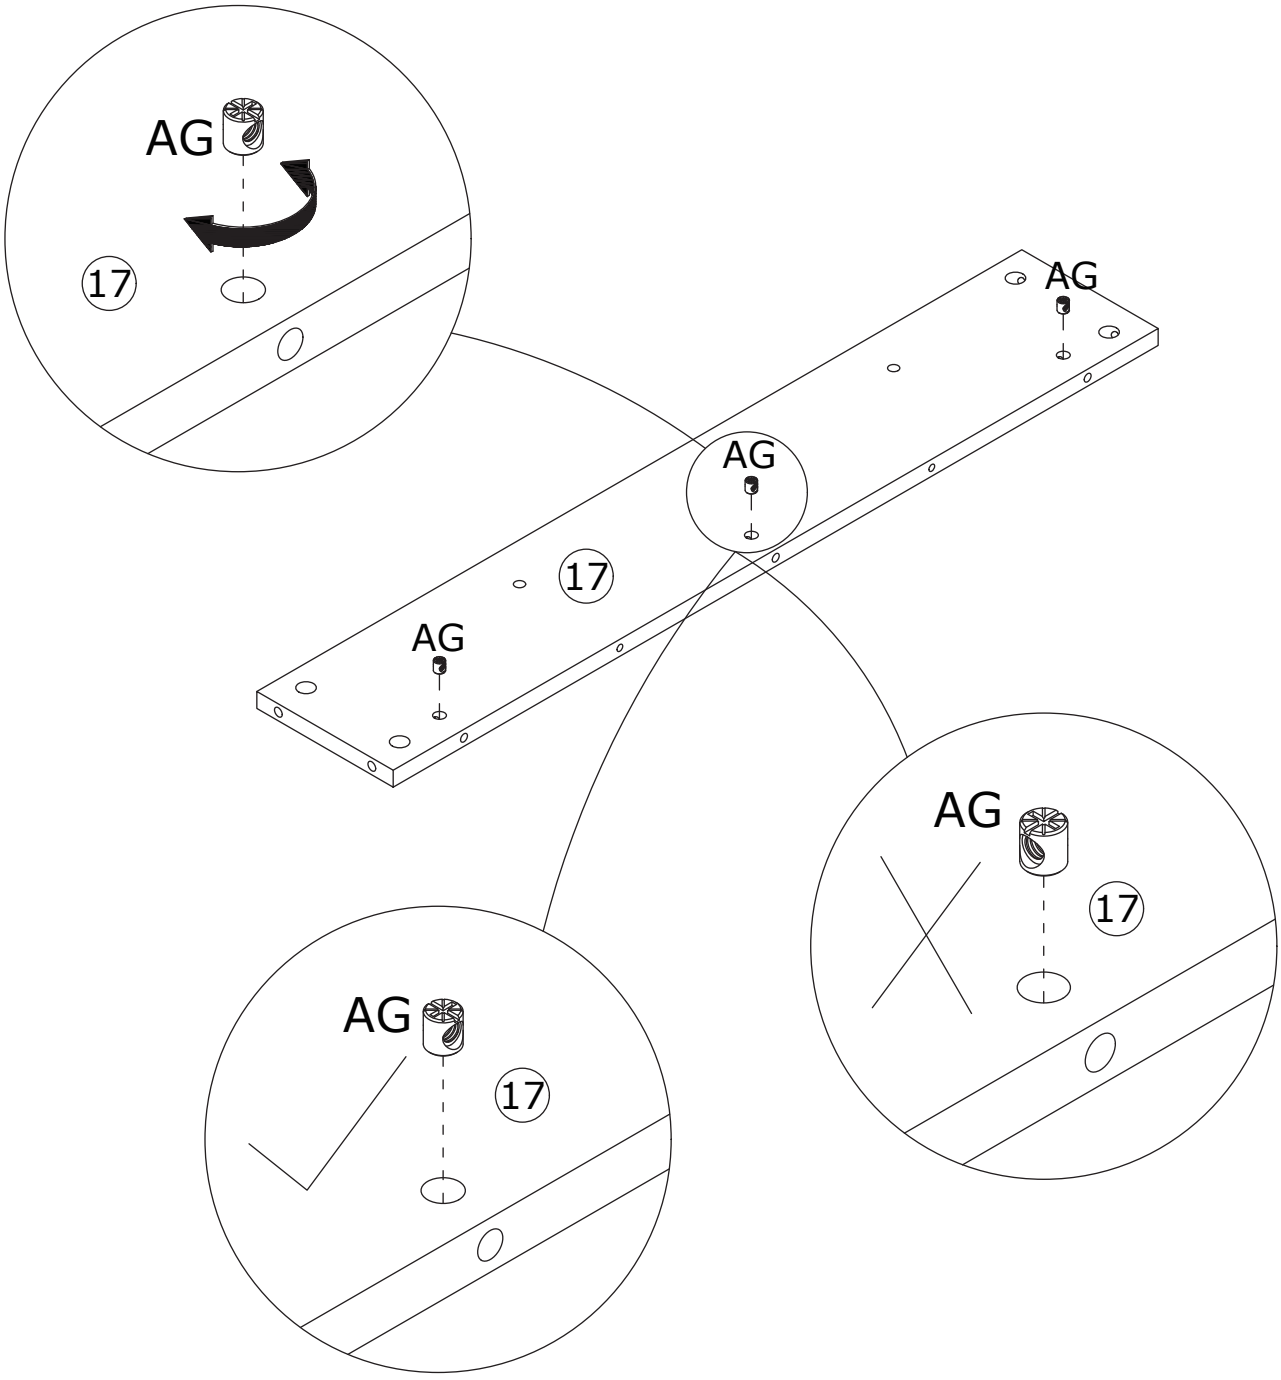


5

C x 2	AC x 3	AJ x 1	
			
CRF0630A	CRG0645A	M4	


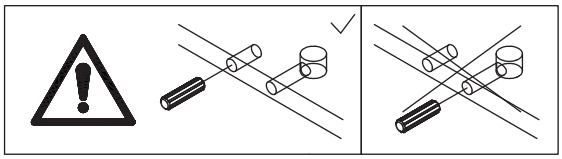



Secure panel 24 to panel 17 using wooden dowel (C), and secure them with screw (AC).

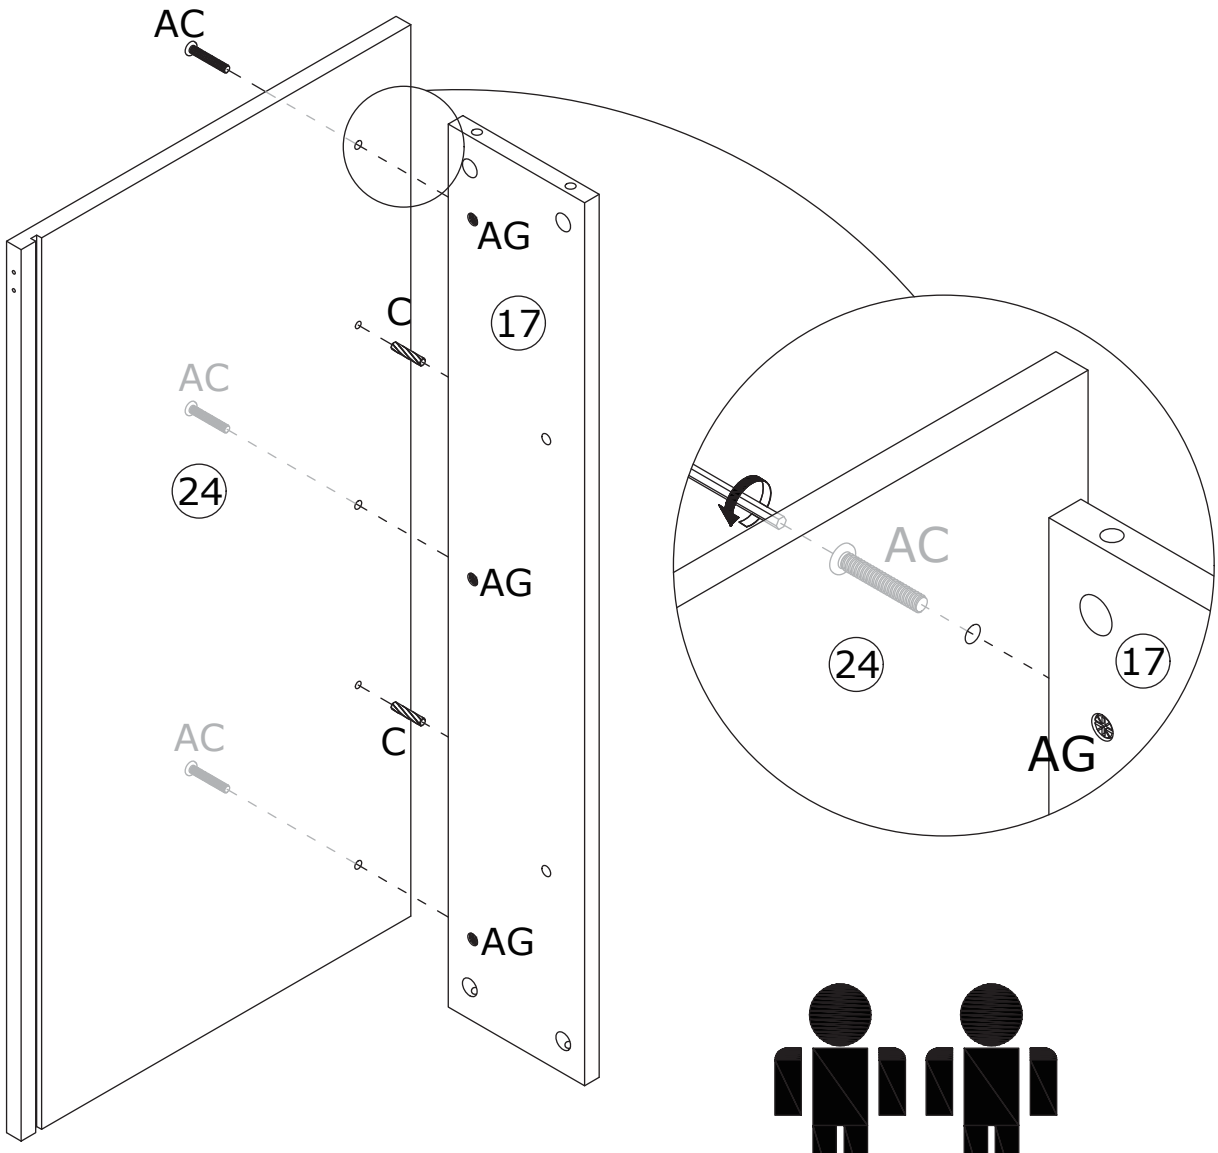


2 ADULTS

6

A x 16	C x 10	
 CRB1595A	 CRF0630A	

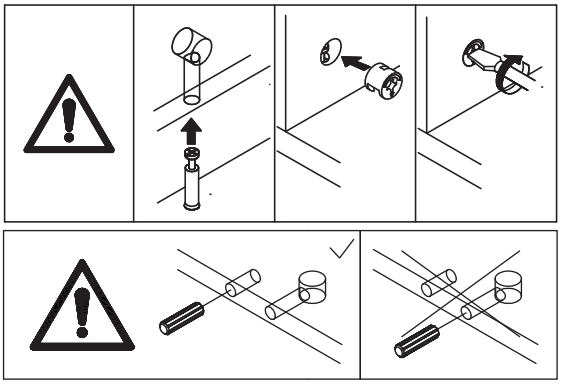



Connect panels 1, 2, 17, 18, 24, 41, 42, and 44 to panel 16 using wooden dowel (C), and tighten by turning eccentric wheel (A) clockwise.

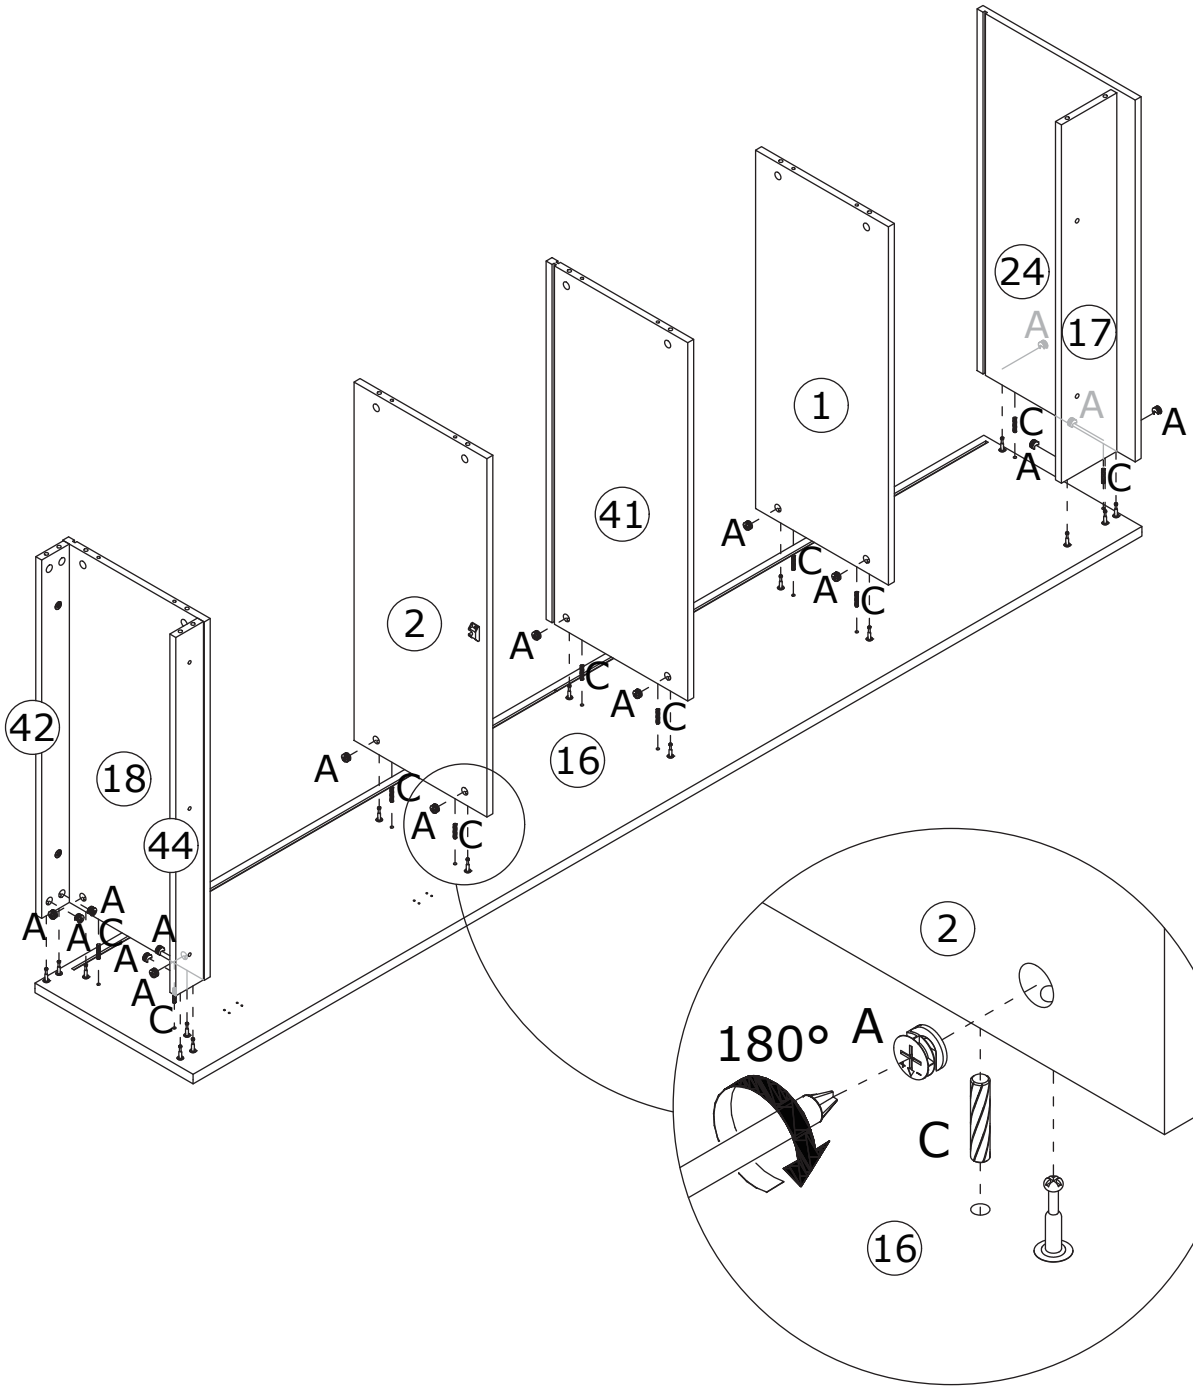

7


Insert panels 38 and 39 into the available slots.
Be sure to install panels 38 and 39 in the correct orientation.

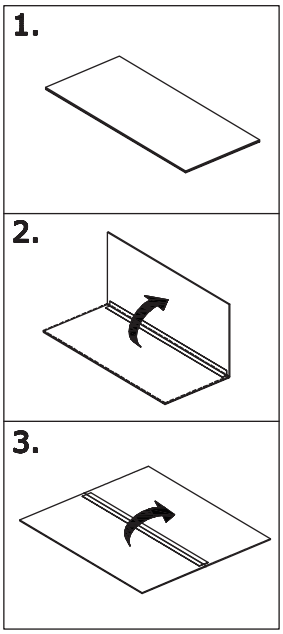

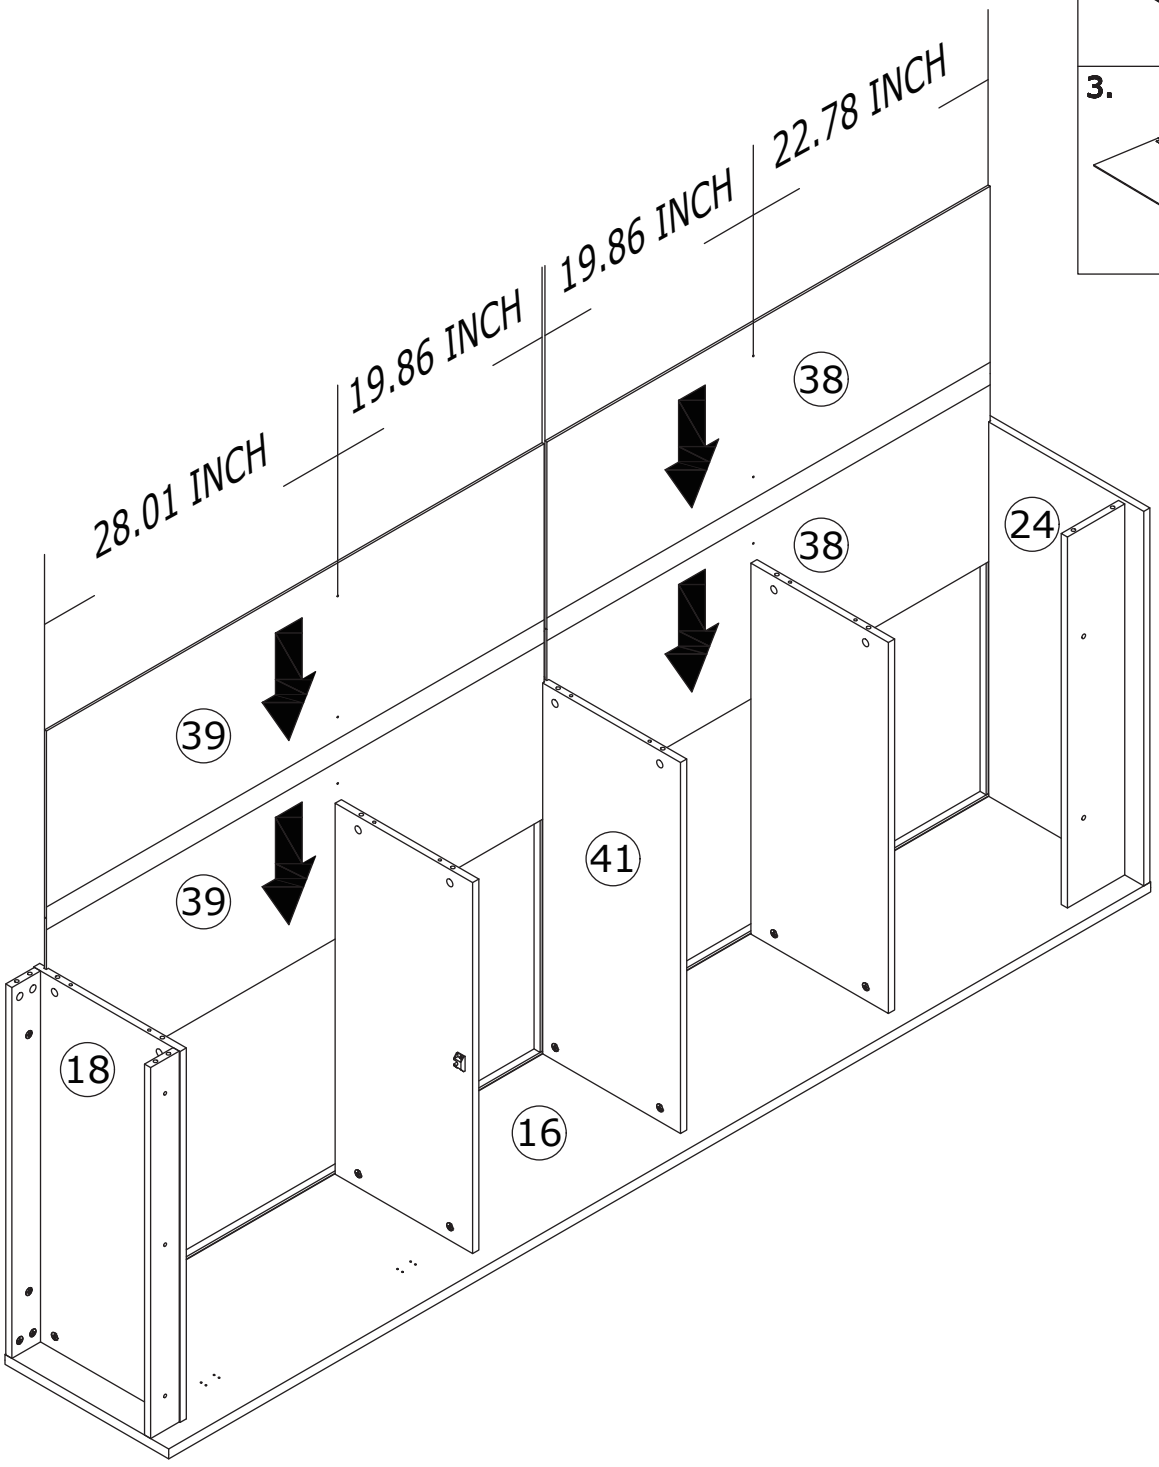


8


C x 8





CRF0630A

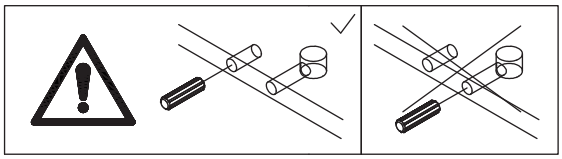


Install wooden dowel (C) into panels 1, 2, 18, and 41.

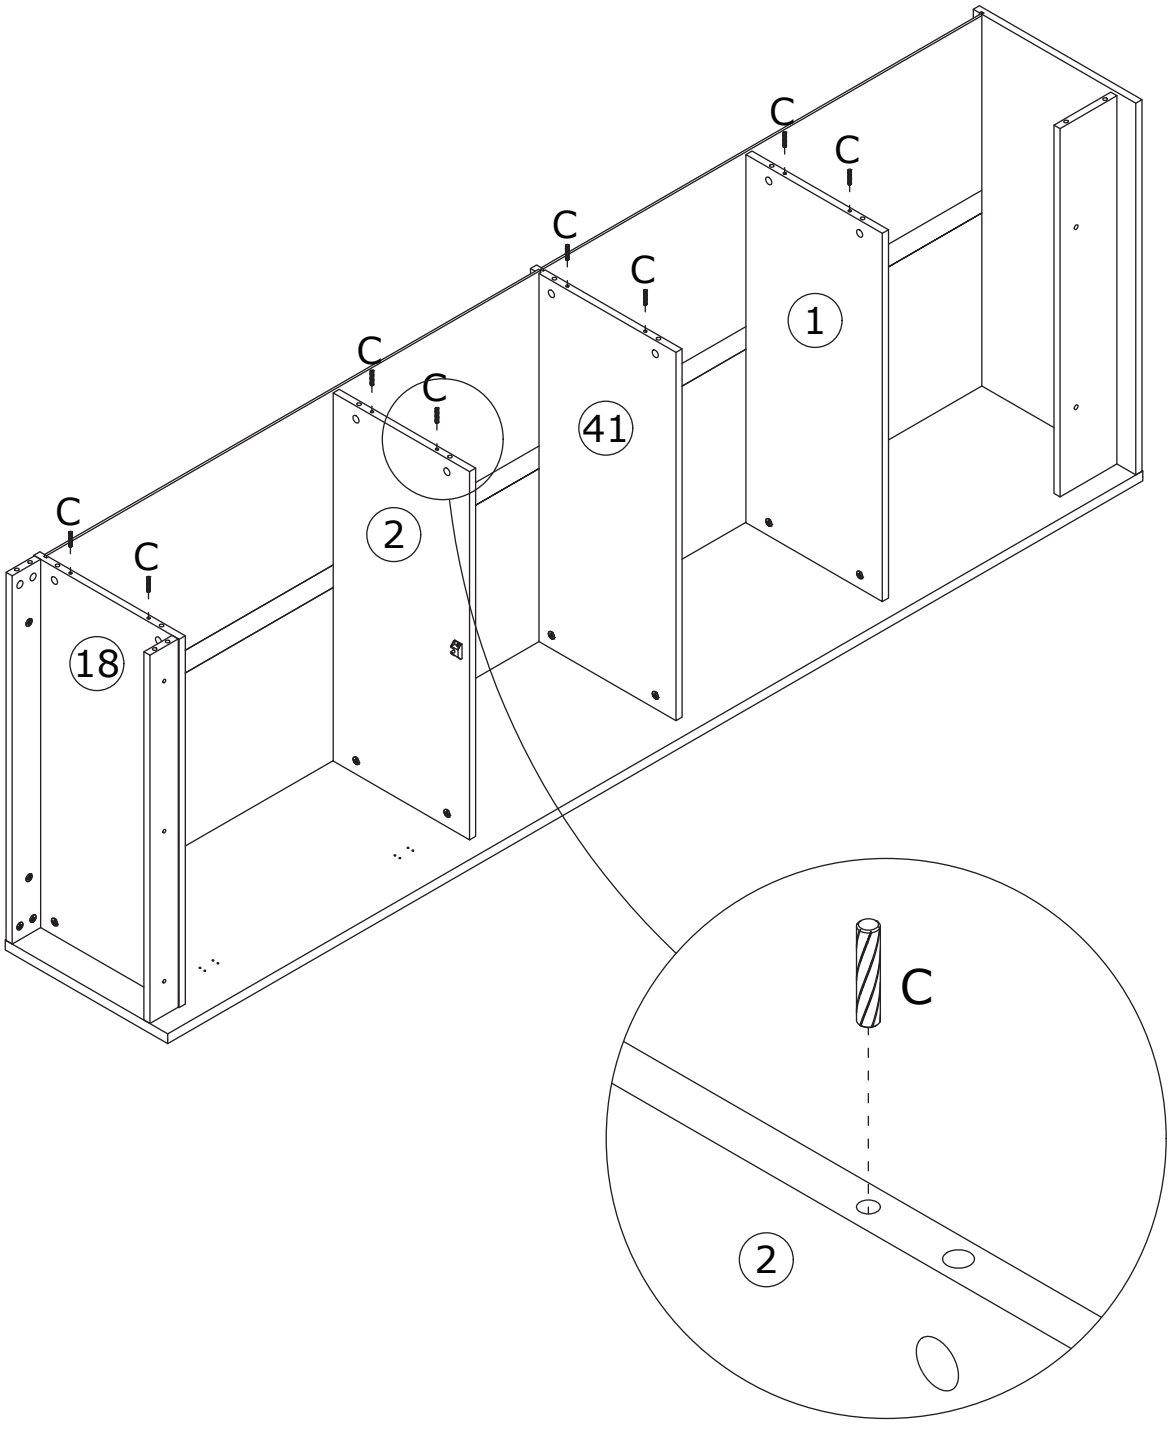


9

B x 14	D x 14	
 CRA0635B		

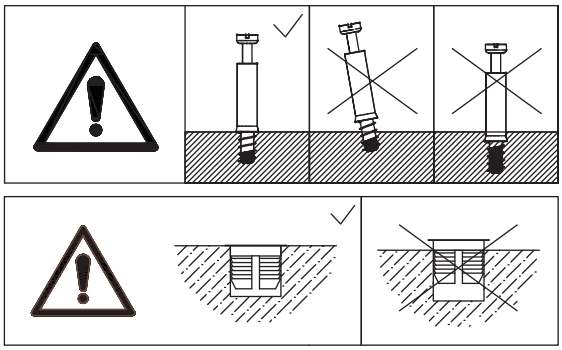

First, attach plug (D) to panel 21, then screw self-tapping rod (B) onto the plugs.

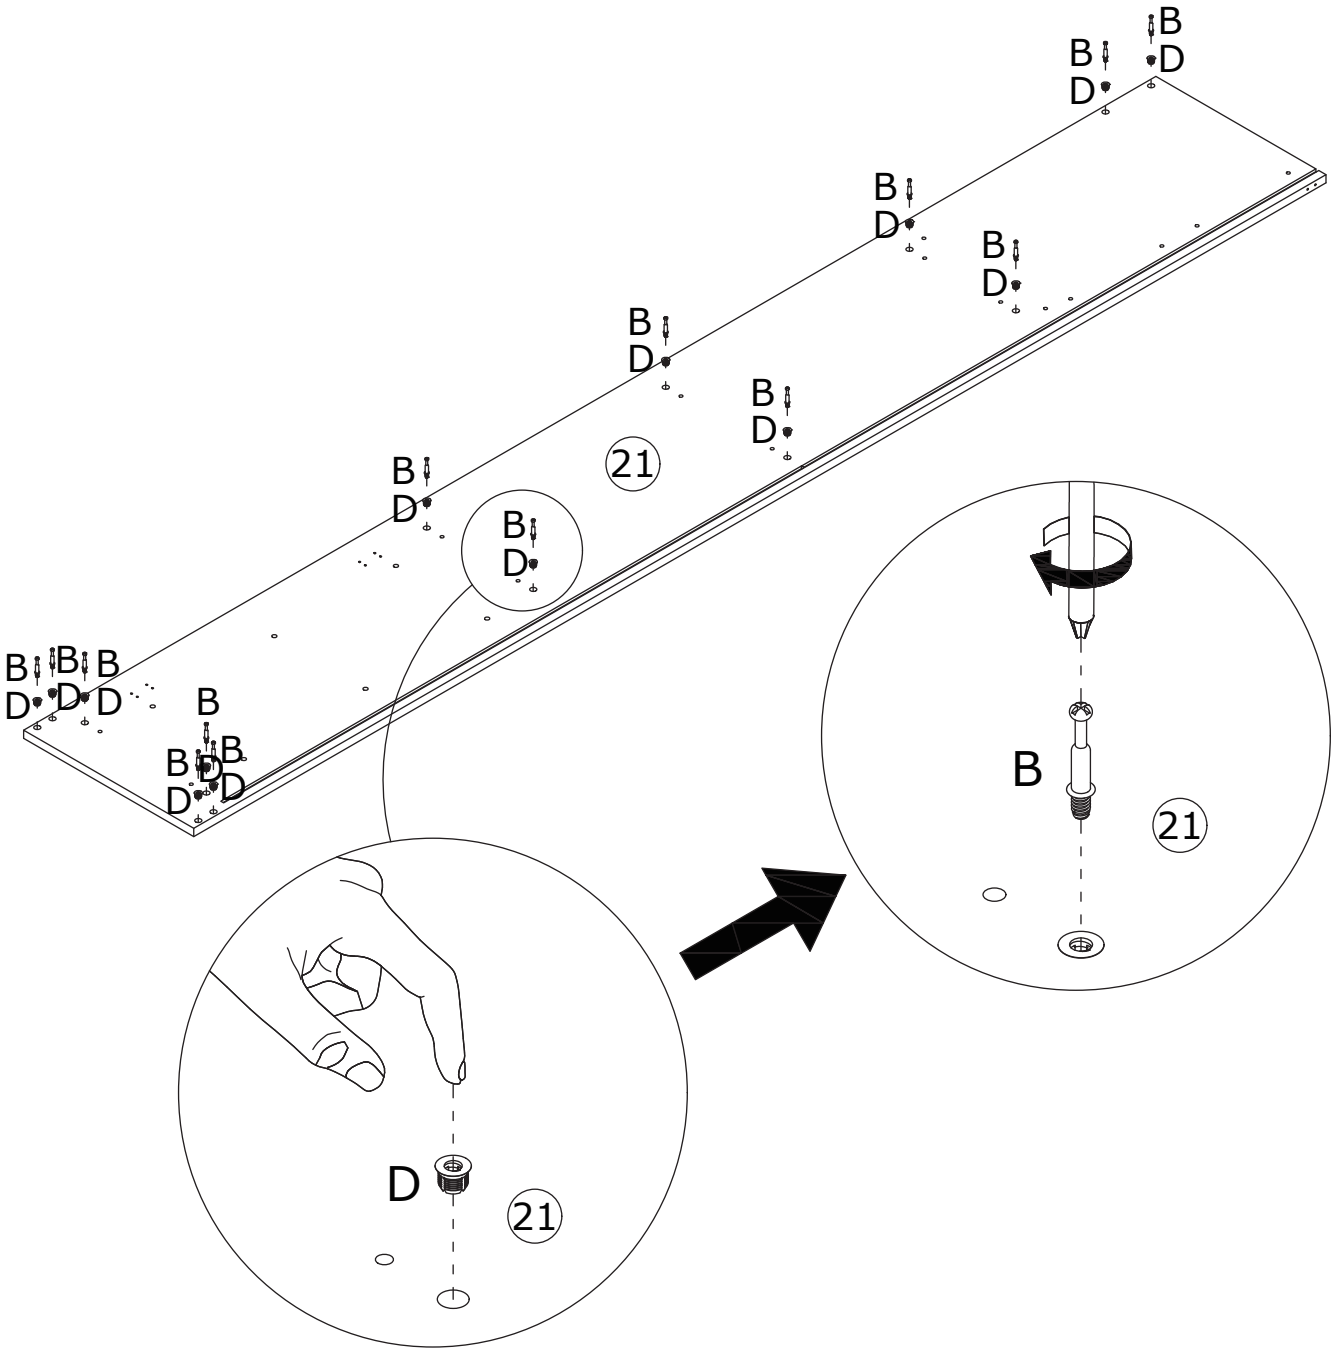



10

A x 14




CRB1595A



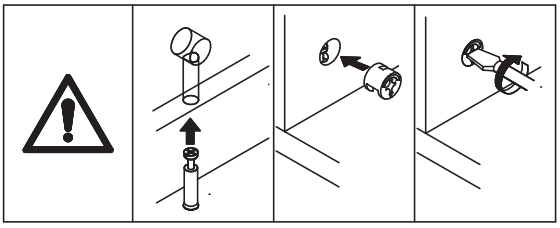

Connect panel 21 to the mounting unit, and tighten by turning eccentric wheel (A) clockwise.

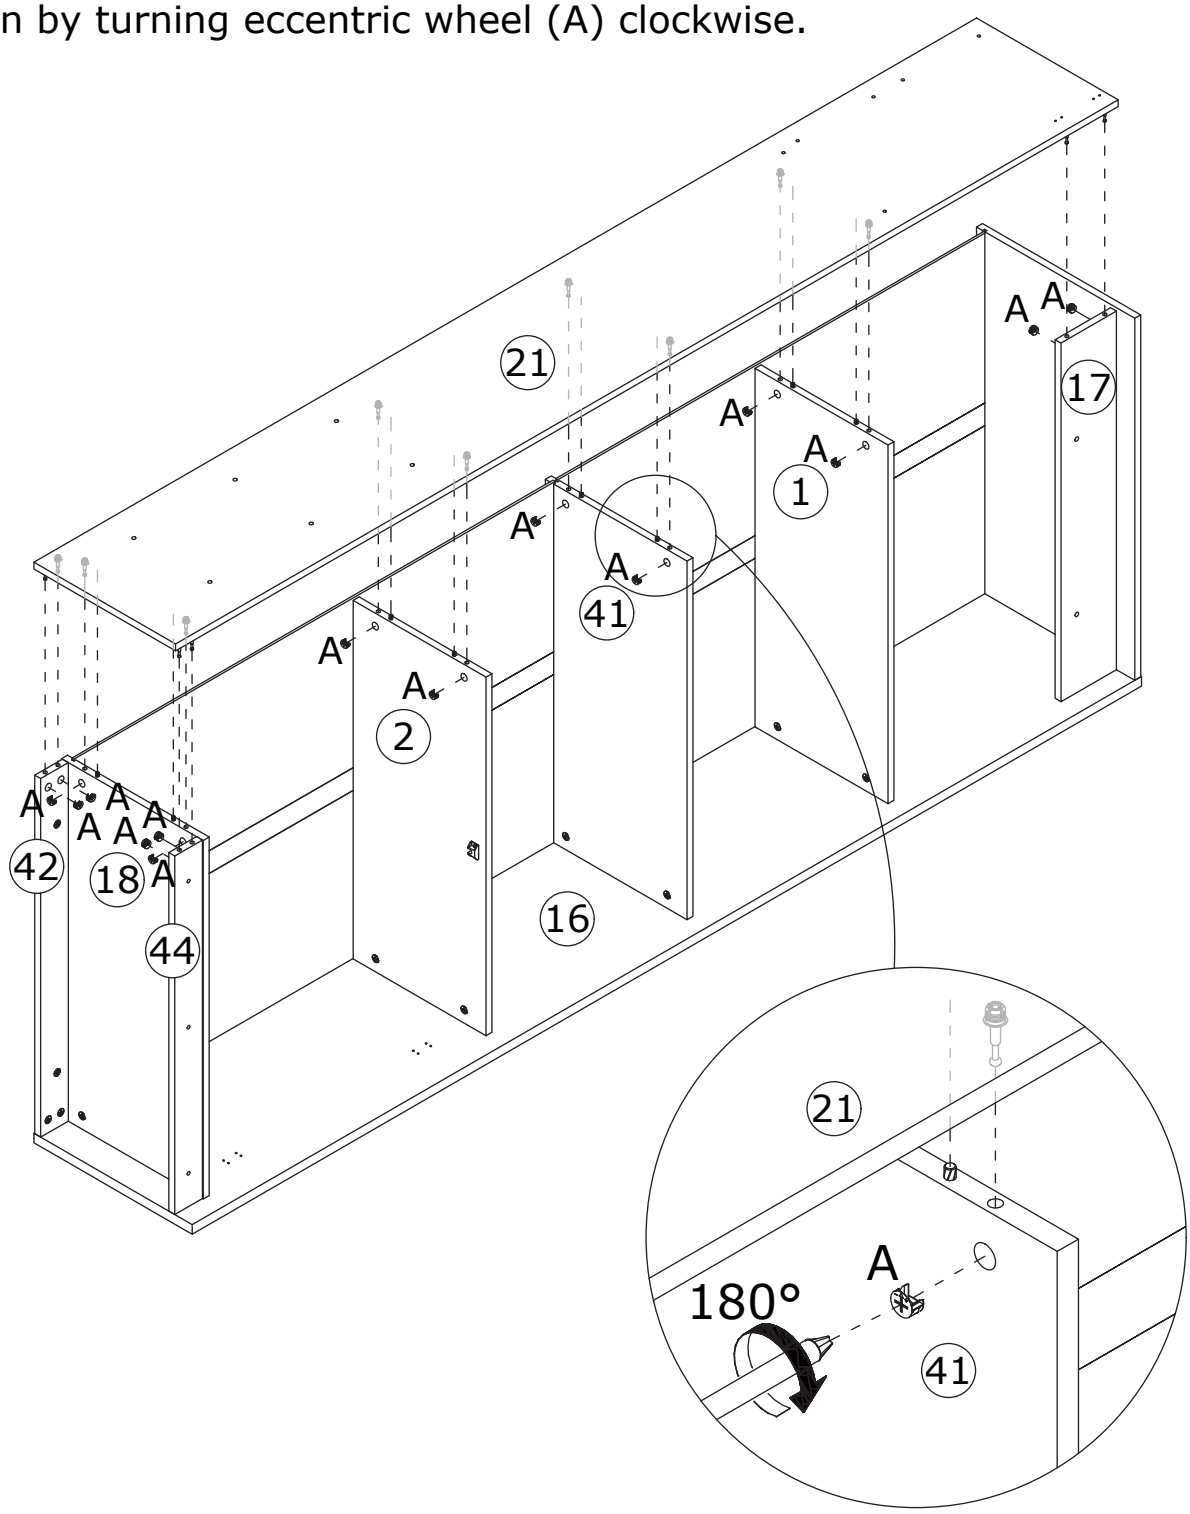


11


P x 8




CRE0316A




Secure panels 38 and 39 to panels 1 and 2 using screw (P).

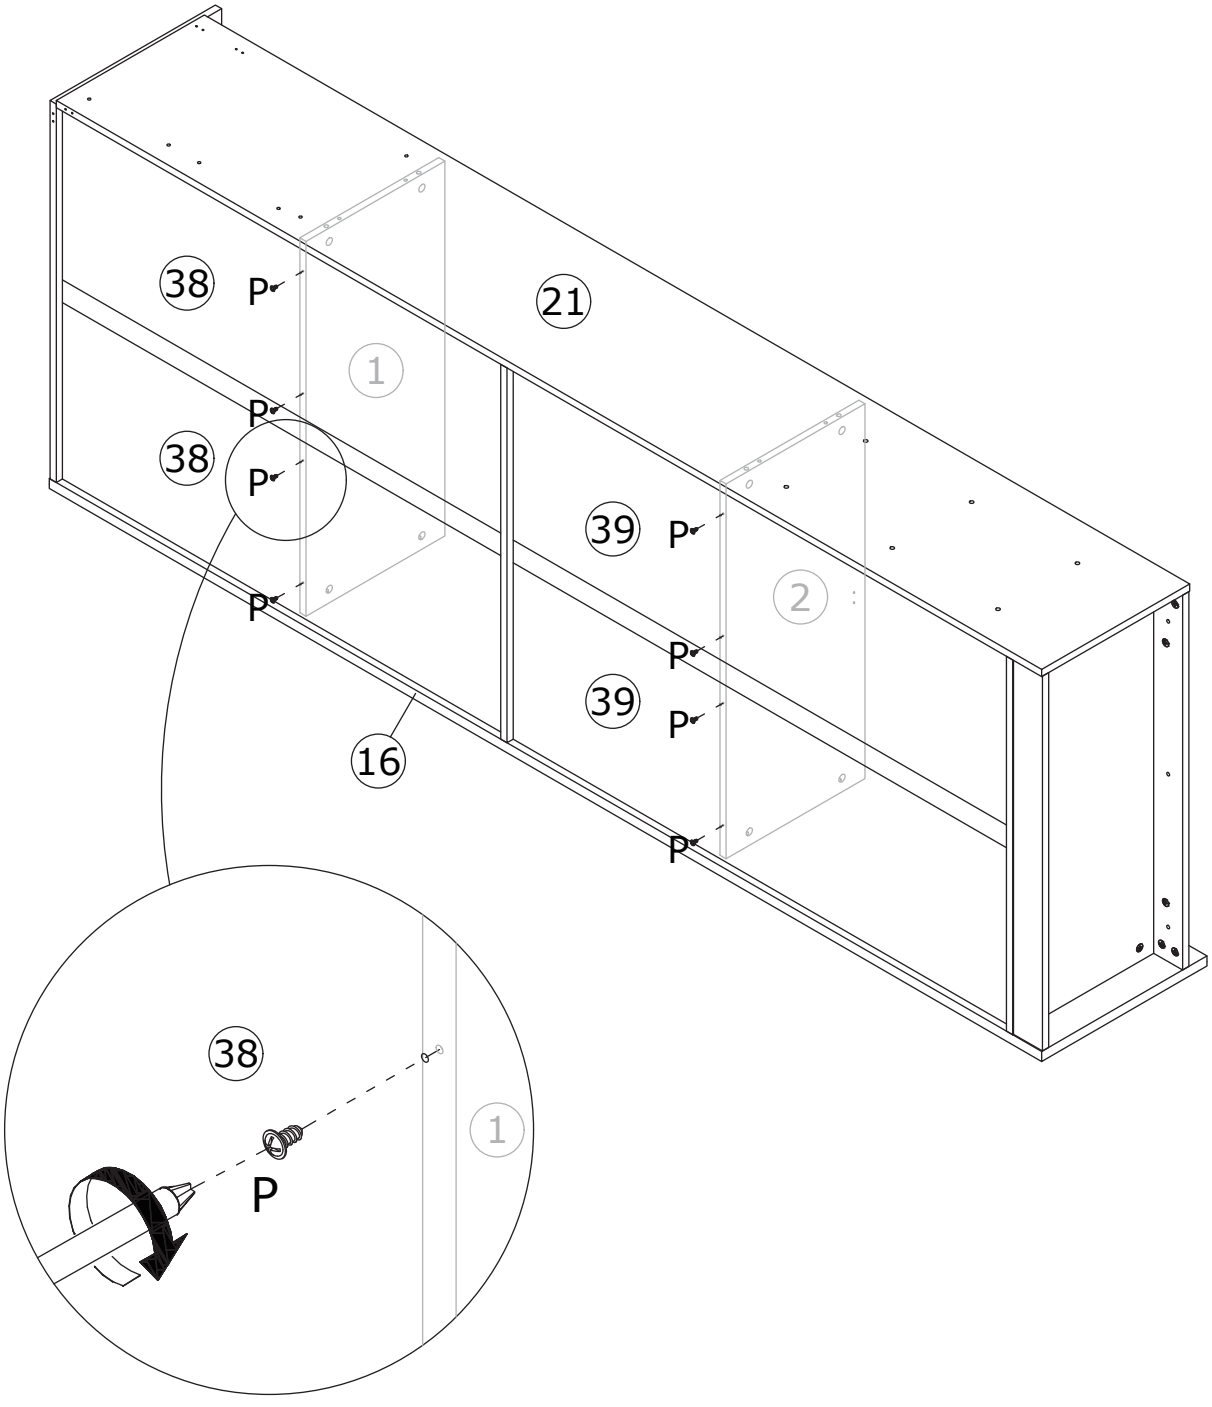



12

AE x 3	AJ x 1	
 CRG0670A	 M4	

Attach panels 22, 40, and 43 to panel 44 using screw (AE).
Pay attention to the installation orientation of panels 22, 40, and 43.

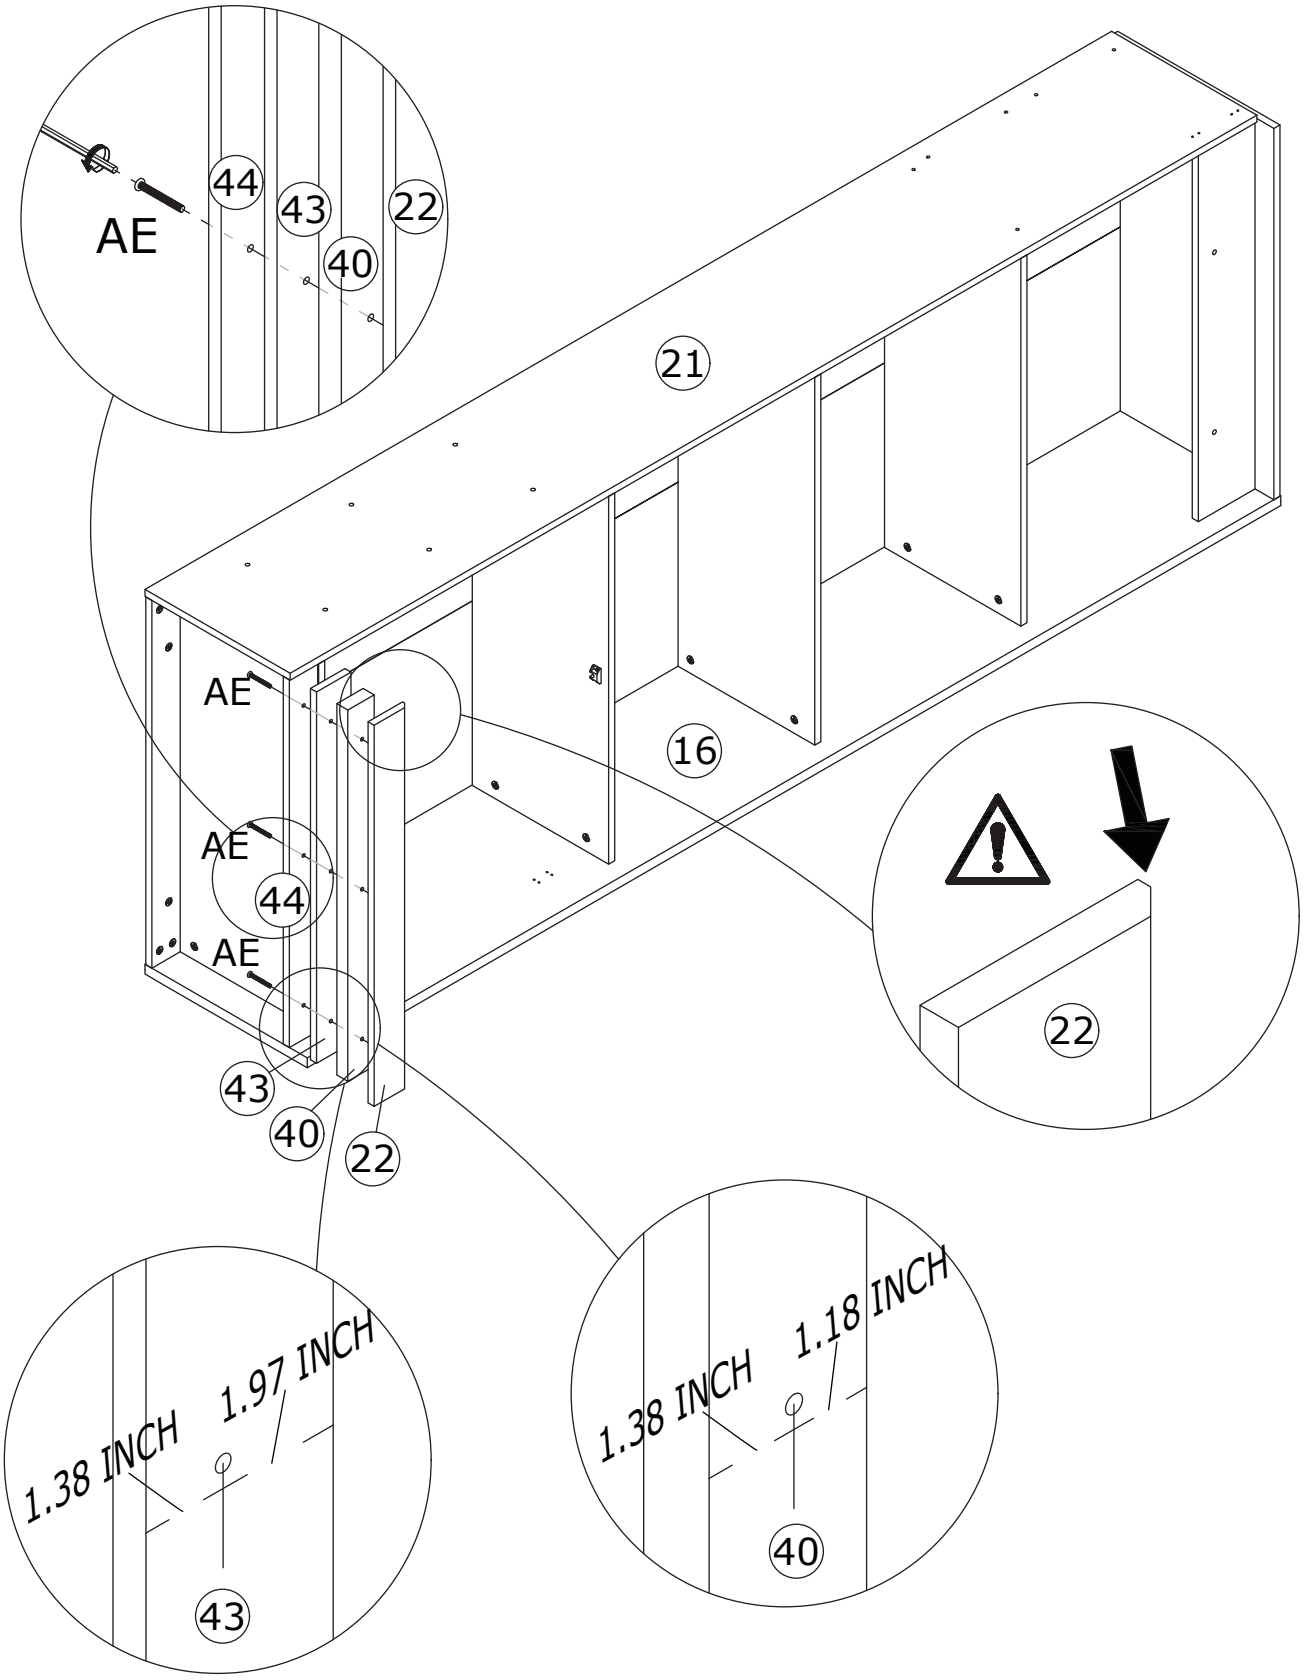


13



K x 28	L x 28	
 CRD0314A		


First, insert clip (L) into the back slots, then secure it using screw (K).

	F	G	K
			
	CRD3512A	CRD3514A	CRD0314A

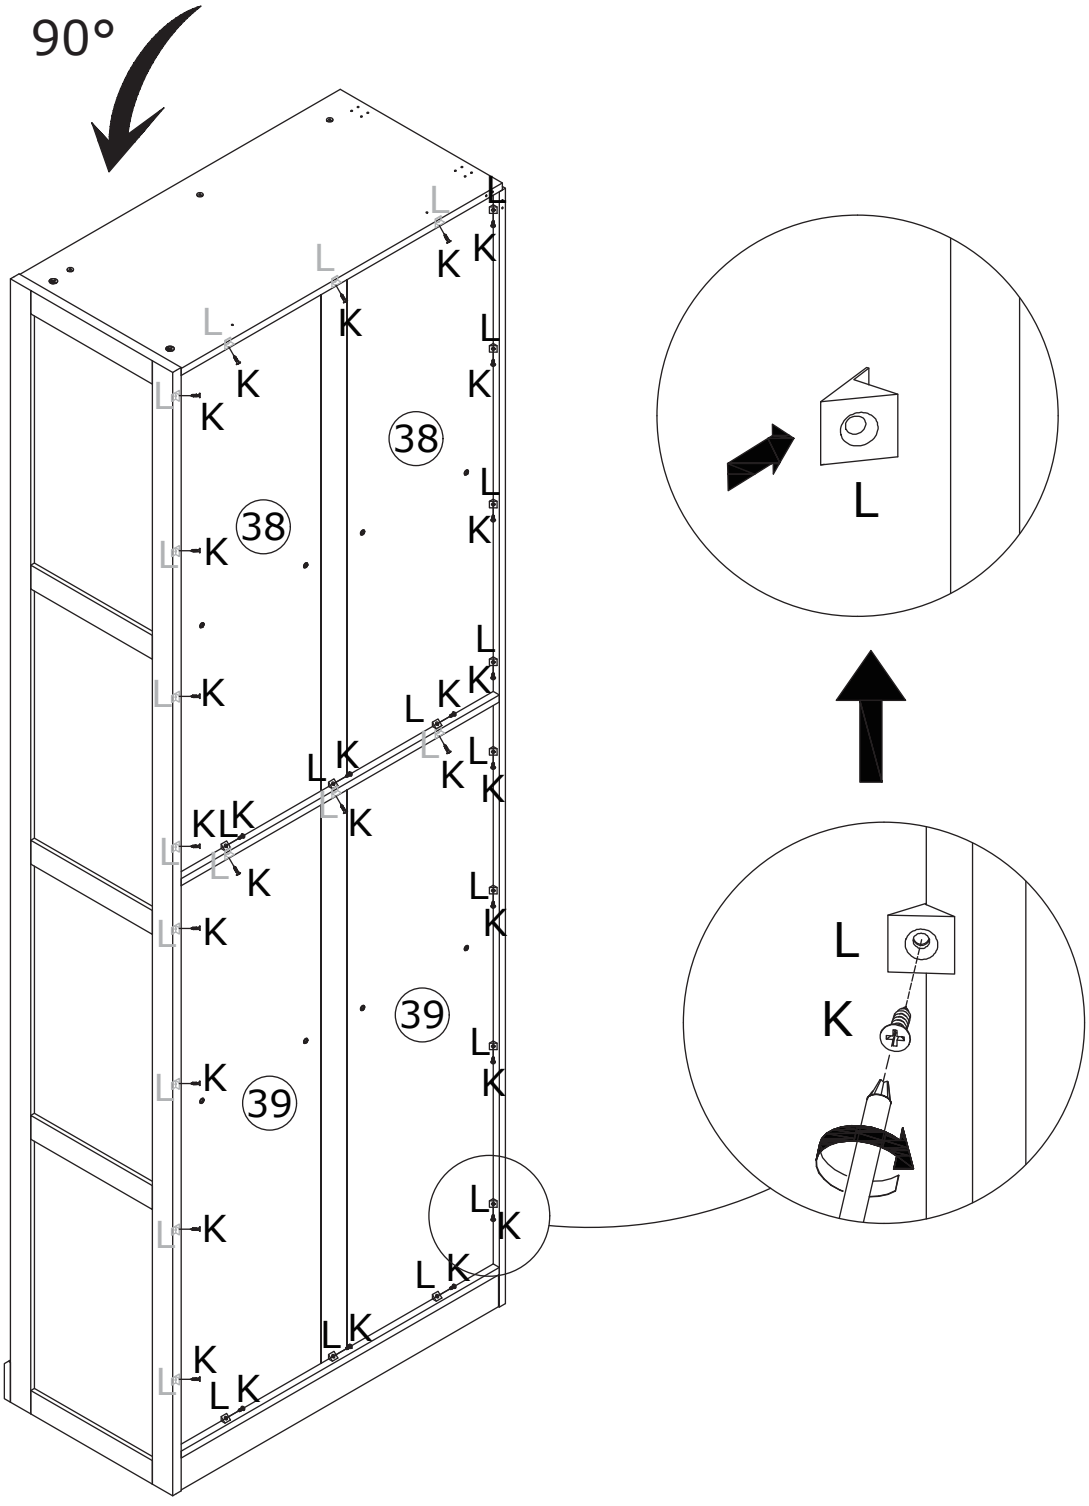


14



B x 20	D x 20	
 CRA0635B		

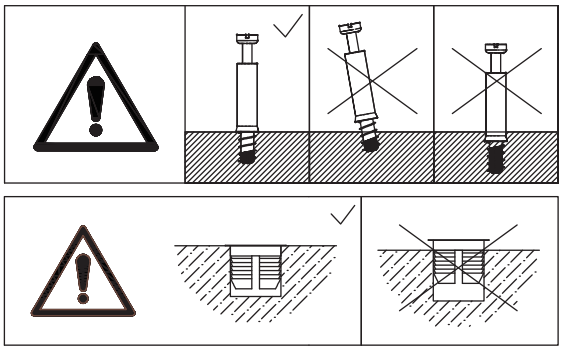


First, attach plug (D) to panels 25 and 27, then screw self-tapping rod (B) onto the plugs.

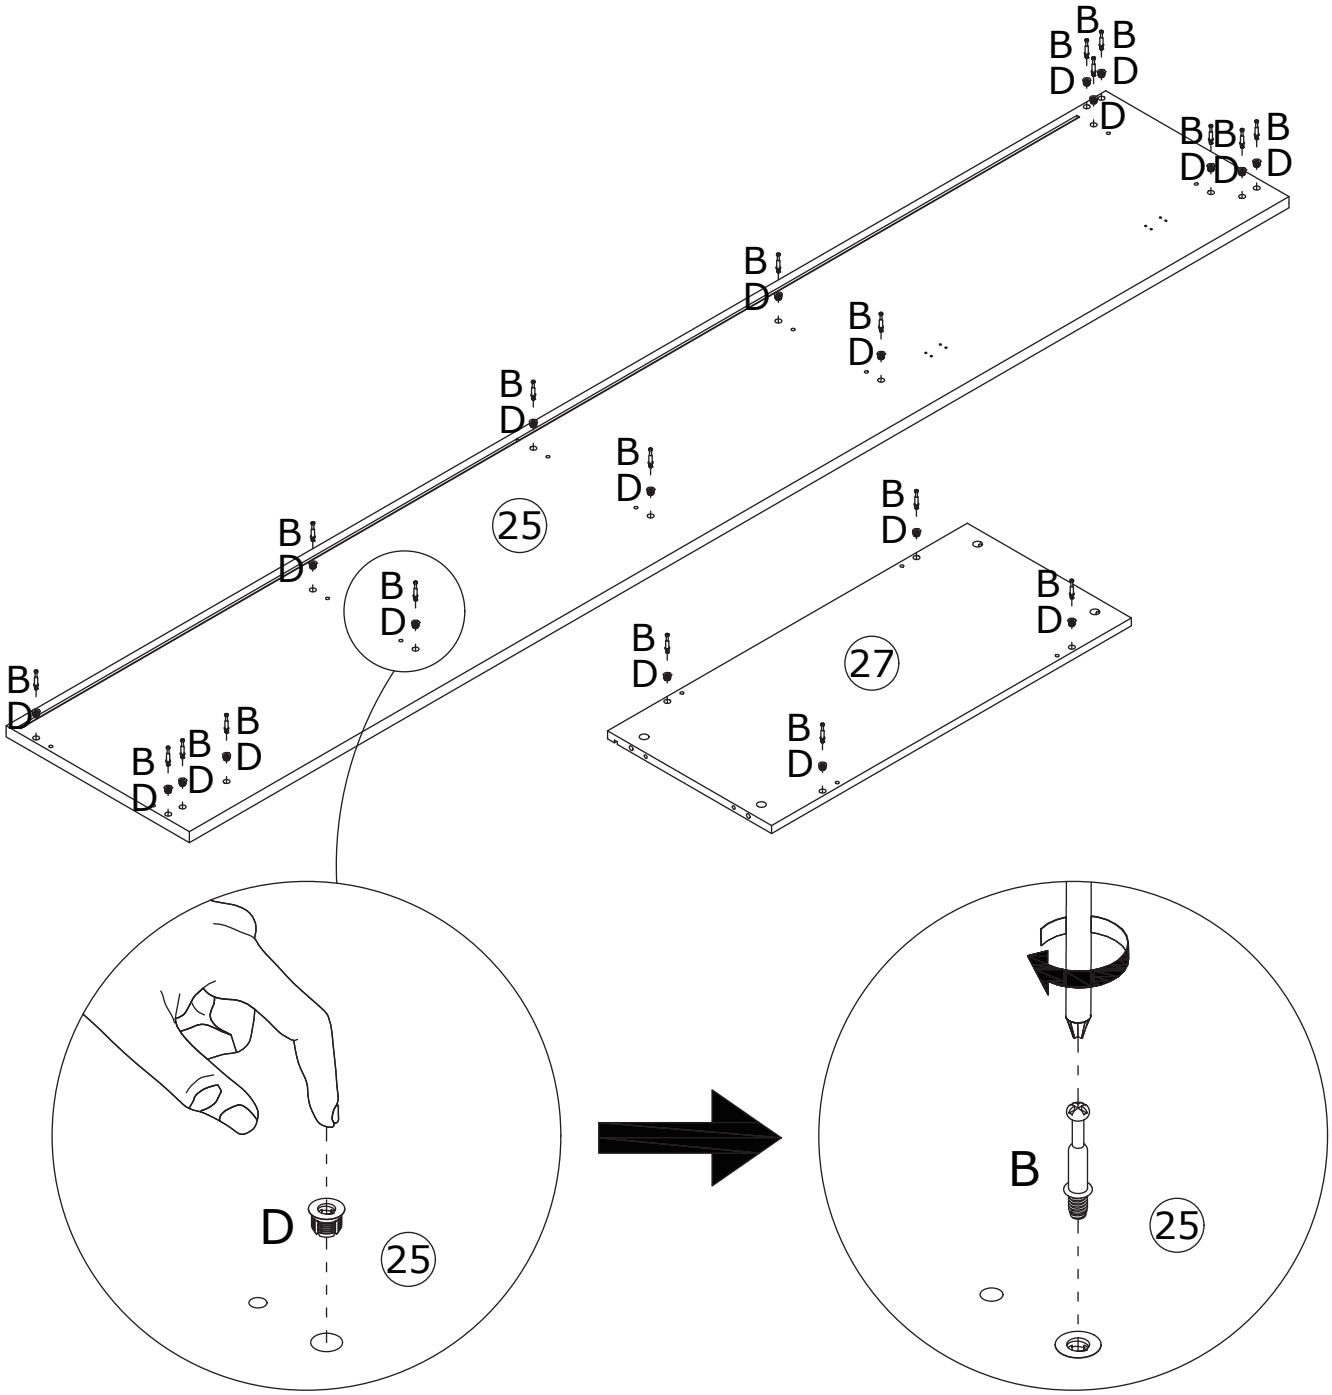


15

A x 4	C x 4	
 CRB1595A	 CRF0630A	

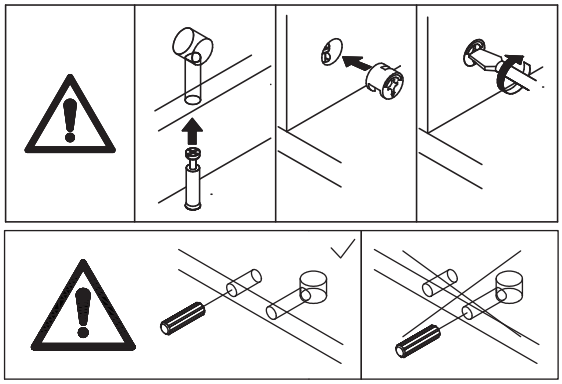


Connect panels 42 and 44 to panel 27 using wooden dowel (C), and tighten by turning eccentric wheel (A) clockwise.

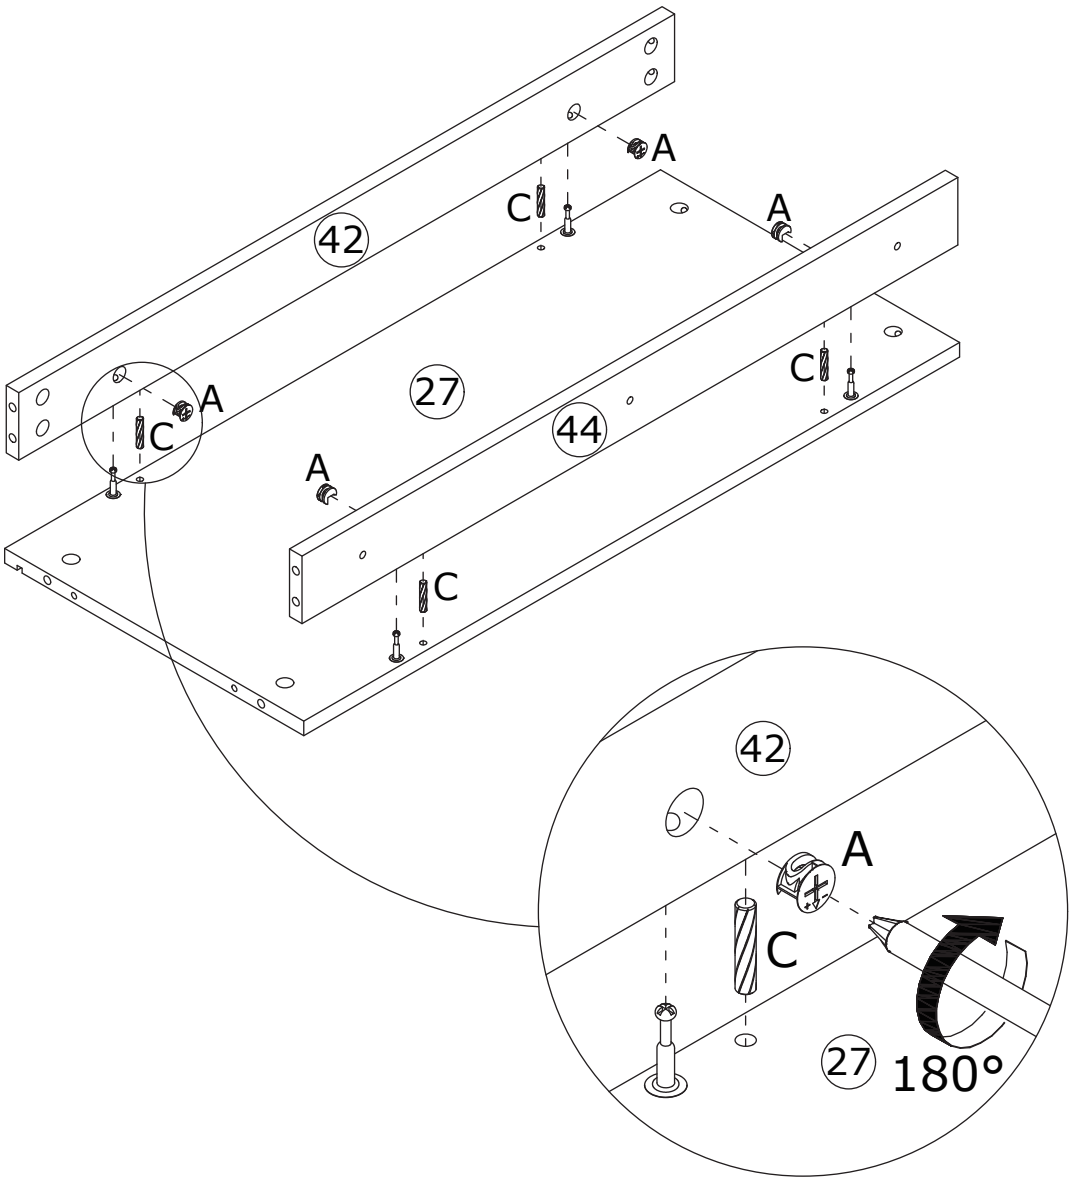


16

AG x 3









Install nut (AG) onto panel 26.

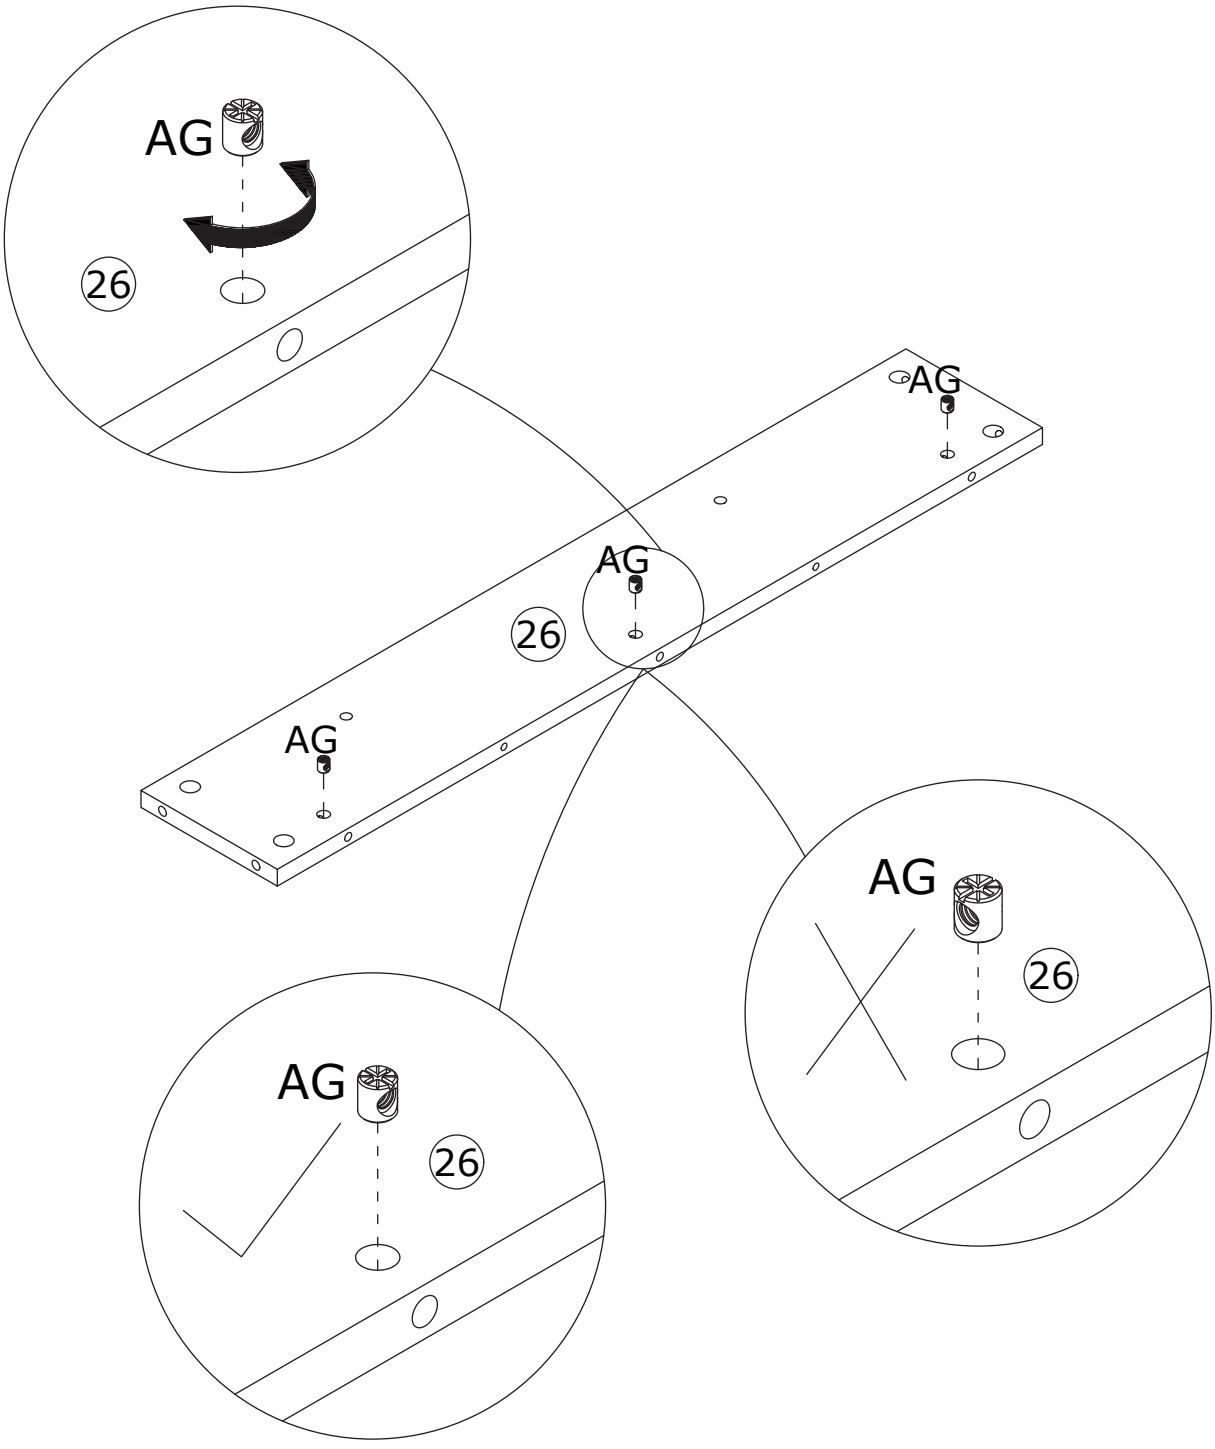


17

C x 2	AC x 3	AJ x 1	
			
CRF0630A	CRG0645A	M4	


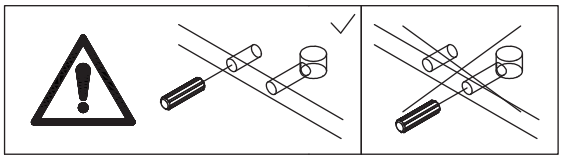



Secure panel 33 to panel 26 using wooden dowel (C), and secure them with screw (AC).

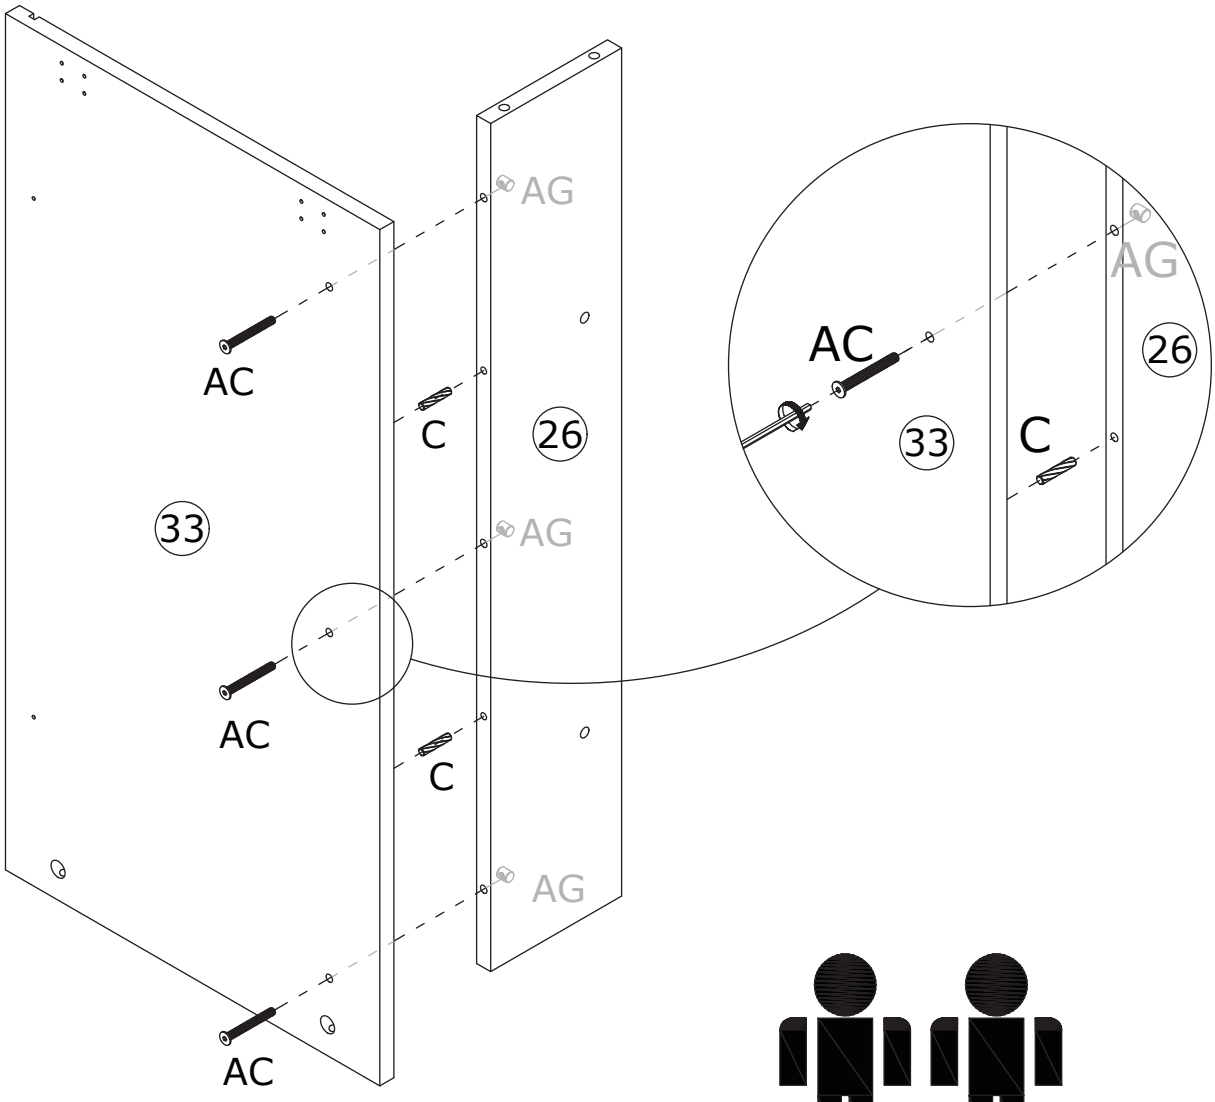


2 ADULTS

18

A x 16	C x 10	
 CRB1595A	 CRF0630A	

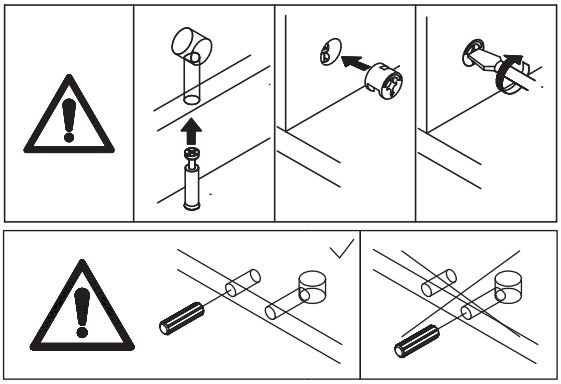



Connect panels 1, 2, 26, 27, 33,42, and 44 to panel 25 using wooden dowel (C), and tighten by turning eccentric wheel (A) clockwise.

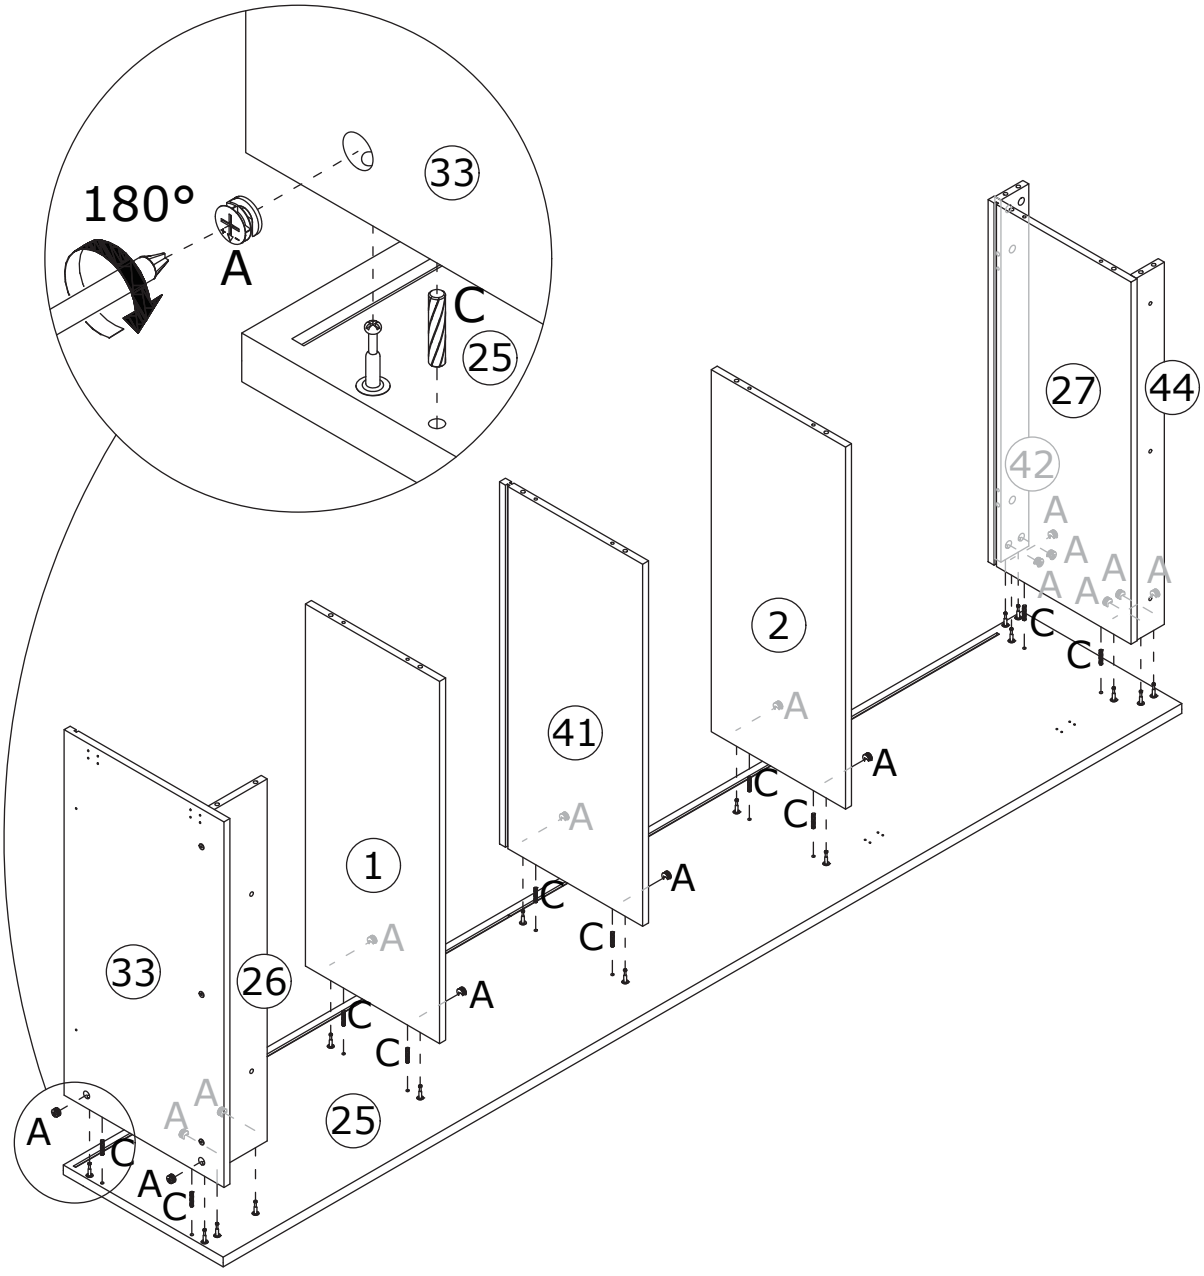

19


Insert panels 38 and 39 into the available slots.
Be sure to install panels 38 and 39 in the correct orientation.

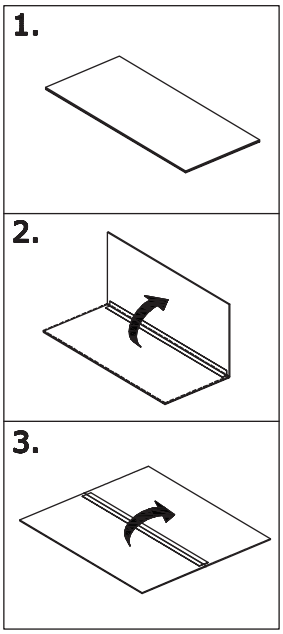

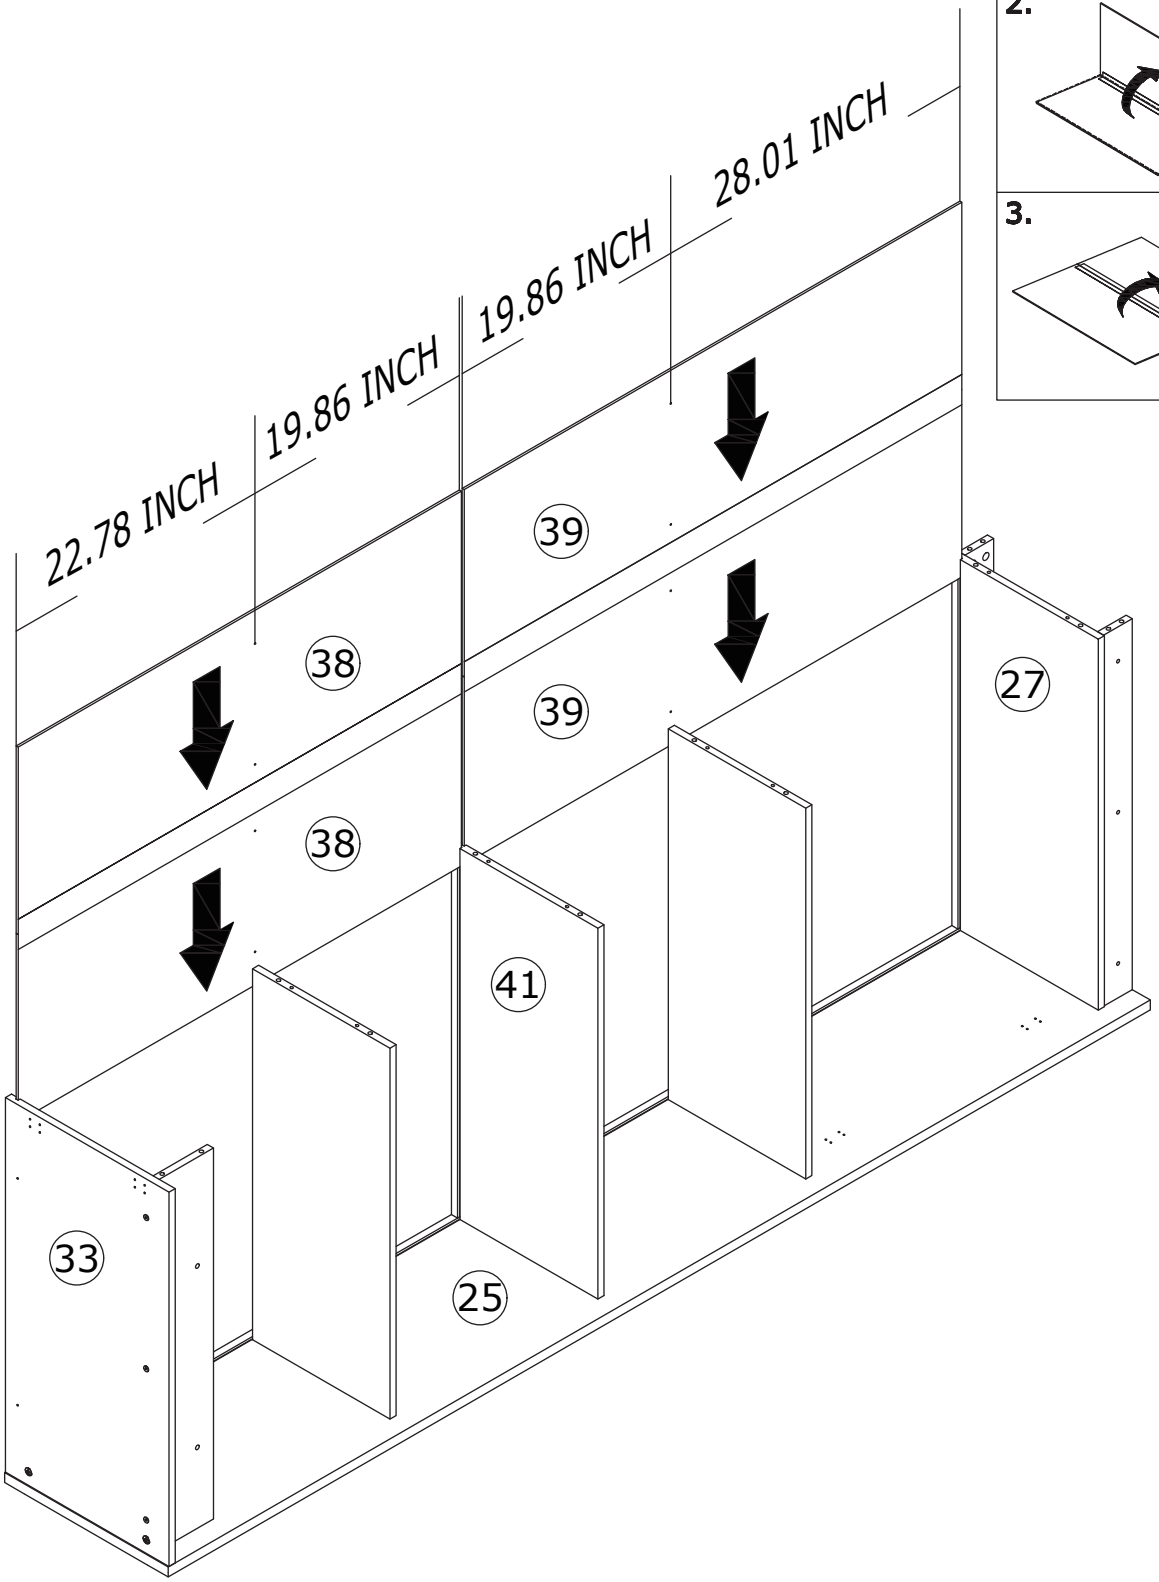


20


C x 8





CRF0630A

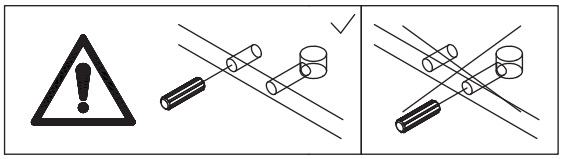


Install wooden dowel (C) into panels 1, 2, 27, and 41.

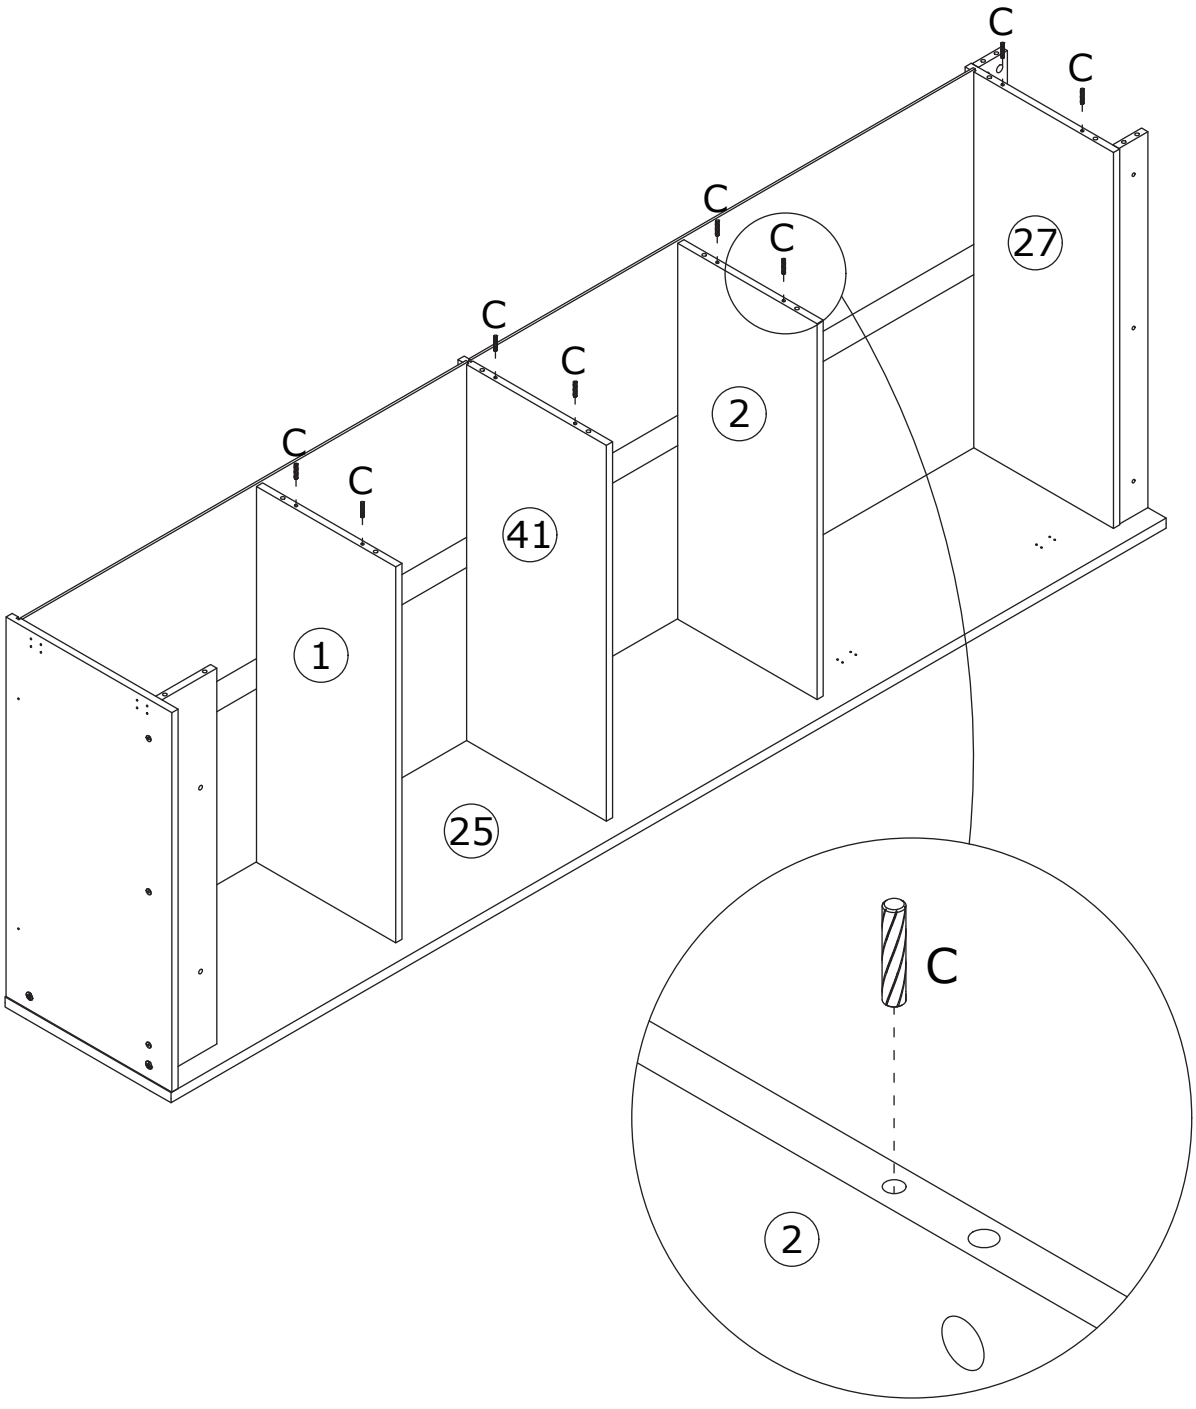


21

B x 14	D x 14	
 CRA0635B		

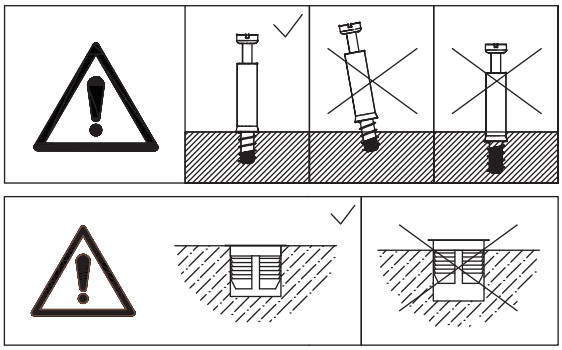

First, attach plug (D) to panel 30, then screw self-tapping rod (B) onto the plugs.

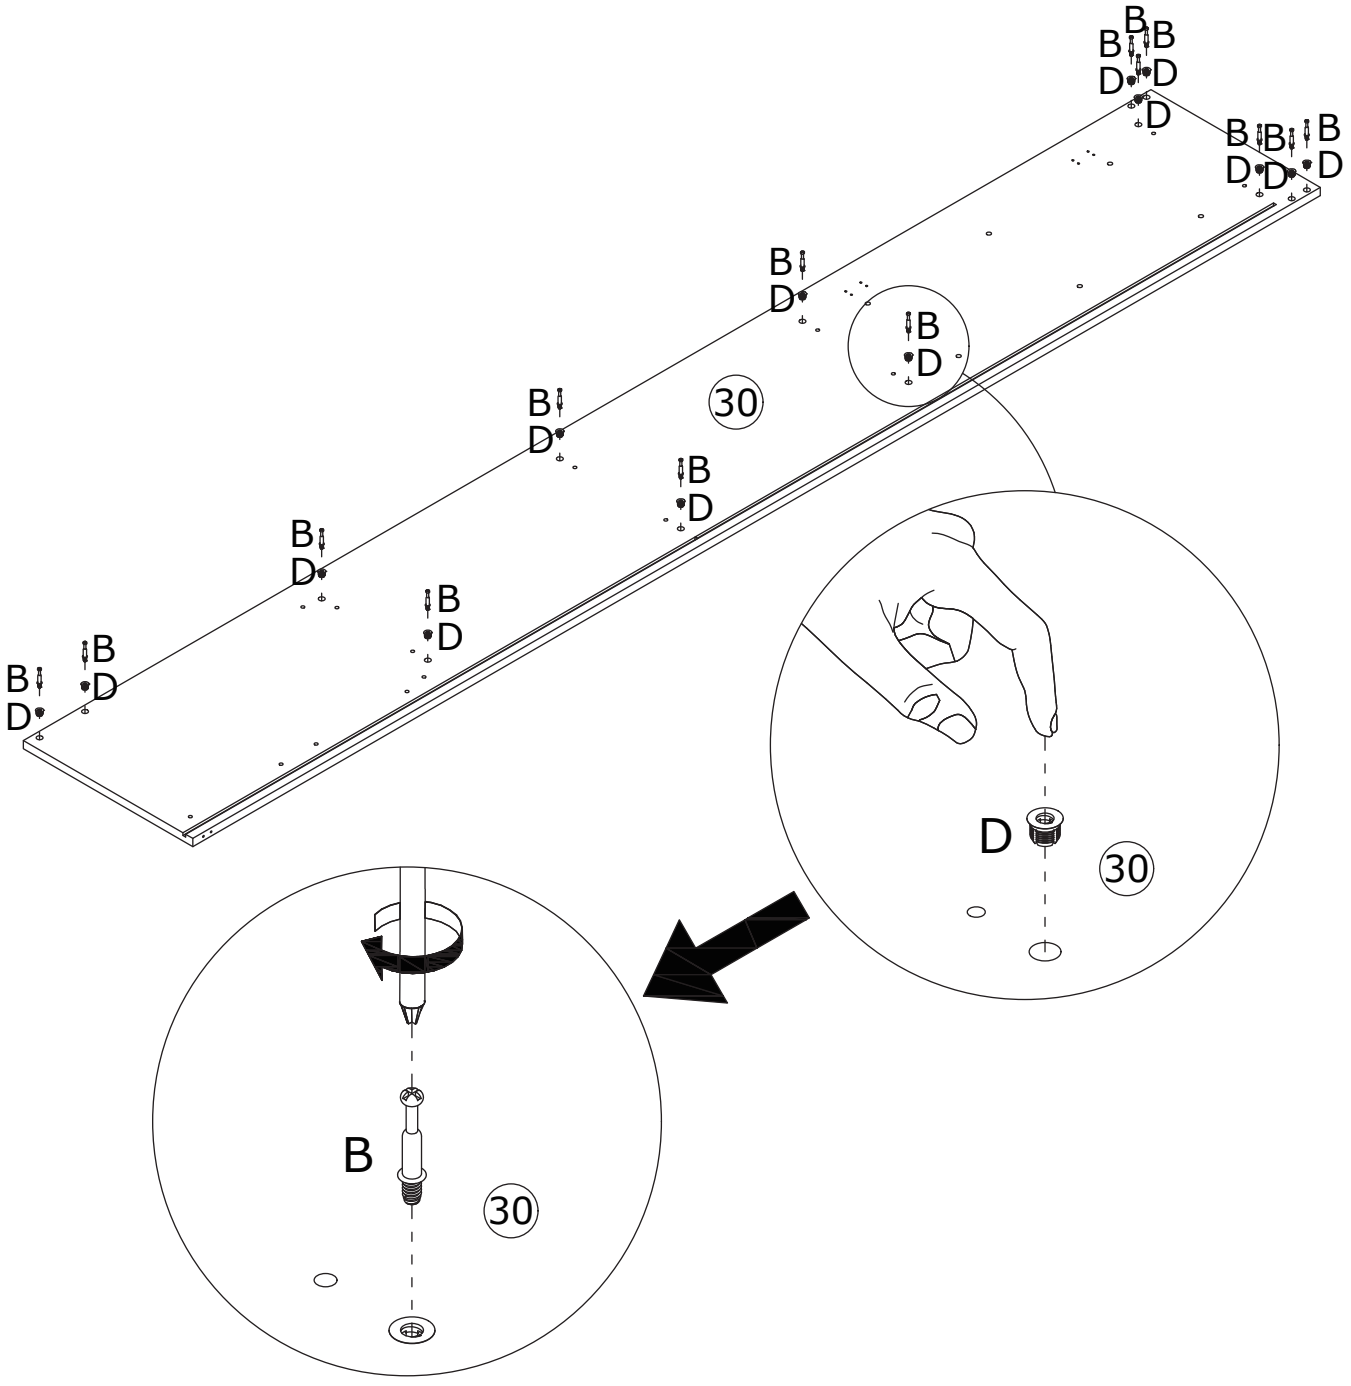



22

A x 14




CRB1595A



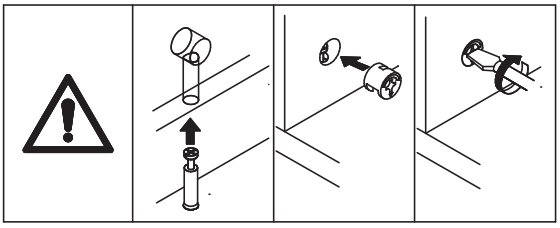

Connect panel 30 to the mounting unit, and tighten by turning eccentric wheel (A) clockwise.

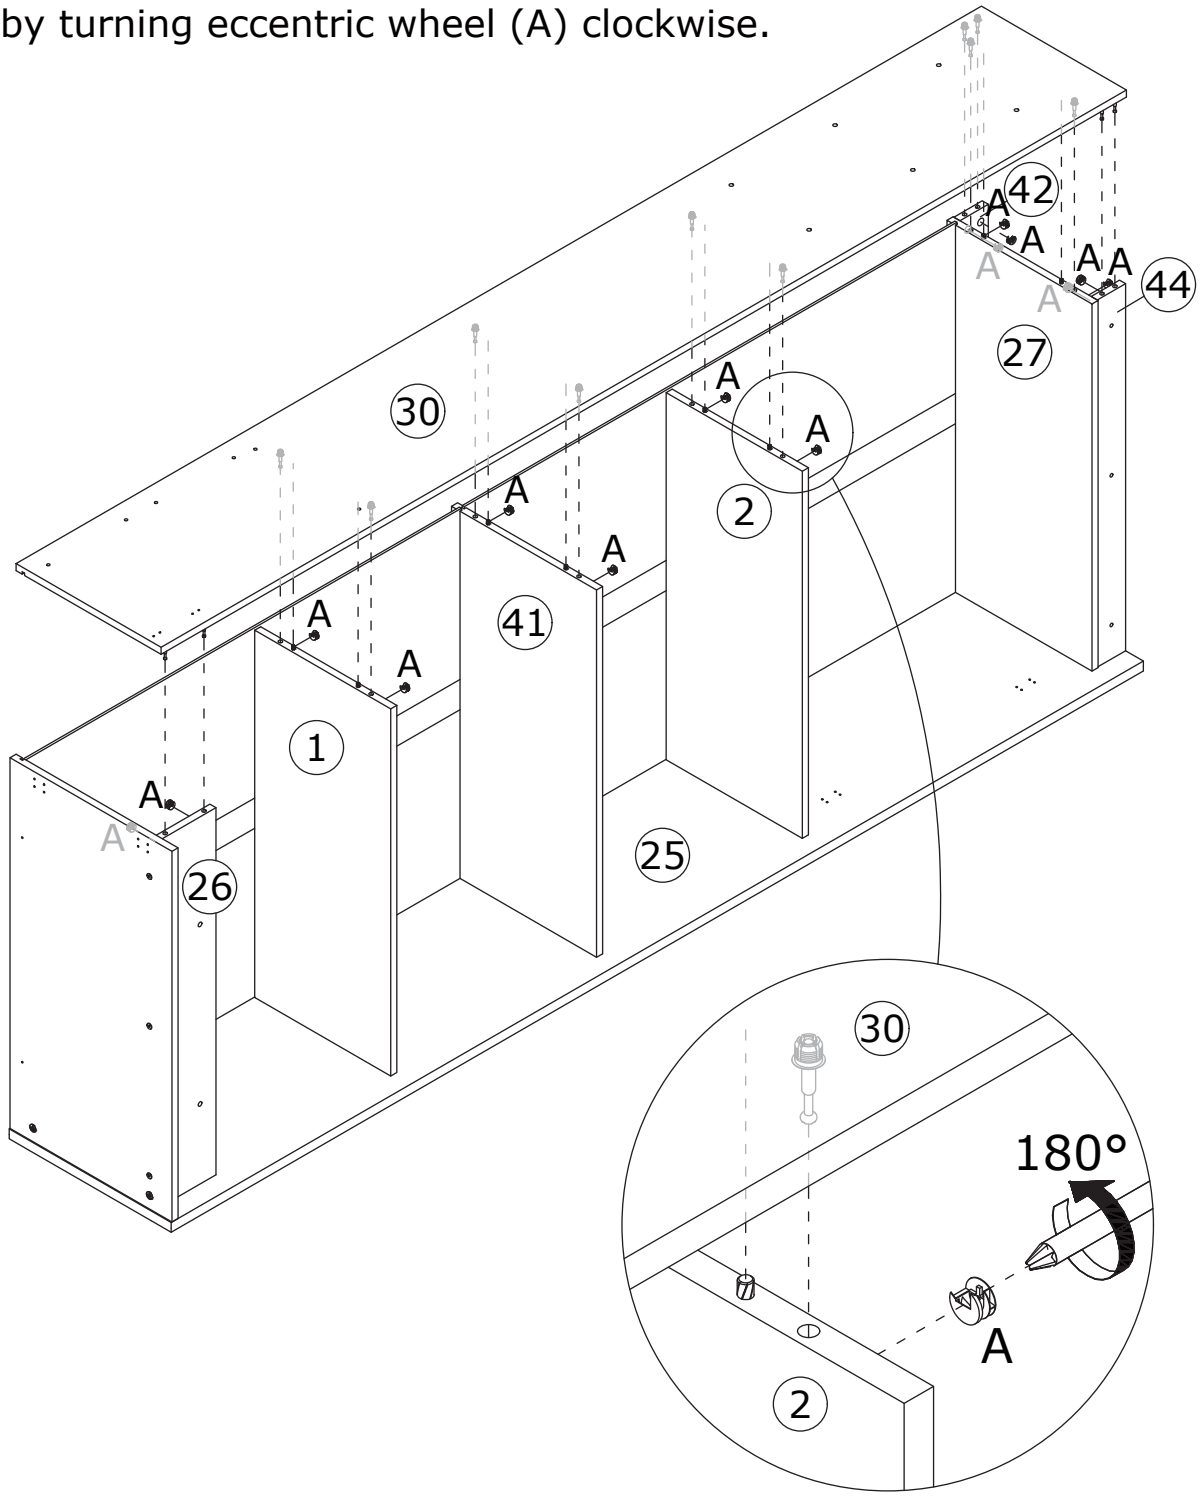


23


P x 8




CRE0316A




Secure panels 38 and 39 to panels 1 and 2 using screw (P).

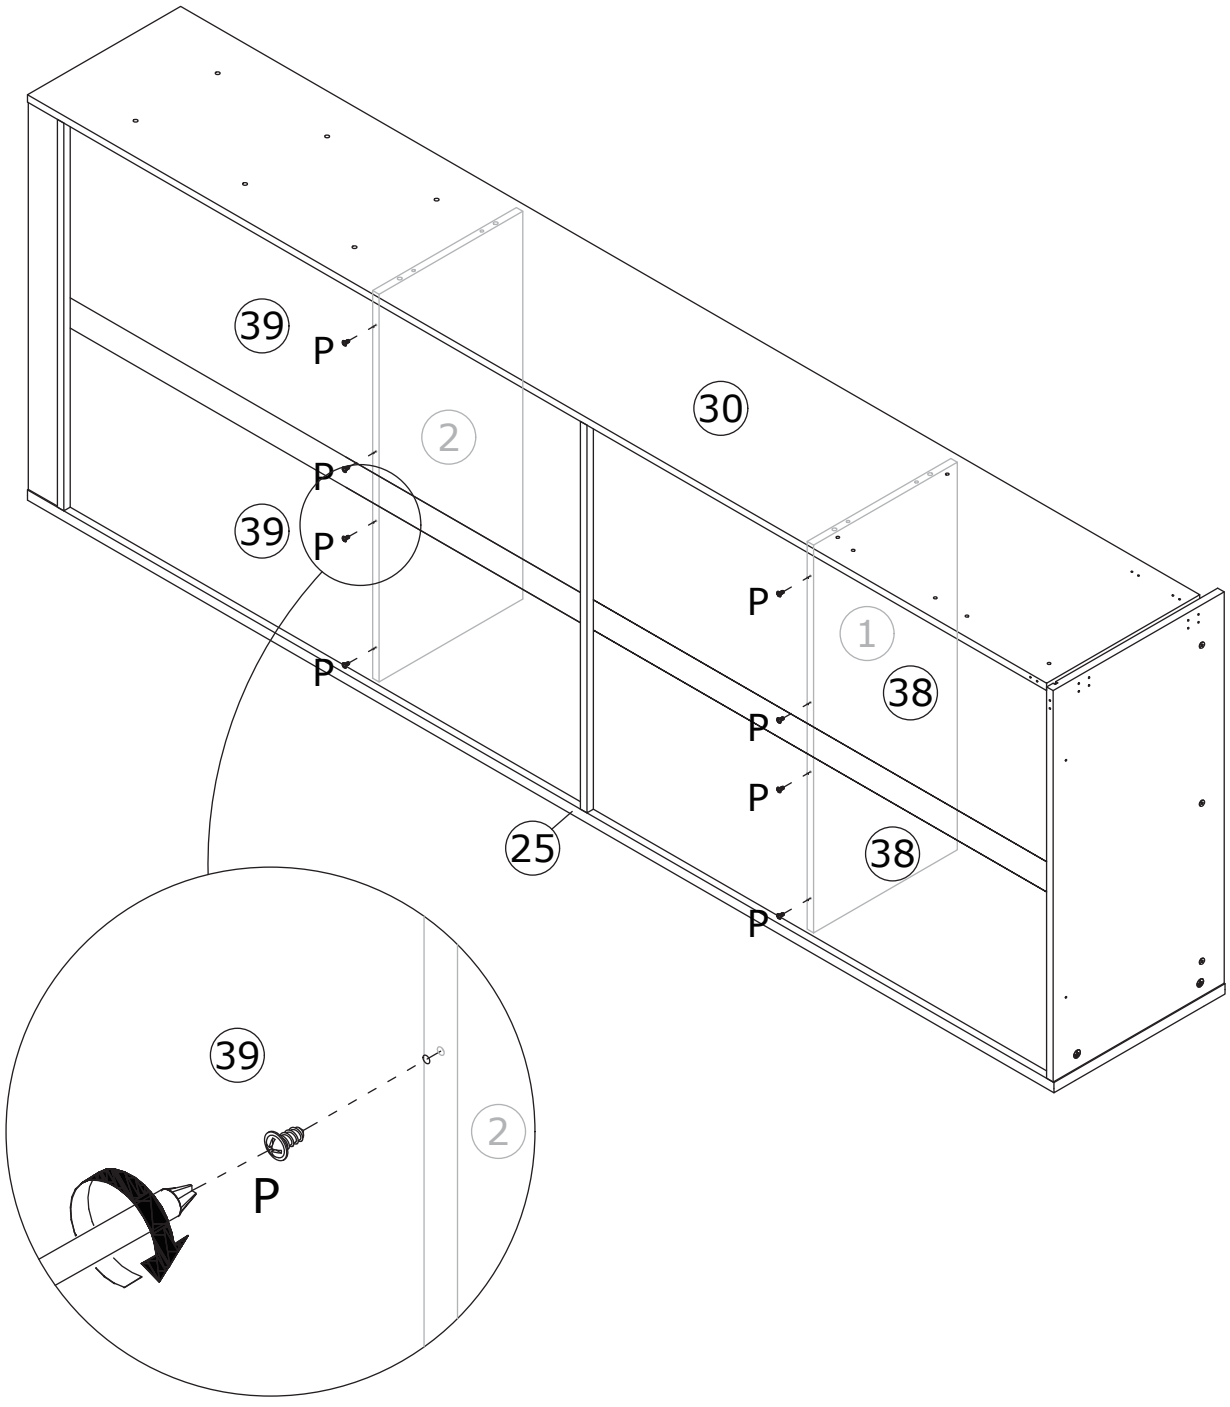



24

AE x 3	AJ x 1	
 CRG0670A	 M4	

Attach panels 31, 40, and 43 to panel 44 using screw (AE).
Pay attention to the installation orientation of panels 31, 40, and 43.

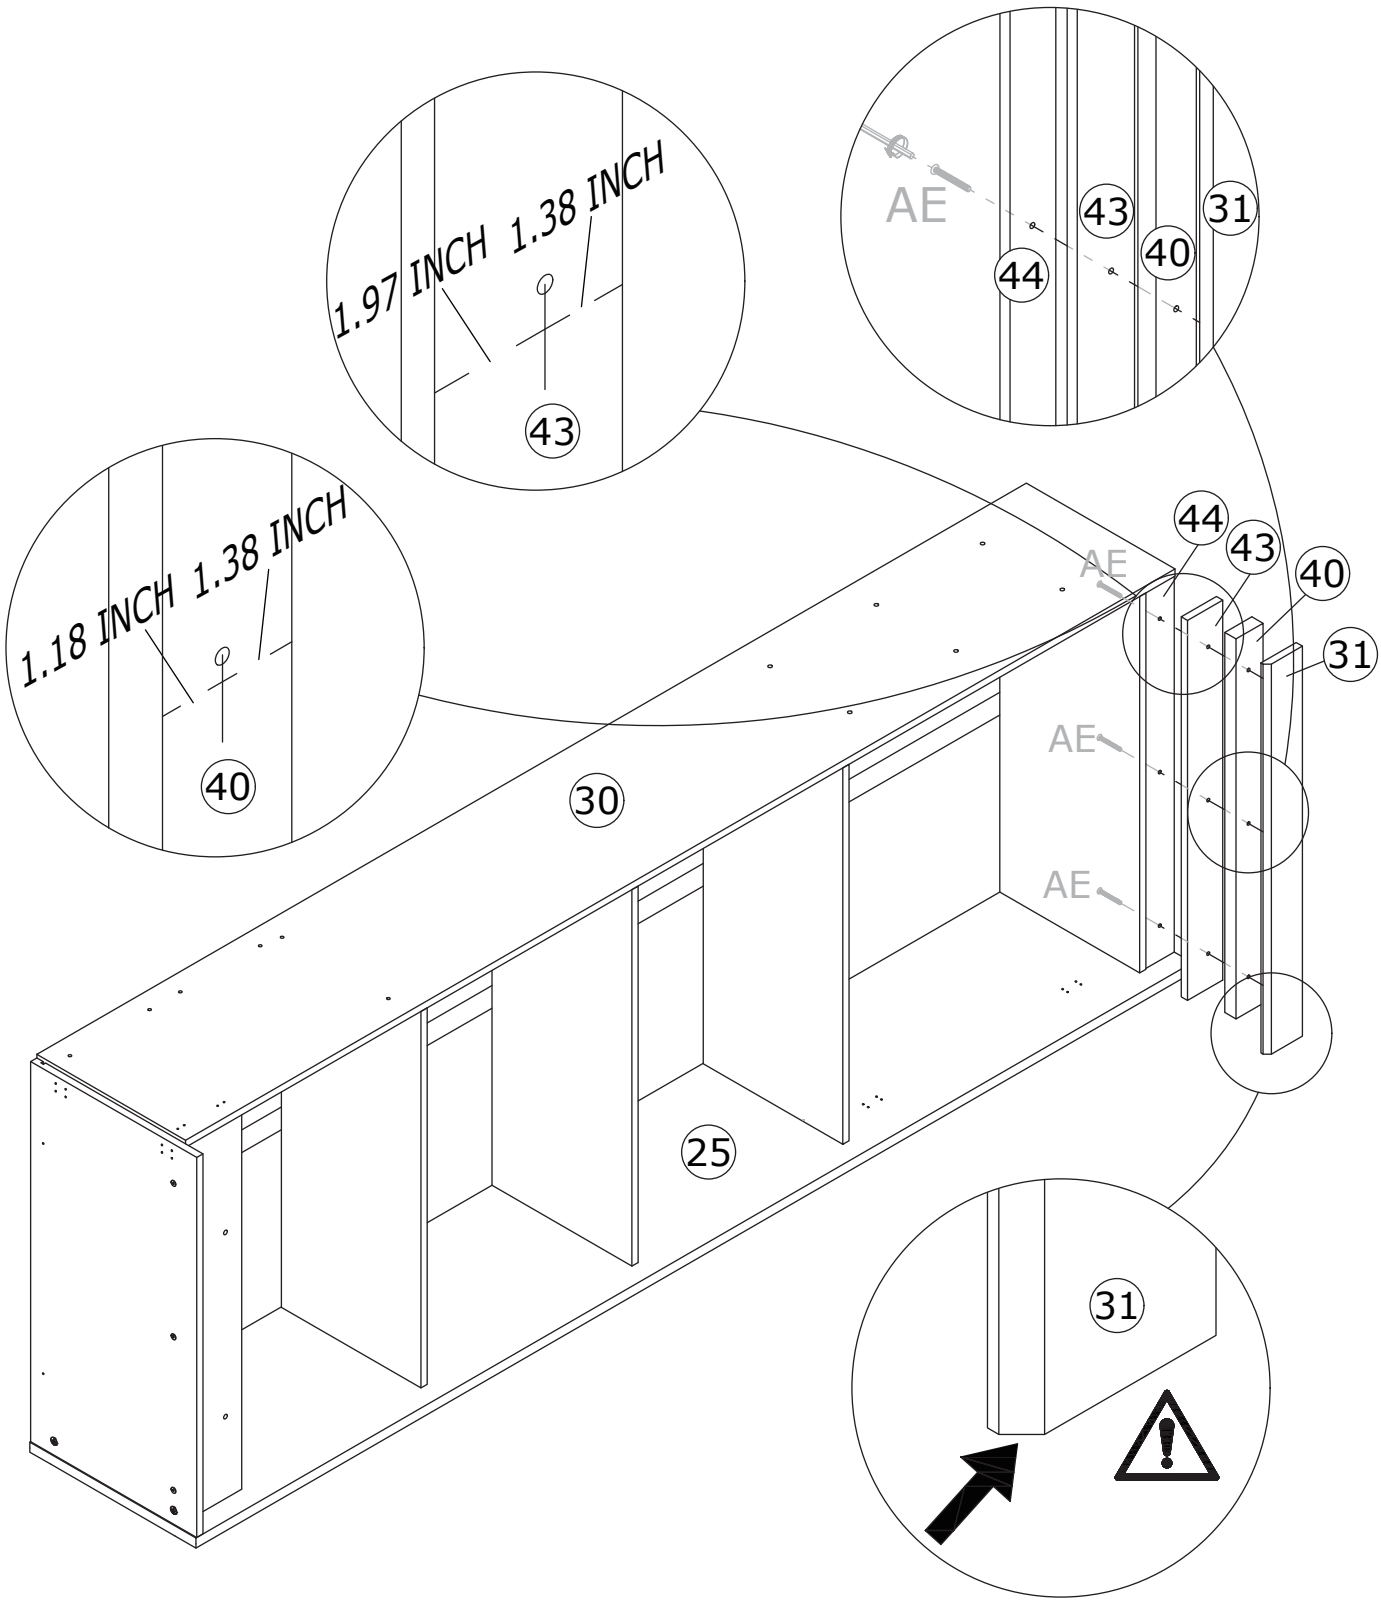


25



K x 28	L x 28	
 CRD0314A		

First, insert clip (L) into the back slots, then secure it using screw (K).


	F	G	K
			
	CRD3512A	CRD3514A	CRD0314A

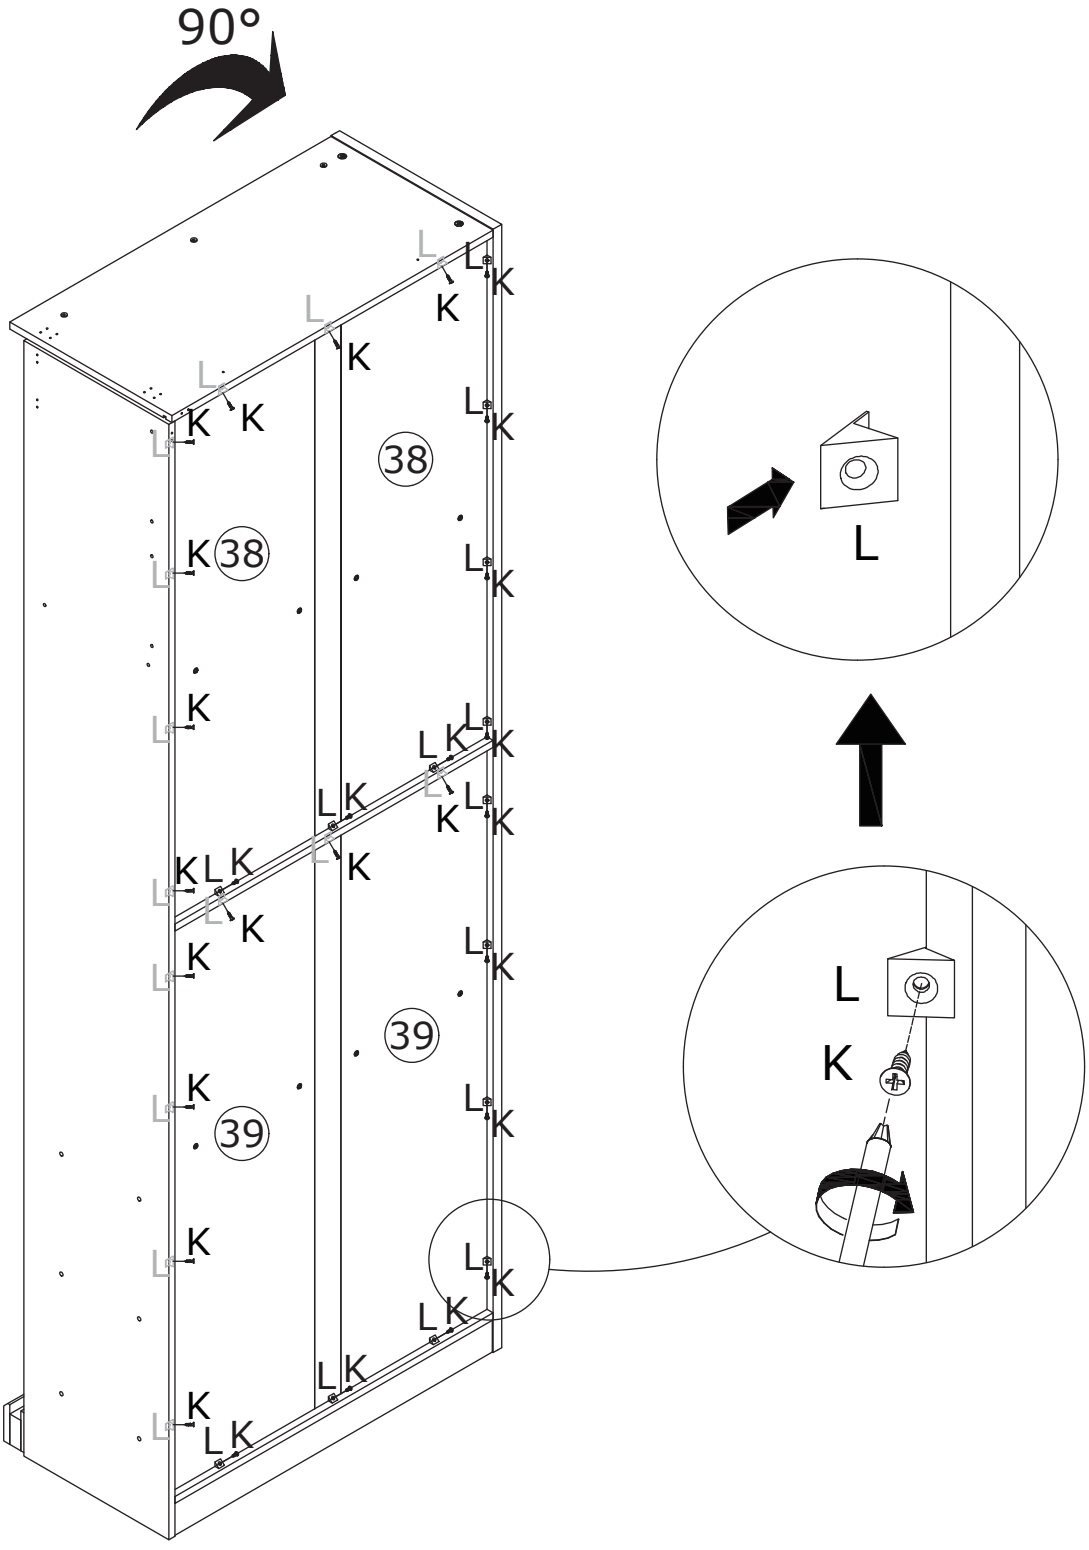


26


D x 6	F x 6	CL x 3	
	 CRD3512A	 WX1012A	

Attach plug (D) to panel 11.
Secure slide rail (CL) to panel 11 using screw (F).



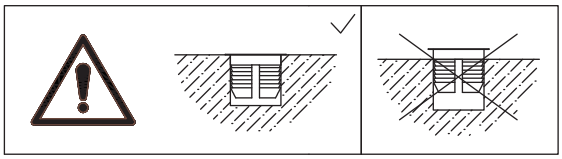


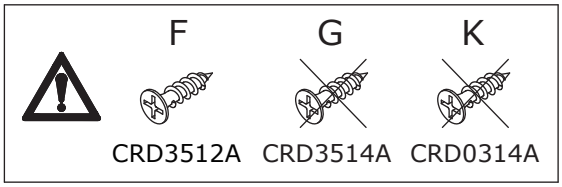




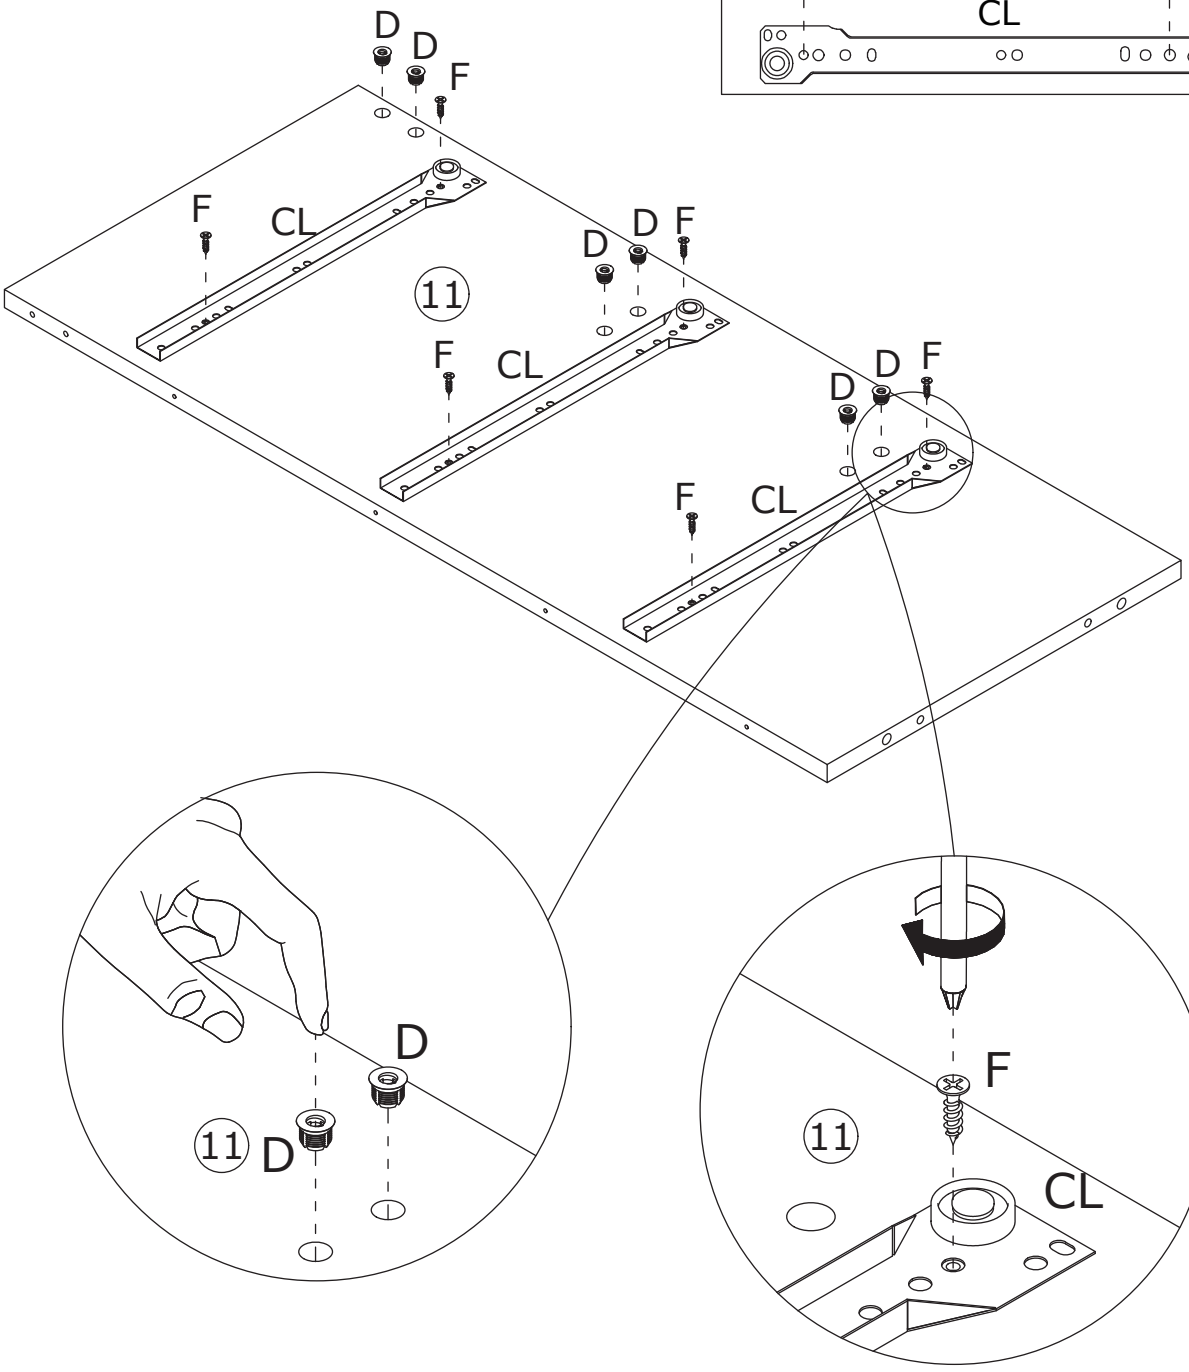



27

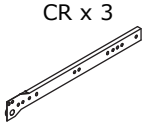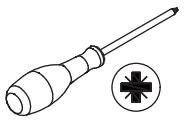
B x 6	D x 6	F x 6	CR x 3	
				
CRA0635B		CRD3512A	WX1012A	

Flip the same panel over, attach plug (D) to panel 11, then screw self-tapping rod (B) onto the plugs.
Secure slide rail (CR) to panel 11 using screw (F).

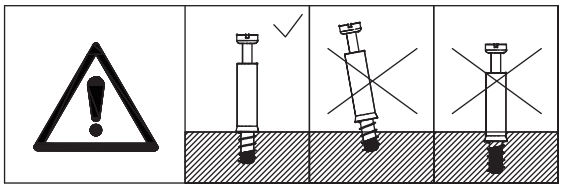

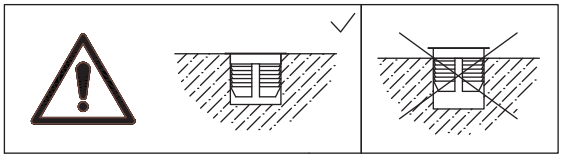

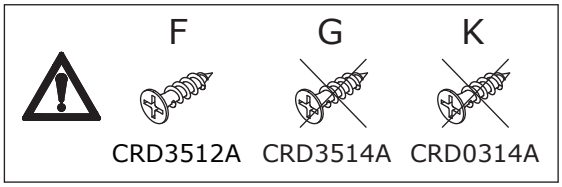

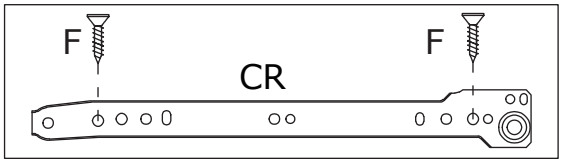


- **Please pay attention to the position of the screws on the slide rail.**
  It is different from the previous step.


28

A x 4





CRB1595A




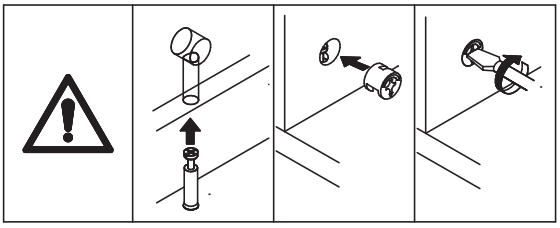




Connect panel 37 to panel 11, and tighten by turning eccentric wheel (A) clockwise.
Note: Place a shim with a thickness greater than 0.75" under panel 37.

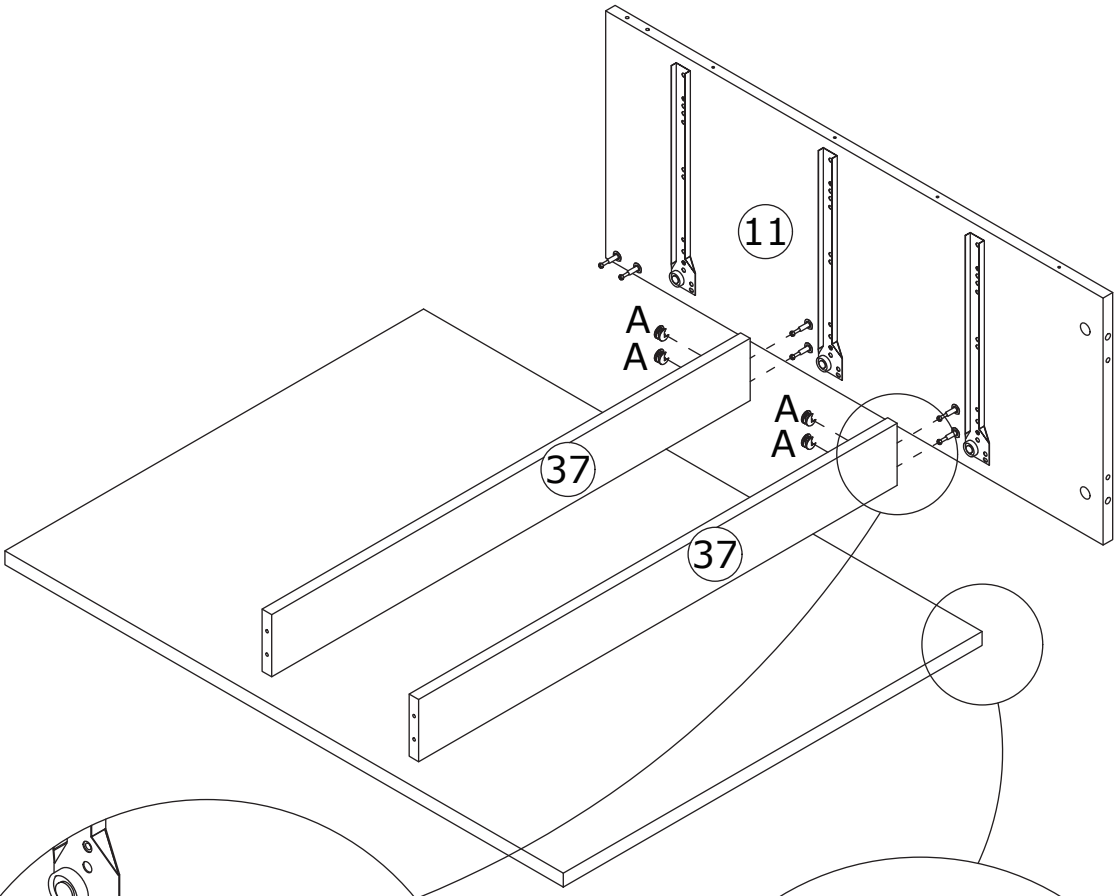

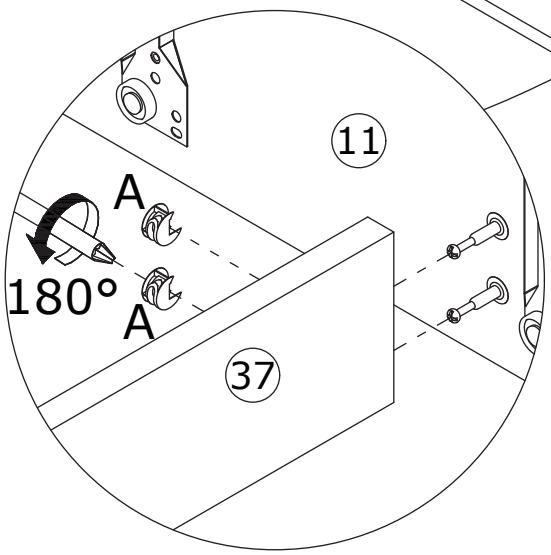


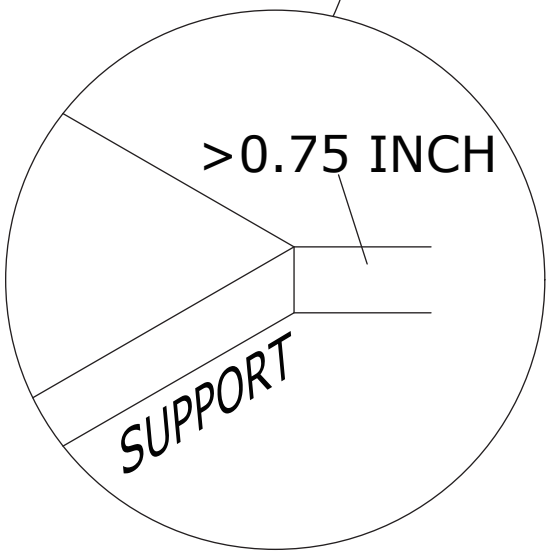



29

B x 2	D x 2	F x 6	CL x 3	
				
CRA0635B		CRD3512A	WX1012A	

First, attach plug (D) to panel 8, then screw self-tapping rod (B) onto the plugs.
Secure slide rail (CL) to panel 8 using screw (F).

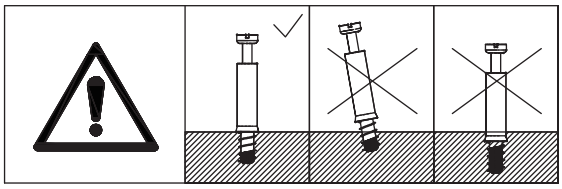

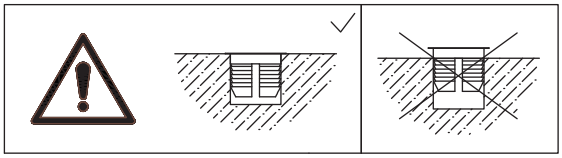

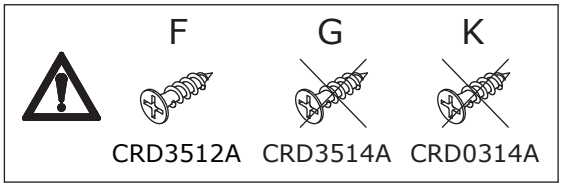





Please pay attention to the position of the screws on the slide rail.

30


E x 4



CRC0540A



Secure panel 8 to panel 37 using screw (E).
Note: Place a shim with a thickness greater than 0.75" under panels 8 and 37.

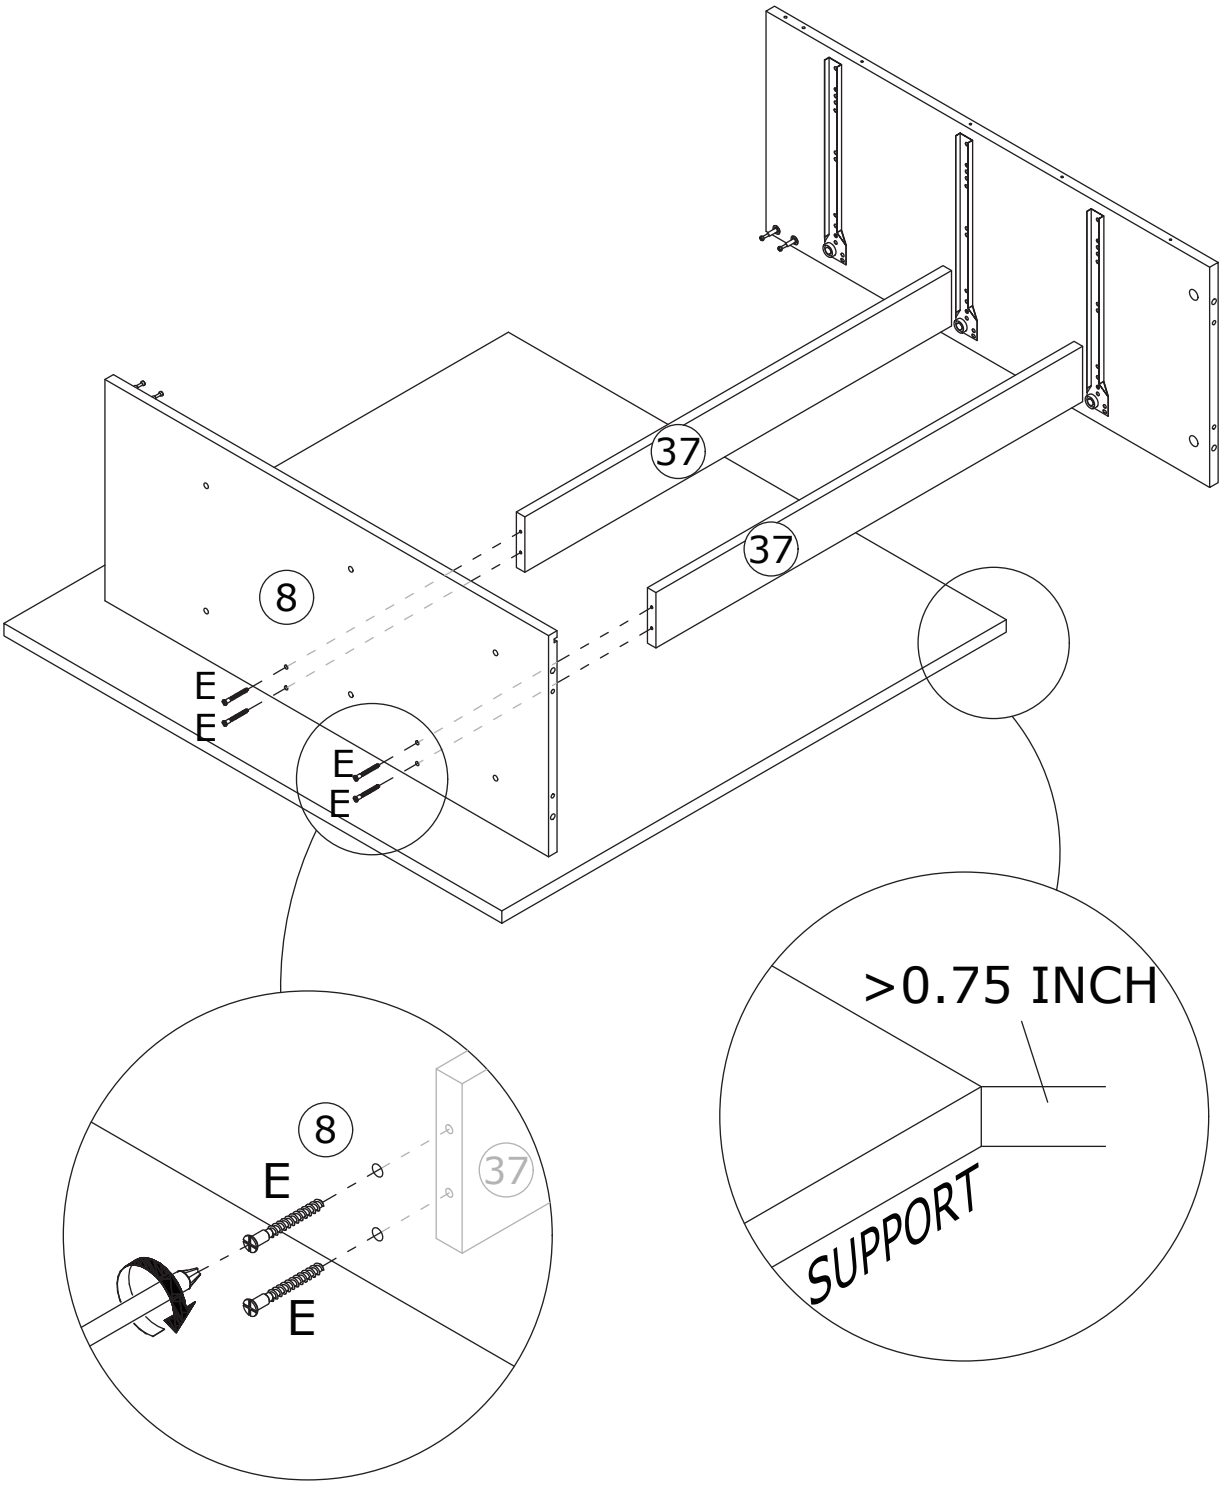



31

A x 2




CRB1595A



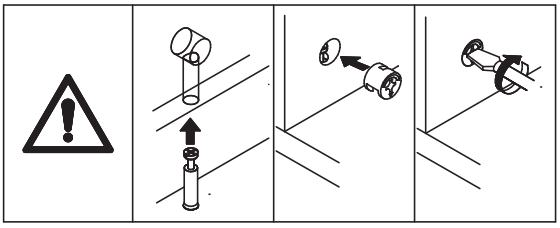


Connect panel 7 to panel 8, and tighten by turning eccentric wheel (A) clockwise.

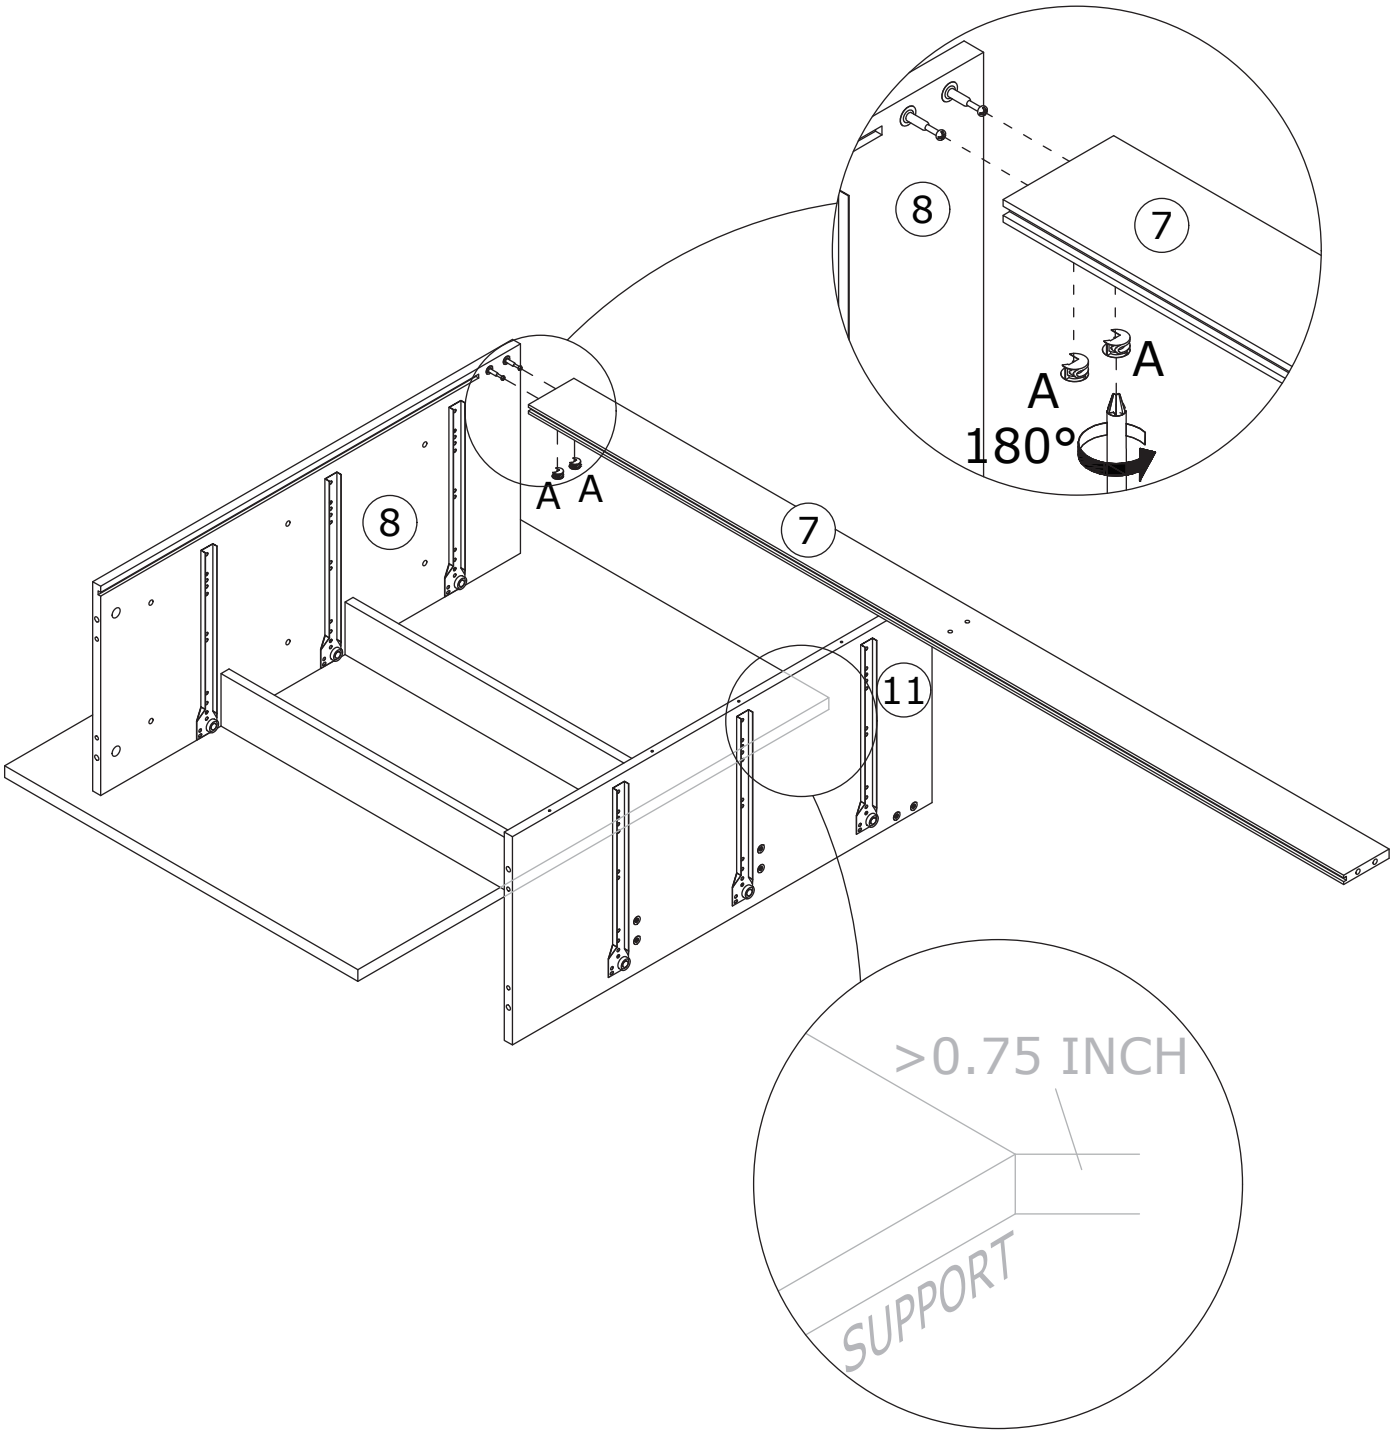


32


E x 2



CRC0540A




Secure panel 7 to panel 11 using screw (E).

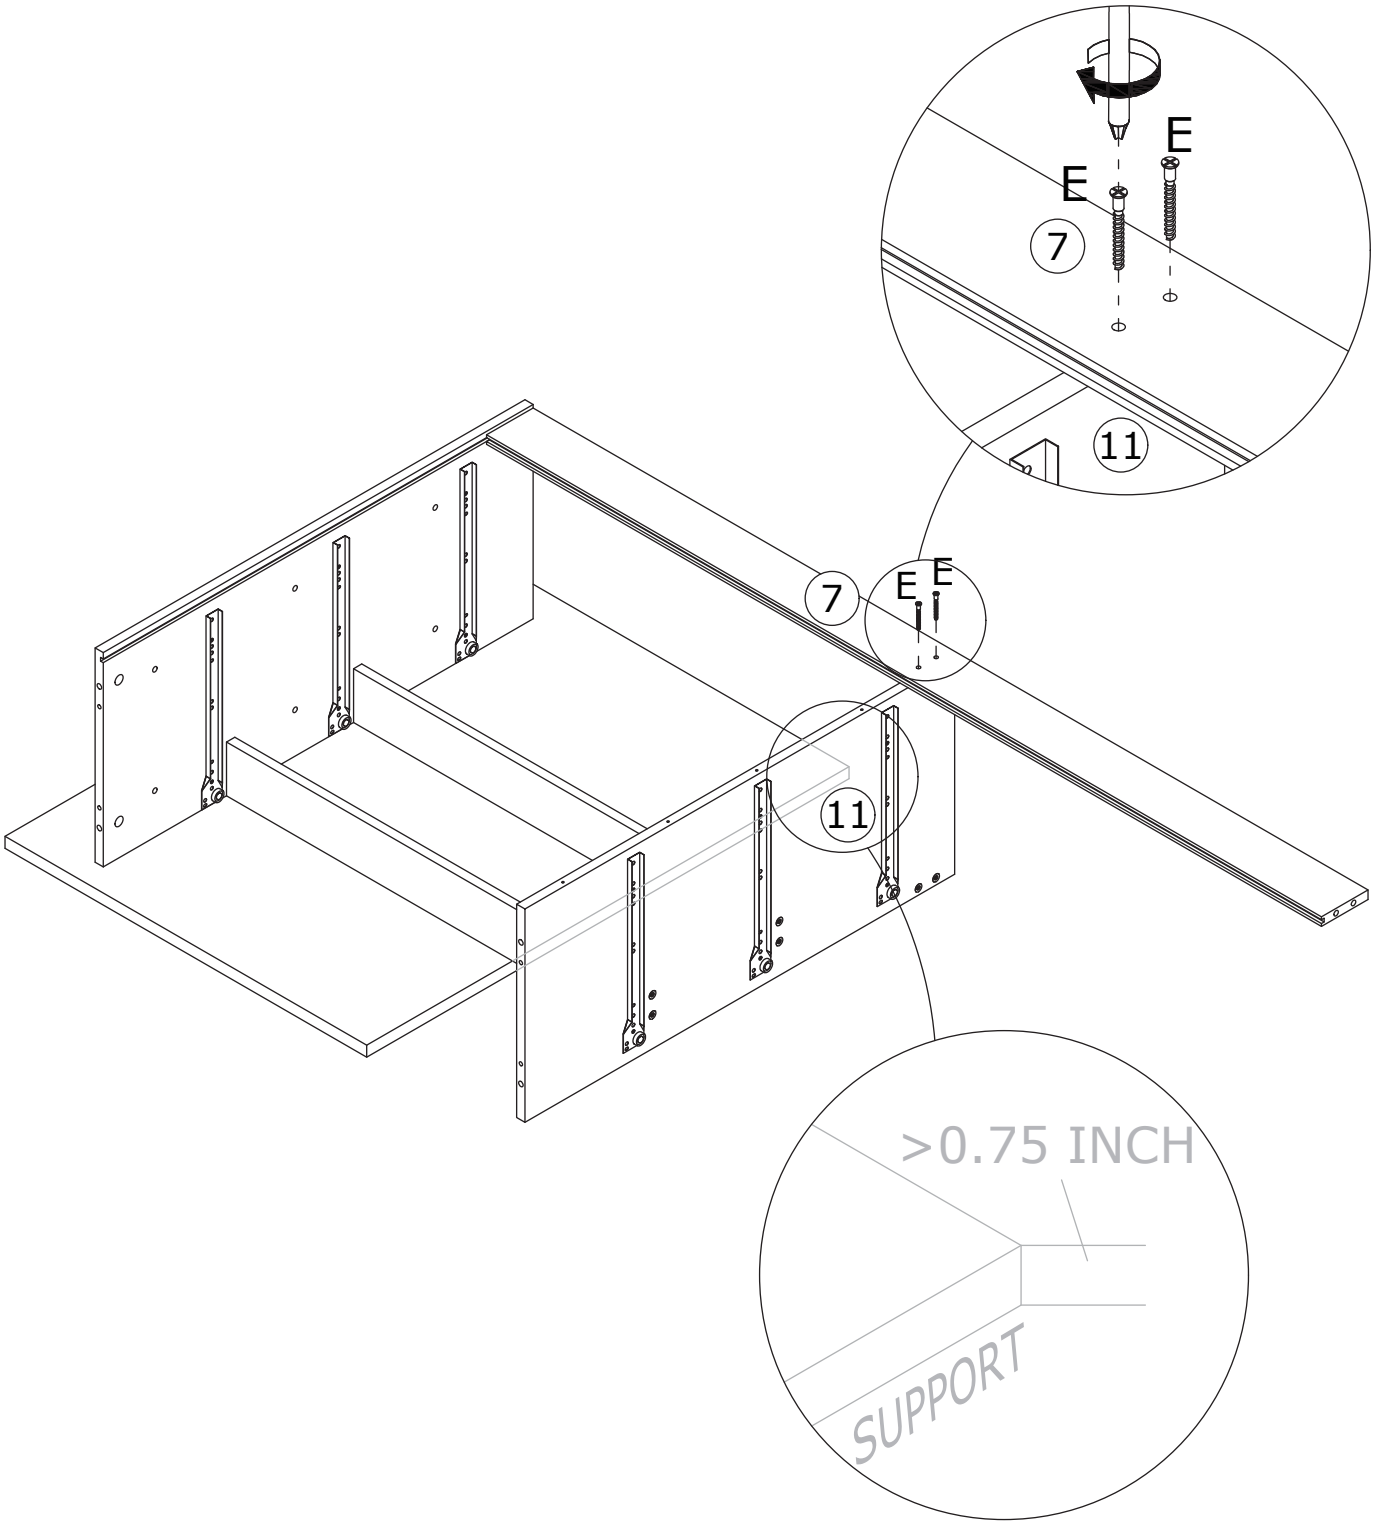



33

B x 4




CRA0635B



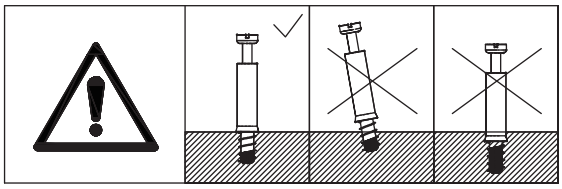

Screw self-tapping rod (B) onto panel 11.

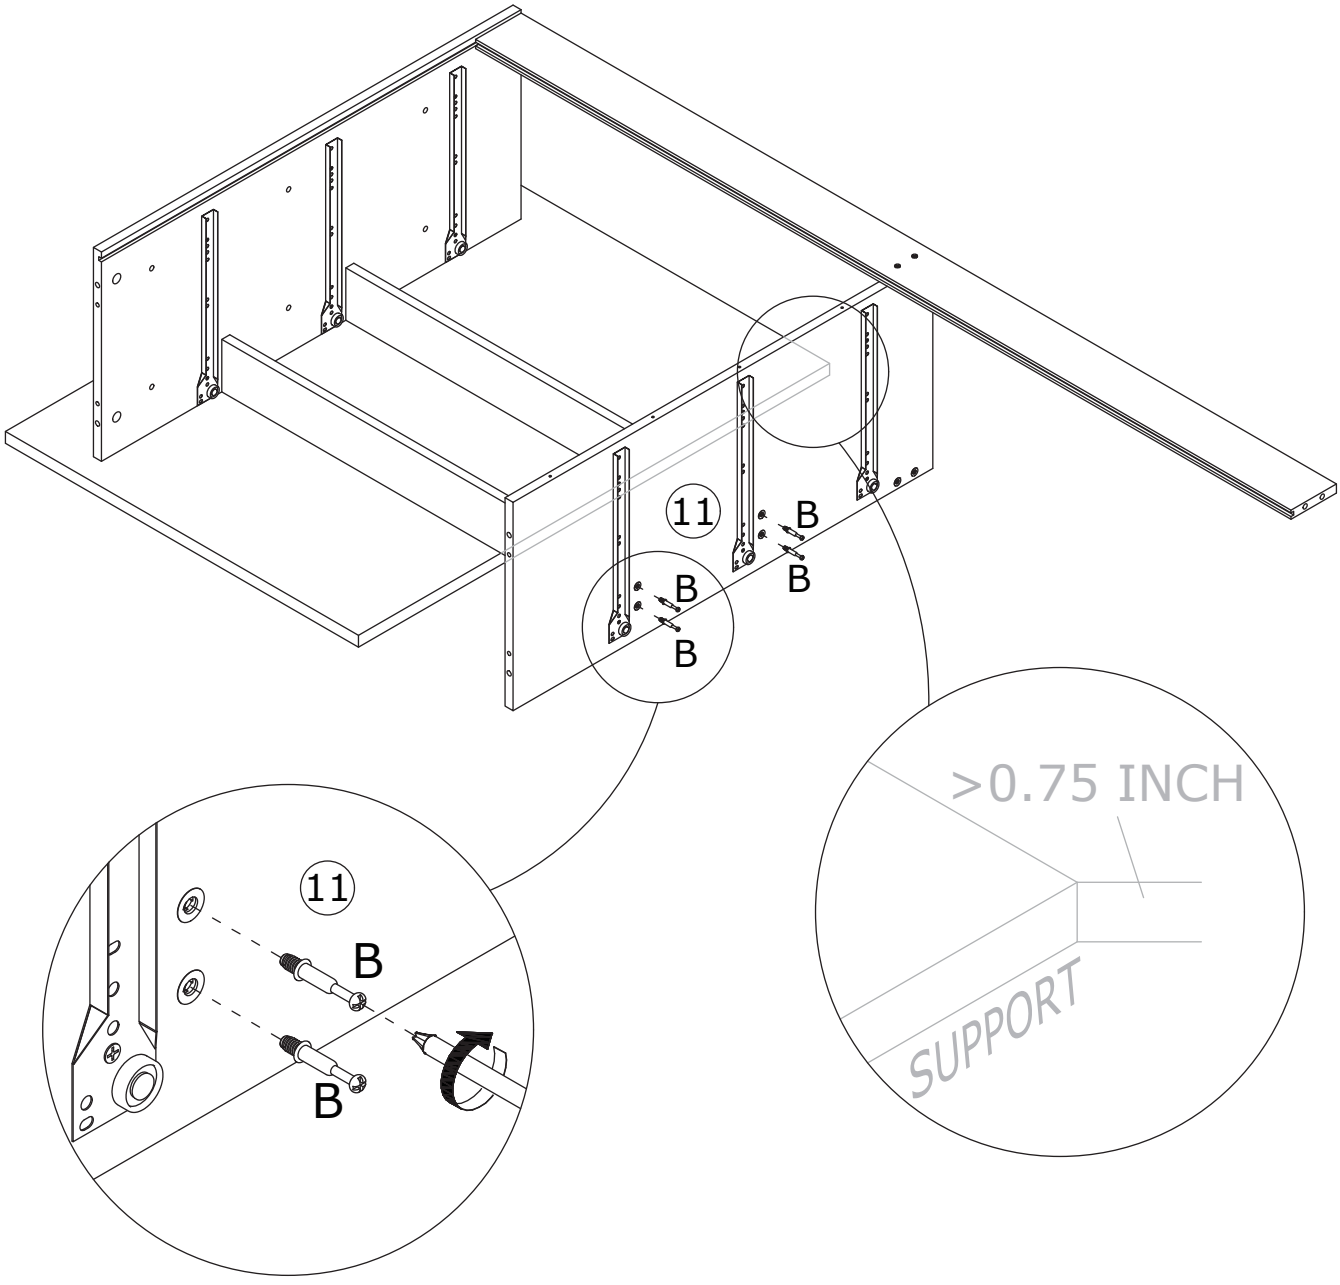



34

A x 4




CRB1595A



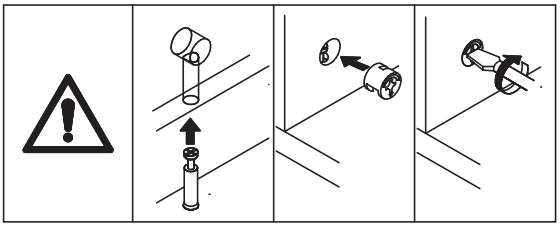


Connect panel 37 to panel 11, and tighten by turning eccentric wheel (A) clockwise.
Note: Place a shim with a thickness greater than 0.75" under panel 37.

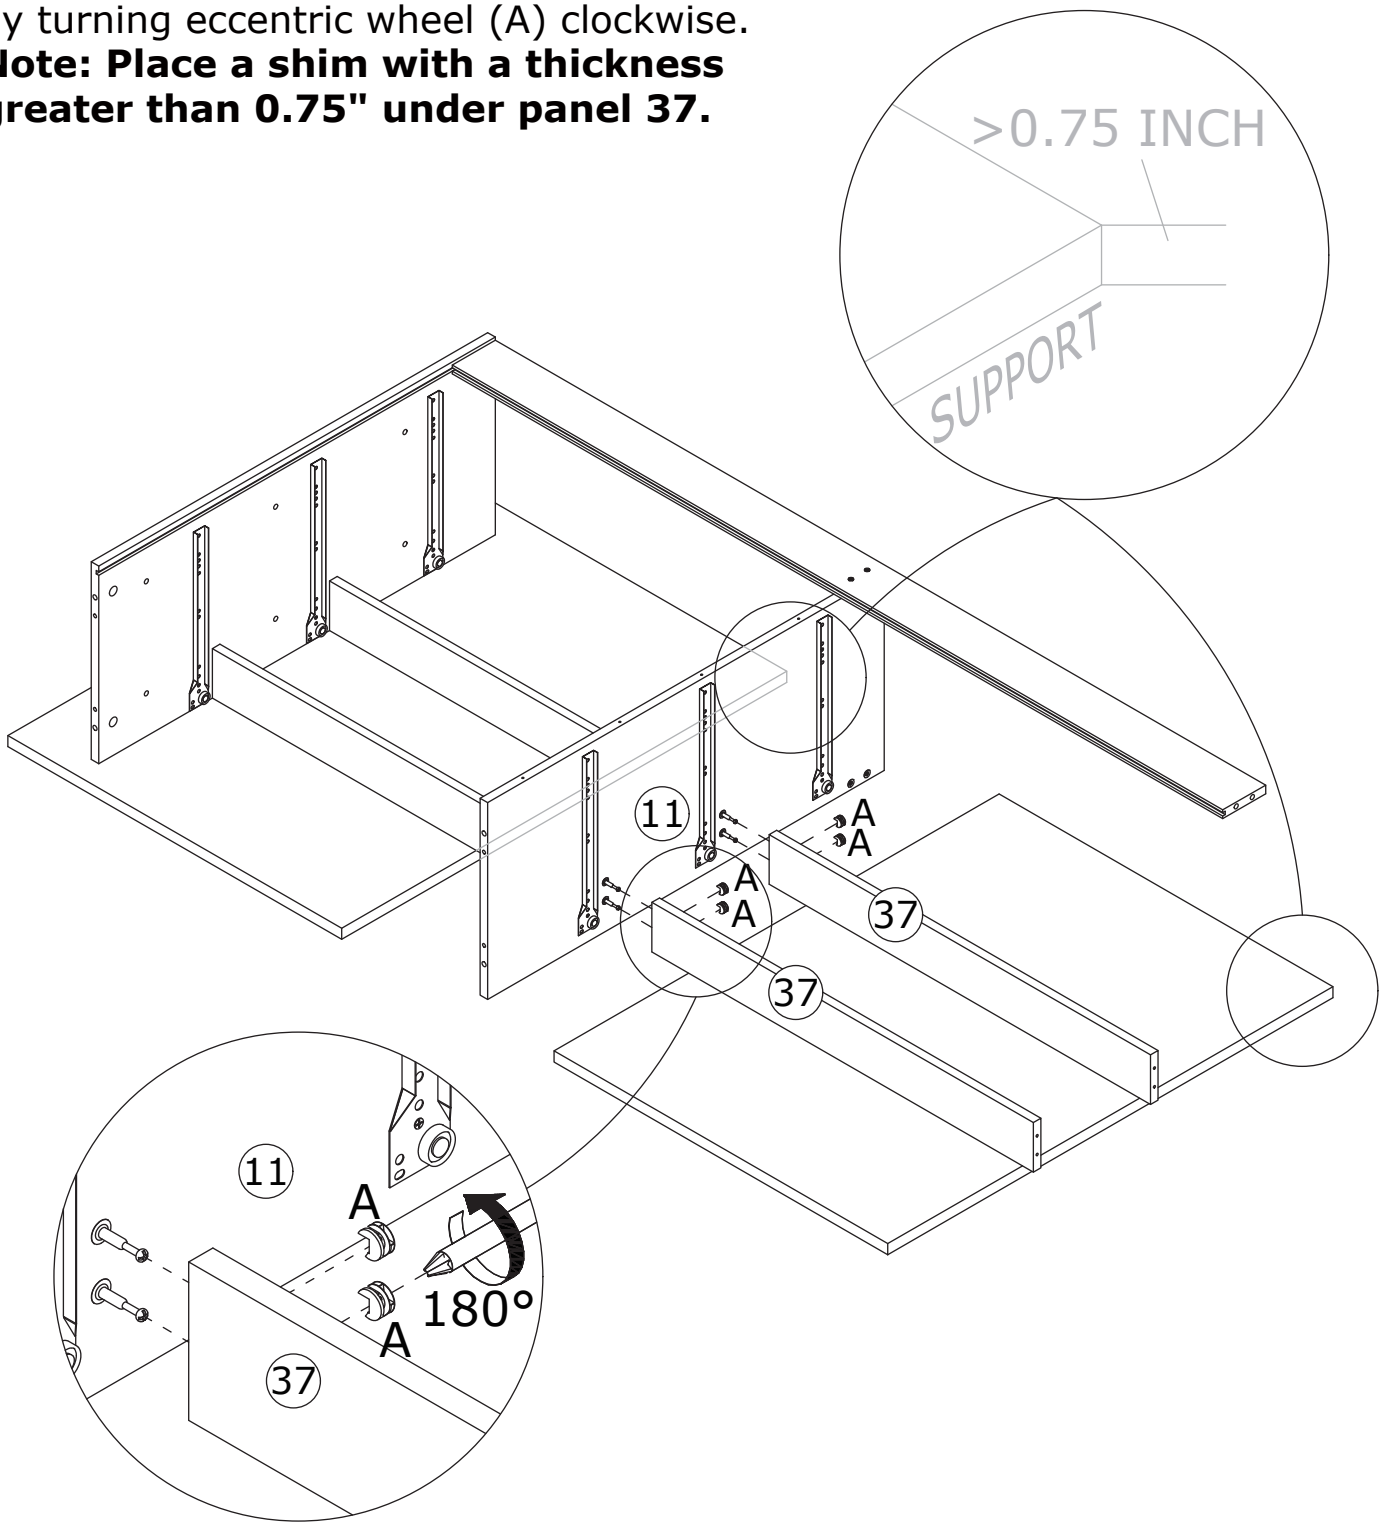



35

B x 2	D x 2	F x 6	CR x 3	
CRA0635B		CRD3512A	WX1012A	

First, attach plug (D) to panel 6, then screw self-tapping rod (B) onto the plugs.
Secure slide rail (CR) to panel 6 using screw (F).


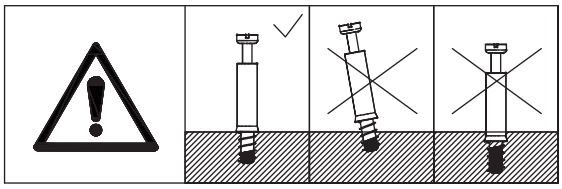


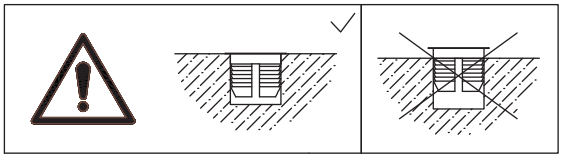


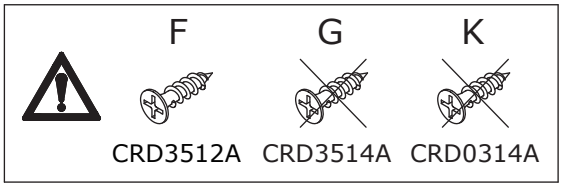




36

A x 2	E x 4	
 CRB1595A	 CRC0540A	

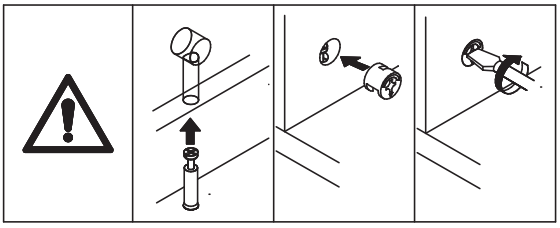

Connect panel 6 to panel 7, and tighten by turning eccentric wheel (A) clockwise.
Secure panel 6 to panel 37 using screw (E).
Note: Place a shim with a thickness greater than 0.75" under panels 6 and 37.

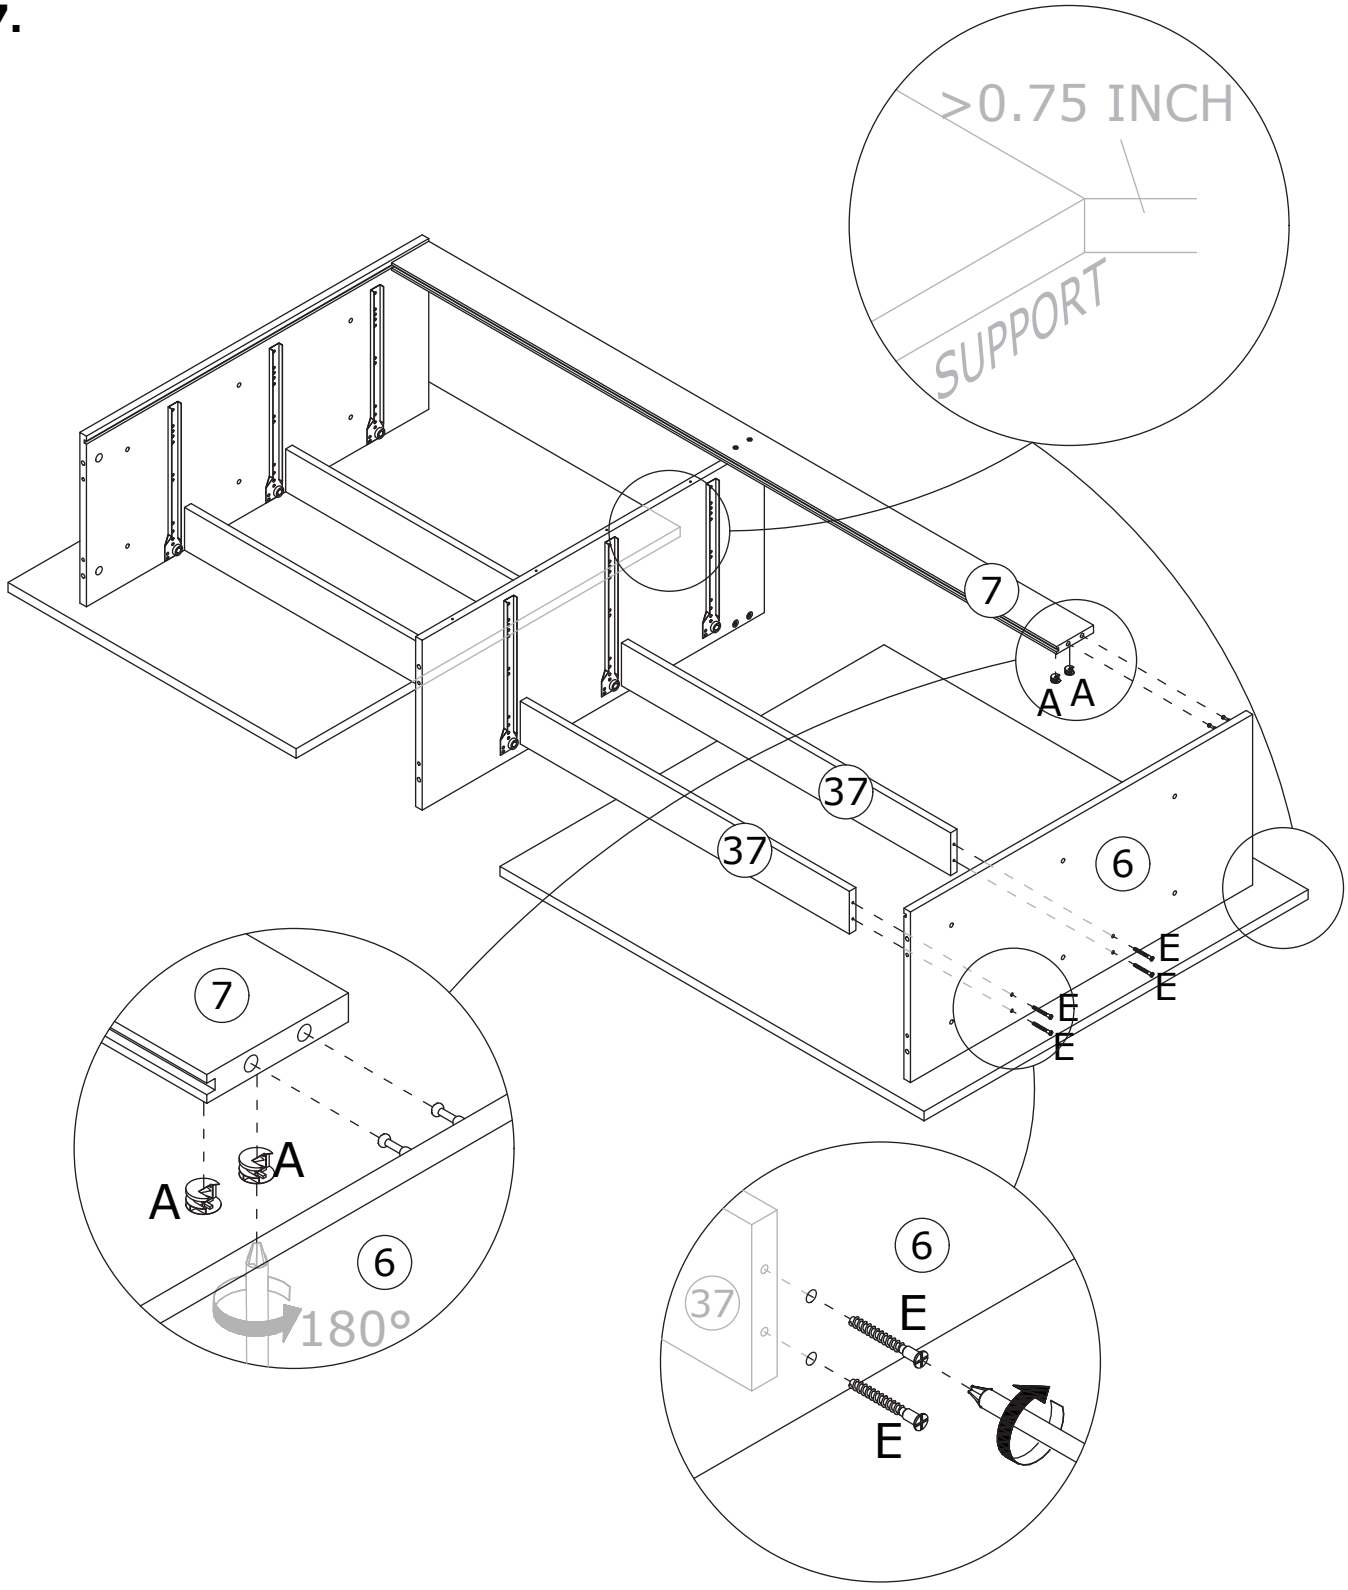



37

A x 2




CRB1595A



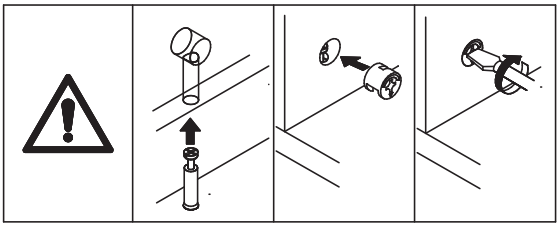


Turn the cabinet upside down, connect panel 14 to panel 11, and tighten by turning eccentric wheel (A) clockwise.

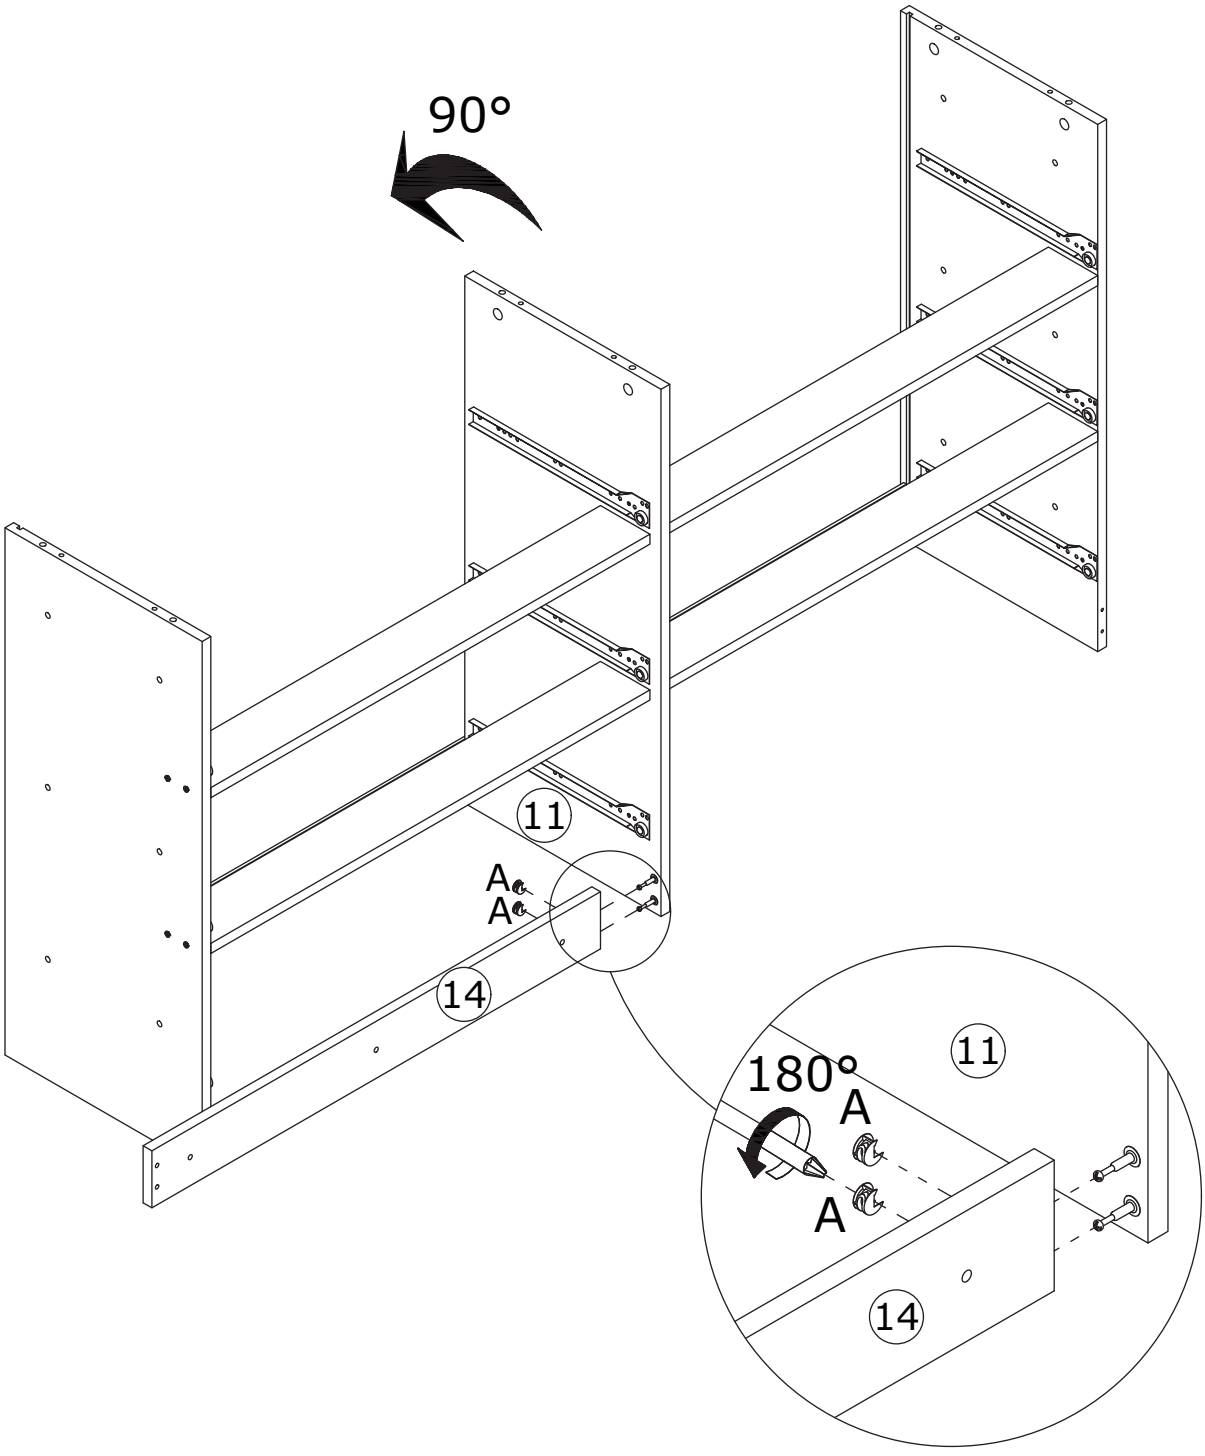


38


E x 2



CRC0540A




Secure panel 14 to panel 8 using screw (E).

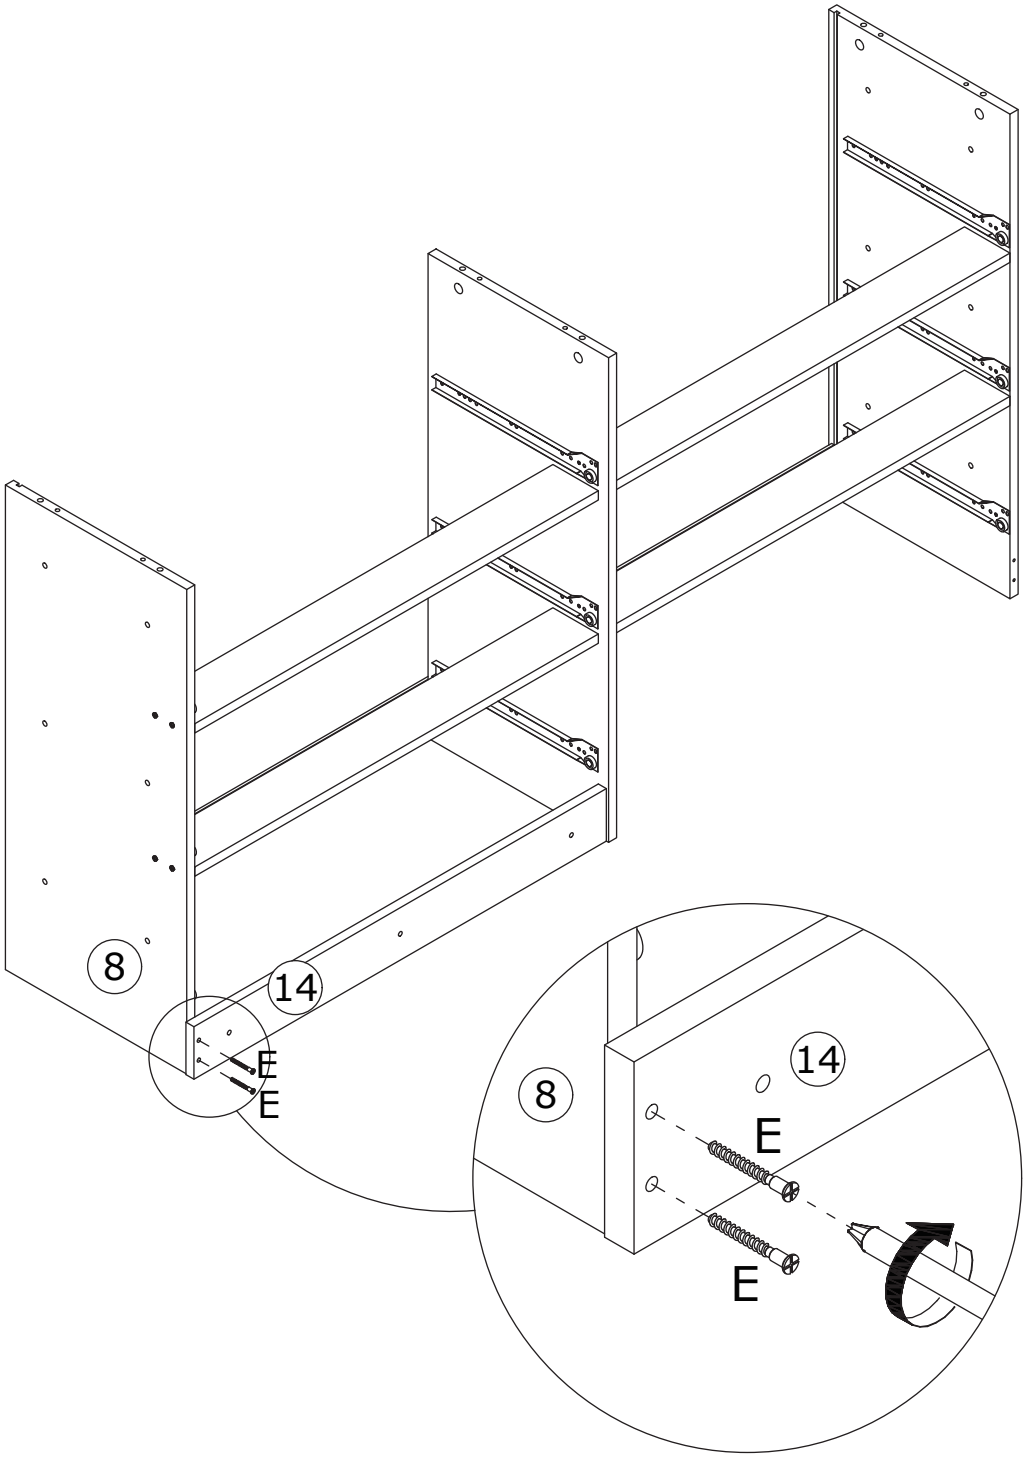



39

B x 2




CRA0635B



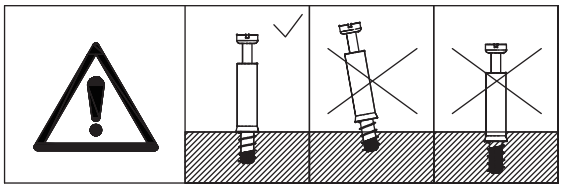

Screw self-tapping rod (B) onto panel 11.

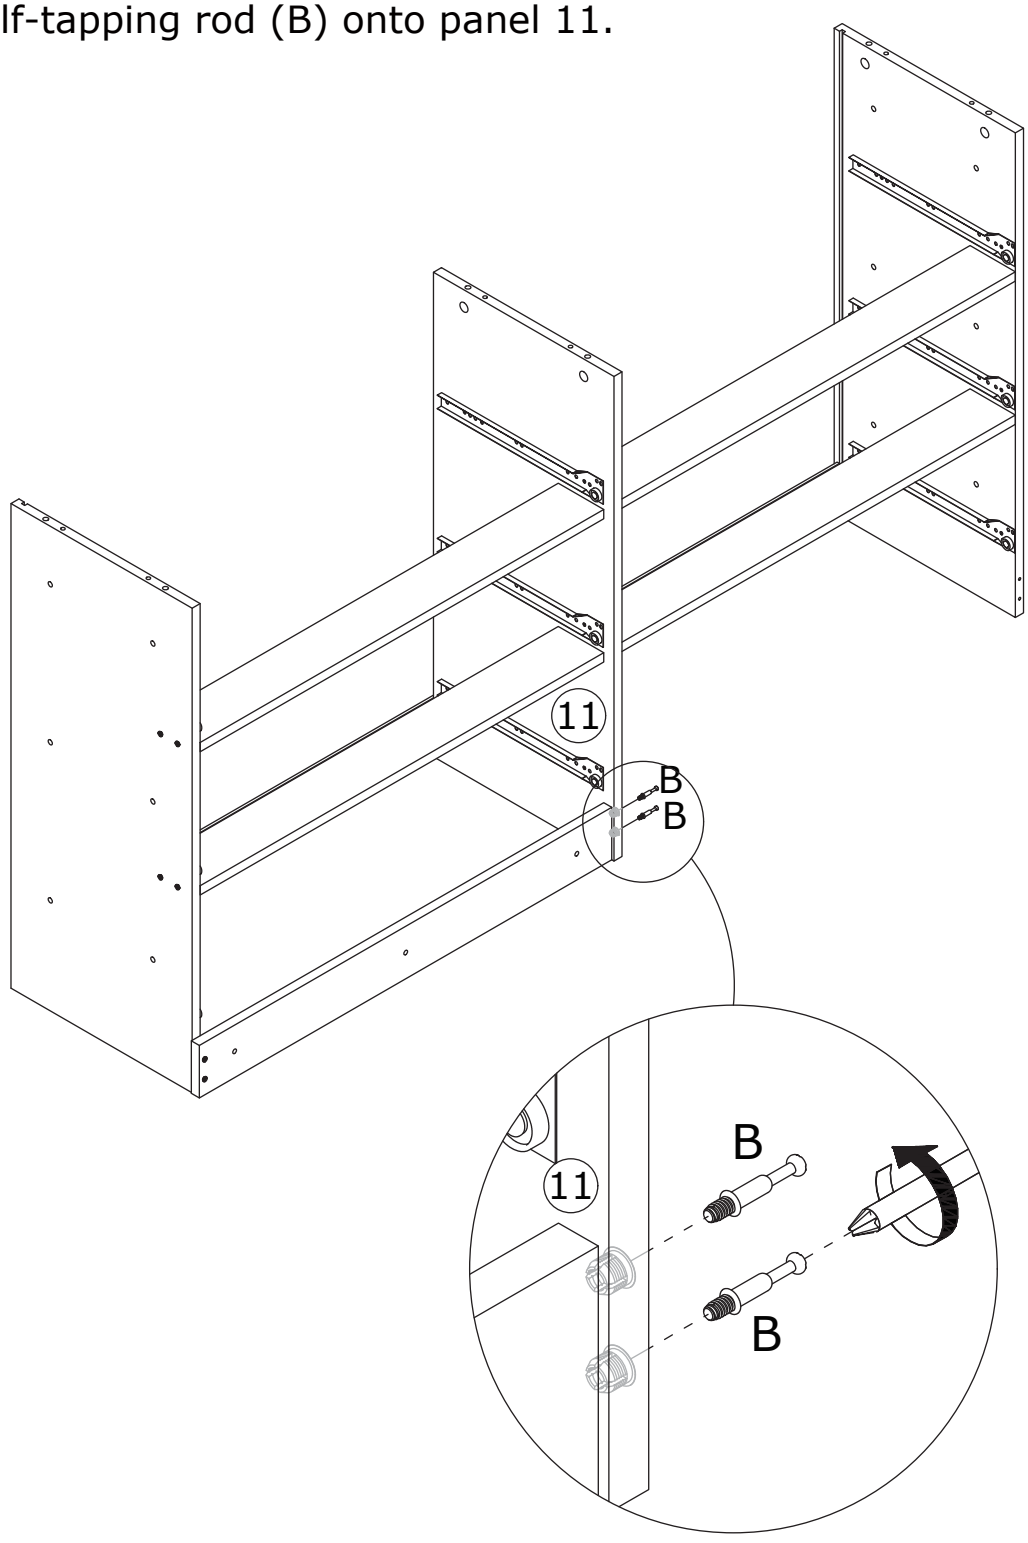



40

A x 2




CRB1595A



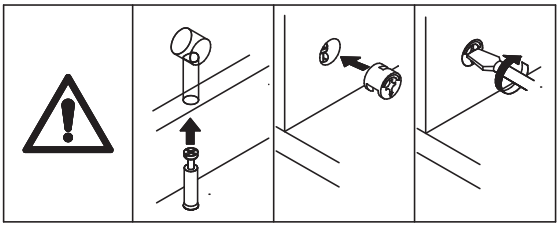


Connect panel 14 to panel 11, and tighten by turning eccentric wheel (A) clockwise.

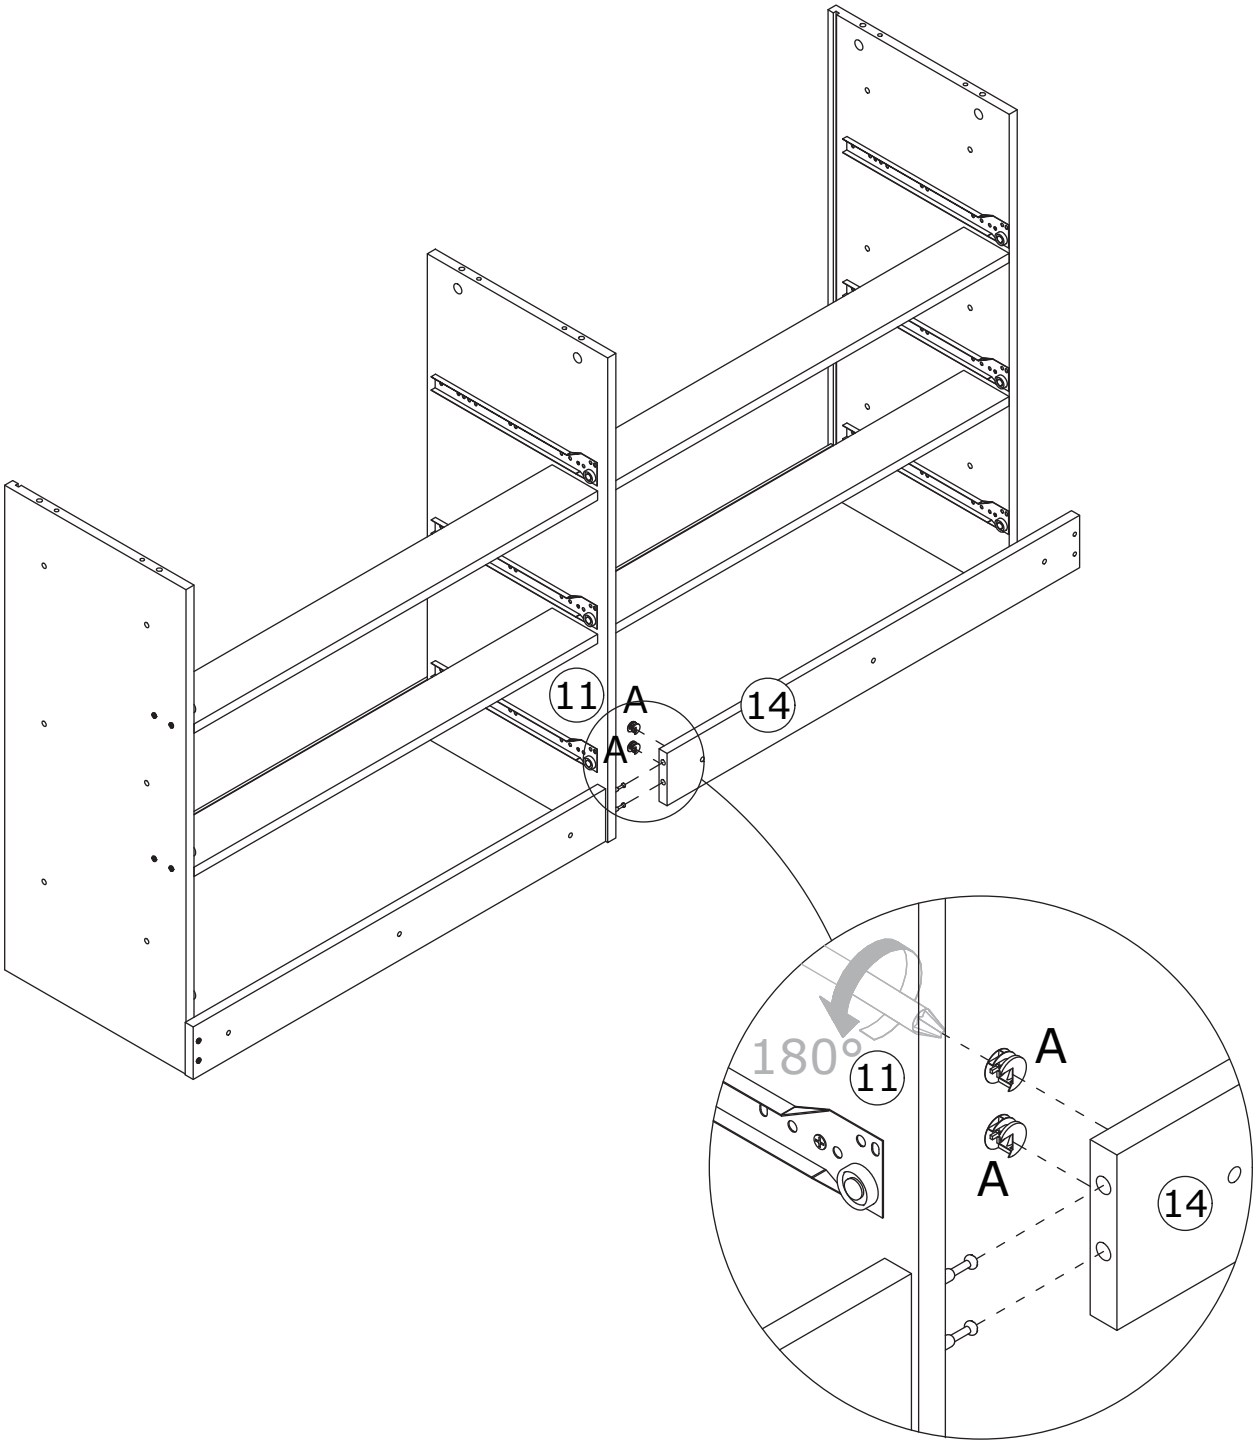


41


E x 2



CRC0540A





Secure panel 14 to panel 6 using screw (E).

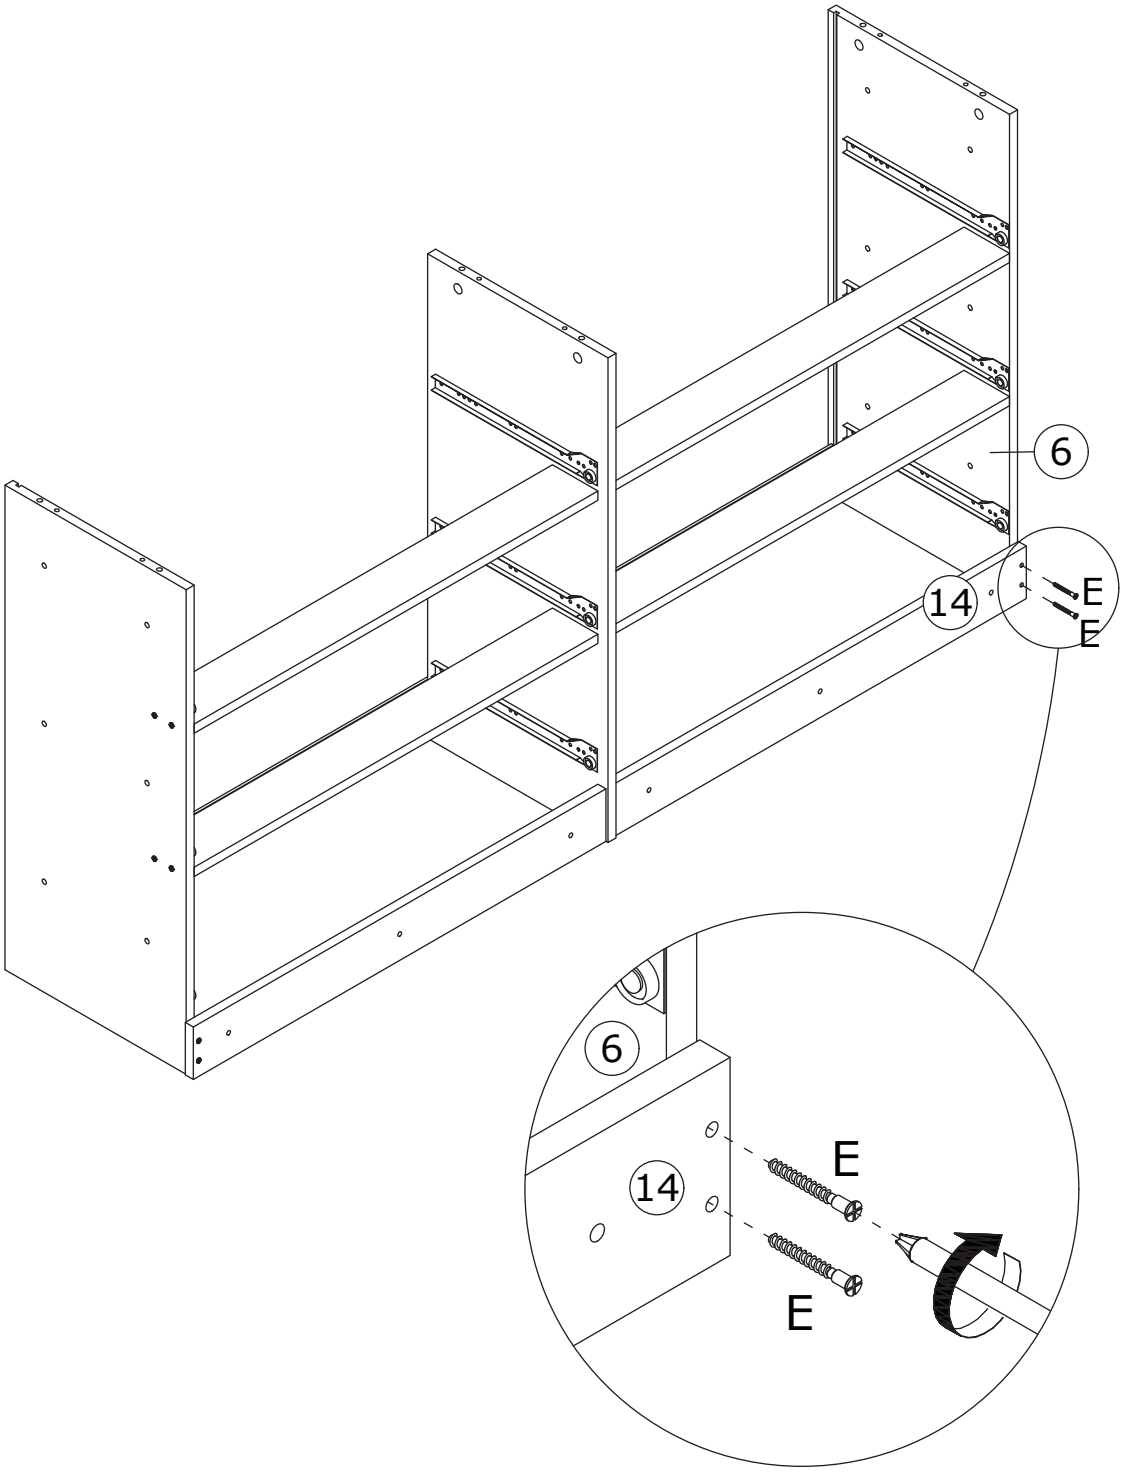

42


Insert panel 4 into the available slots.

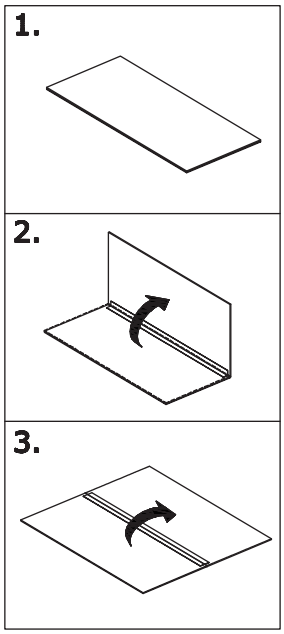

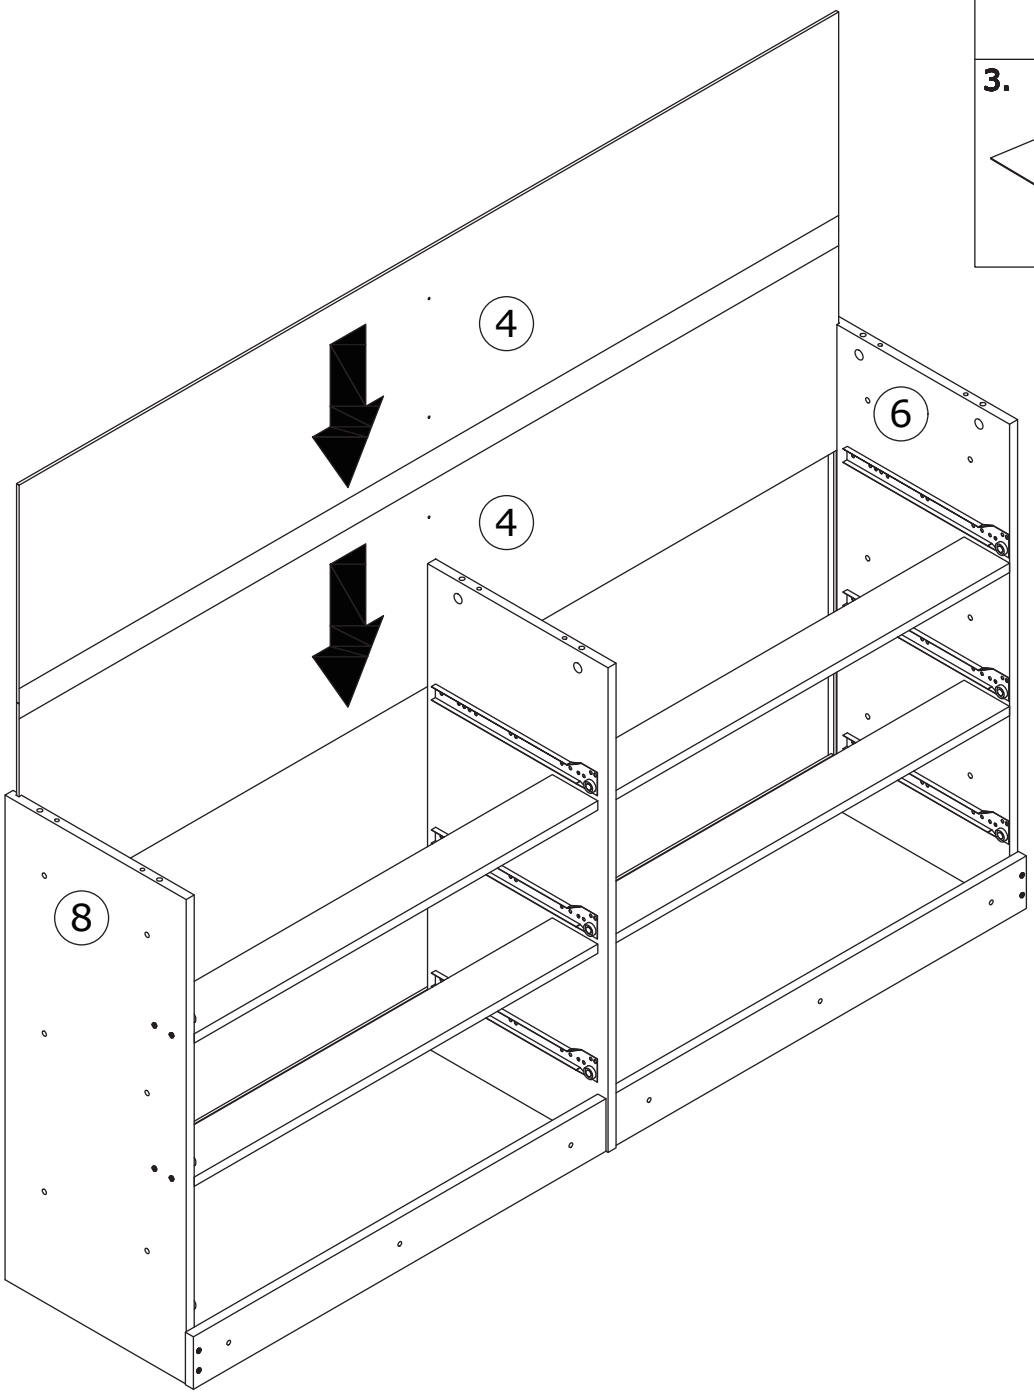


43


C x 6





CRF0630A

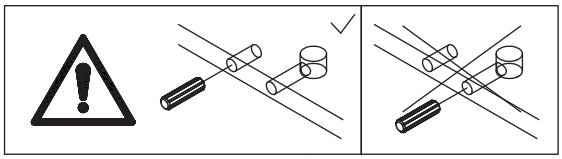


Install wooden dowel (C) to panels 6, 8, and 11.

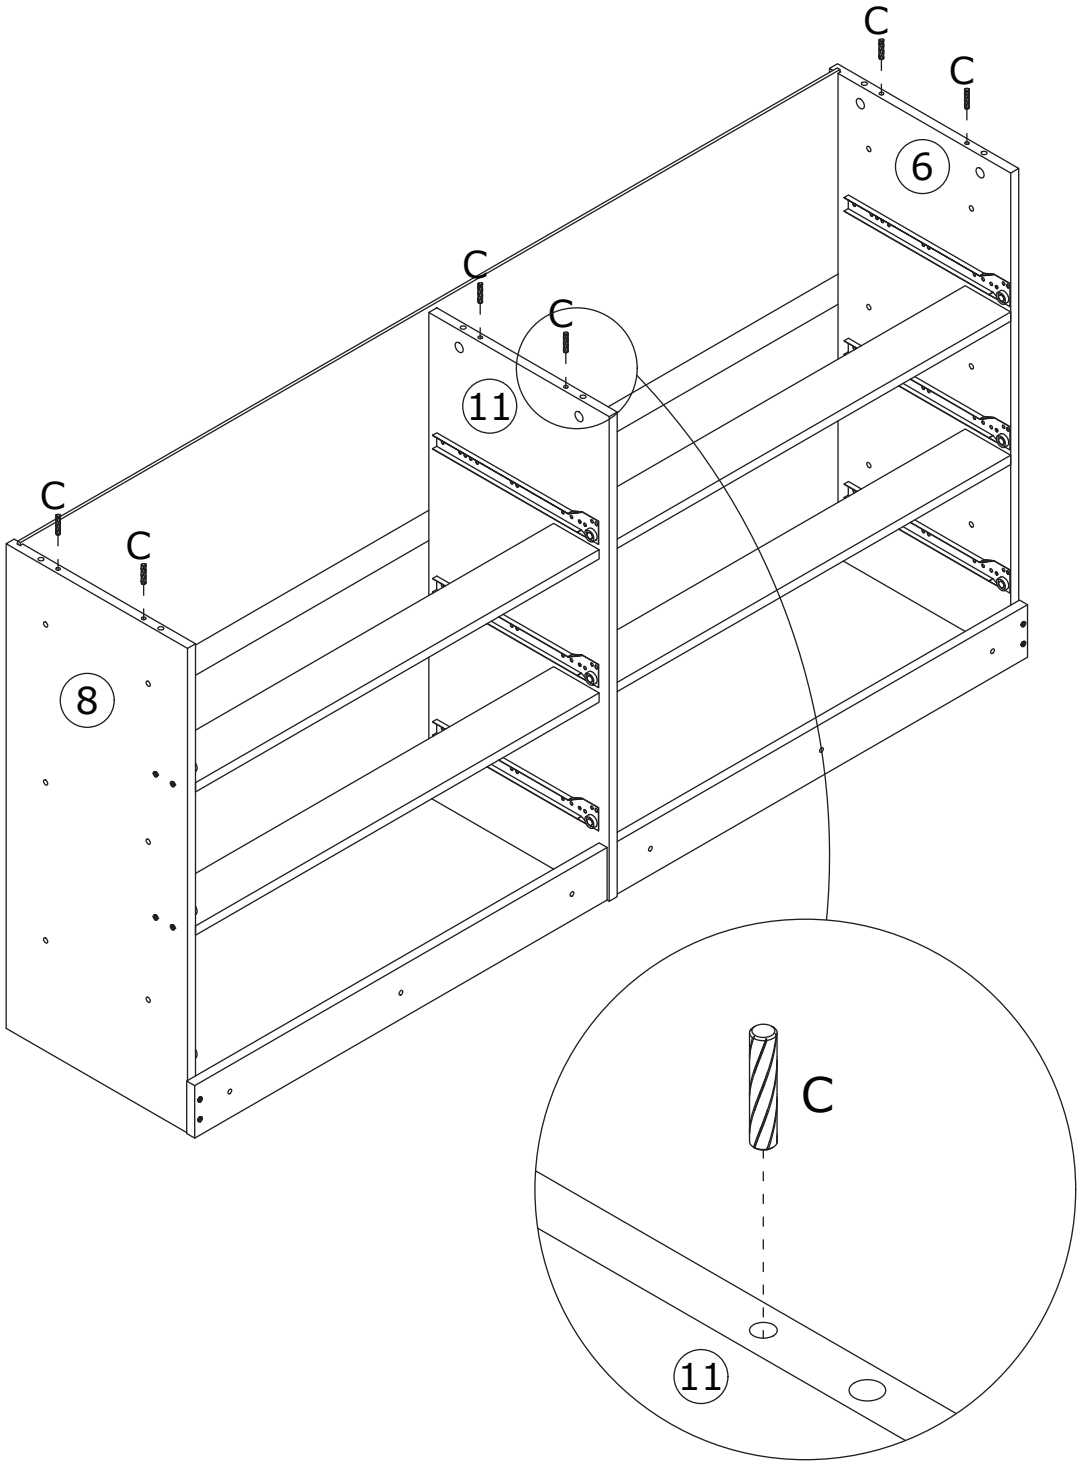


44

B x 6	D x 6	
 CRA0635B		

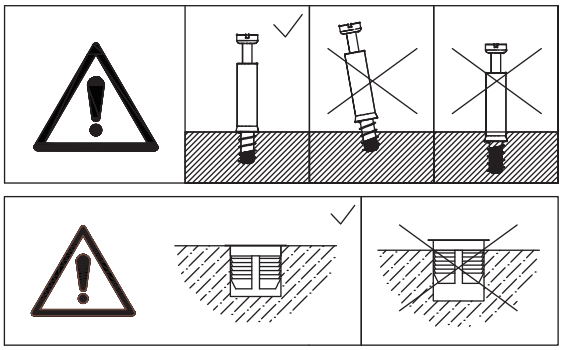

First, attach plug (D) to panel 53, then screw self-tapping rod (B) onto the plugs.

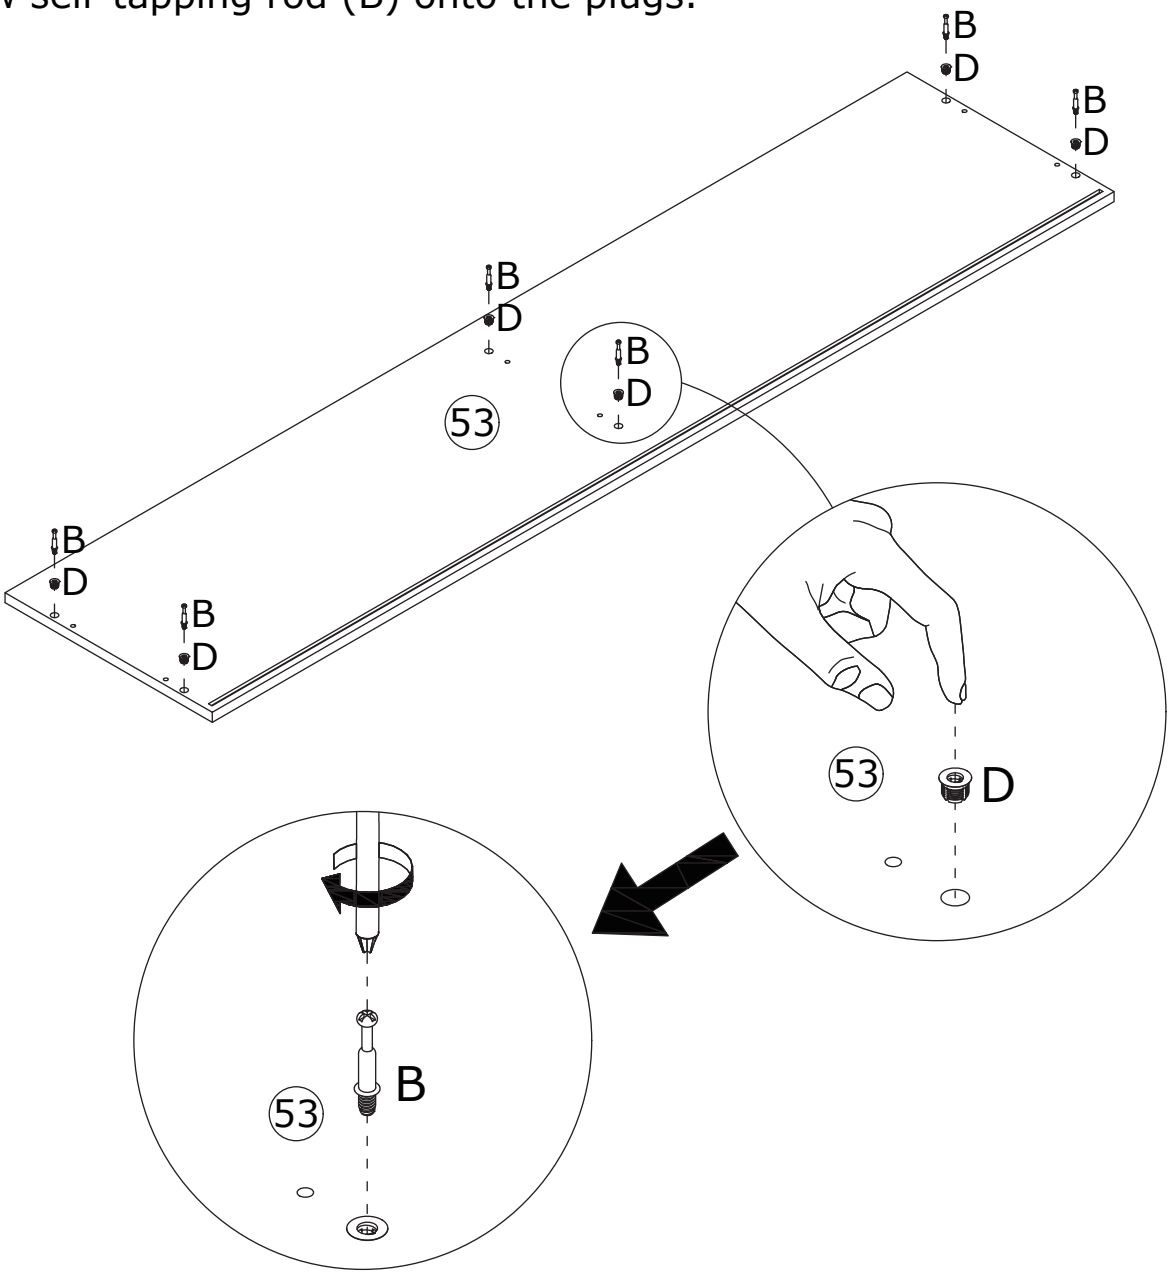



45

A x 6




CRB1595A



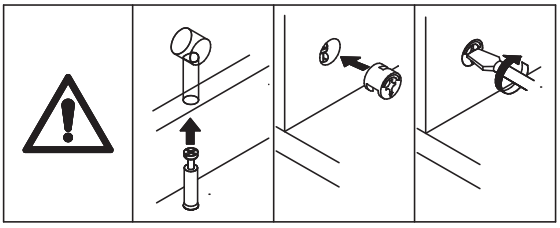

Connect panel 53 to panels 6, 8, and 11, and tighten by turning eccentric wheel (A) clockwise.

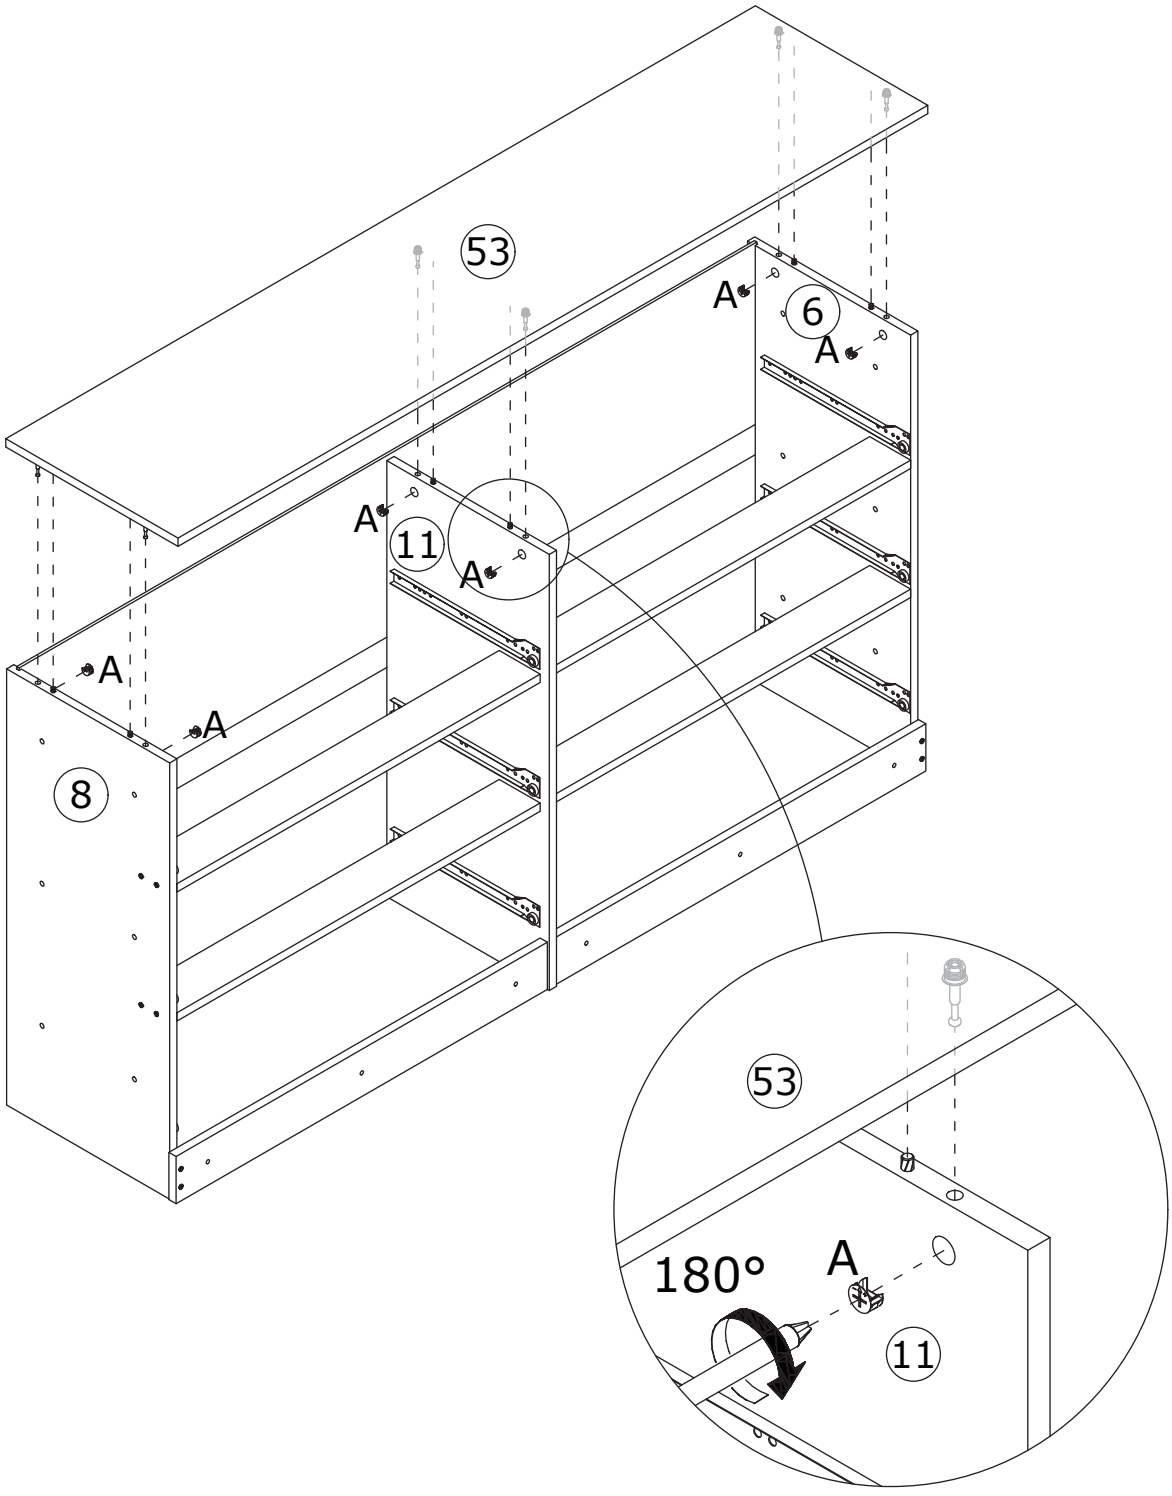


46


P x 4



CRE0316A



Secure panel 4 to panel 11 using screw (P).

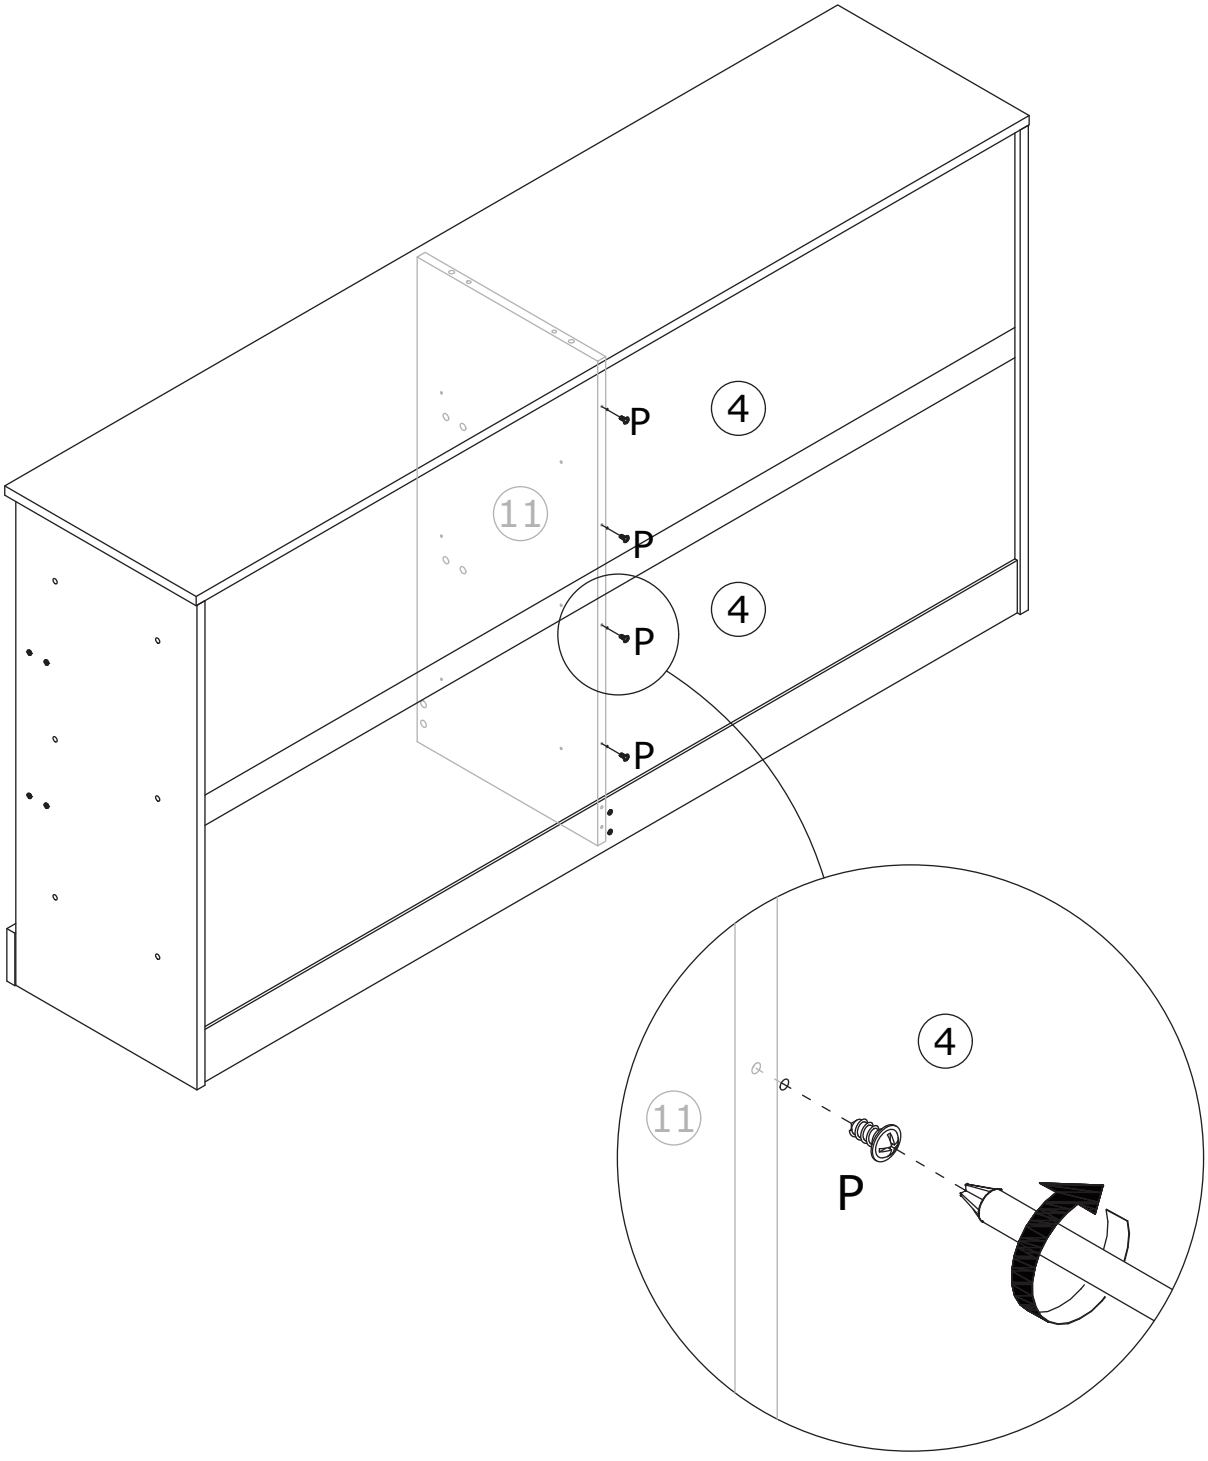


47


K x 14	L x 14	
CRD0314A		

	F	G	K
	CRD3512A	CRD3514A	CRD0314A


First, insert clip (L) into the back slots, then secure it using screw (K).

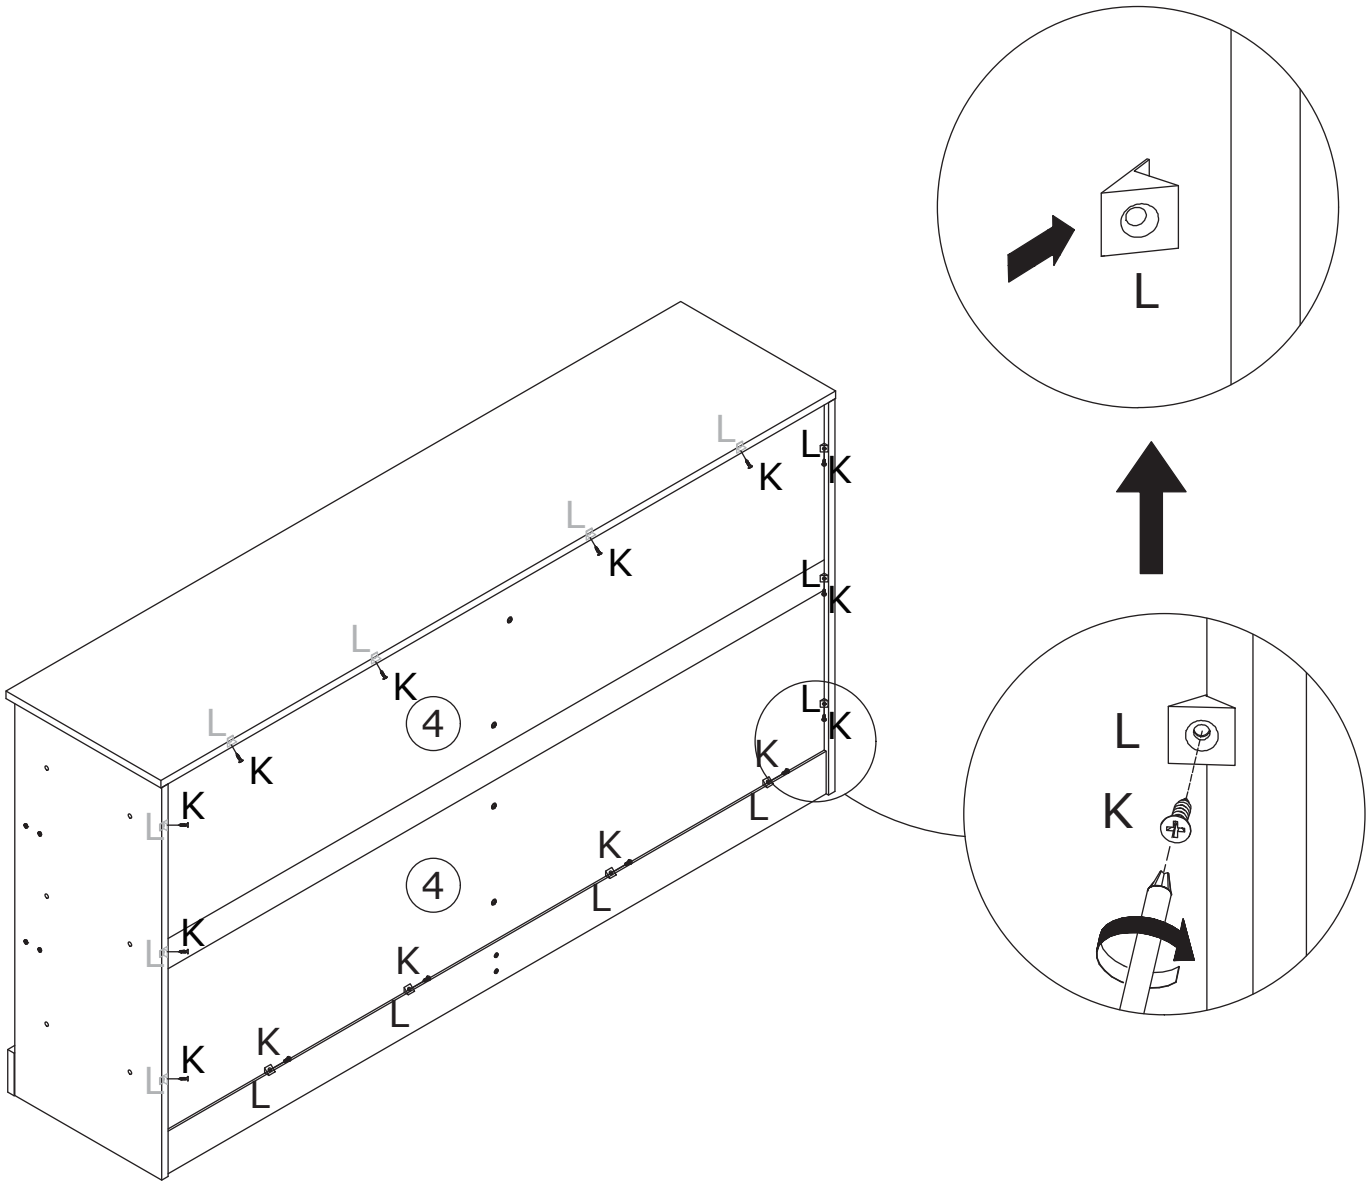


48

AE x 6	AJ x 1	
 CRG0670A	 M4	


Attach panels 9, 12, and 13 to panel 144 using screw (AE).
Be sure to install panels 9 and 12 in the correct orientation.

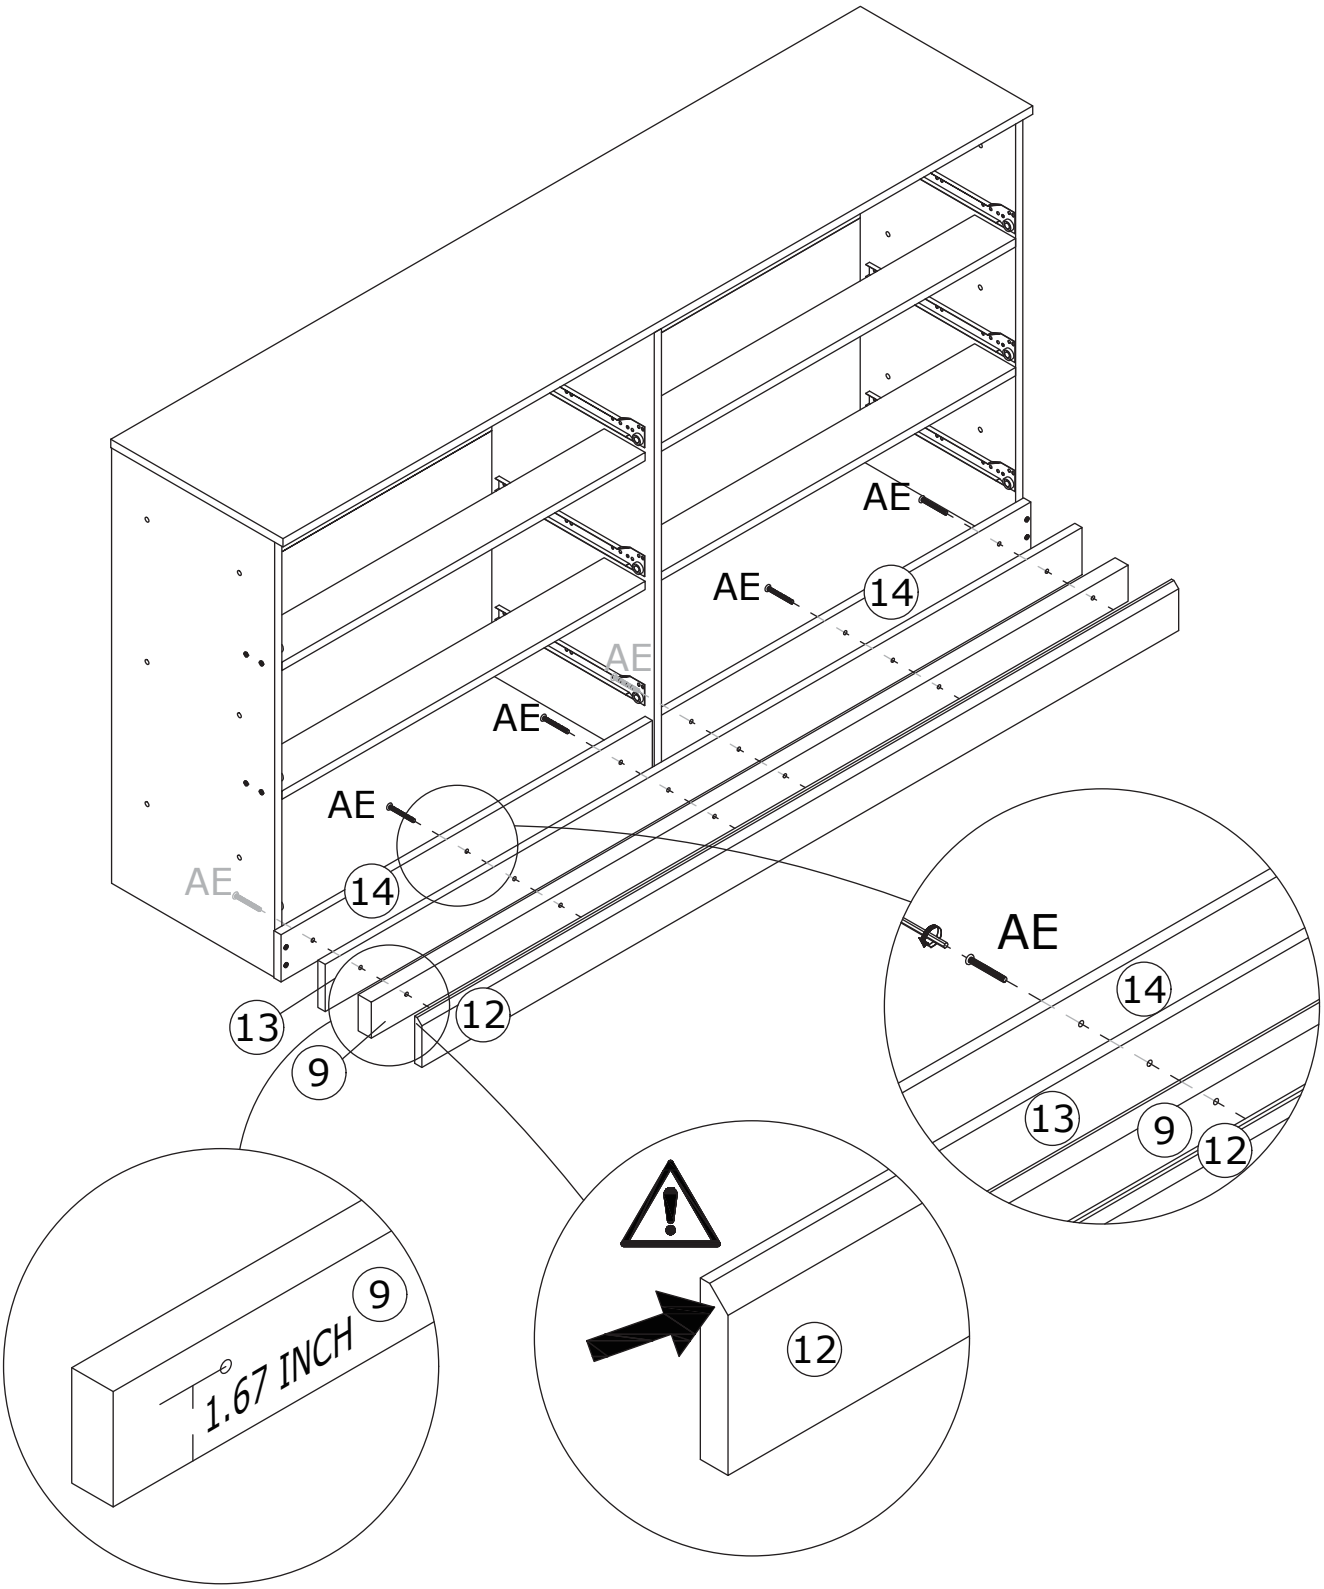


49

V x 6	AJ x 2	
		


Connect the two assembly units using screw (V).

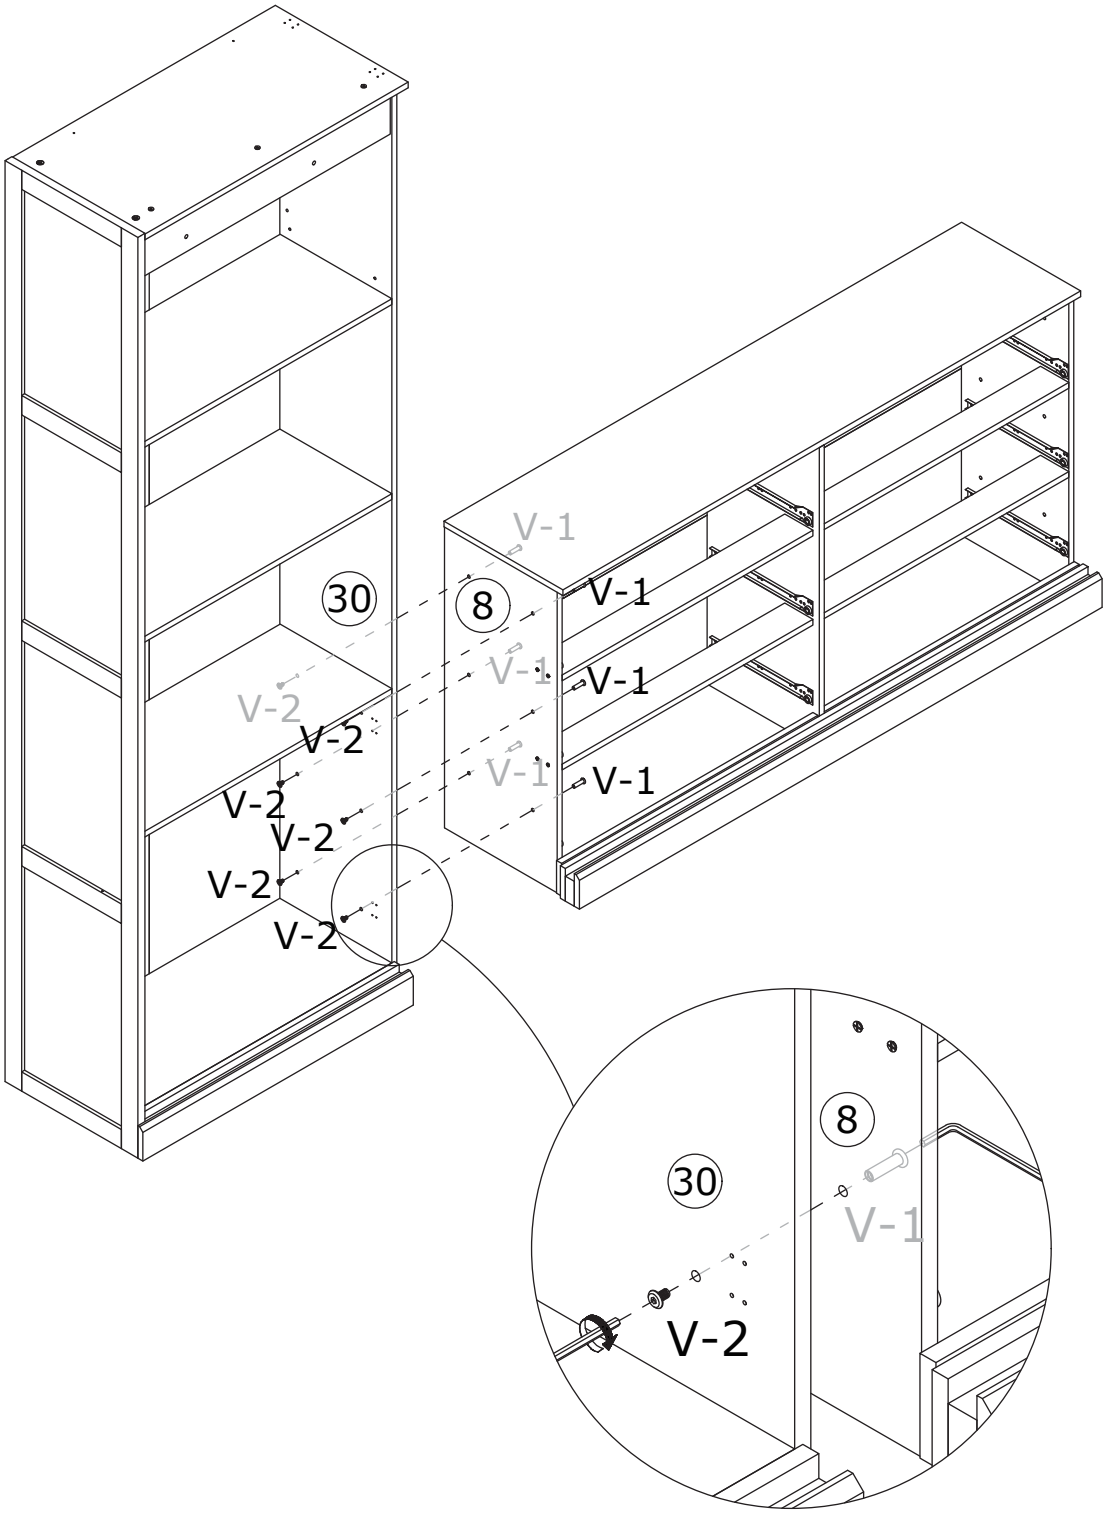

50


V x 6	AJ x 2	
		

Connect the two assembly units using screw (V).

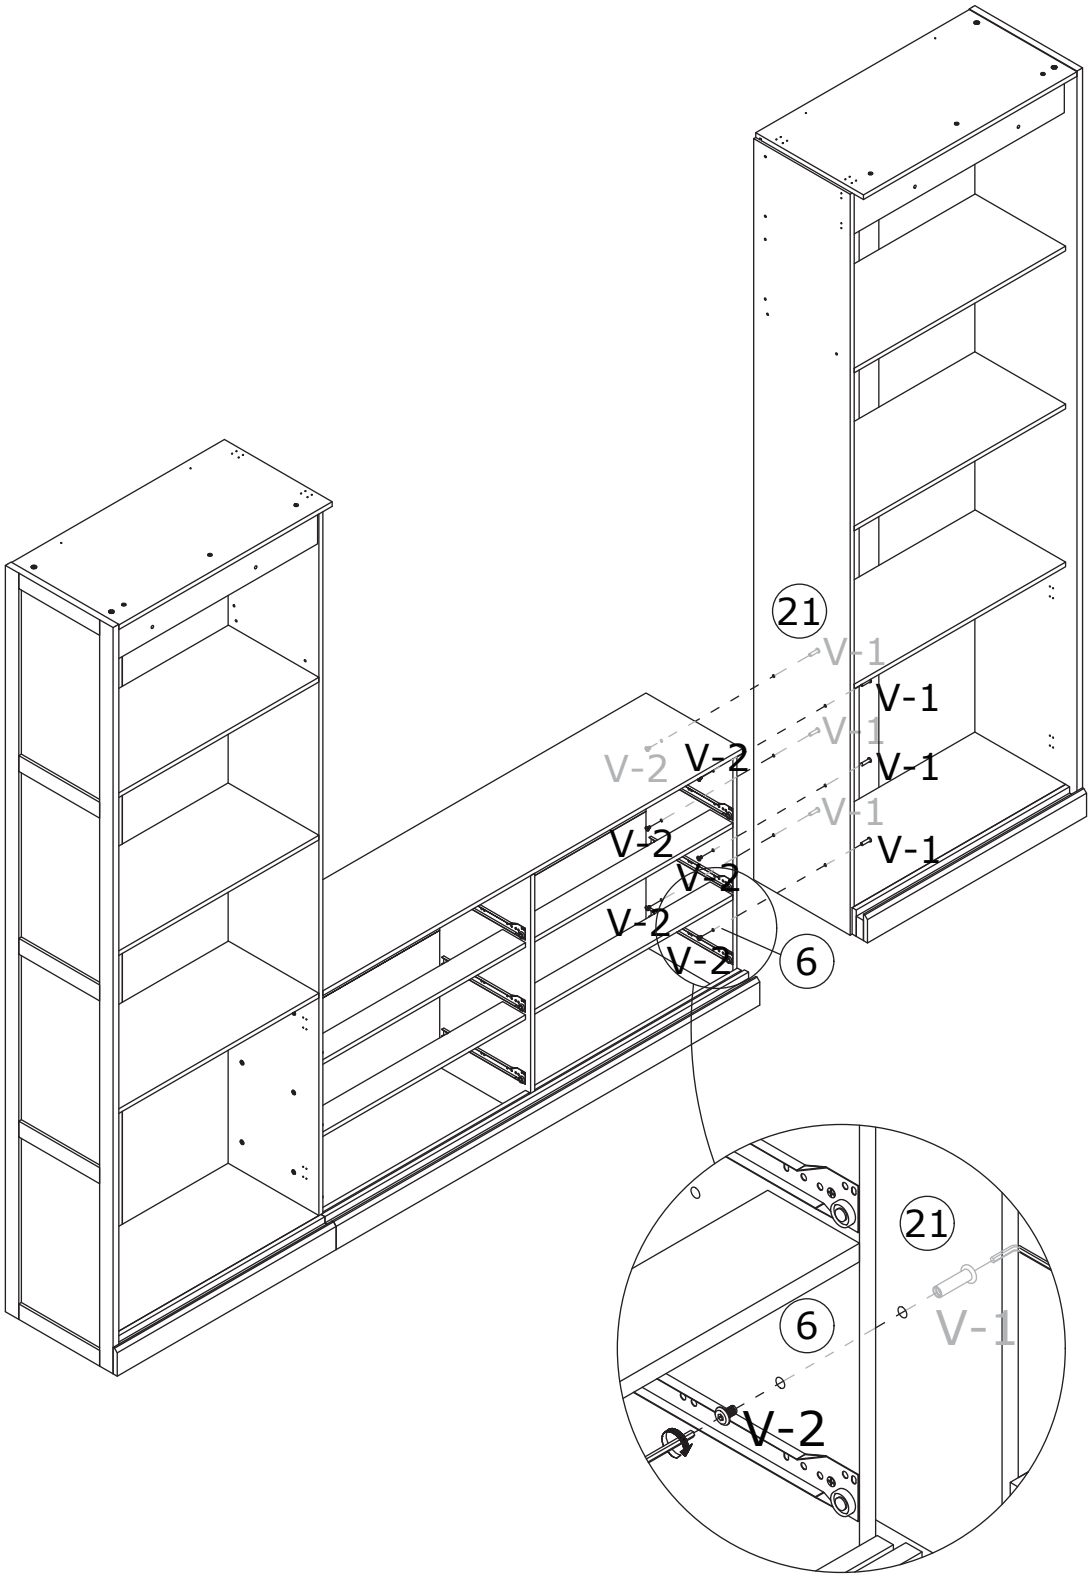


51


E x 4



CRC0540A




Secure panels 21 and 30 to panel 10 using screw (E).

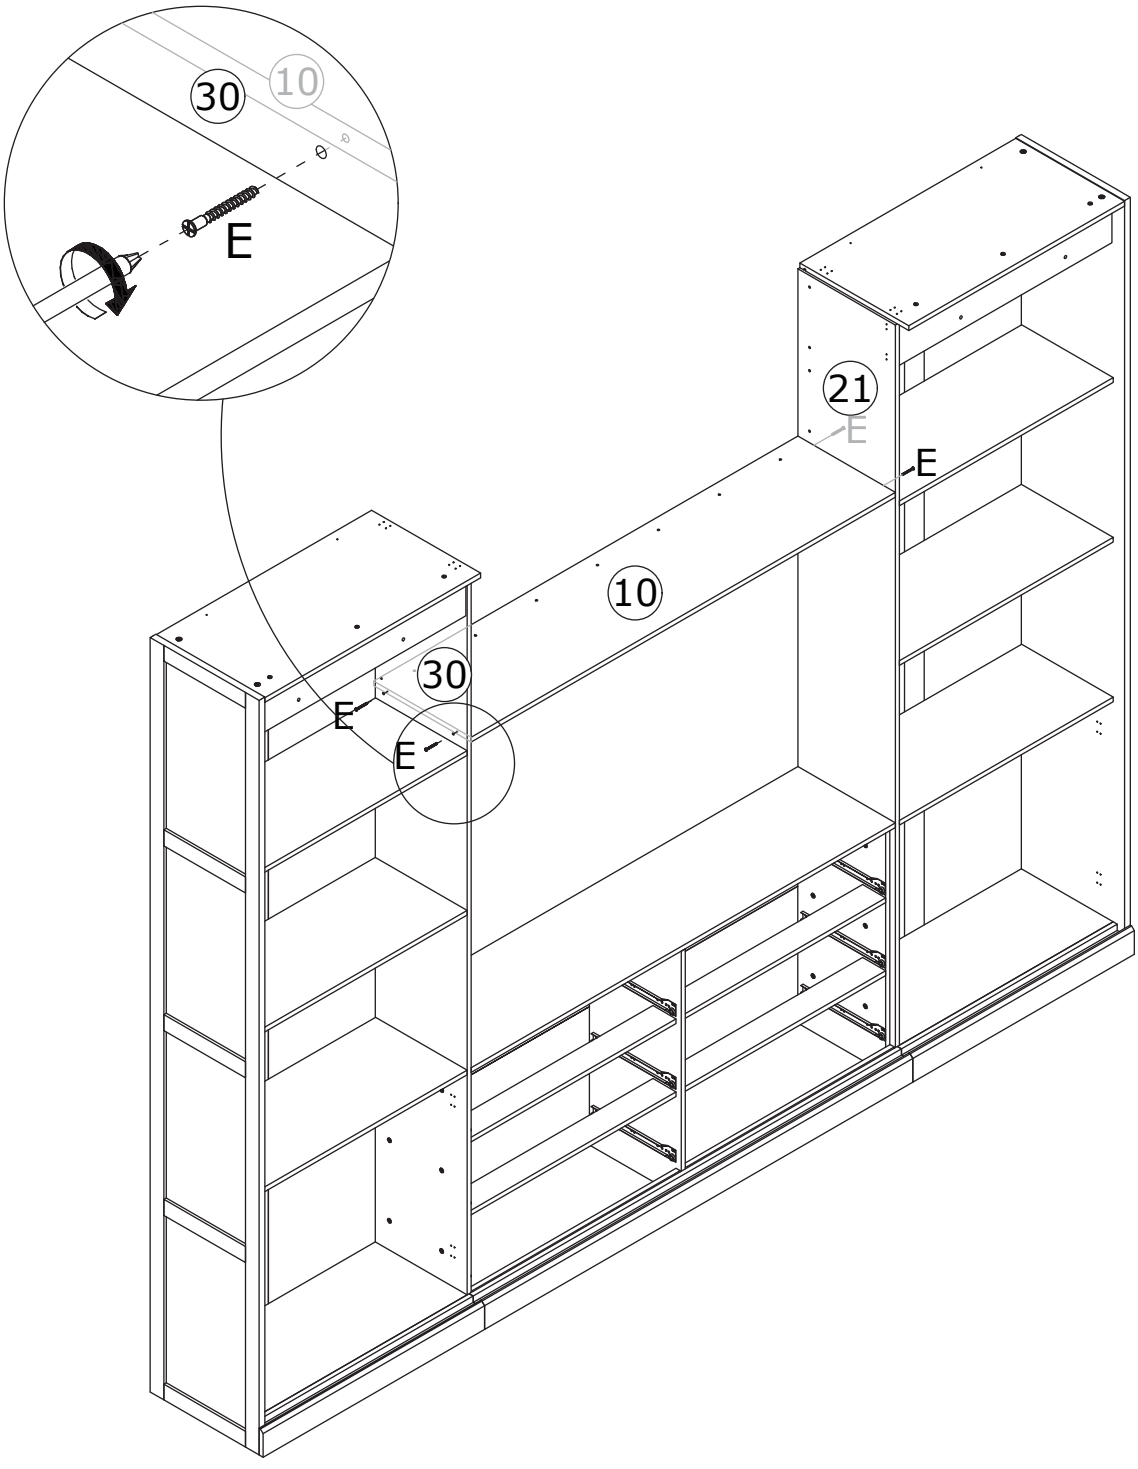


52


C x 3





CRF0630A

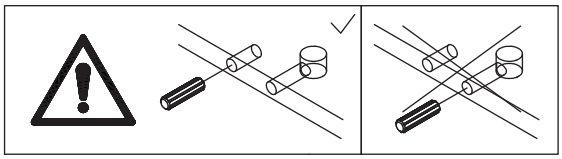

Connect two panels 3 using wooden dowel (C).

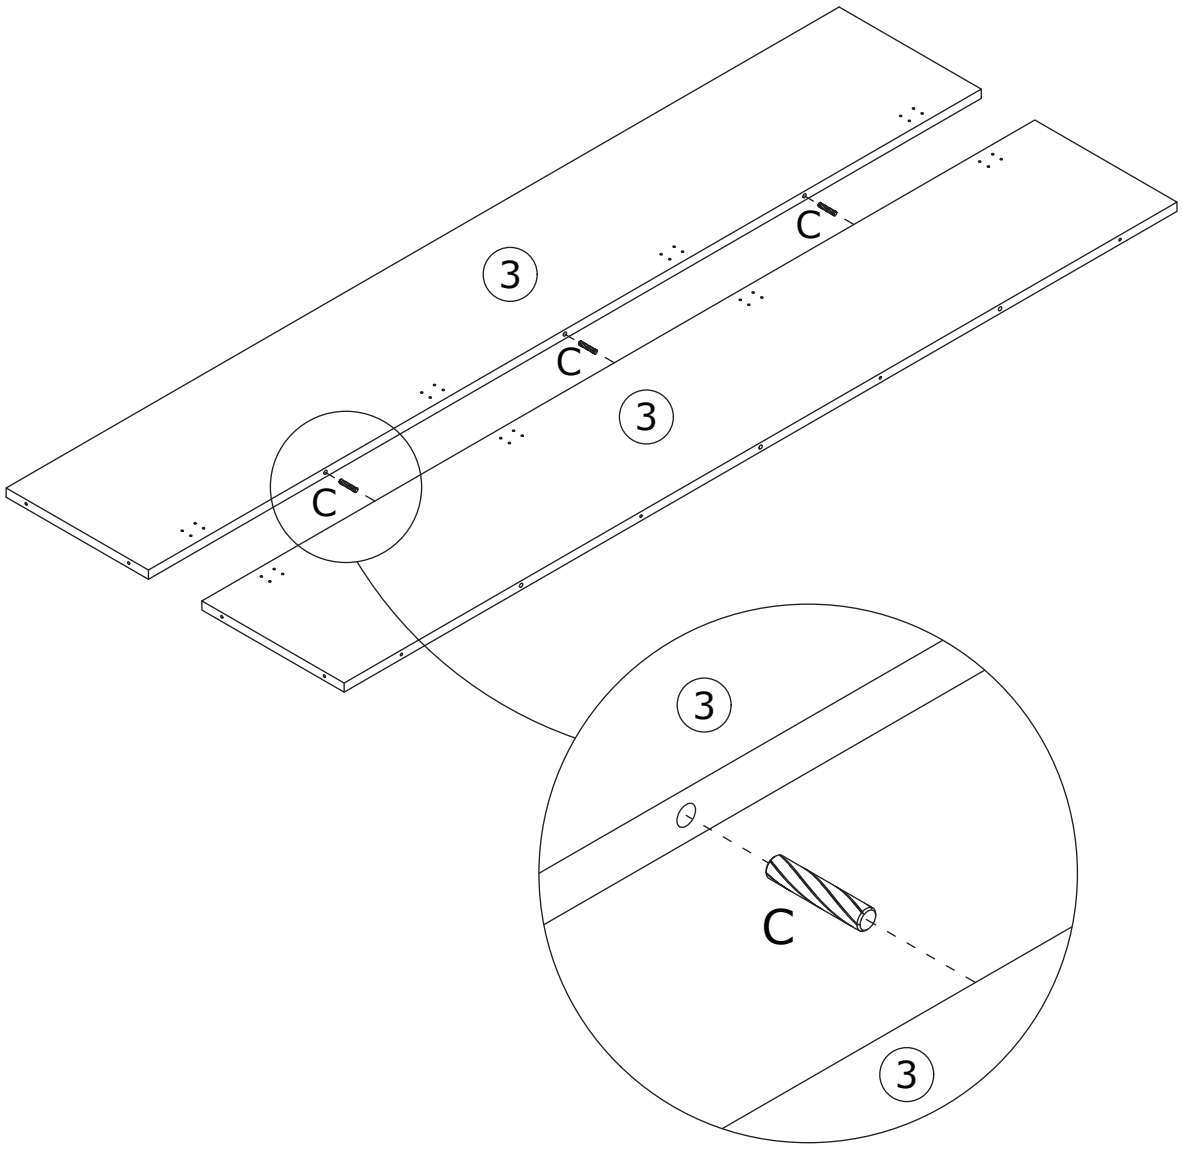


53

G x 32	S x 4	
 CRD3514A		


	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A

Secure iron plate (S) to panel 3 using screw (G).

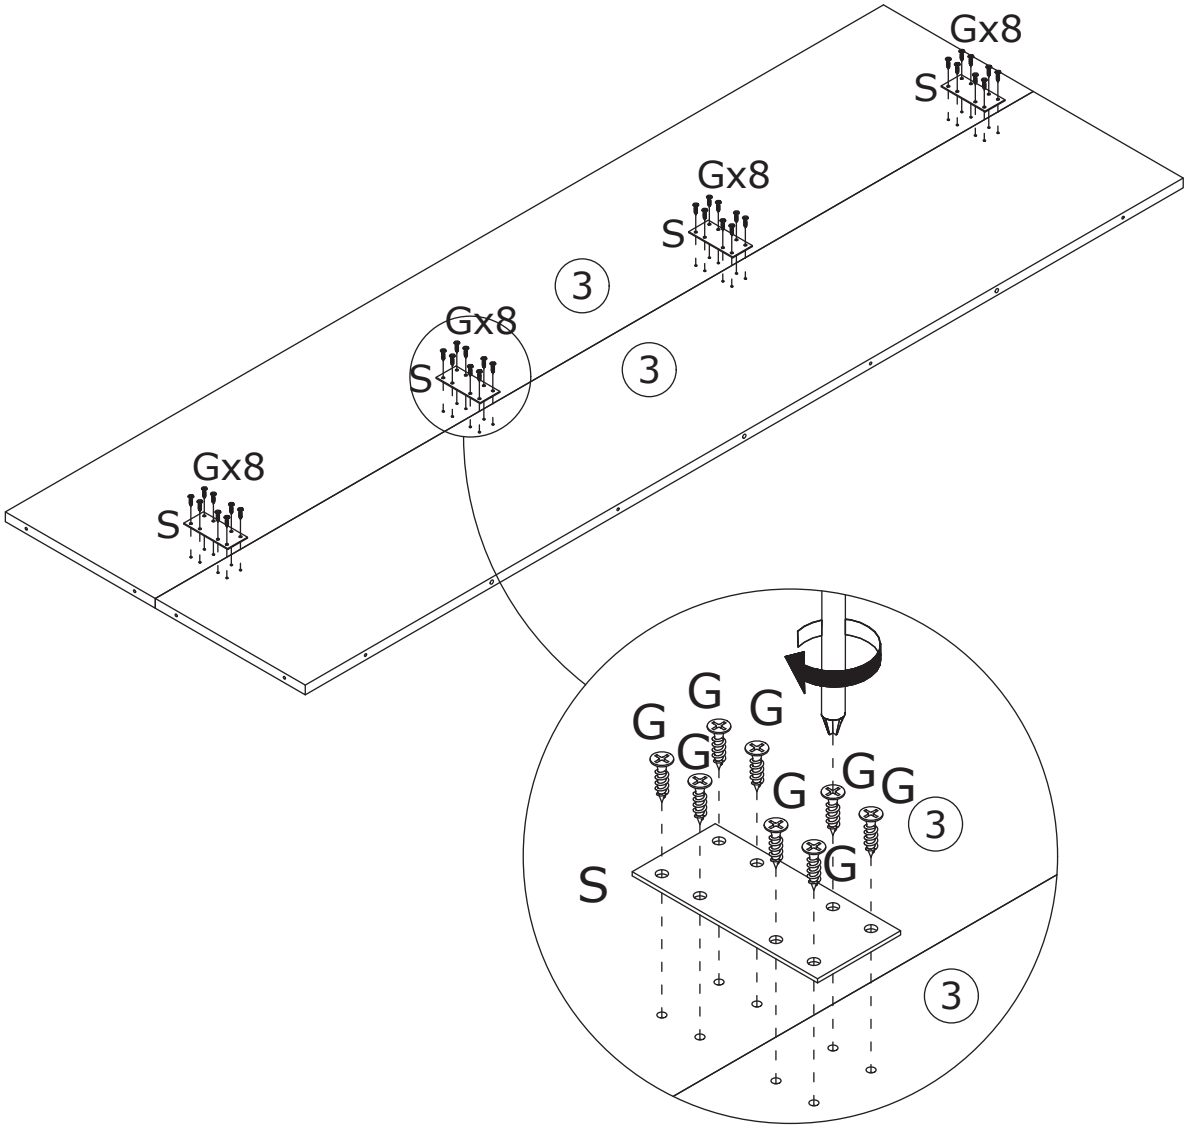


54


C x 6



CRF0630A

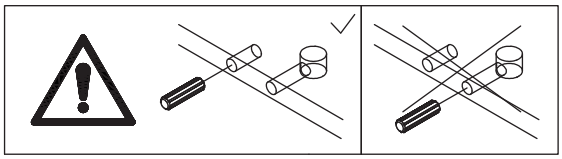


Install wooden dowel (C) into panel 3.

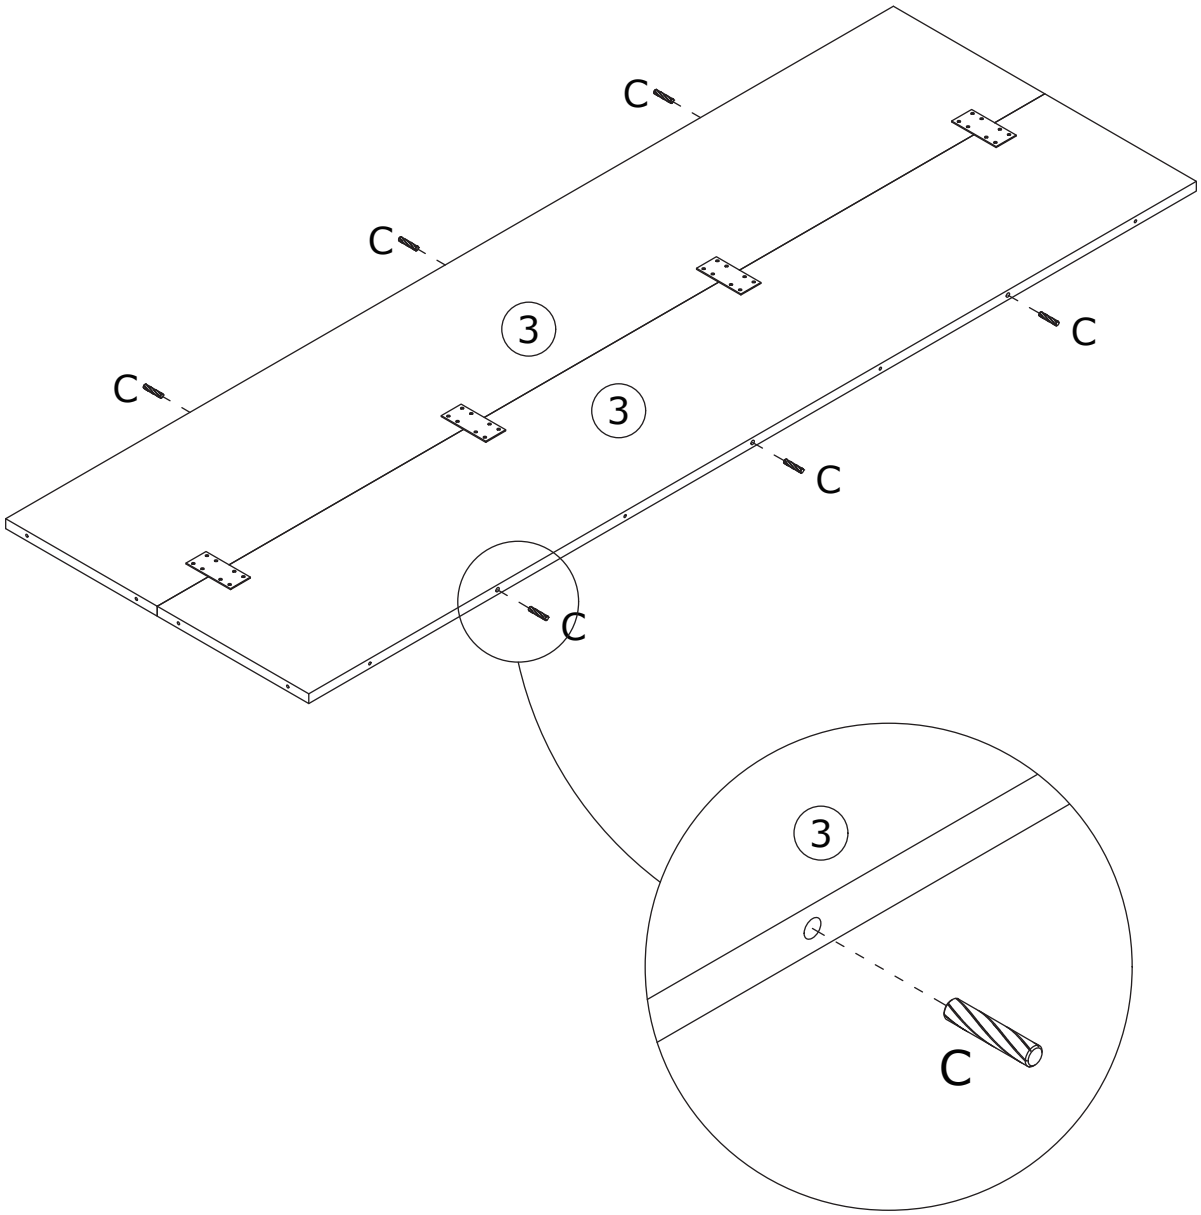

55


Connect panel 3 to panel 10.

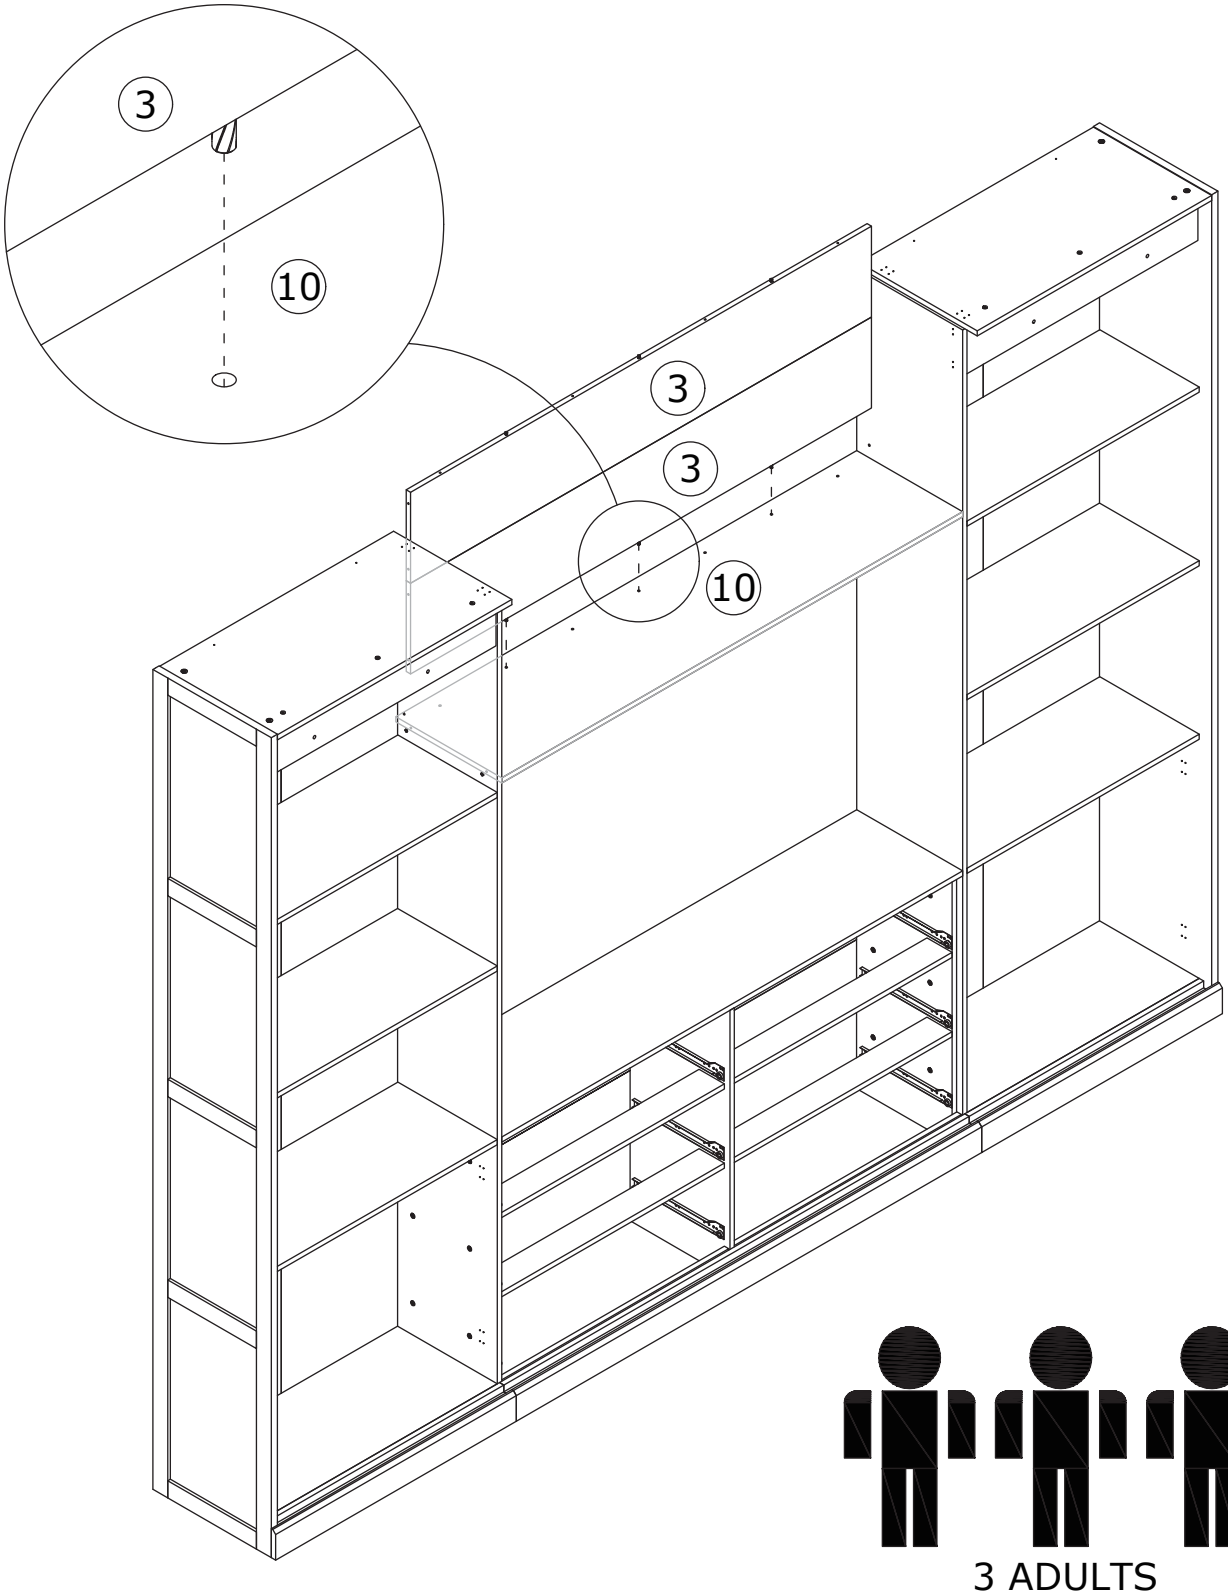


3 ADULTS

56


E x 8



CRC0540A




Secure panels 21 and 30 to panel 3 using screw (E).

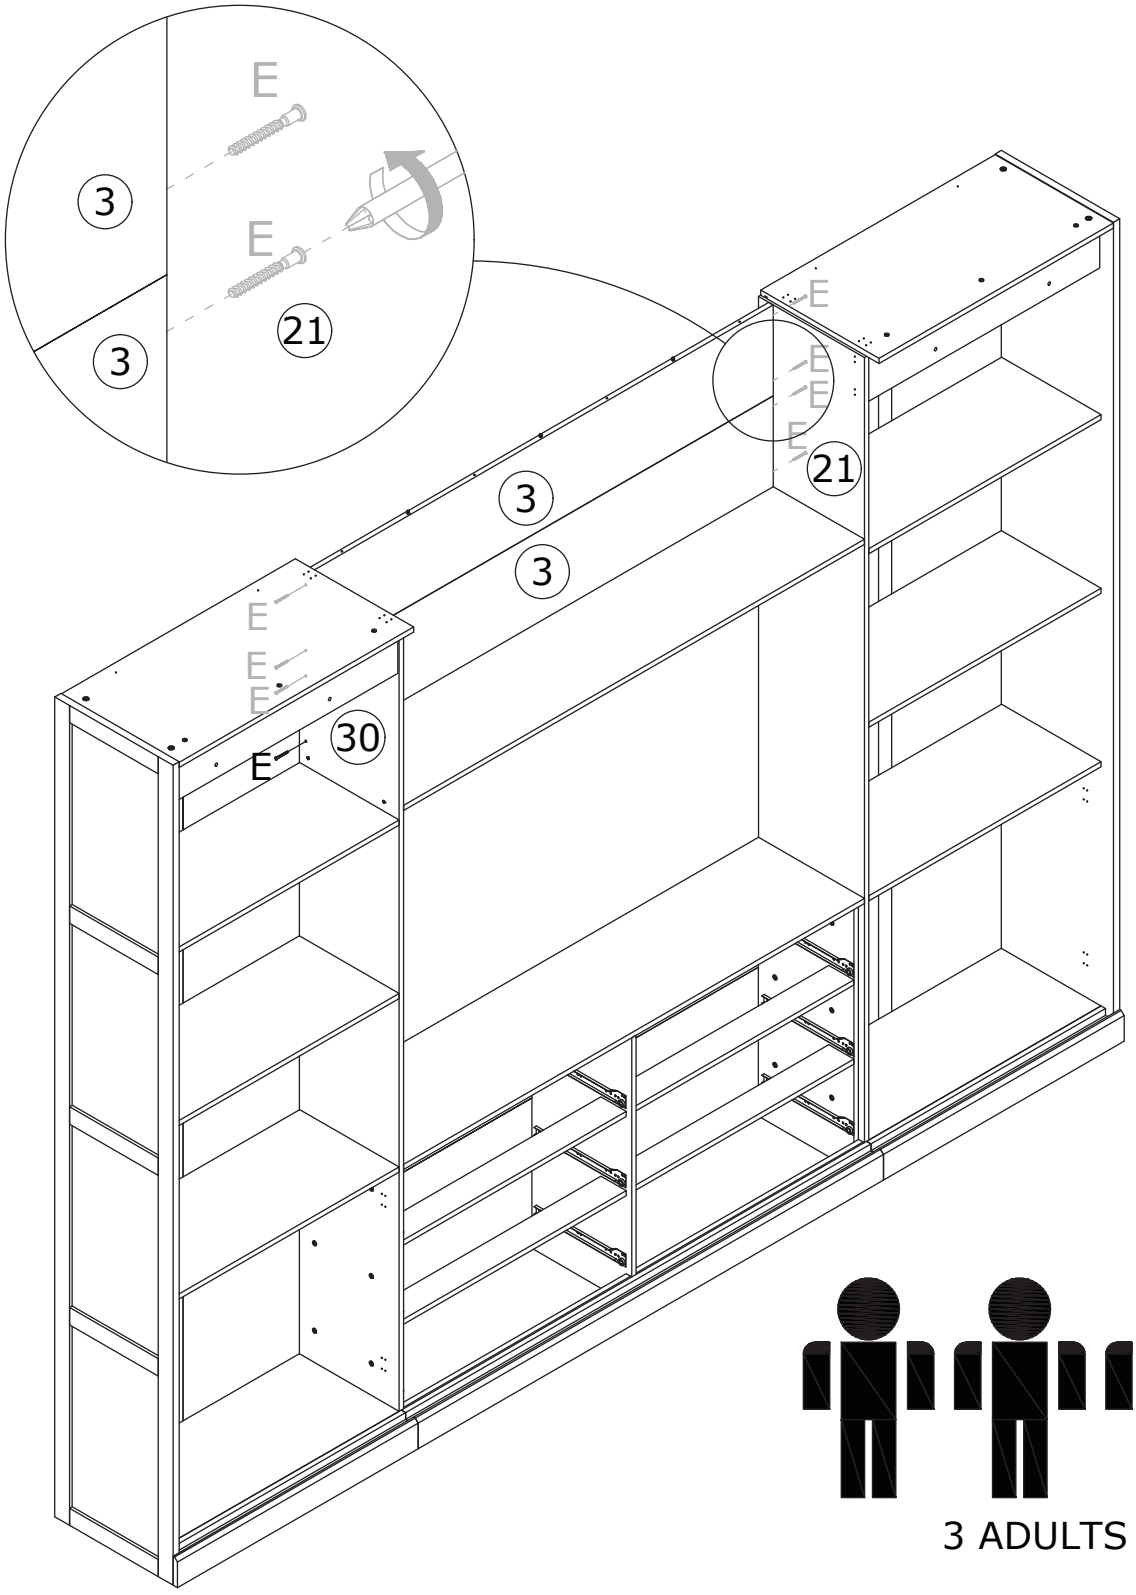


3 ADULTS

57


E x 4



CRC0540A




Secure panel 10 to panel 3 using screw (E).

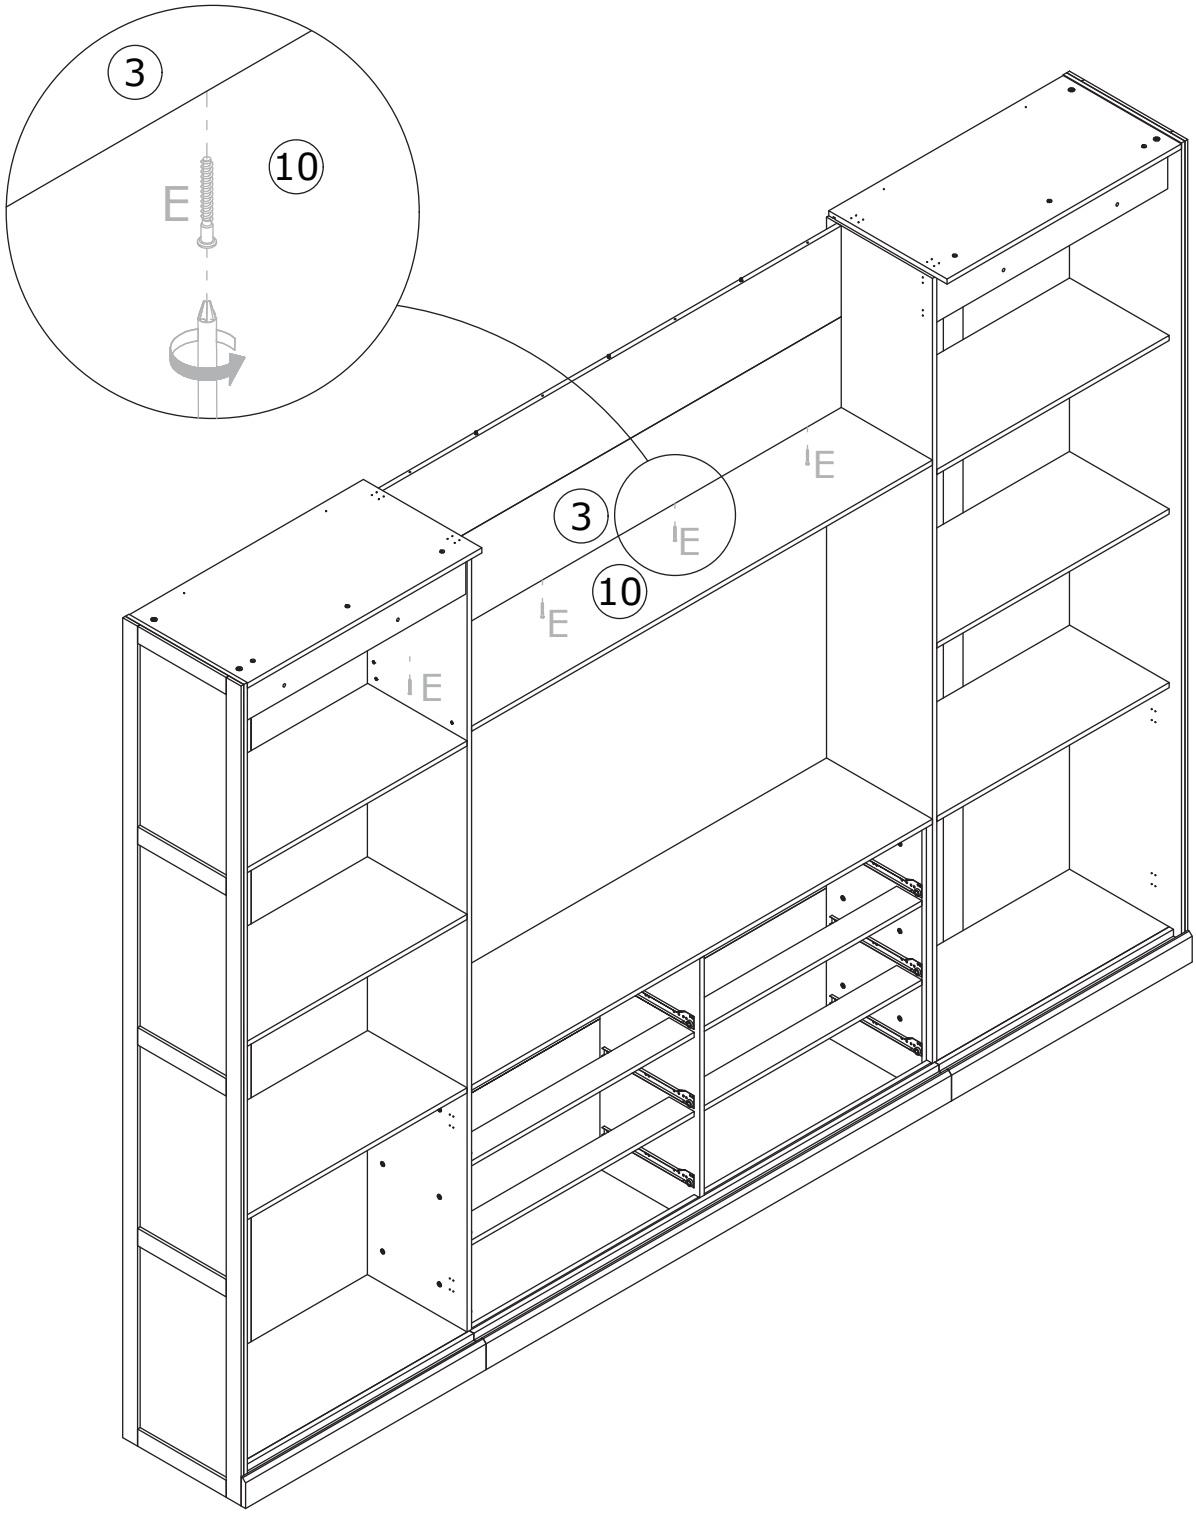


58

AG x 4









Install nut (AG) onto panel 5.

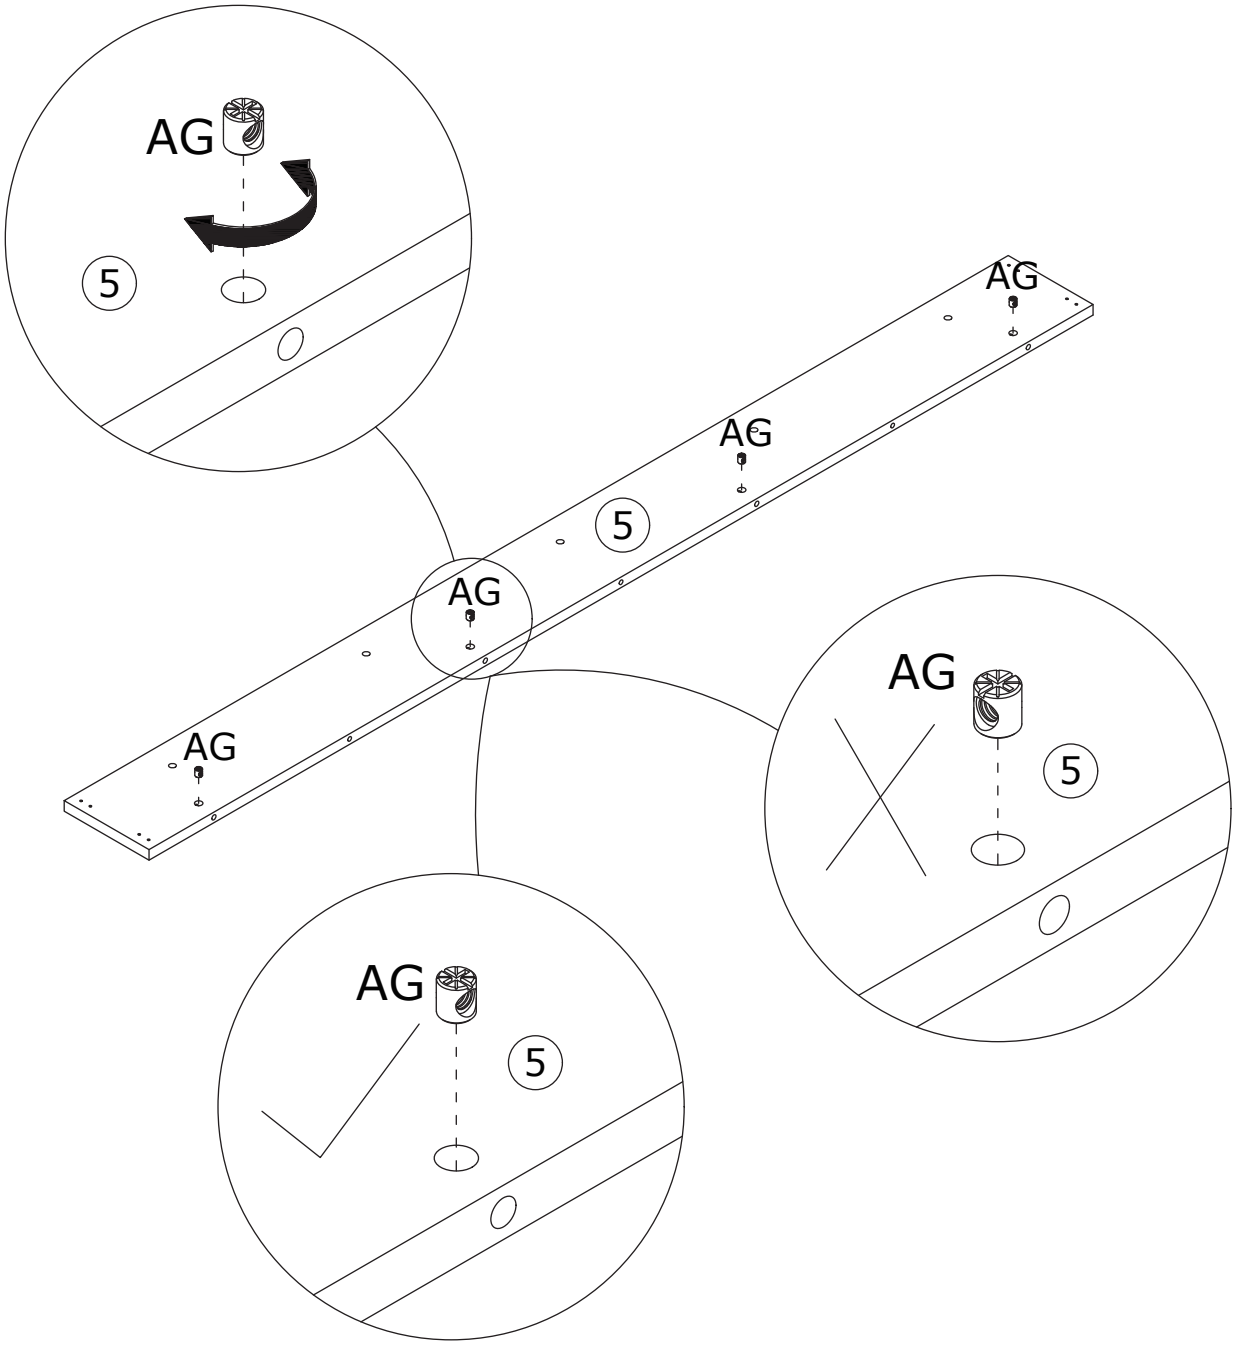


59

C x 3	AC x 4	AJ x 1	
			
CRF0630A	CRG0645A	M4	

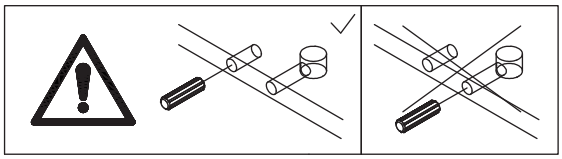


Connect panel 15 to panel 5 using wooden dowel (C), and secure them with screw (AC).

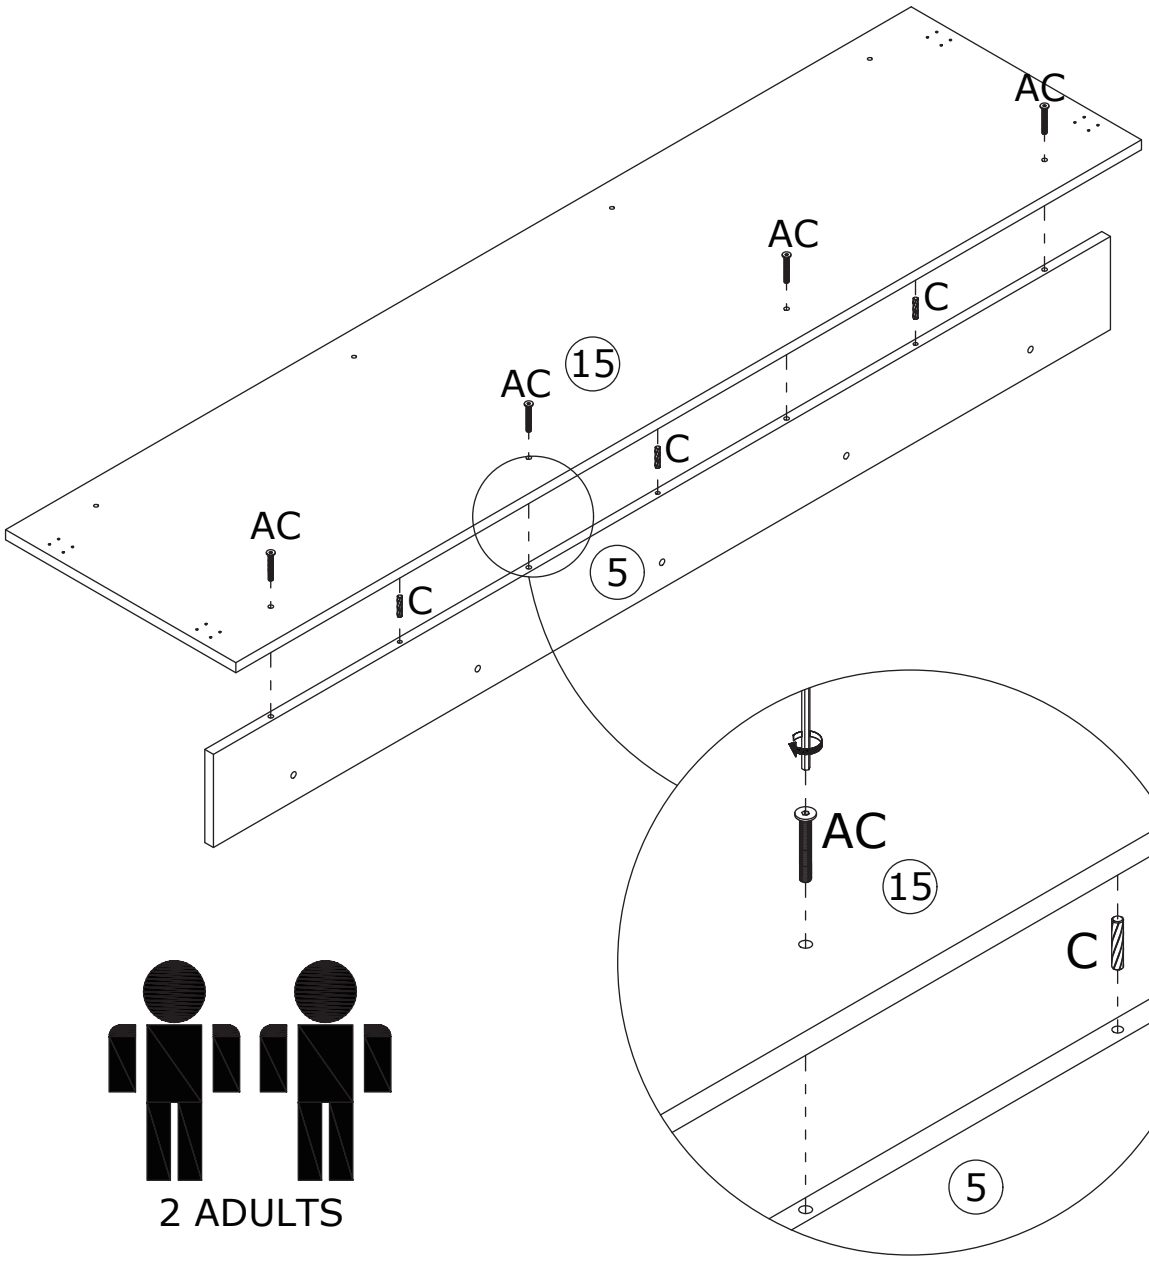


2 ADULTS

60


E x 4



CRC0540A





Secure panel 15 to panel 3 using screw (E).

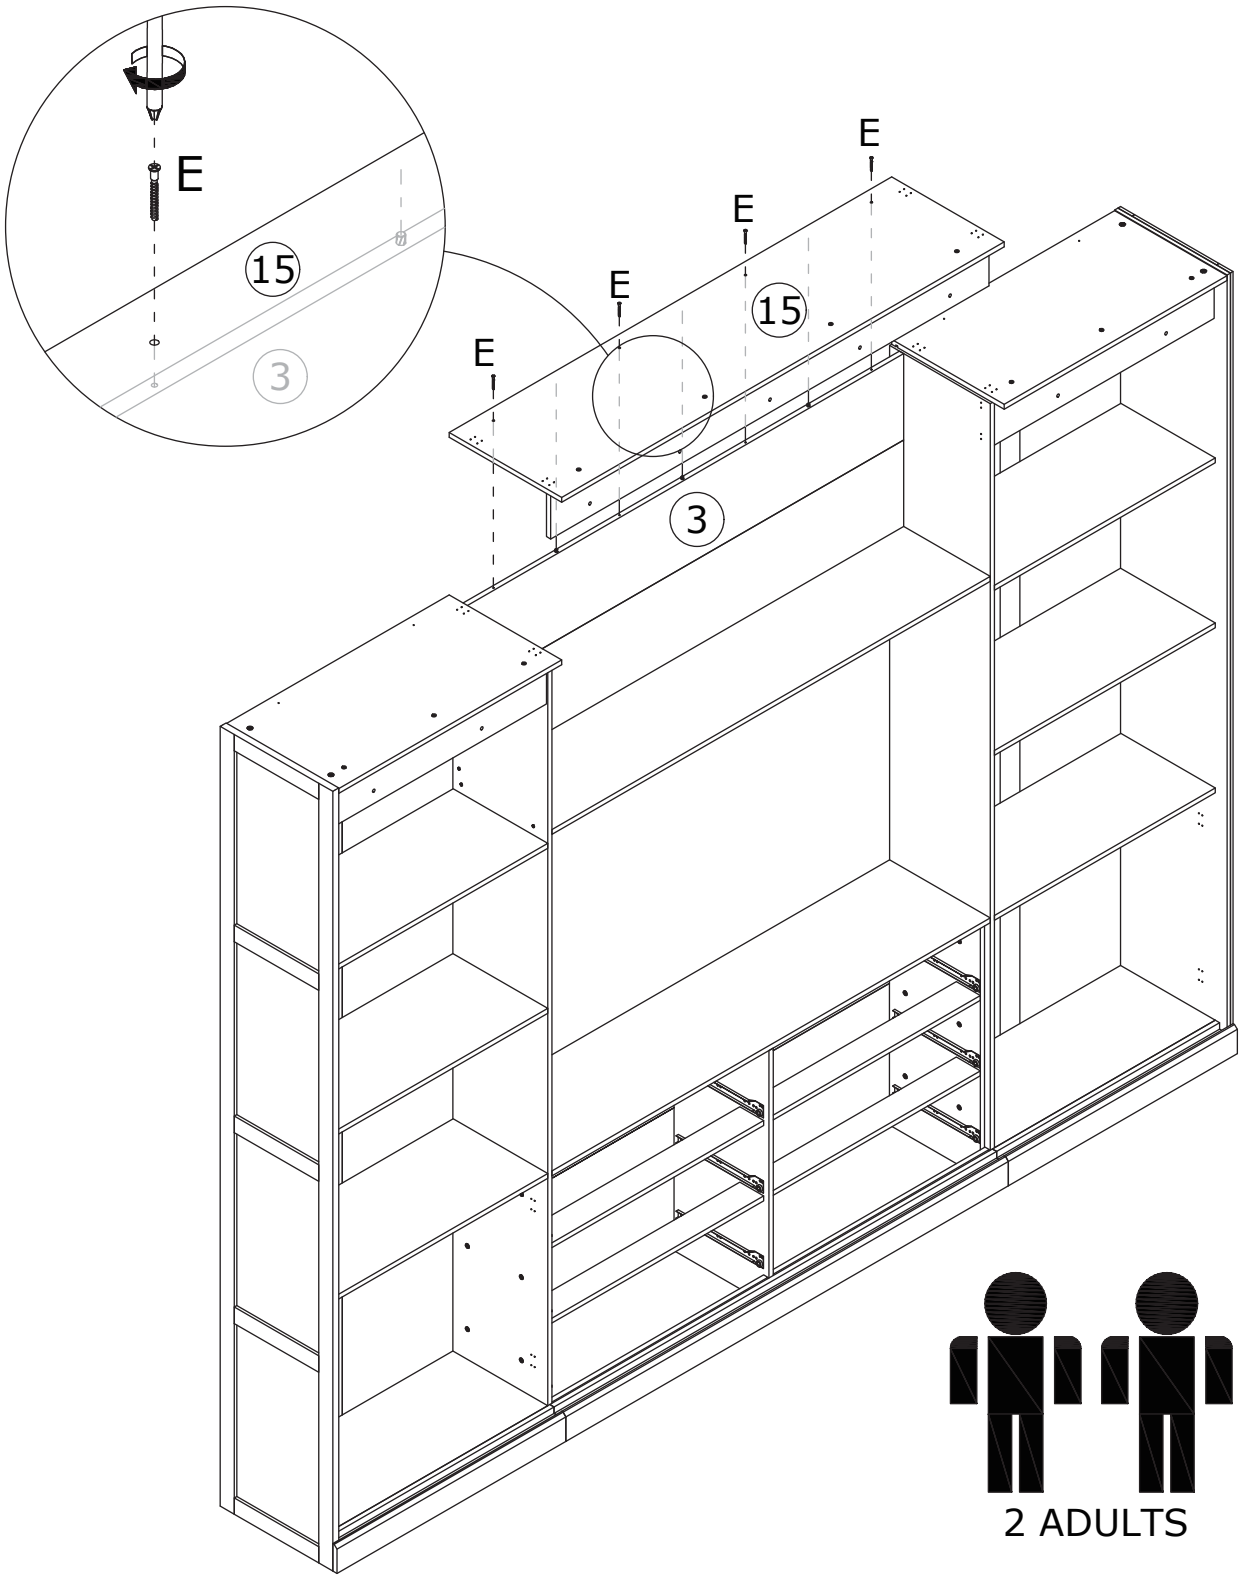


2 ADULTS

61



G x 32	S x 4	
 CRD3514A		

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A

Secure iron plate (S) to panels 15, 24, and 33 using screw (G)

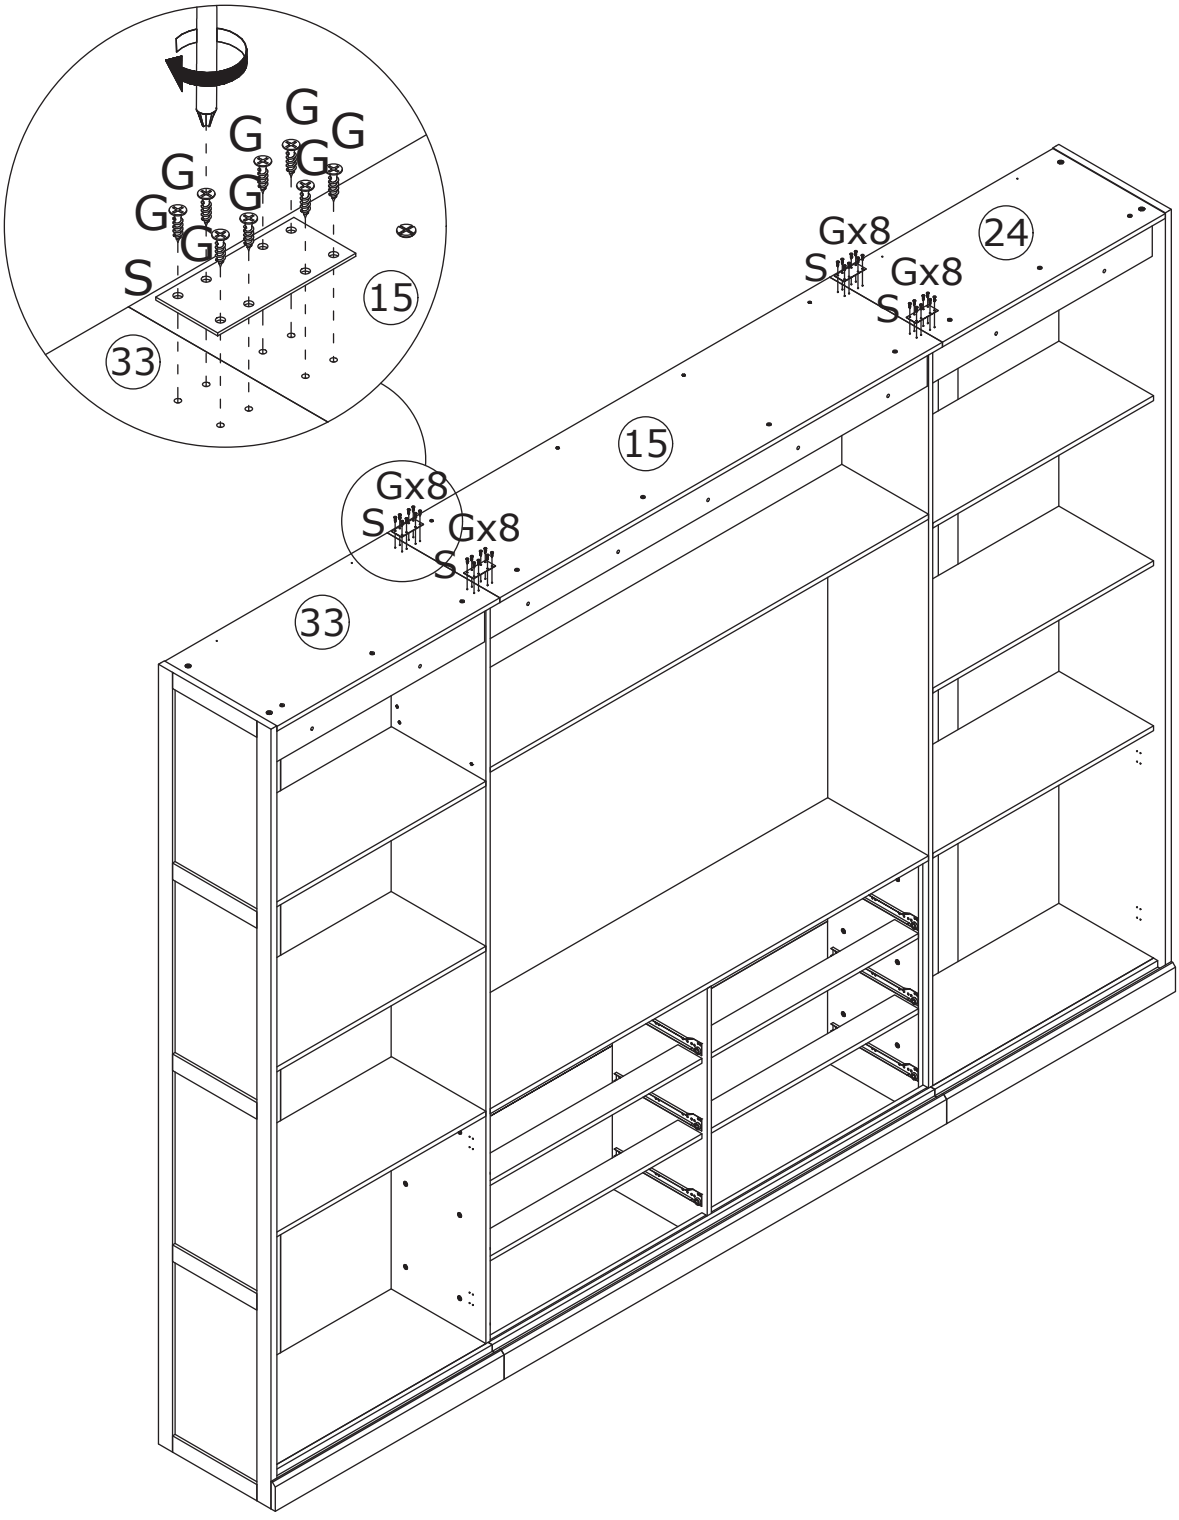


62


G x 12	X x 2	
 CRD3514A		

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A

Secure iron plate (X) to panels 15, 21, 24, 30, and 33 using screw (G)

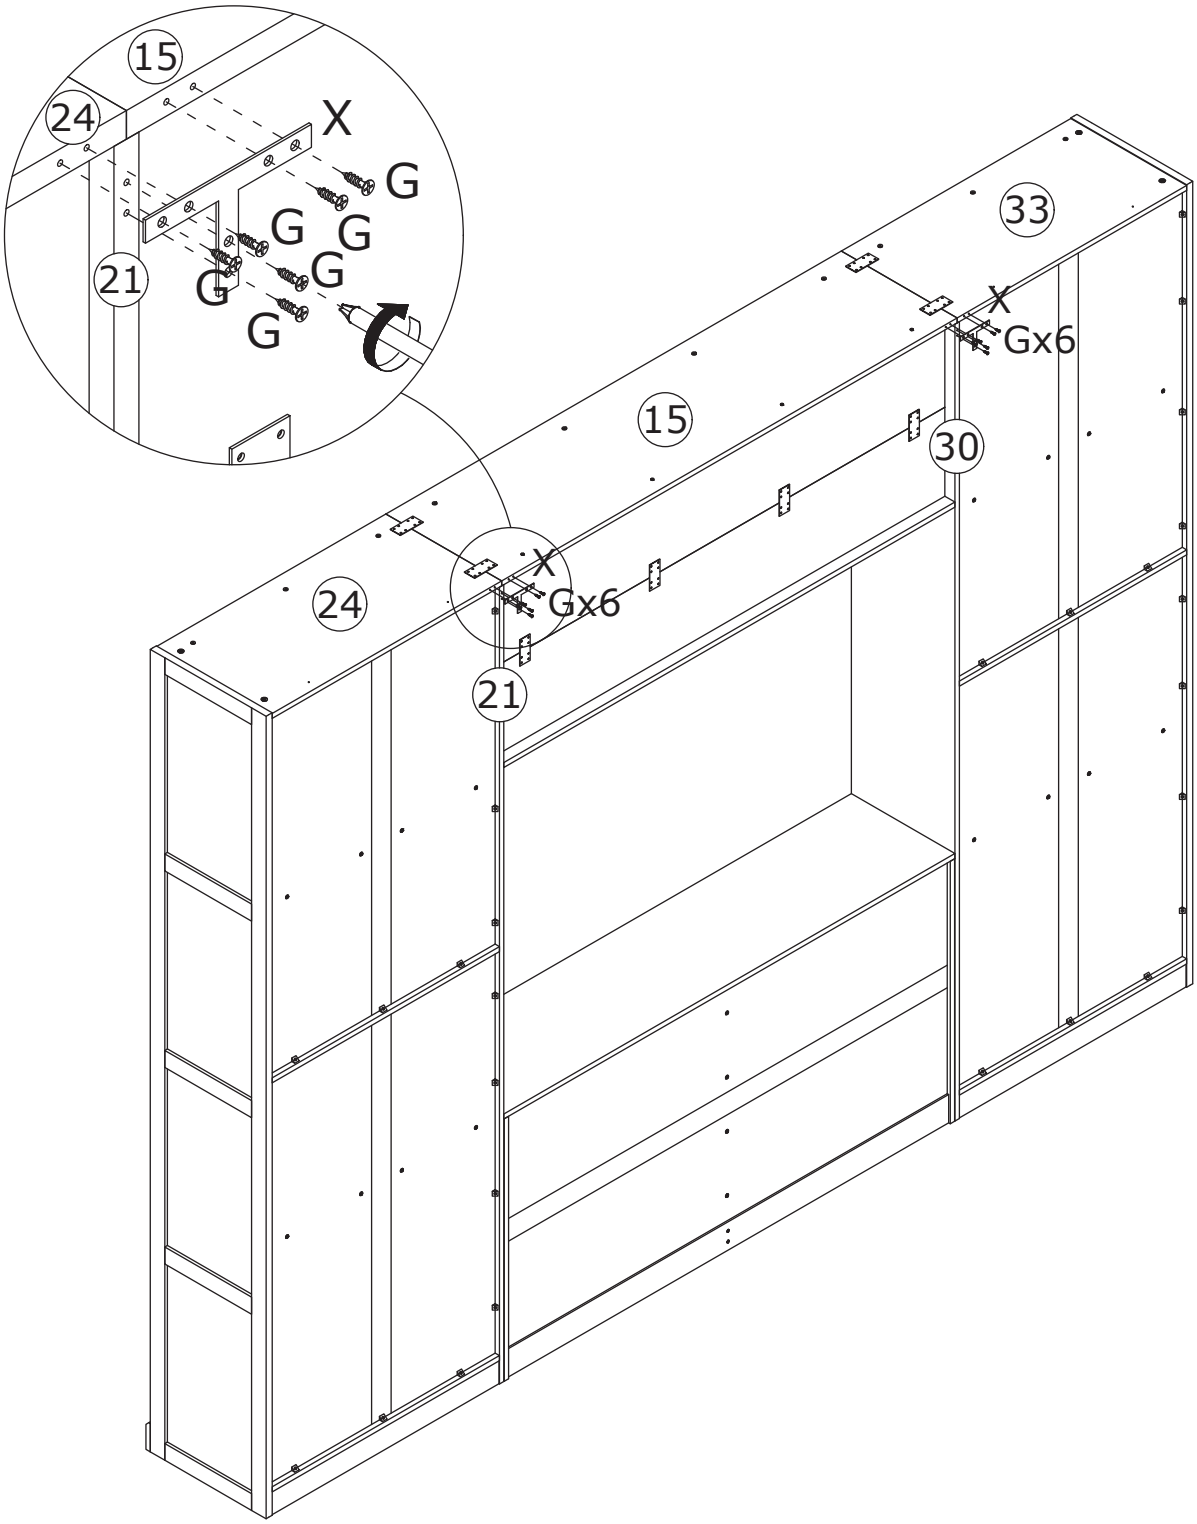


63


G x 16	AF x 4	
 CRD3514A		

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A

Secure corner bracket (AF) to panels 5, 21, and 30 using screw (G).

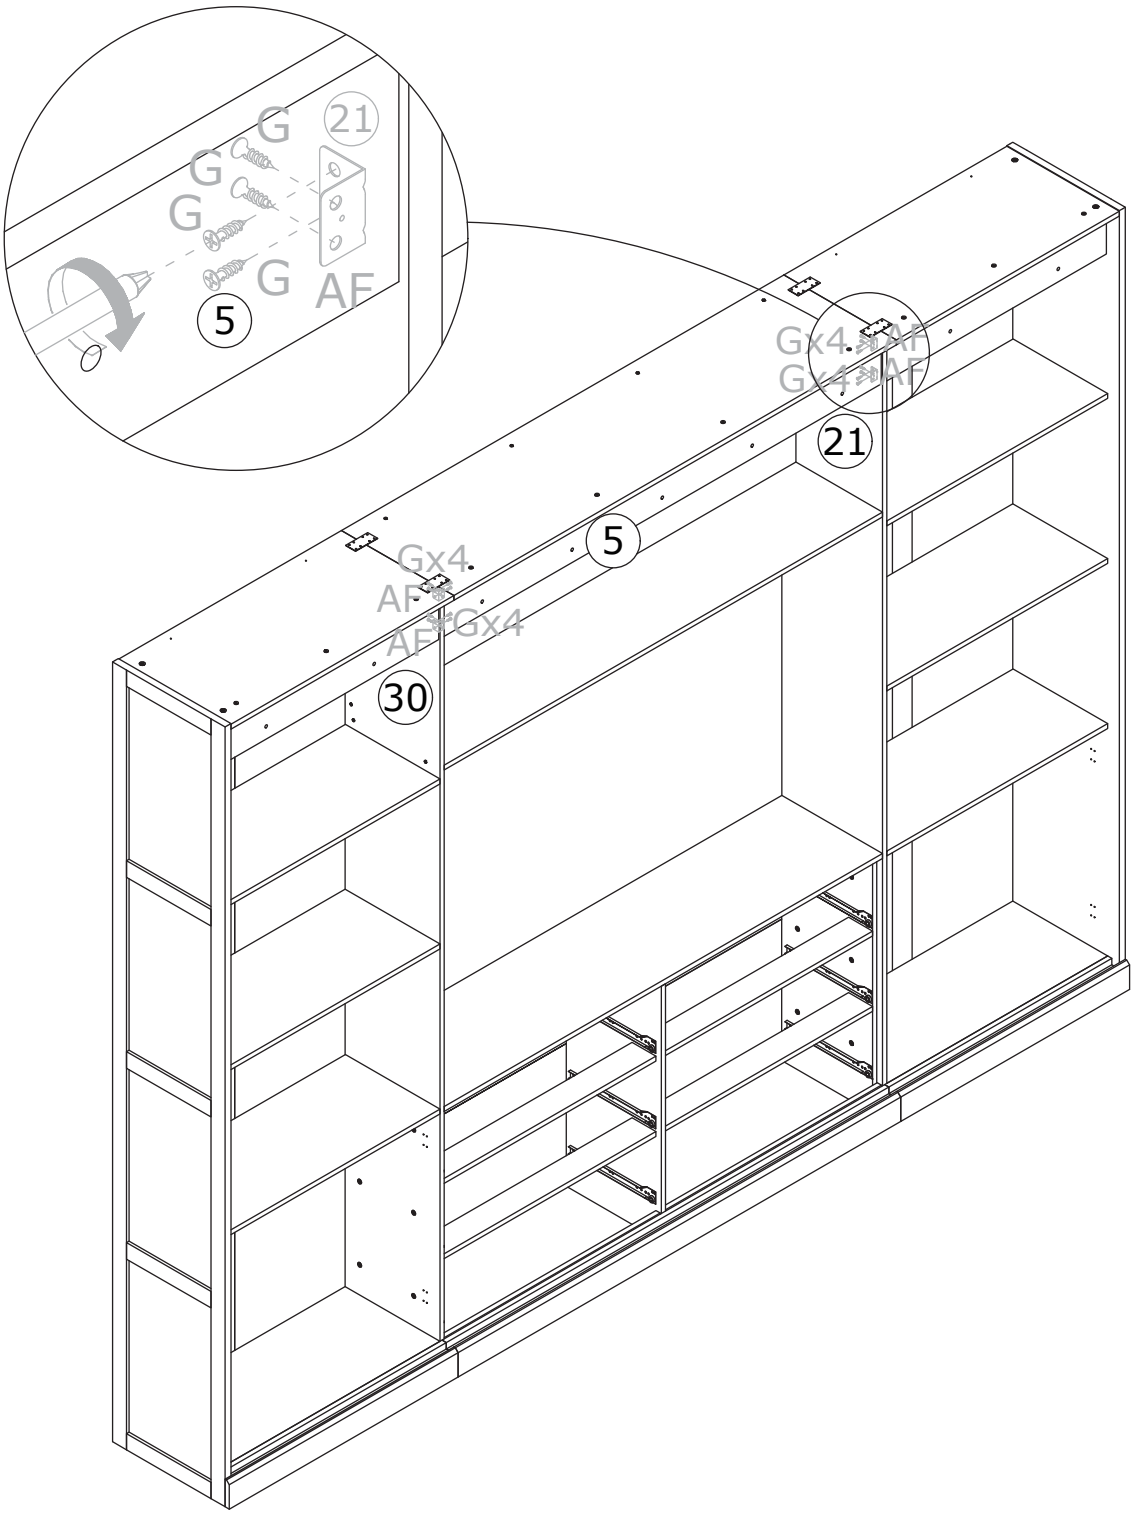


64




G x 4	M x 4	
 CRD3514A		

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A


Secure anti-tip bracket (AF) to panels 24 and 33 using screw (G).

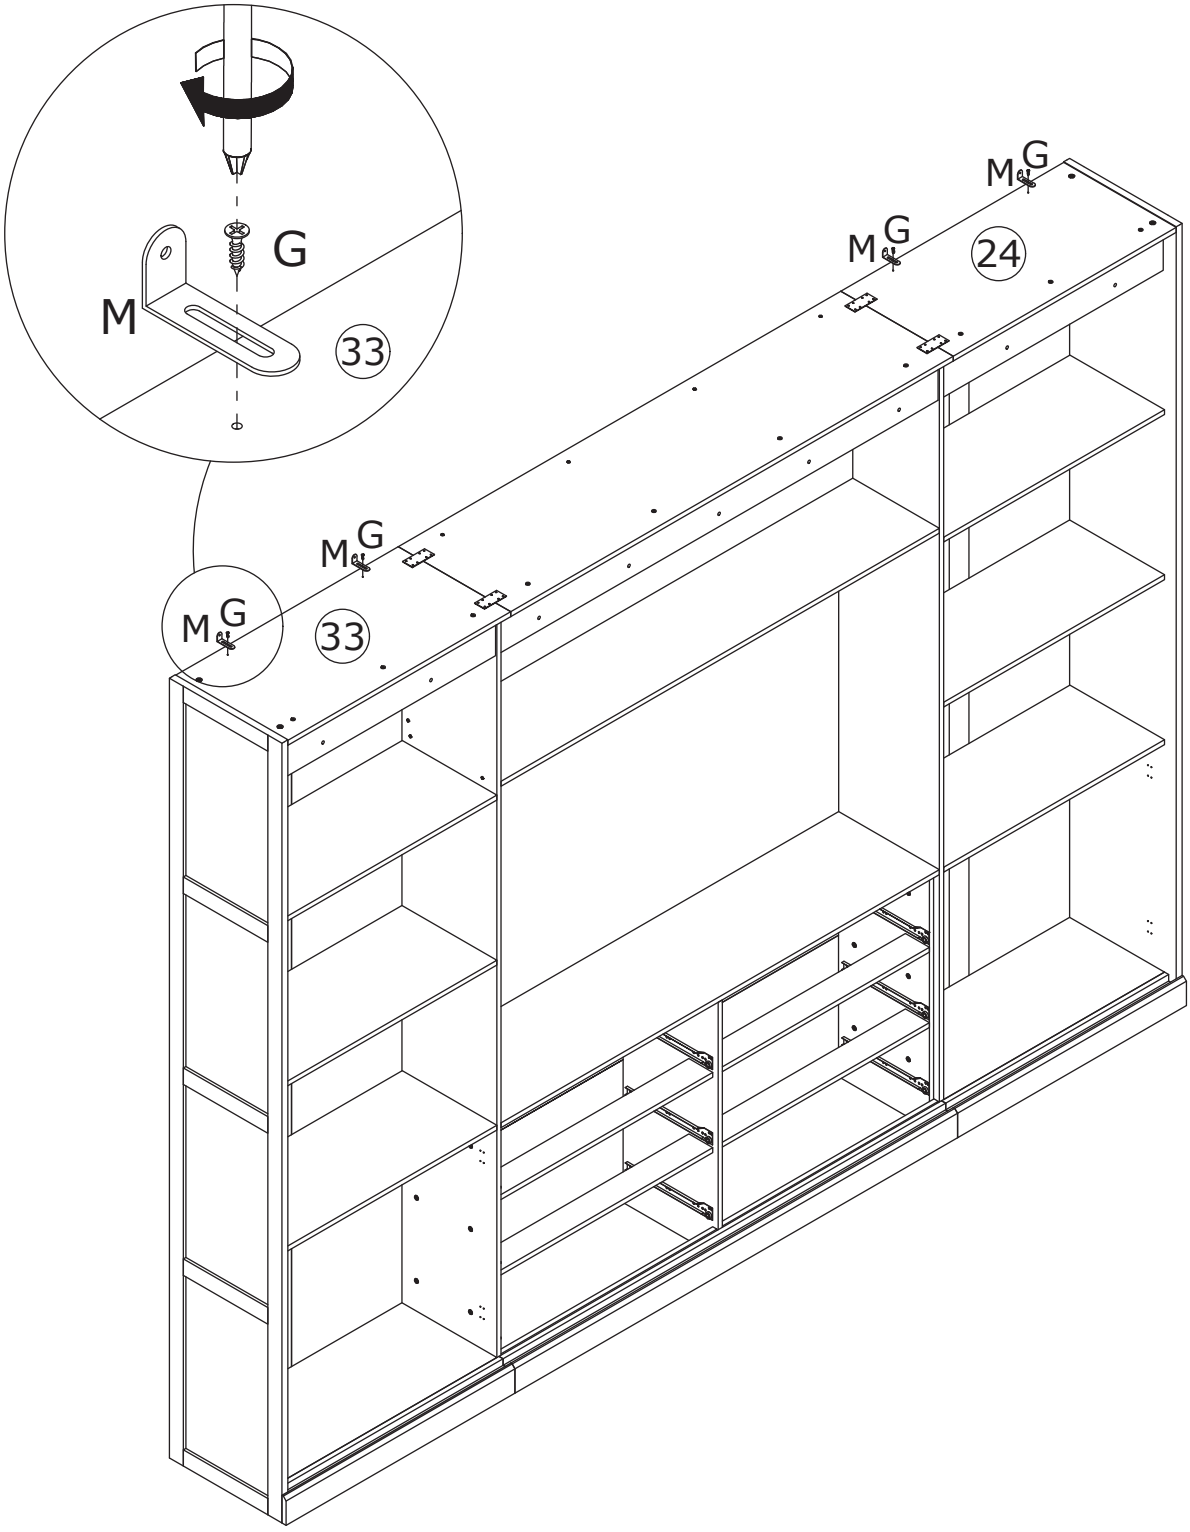



65

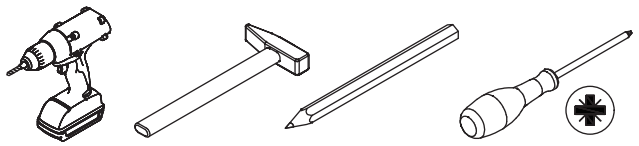N x 4	Z x 4	
	 CRD3535A	


Install an anti-tip device.

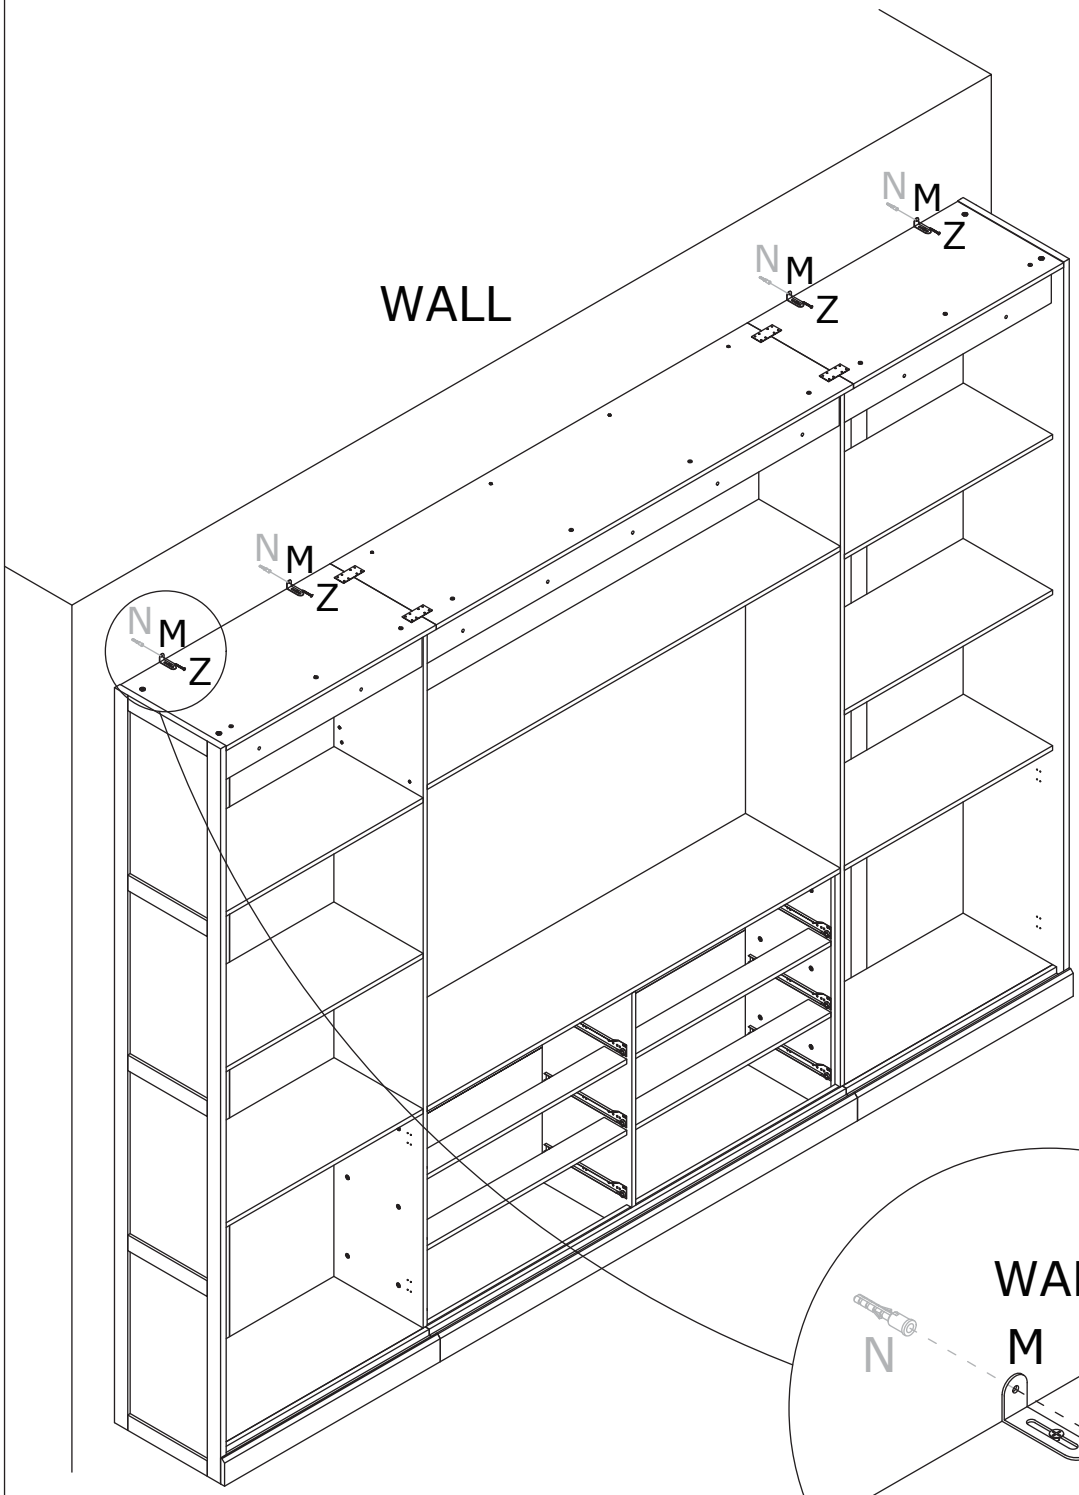

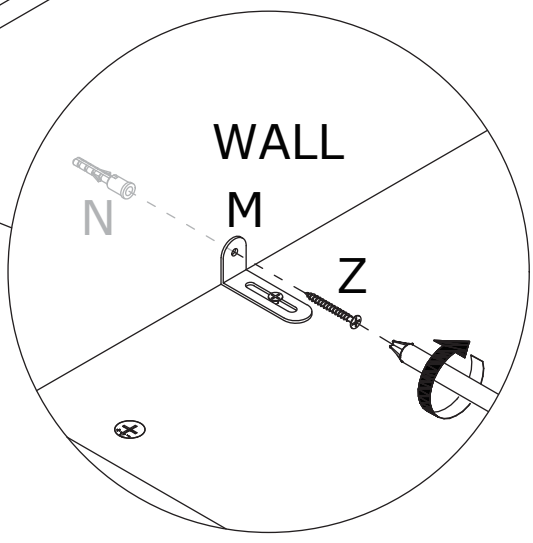

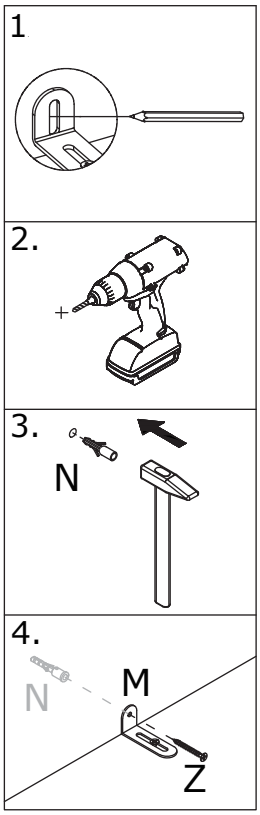


66

G x 16	U x 8	
 CRD3514A	 DGA861C	

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A

Secure hinge (U) to panel 23 using screw (G).

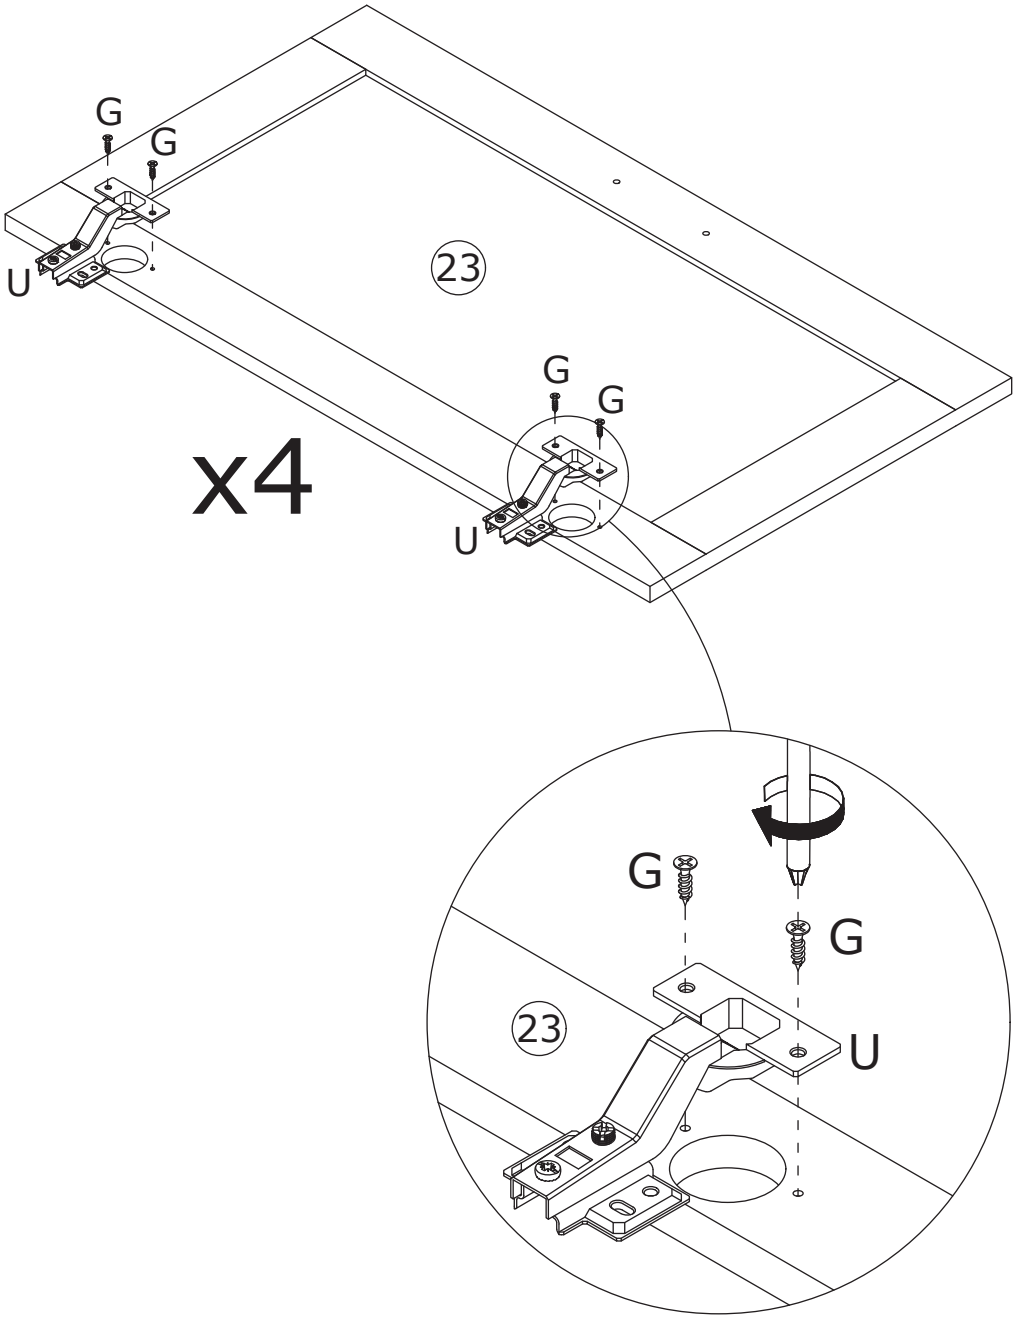


67

G x 32



CRD3514A





F



CRD3512A

G




CRD3514A

K







CRD0314A

Connect panel 23 to panels 16, 21, 25, and 30 via the hinges using screw (G).

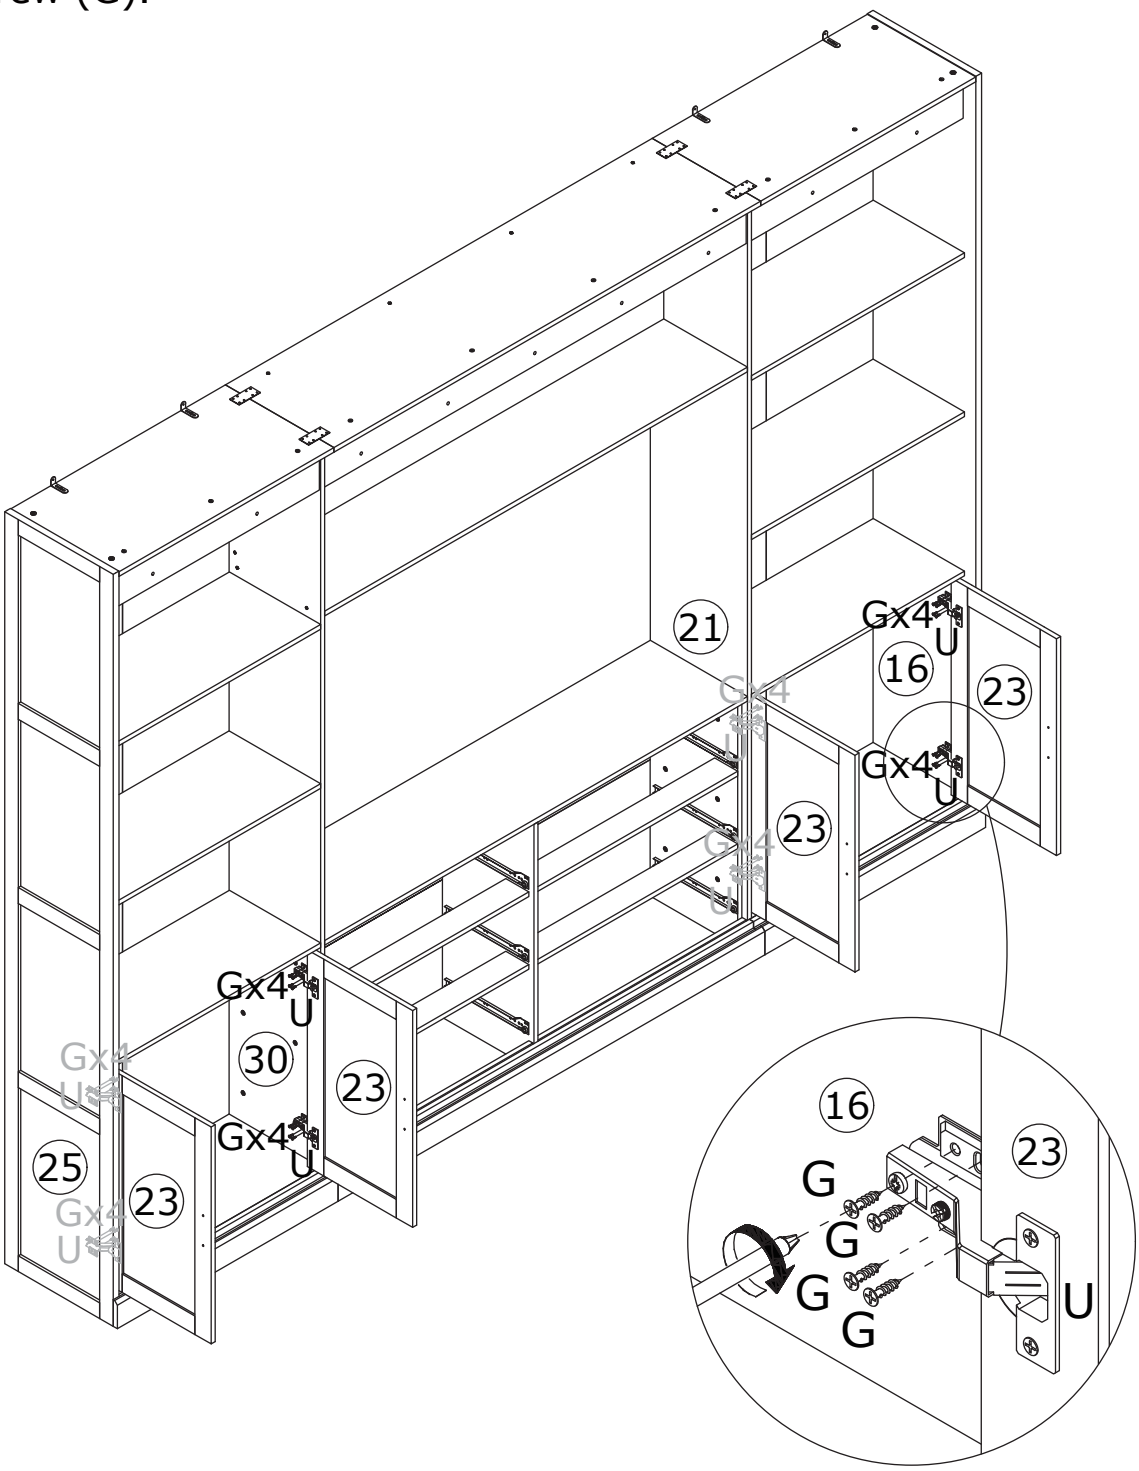


68


H x 8	W x 4	
		
CRE0418A	96-104mm	

	H	J
		
	CRE0418A	CRE0406A


Secure handle (W) to panel 23 using screw (H).

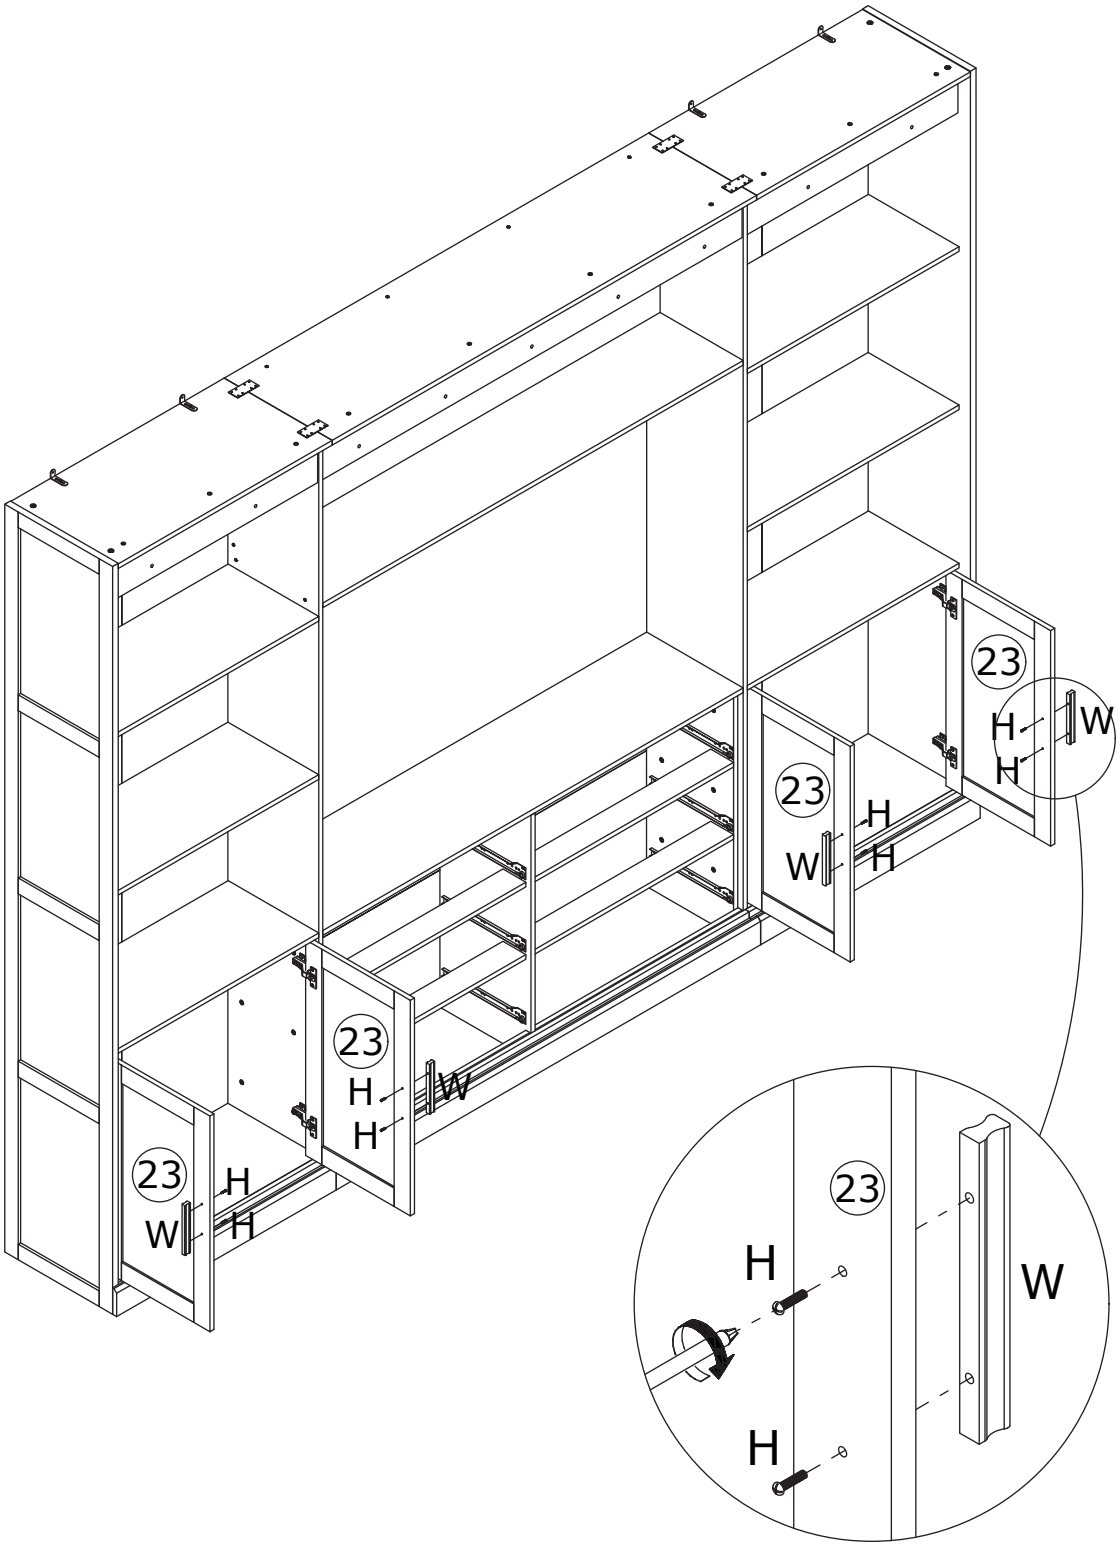



69





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

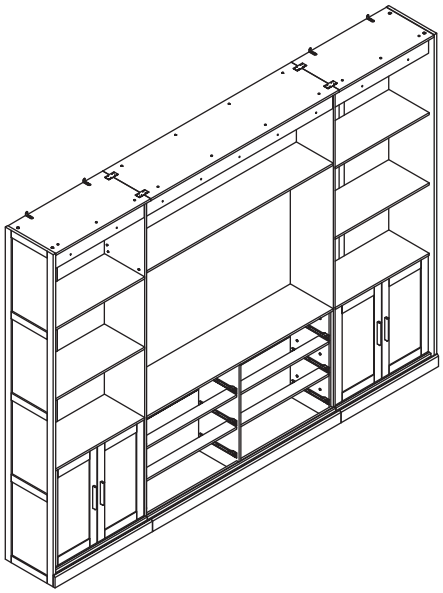


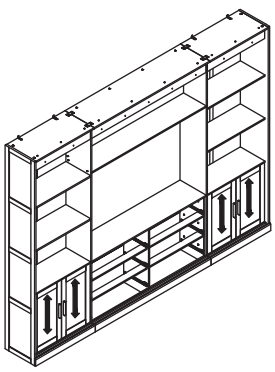


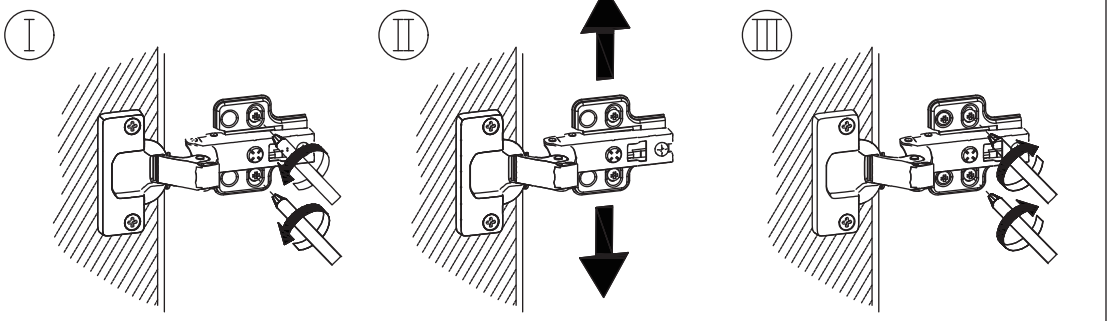


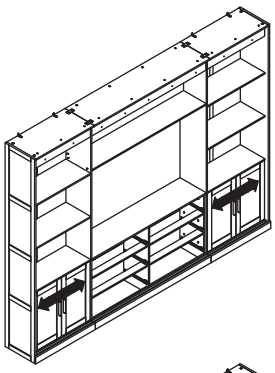


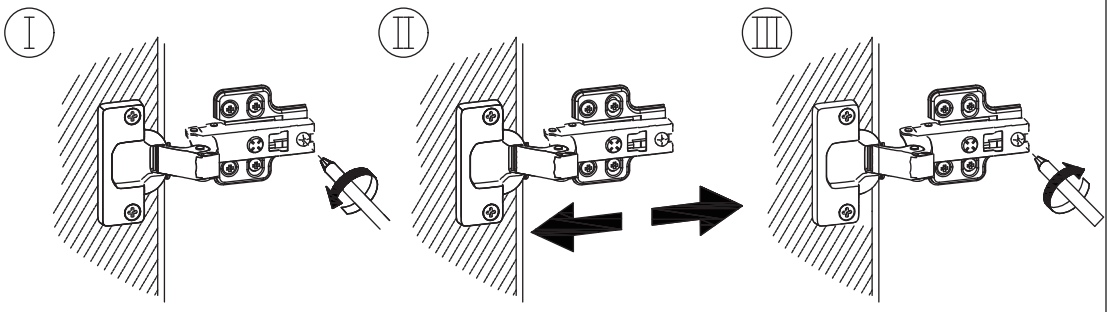


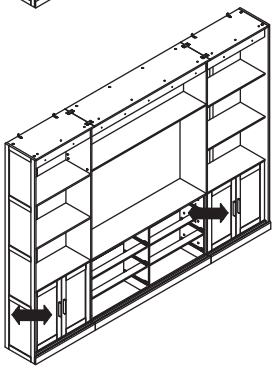

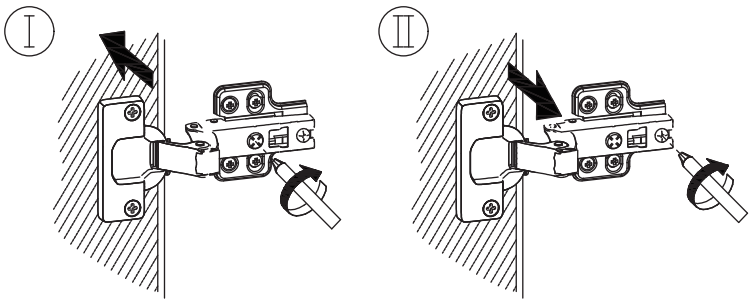


70



B x 30	D x 30	
 CRA0635B		

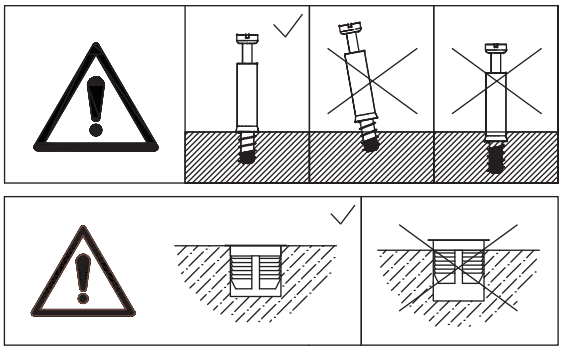


First, attach plug (D) to panels 20 and 29, then screw self-tapping rod (B) onto the plugs.

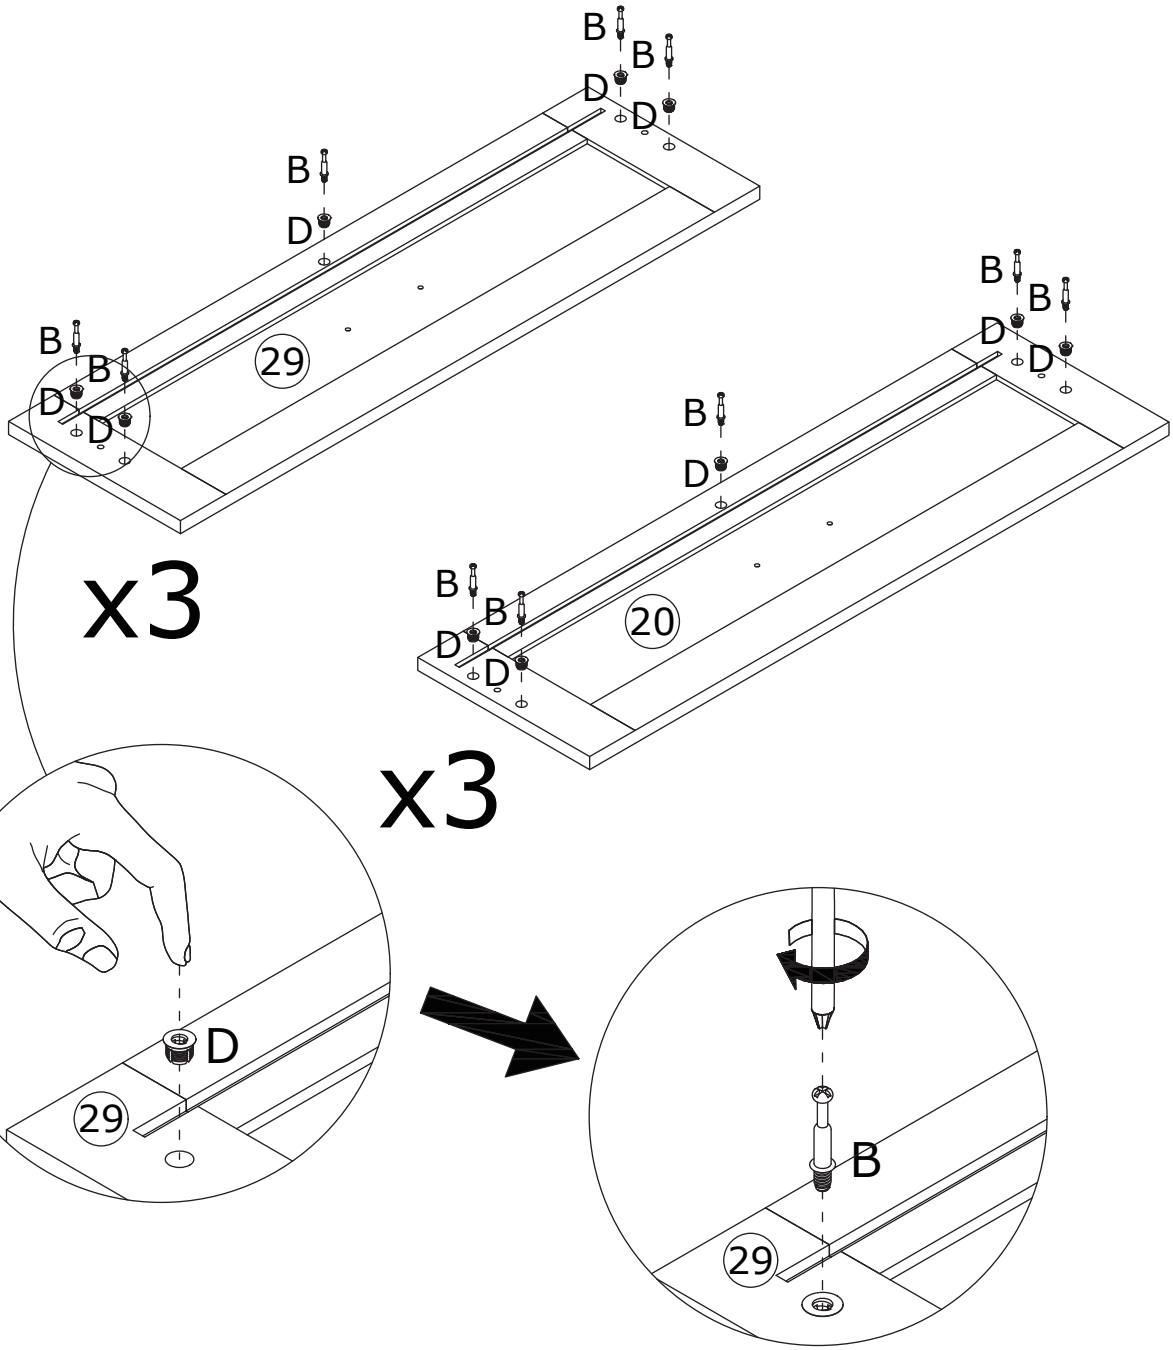


71

A x 30	C x 12	
 CRB1595A	 CRF0630A	

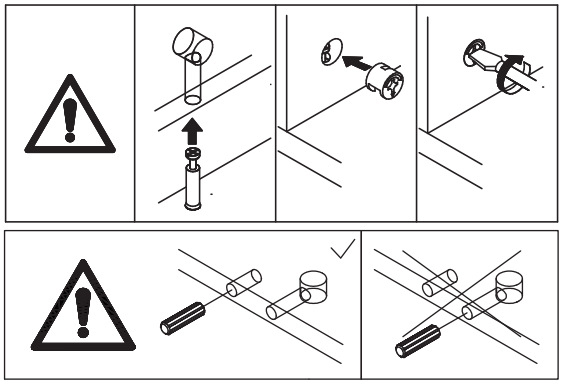


Connect panels 19, 36 and 28 to panels 29 and 20 using wooden dowel (C), and tighten by turning eccentric wheel (A) clockwise.

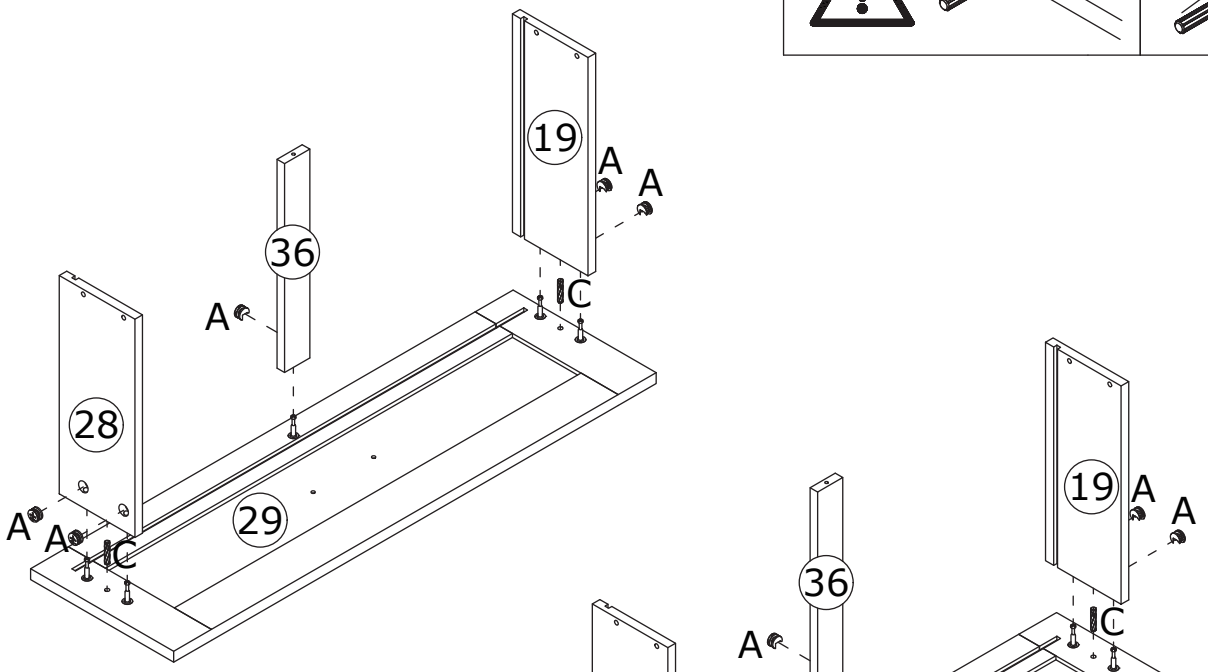


x3

x3

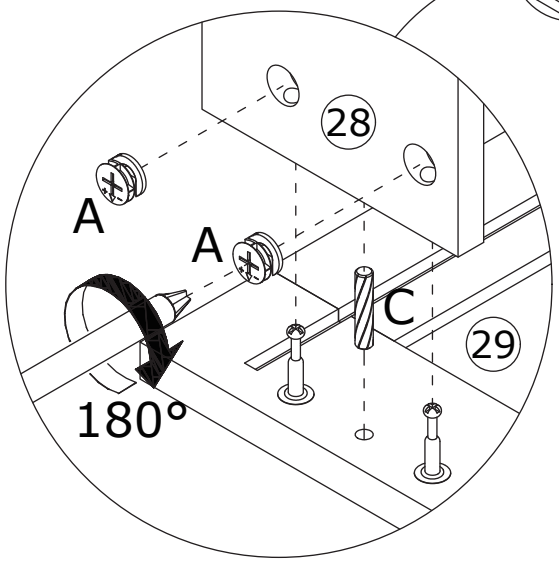


72

Insert panel 35 into the available slots.

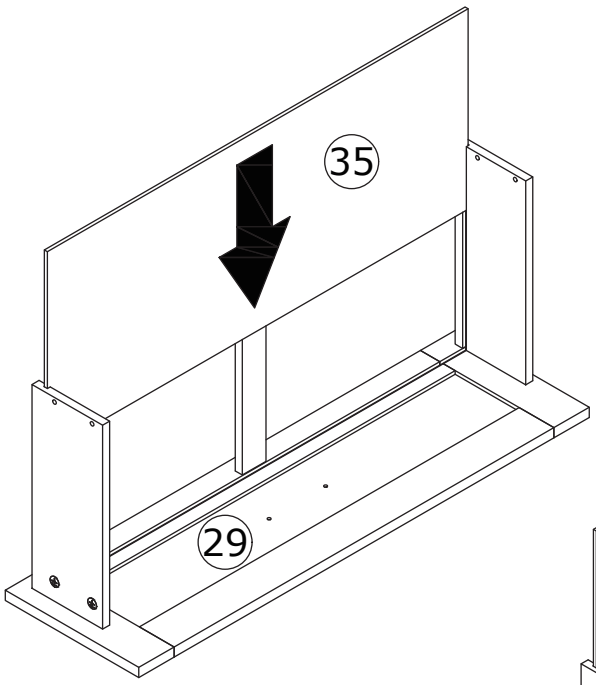


x3

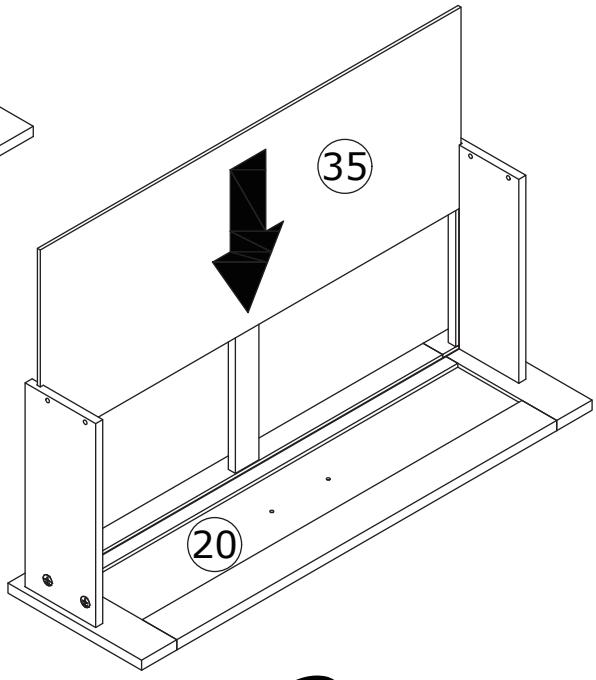


x3

73


E x 30



CRC0540A



Secure panels 19, 28, and 36 to panel 34 using screw (E).

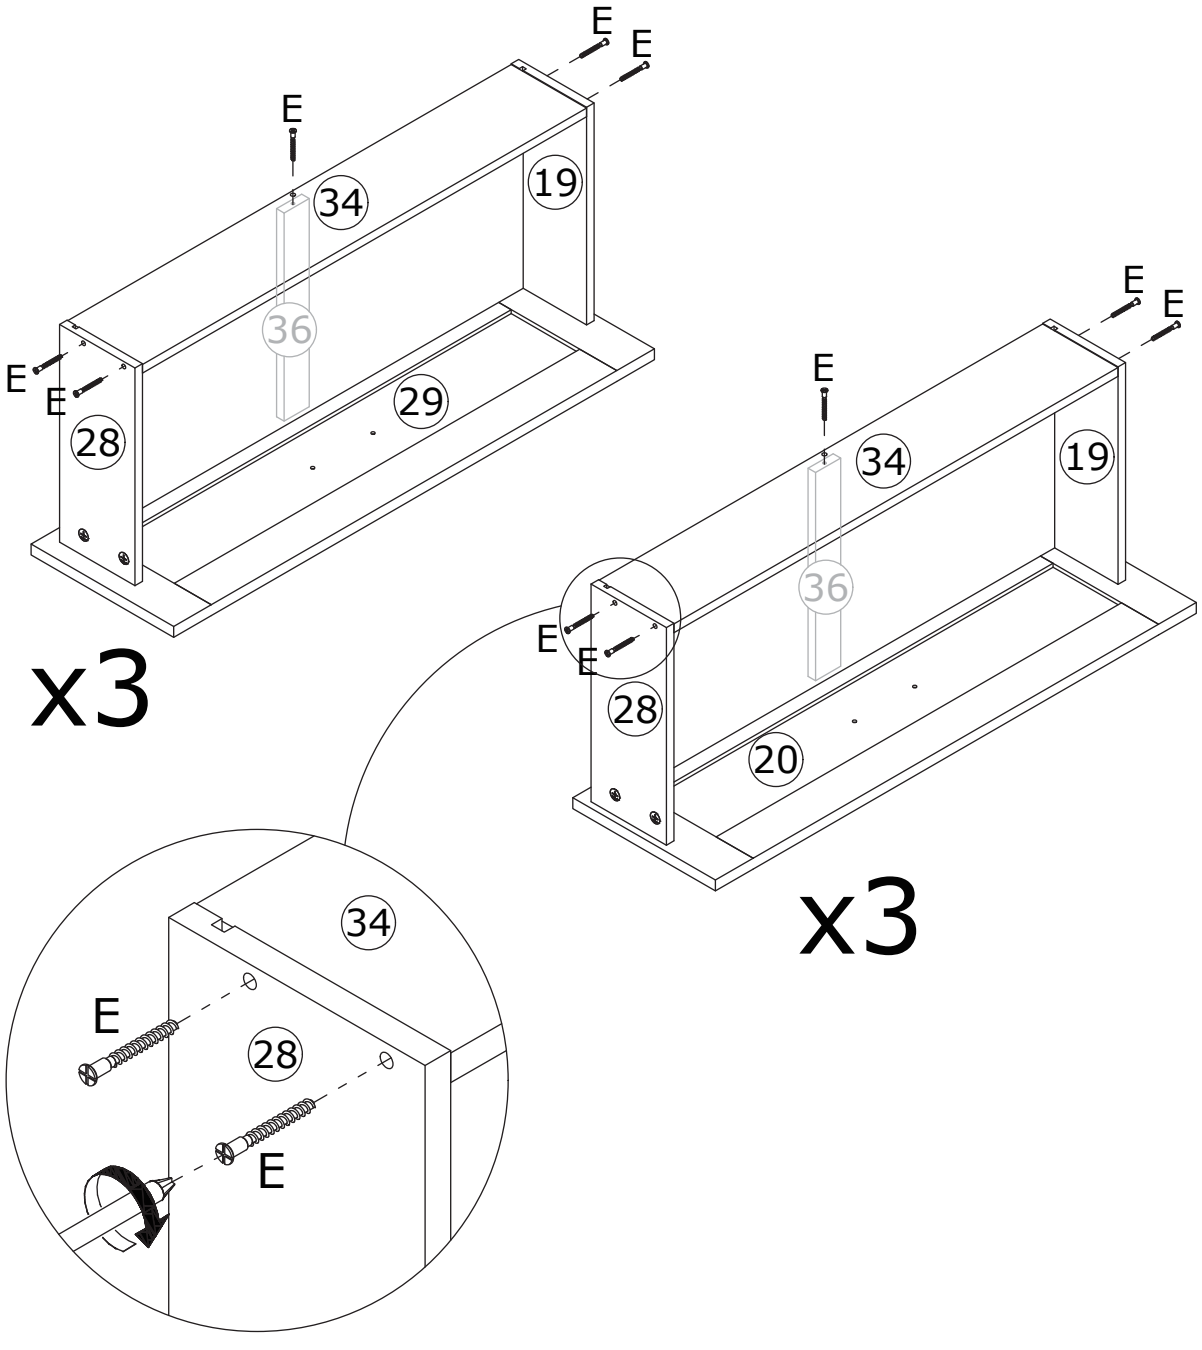


74


F x 24	DL x 6	DR x 6	
CRD3512A	WX1012A	WX1012A	

Secure slide rail (DL) and (DR) to panels 28 and 19 using screw (F)



F G K


CRD3512A CRD3514A CRD0314A

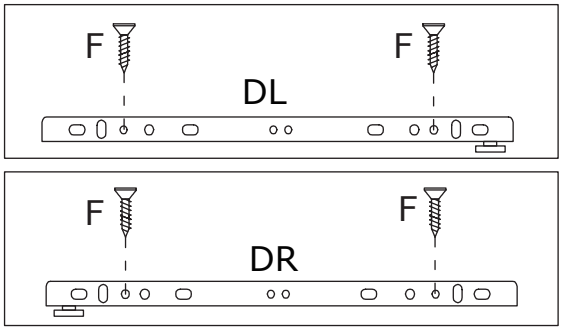

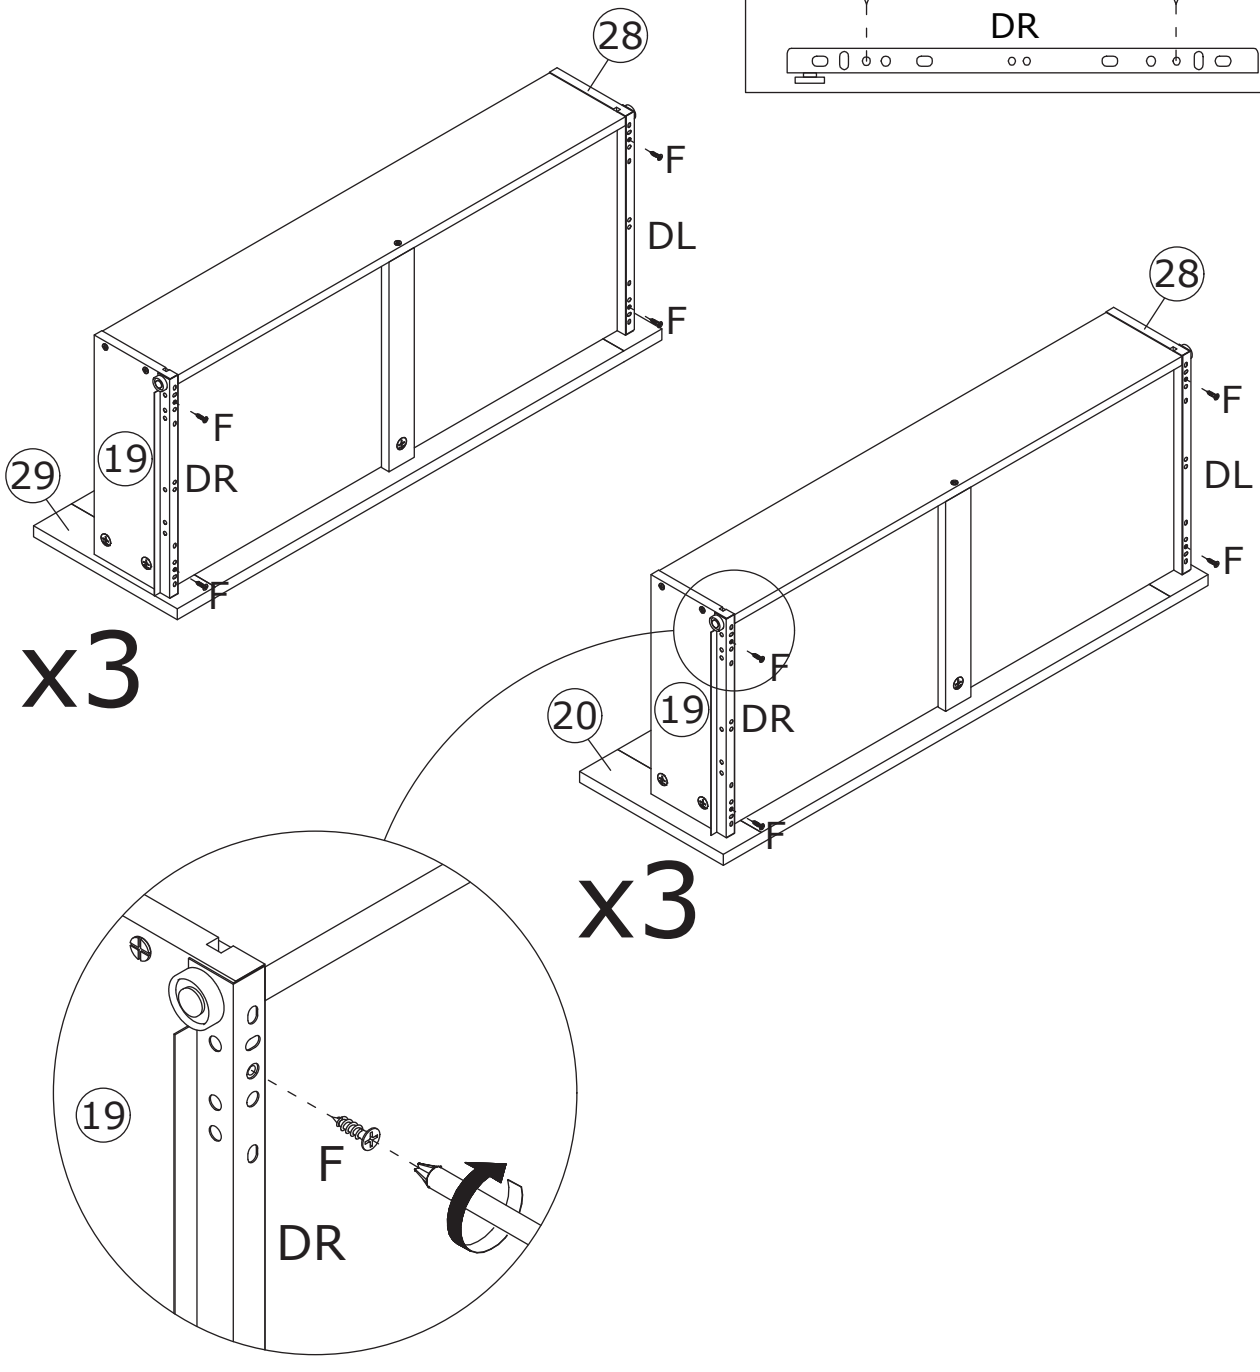


75

J x 12	W x 6	
 CRE0406A	 96-104mm	


	H	J
	 CRE0418A	 CRE0406A

Secure handle (W) to panels 20 and 29 using screw (H).


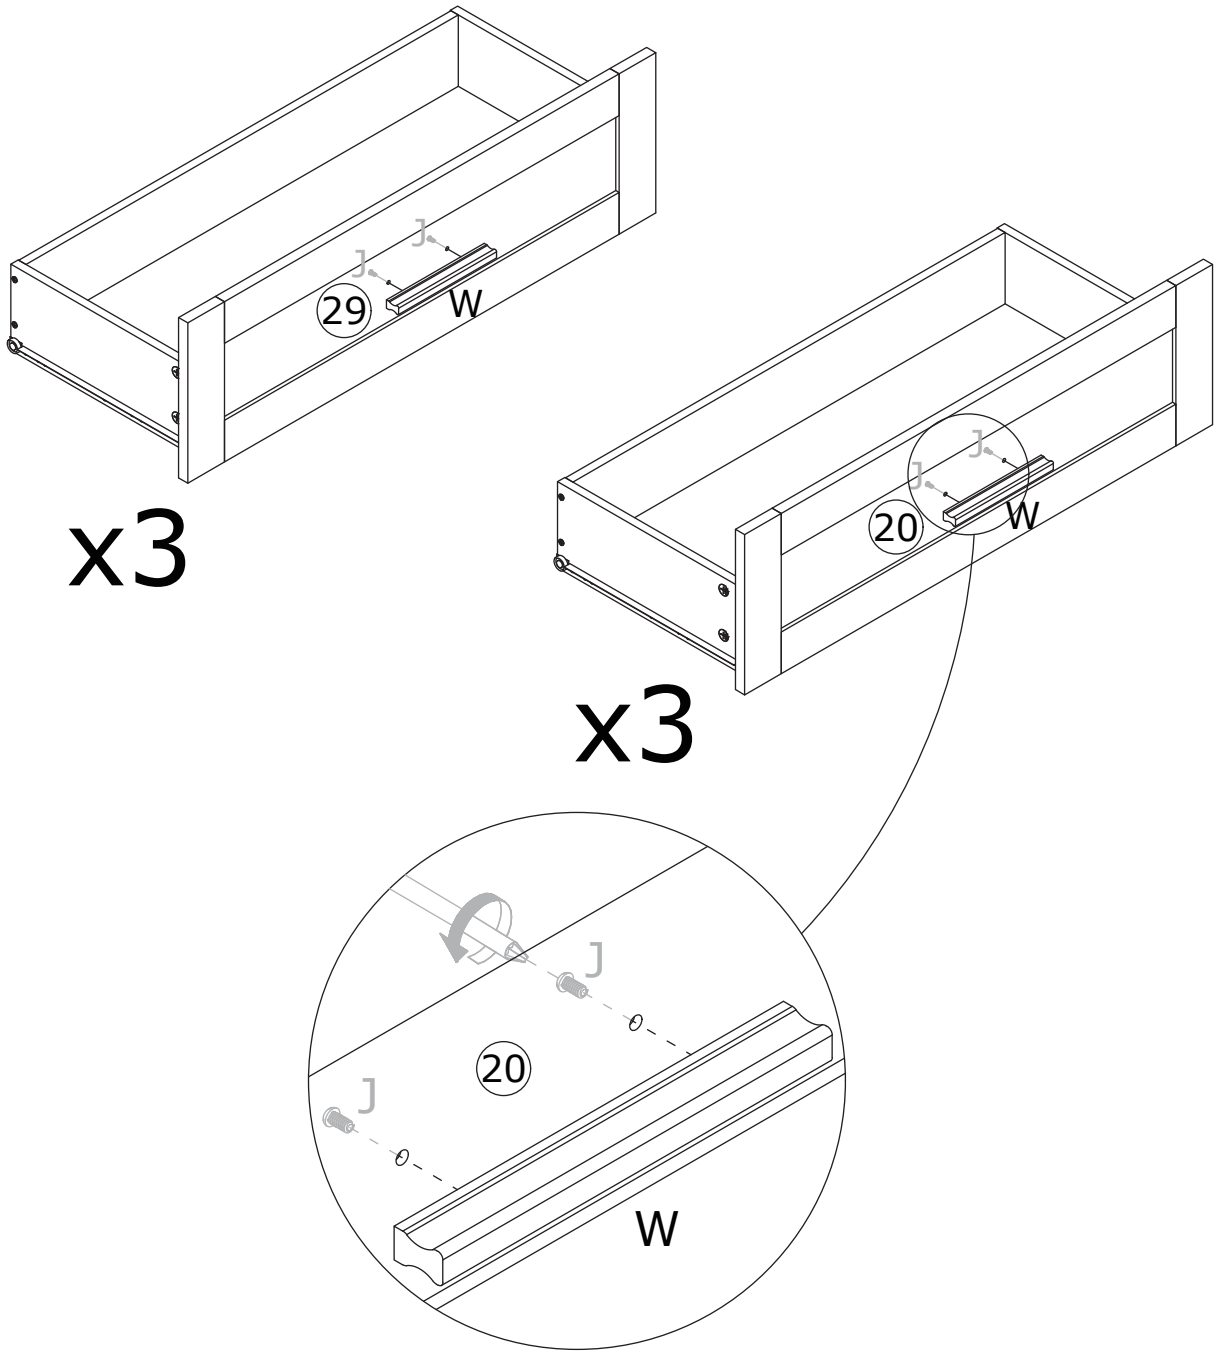


76

Assemble the drawers into the main unit.

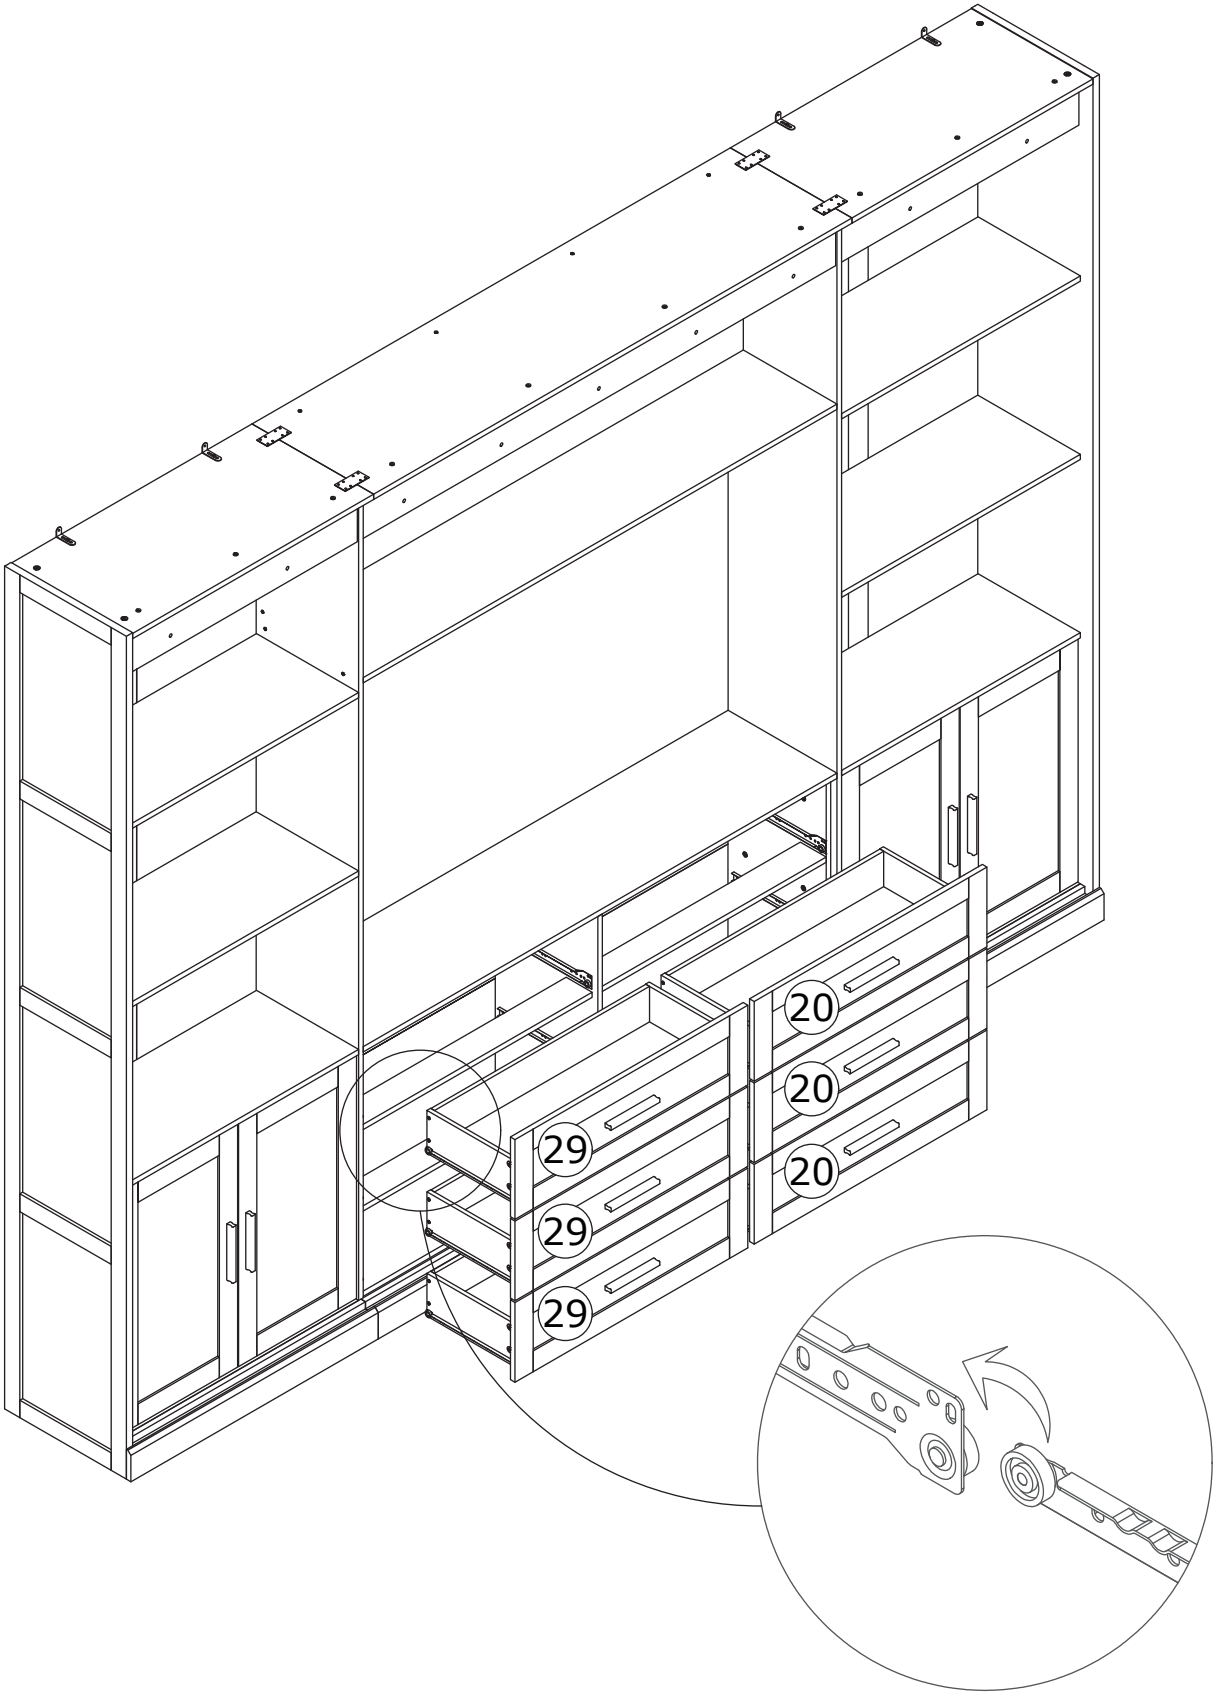


77

Q x 4	T x 4	AD x 4	AH x 1	AK x 1	54 x 1
	 M8	 CRG0865A	 M5	 M8	

54 x 1
 x4

Secure parts (54-2) and (54-4) to panels 17 and 26 using screw (AD), nut (T), and washer (Q).

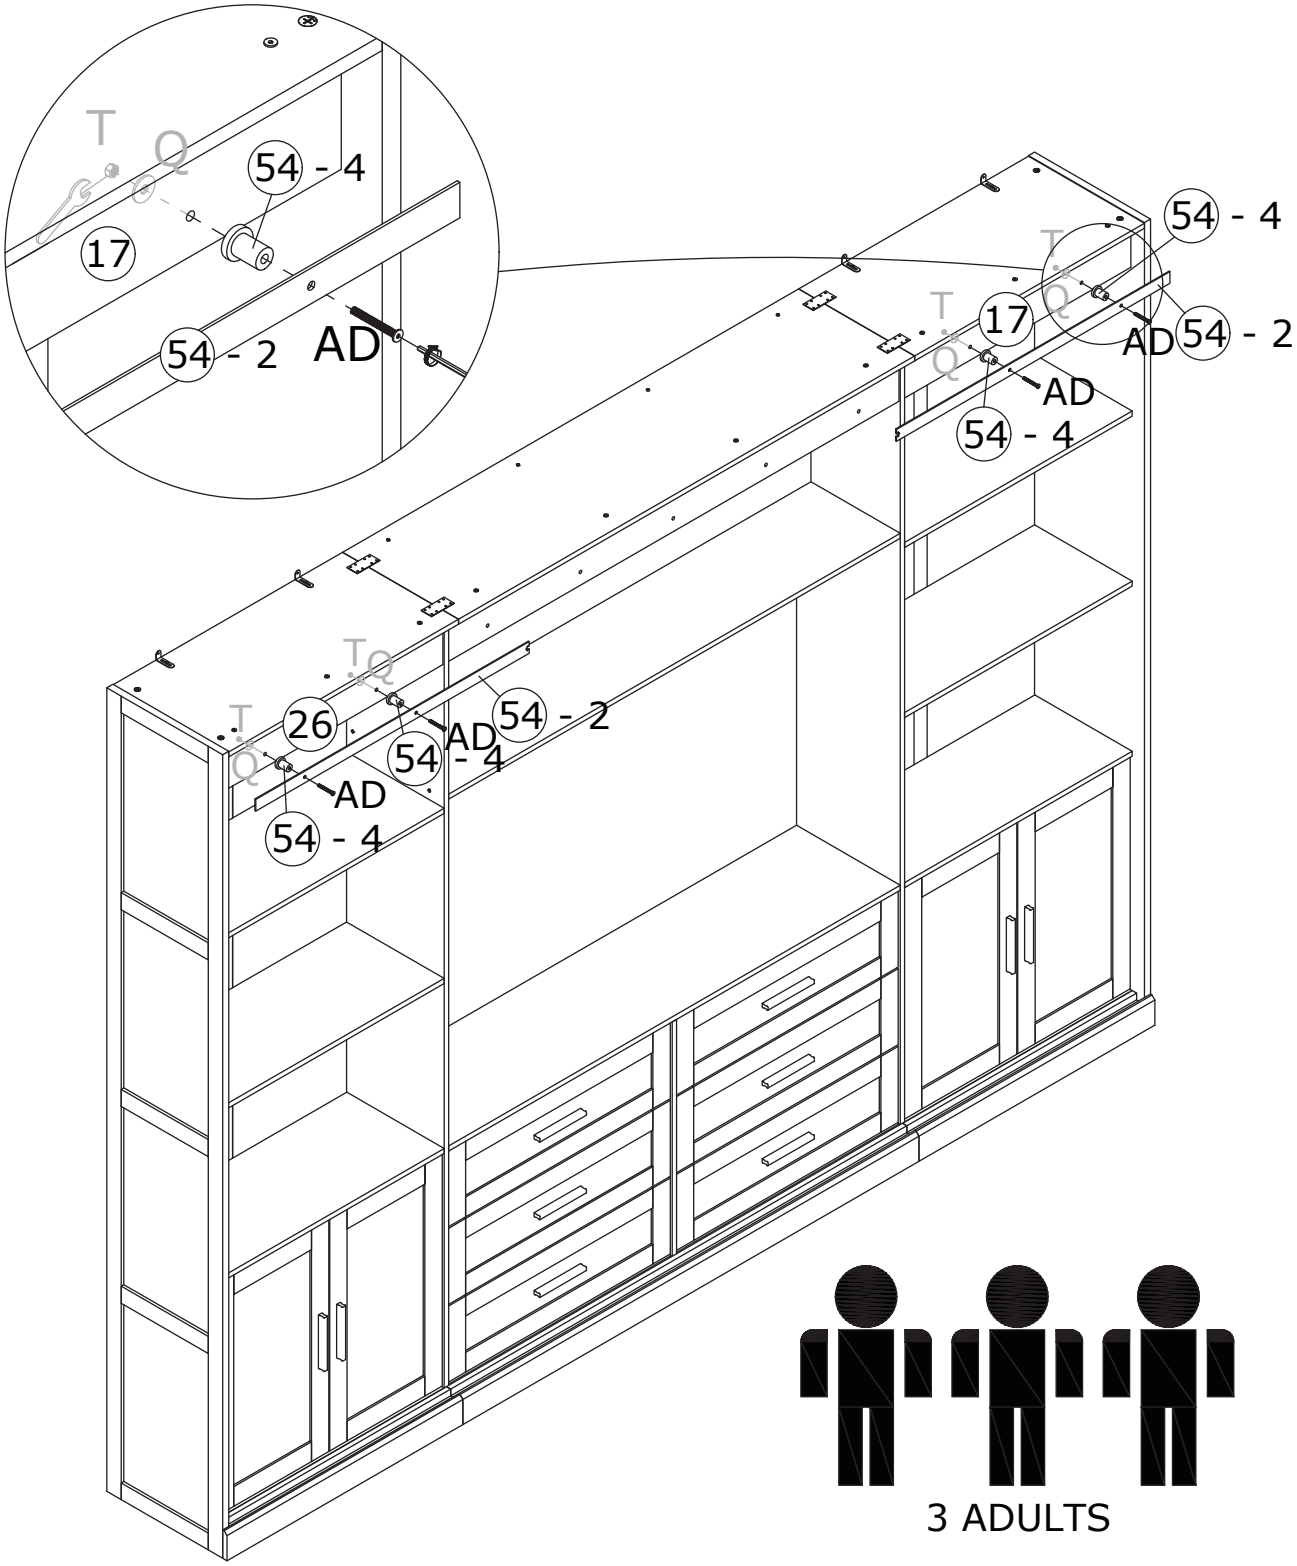


3 ADULTS

78

Q x 3	T x 3	AD x 3	AH x 1	AK x 1	54 x 1
	M8	CRG0865A	M5	M8	54 - 1

54 x 1
54 - 4
x3

Secure parts (54-1) and (54-4) onto panel 5 using screw (AD), nut (T), and washer (Q).

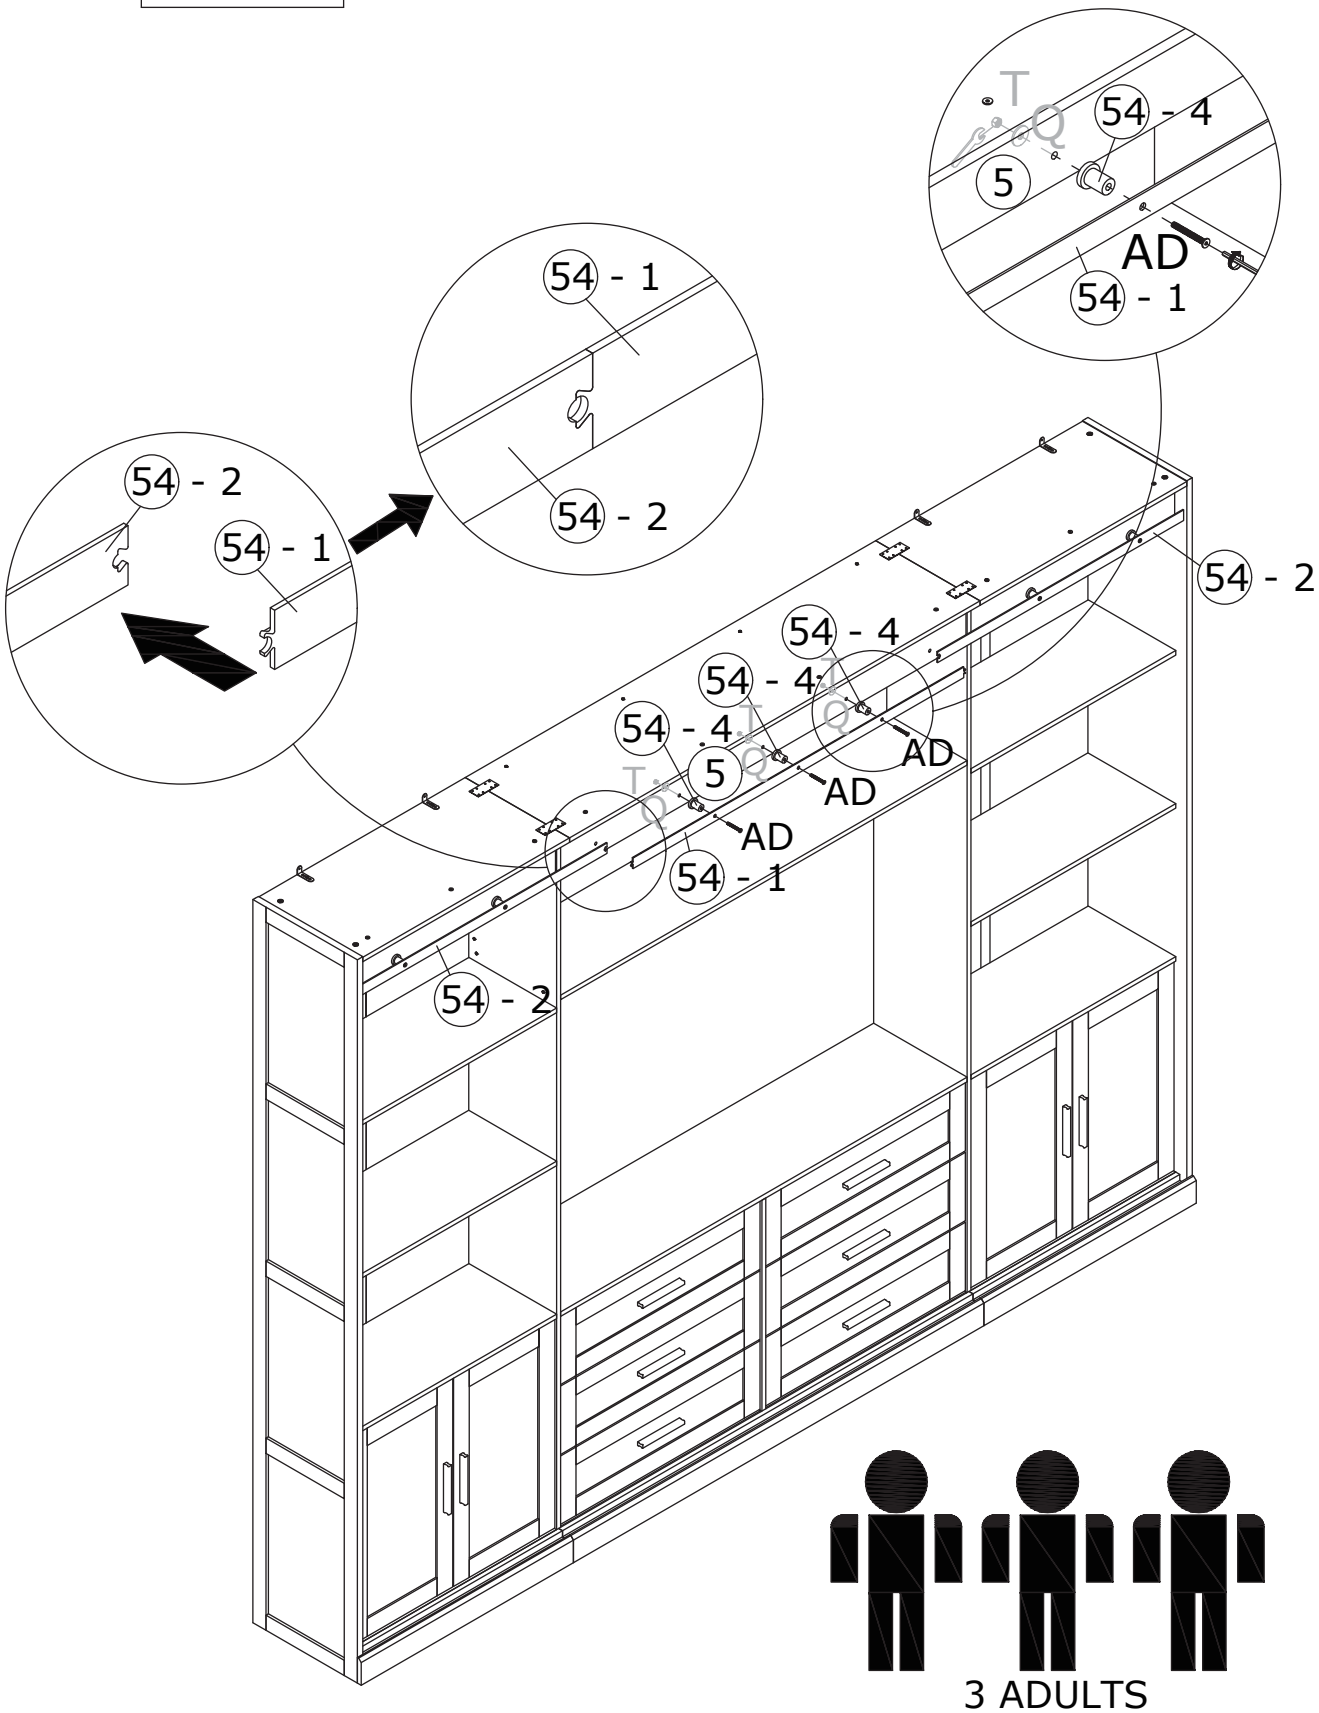


3 ADULTS


79

Q x 2	T x 2	AD x 2	AH x 1	AK x 1	54 x 1
	M8	CRG0865A	M5	M8	54 - 4 x2

Secure part (54-4) onto panel 5 using screw (AD), nut (T), and washer (Q).

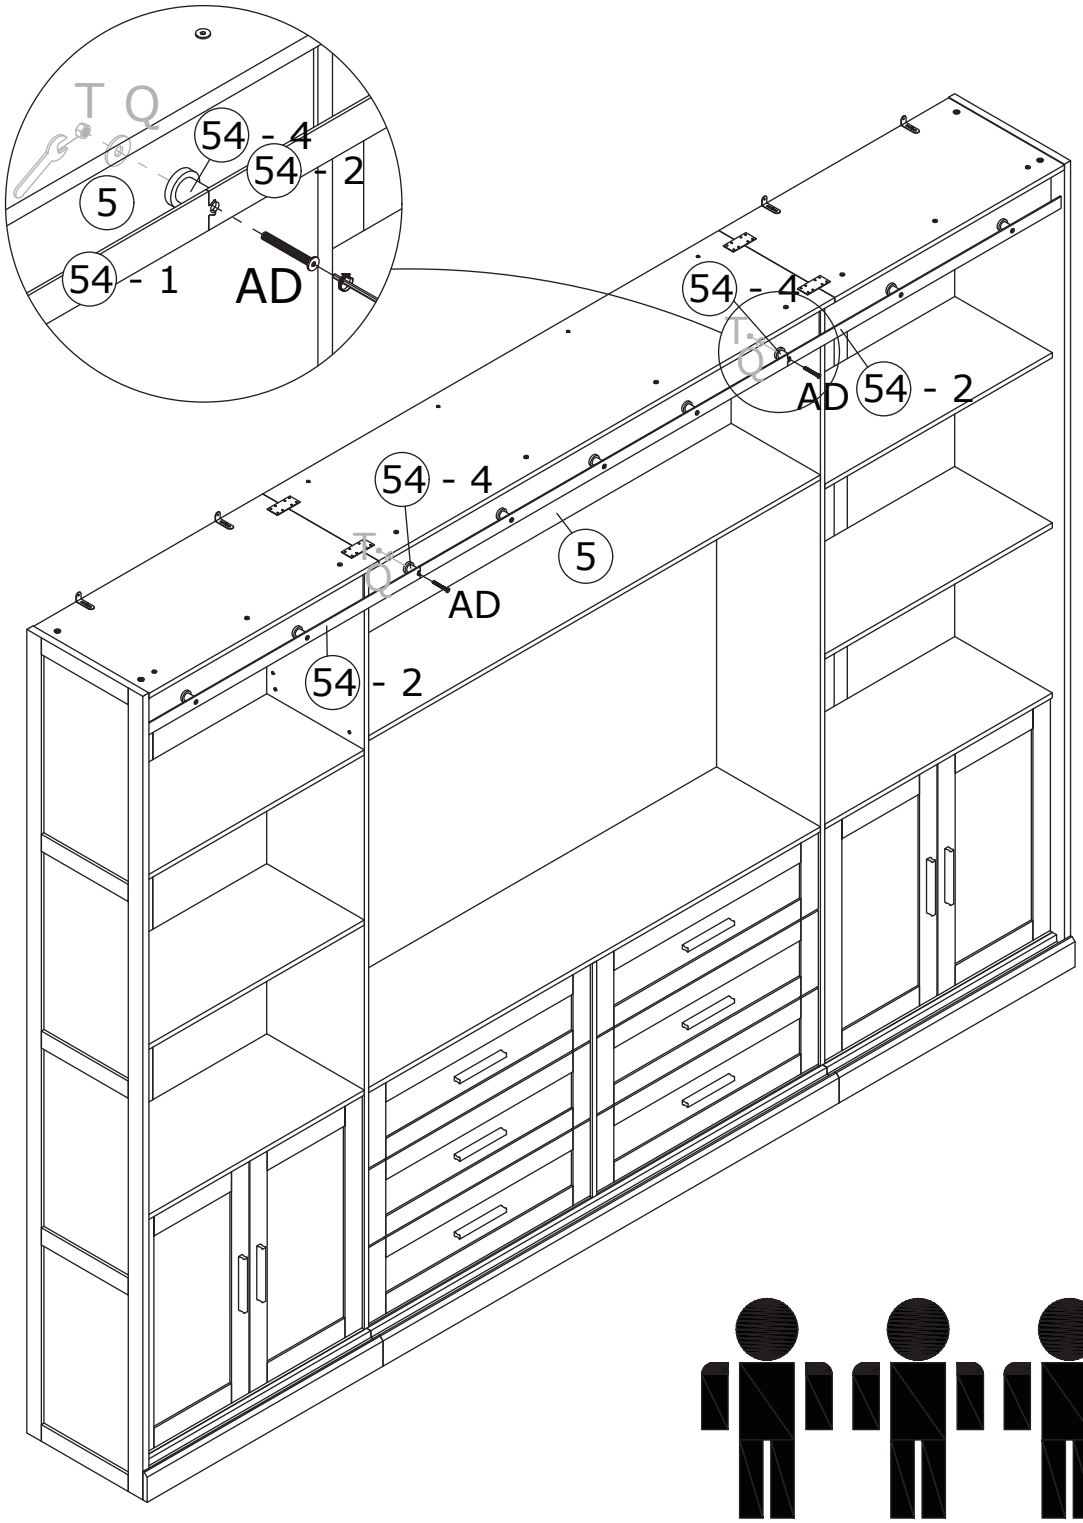


3 ADULTS

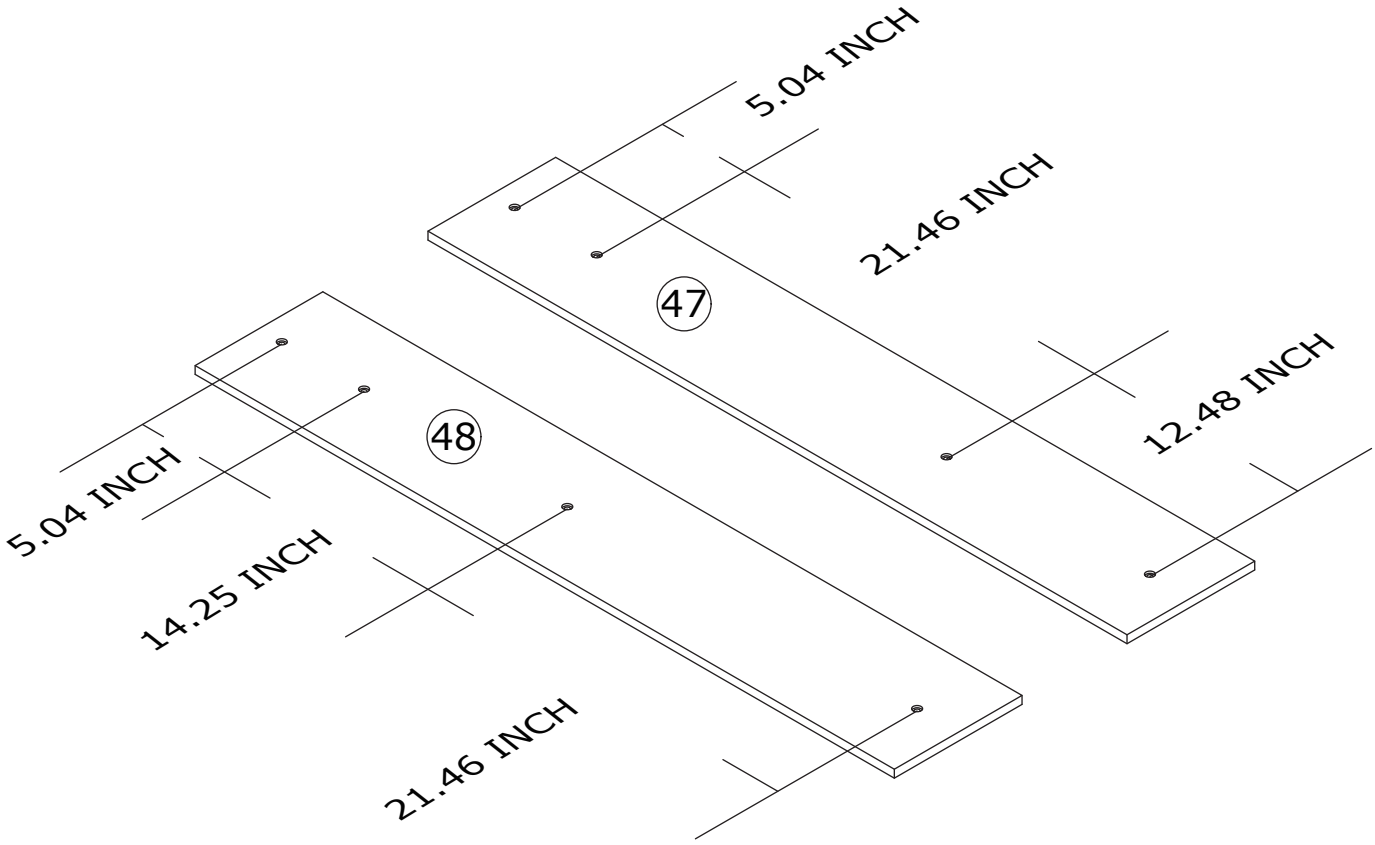
5.04 INCH
21.46 INCH
47
12.48 INCH
48
5.04 INCH
14.25 INCH
21.46 INCH


80

D x 64



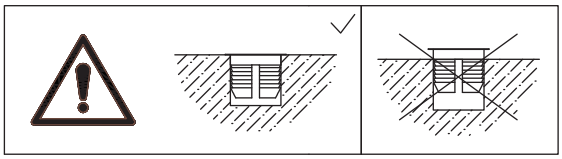


First, attach plug (D) to panels 45, 46, 49, and 50.

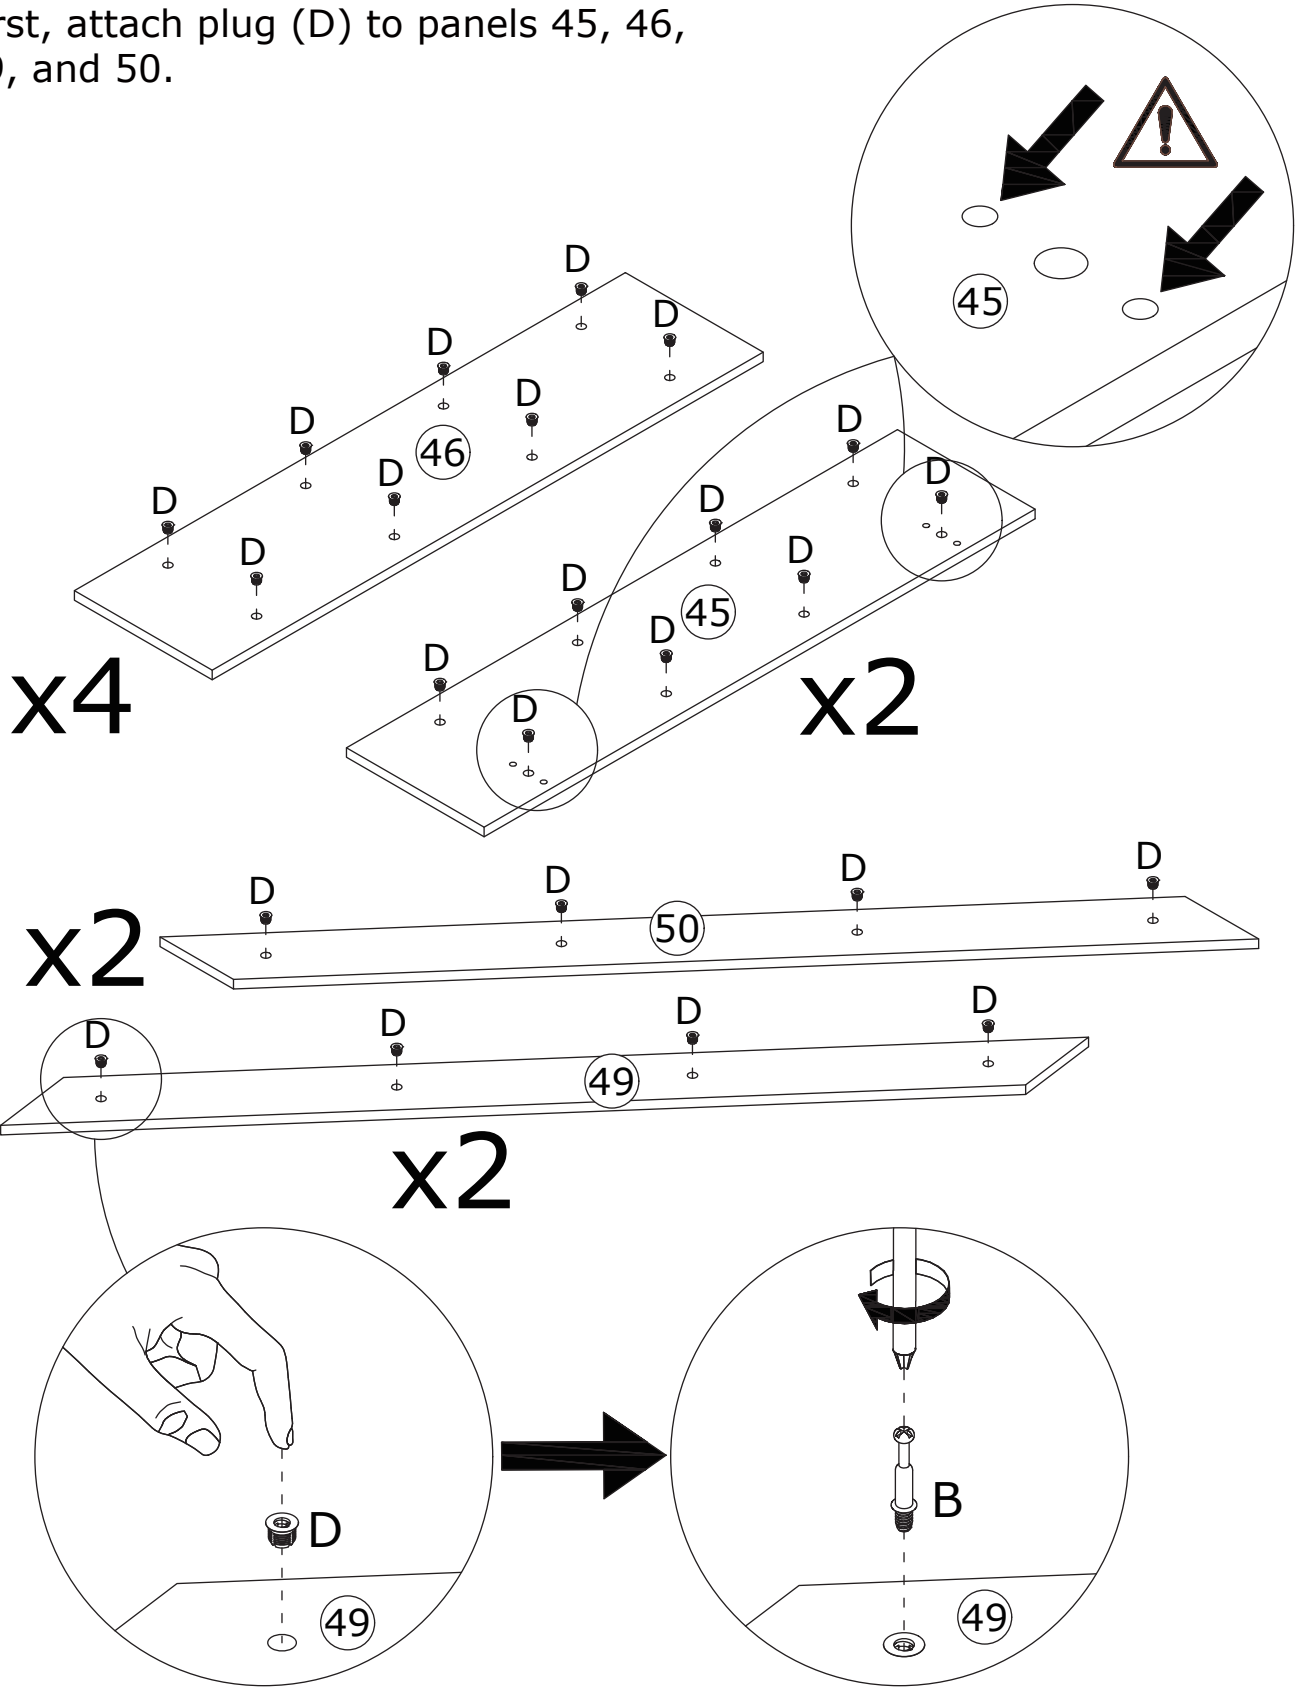


81

AA x 4	AJ x 1	
CRG0616A	M4	


Attach panels 47 and 48 to panel 46 using screw (AA).

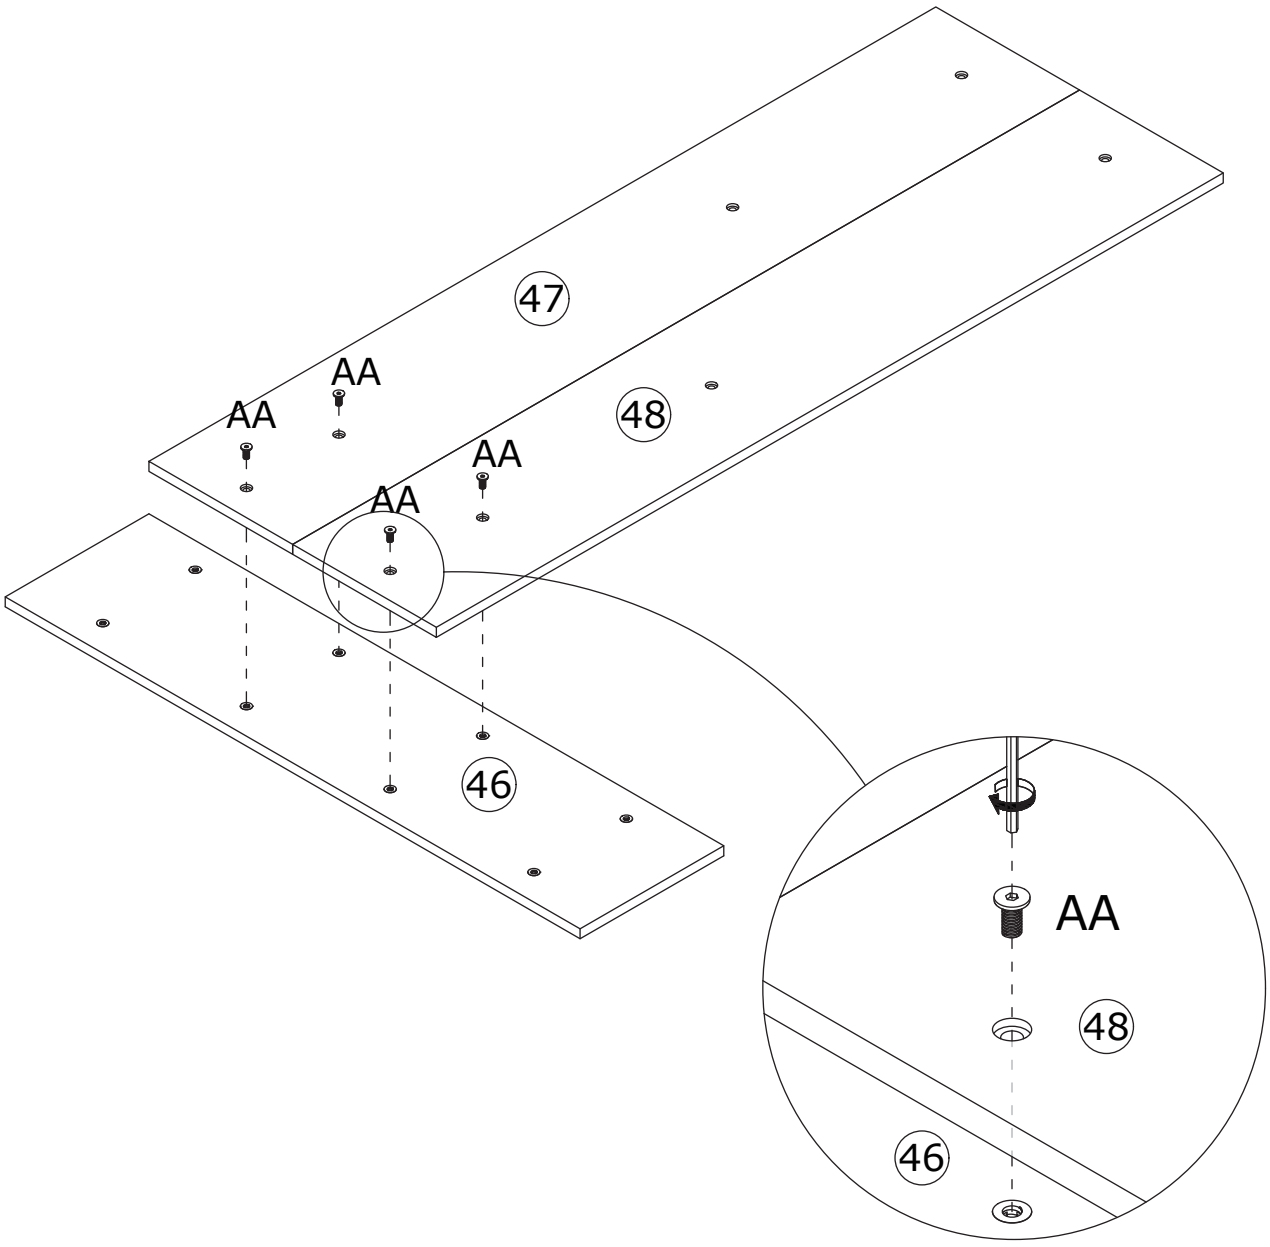


82

AA x 4	AJ x 1	
		
CRG0616A	M4	


Attach panels 47 and 48 to panel 45 using screw (AA).

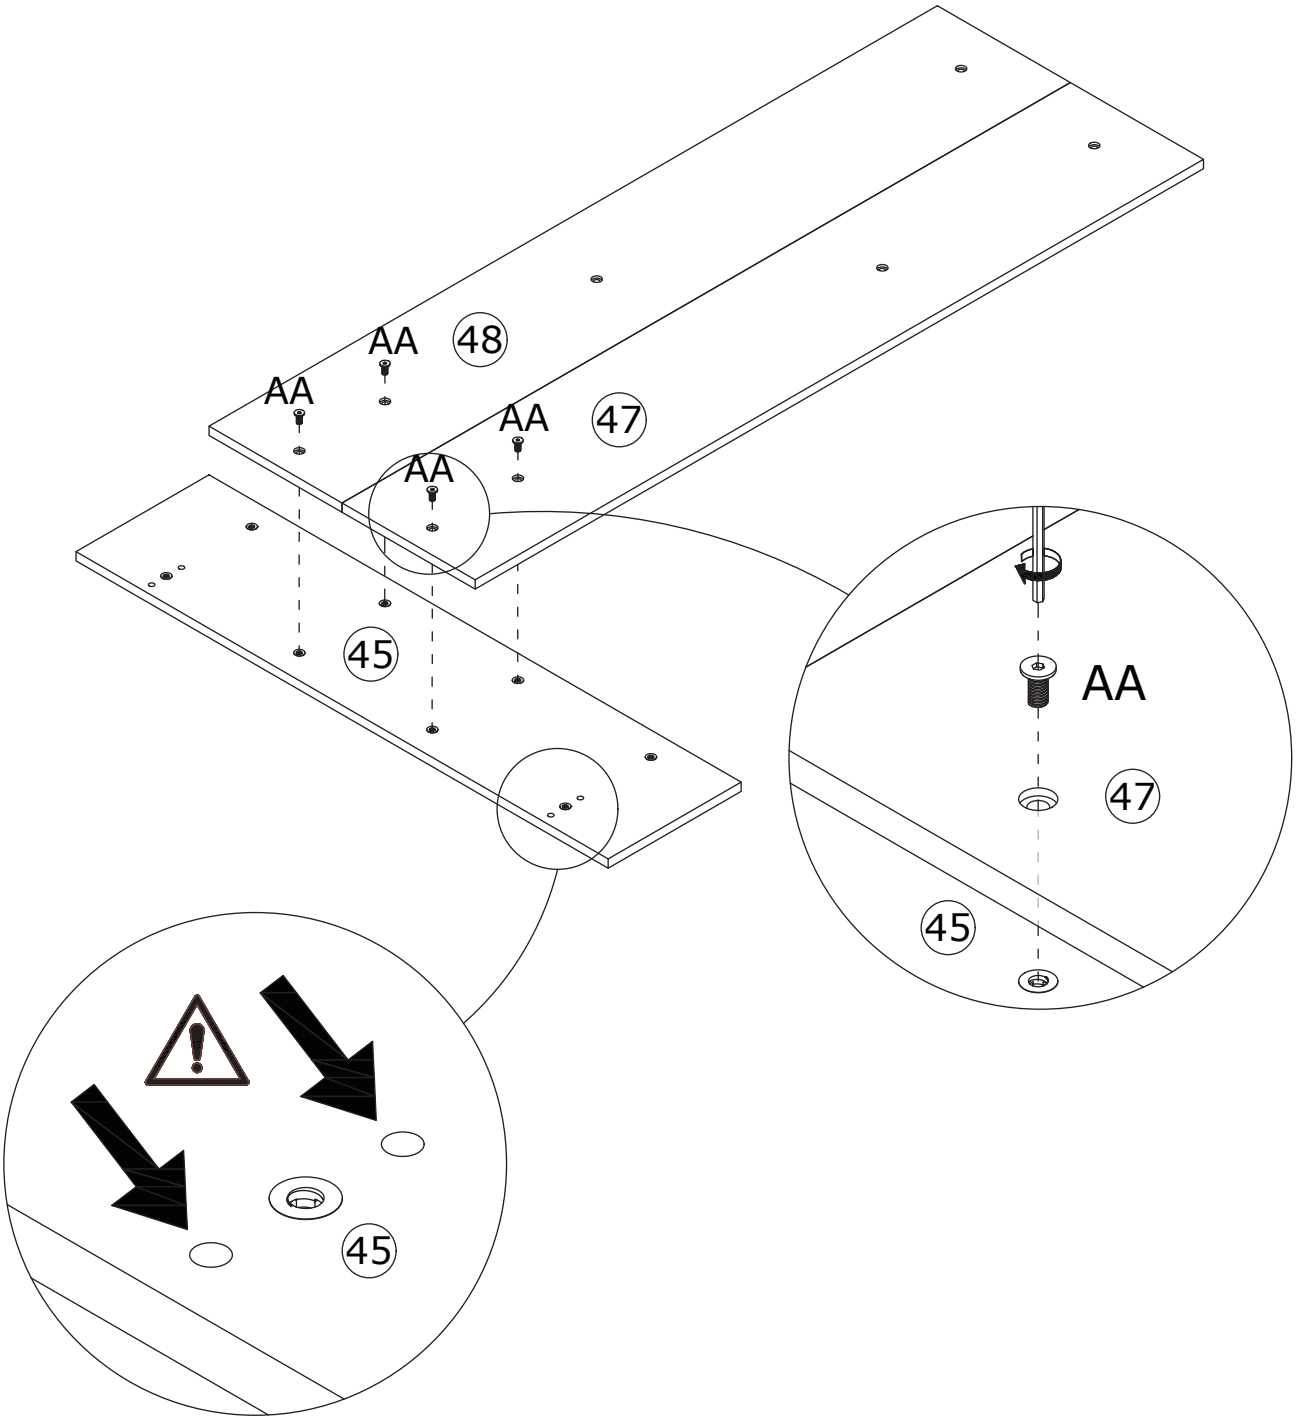


83

AA x 2	AJ x 1	
		
CRG0616A	M4	


Attach panels 47 and 48 to panel 46 using screw (AA).

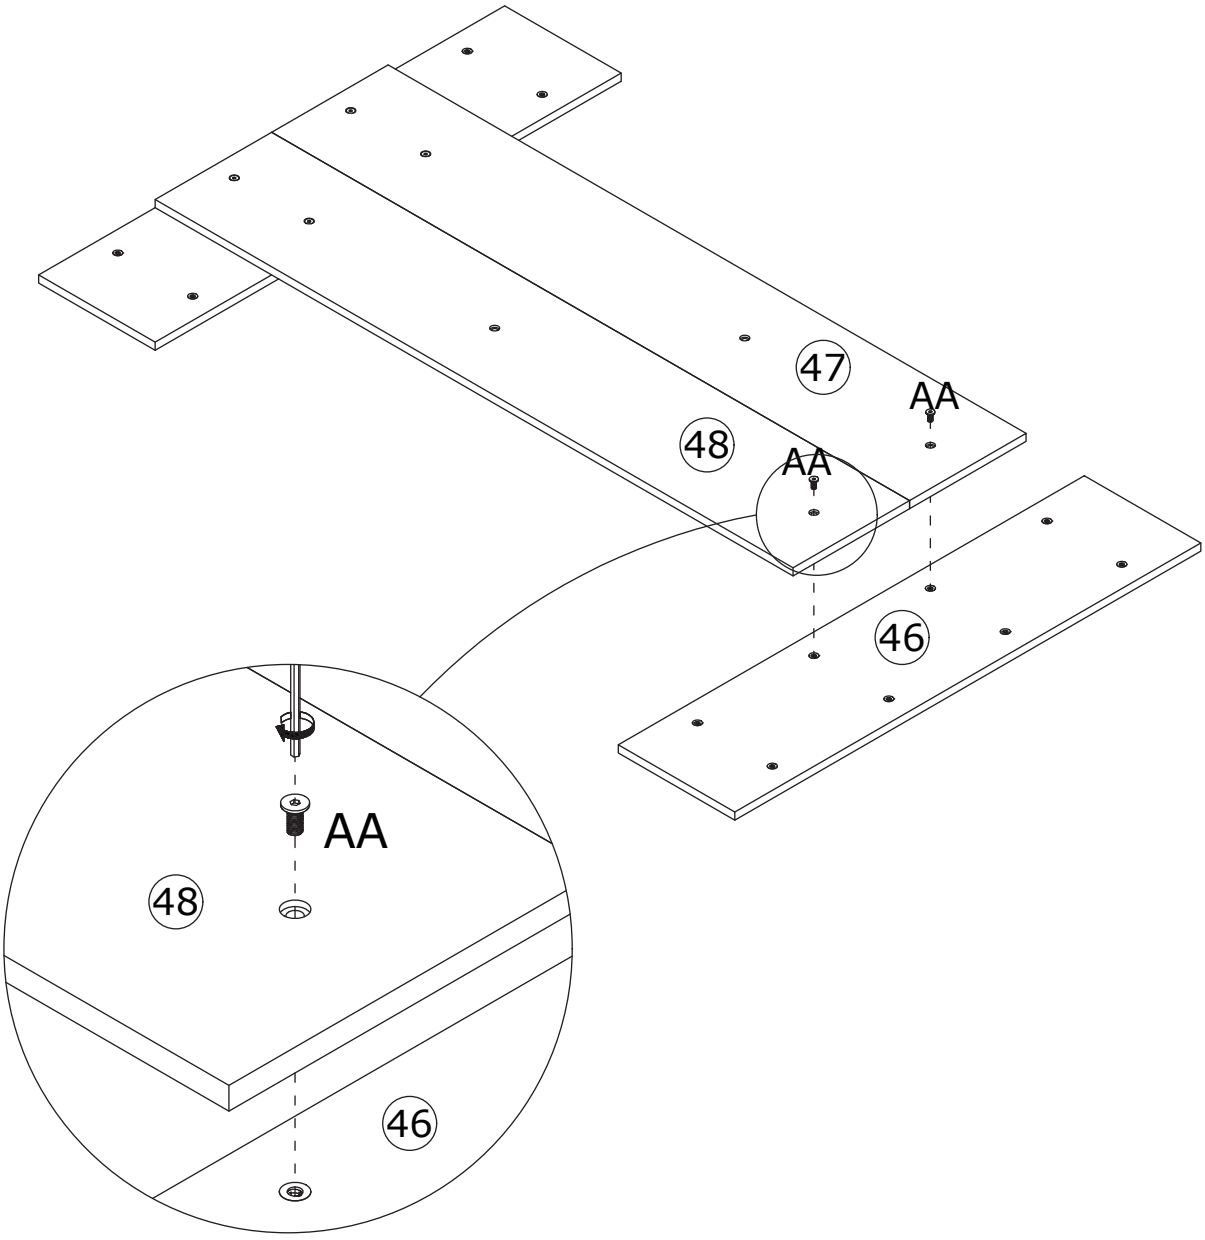


84

AA x 2	AJ x 1	
		
CRG0616A	M4	


Attach panels 47 and 48 to panel 46 using screw (AA).

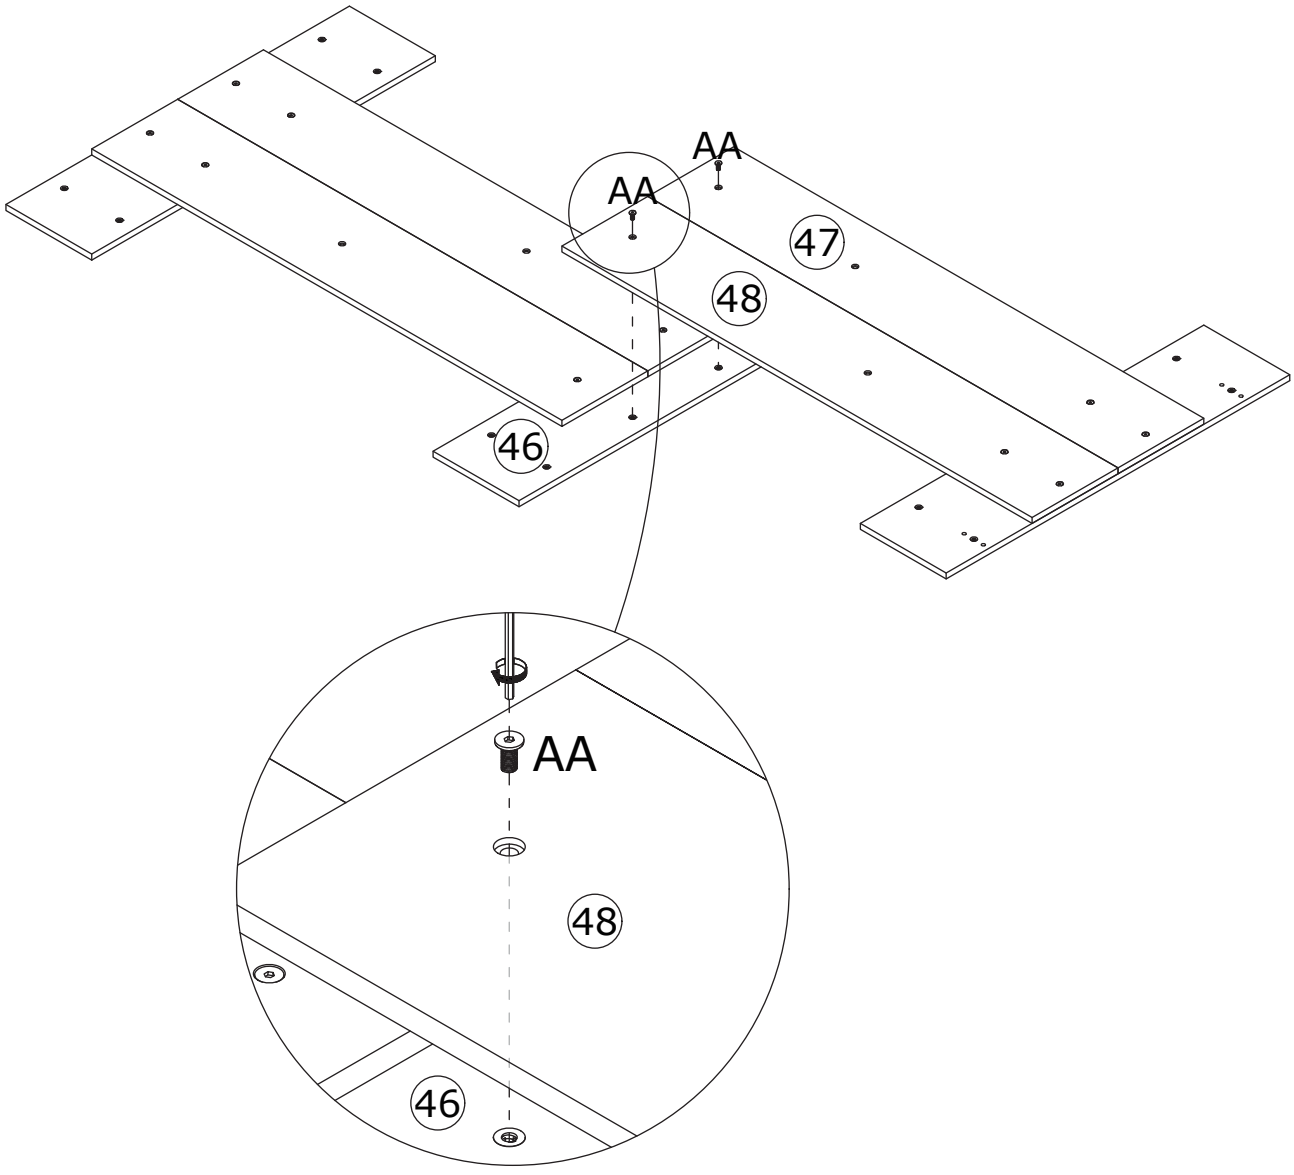


85

AA x 4	AJ x 1	
		
CRG0616A	M4	


Attach panels 47 and 48 to panels 49 and 50 using screw (AA).

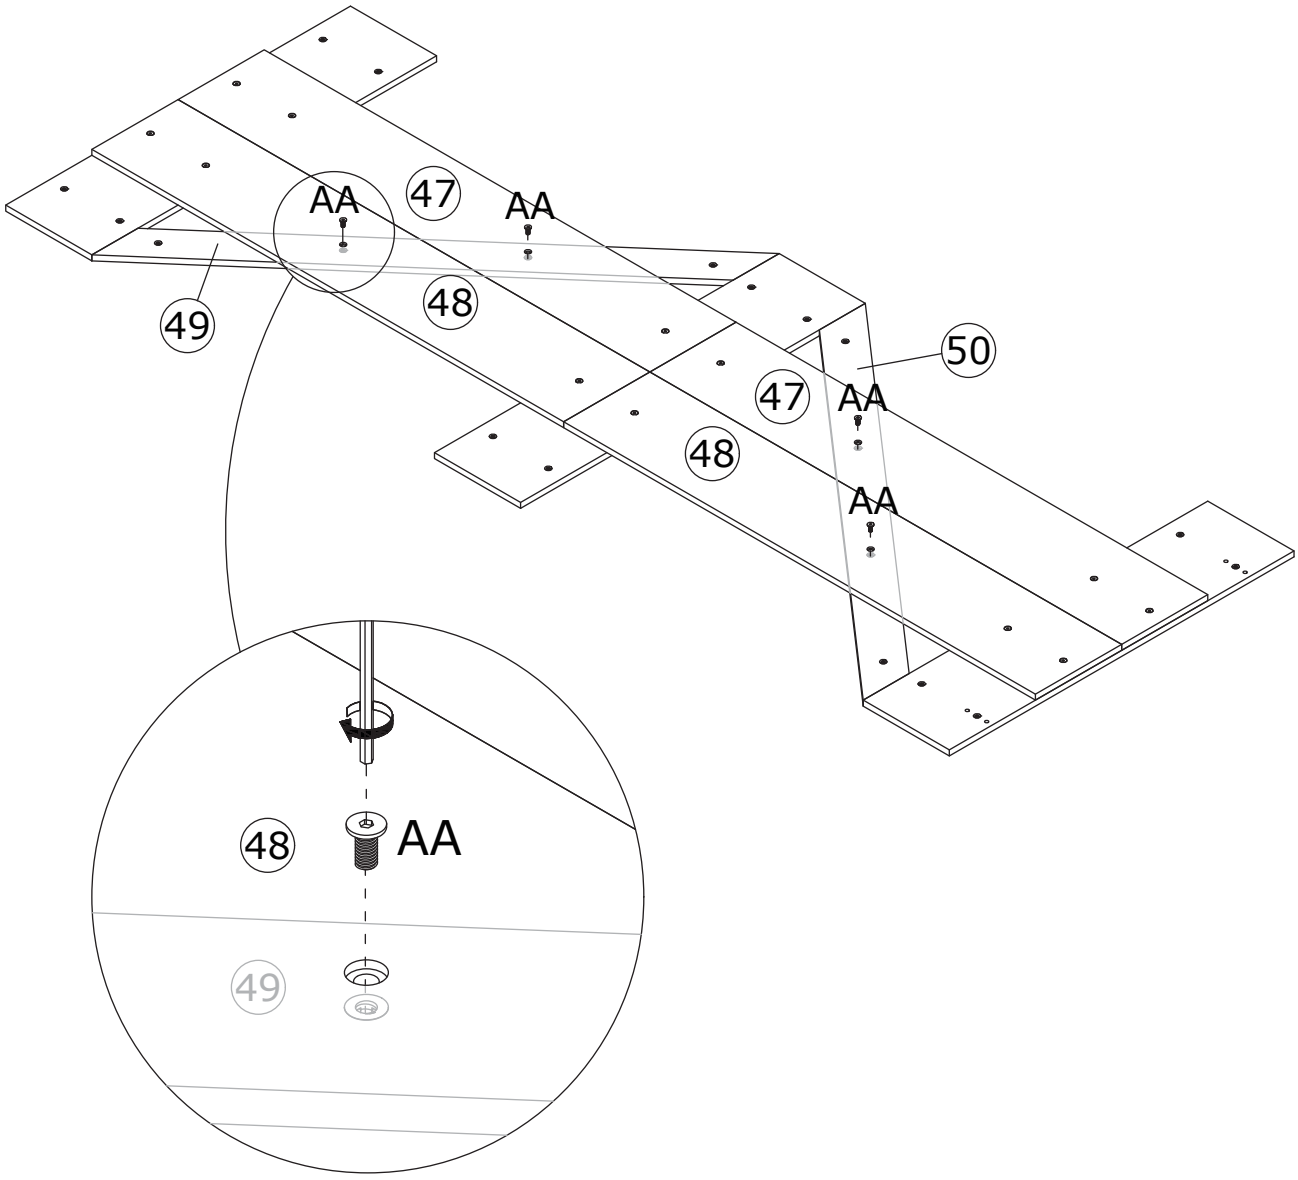


86

AA x 8	AJ x 1	
 CRG0616A	 M4	


Attach panel 52 to panels 45, 46, 49, and 50 using screw (AA).

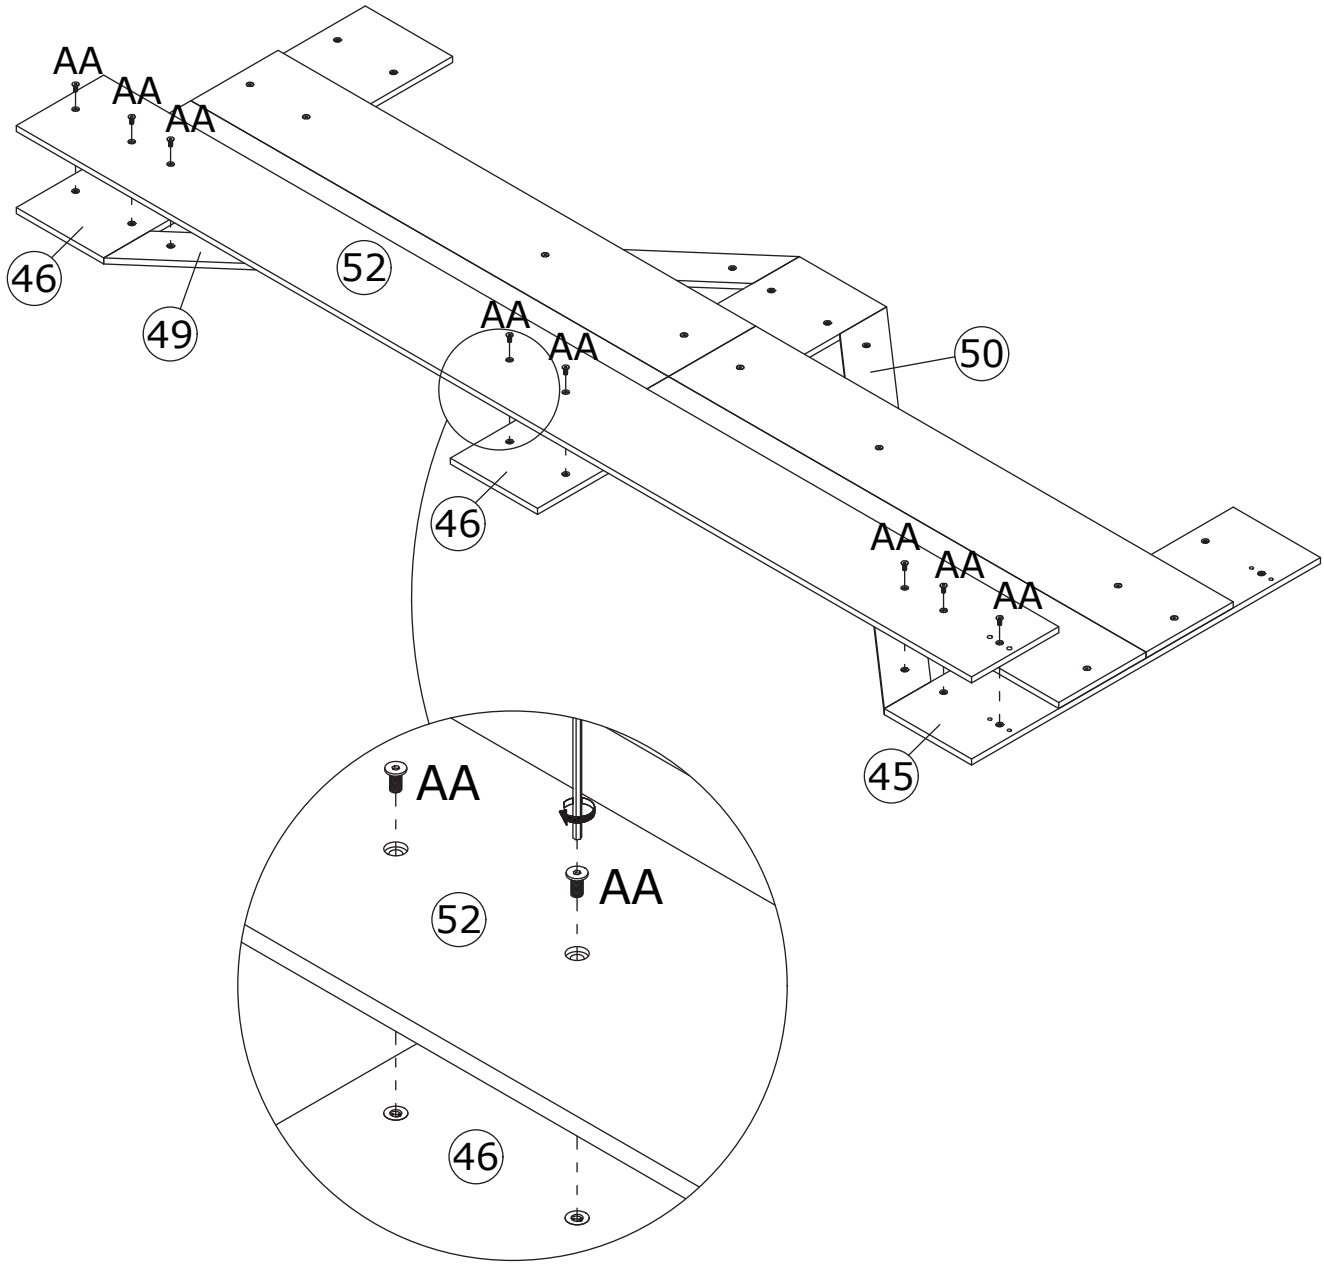



87

AA x 8	AJ x 1	
 CRG0616A	 M4	

Attach panel 51 to panels 45, 46, 49, and 50 using screw (AA).

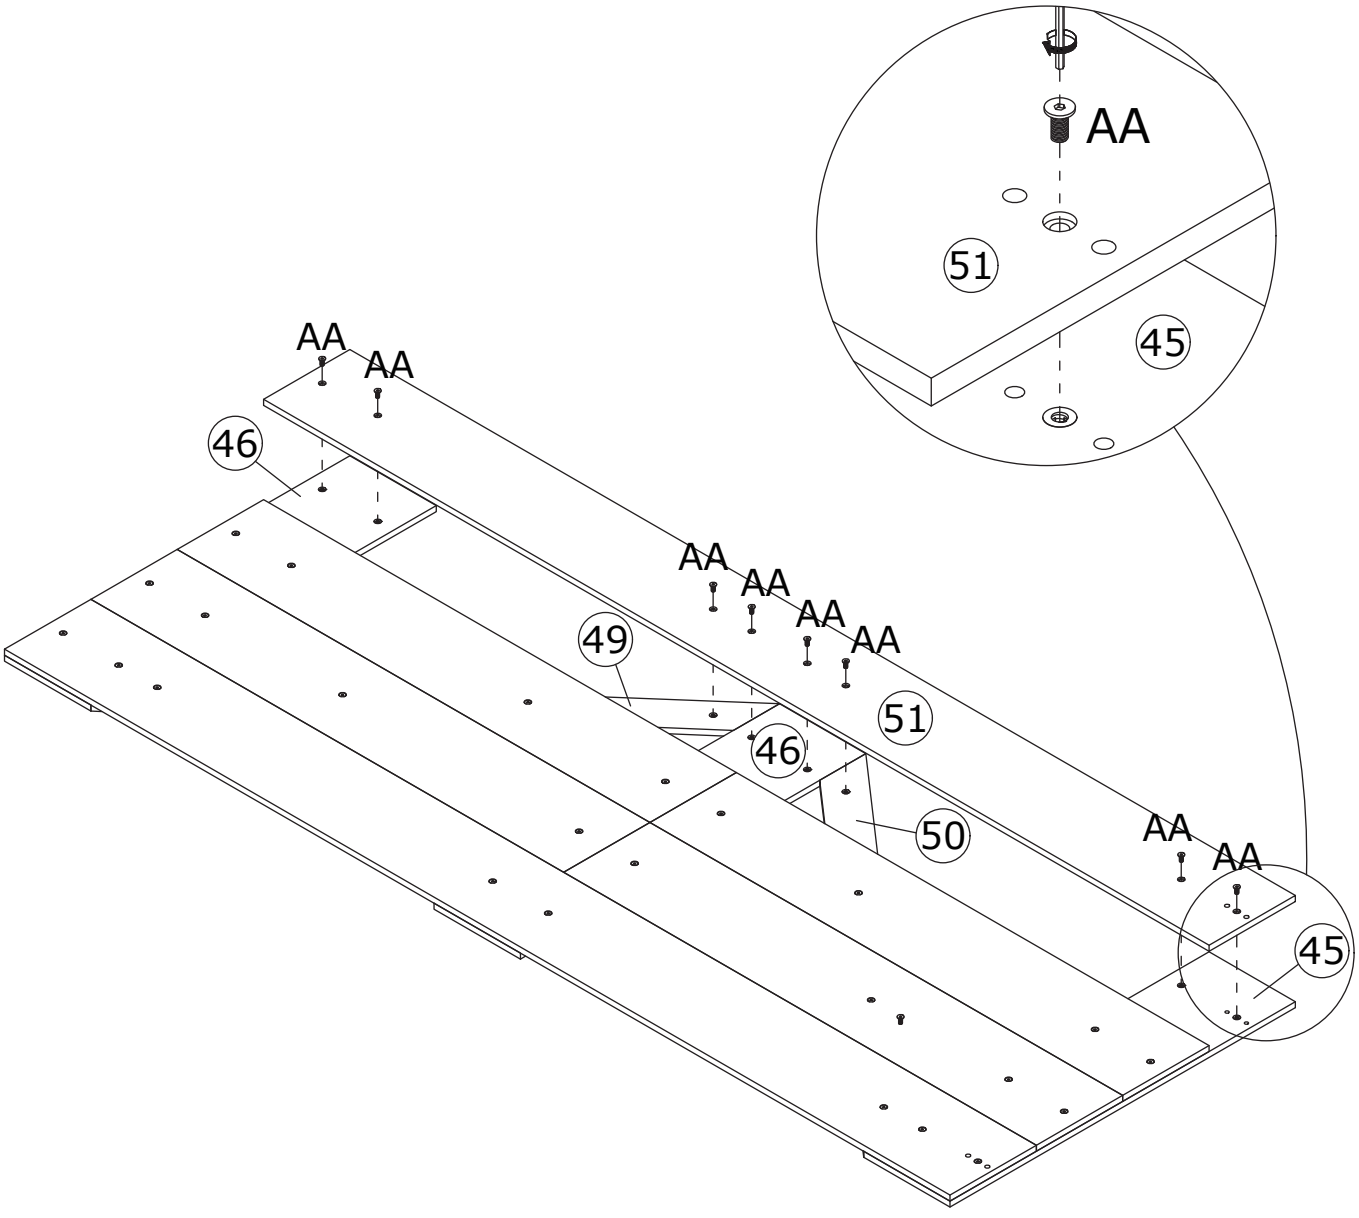


88



G x 4	Y x 2	
 CRD3514A		

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A


Secure part (Y) to panels 51 and 52 using screw (G).

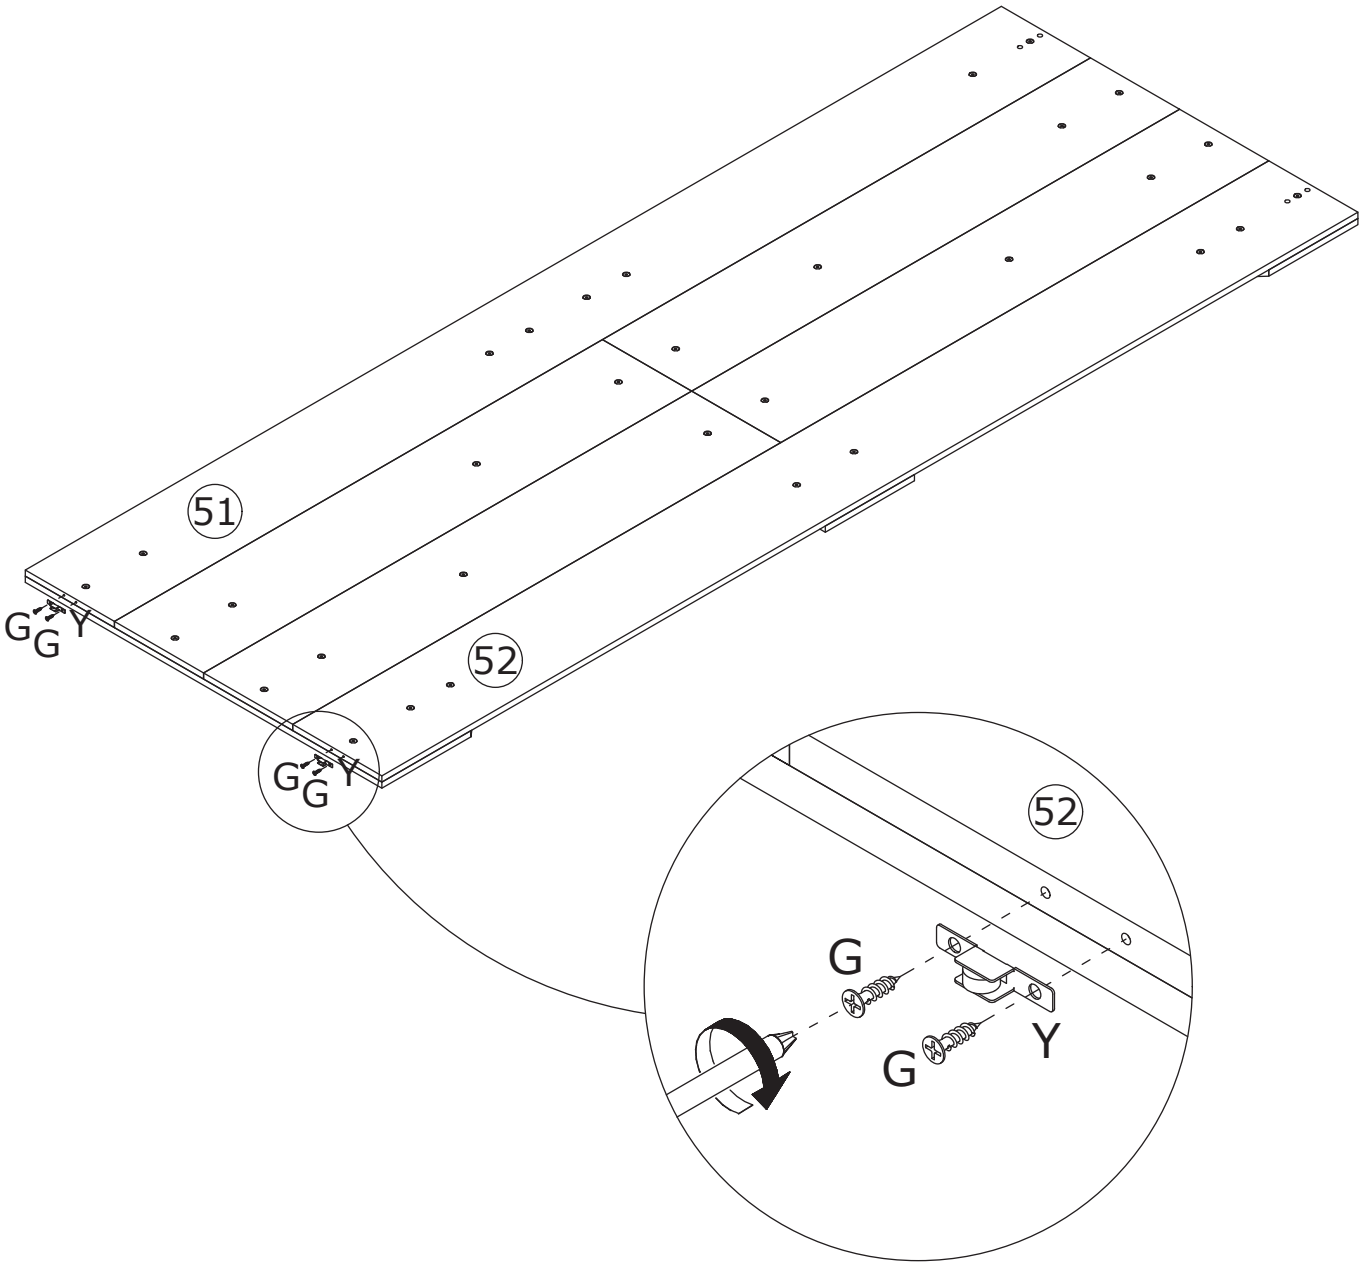

89

AB x 4	AJ x 1	54 x 1	
 CRG0625A	 M4	 x2	


Flip the door panel over and attach part (54-3) to panel 45 using screw (AB).

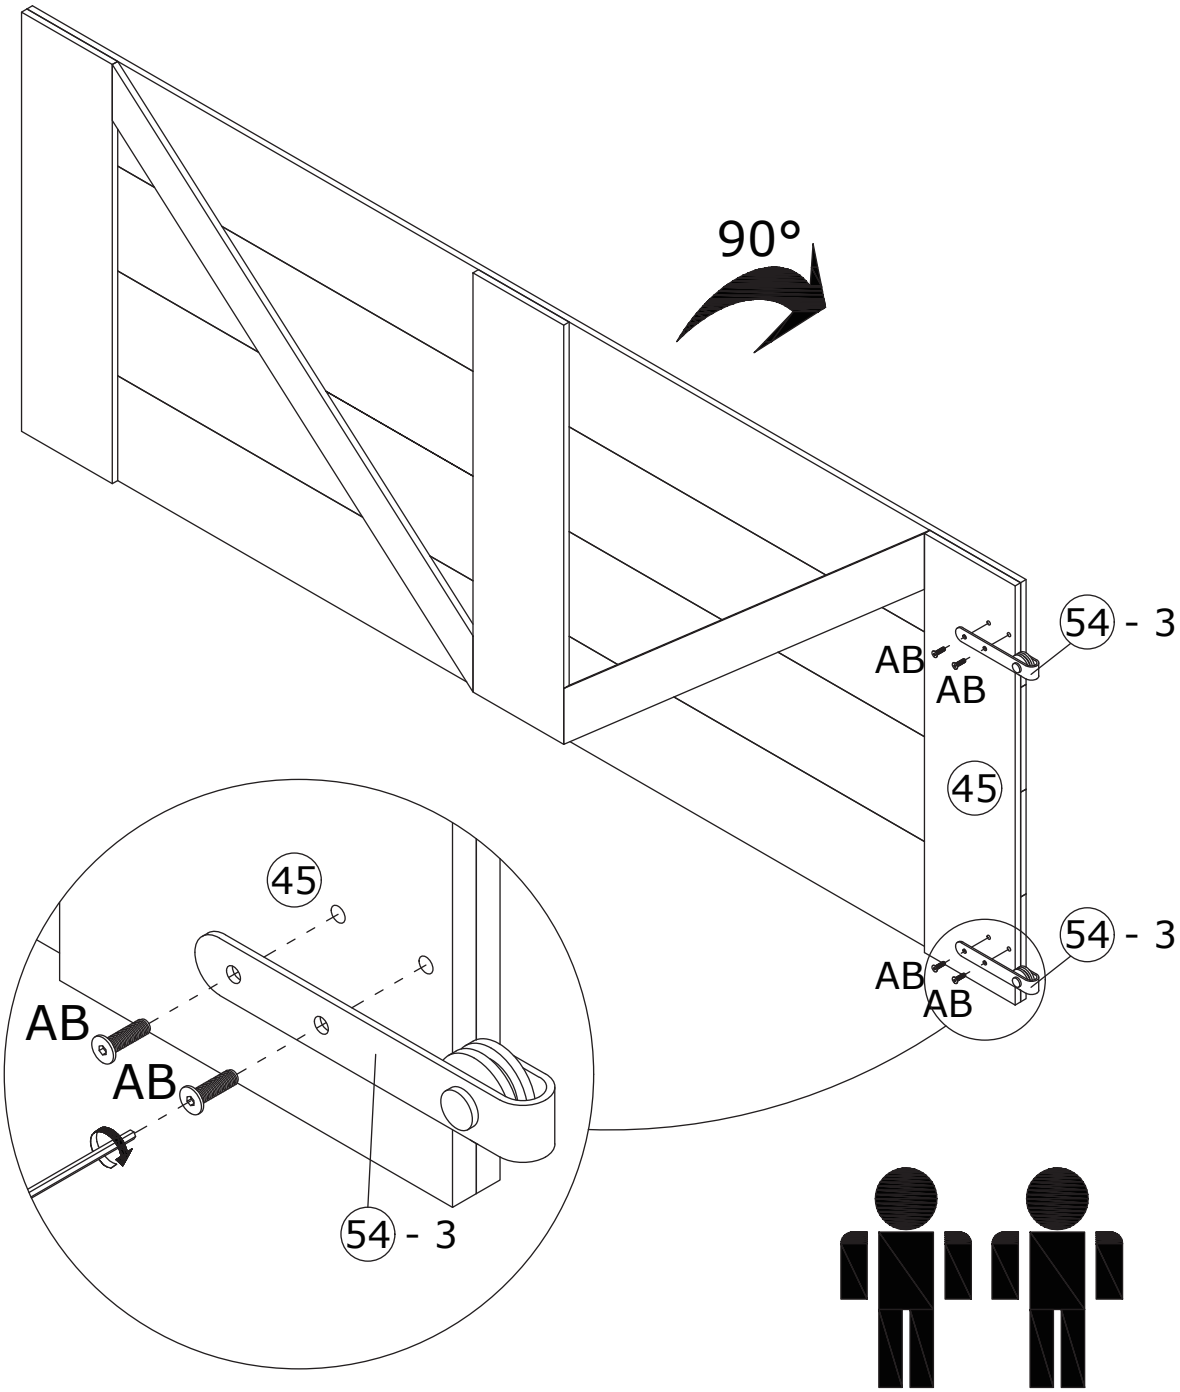

2 ADULTS


90

Place part (54-3) onto part (54-1) or (54-2).

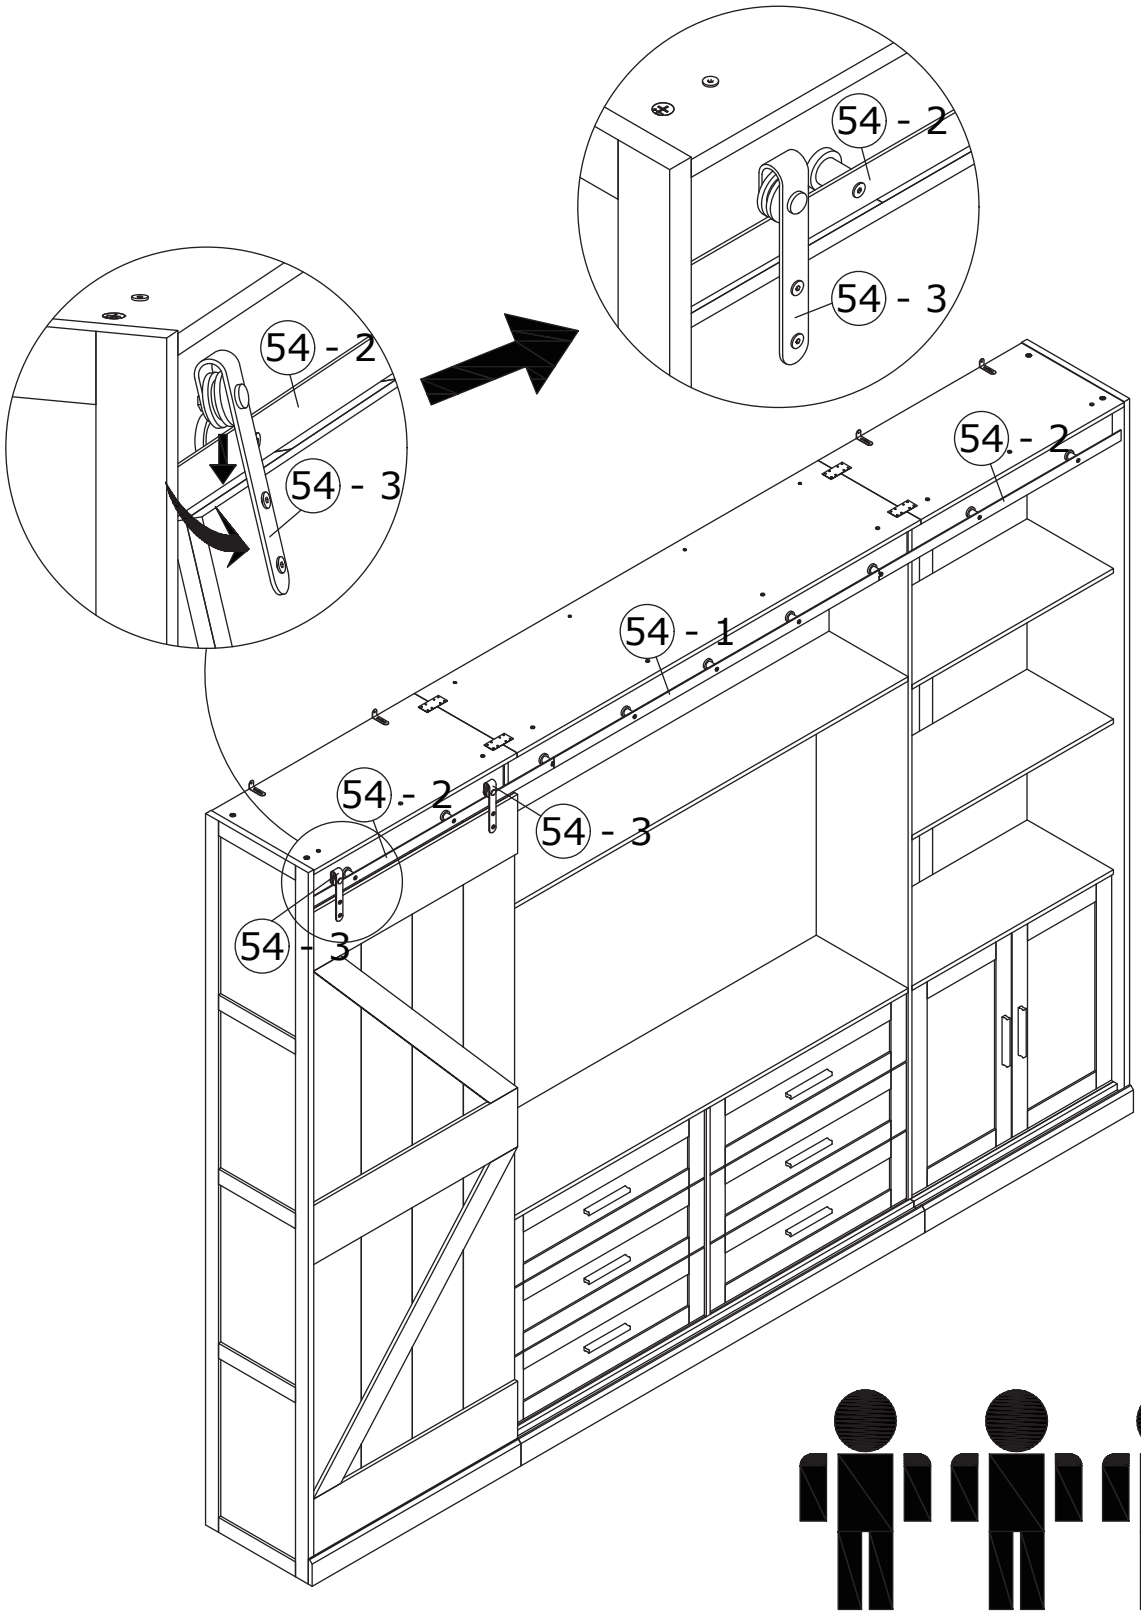


3 ADULTS


91

AA x 4	AJ x 1	
 CRG0616A	 M4	


Attach panels 47 and 48 to panel 46 using screw (AA).

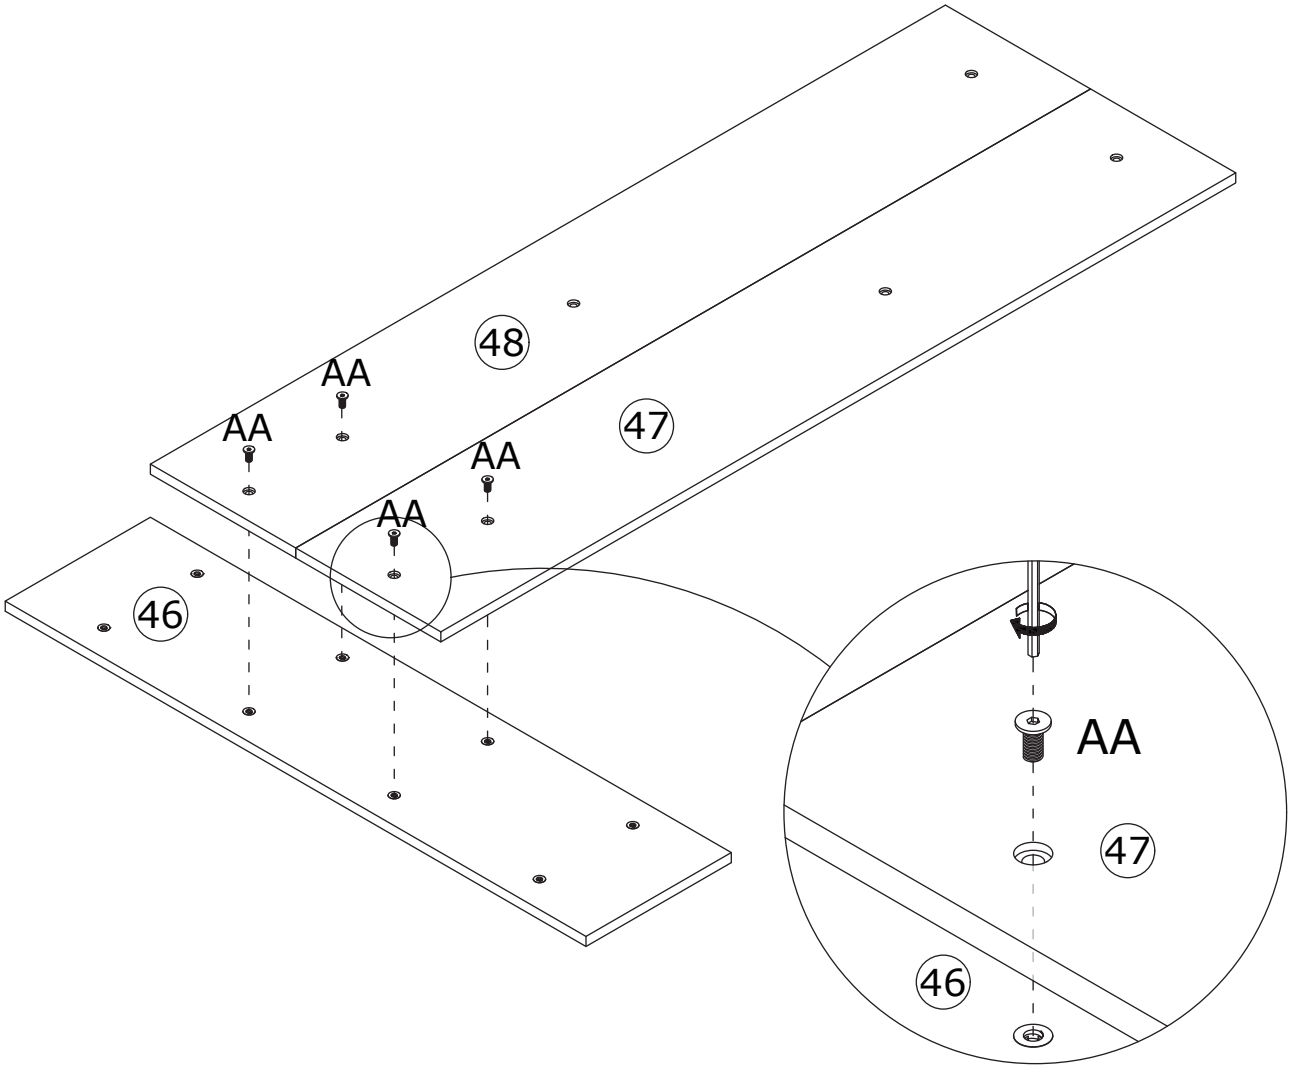

92

AA x 4	AJ x 1	
 CRG0616A	 M4	


Attach panels 47 and 48 to panel 45 using screw (AA).

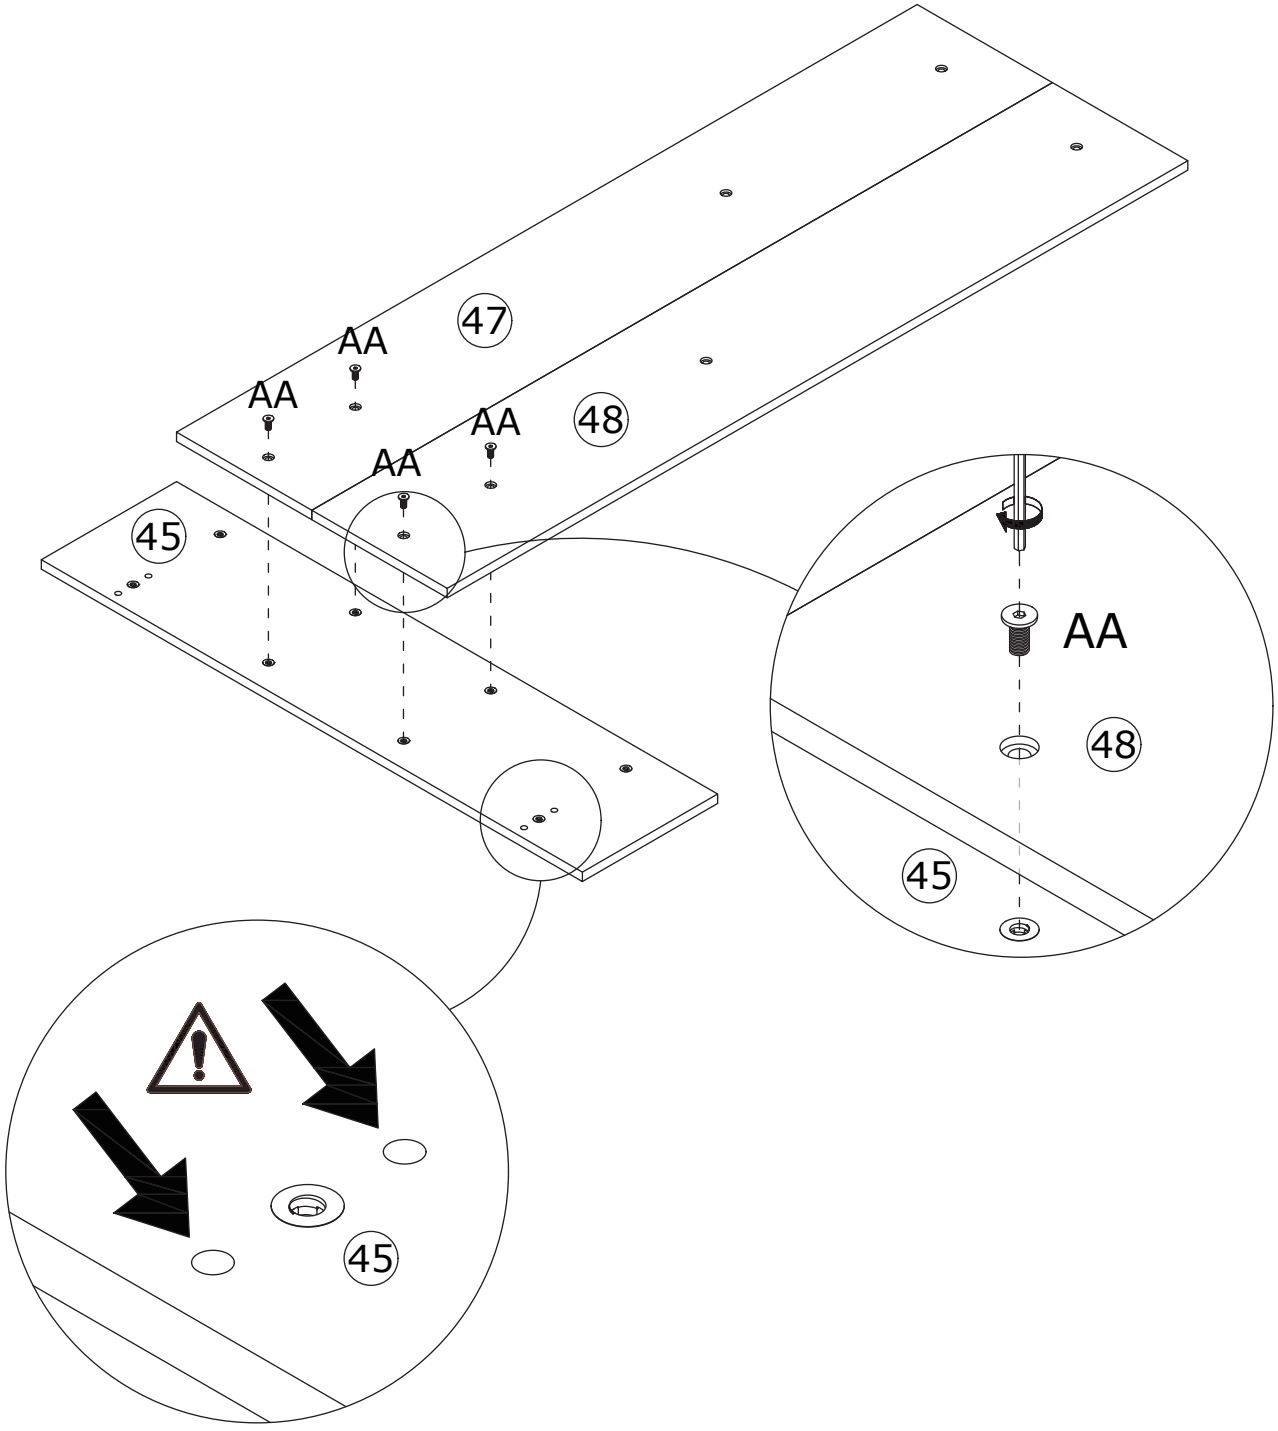


93

AA x 2	AJ x 1	
CRG0616A	M4	


Attach panels 47 and 48 to panel 46 using screw (AA).

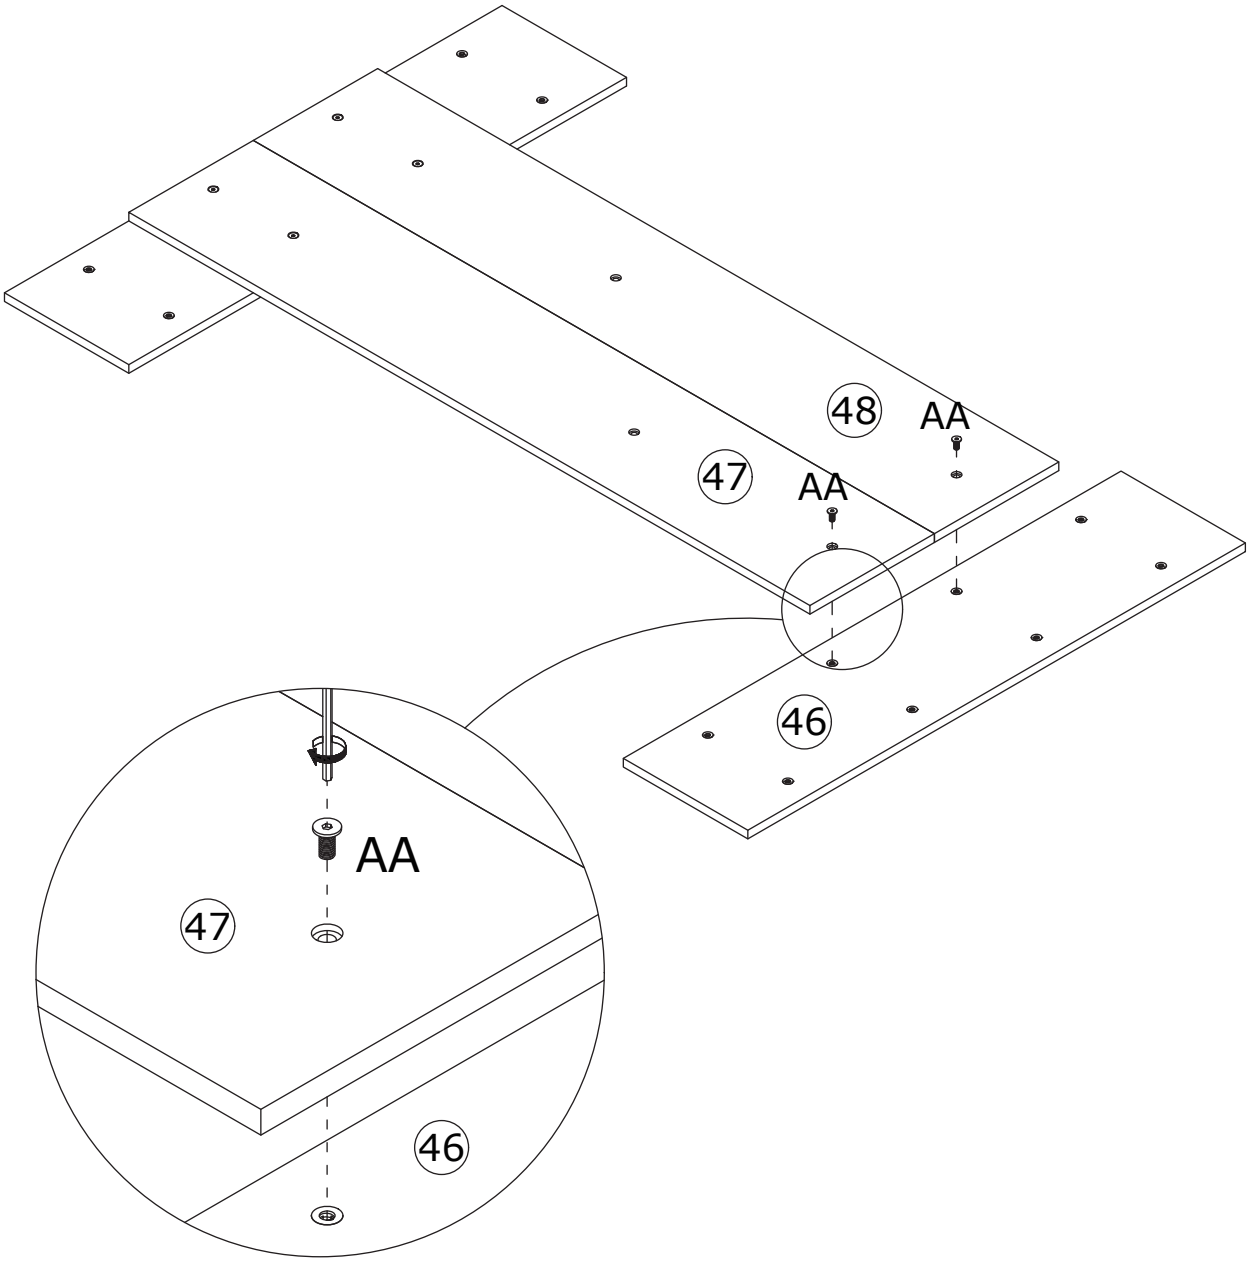


94

AA x 2	AJ x 1	
		
CRG0616A	M4	


Attach panels 47 and 48 to panel 46 using screw (AA).

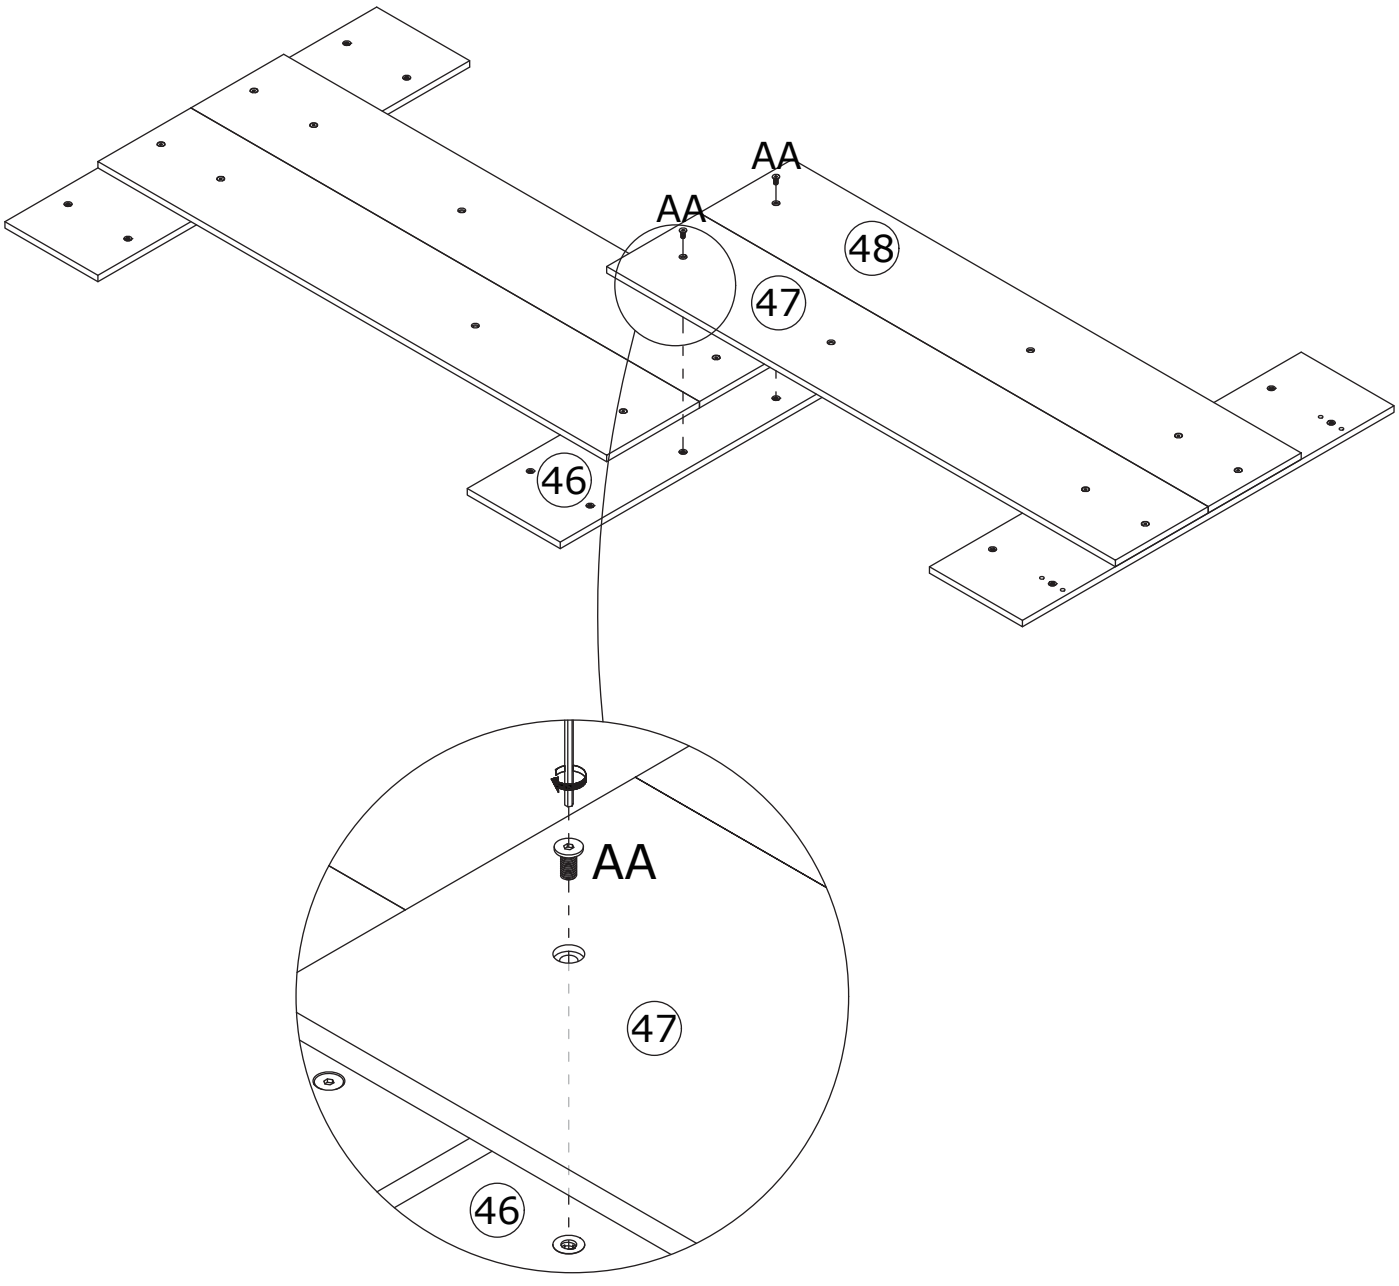


95

AA x 4	AJ x 1	
 CRG0616A	 M4	


Attach panels 47 and 48 to panels 49 and 50 using screw (AA).

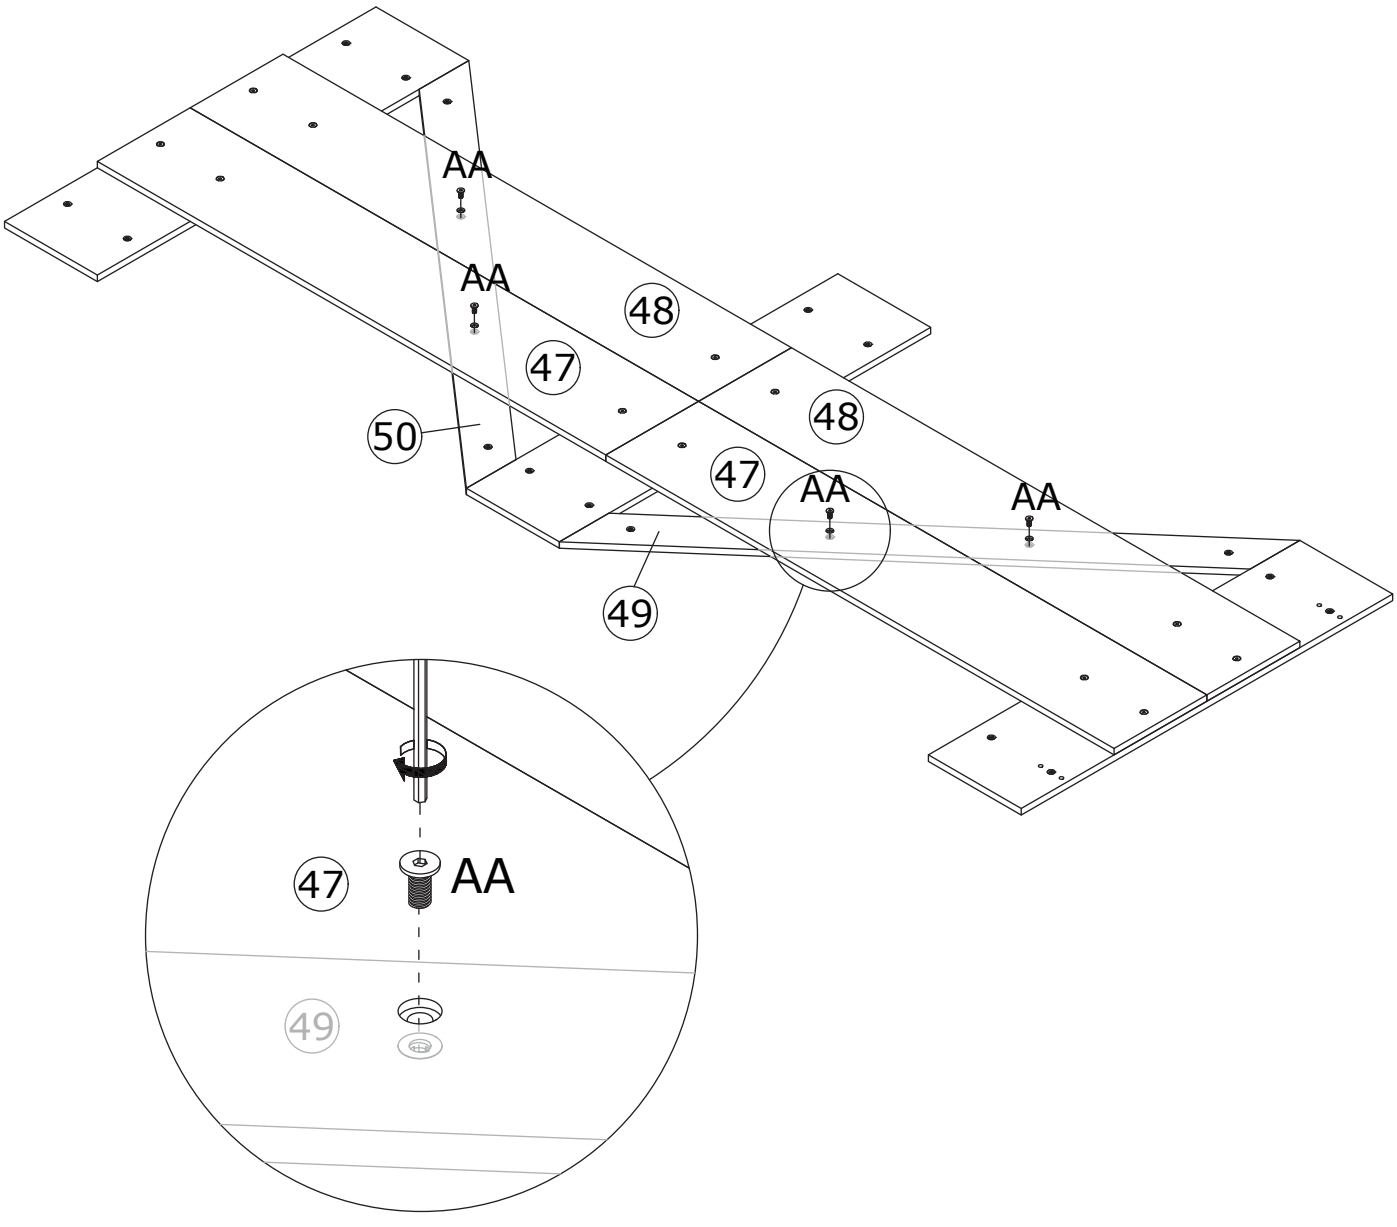


96

AA x 8	AJ x 1	
		
CRG0616A	M4	


Attach panel 51 to panels 45, 46, 49, and 50 using screw (AA).

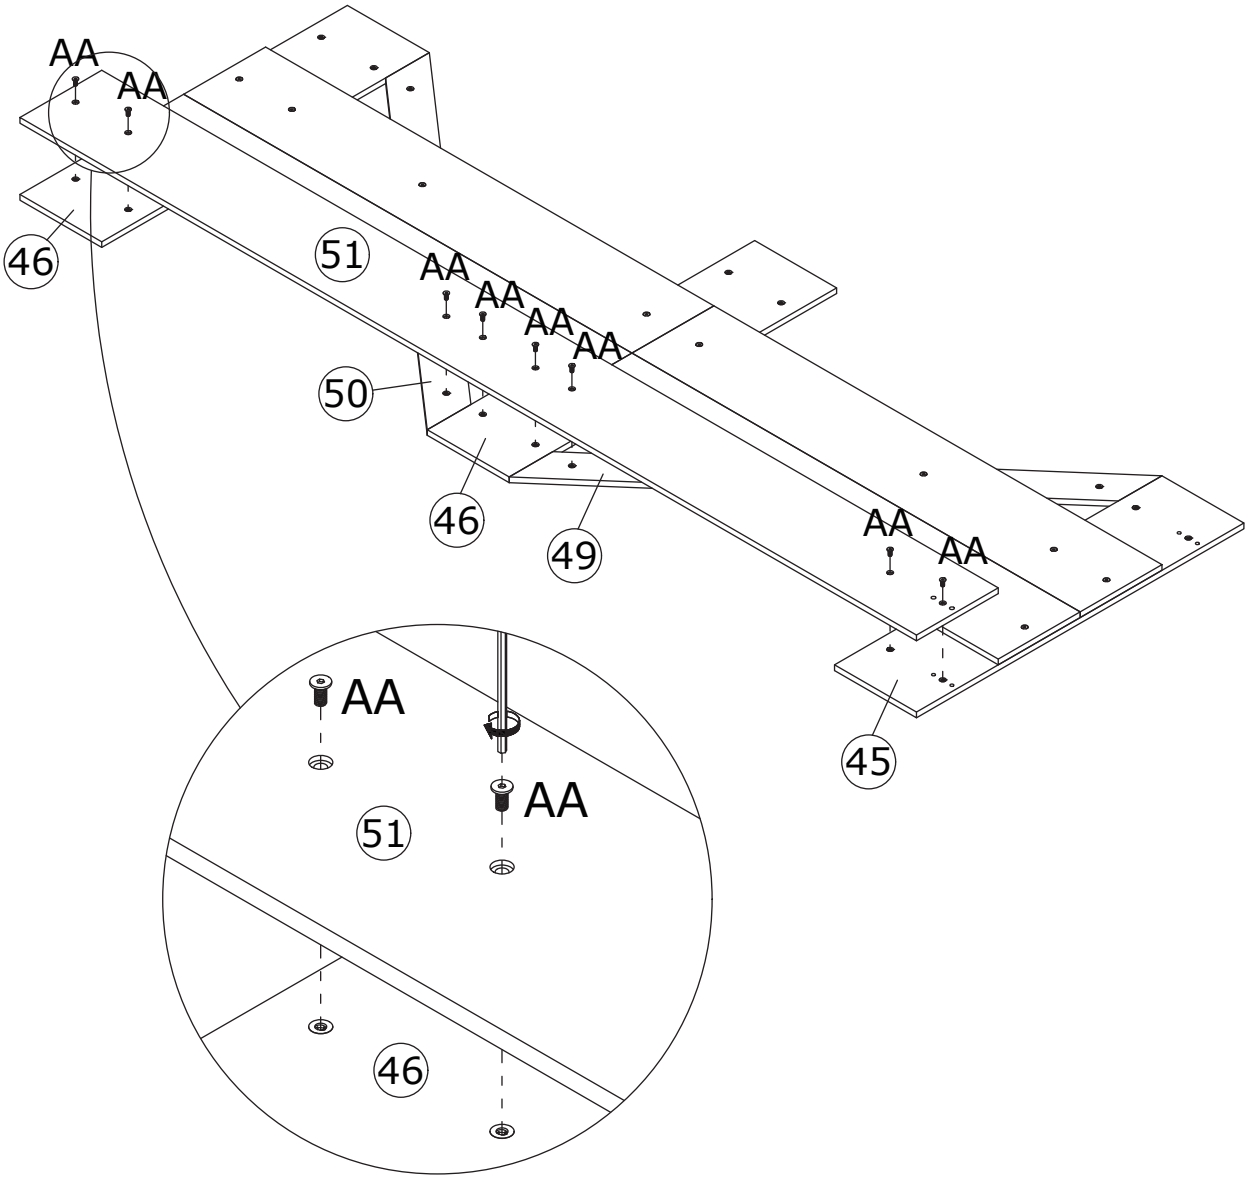



97

AA x 8	AJ x 1	
		
CRG0616A	M4	

Attach panel 52 to panels 45, 46, 49, and 50 using screw (AA).

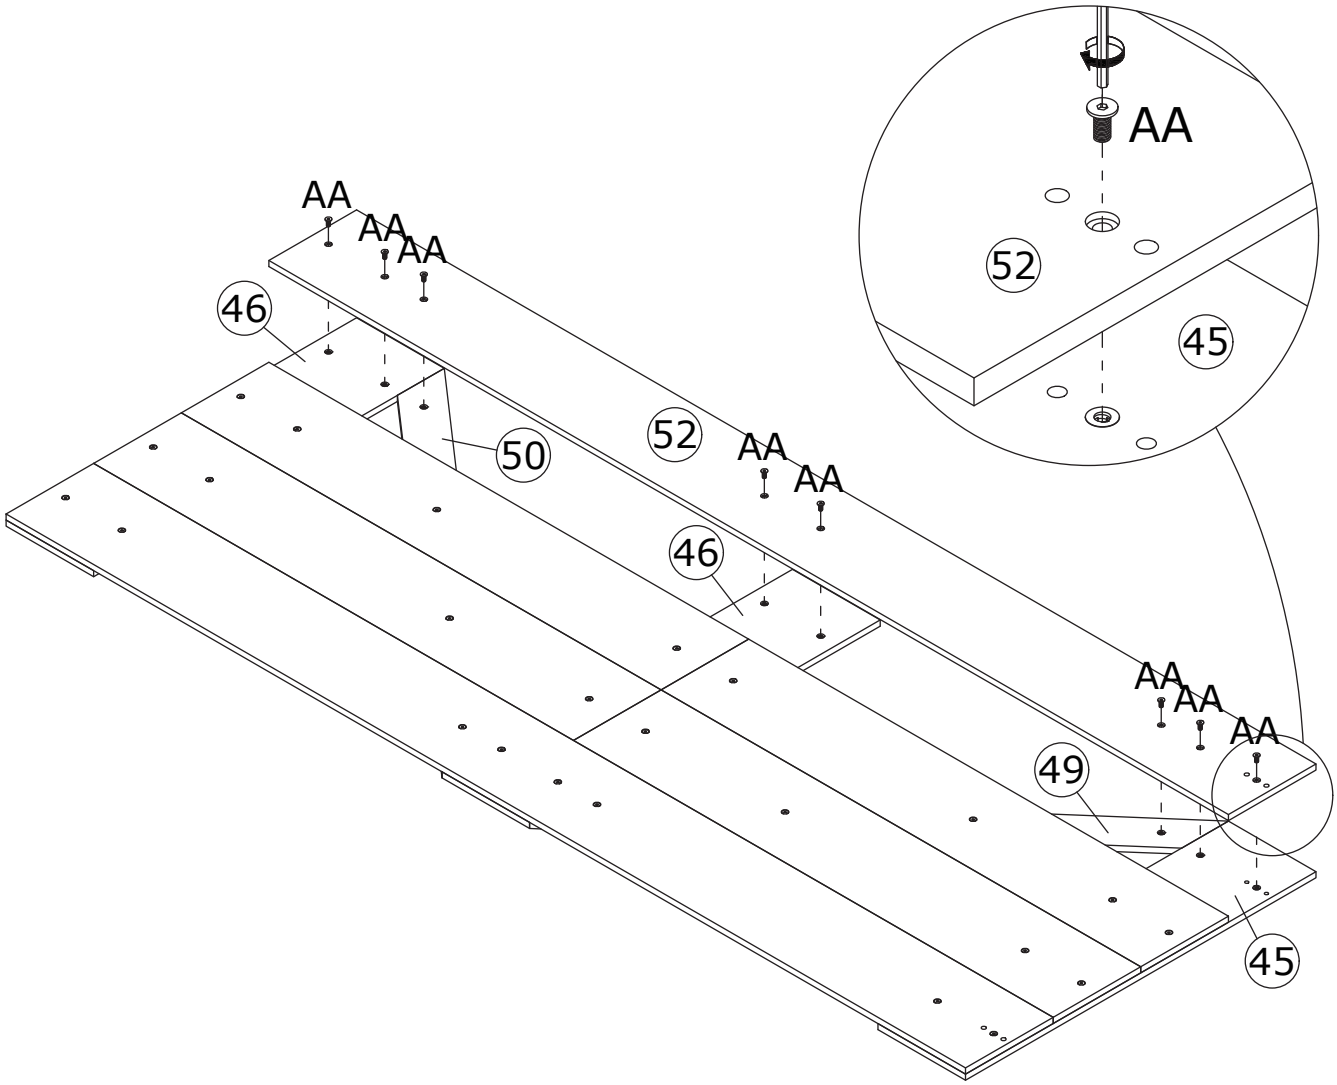


98



G x 4	Y x 2	
 CRD3514A		

	F	G	K
	 CRD3512A	 CRD3514A	 CRD0314A


Secure part (Y) to panels 51 and 52 using screw (G).

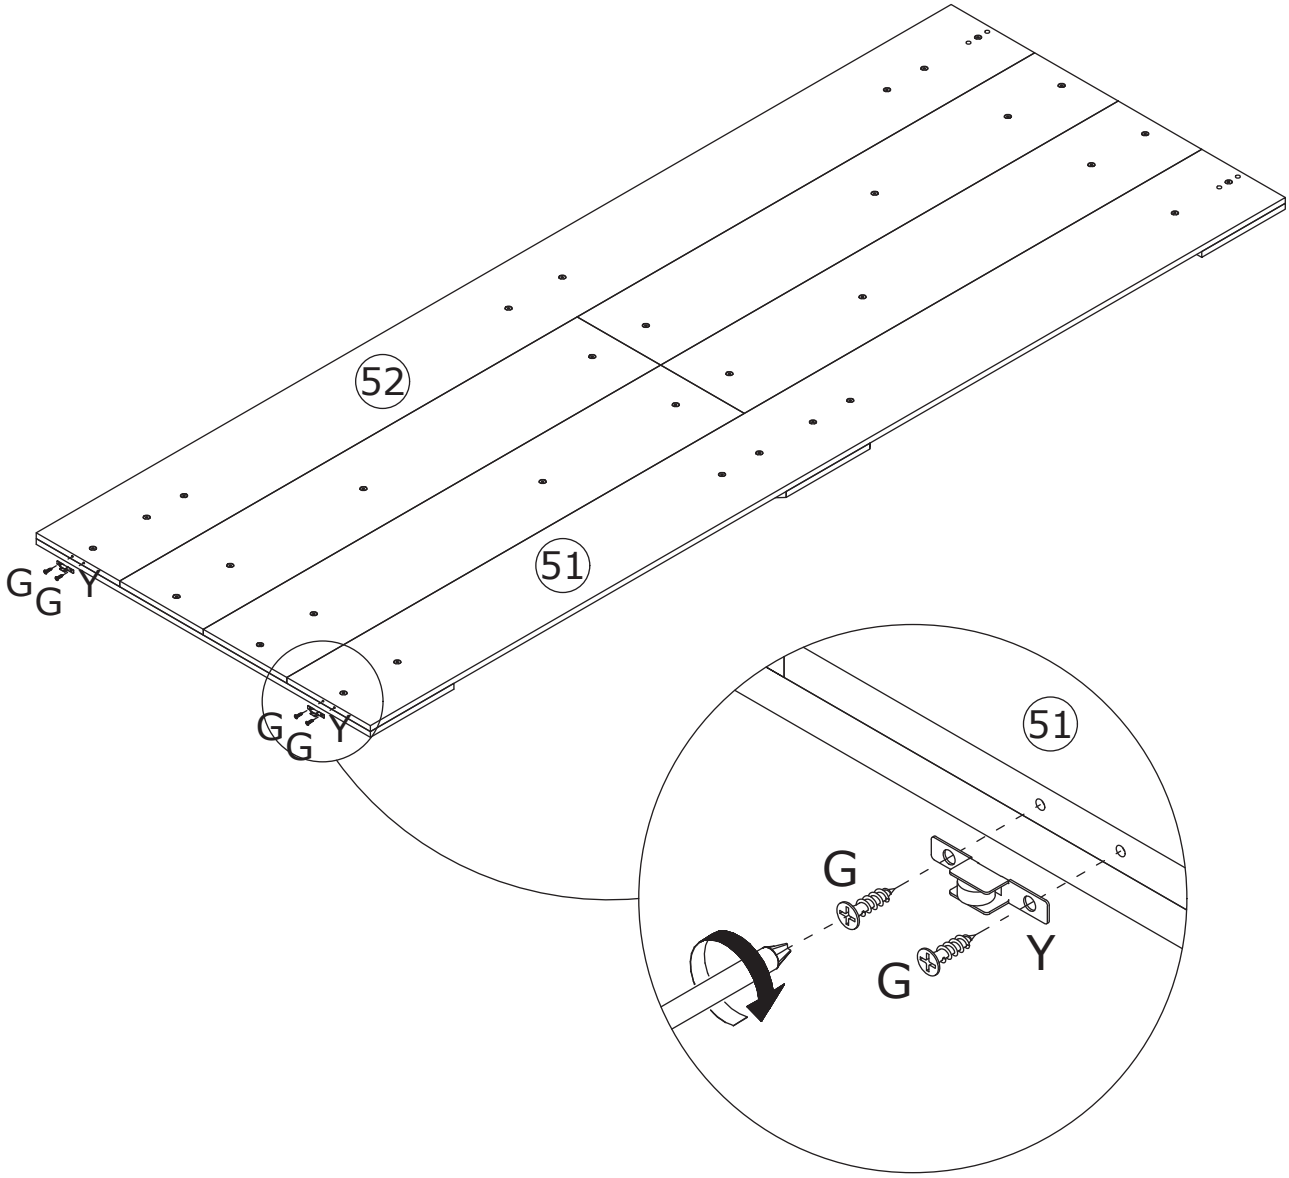

99

AB x 4	AJ x 1	54 x 1	
 CRG0625A	 M4	 x2	


Flip the door panel over and attach part (54-3) to panel 45 using screw (AB).

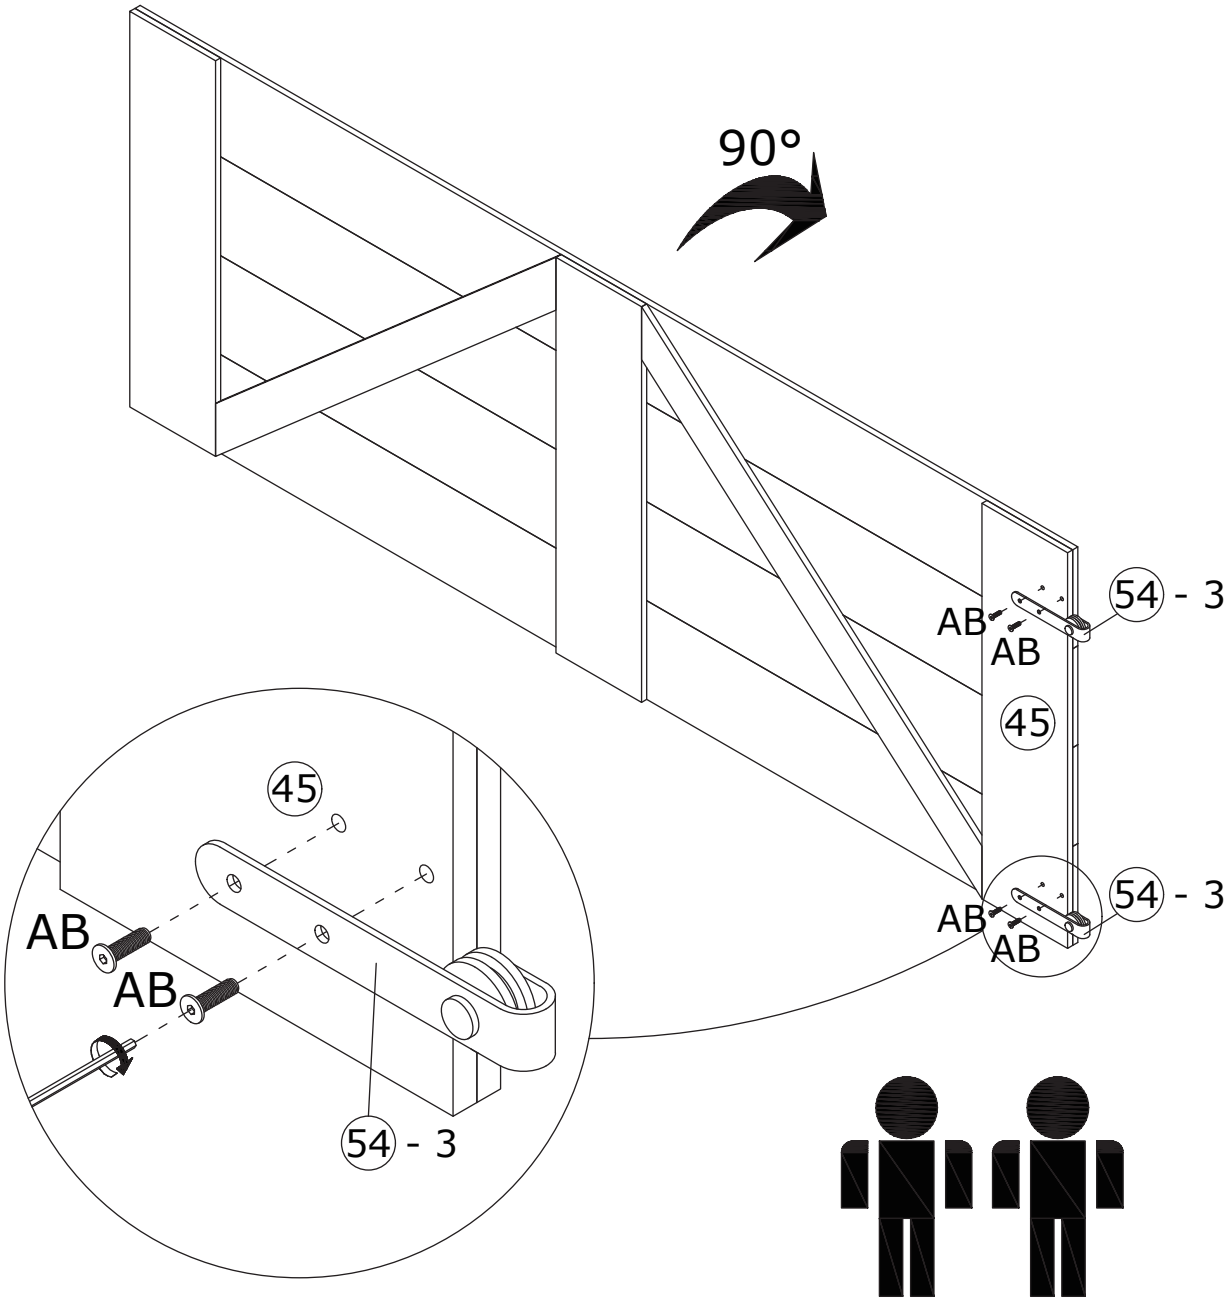

2 ADULTS


100

Place part (54-3) onto part (54-1) or (54-2).

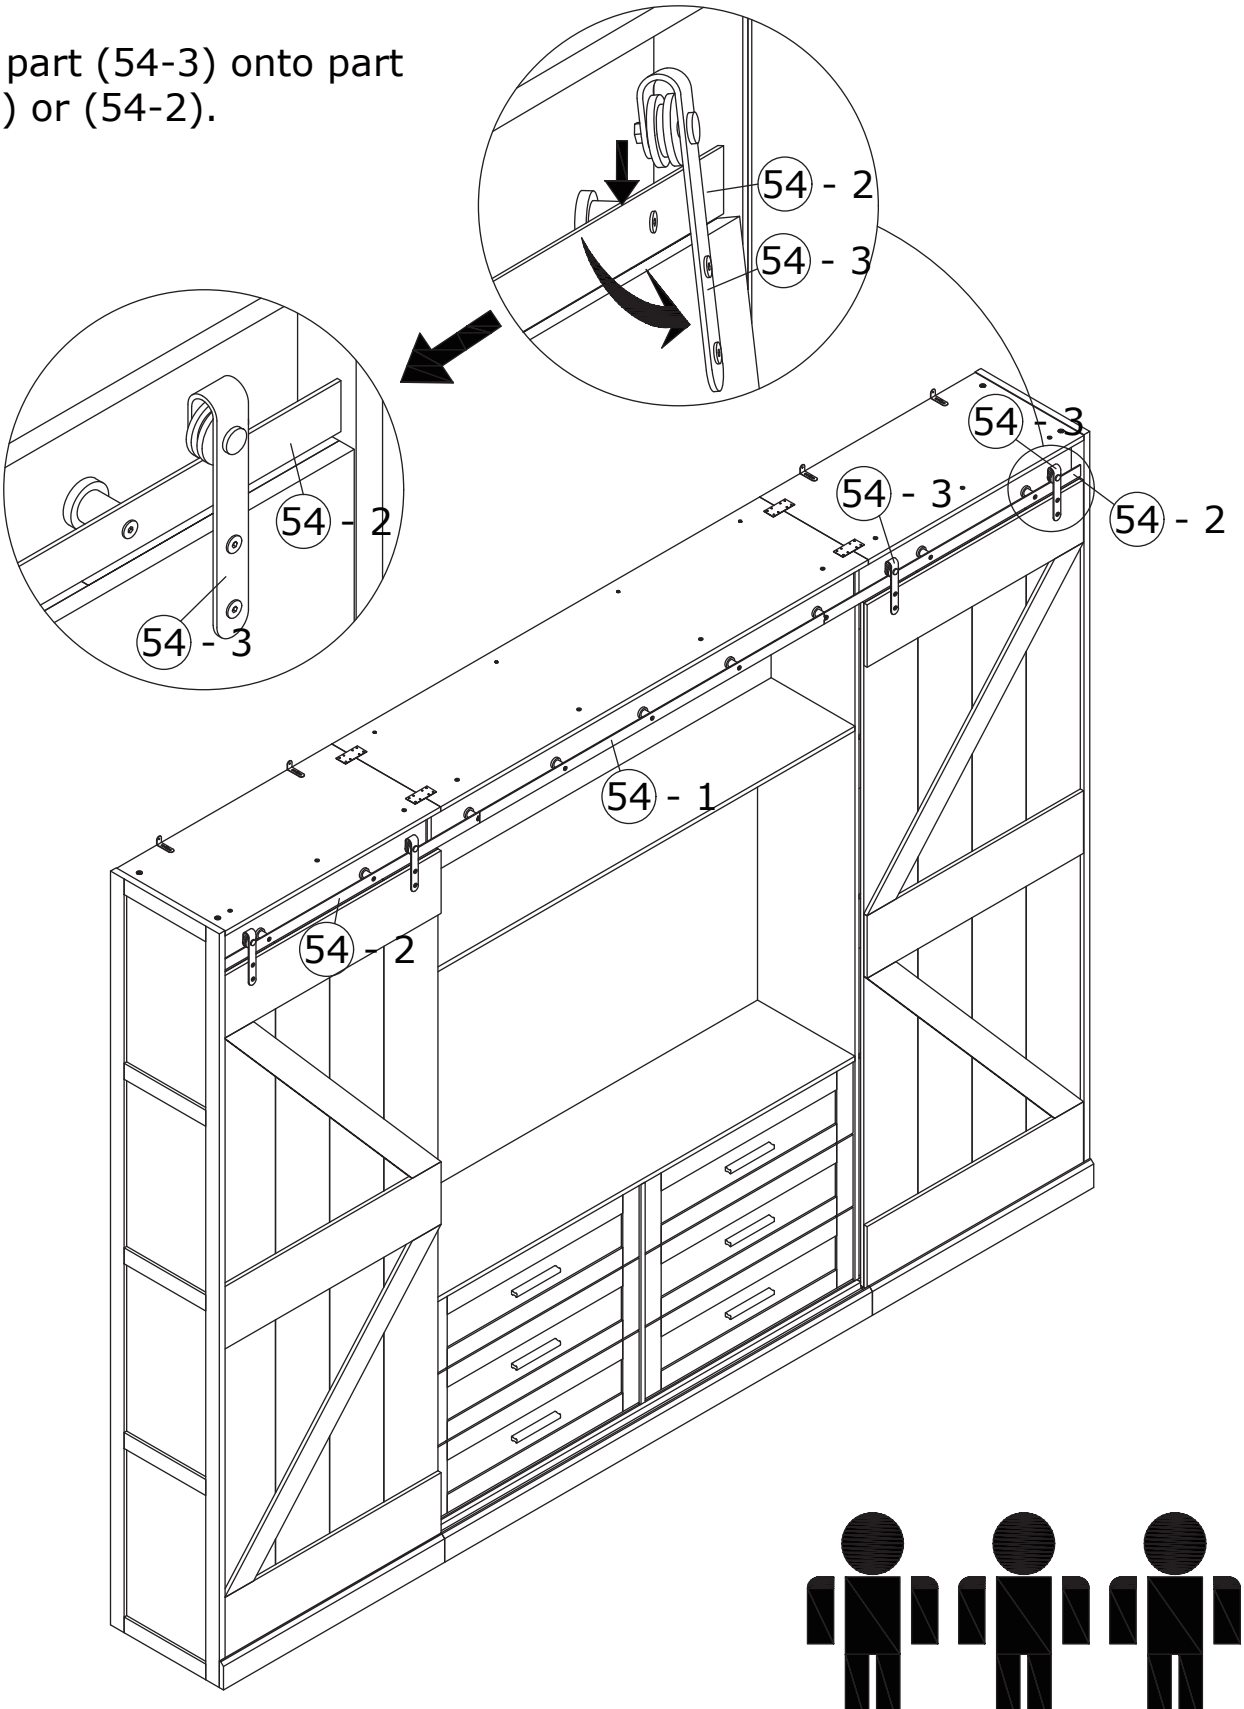

3 ADULTS

101

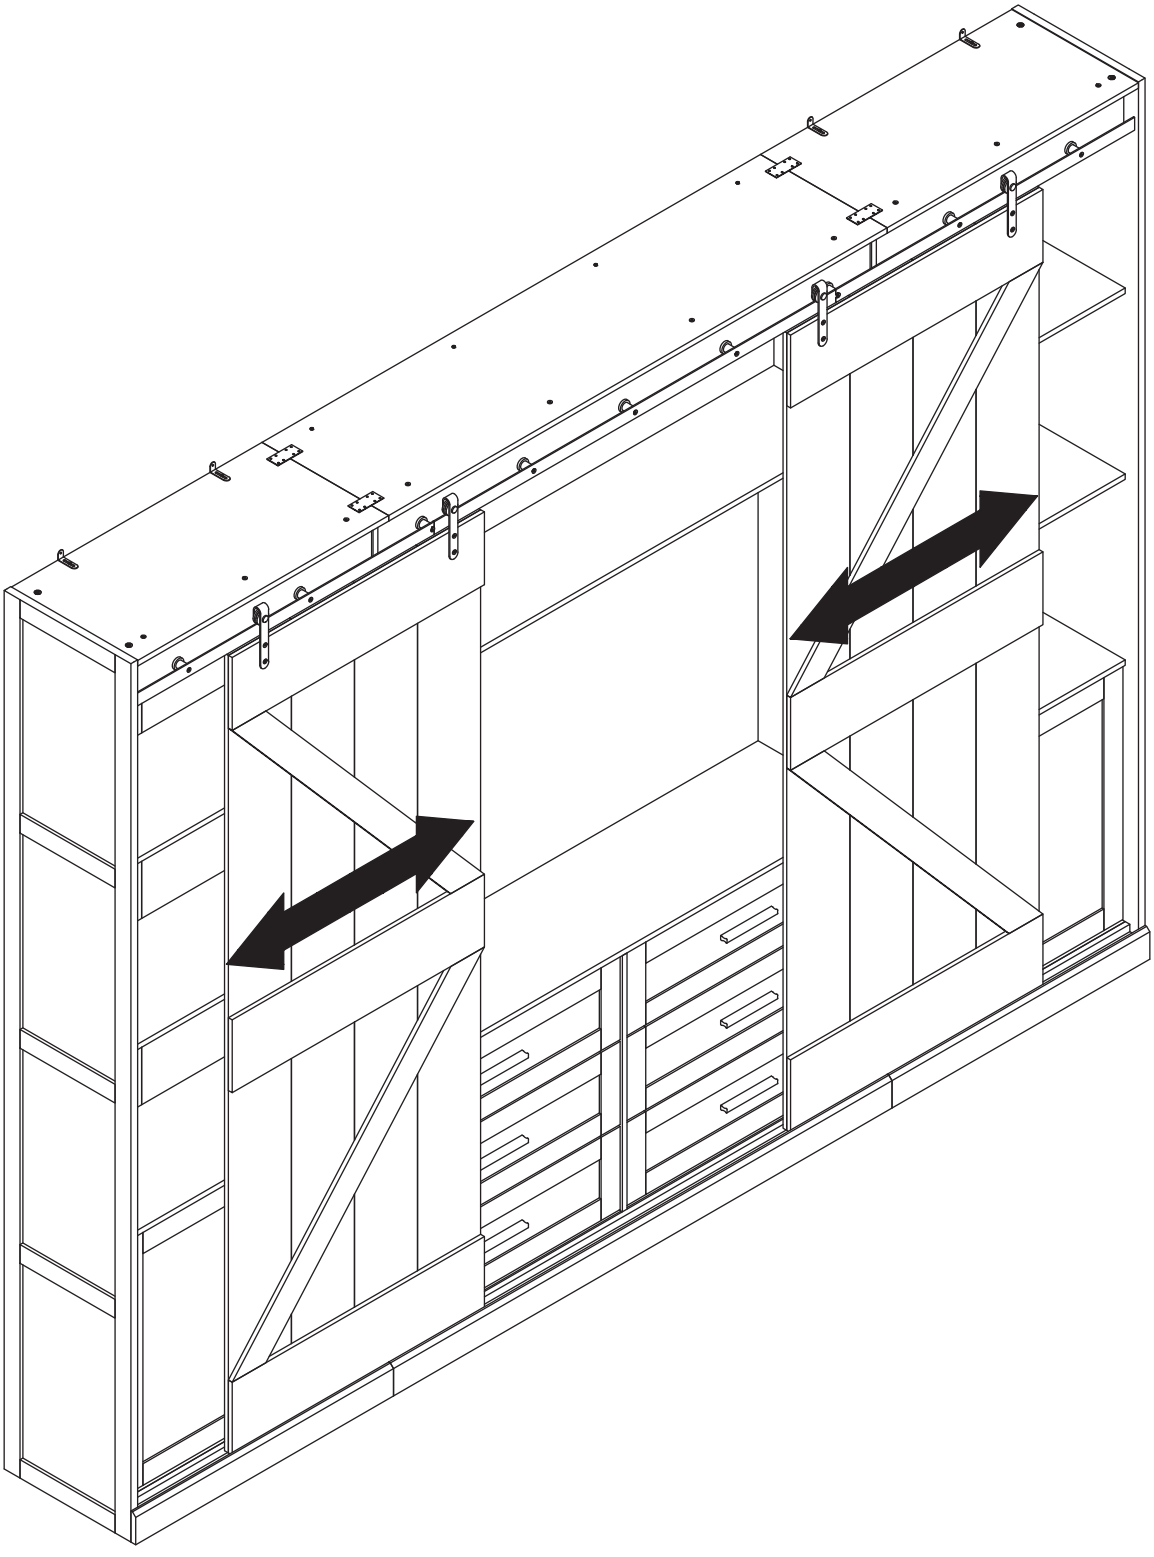

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.