



ASSEMBLY INSTRUCTION






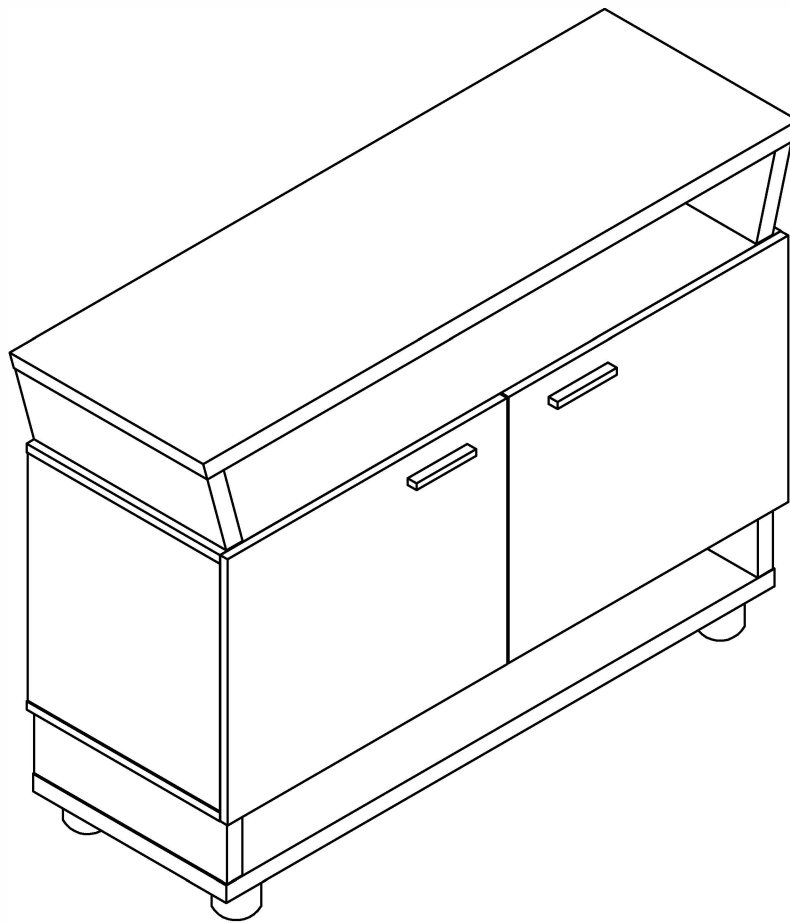


PARTS IDENTIFICATION

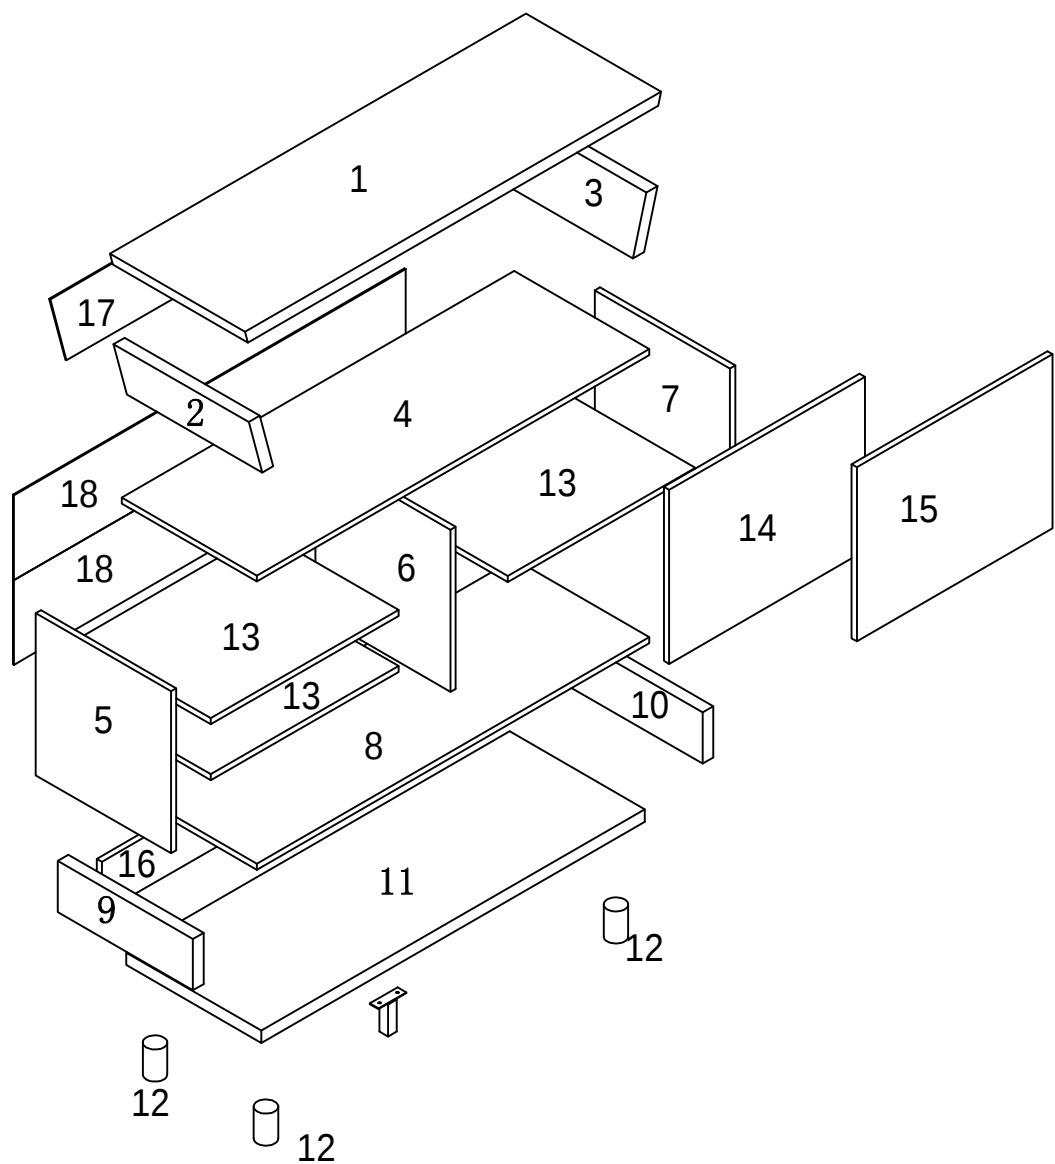


(1)	1pc	(7)	1pc	(13)	3pcs
(2)	1pc	(8)	1pc	(14)	1pc
(3)	1pc	(9)	1pc	(15)	1pc
(4)	1pc	(10)	1pc	(16)	1pc
(5)	1pc	(11)	1pc	(17)	1pc
(6)	1pc	(12)	4pcs	(18)	1pc

HARDWARE IDENTIFICATION


A		L29	16pcs
B		ø15	16pcs
C		ø8×25	22pcs
D		ø7×38	4pcs
E		ø7×48	4pcs
F		ø4×35	6pcs
G		ø4×40	2pcs
H		ø4×16	18pcs
I		M8×70	4pcs
J		M5	1pc
K		ø4×22	4pcs
L		64#	2pcs
M		301A	4pcs
N			34pcs
O	 RC	ø18	8pcs
P	 WH	ø18	6pcs
Q		ø5	12pcs
R		80×25×78	1pc
S		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

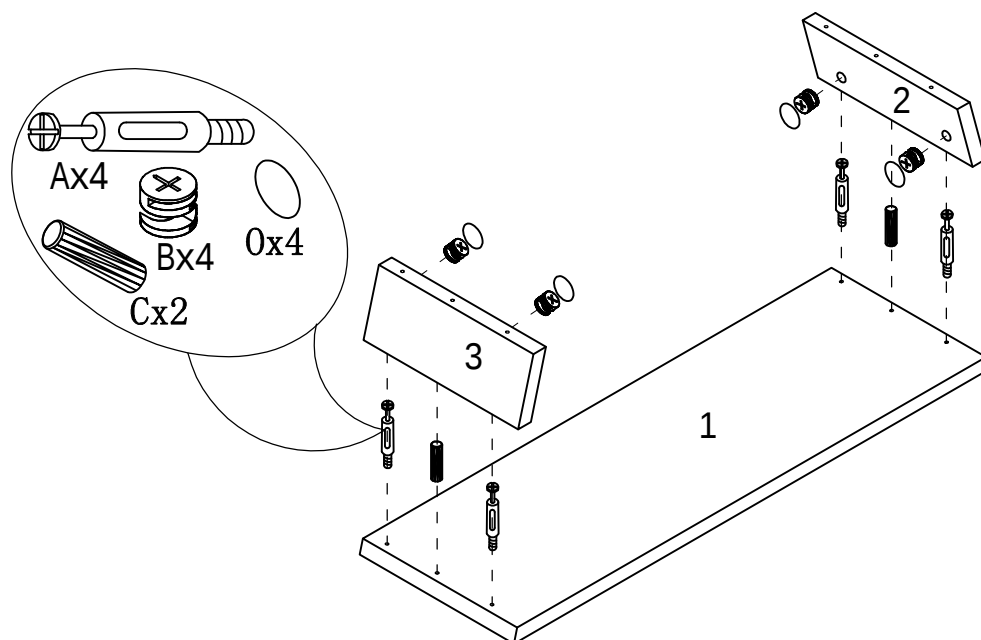


STEP 1

STEP 2

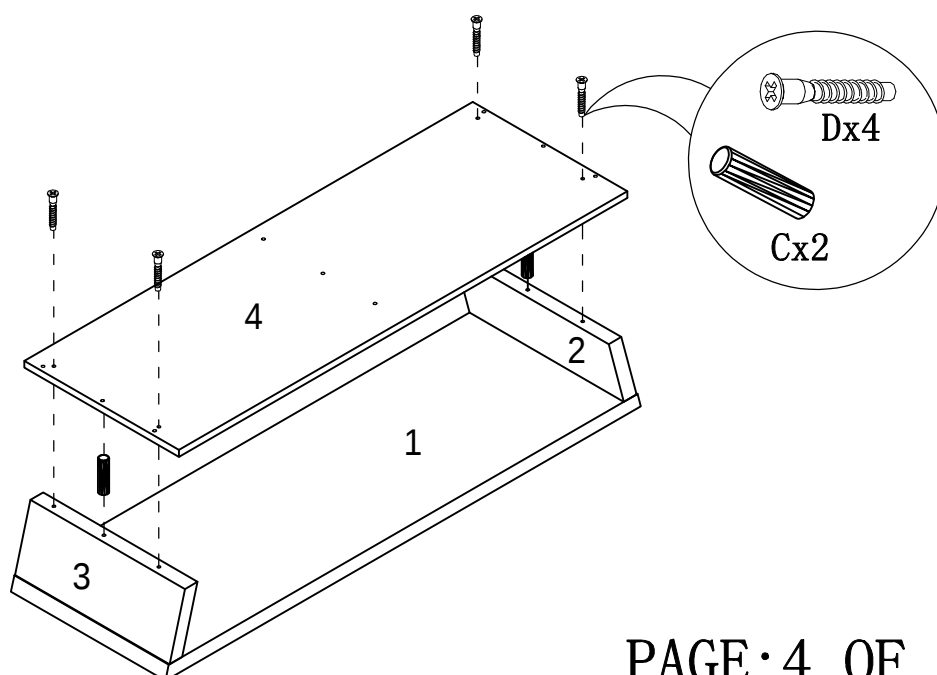


ASSEMBLY INSTRUCTION

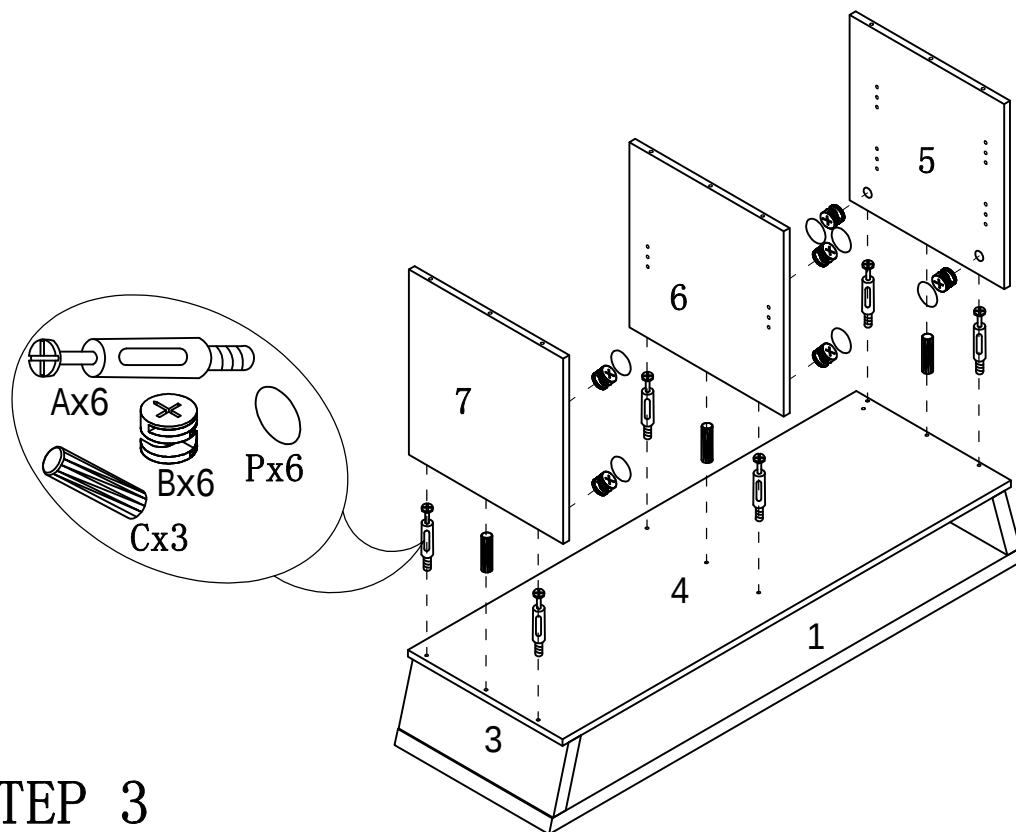


STEP 3

STEP 4

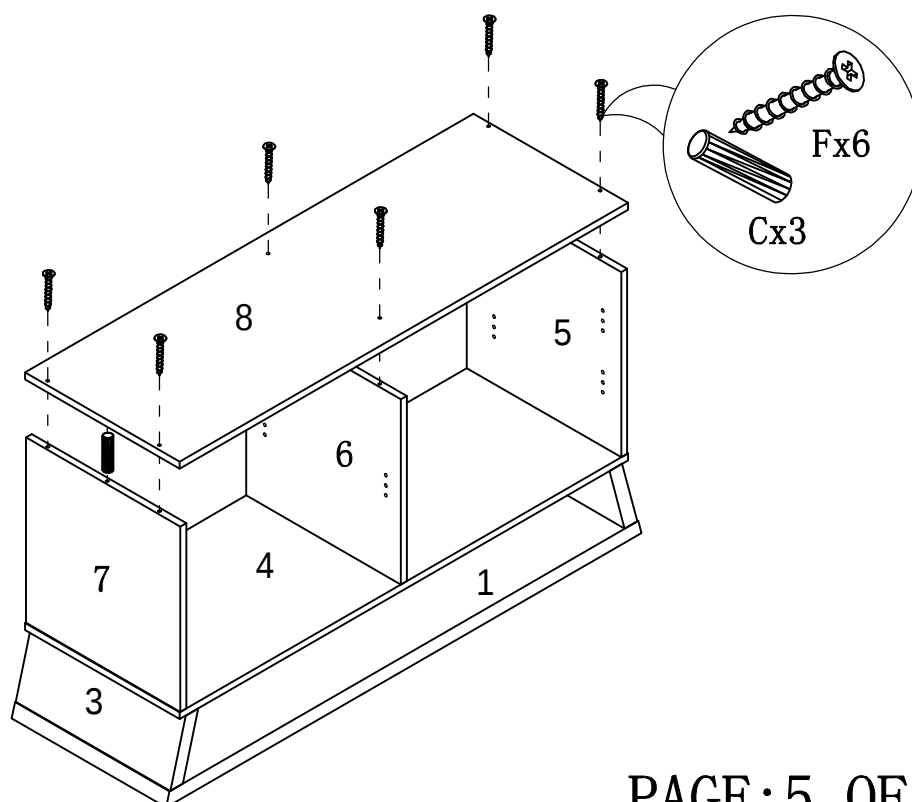


ASSEMBLY INSTRUCTION


STEP 5

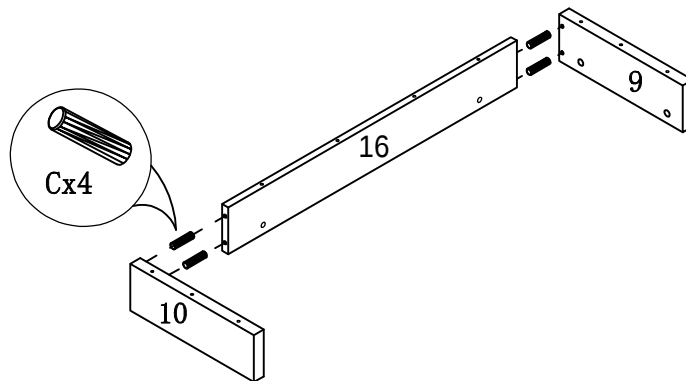


STEP 6

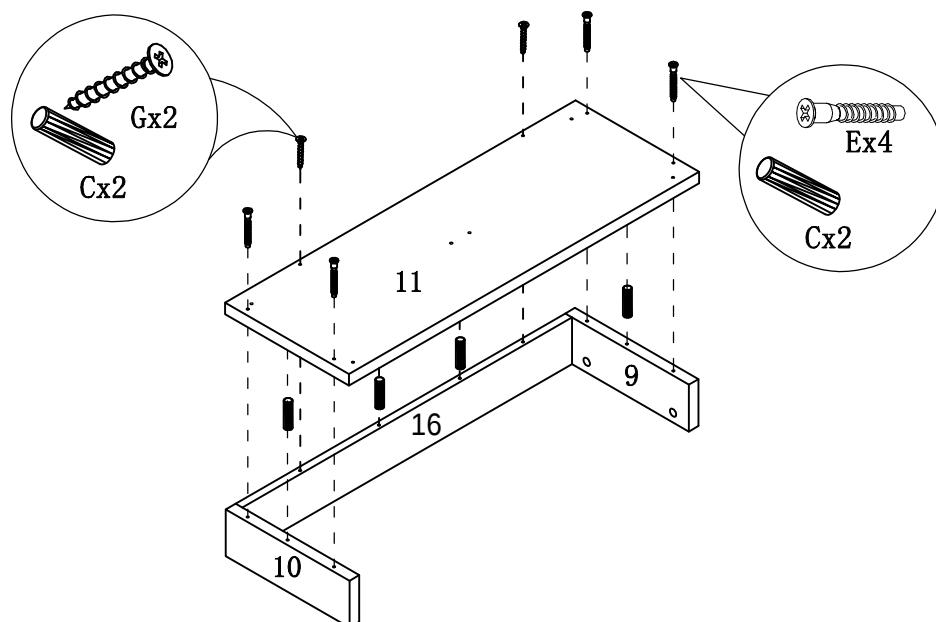

STEP 7

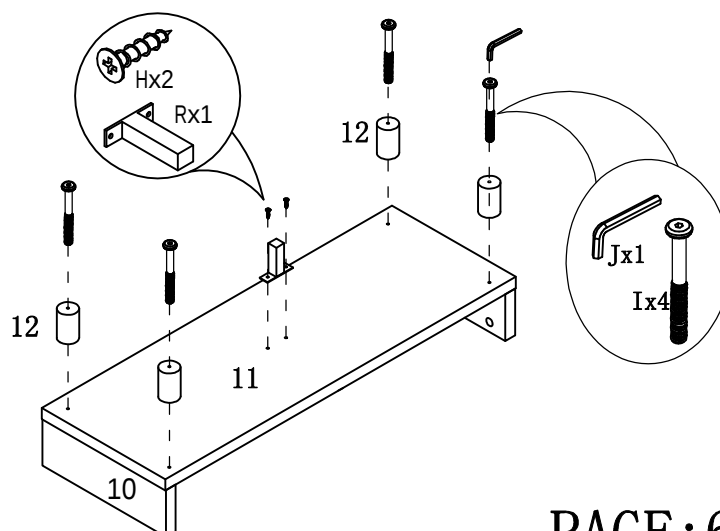


ASSEMBLY INSTRUCTION

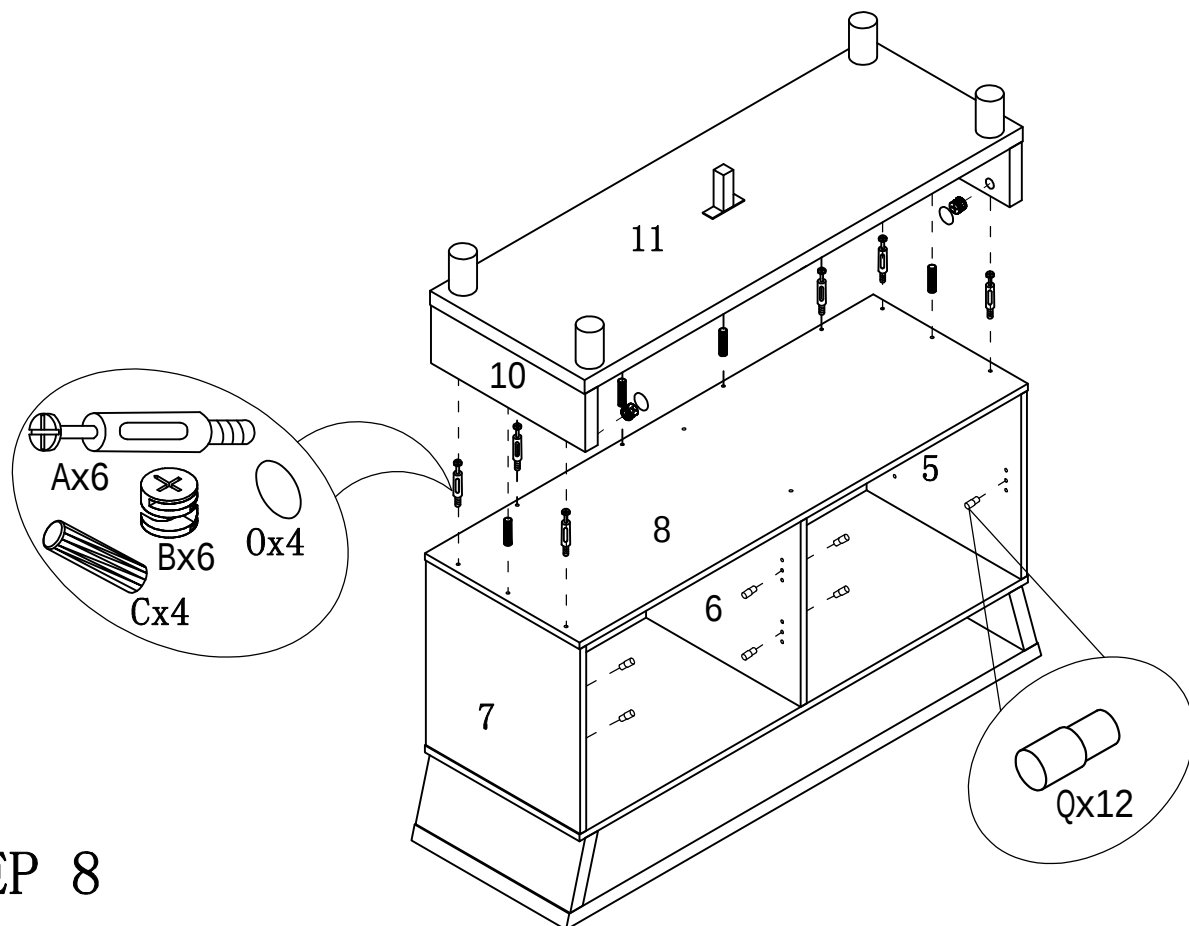


STEP 8

STEP 9

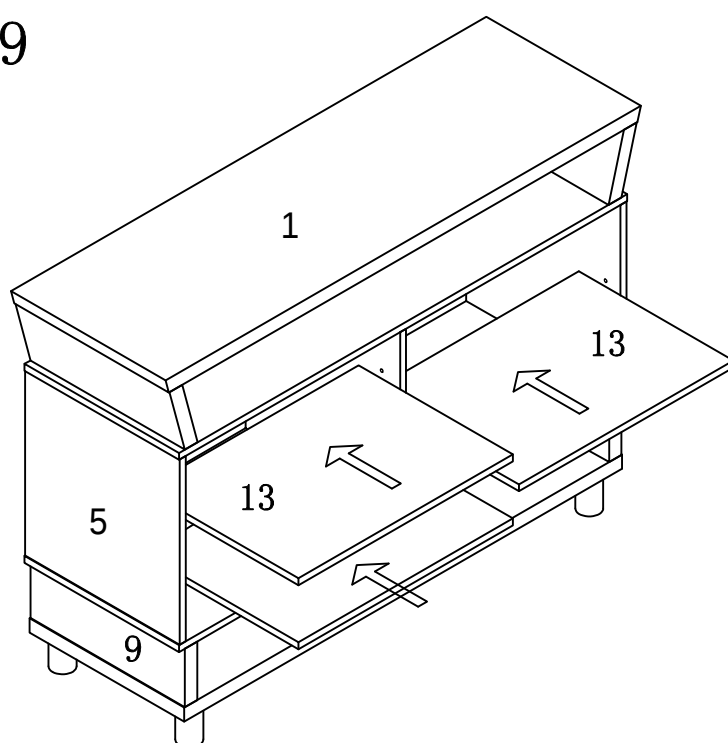

ASSEMBLY INSTRUCTION

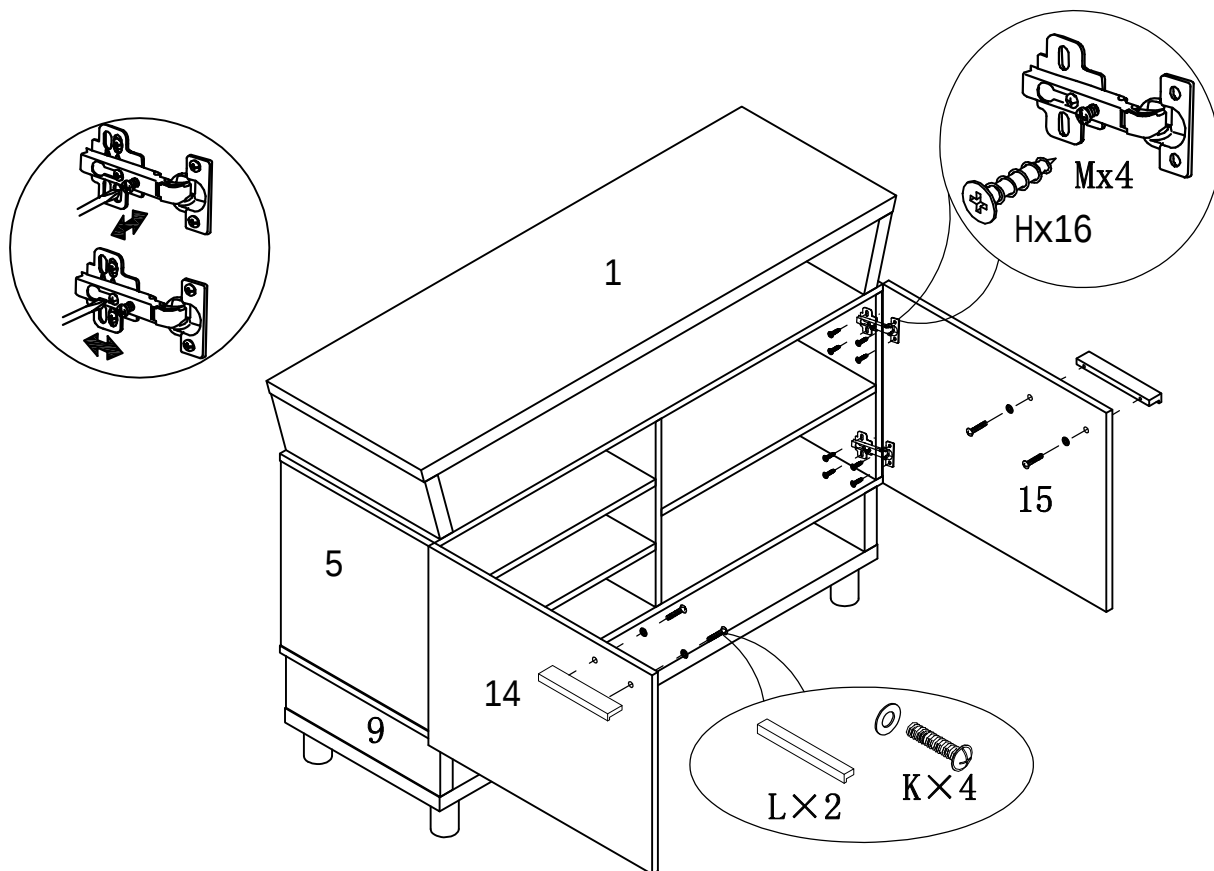

STEP 10

STEP 11

