


ASSEMBLY INSTRUCTIONS

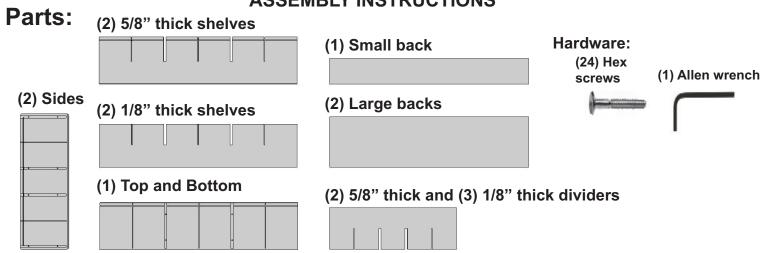




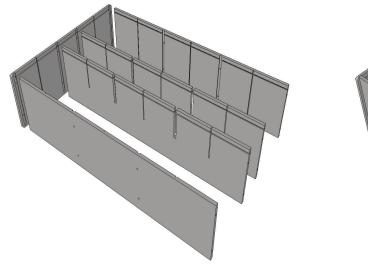

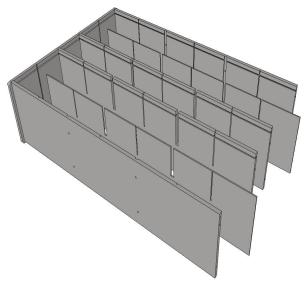


Step 2: Slide **(2) 1/8" thick shelves** into place between 5/8" thick shelves and Top and Bottom. No hardware is required in this step.

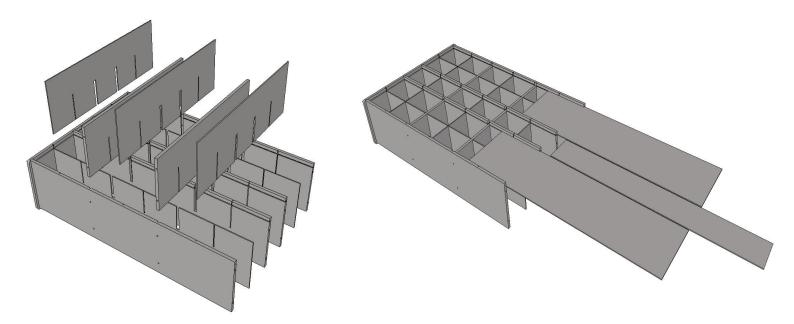


Step 3: Attach (2) 5/8" thick dividers to Top and Bottom pieces using (8) supplied Hex screws and Allen wrench. Slots in 5/8" thick dividers scissor into 5/8" wide slots in shelf pieces. Backs of dividers, (top of dividers pictured above), sit below back grooves in Top and Bottom pieces. Repeat for (3) 1/8" thick dividers. No hardware is required to attach 1/8" thick dividers.

Step 4: Slide (2) Large backs and (1) Small back into place using back grooves in Top, Bottom, and (2) 5/8" thick shelves. Backs will extend out past edge of Top, Bottom, and shelves. Do not force and make flush. Make sure backs are sitting in back groove of Side piece.

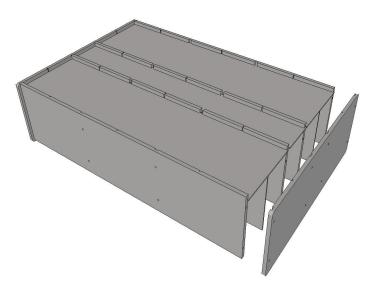

Step 5: Attach second **Side** piece using **(8)** supplied Hex screws and Allen wrench. Overhang on backs past Top, Bottom, and shelves will fit into deeper 3/8" back groove of second Side piece.

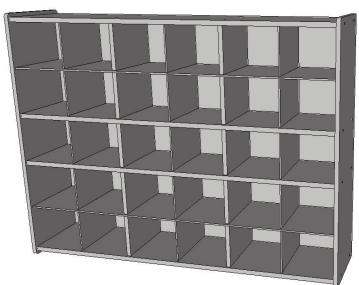

Step 6: Set unit upright, resting edges of Sides on floor. Tighten all screws snugly. **DO NOT OVER-TIGHTEN. DO NOT DRILL.** Assembly is now complete.