


HW-AM503007


CUSTOMER MANUAL

-V0.2

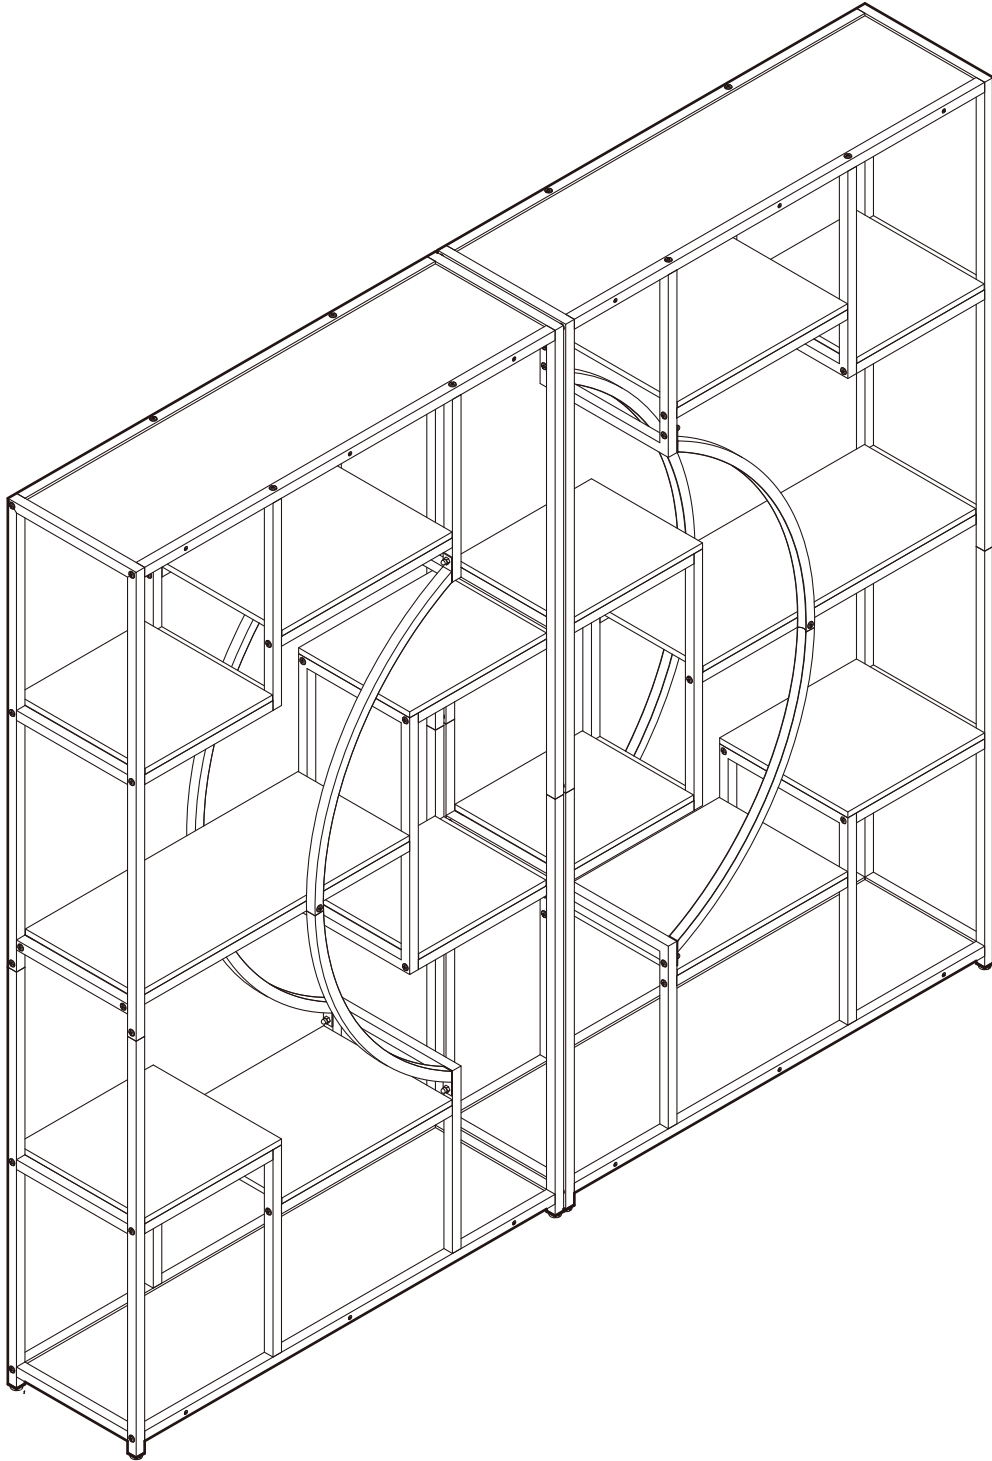

Contact us: Support@lghm.vip


ASSEMBLY STRUCTURE REFERENCE DIAGRAM

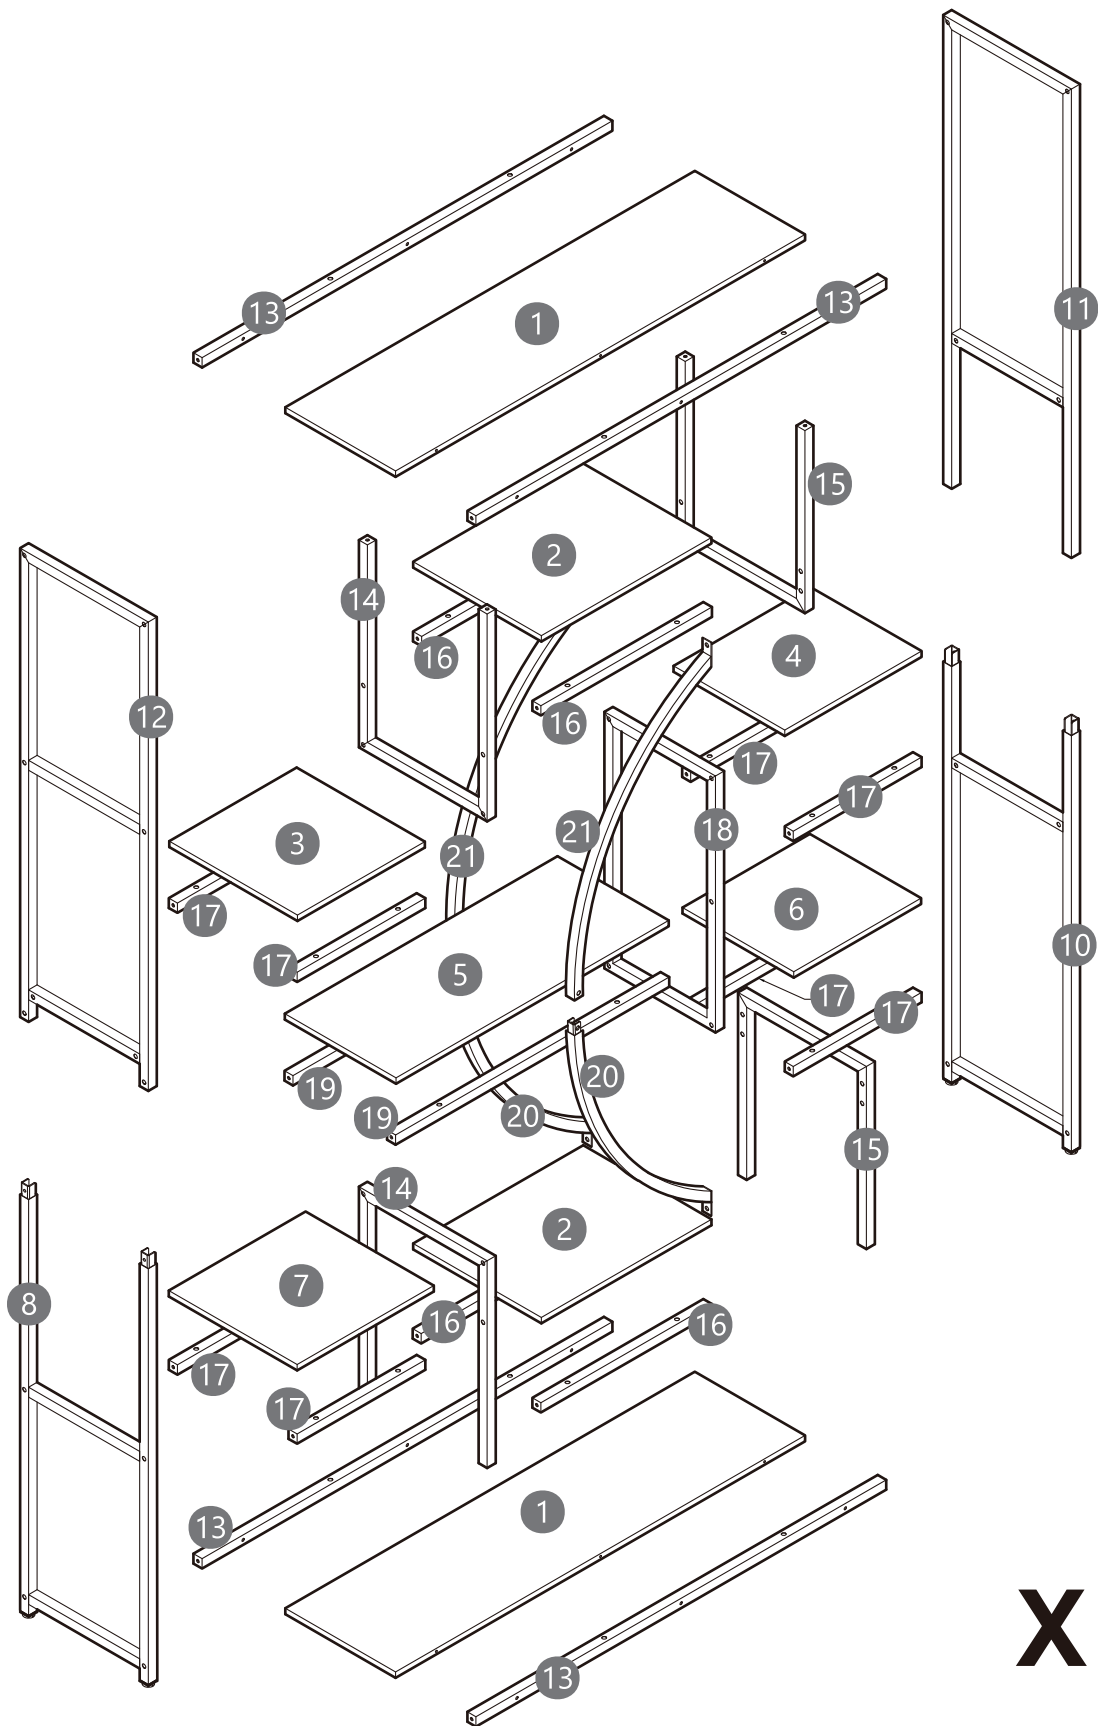

X 2


PACKAGE CONTENT

1

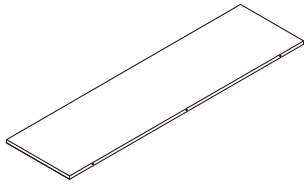


958 x 258mm
4 PCS

2

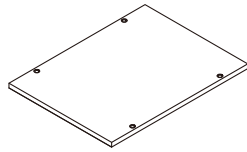


398 x 300mm
4 PCS

3

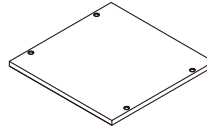


300 x 300mm
2 PCS

4

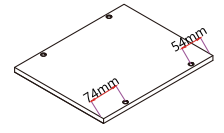


320 x 260mm
2 PCS

5

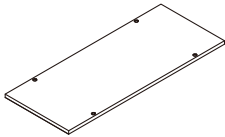


638 x 260mm
2 PCS

6




300 x 260mm
2 PCS

7

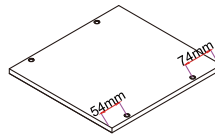


320 x 300mm
2 PCS

8




2 PCS

10




2 PCS

11




2 PCS

12




2 PCS

13

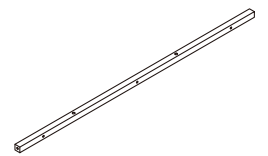


8 PCS

14

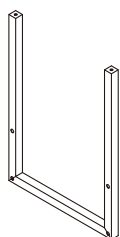


4 PCS

15




4 PCS

16

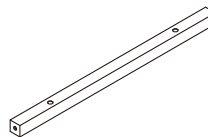

8 PCS


17



16 PCS


PACKAGE CONTENT

18



2 PCS

19

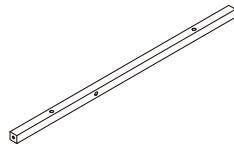


4 PCS

20




4 PCS

21

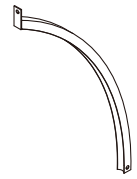

4 PCS

A



M6 x 28mm
X 64+1

B



M6 x 40mm
X 88+3

C



M6 x 50mm
X 4

D



M6 x 12mm
X 8+1

E




M5 x 40mm
X 24+1

F



M6
X 12+1

G

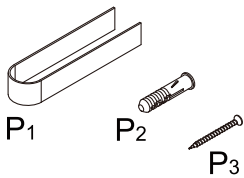

M5 x 55mm
X 4 Set

3#



X 1


4#



X 1




X 1

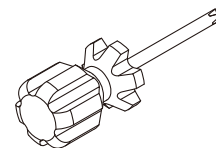



X 1

Step 1

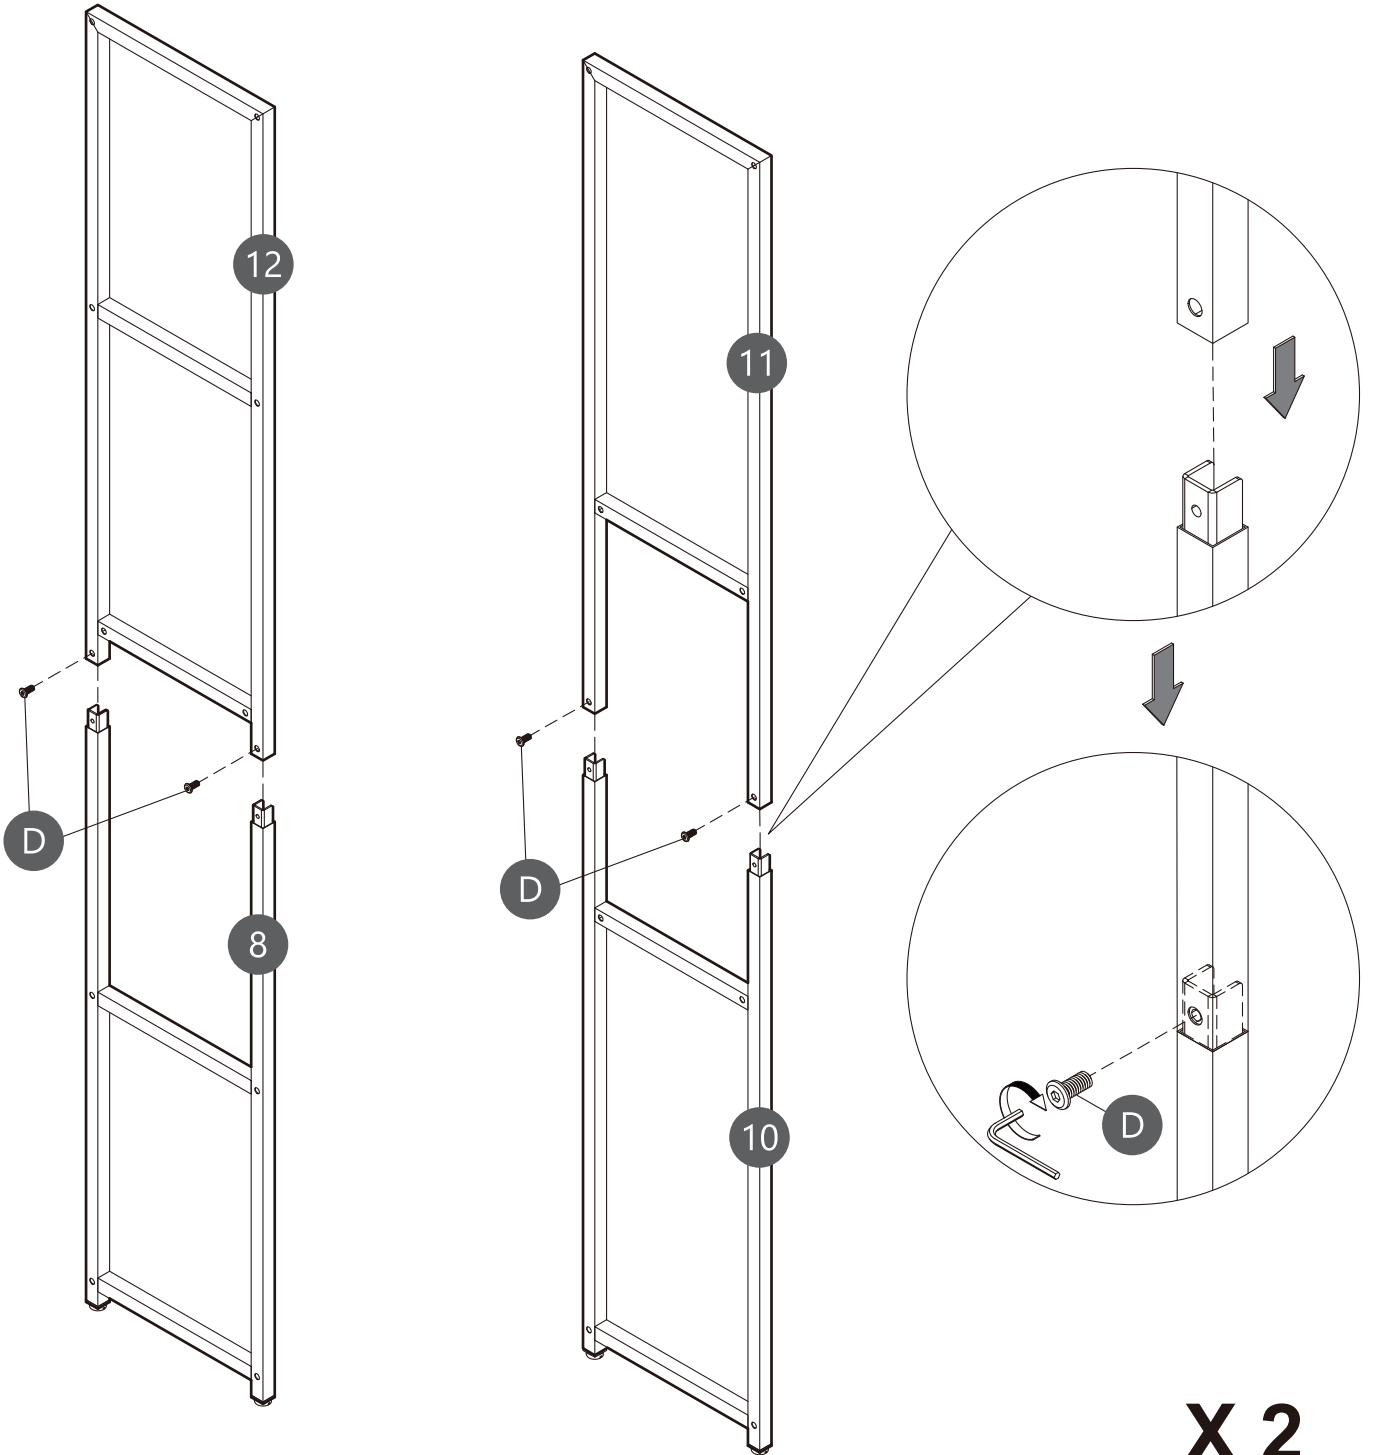Screw D to lock (8)&(12),(10)&(11) as below shown.




X 2

D		× 8
4#		× 1


Step 2

Screw E to lock (13) on the (1) as below shown.

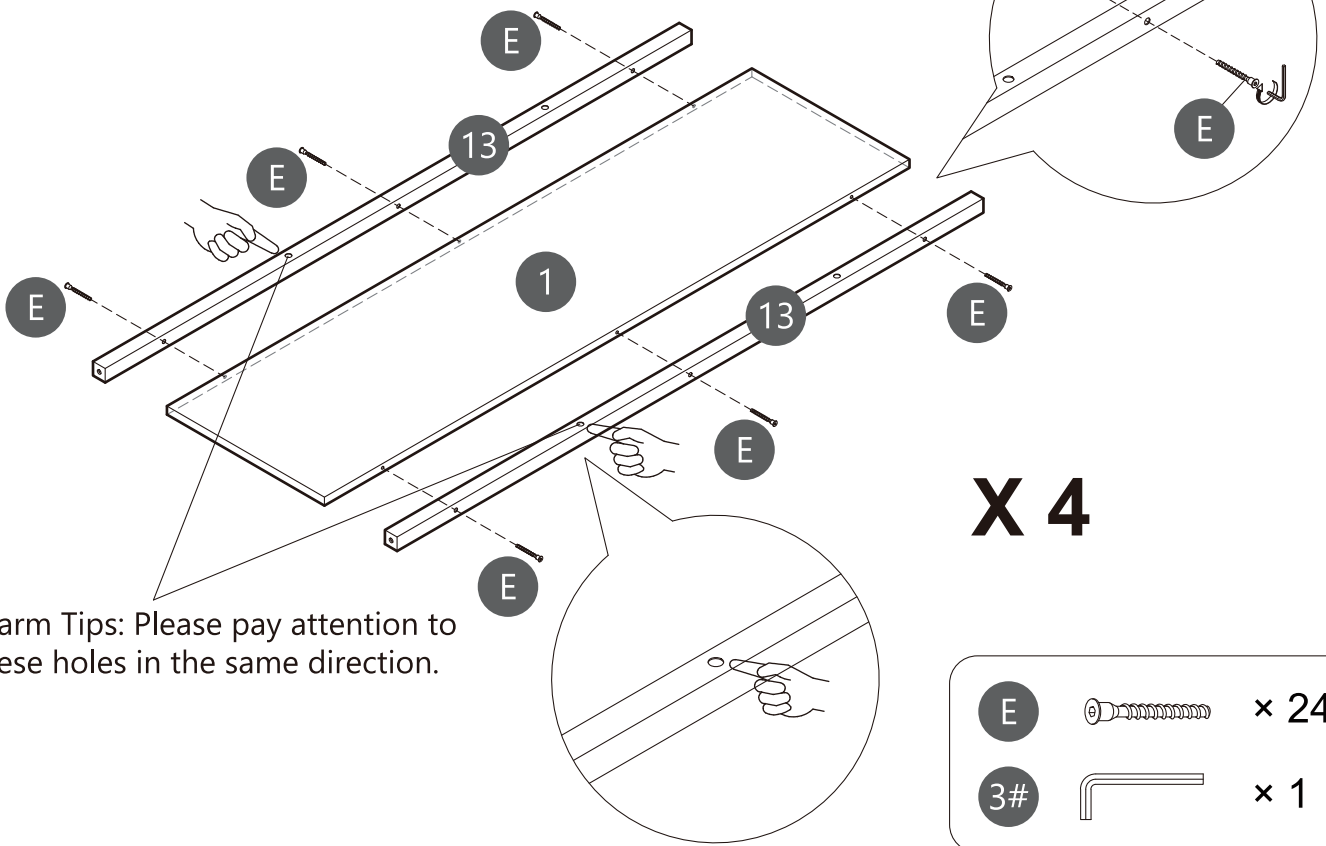




Step 3

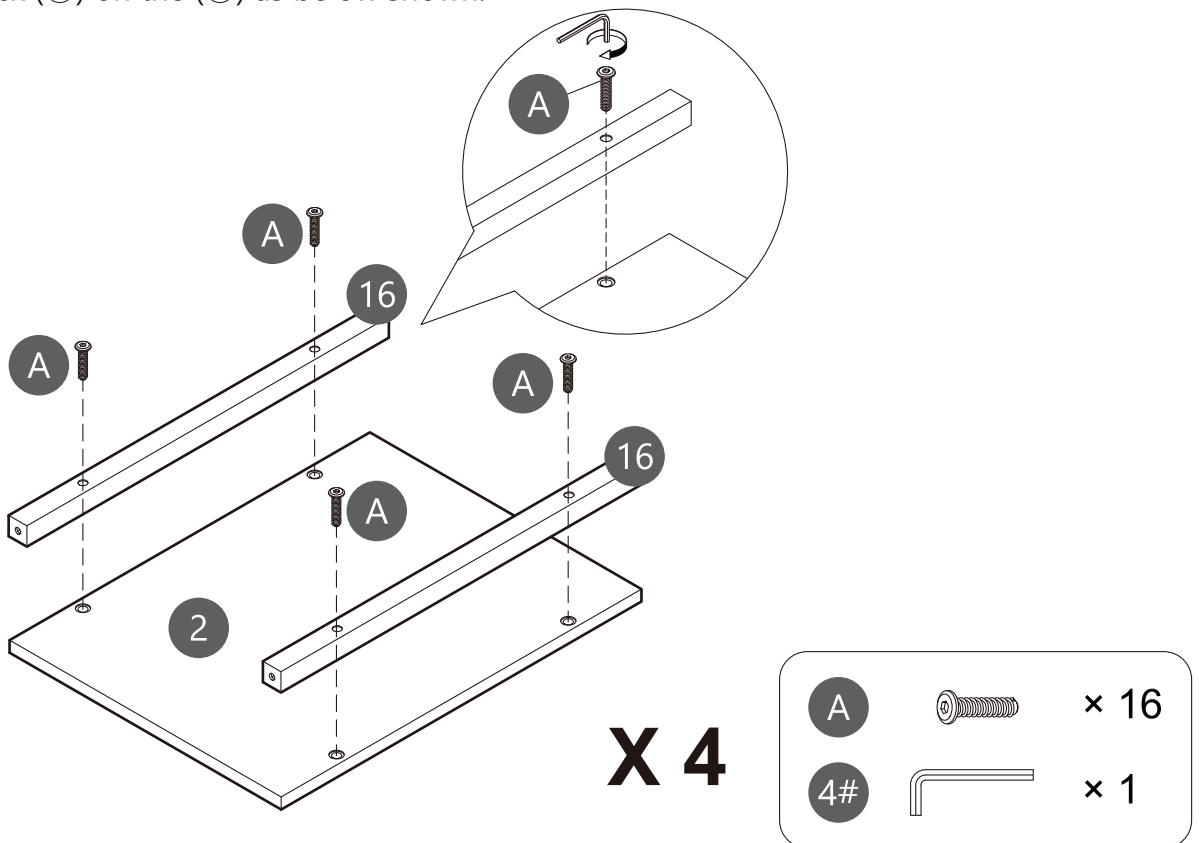

Screw (A) to lock (16) on the (2) as below shown.



Step 4

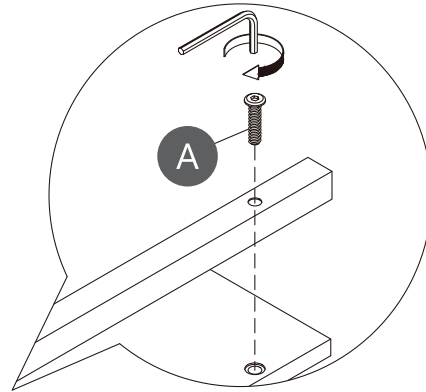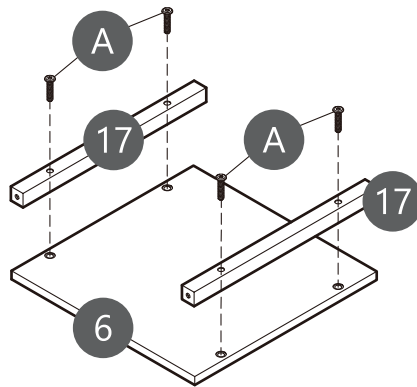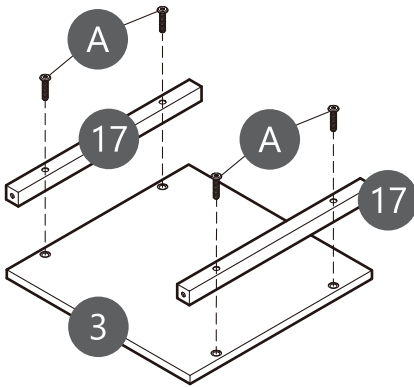Screw (A) to lock (17) on the (3) as below shown.
Screw (A) to lock (17) on the (6) as below shown.




A		× 16
4#		× 1



X 2

Step 5

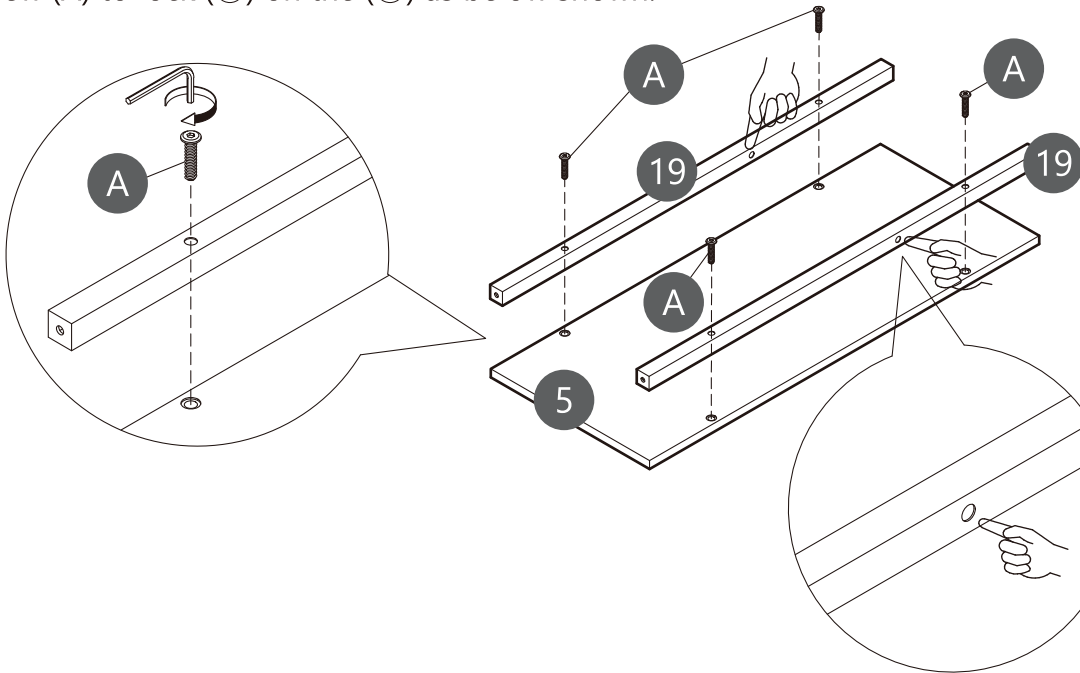Screw (A) to lock (19) on the (5) as below shown.




X 2

A		× 8
4#		× 1

Step 6

Assemble Top Shelf.

Screw (B) to lock (14) on the (13) as below shown.

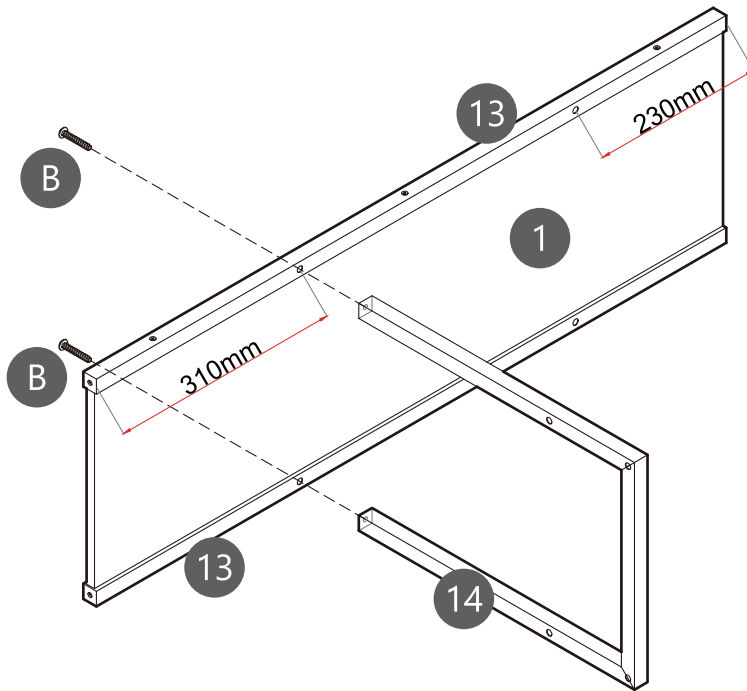


(B)		× 4
(4#)		× 1

Step 7

Screw (B) to lock (16) on the (14) as below shown.


Warm Tips: Please make sure that the metal support is under the board.

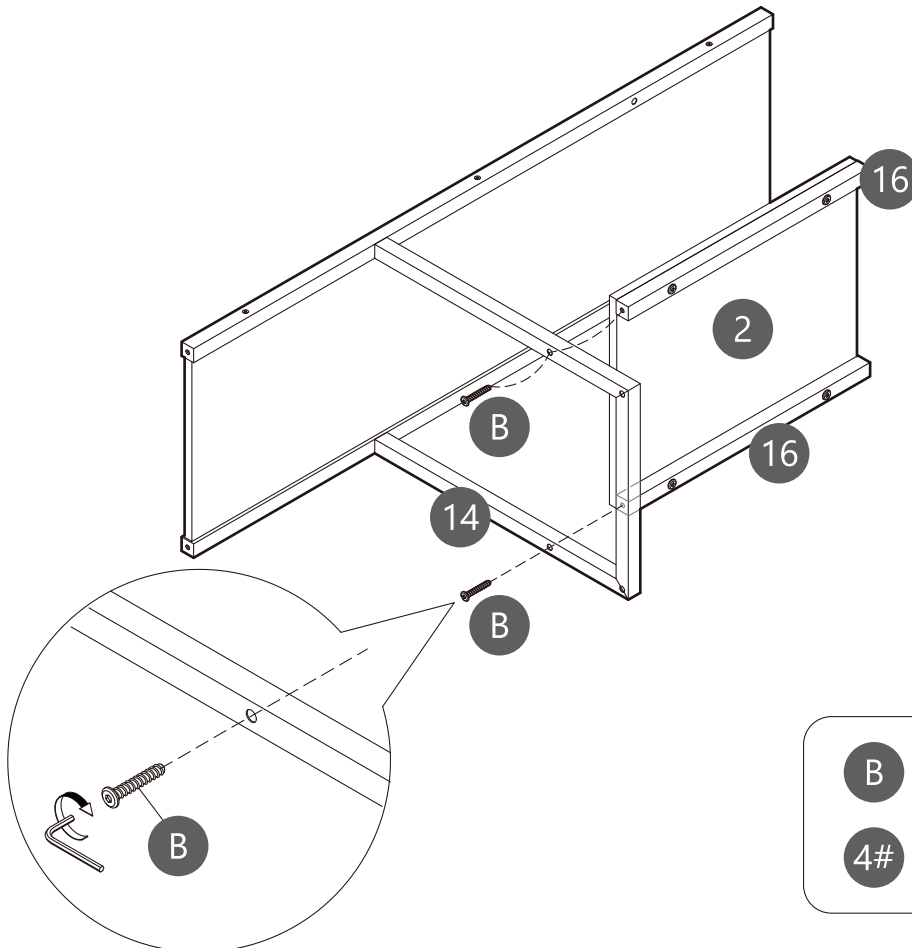



(B)		× 4
(4#)		× 1

Step 8

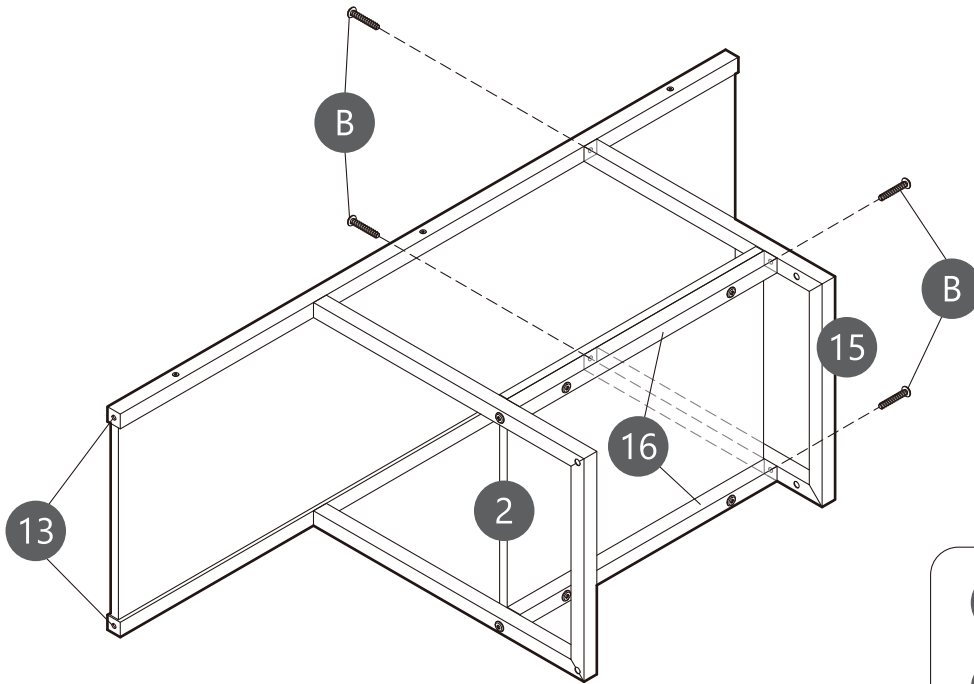Screw (B) to lock (15) on the (13)&(16) as below shown.




X 2

B		× 8
4#		× 1



Step 9

Screw (B) to lock (17) on the (14) as below shown.

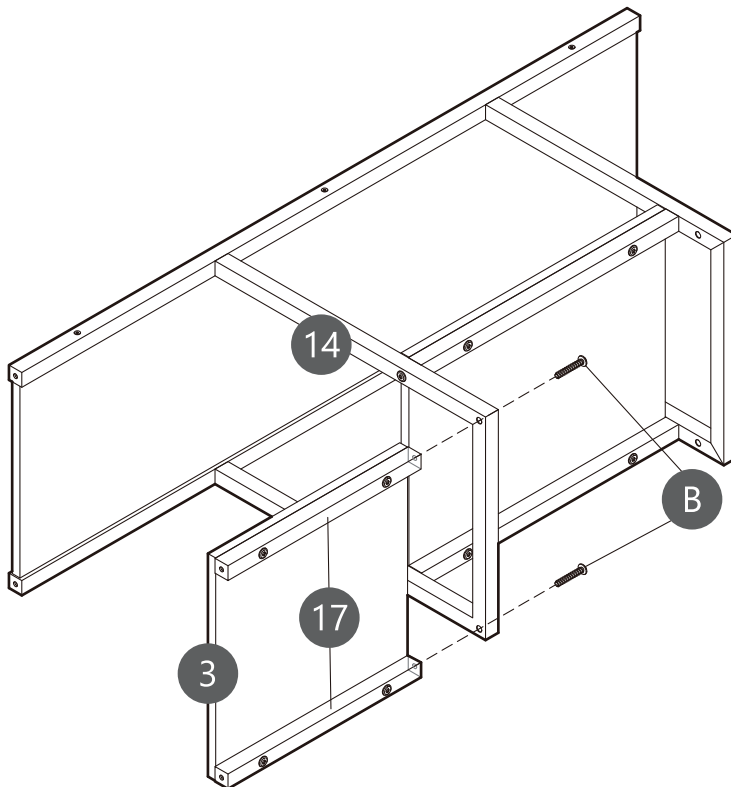Warm Tips: Please make sure that the metal support is under the board.




X 2

B		× 4
4#		× 1

Step 10

Assemble Bottom Shelf.


Screw (B) to lock (14) on the (13) as below shown.

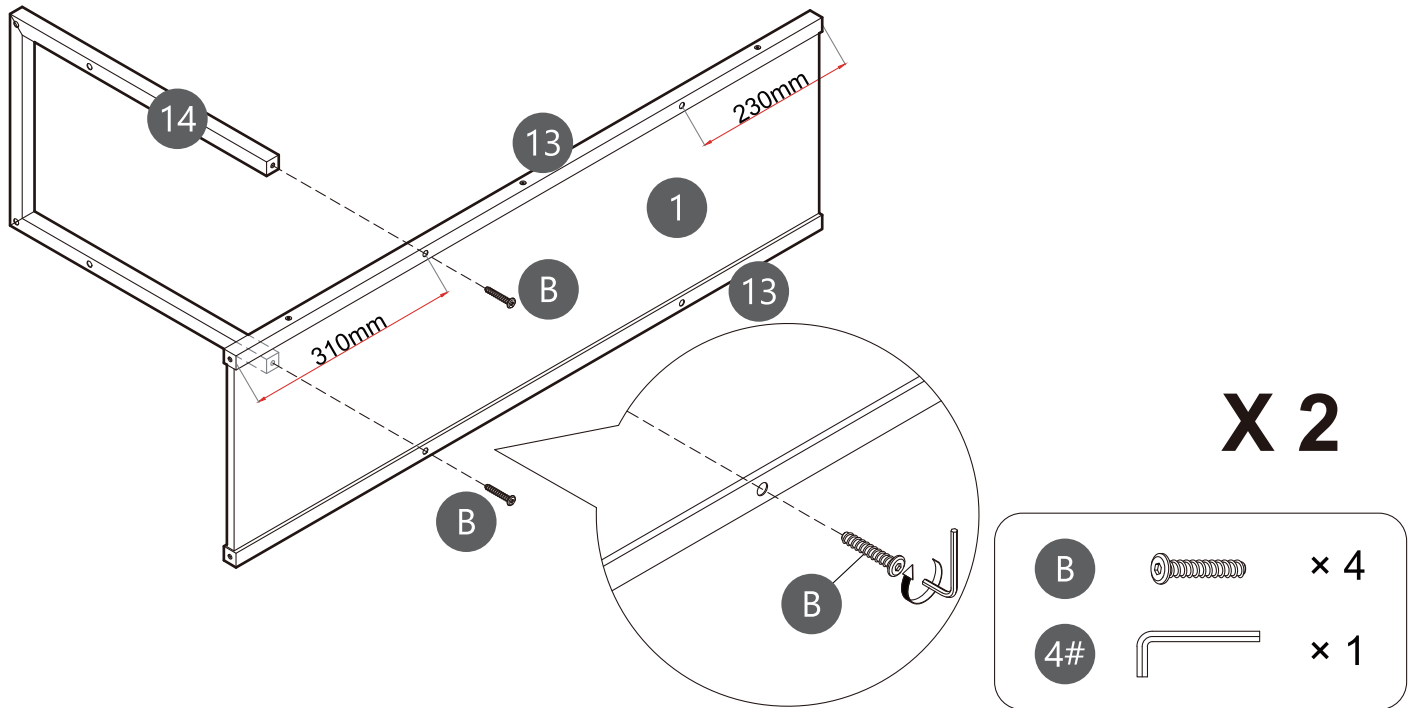

Step 11


Screw (B) to lock (16) on the (14) as below shown.

Warm Tips: Please make sure that the metal support is under the board.

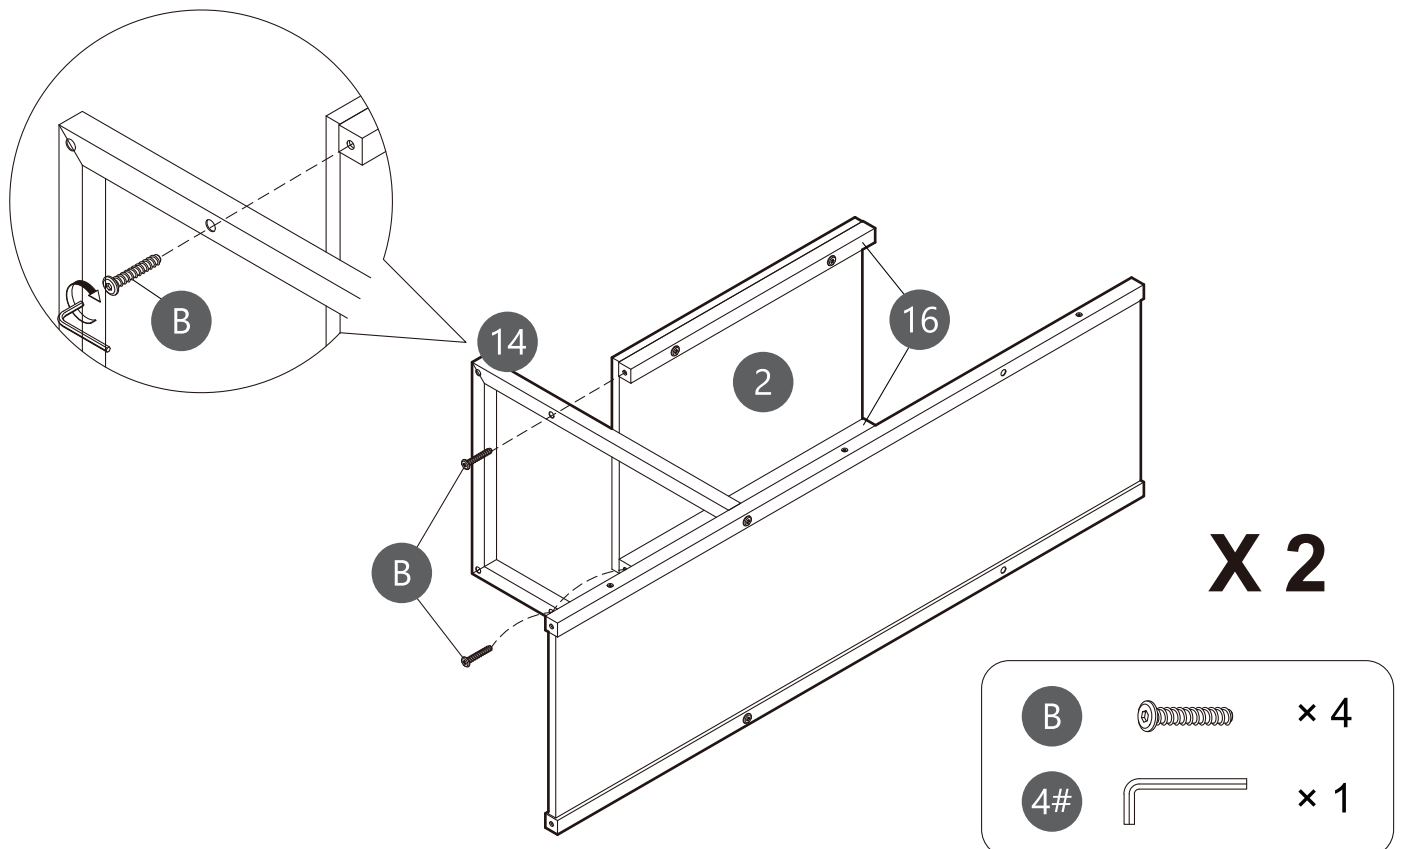



Step 12

Screw (B) to lock (15) on the (13)&(16) as below shown.

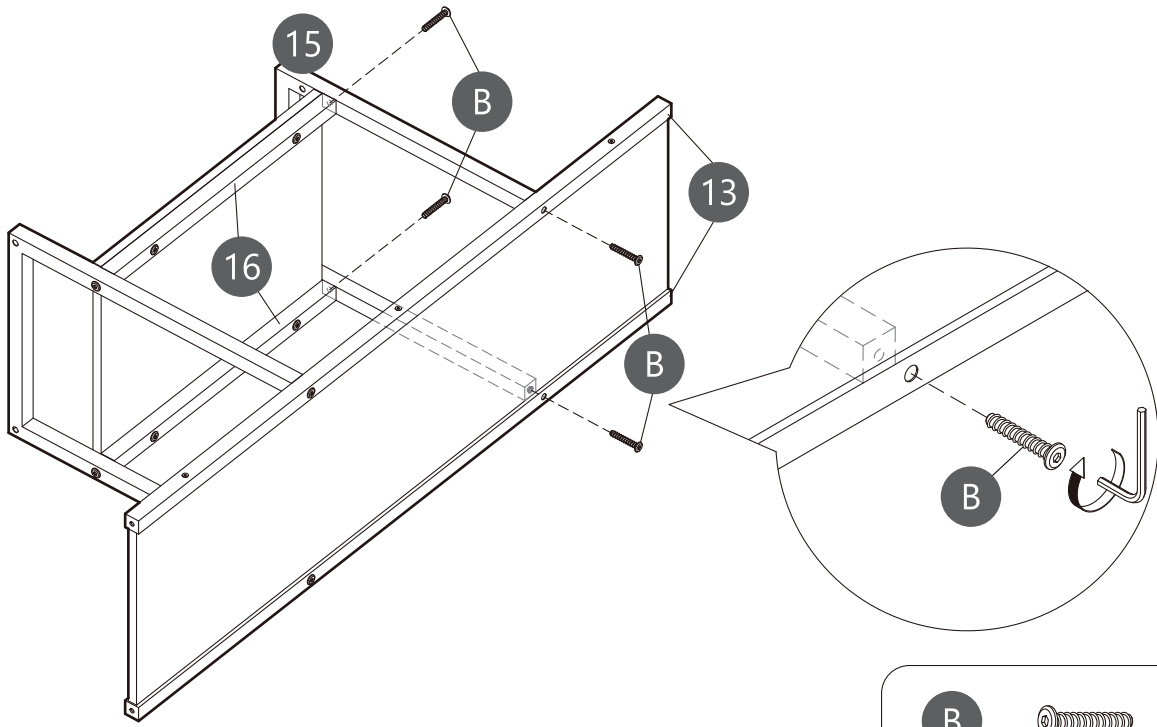


X 2



B		× 8
4#		× 1

Step 13

Screw (B) to lock (17) on the (14) as below shown.

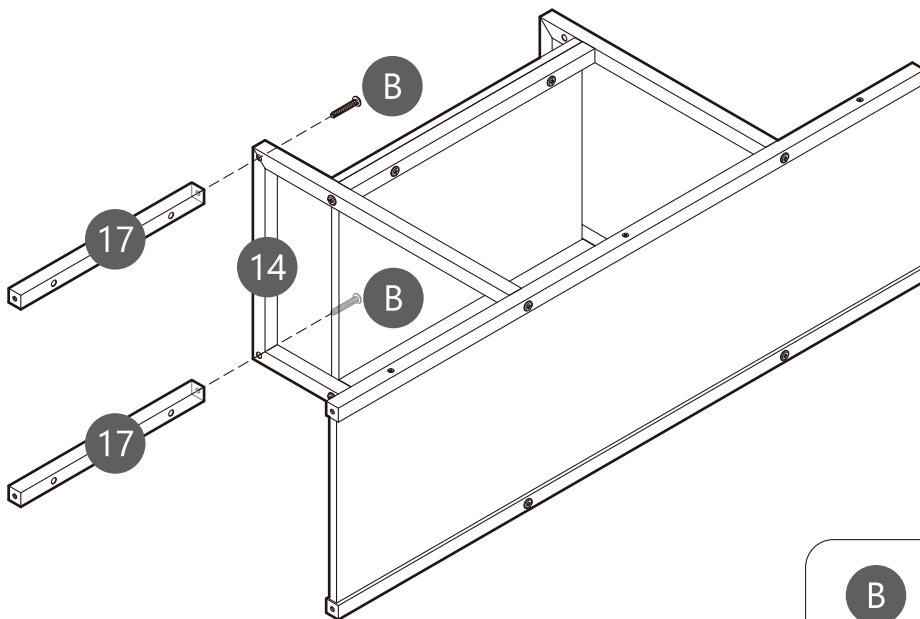




X 2

B		× 4
4#		× 1

Step 14

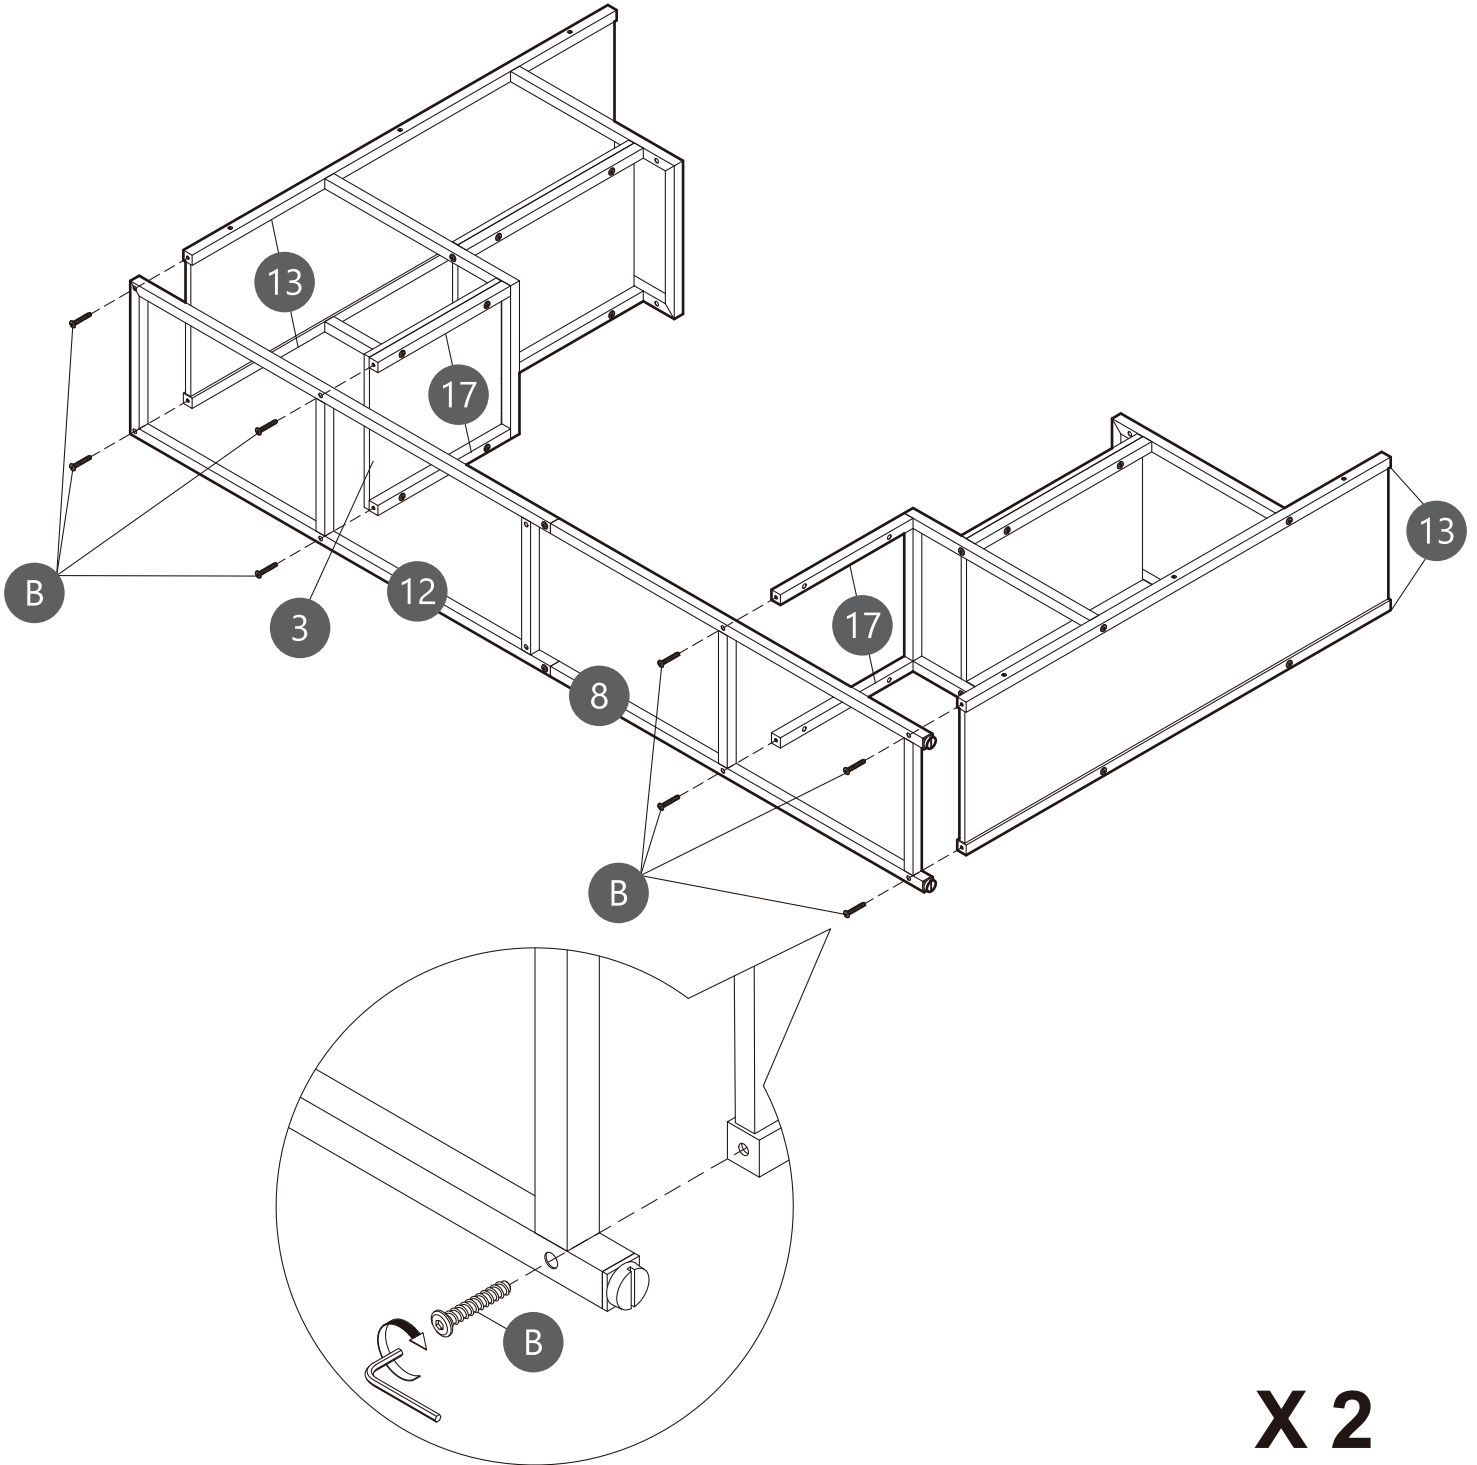
Assemble the top shelf and bottom shelf as below shown.
Lock screw (B) as below shown.





B		× 16
4#		× 1

Step 15

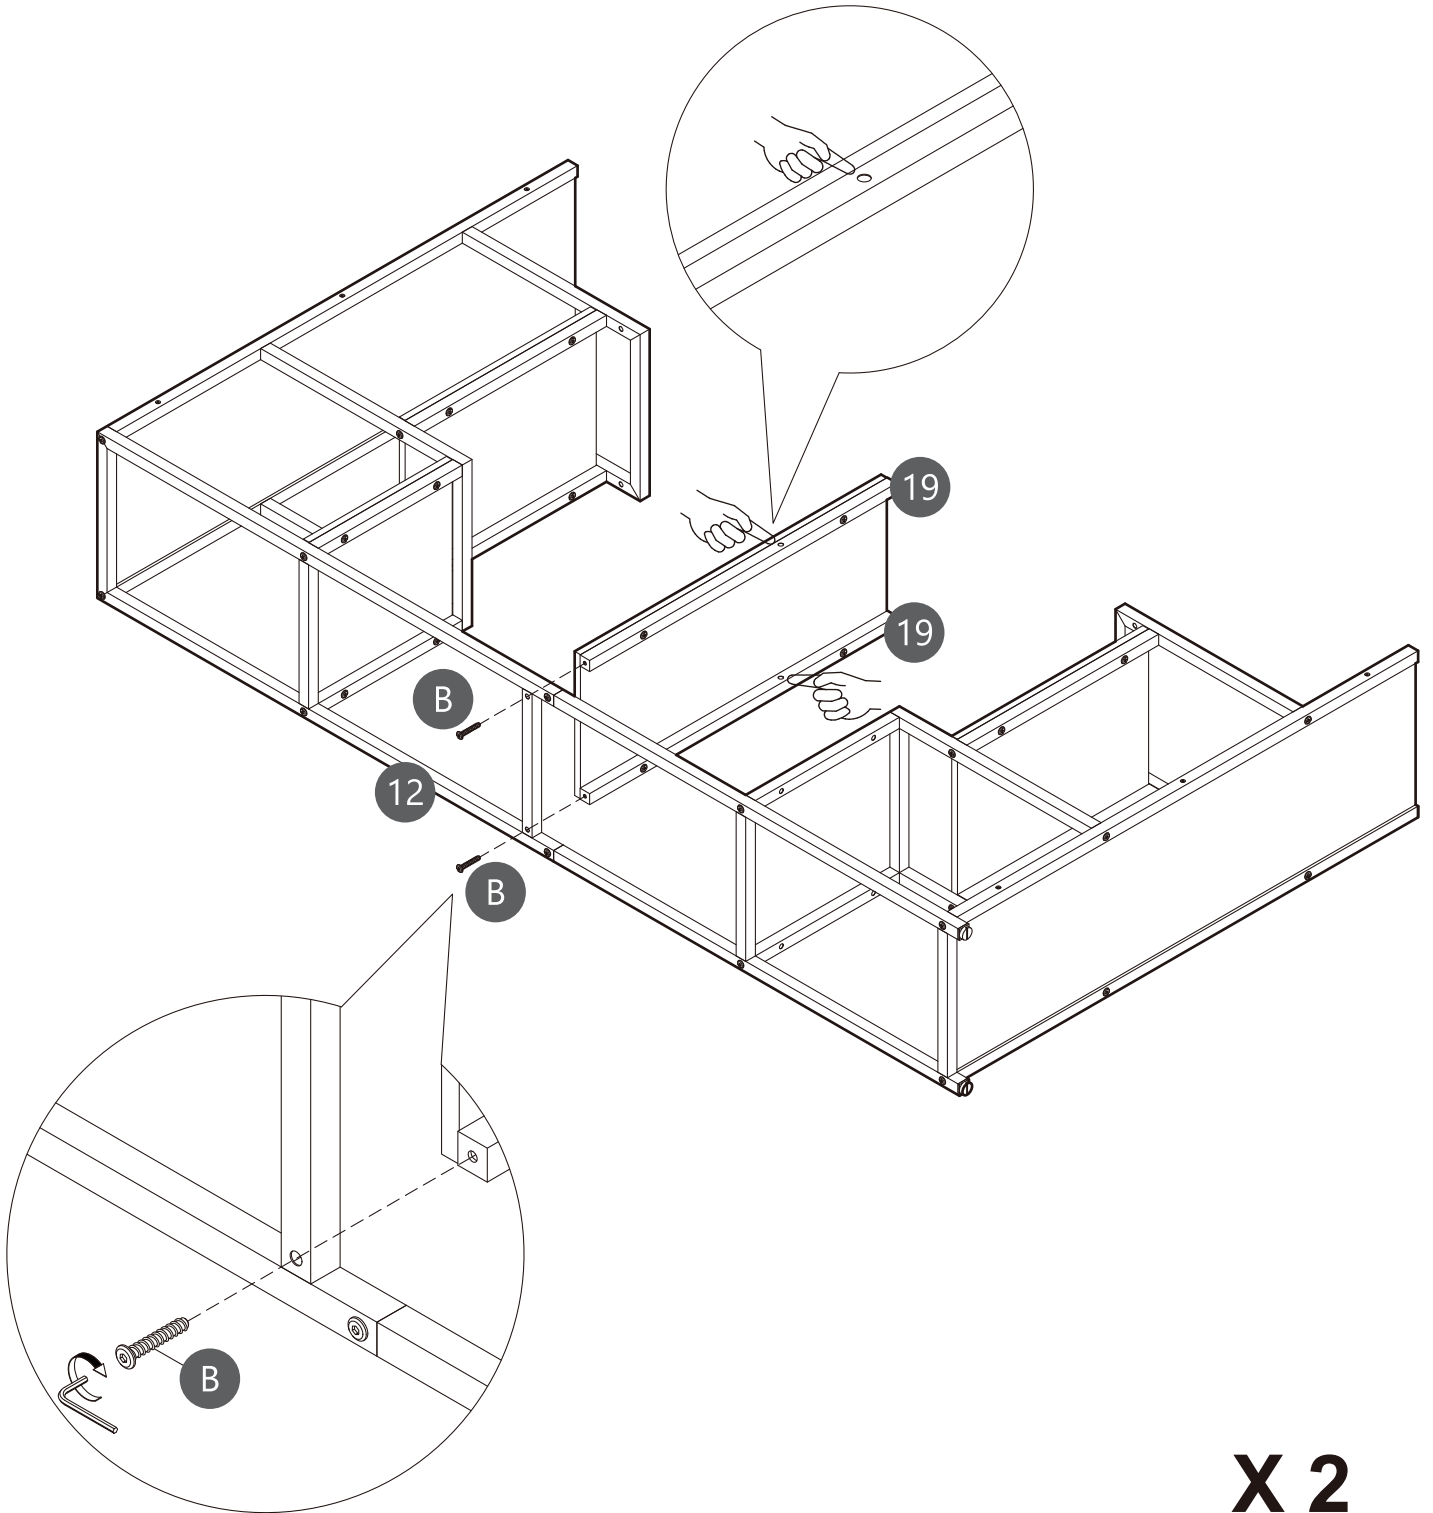Screw (B) to lock (19) on the (12) as below shown.




X 2



B		× 4
4#		× 1

Step 16

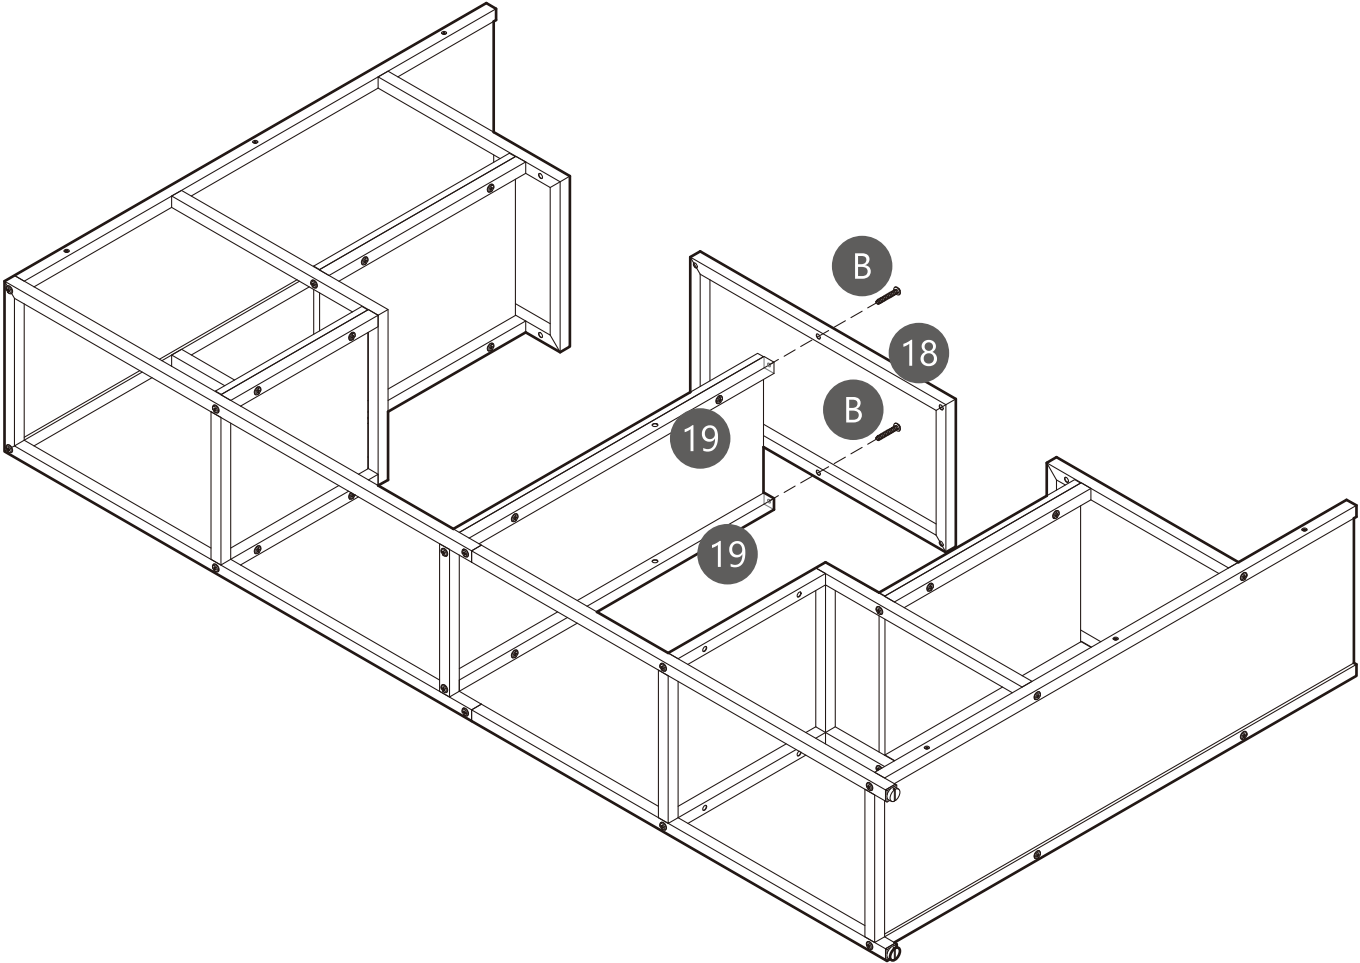Screw (B) to lock (18) on the (19) as below shown.




X 2



B		× 4
4#		× 1

Step 17

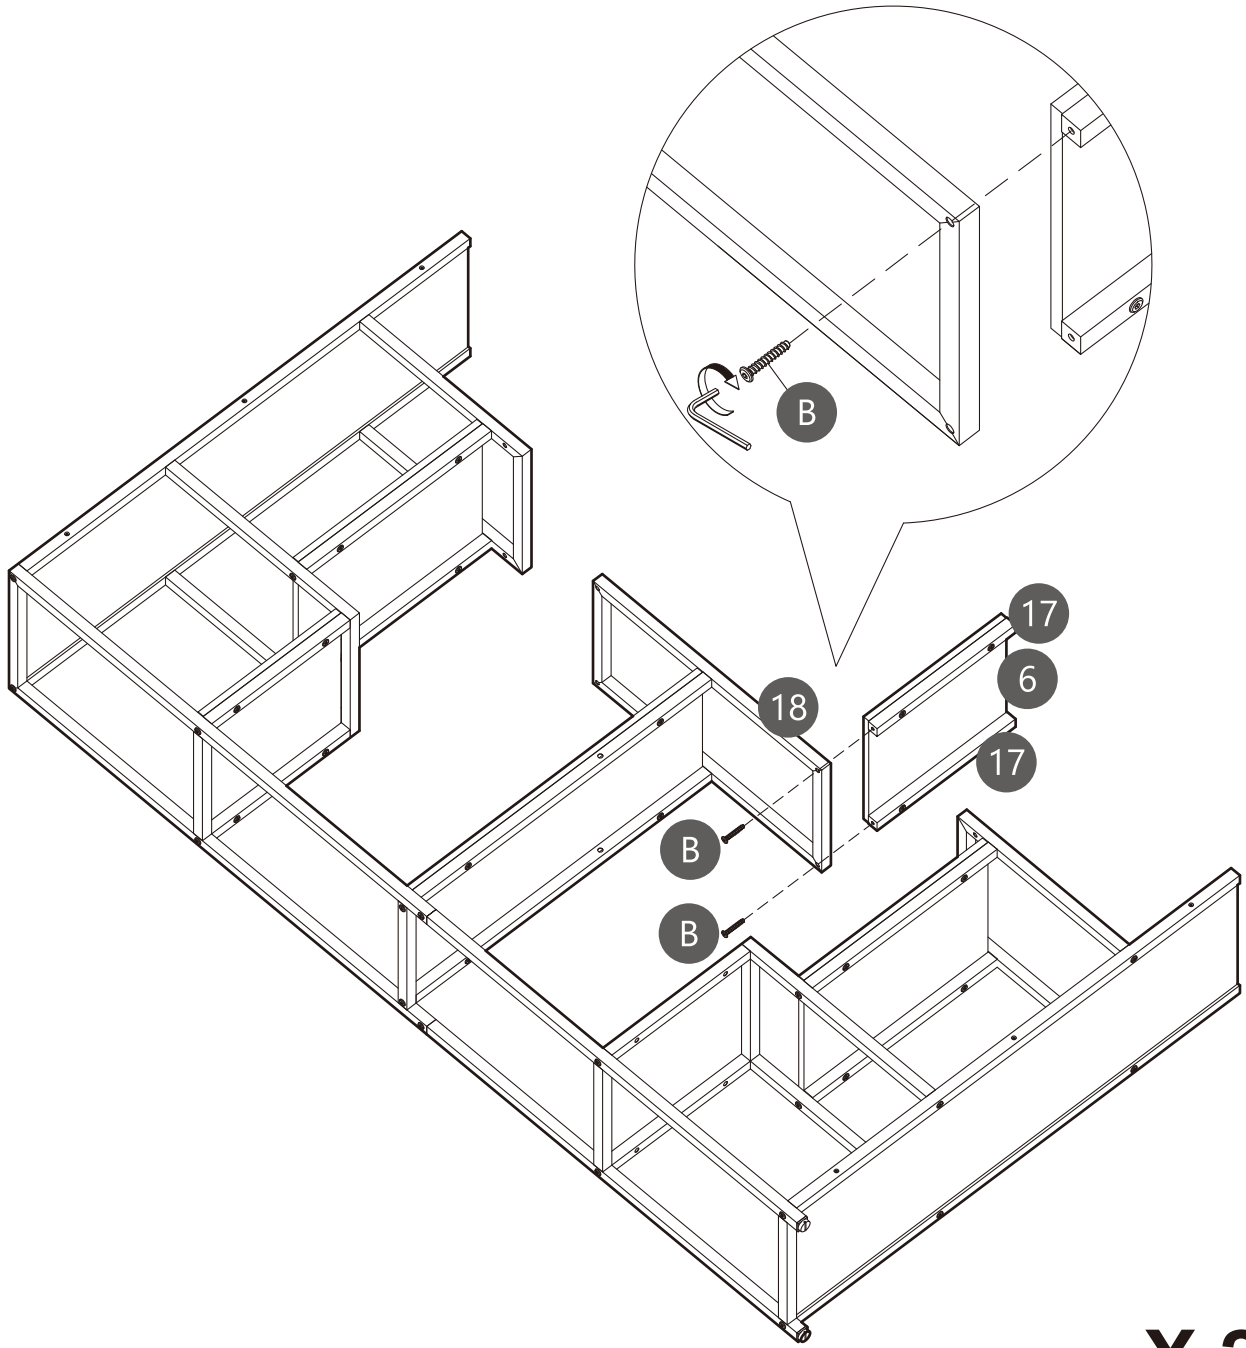Screw (B) to lock (6)&(7) on the (18) as below shown.




X 2

B		× 4
4#		× 1

Step 18

Screw (B) to lock (17) on the (18) as below shown.

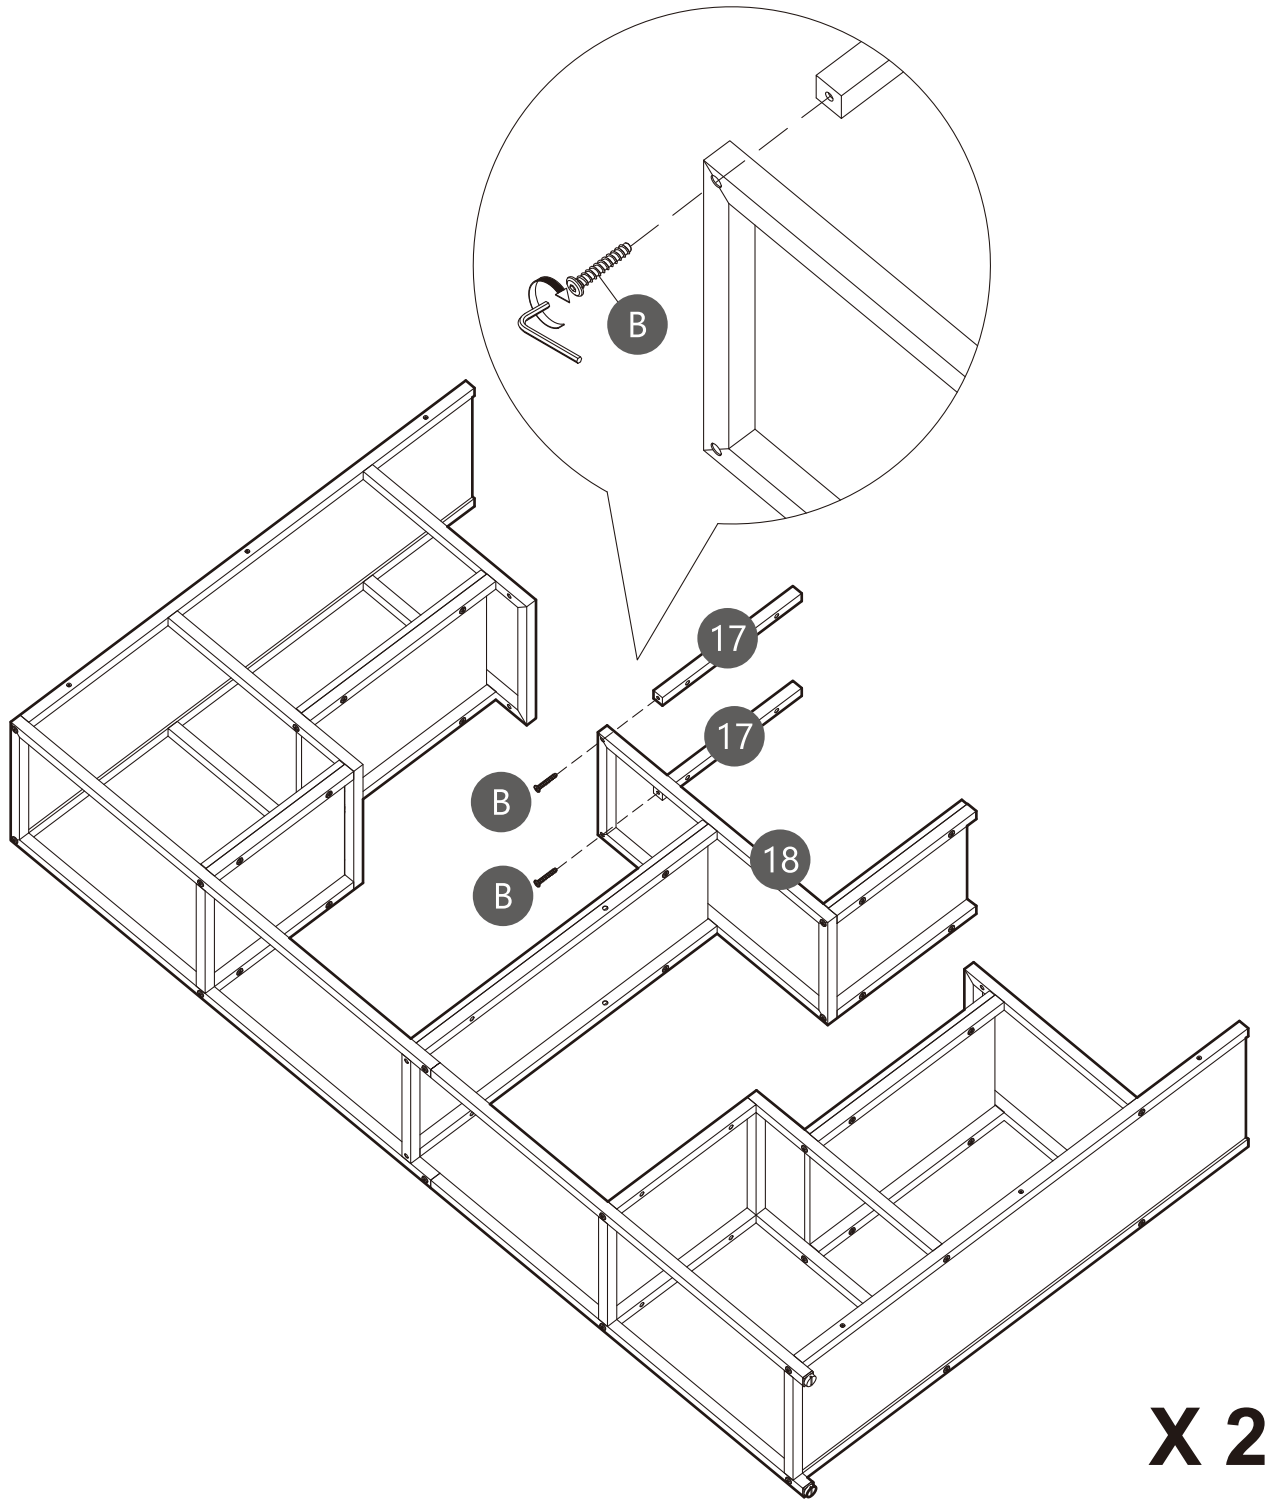


X 2



B		× 4
4#		× 1

Step 19

Assemble iron frame (10)&(11) as below shown.
Lock screw (B) as below shown.

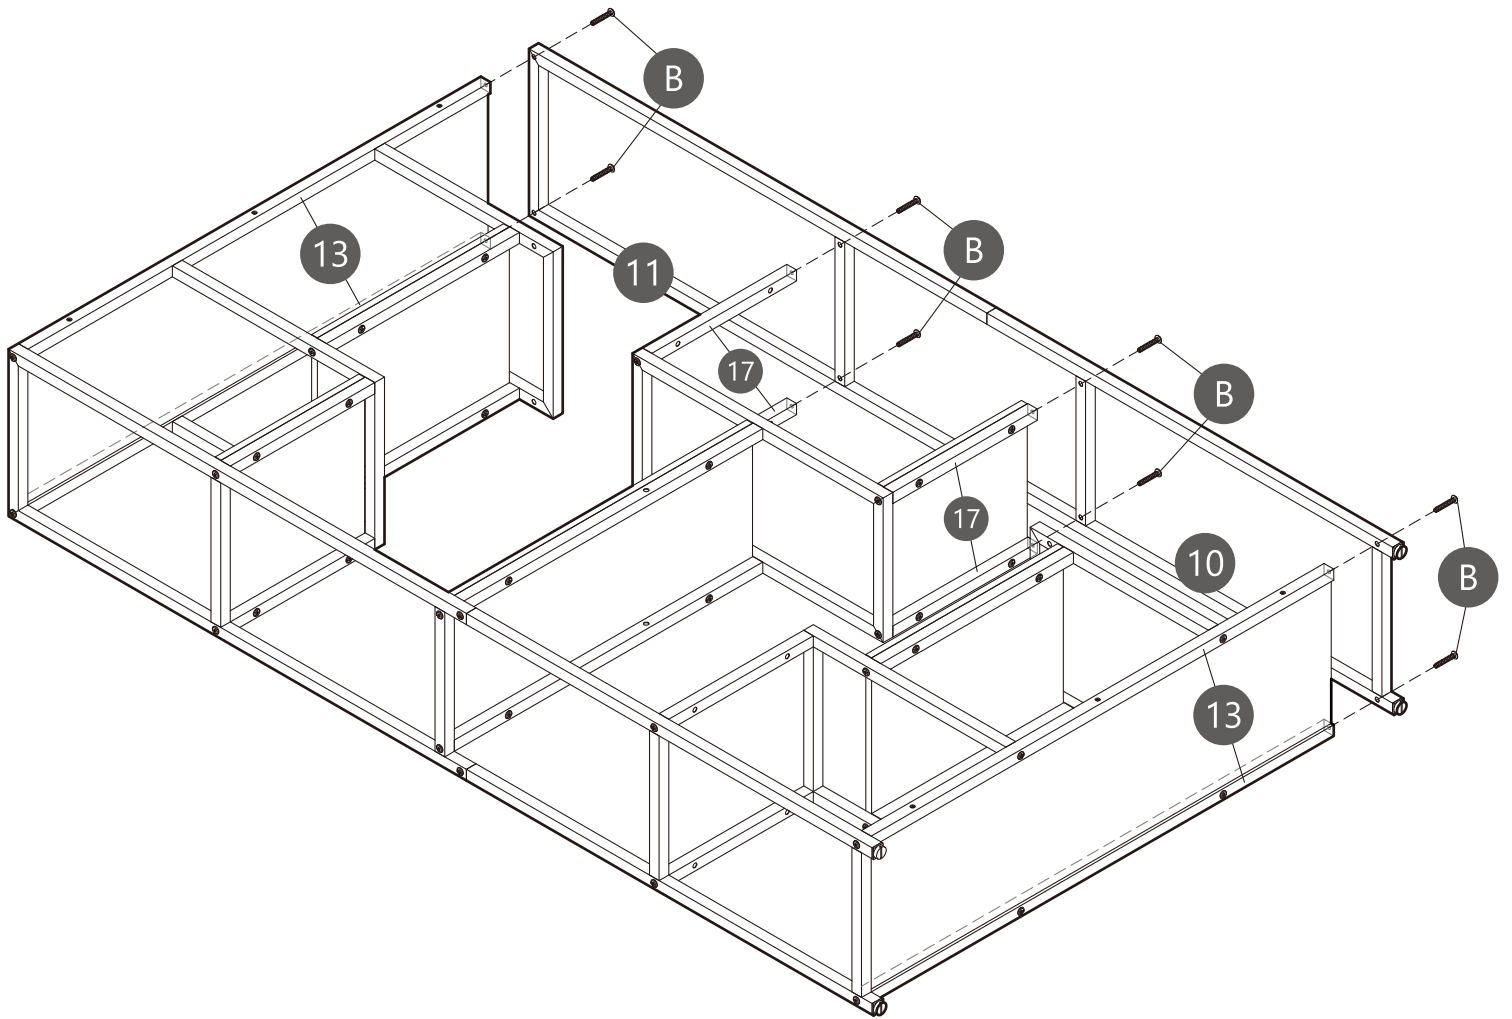




X 2

B		× 16
4#		× 1

Step 20

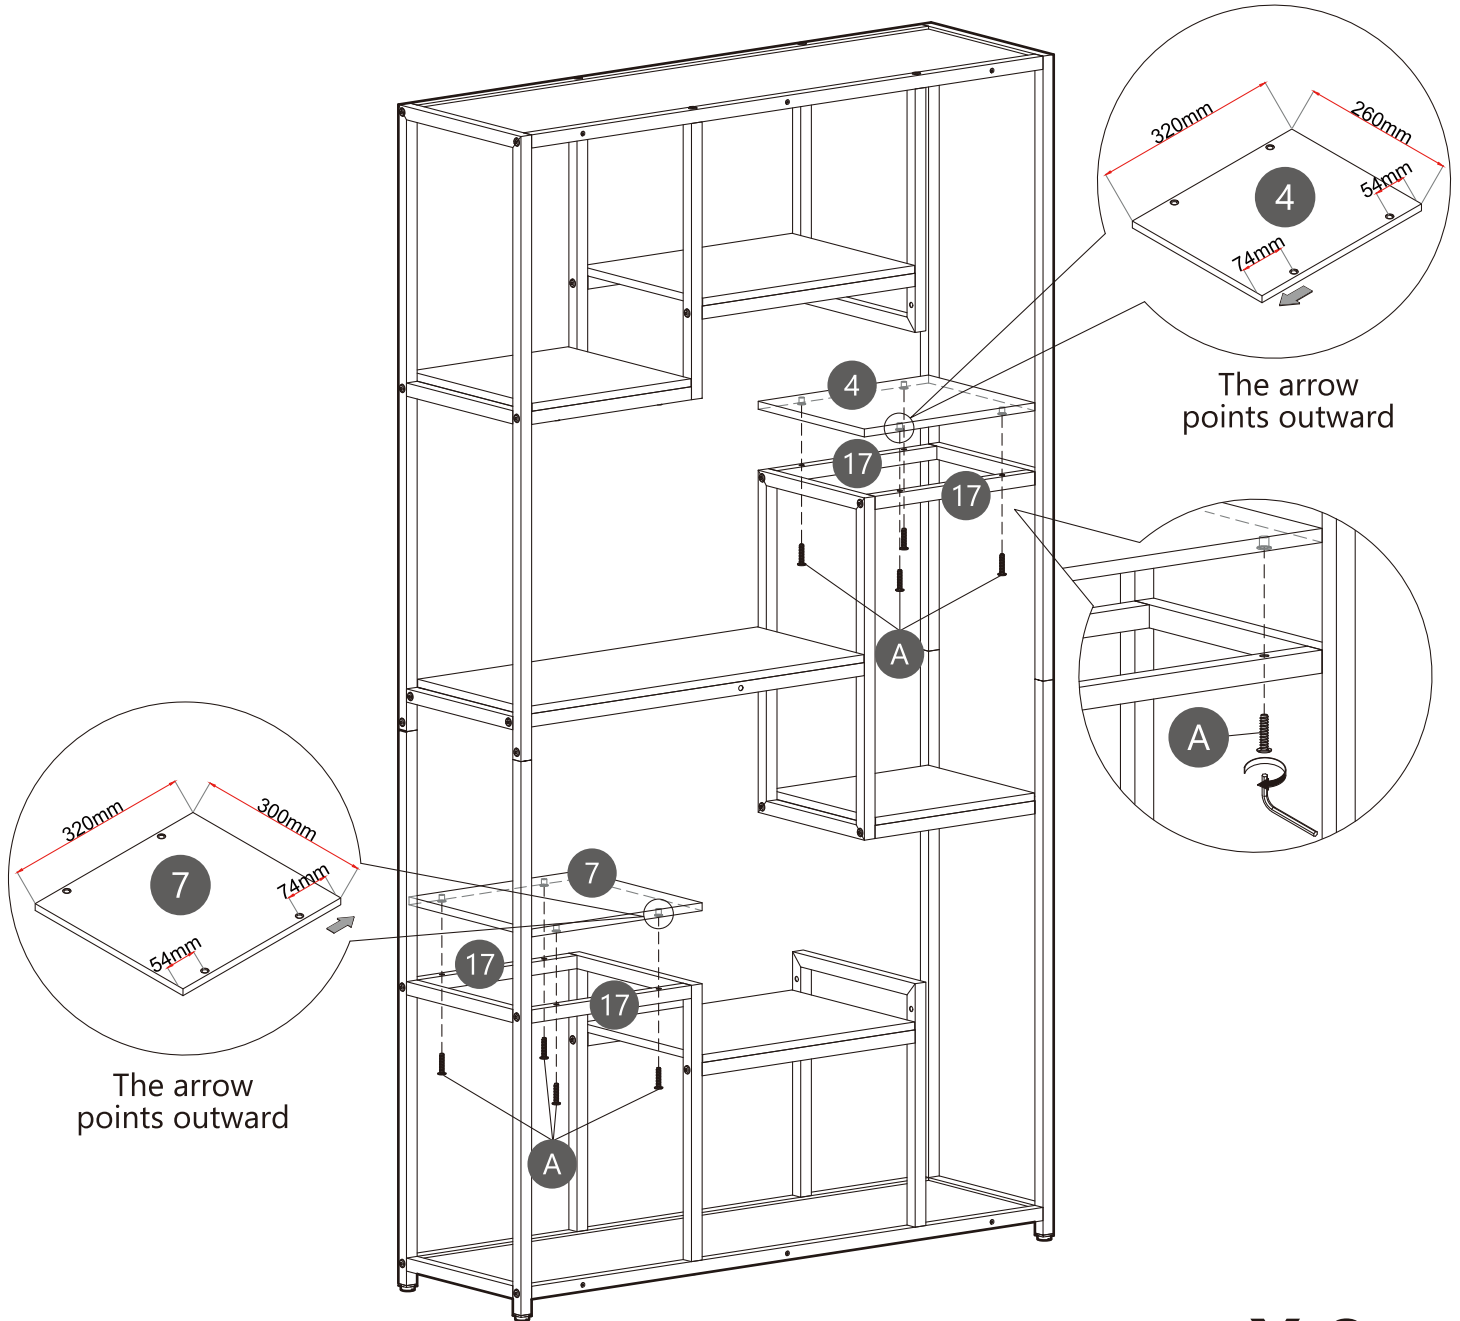
Put board(4) on the (17) as below shown.
Put board(7) on the (17) as below shown.
Lock screw (A) as below shown.







A		× 16
4#		× 1

Step 21

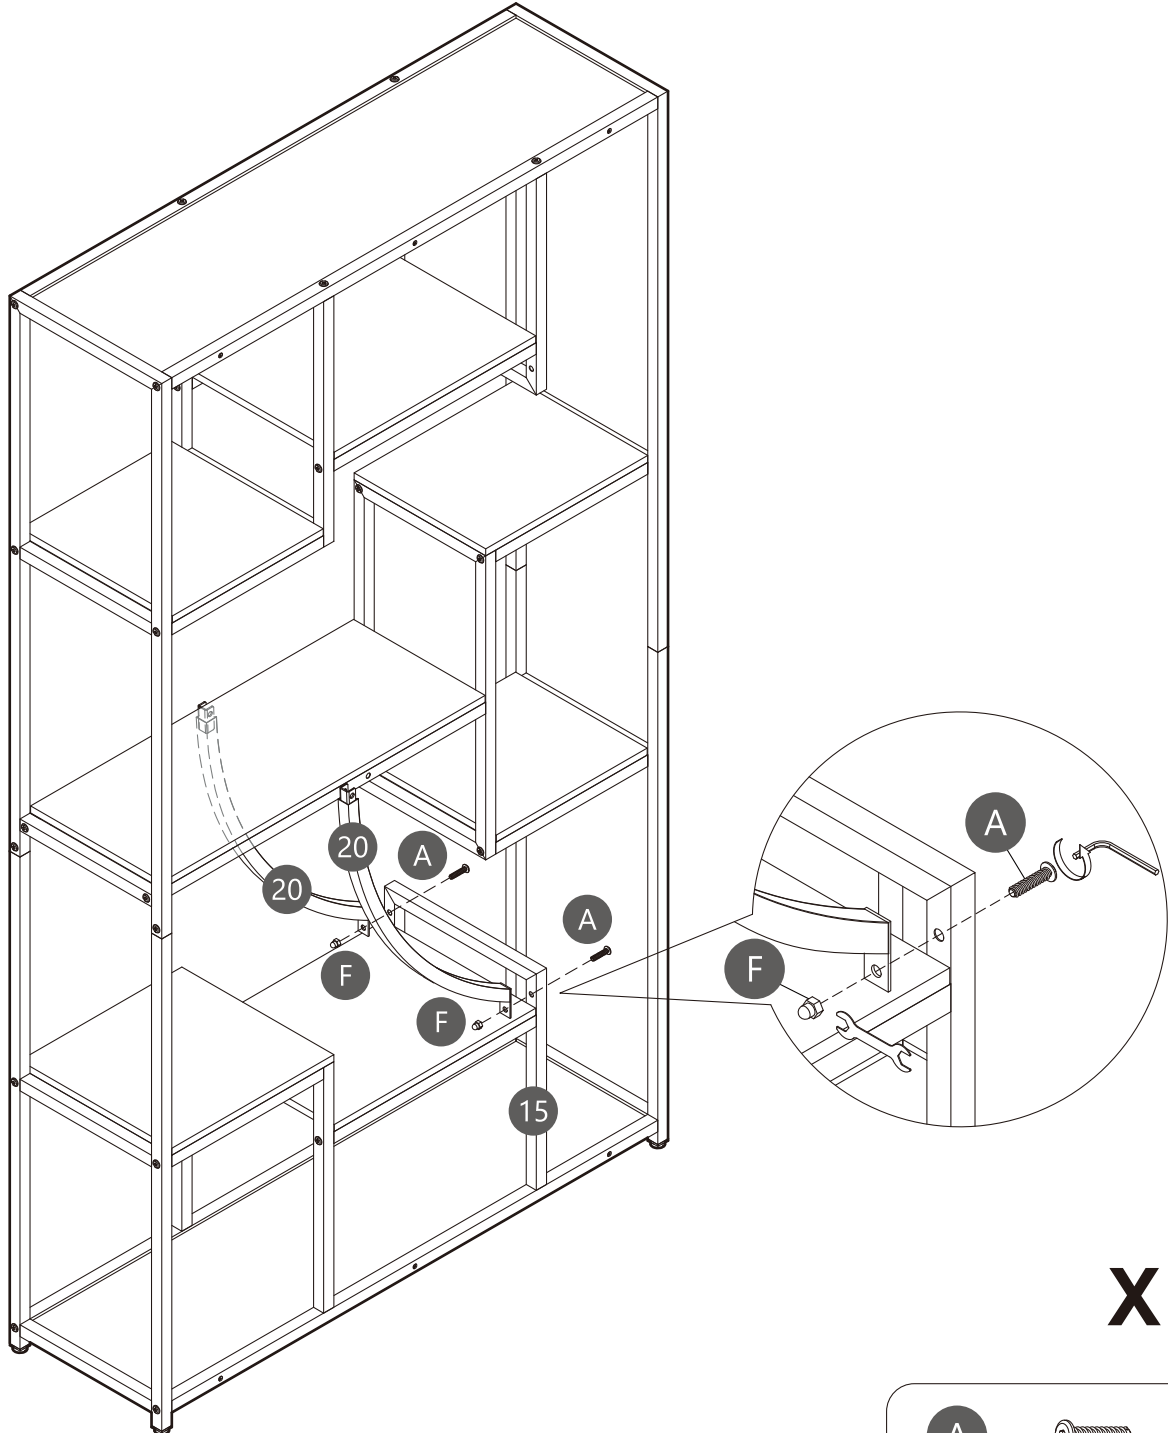Screw (A) & (F) to lock (20) on the (15) as below shown.




X 2

A		× 4
F		× 4
4#		× 1
		× 1

Step 22


Assemble (21) & (20) as below shown.

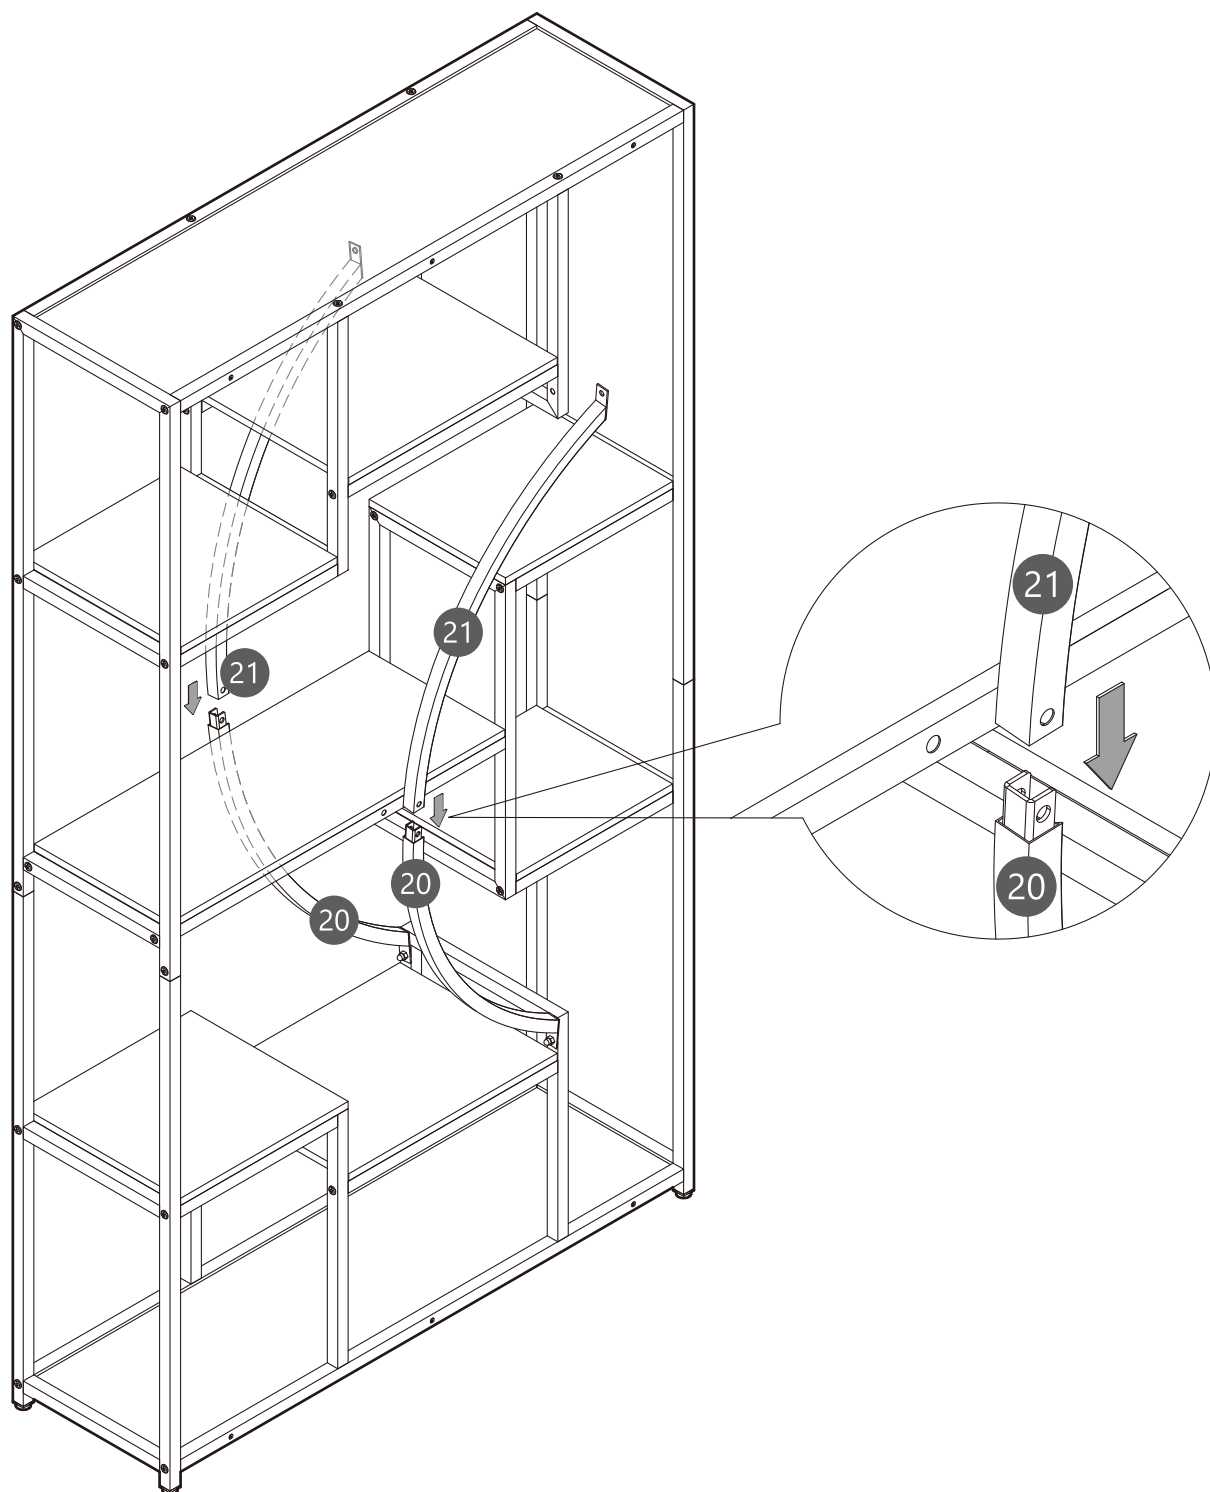





X 2

Step 23

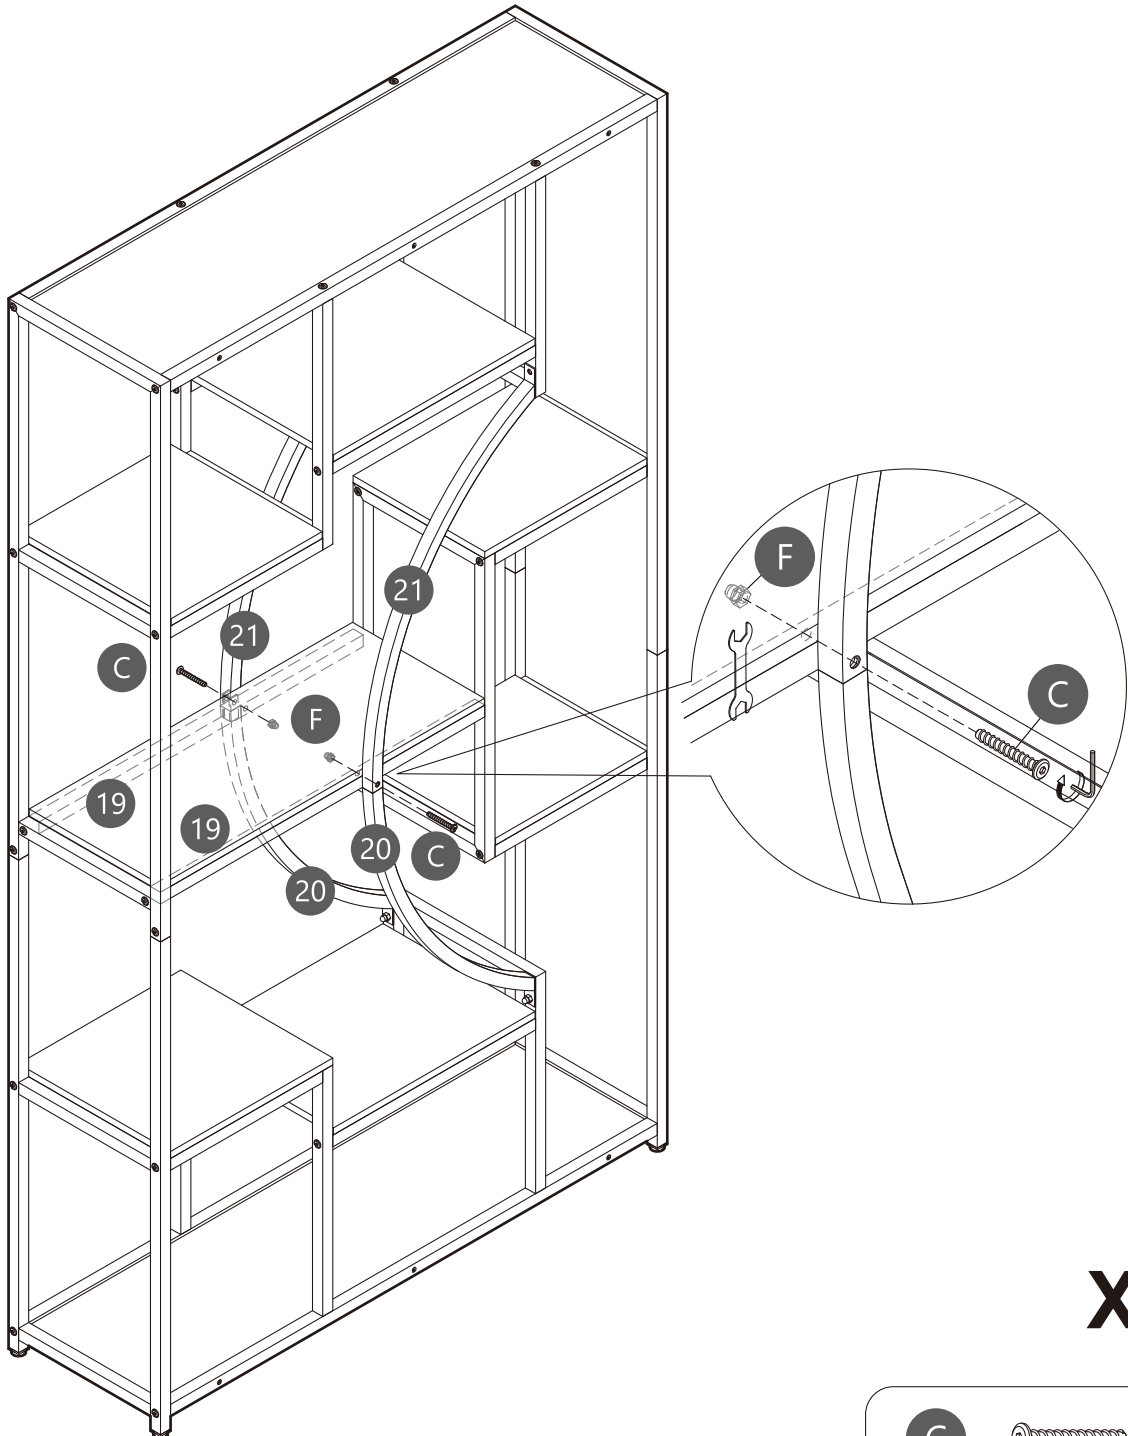Screw (C) & (F) to lock (19)&(20)&(21) as below shown.




X 2





C		× 4
F		× 4
4#		× 1
		× 1

Step 24

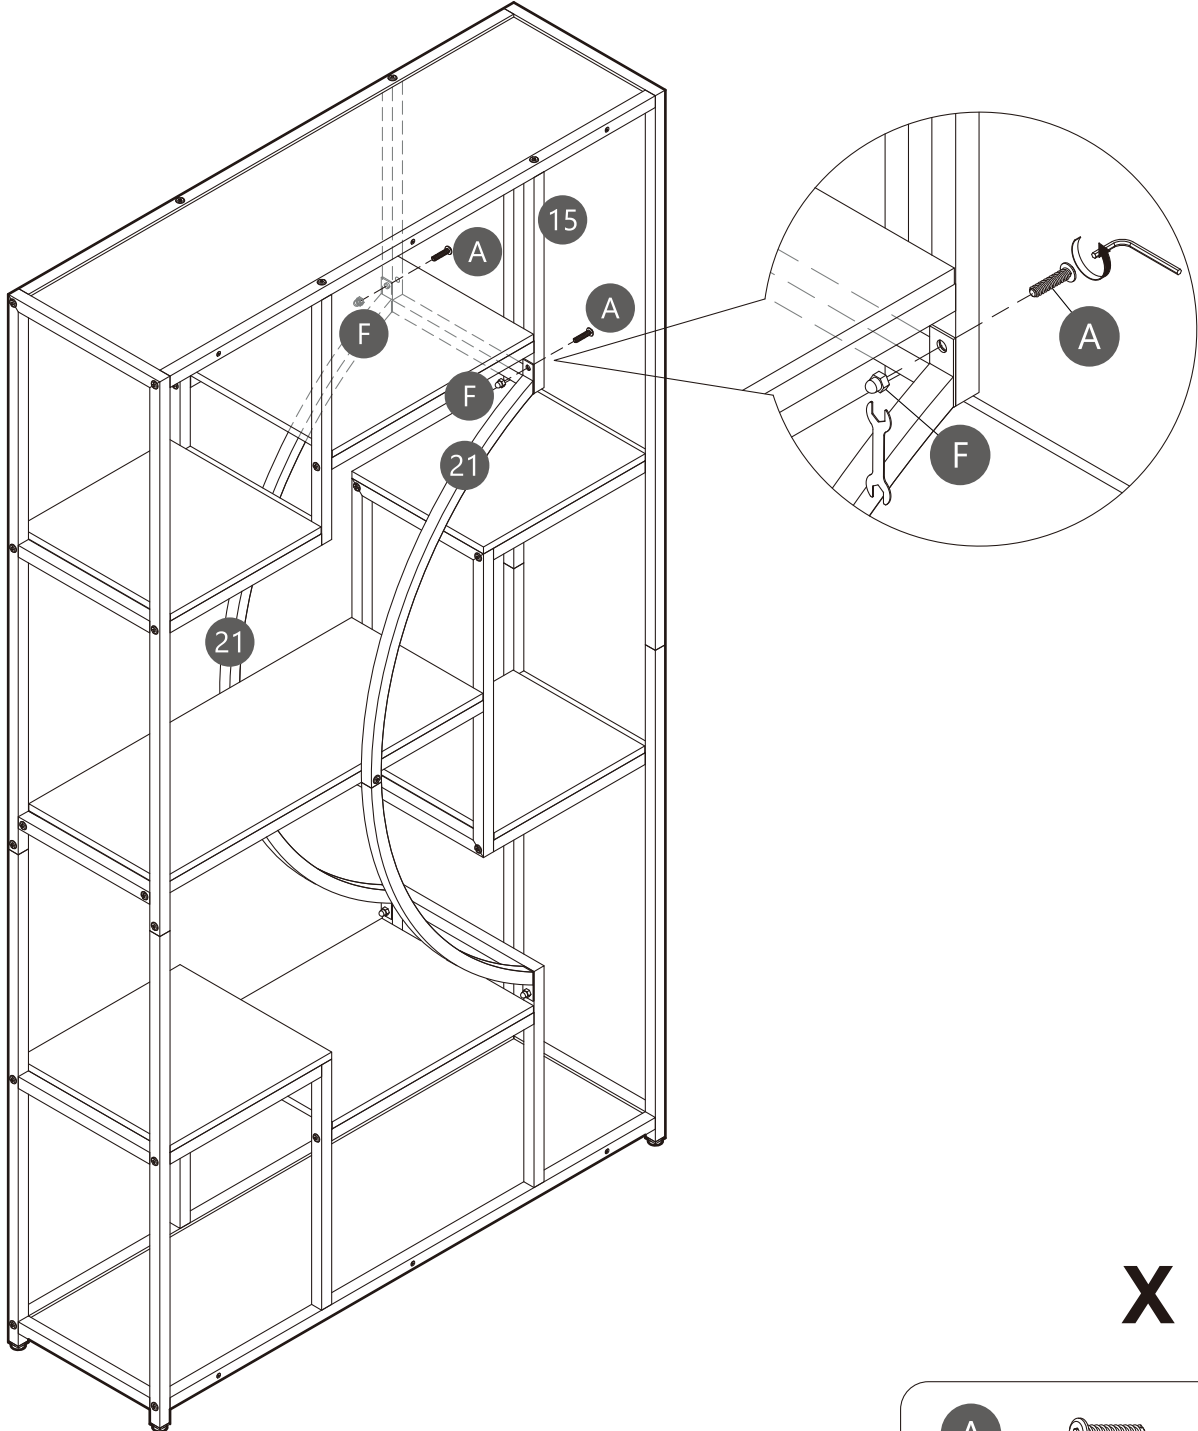Screw (A) to lock (15)&(21) as below shown.




X 2


A		× 4
F		× 4
4#		× 1
		× 1

Step 25



Assemble the Anti-tipping.

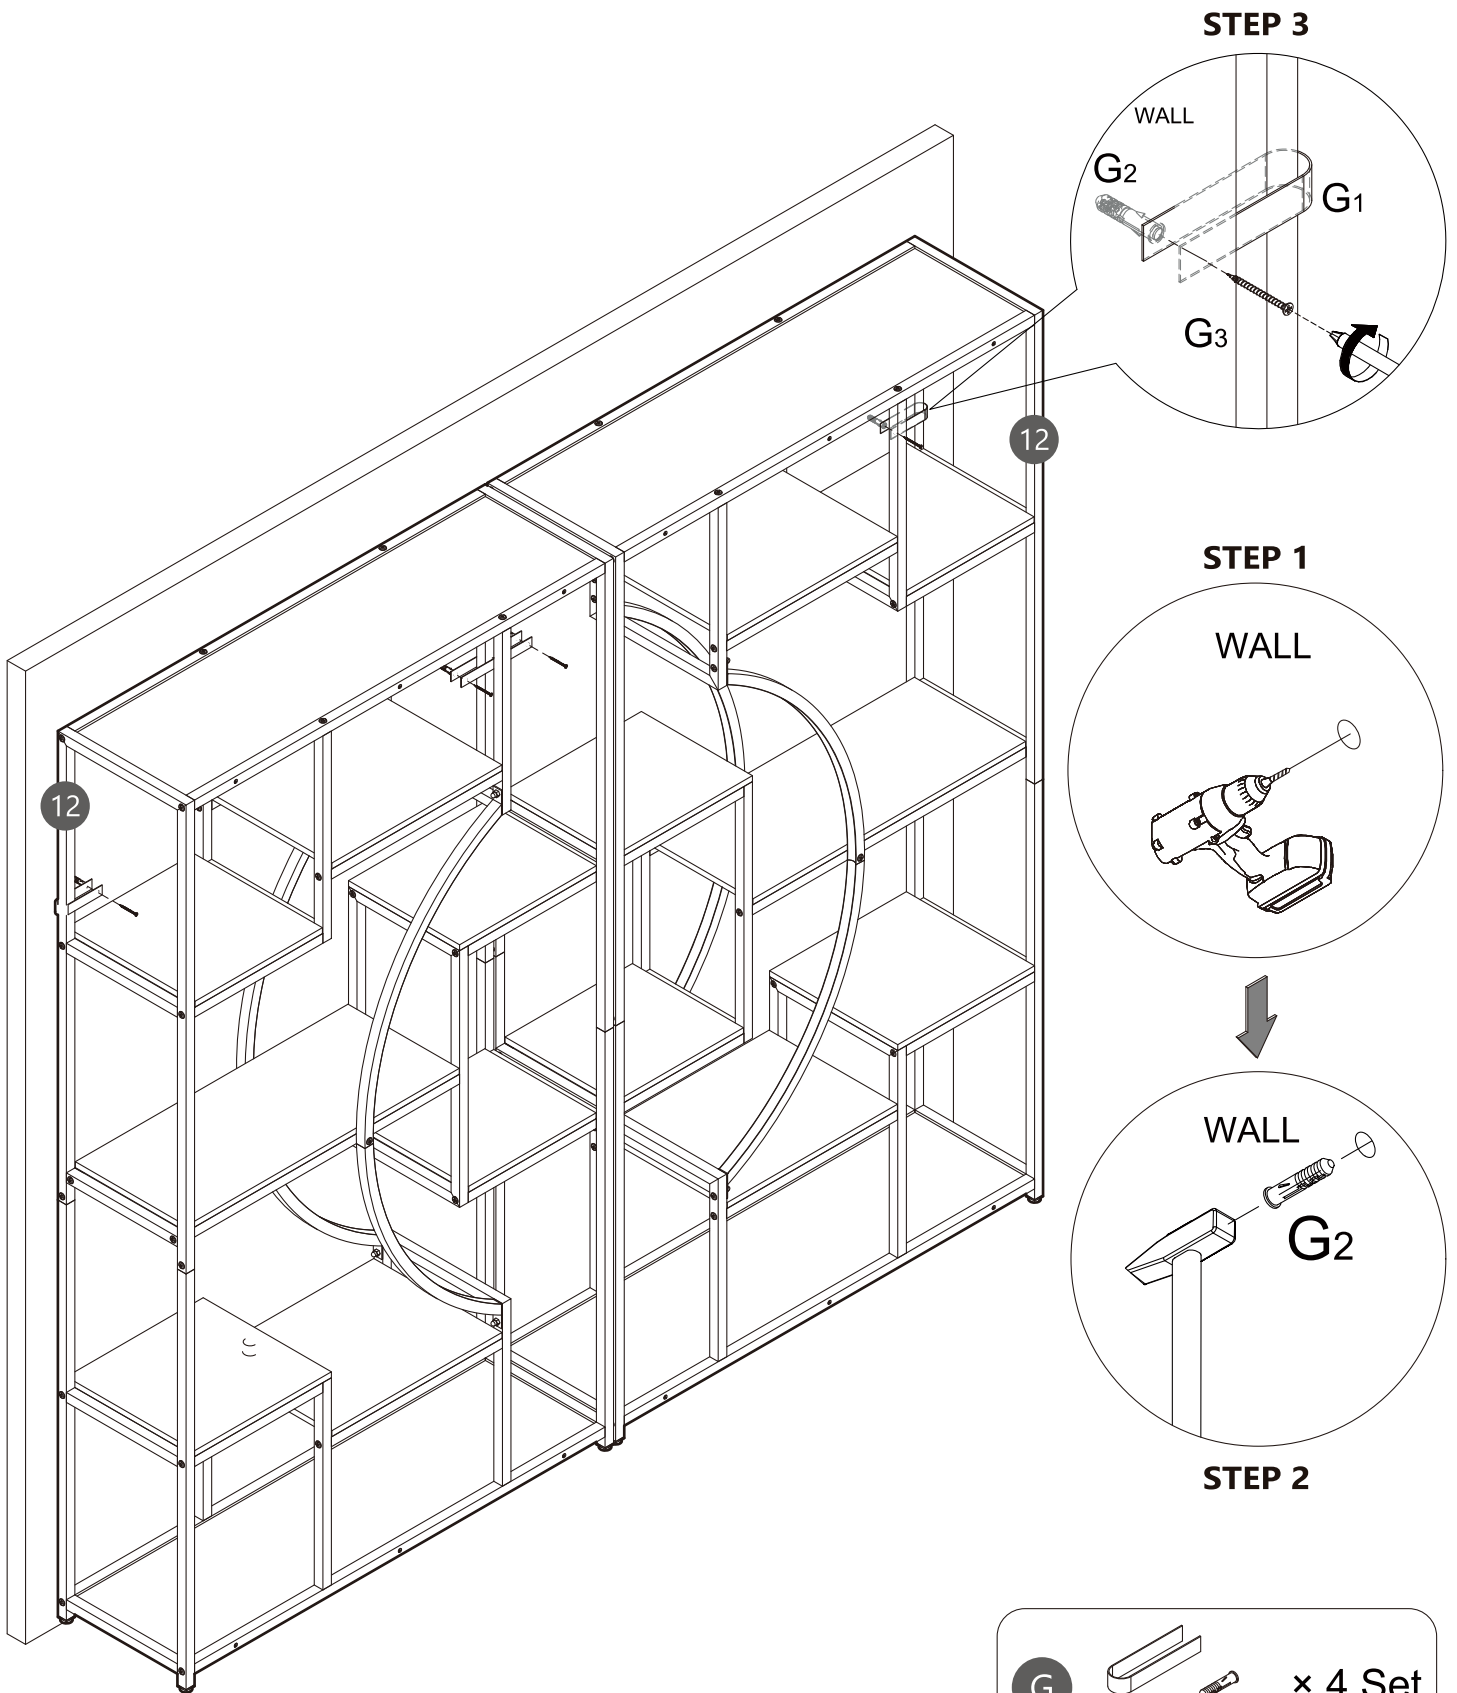

STEP 3

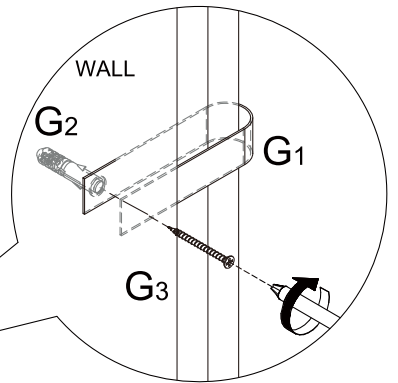

STEP 1

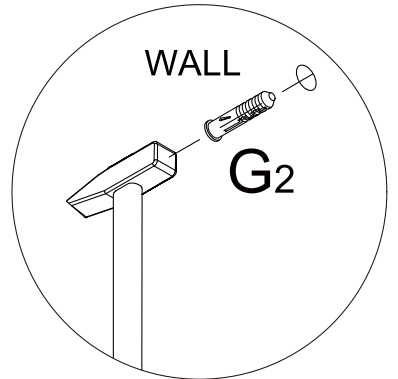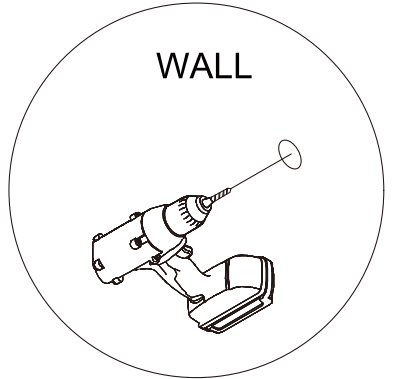

STEP 2

