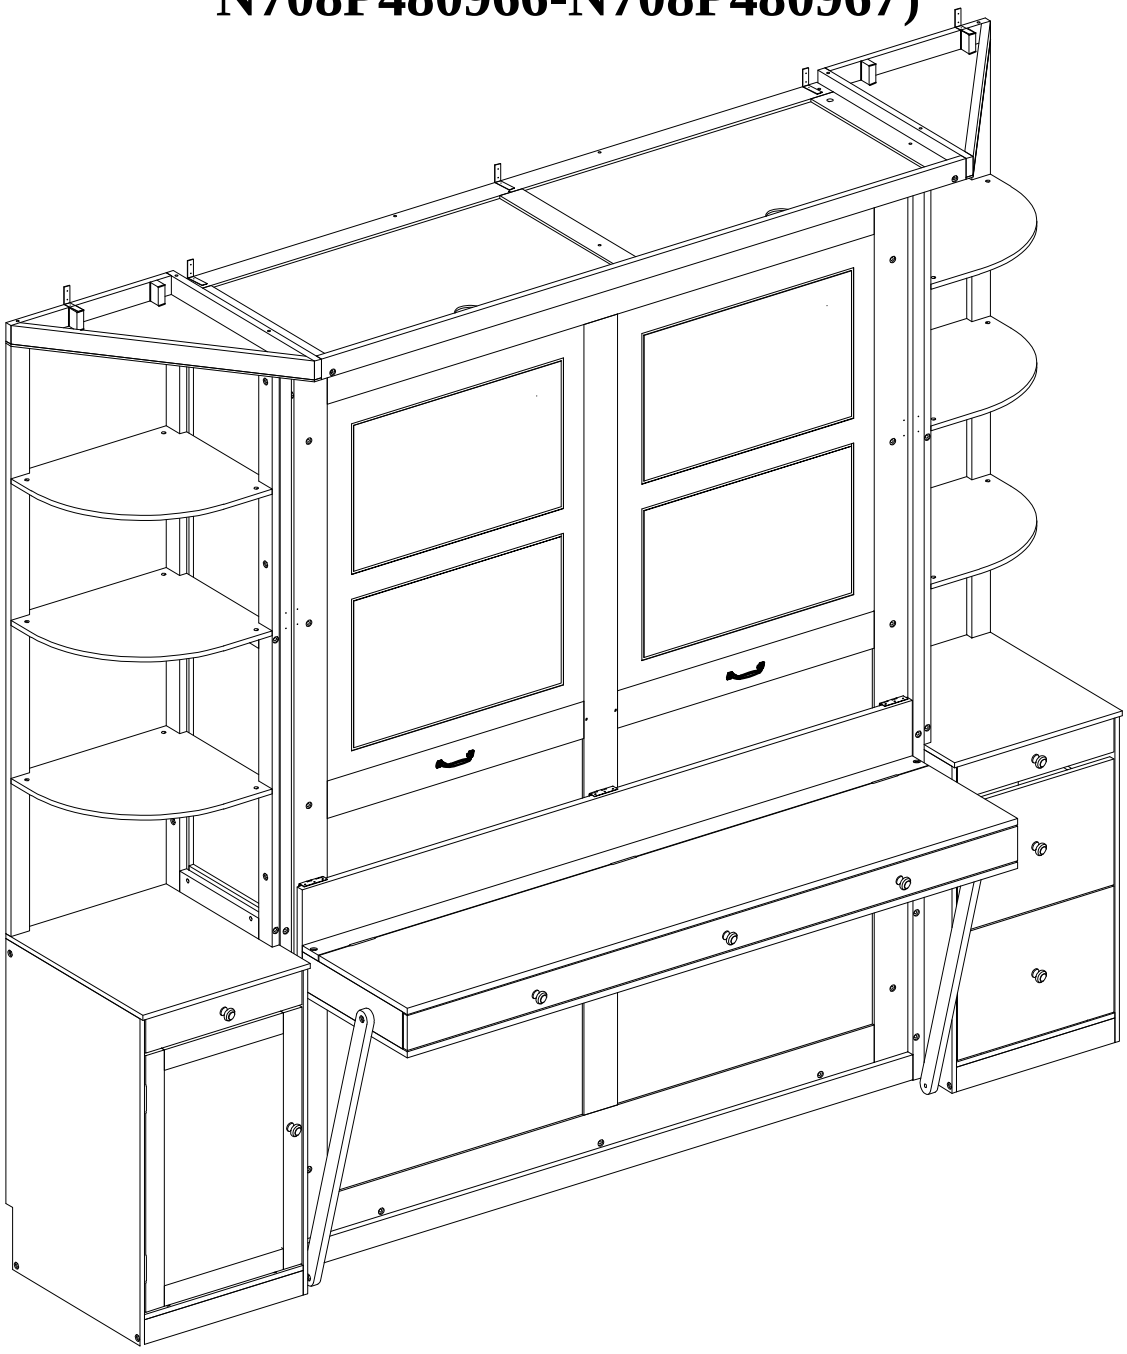
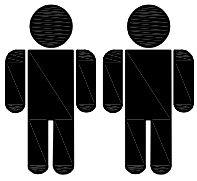
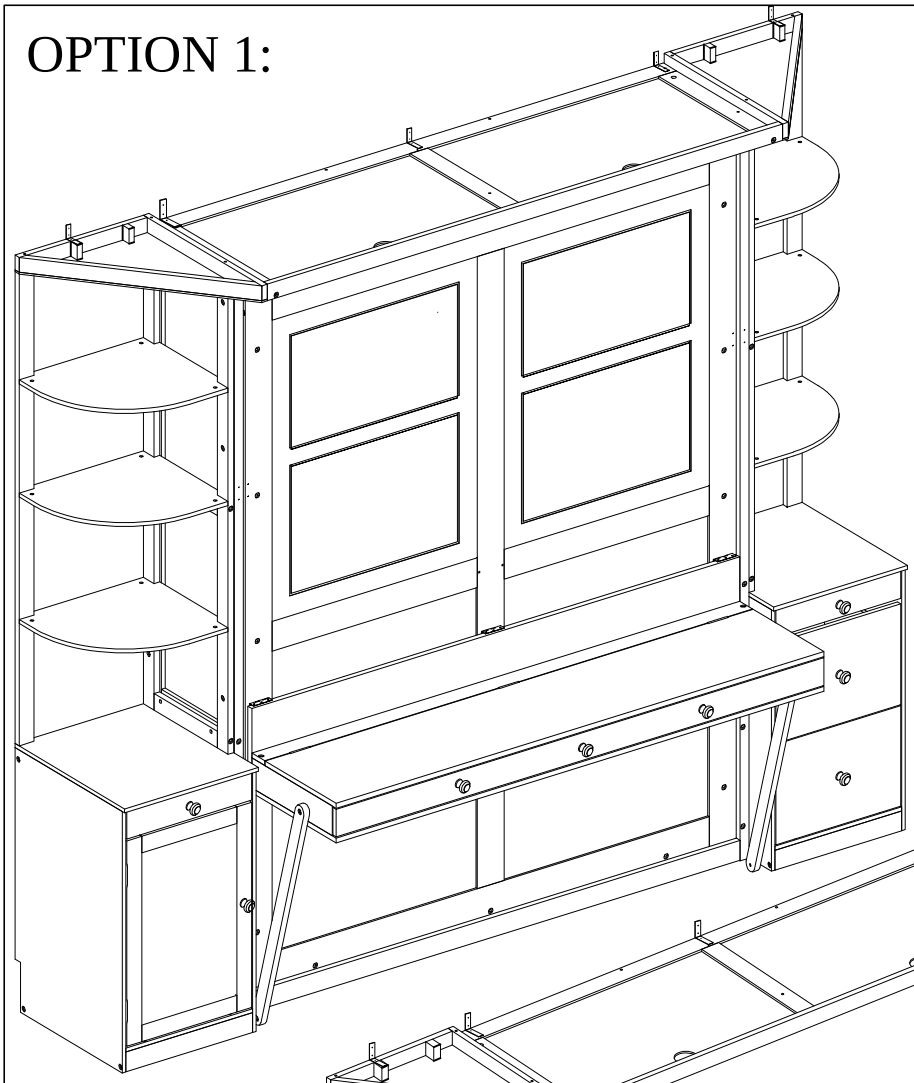
ASSEMBLY INSTRUCTION
SKU CODE: (N708P480964-N708P480965-N708P480966-N708P480967)
INSTRUCTION DE MONTAGE
CODE SKU: (N708P480964-N708P480965-N708P480966-N708P480967)






Four people are required to assemble and move this model.

OPTION 1:



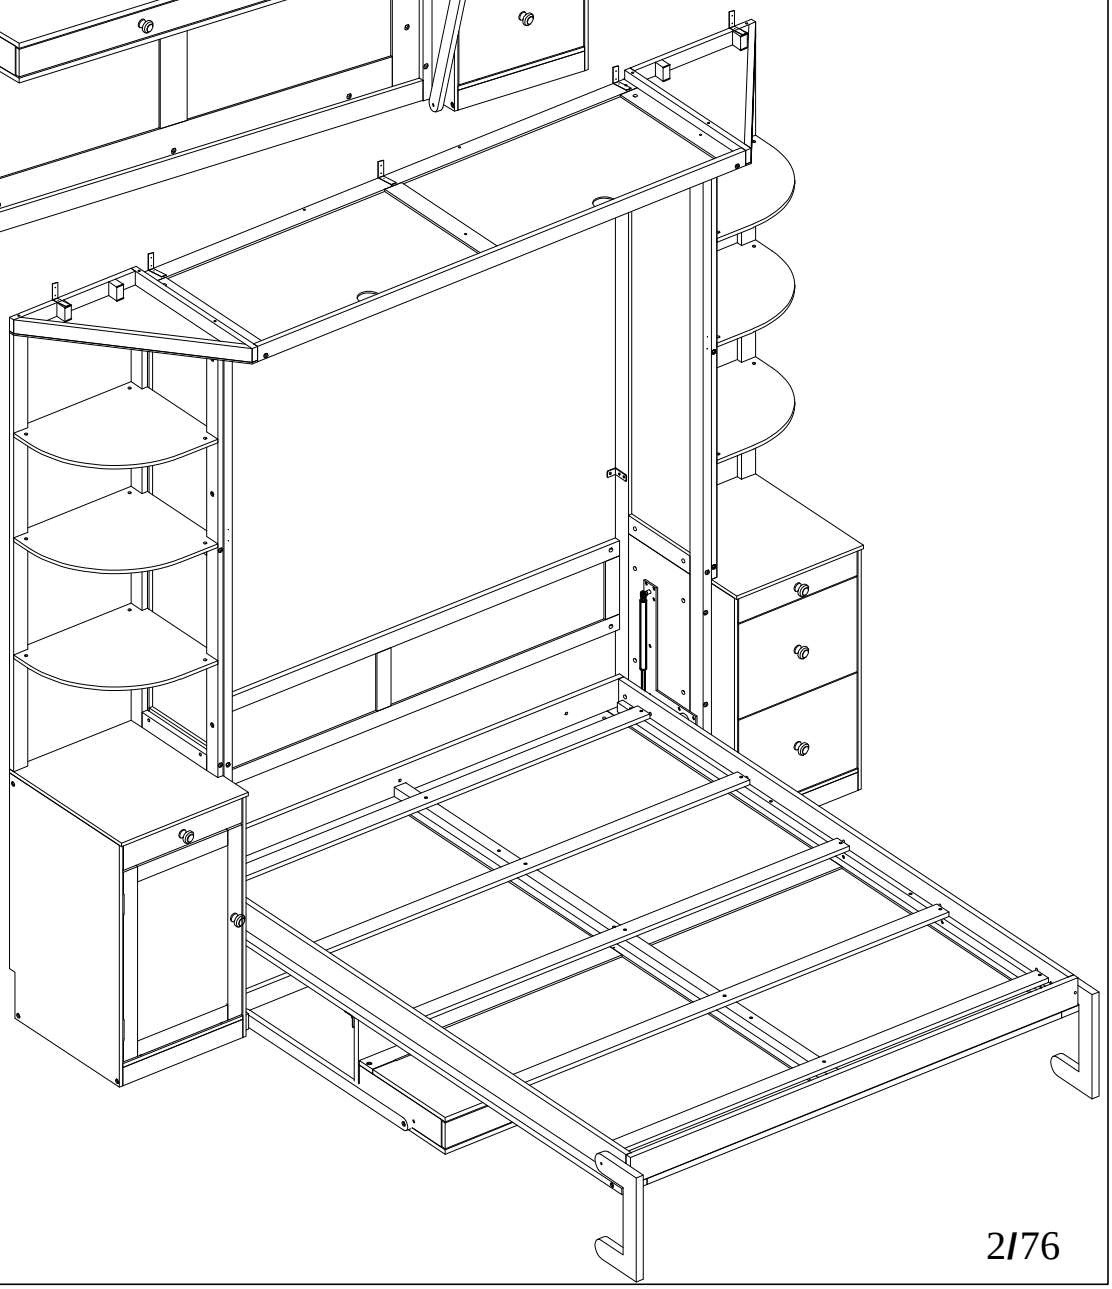OPTION 2:



⚠ SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.

⃠ ABSOLUTELY FORBIDDEN HARDWARE



PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL

HOW TO IDENTIFY



KNOCK ON A HOLLOW WALL



STUD FINDER TOOL (MITS

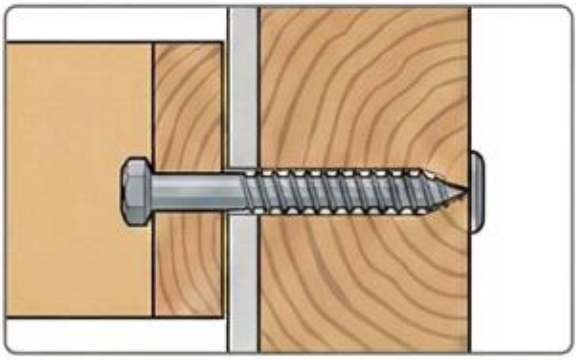


STUDS SPACED IS 16" STUD

REQUIRED HARDWARE



HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)



MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY



KNOCK ON A SOLID WALL

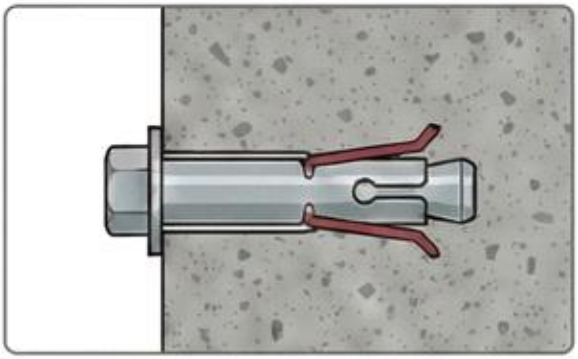


DRILL BIT CREATES GREY/RED DUST

REQUIRED HARDWARE



ALL-METAL EXPANSION BOLTS (MIN. 5/32" DIA., 2.5" LONG)



CLEAN HOLE OF DUST. DO NOT USE PLASTIC.

☑ FINAL SAFETY CHECKLIST

- ☑ VERIFY STUD CENTER BEFORE DRILLING
- ☑ ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)
- ☑ PERFORM PULL TEST BEFORE MATTRESS LOAD
- ☑ AVOID HIDDEN WIRES/PIPES BEFORE DRILLING
- ☑ REGULARLY INSPECT AND MAINTAIN WALL ANCHORS
- ☑ CONSULT A PROFESSIONAL FOR WALL ASSESSMENT AND OPTIMAL HARDWARE; CUSTOMER ASSUMES ALL INSTALLATION LIABILITY

IMPORTANT INFORMATION PACKAGE.

THIS INFORMATION PACKAGE CONTAINS WARNING AND PRODUCT SAFETY INFORMATION. DO NOT PROCEED WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.

These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

WARNING.

IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.
For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.

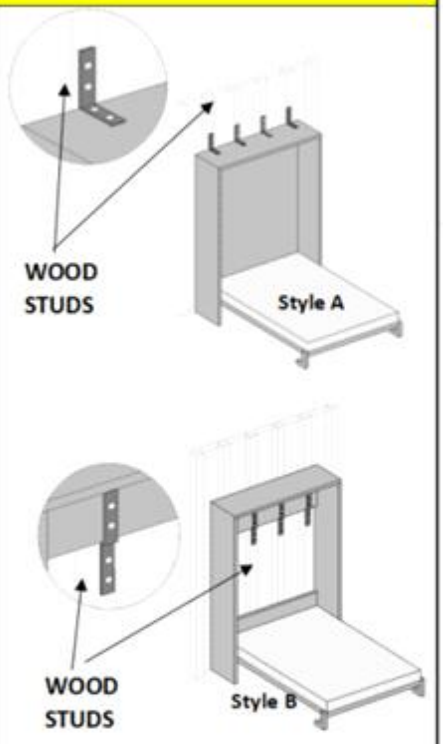
Seek Certified Professional Consultant / Contractors for their Services to:
1.) DETERMINE the WALL Type in Your Home;
2.) PRECISE HARDWARE that suits to the Wall Type in Your Home;
3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home;
4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached.

The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls and hardware fittings suitable for fixing on CONCRETE SOLID walls. Please select the correct wall-fixing hardware. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS or CONCRETE SOLID WALLS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material.

Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attchment of the Murphy Bed to the Wall.


FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.

SAFETY PRECAUTION :
1.) **MAXIMUM Mattress Weight** suited to your Murphy Bed : 77 lbs (35 kg);
MAXIMUM mattress thickness: 8 **inches (** 20 **cm);**
2.) **ENSURE ADULTS ONLY** throughout the entire assembly and attachment.
3.) **KEEP ALL Children, Non-Ambulatory persons and Pets** at bay during the entire assembly and attachment.



WOOD STUDS walls - Locking wall illustration

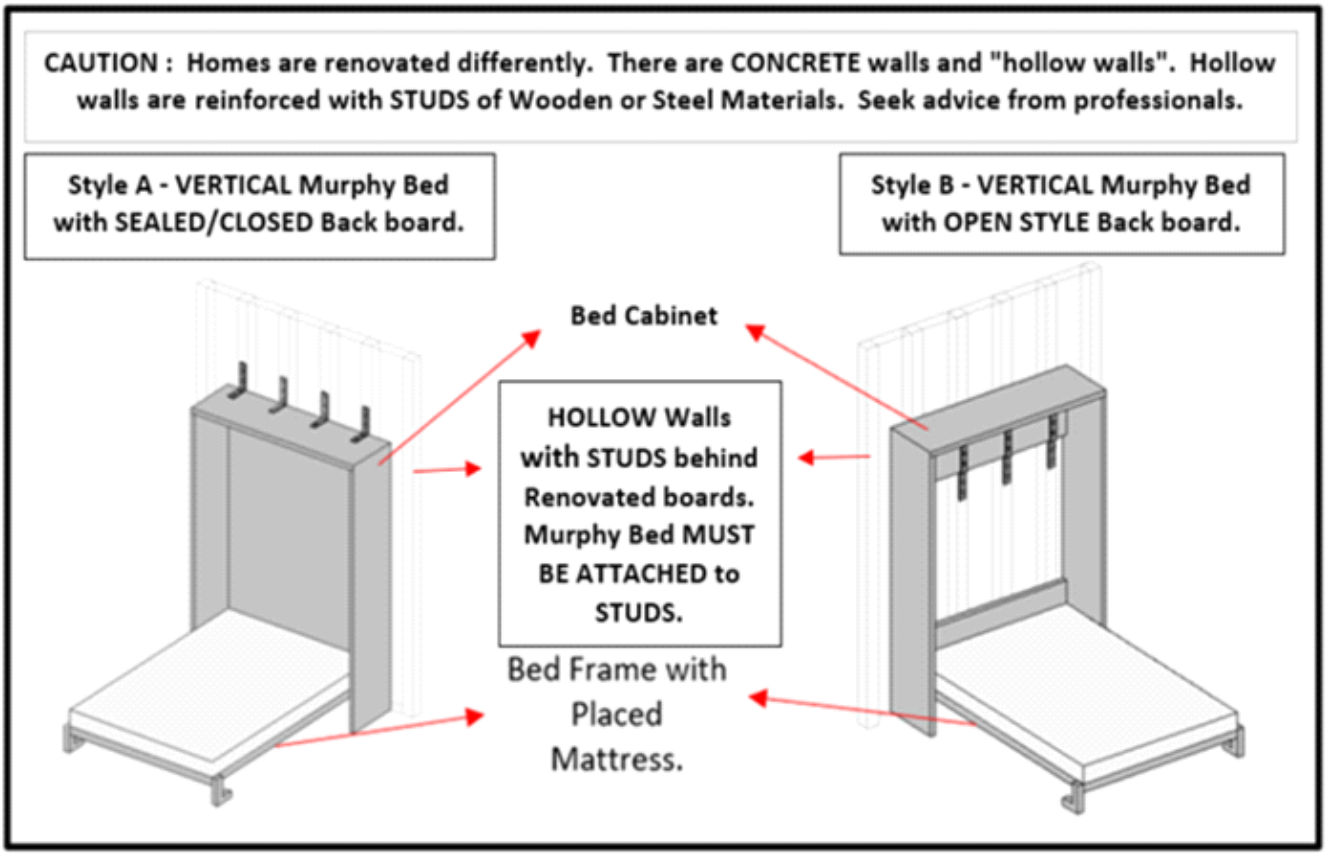LINE ART for Reference only and
NOT DRAWN TO SCALE.



B. SAFETY REMINDERS. MARKINGS in WALL - WHERE TO ATTACH the MURPHY BED.

Irrespective of the wall type, whether **Solid Concrete Walls** OR **Decorative Walls with WOODEN Studs** OR **Decorative Walls with Metal Studs**, ensure that

a. **) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.**
b. **) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.**
c. **) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.**

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality - you **MUST READ** through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) **There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.**

2.) **CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.**

3.) **PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly**. **Ensure at least 3 (three) ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.**

4.) **CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely at bay**.

5.) SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.

***. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and /or Pets do not play or ingest these.**

6.) This Murphy Bed is intended for ADULT USE ONLY.

7.) This Murphy Bed is delivered with pre-installed hardware for the wood studs and the concrete solid wall - please choose the appropriate hardware according to the type of the wall.

8.) **Your Home's Wall Type -** Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

a.) **SEEK and CONSULT Professional Services** to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;

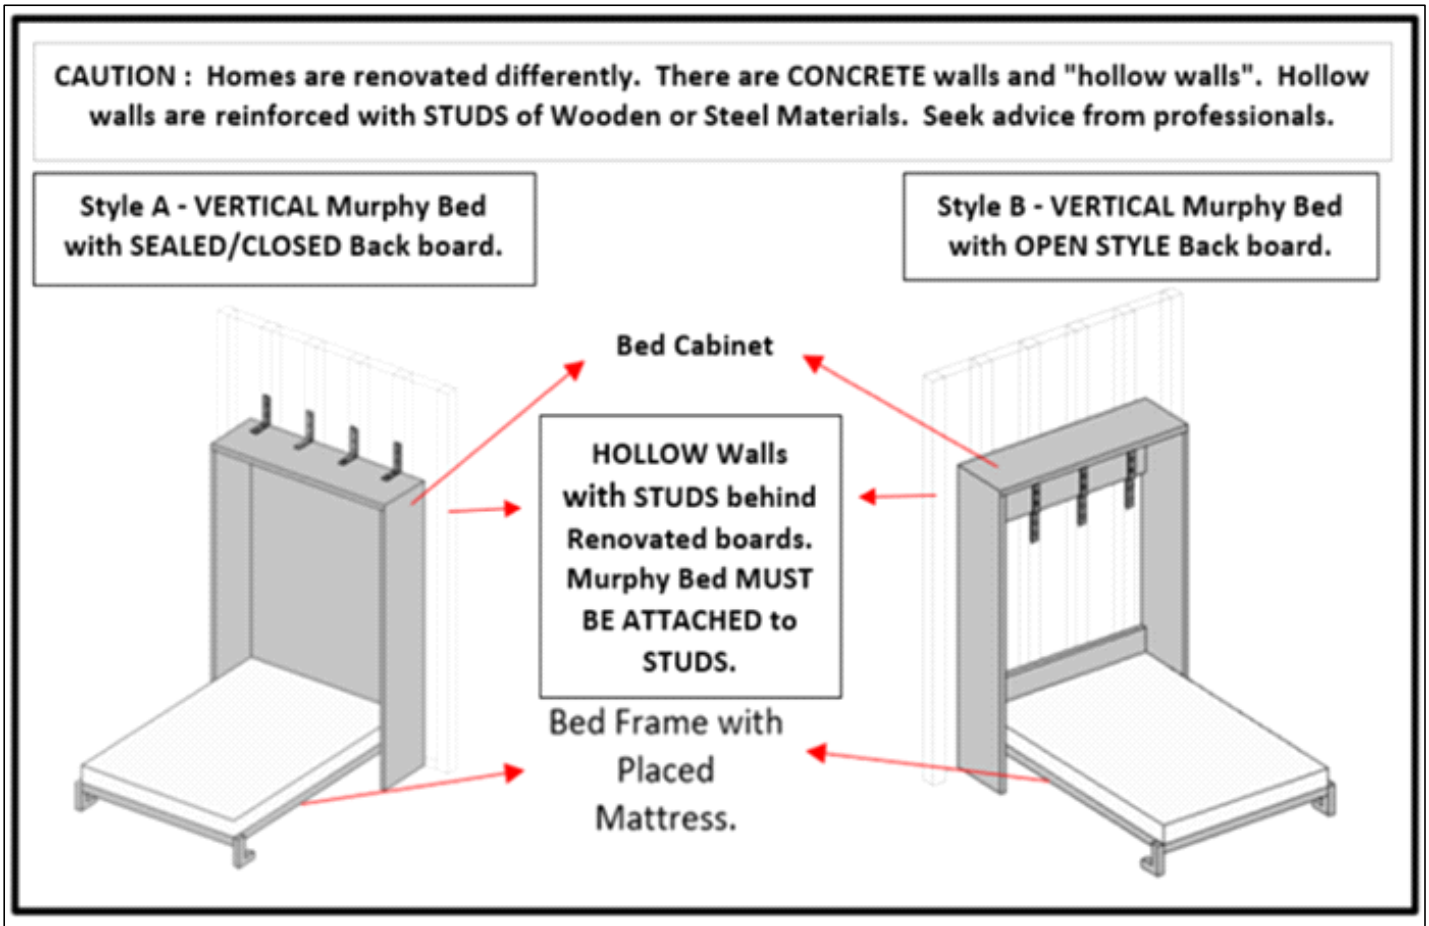
b.) ENSURE the Consultant-Contractor specifically **INFORMS** you of the **WALL TYPE** in the designated spot where you intend to attach the Murphy Bed.

c.) **ENSURE** the Consultant **INFORMS** you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.

9.) **WARNING - YOU MUST HEED THE INSTRUCTIONS** given by your appointed Consultant-Contractor on the :

a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS or NOT CONCRETE SOLID WALL, the **pre-packed hardware not match/ not fit.**

b.) Number of Mounting Points for the Murphy Bed to the Wall.



11.) This Murphy Bed is designed for home use and not intended for commercial use.

12.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C.) MOUNTING INFO & HARDWARE.

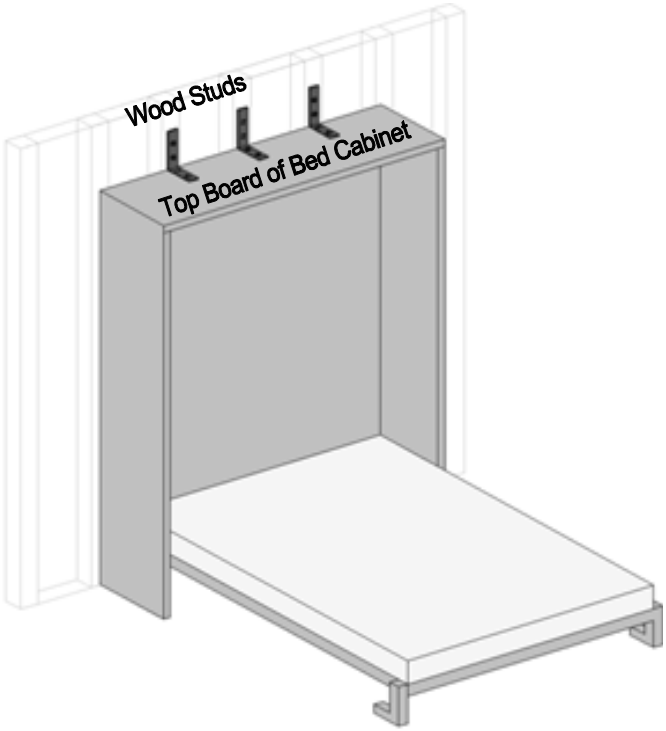
1.) REMINDERS :

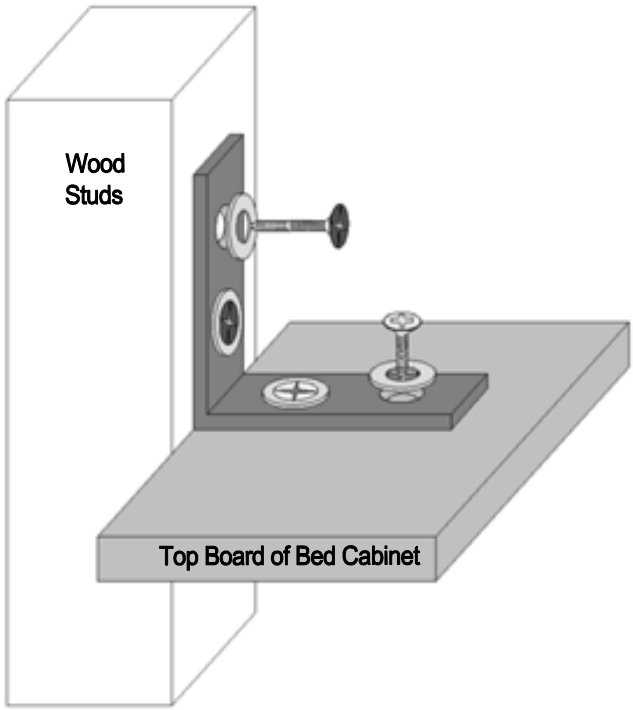
a.) **In the event, that this pre-packed Screws Set does not match to the walls in your home - DO NOT USE / DISCARD these hardware.**
b.) **ADHERE to the Professional Consultant-Contractor** instructions and information on the **RELEVANT** mounting hardware that suits your wall.
c.) Procurement of these **RELEVANT** hardware is an arrangement made between your Consultant-Contactor and you.

2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. **DO NOT** lean against the Top of the Murphy Bed, it may cause sagging.


Murphy Bed Style A


L-Bracket Fixture to Wood Studs





Z-Bracket Fixture to Wood Studs

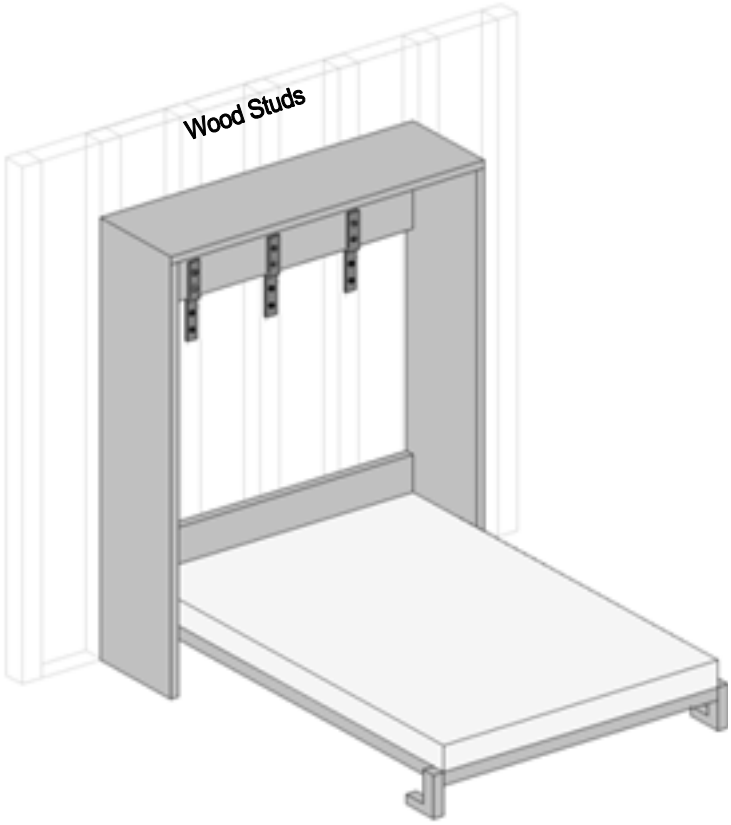

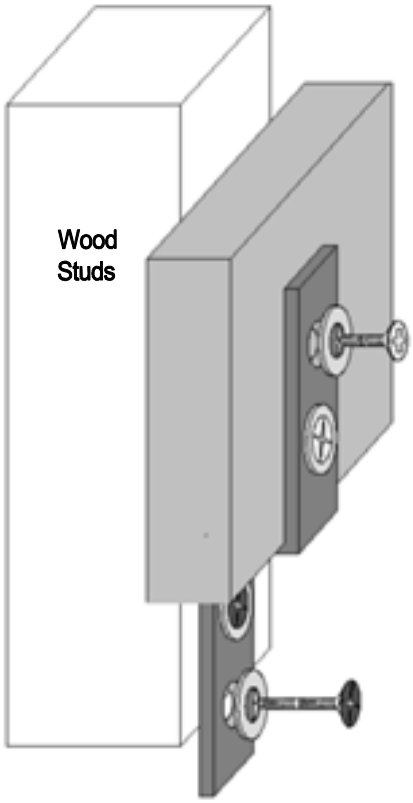

D.) IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions with attention.

For an efficient assembly, after opening the cartons shipped to you :

a.) open and layout all parts and components in sequence;
b.) account for every part, hardware and component;
c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner - proceed to tighten each bolt & nut & screw gradually.

CAUTION :

1.) The METAL PLATES to the sides of the Side Rails - MUST BE FULLY and SECURELY TIED to the SIDE RAILS.

2.)The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet - MUST BE FULLY and SECURELY TIED to these Inner Walls.

3.)These Metal Plates and the L-Brackets - are the components that are holding the Pistons that allow your Bed to "travel" to an OPEN or CLOSED position.

4.)Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month - to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.

REMINDER : NEVER FULLY TIGTHEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALL ASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 3 ADULTS.

Reminder : Per above info, the cartons and products are heavy - therefore exercise CAUTION at all times and ENSURE YOUR TEAM OF 3 for theentire ASSEMBLY.

F.) ASSEMBLY OF BED CABINET.

Identify all parts and components for the Bed Cabinet.
Assemble the Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER - The Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this BED CABINET, to prevent the Bed Cabinet from TIPPING OVER.

G.)THE FIXATION OF THE BED CABINET

Fix the bed cabinet to the wall using wall-mounted hardware, and check to ensure that the bed cabinet is securely fastened to the Wood Studs or Concrete Solid Wall.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

H.) ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.
Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

I. ATTACHMENT OF BED FRAME TO BED CABINET.

Using the lifting hardware (compressed pneumatic/hydraulic rods and other hardware fitting), follow the installation instructions to securely connect the bed frame and the bed cabinet together. This process requires at least 3 (three) adults.

You may need to - LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pistons to be hooked to both ends of the hanging bolts in the Inner Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pistons.

J.) Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Cabinet is fully and securely attached as ONE UNIT - affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5feet (1.5m) from ground.

K.) Warning for Selecting a Mattress

Recommended Mattress weight (55)lb or (25)kg / Recommended Mattress thickness (6)in or (15)cm - Your Murphy Bed is made having taken into consideration the Bed Frame Weight and Mattress weight to pair with the Pistons Newton Force.

Therefore, load your bed with the RECOMMENDED MATTRESS Weights, Size and Thickness as stated here in the assembly instructions.

DO NOT LOAD any heavier and or LARGER and or LIGHTER Mattress than what is recommended here.

L.) MATTRESS PLACEMENT.

Have 1 to 2 persons - place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons - carry and place the Mattress (**within the recommended weight** and **thickness)** and gently place the Mattress on to the Bed Frame.

M.) PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a STRONGER force to be pulled down before you can place the Mattress.

This RESISTANCE to be PULLED DOWN is a normal characteristics of the Pistons Newton-Load force is “in action”.

N.) BED STRAP - GUIDE STRAP

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1. **) DO NOT USE THE BED STRAP to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.**
2. **) DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.**

Both the above may cause injury and or unnecessary strain to your arm(s).

O.) USING YOUR MURPHY BED.

For EVERY USE - exercising Safety Precautionary Measures to ensure the safety of your family members and pets **are** IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are at bay.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.

P.) CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.

Every time you Pull to **OPEN** the Murphy Bed from its closed position OR **Lift-Pull to CLOSE** the Murphy Bed to stow it into the Bed Cabinet -
. give these actions your focused and dedicated attention.
. DURING EVERY OPENING and CLOSING of your Murphy Bed - always ensure you have an Adult Partner close by for added assistance, where necessary.
. DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe. For if you do, the resistance of the Piston will only make it harder for you to complete the task.
. TO CLOSE the Murphy Bed : depending on your height - stand some 6inches to 10inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
. TO OPEN the Murphy Bed : using equal force - **place your hands to the installed grab handle** and GENTLY PULL towards you to Open. **As you pull Open the Murphy Bed - proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.**

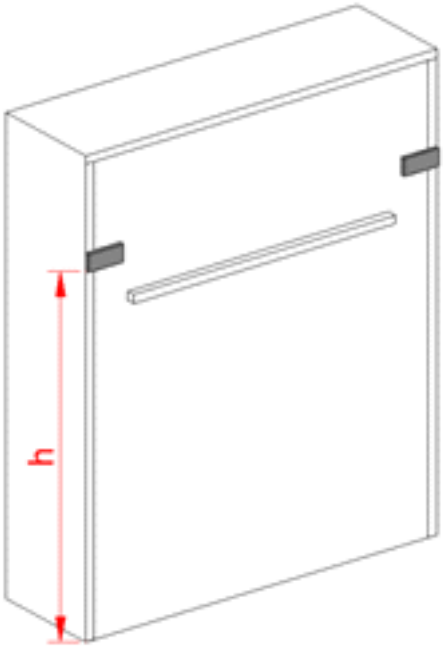
. During **EVERY OPENING or CLOSING** of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.

. During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons at bay.

. NEVER allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.

. Care & Maintenance - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with the Safety Latch. These are to be attached at, both the TOP LEFT and TOP RIGHT hand upper portion**, minimum of 5 feet (1.5m) from ground**, of the Bed Frame / Bed Cabinet. Monitor and Inspect these frequently.



- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its **CLOSED POSITION - ALWAYS LATCH UP**.

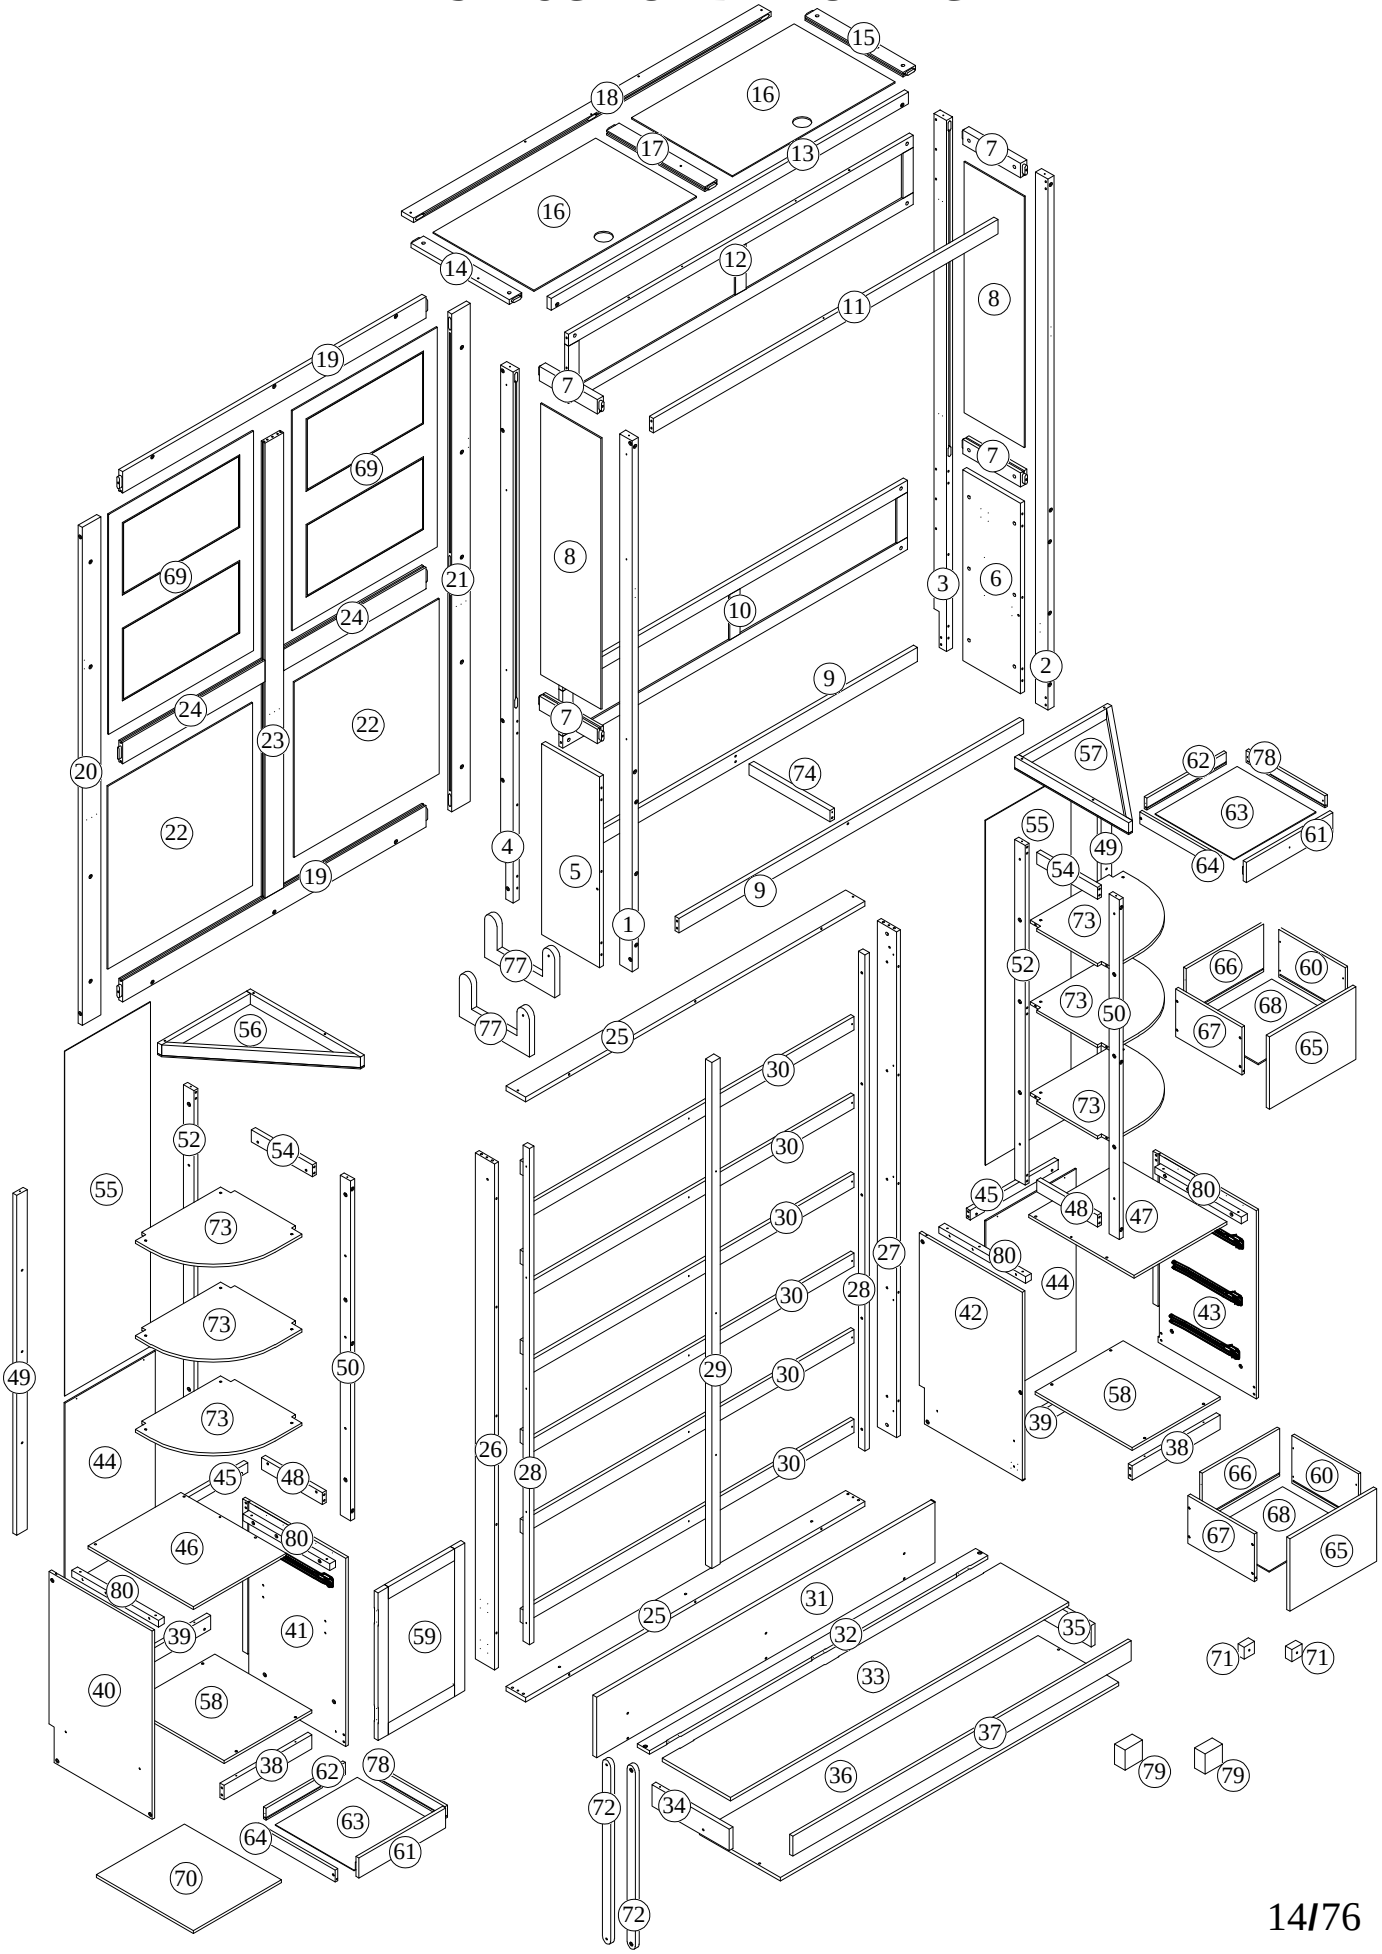
Frequently Asked Questions.
Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?
It would be quite evident in that :


















a.) the Bed Frame may become LOPSIDED and
b.) the Lift-PULL force to CLOSE may be "heavier" than before.

IMMEDIATELY - STOP USING YOUR MURPHY BED.
SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.








ASSEMBLY INSTRUCTION
INSTRUCTION DE MONTAGE



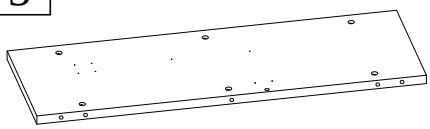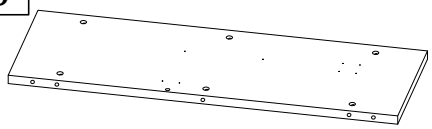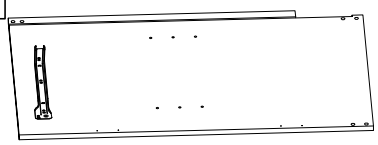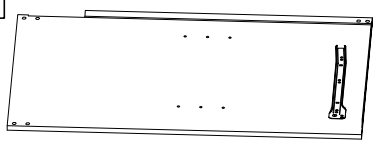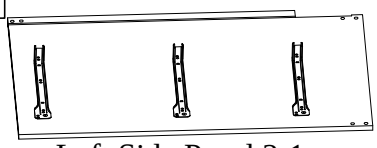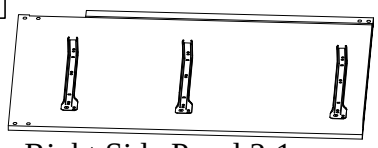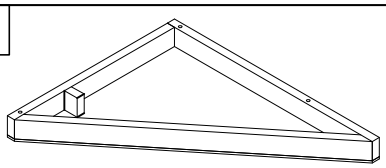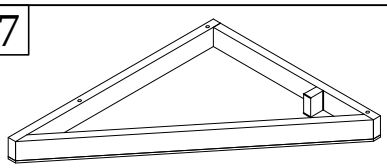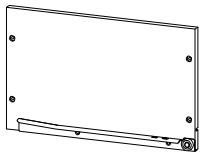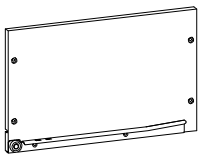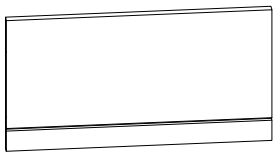
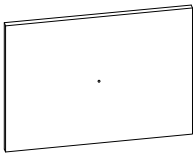



Part List (Box 1-N708P480964)-hardware box
Liste des pièces et boîte matérielle

5  Lower Left side panel - 1pc Panneau latéral inférieur	6  Lower Right side panel - 1pc Panneau latéral inférieur	40  Left Side Panel 1-1pc Panneau latéral
41  Right Side Panel 1-1pc Panneau latéral	42  Left Side Panel 2-1pc Panneau latéral	43  Right Side Panel 2-1pc Panneau latéral
56  Cabinet Top Left Panel - 1pc Panneau supérieur gauche du meuble	57  Cabinet Top Right Panel - 1pc Panneau supérieur droit du meuble	60  Drawer Right Panel 1 - 2pcs Panneau latéral du tiroir
67  Drawer Left Panel 1- 2pcs Panneau latéral du tiroir	66  Drawer Back Panel 1- 2pcs Panneau arrière du tiroir	61  Drawer Front Panel - 2pcs Panneau avant du tiroir
62  Drawer Back Panel 2- 2pcs Panneau arrière du tiroir	64  Drawer Left Panel 2 - 2pcs Panneau latéral du tiroir	78  Drawer Right Panel 2- 2pcs Panneau latéral du tiroir
65  Drawer Front Panel 1- 2pcs Panneau avant du tiroir	71  Wood Block 1 - 2pcs Bloc de bois	72  Table Leg Support - 2pcs Pied de soutien de table
79  Wood Block 2 - 2pcs Bloc de bois	80  Wood Block 3 - 4pcs Bloc de bois	









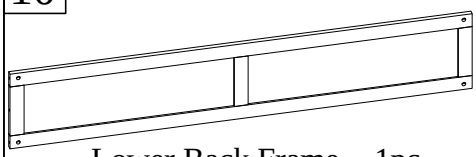
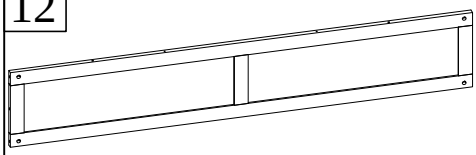




Part List (Box 2-N708P480965)
Liste des pièces

8  Upper Side Panel - 2pcs Panneau latéral	10  Lower Back Frame - 1pc Côté au-dessus	12  Upper Back Frame - 1pc Cadre ci-dessus
19  Horizontal Bed Frame - 2pcs Longeron latéral inférieur du lit	25  Vertical Bed Frame - 2pcs Longeron latéral supérieur du lit	39  Rear Bottom Support Bar - 2pcs Barre de soutien inférieure arrière
32  Table Top 1 - 1pc Plateau de table	33  Table Top 2 - 1pc Plateau de table	36  Bottom Panel - 1pc Panneau inférieur
37  Front Panel-1pc Panneau avant	49  Vertical Bar - 2pcs Montant	50  Front Left Upright - 2pcs Montant avant gauche
52  Back Left Upright - 2pcs Montant arrière gauche	55  Cabinet Back Panel - 2pcs Panneau arrière du meuble	9  Side rail - 2pcs Traverse latérale
11  Top rail - 1pc Traverse latérale	38  Front Bottom Support Bar - 2pcs Barre de soutien inférieure avant	74  Horizontal Bar - 1pc Traverse


















Part List (Box 3-N708P480966)
Liste des pièces

1  Wooden leg - 1pc Pied en bois	2  Wooden leg - 1pc Pied en bois	3  Wooden leg - 1pc Pied en bois
4  Wooden leg - 1pc Pied en bois	13  Front Top Rail - 1pc Traverse haute avant	14  Side Top Rail - 1pc Traverse haute latérale
15  Side Top Rail - 1pc Traverse haute latérale	18  Back Top Rail - 1pc Traverse haute arrière	20  Lower Bed Side Rail - 1pc Longeron latéral inférieur du lit
17  Center Top Rail - 1pc Traverse haute centrale	23  Center Rail - 1pc Traverse centrale	26  Upper Bed Side Rail - 1pc Longeron latéral supérieur du lit
21  Lower Bed Side Rail - 1pc Longeron latéral inférieur du lit	28  Slat Support Block - 2pcs Bloc de support de latte	29  Slat Support Rail - 1pc Traverse de support des lattes
27  Upper Bed Side Rail - 1pc Longeron latéral supérieur du lit	31  Back Panel - 1pc Panneau arrière	30  Slat - 6pcs Latte
45  Horizontal Bar - 2pcs Traverse	48  Horizontal Bar - 2pcs Traverse	


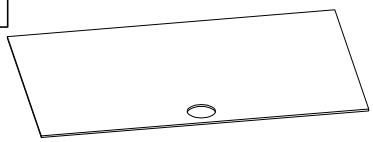
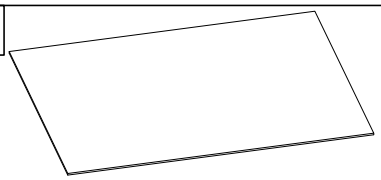
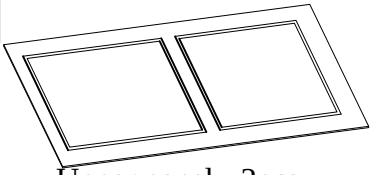

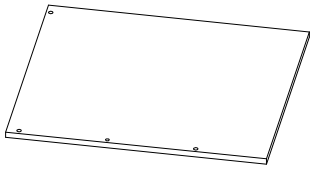
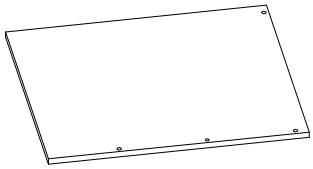
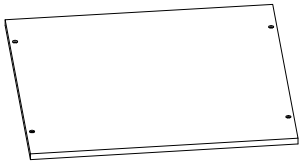
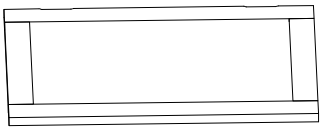
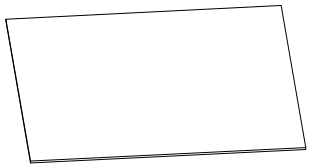
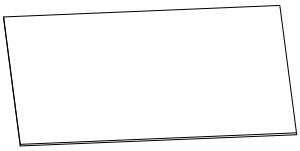
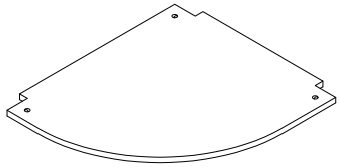
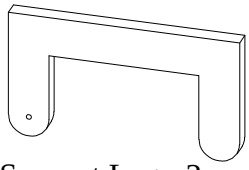
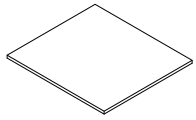
Part List (Box 4-N708P480967)
Liste des pièces

7  Cross bar - 4pcs Traverse	16  Top Panel - 2pcs Panneau supérieur	22  Lower Panel - 2pcs Panneau inférieur du cadre
69  Upper panel - 2pcs Barre supérieure latérale	34  Left Side Panel-1pc Panneau latéral gauche	35  Right Side Panel-1pc Panneau latéral gauche
44  Back Panel - 2pcs Panneau arrière	46  Left Top Panel - 1pc Panneau supérieur droit	47  Right Top Panel - 1pc Panneau supérieur droit
58  Cabinet Bottom Panel - 2pcs Panneau inférieur du meuble	59  Door Panel - 1pc Porte	63  Drawer Bottom - 2pcs Panneau supérieur droit du meuble
24  Center cross bar - 2pcs Barre transversale centrale	68  Drawer Bottom - 2pcs Panneau supérieur droit du meuble	73  Shelf Panel - 6pcs Panneau d’étagère
77  Support Leg - 2pcs Pied de soutien	54  Horizontal Bar - 2pcs Traverse	70  Shelf Panel - 1pcs Panneau d’étagère

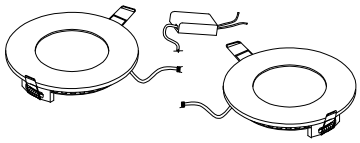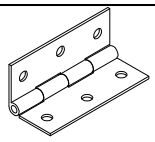


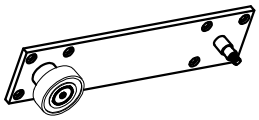




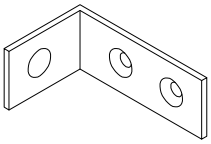


Hardware List (Box 1-N708P480964)
Liste du matériel


A  D13 x Ø1/4" x 100 mm Hex-Head bolts 20pcs Boulons à tête hexagonale 20 pièces	B  Ø1/4" x 12 mm Horizontal-Hole bolts109pcs Boulons à trous horizontaux 109 pièces	C  Ø8 x 30 mm Wood dowel 54pcs Cheville en bois 54 pièces
D  D13 x Ø1/4" x 70 mm Hex-Head bolts 32pcs Boulons à tête hexagonale 32 pièces	E  Led Light - 1set Lumière LED - 1 ensemble	F  Hinge 11pcs Charnières 11 pièces
G  Ø1/4" x 120 mm Hex-Head bolts 4pcs Boulons à tête hexagonale 4 pièces	H  D13 x Ø1/4" x 60 mm Hex-Head bolts 47pcs Boulons à tête hexagonale 47 pièces	I  Cam Bolt-2pcs Boulon à came - 2 pièces
J  Cam Lock-2pcs Serrure à came - 2 pièces	K  M3.5 x 12 mm Wood Screws 12pcs Vis à bois 12 pièces	L  M4 x 15 mm Wood Screws 54pcs Vis à bois 54 pièces
M  Metal straight link-2pcs Maillon droit en métal - 2 pièces	N  Piston -2pcs Piston - 2 pièces	O  Nut-4pcs Écrou - 4 pièces
P  Metal corner link-1pc Lien d'angle en métal - 1 pièce	Q  Metal corner link-1pc Lien d'angle en métal - 1 pièce	R  M4 x 15 mm Wood Screws 44pcs Vis à bois 44 pièces
S  Angle Metal - 4pcs Angle en métal - 4 pièces	T  M4 x 20 mm Wood Screws 10pcs Vis à bois 10 pièces	U  Ø1/3" x 40 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pièces

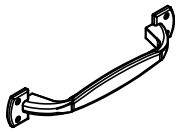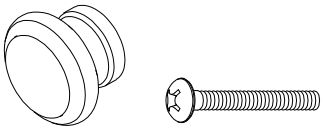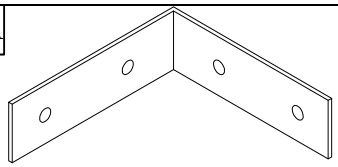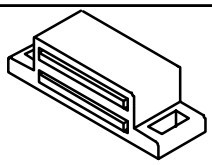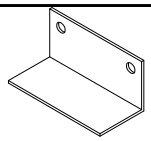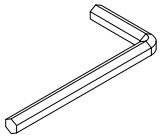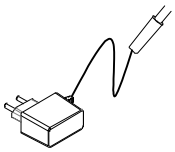Hardware List (Box 1-N708P480964)
Liste du matériel

V  Ø1/4" x 15 mm T-nut 4pcs Écrou en T 4 pièces	W  D13 x Ø1/4" x 40 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pièces	X  Ø20 / Ø6 x 2 mm Washer 6pcs Rondelle 6 pièces
Y  Handle - 2pcs Poignée - 2 pièces	Z  Bolt Ø1/6" x 25 mm 4pcs Boulon-4pcs	AA  Bolt Ø1/6" x 25 mm-8pcs Wood Handle - 8pcs Manche en bois - 8 pièces
BA  M4 x 30 mm Wood Screws 36pcs Vis à bois 36 pièces	CA  M5 x 50 mm Wood Screws 14pcs Vis à bois 14 pièces	DA  Angle Metal - 5pcs Angle en métal - 5 pièces
EA  Screws D13 x 1/4" x35 -37pcs Vis-37pcs	GA  Magnet Door Catcher 1pc Attrape-porte magnétique-1pc	KA  25x25x7x1.2 mm L Angle pat- 2pcs Angle en L - 2 pièces
IA  Allen Key 2pcs Clé Allen 2 pièces	LA  M3 x 15 mm Wood Screws 62pcs Vis à bois 62 pièces	MA  M4 x 35 mm Wood Screws 41pcs Vis à bois 41 pièces
RA  Screws D13 x 1/4" x70 6pcs Vis-6pcs	UA  M4 x 35 mm Wood Screws 8pcs Vis à bois 8 pièces	QA  D13 x Ø1/4" x 90 mm Hex-Head bolts 8pcs Boulons à tête hexagonale 8 pièces
NA  Power supply-1pc Alimentation électrique-1pc	SA  M4 x 25 mm Wood Screws 16pcs Vis à bois 16 pièces	

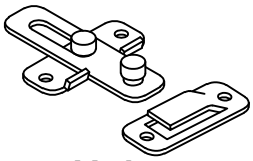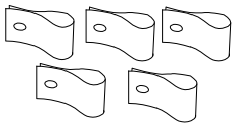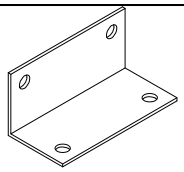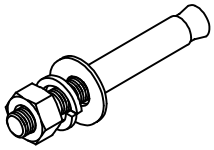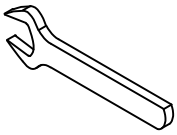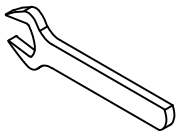Hardware List (Box 1-N708P480964)
Liste du matériel


WA  D13 x Ø1/4" x 30 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pièces	TA  Metal link-2pcs Lien métallique - 2 pièces	PA  Screw mount - 5pcs Collier de fixation-5 pcs
XA  Ø6 x 8 mm Wood Screws 4pcs Vis à bois 4 pièces	YA  Angle Metal - 1pc Angle en métal	ZA  M3.5 x 12 mm Wood Screws 6pcs Vis à bois 6 pièces
FA  M4 x 25 mm Wood Screws 20pcs Vis à bois 20 pièces	BB  Ø6 x 65mm Iron wall socket - 14pcs	AC  K10 Wrench - 1pc
BC  Ø18 / Ø6 x 1.5 mm Iron Washer 14pcs	CC  K13 Wrench - 1pc	



Assembly Tools Required (Not Included)
Outils d'assemblage requis (non inclus)

STEP-ÉTAPE-1


IA	A	B	C	D
	 Ø1/4"x100	 Ø1/4"x12	 Ø8"x30	 Ø1/4"x70
2pcs	9pcs	10pcs	4pcs	1pc

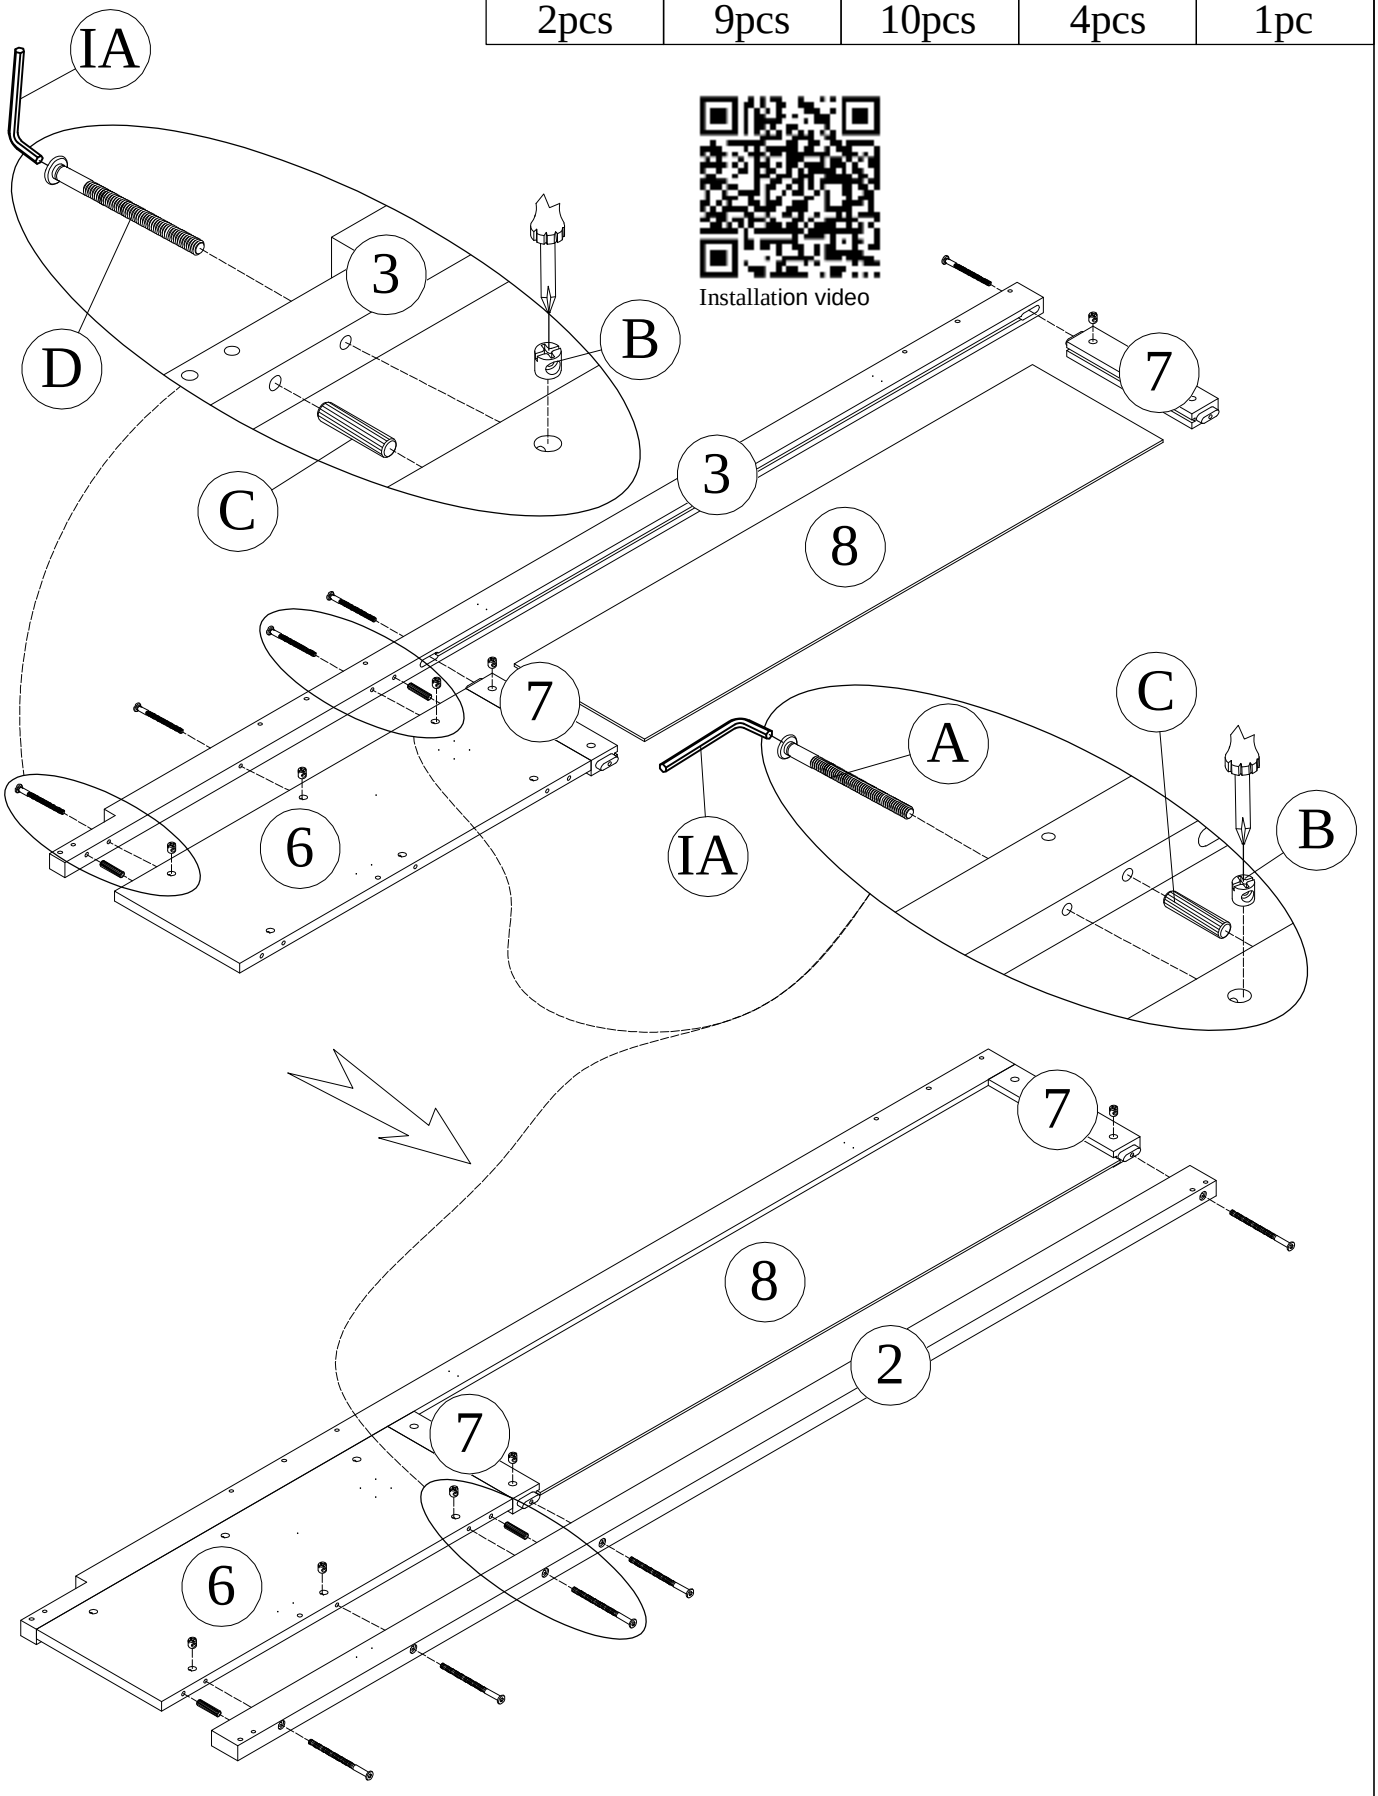

STEP-ÉTAPE-2

IA	A	B	C	D
	 Ø1/4"x100	 Ø1/4"x12	 Ø8"x30	 Ø1/4"x70
2pcs	9pcs	10pcs	4pcs	1pc

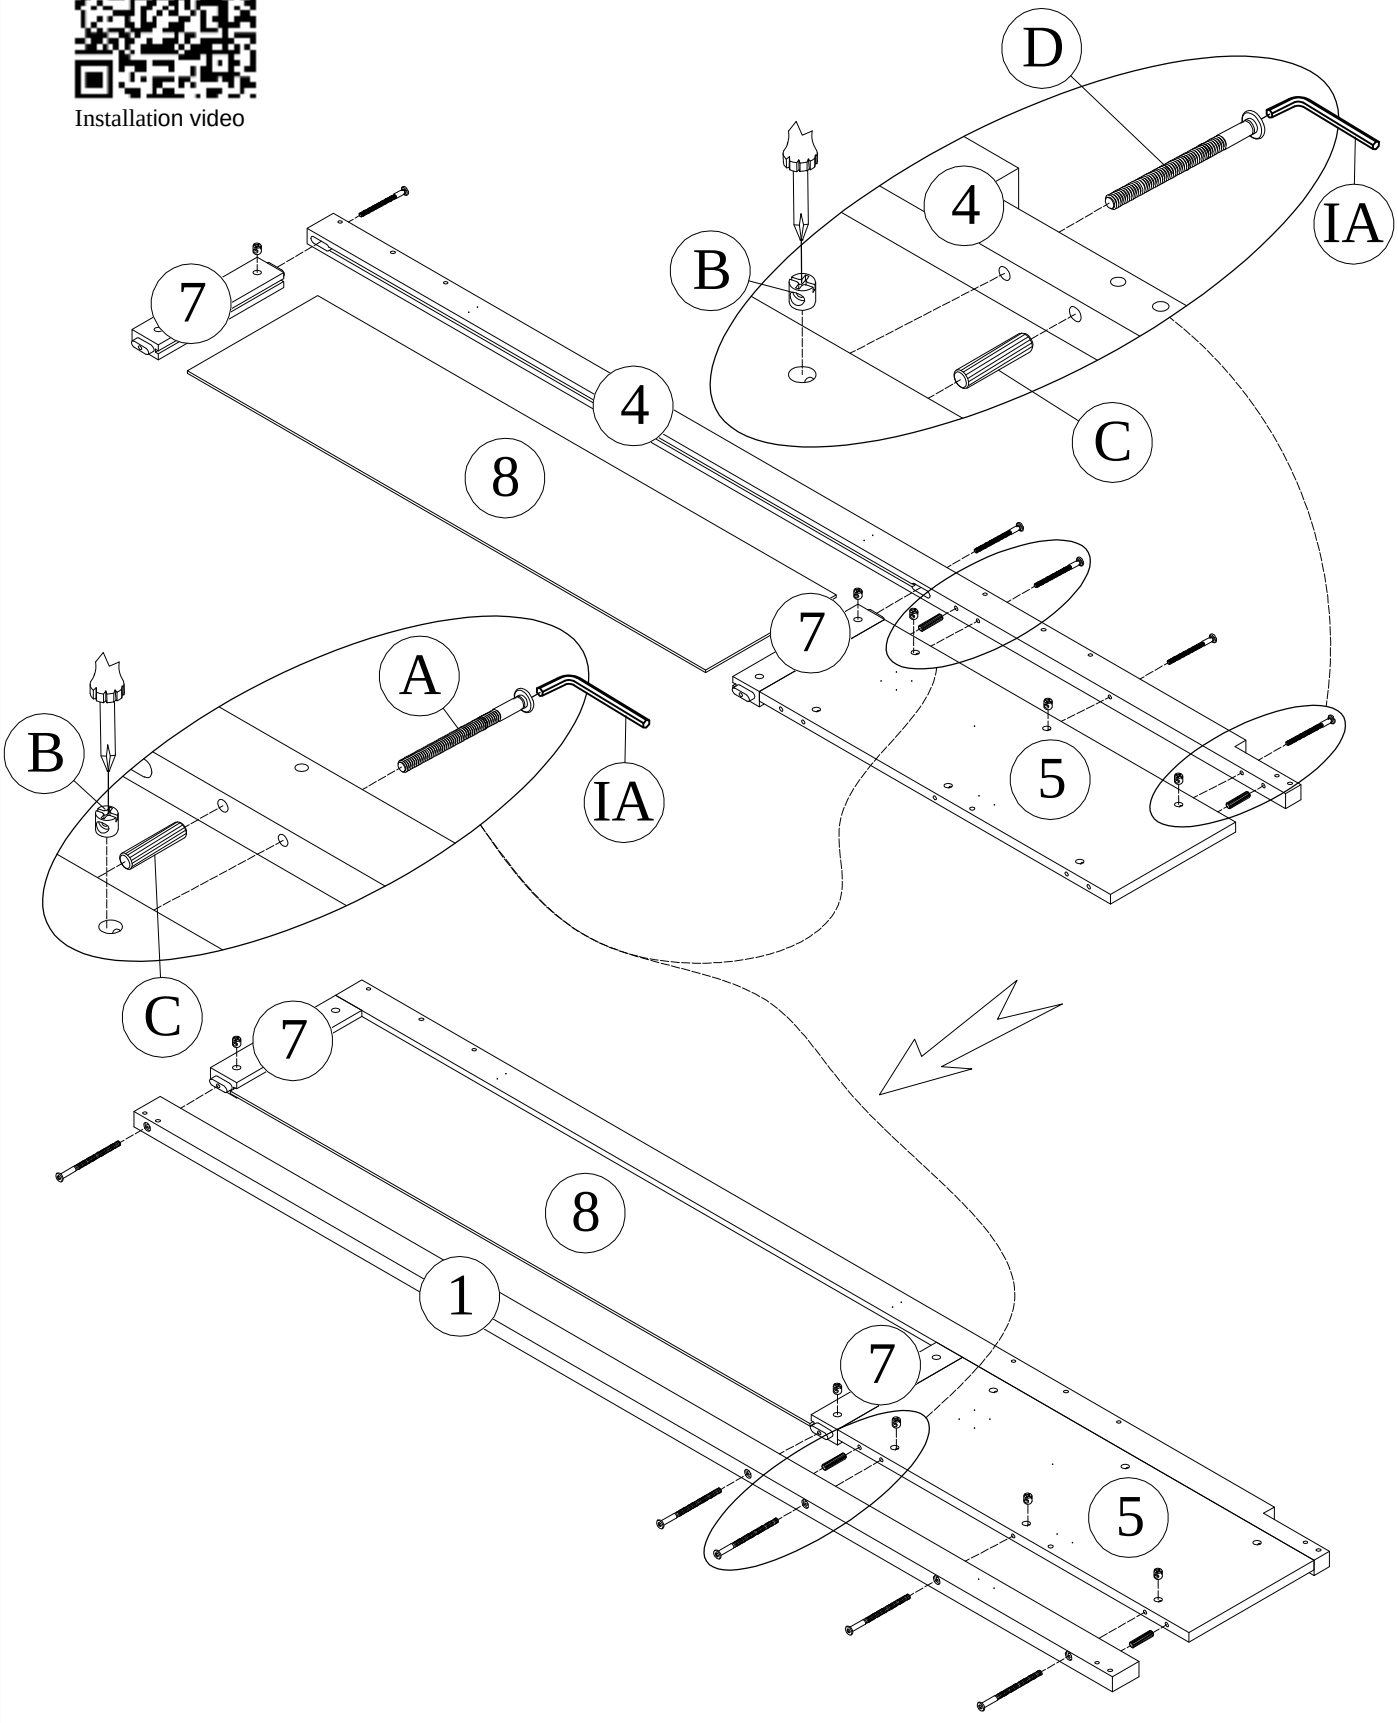
Installation video



STEP-ÉTAPE-3

IA	EA
	 Ø1/4"x35
2pcs	2pcs

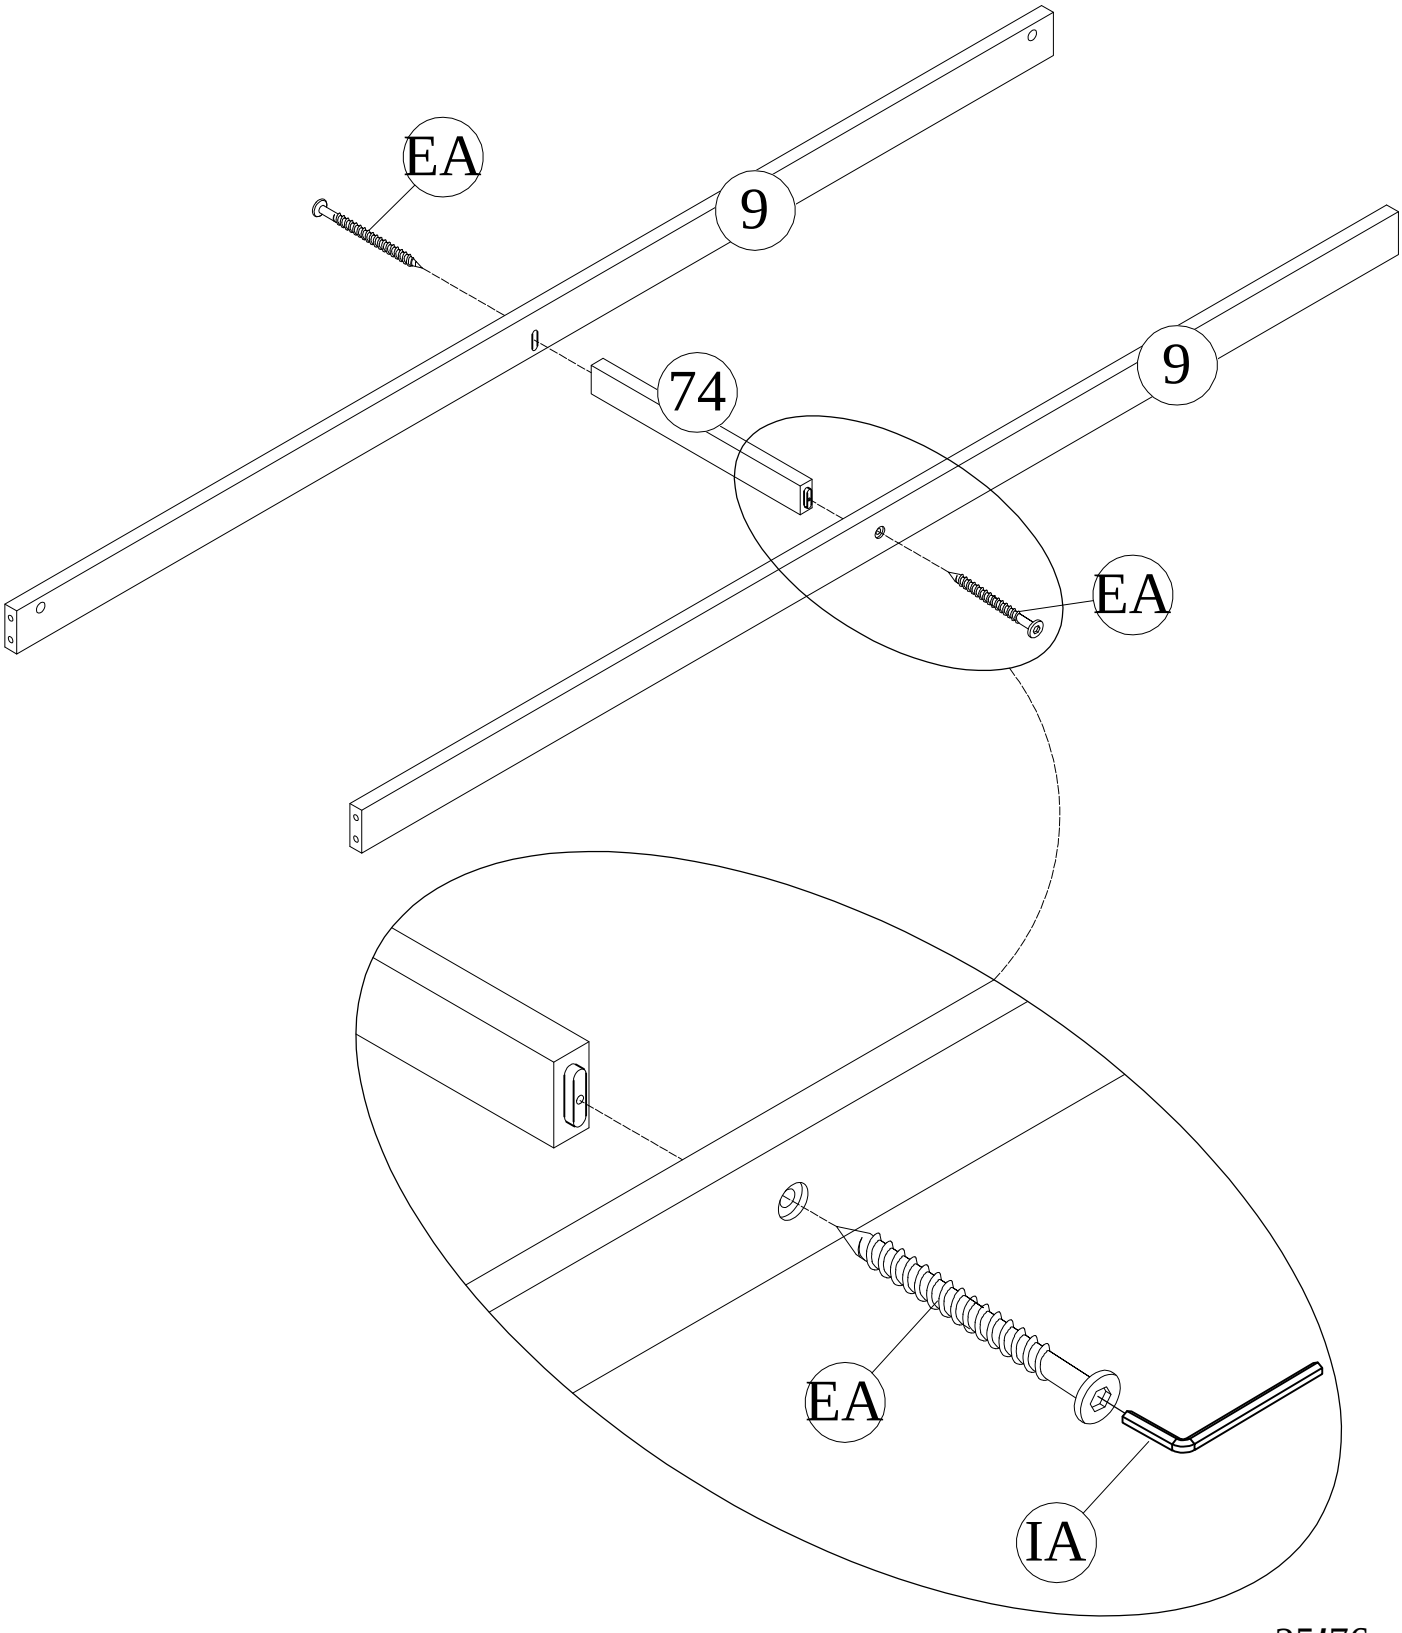Installation video




STEP-ÉTAPE-4

B	C	D
Ø1/4"x12	Ø8"x30	Ø1/4"x70
14pcs	10pcs	14pcs

IA
2pcs

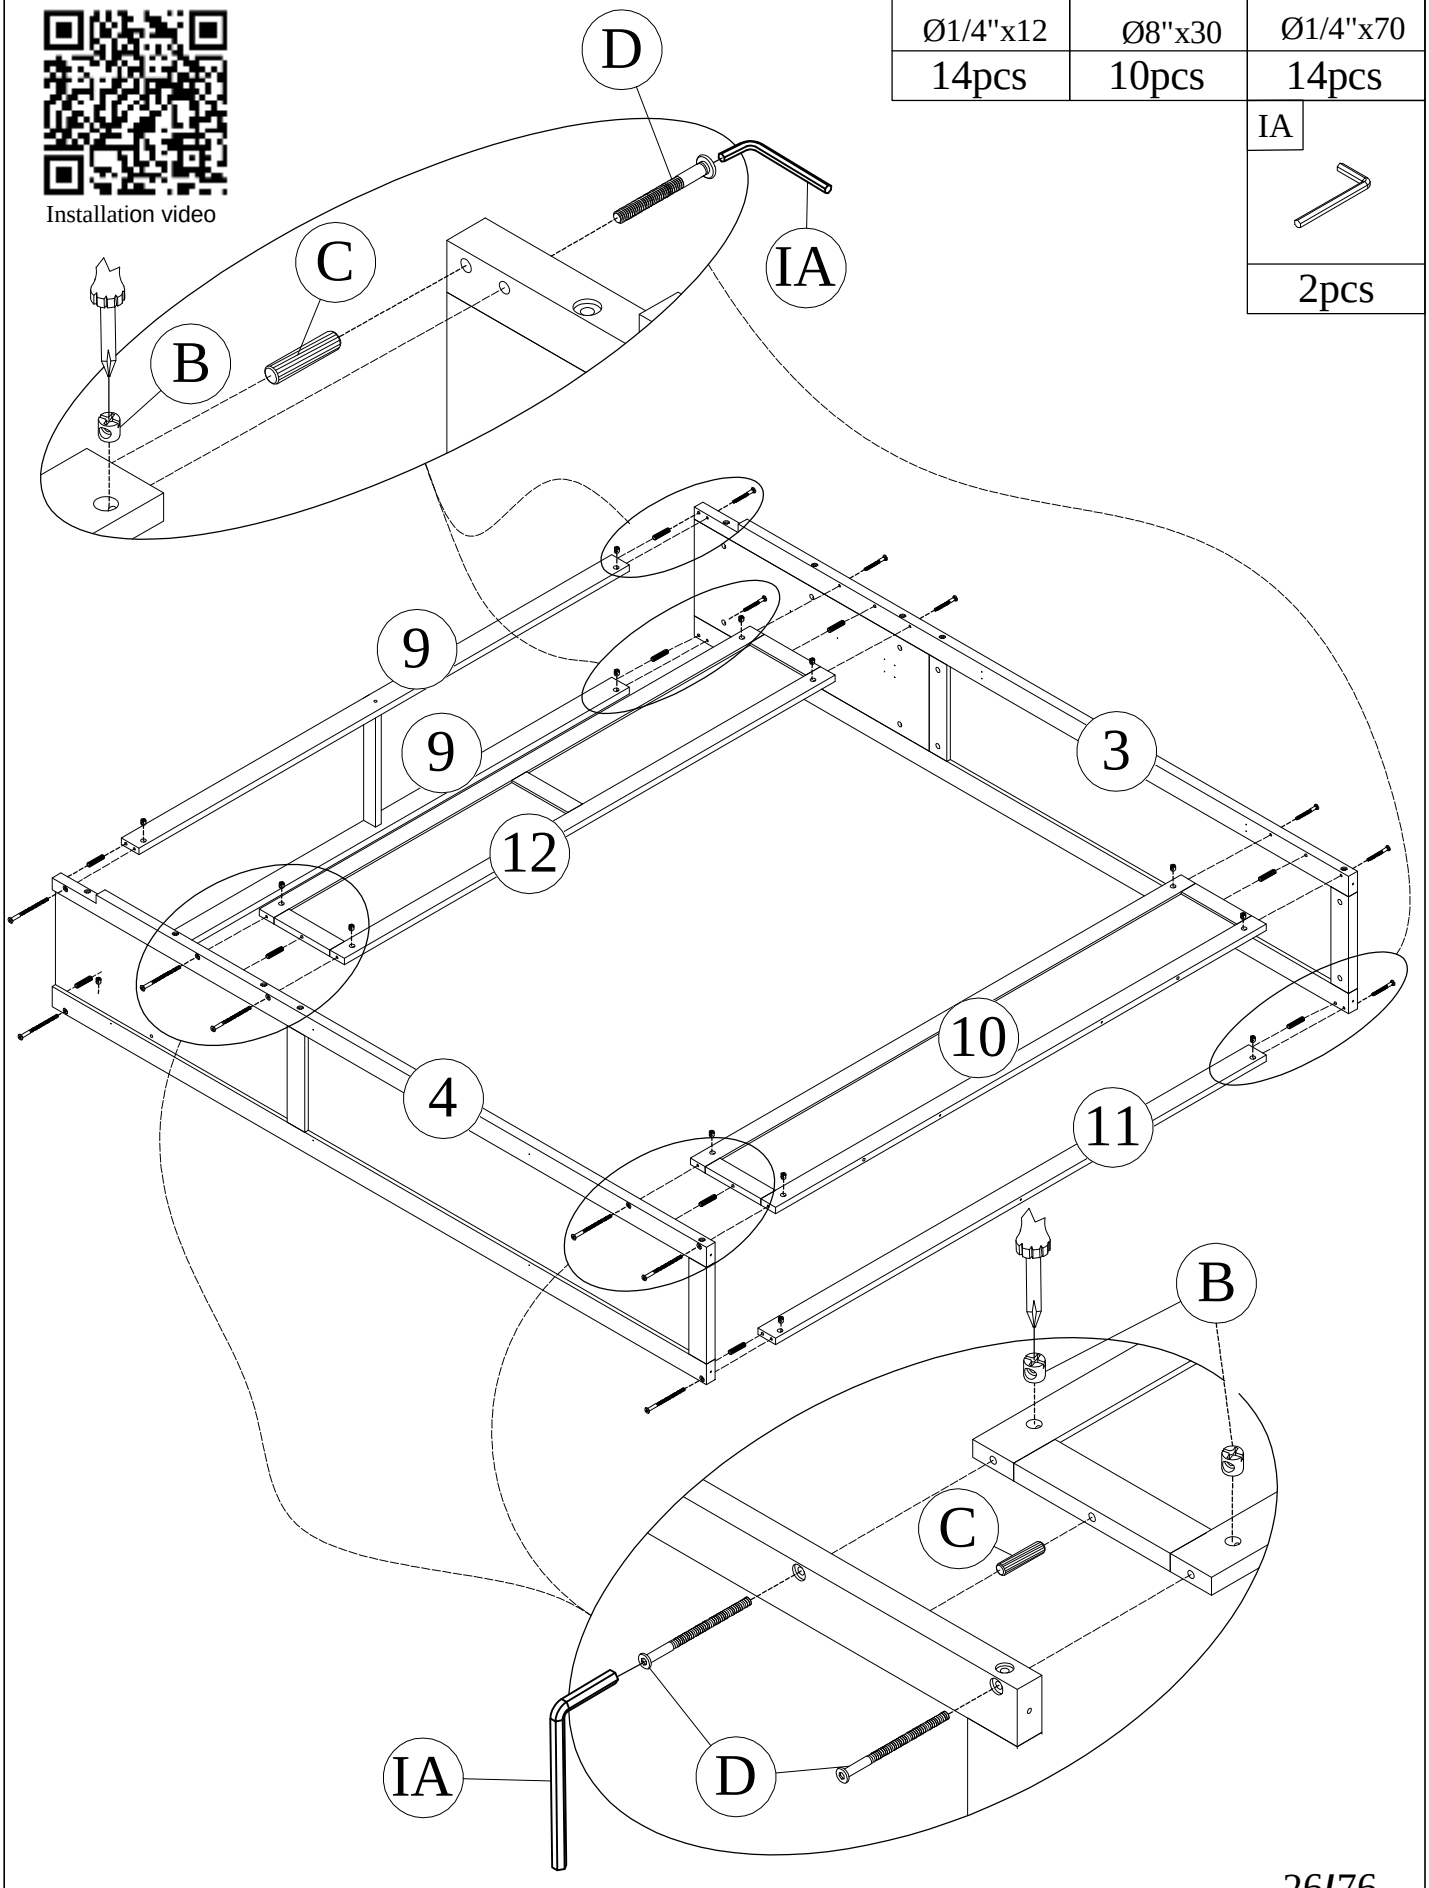
Installation video



STEP-ÉTAPE-5




IA	A	B	H
	Ø1/4"x100	Ø1/4"x12	Ø1/4"x60
2pcs	2pcs	4pcs	2pcs

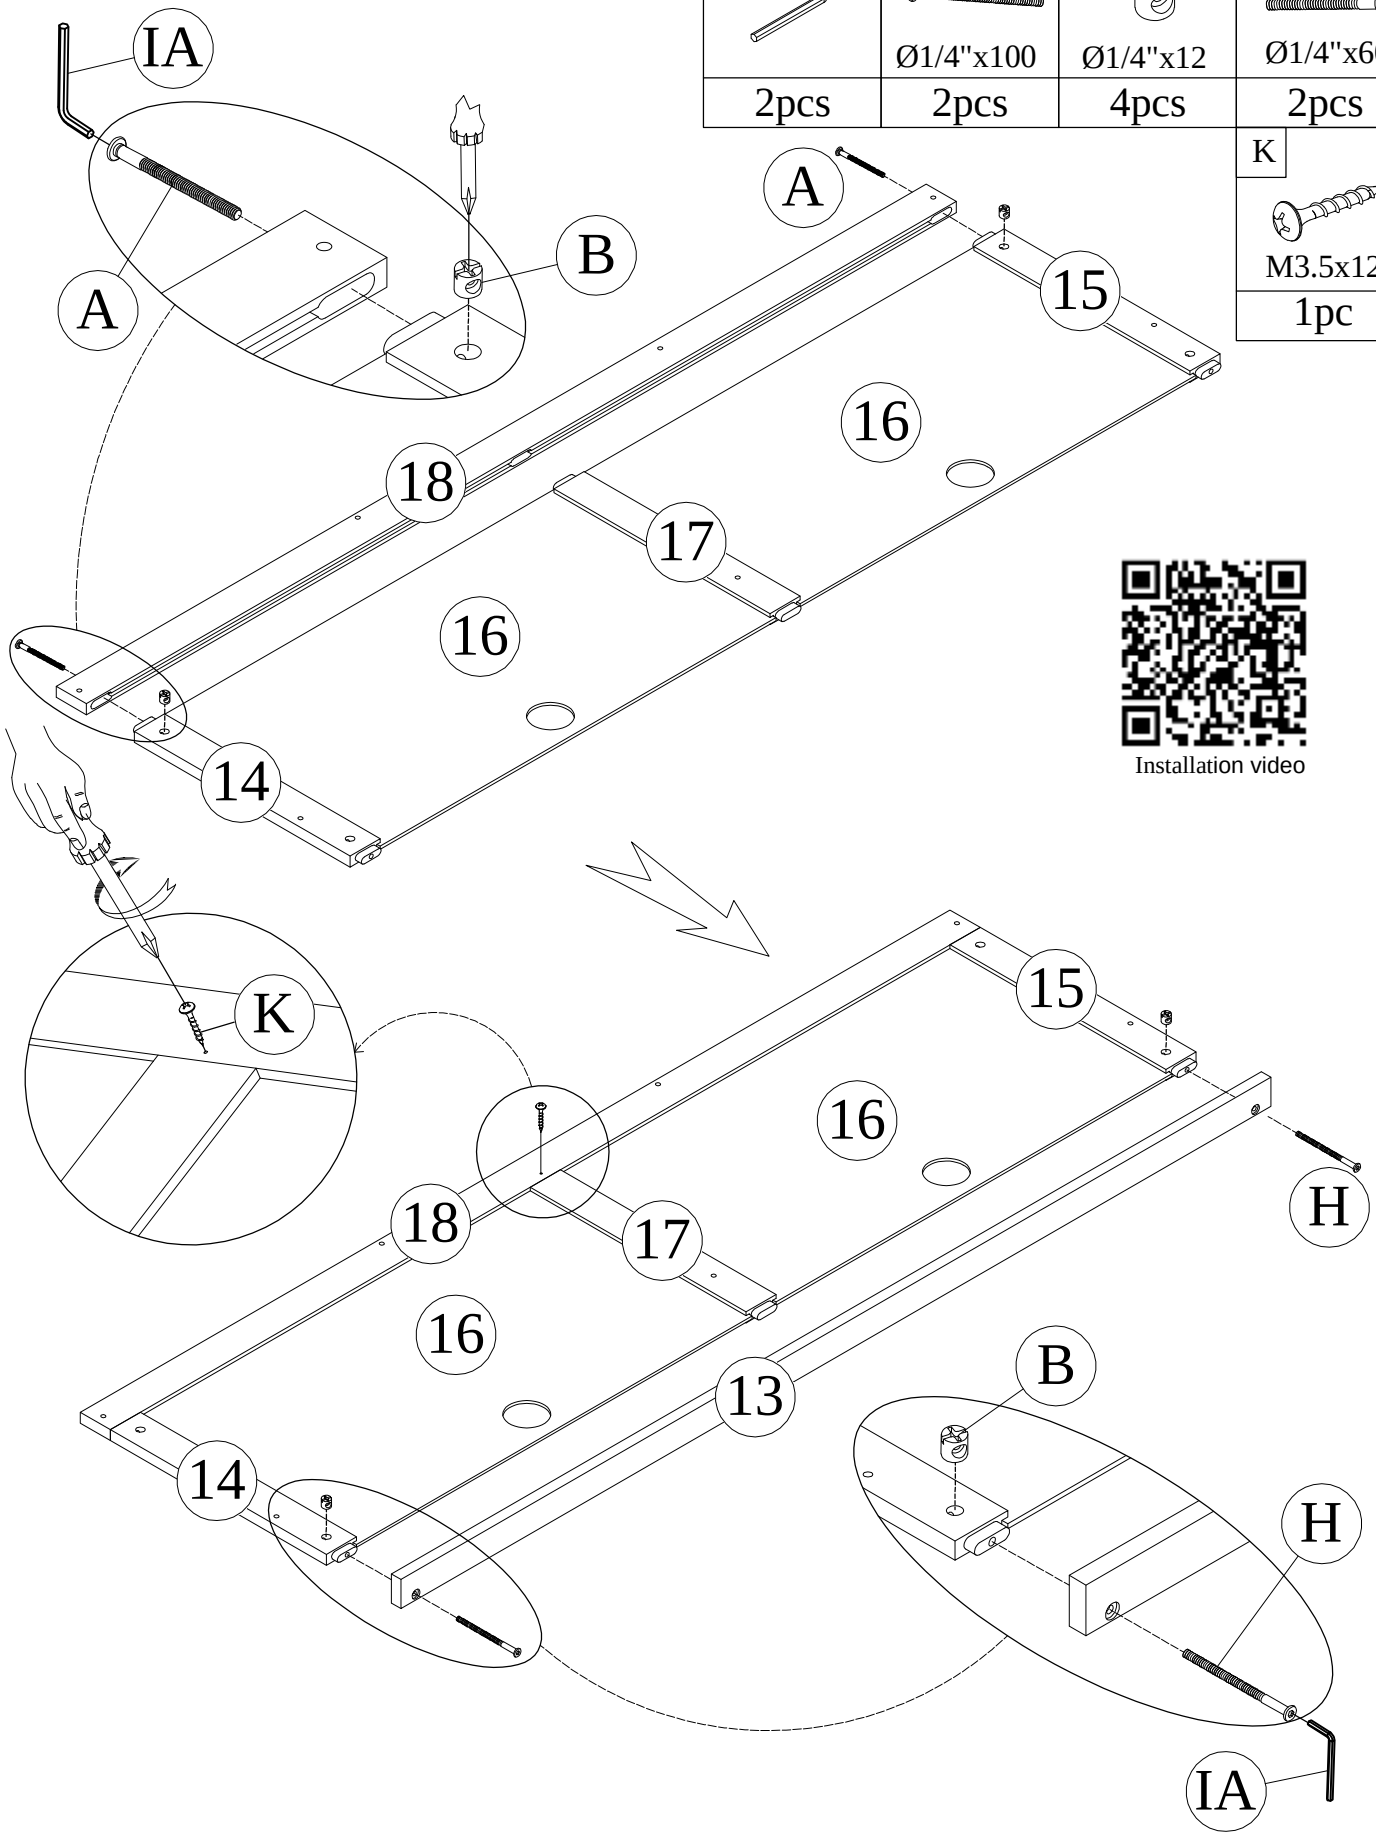K
M3.5x12
1pc




Installation video

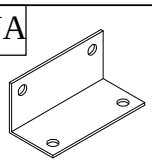STEP-ÉTAPE-6

YA	L	E
	 M4x15	
1pc	4pcs	2pcs

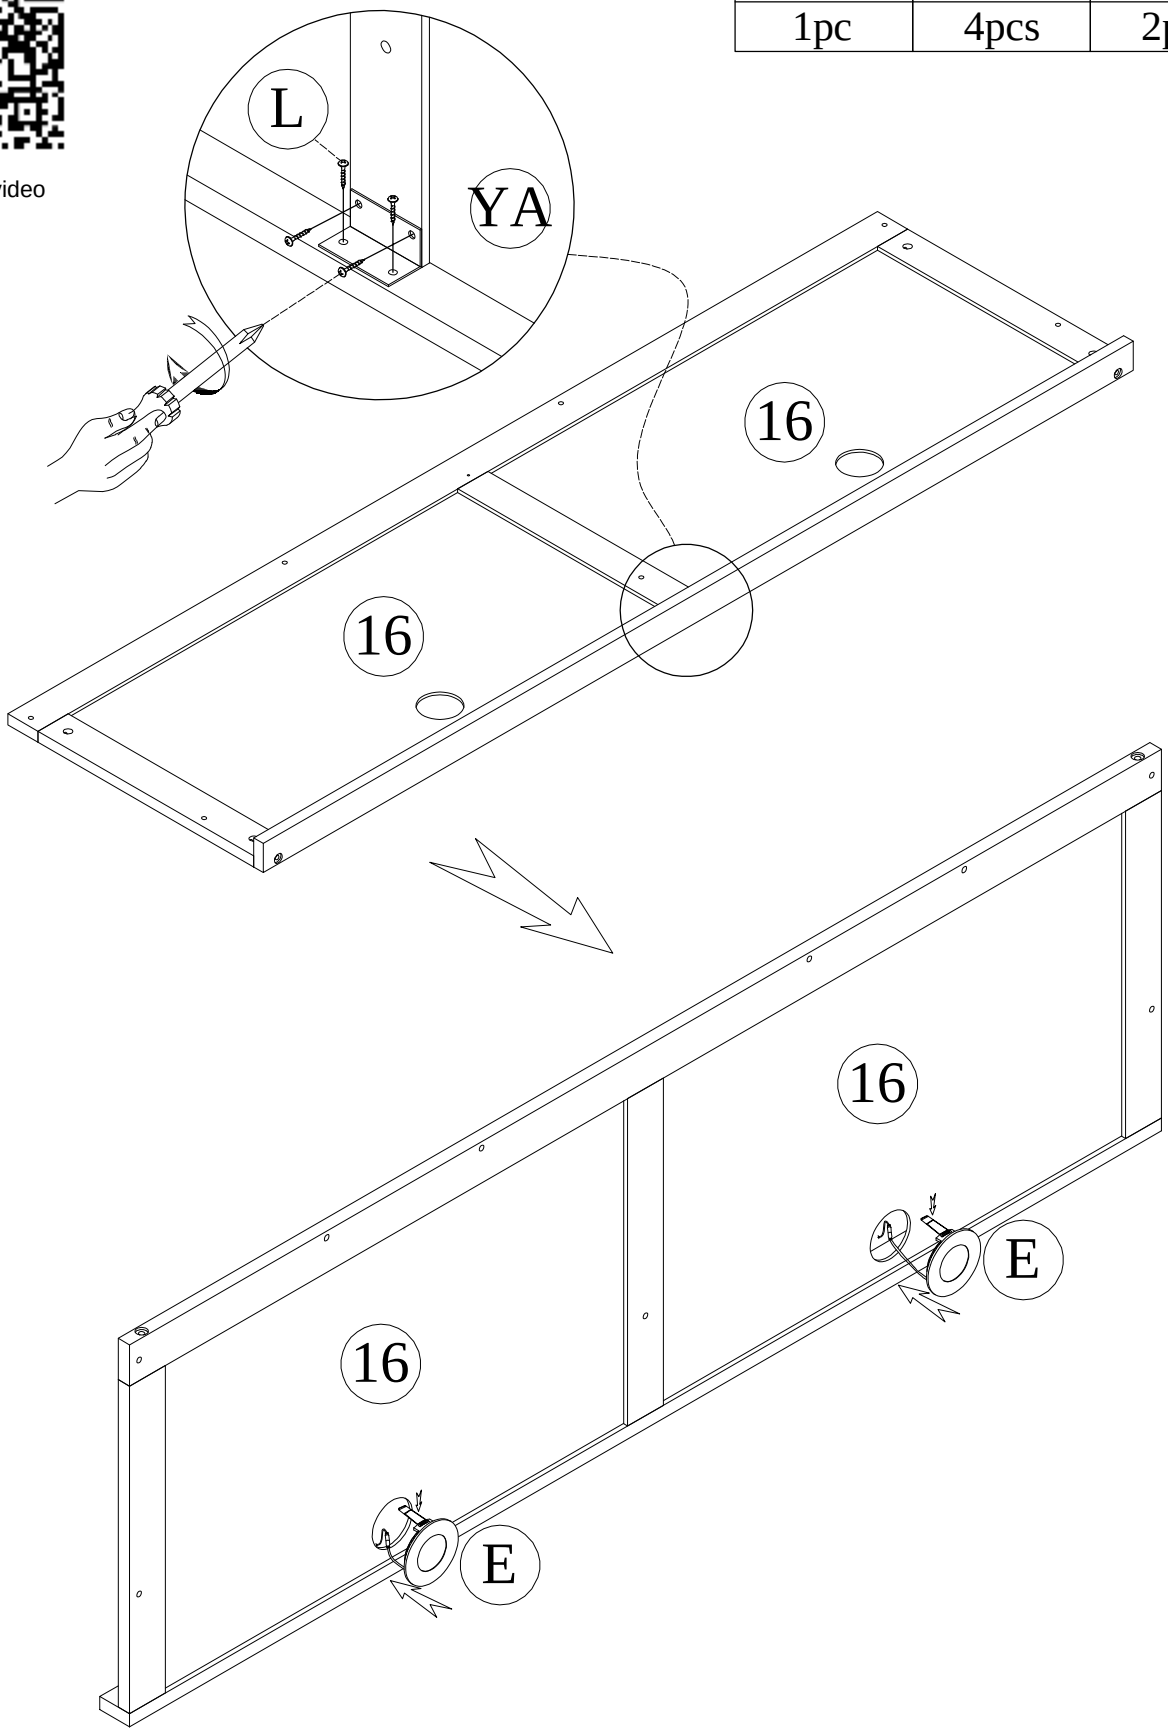
Installation video



STEP-ÉTAPE-7

Installation video


IA	C	EA
	 Ø8"x30	 Ø1/4"x35
2pcs	2pcs	8pcs

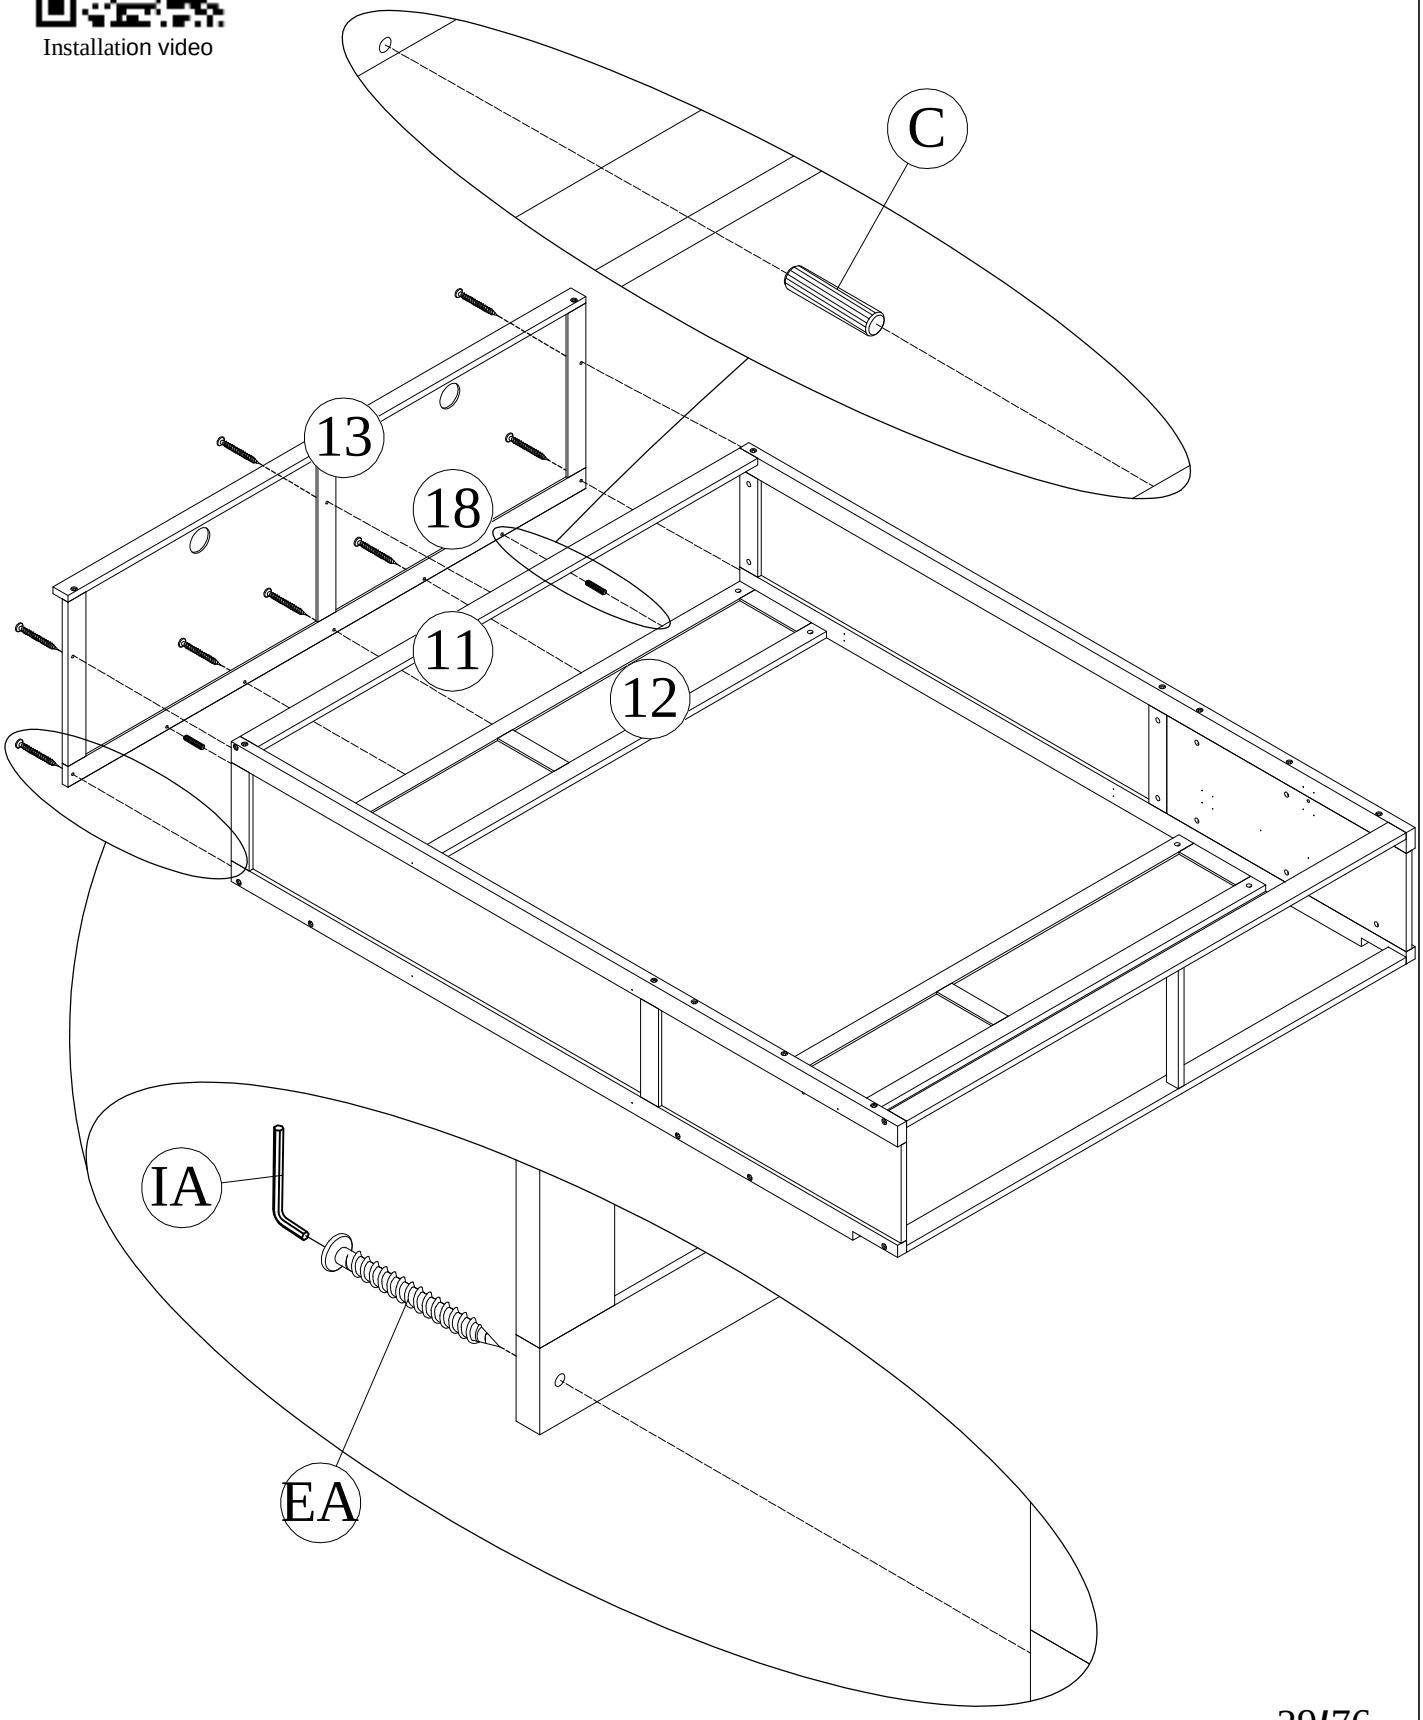

STEP-ÉTAPE 8

Installation video

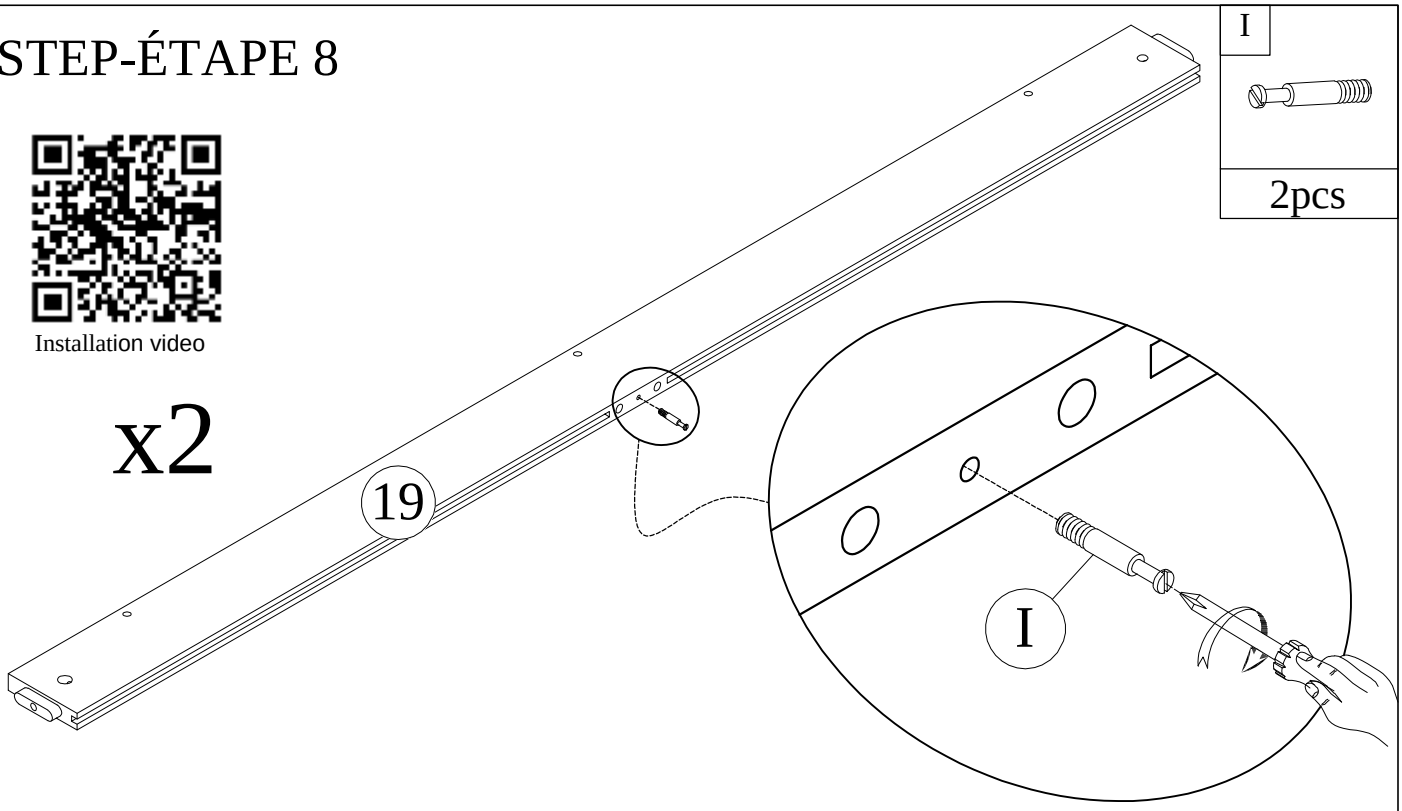
x2



I
2pcs

STEP-ÉTAPE 9

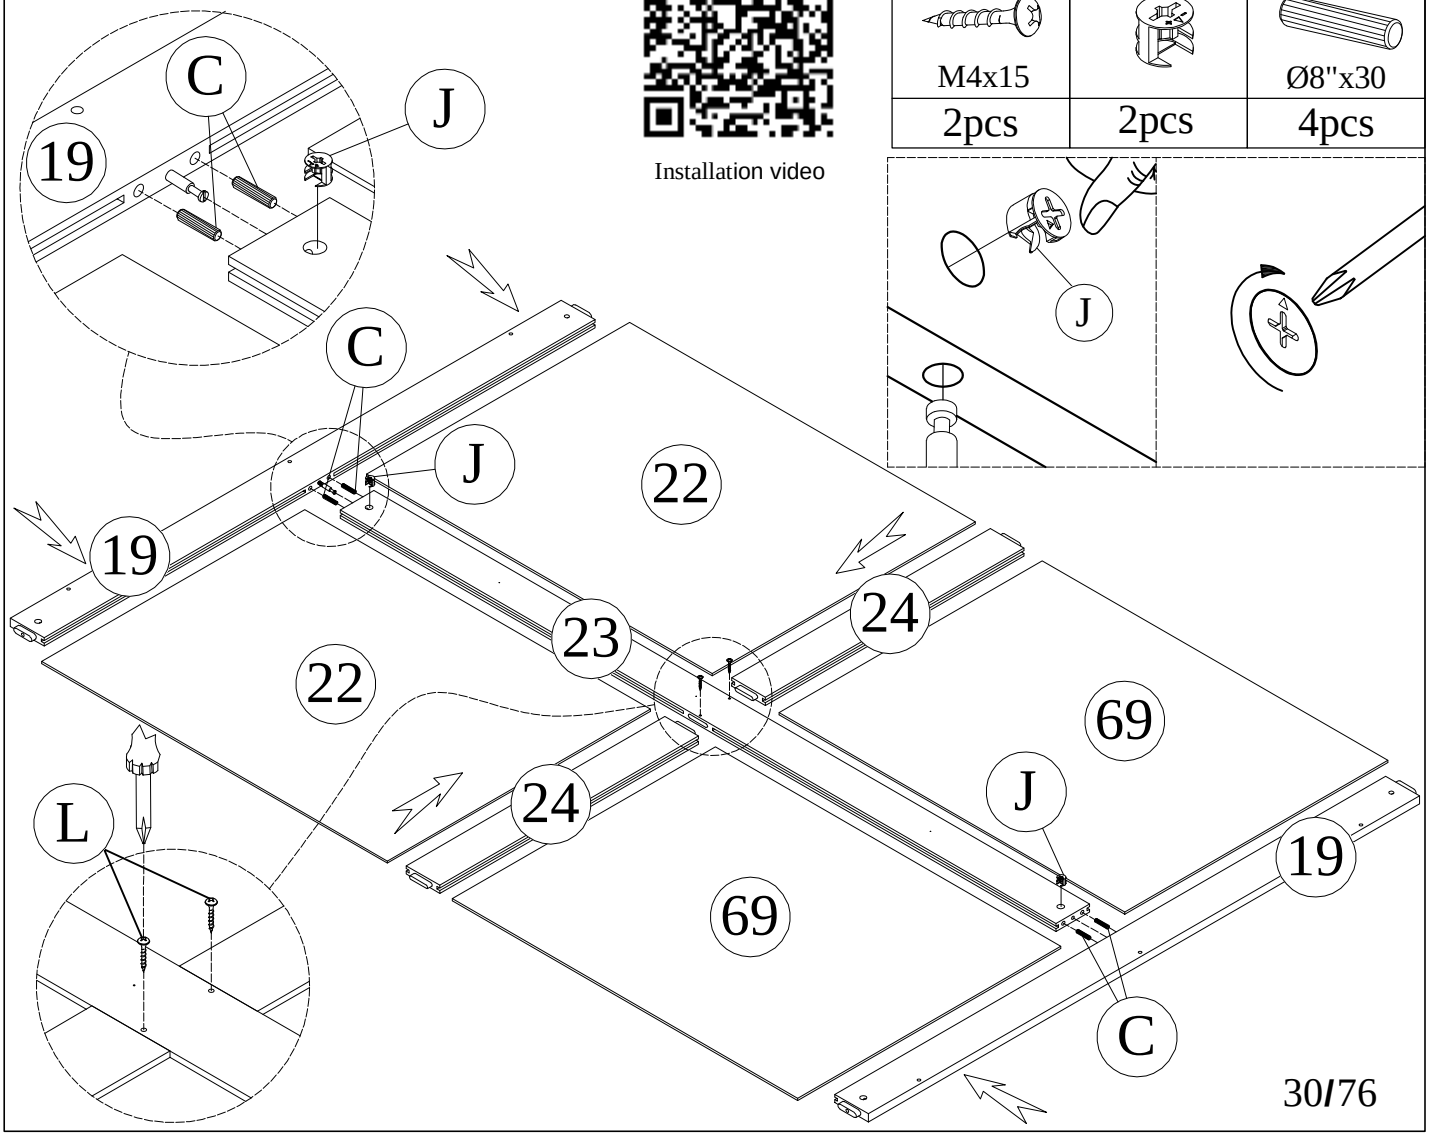
Installation video



L	J	C
M4x15		Ø8"x30
2pcs	2pcs	4pcs

STEP-ÉTAPE-10

IA	B	G
	Ø1/4"x12	Ø1/4"x120
2pcs	4pcs	4pcs

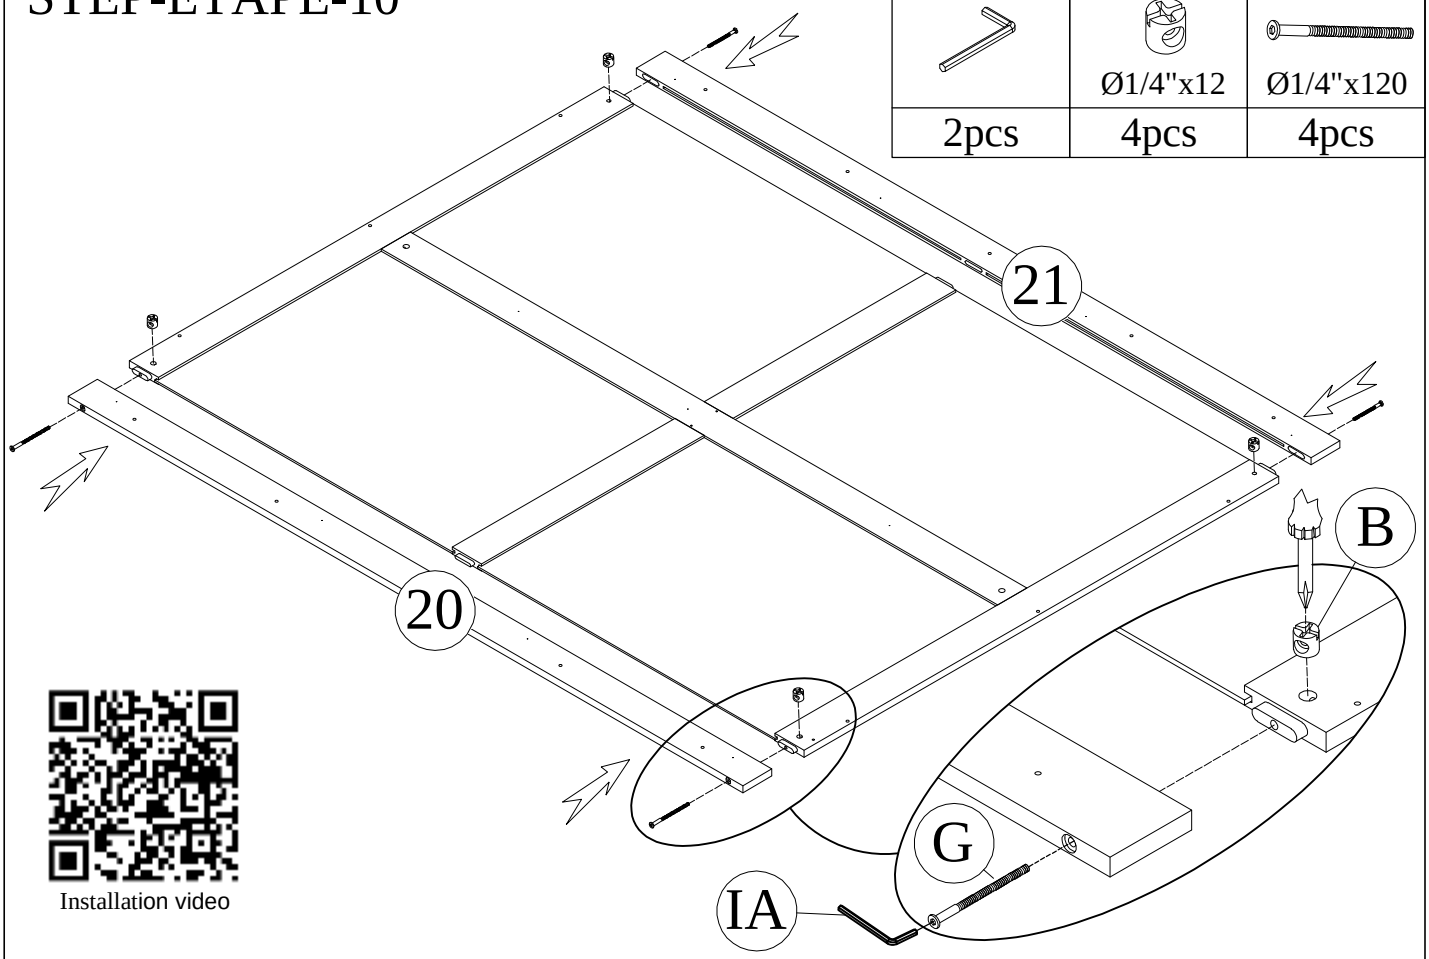


Installation video

STEP-ÉTAPE-11

B	C	H
Ø1/4"x12	Ø8"x30	Ø1/4"x 60
4pcs	8pcs	4pcs

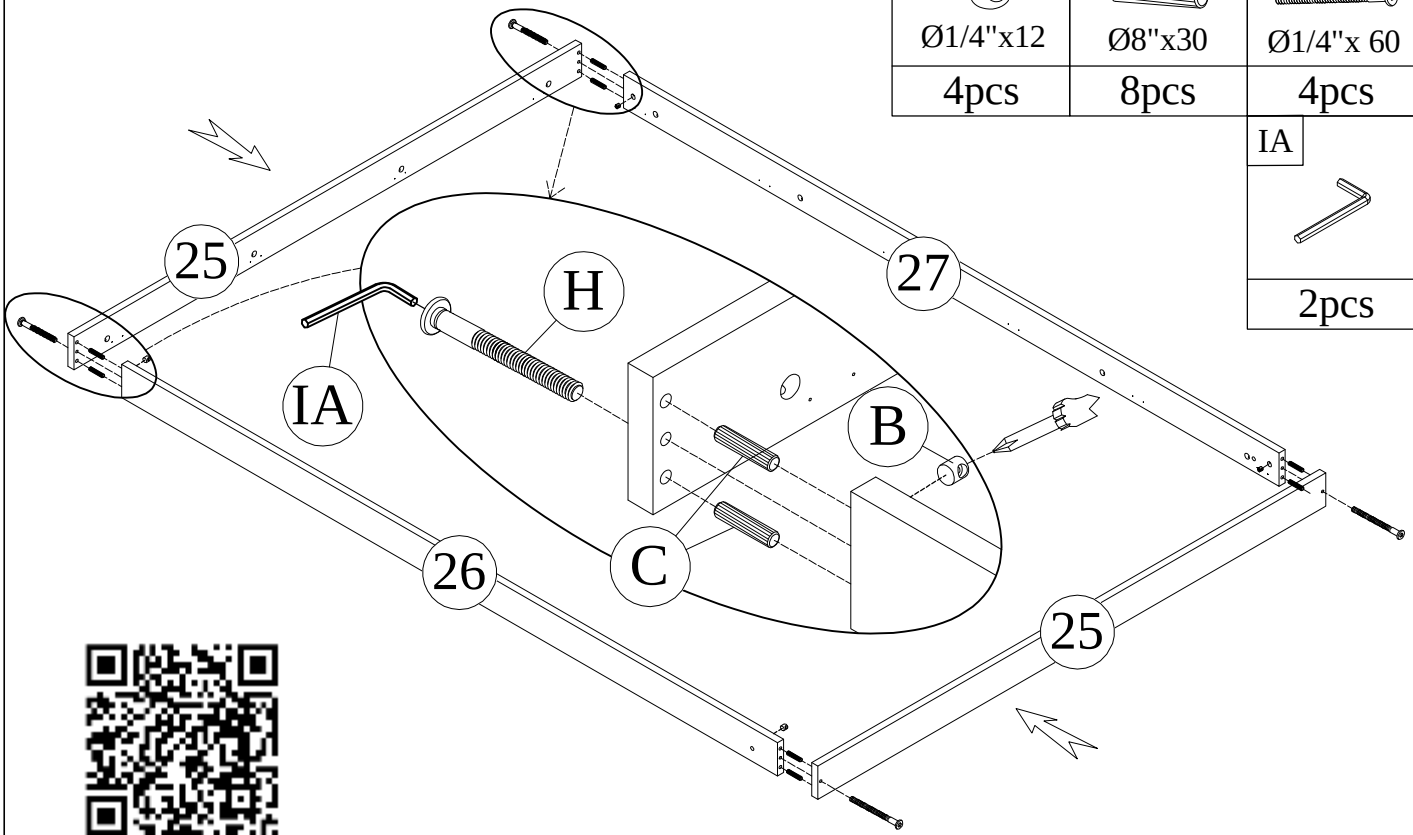IA
2pcs




Installation video

STEP-ÉTAPE-12

B	D
	
Ø1/4"x12	Ø1/4"x70
16pcs	16pcs


IA

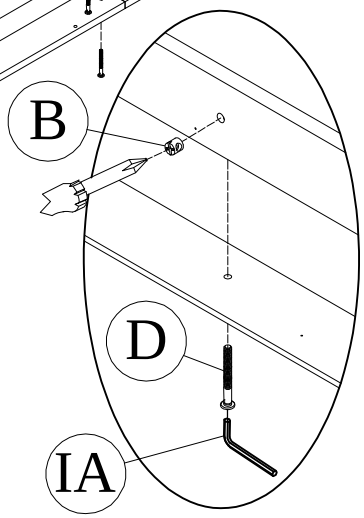2pcs




Installation video


STEP-ÉTAPE-13

MA

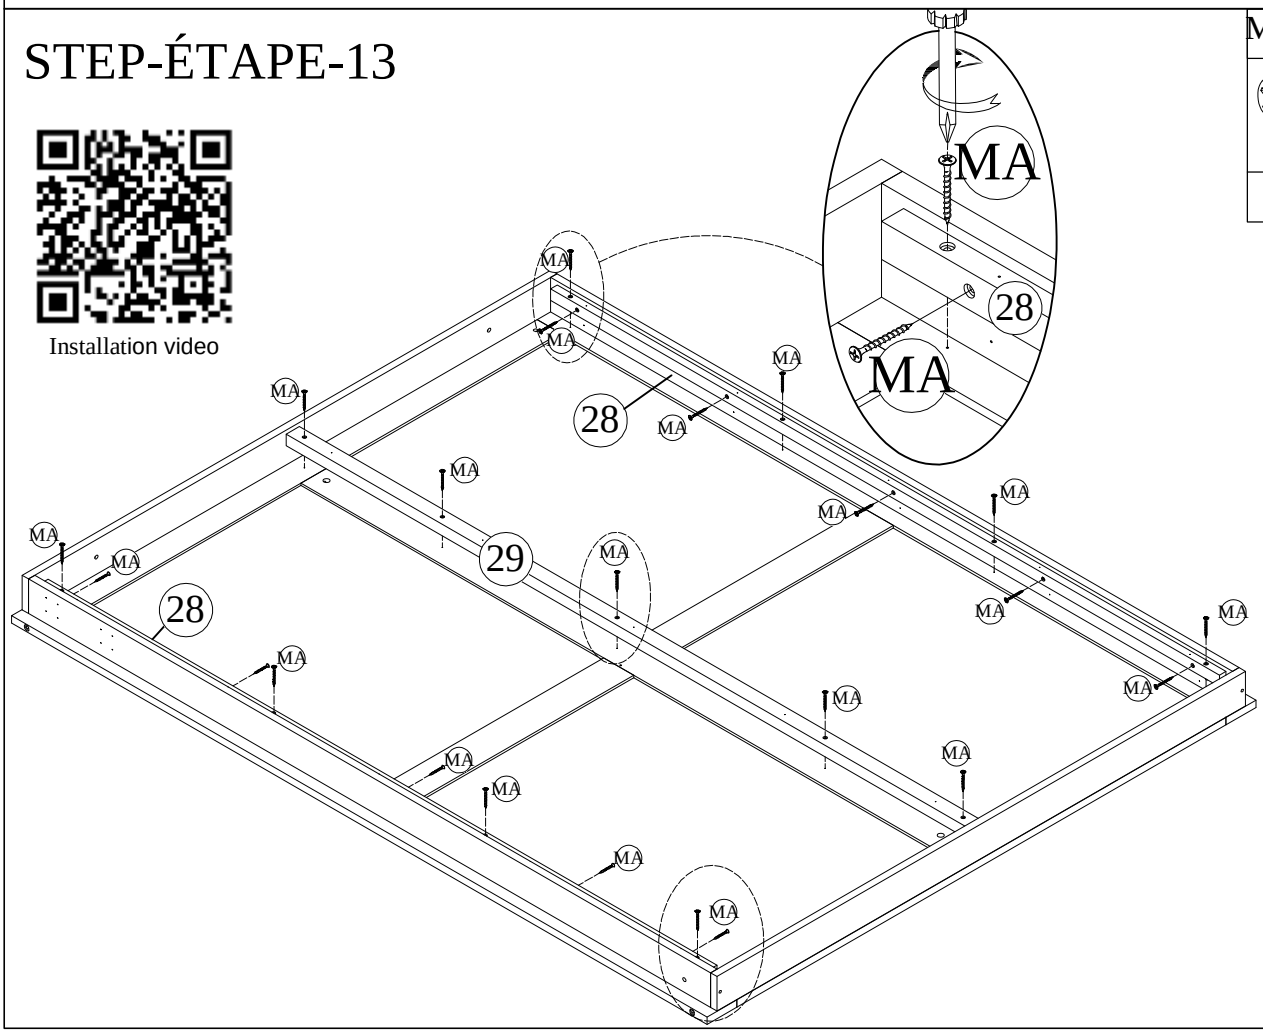M4x35
23pcs

Installation video

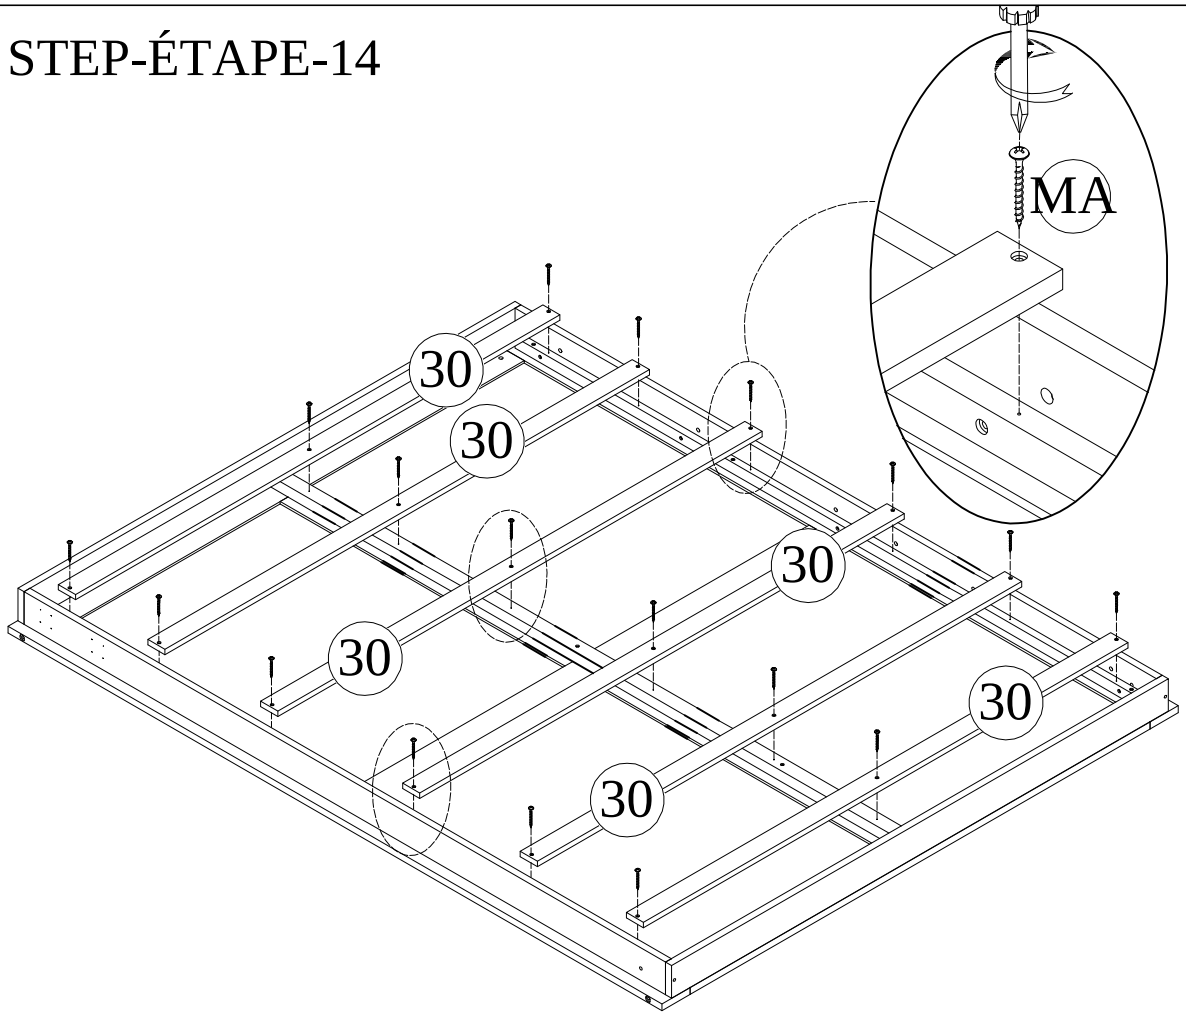

STEP-ÉTAPE-14

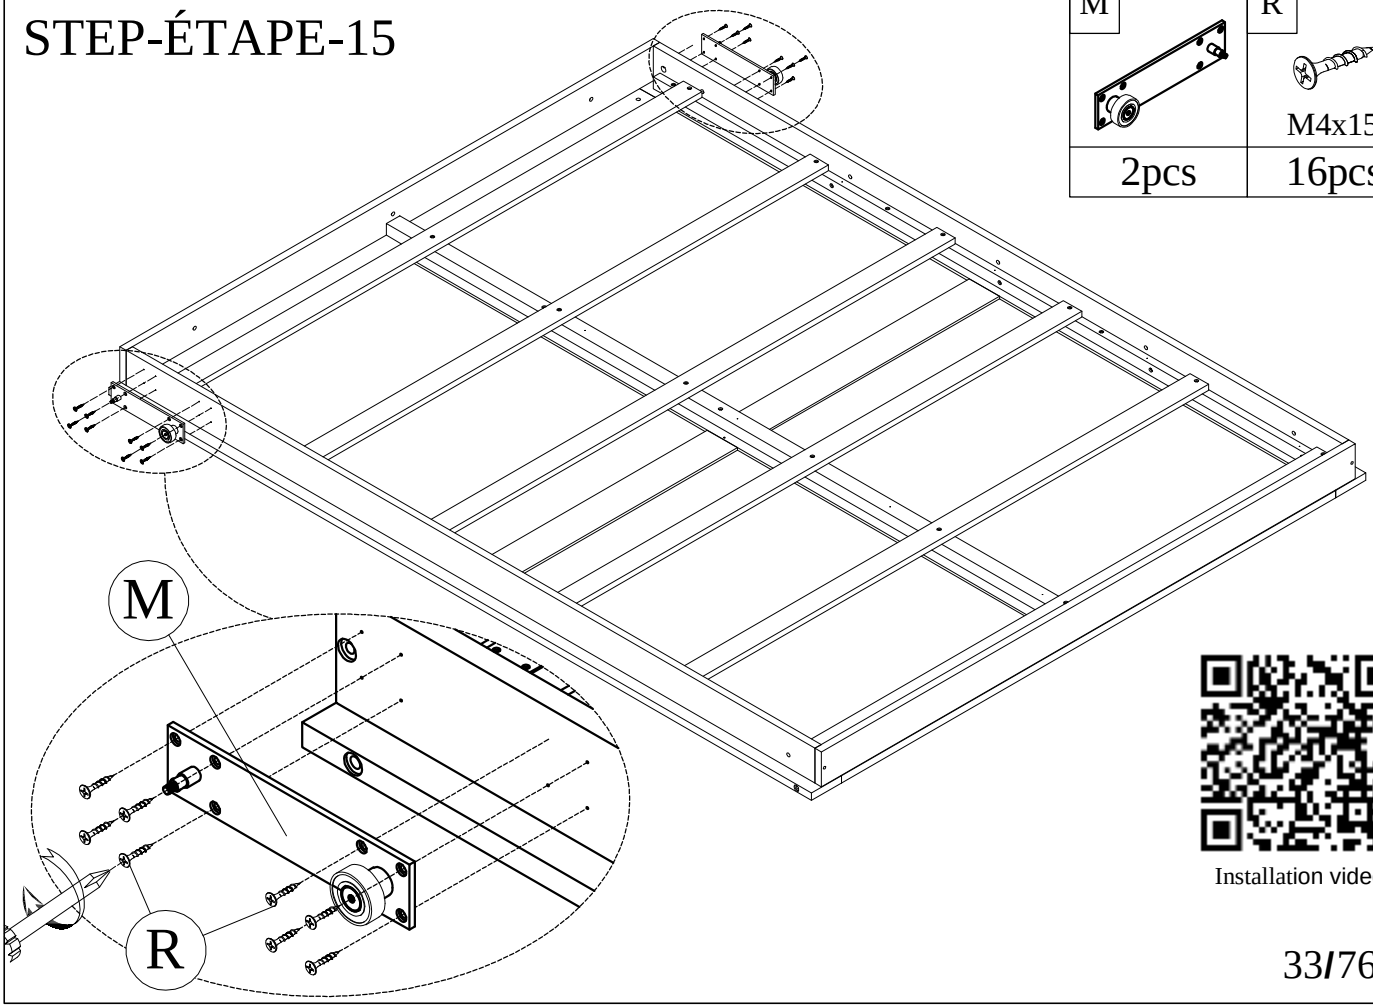


MA

M4x35
18pcs

Installation video

STEP-ÉTAPE-15




M	R
2pcs	M4x15
	16pcs


Installation video


STEP-ÉTAPE-16

N	O
2pcs	2pcs

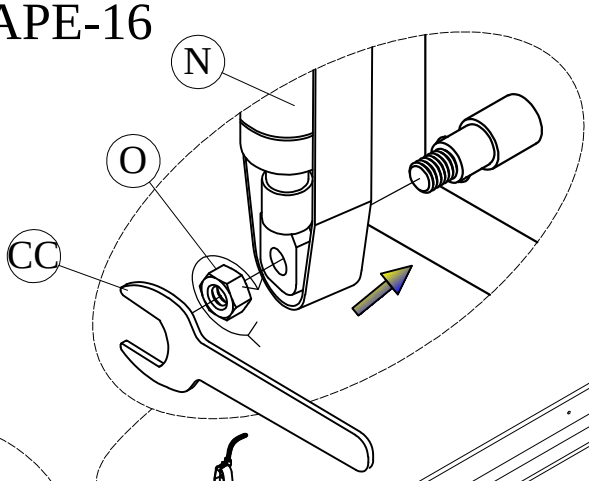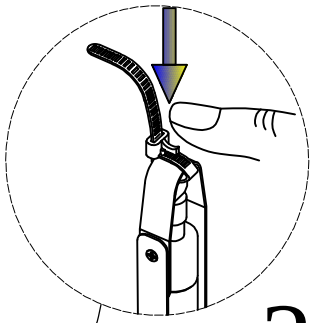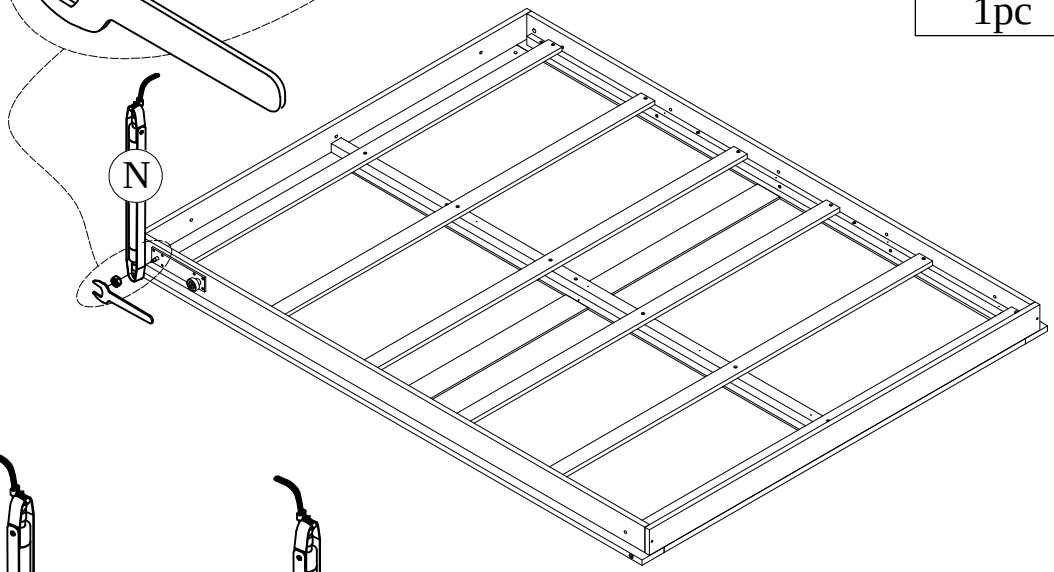
CC
1pc








x2

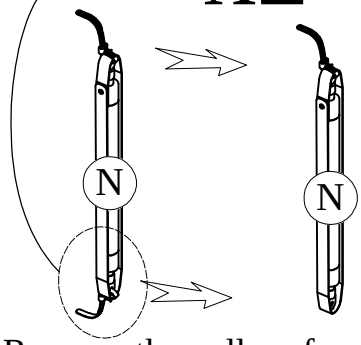


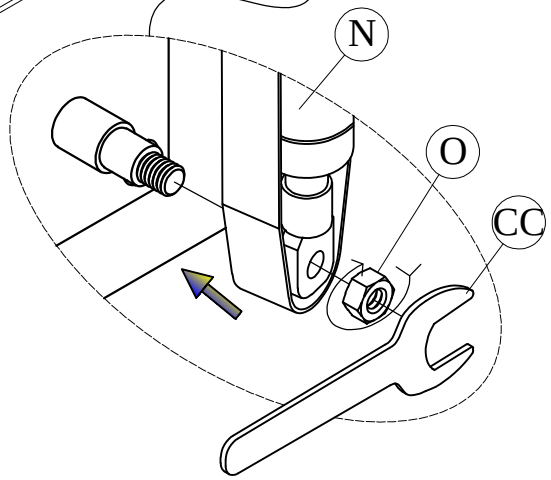Remove the pulleys from both ends of the piston.




Installation video



STEP-ÉTAPE-17


R	P
 M4x15	
10pcs	1pc

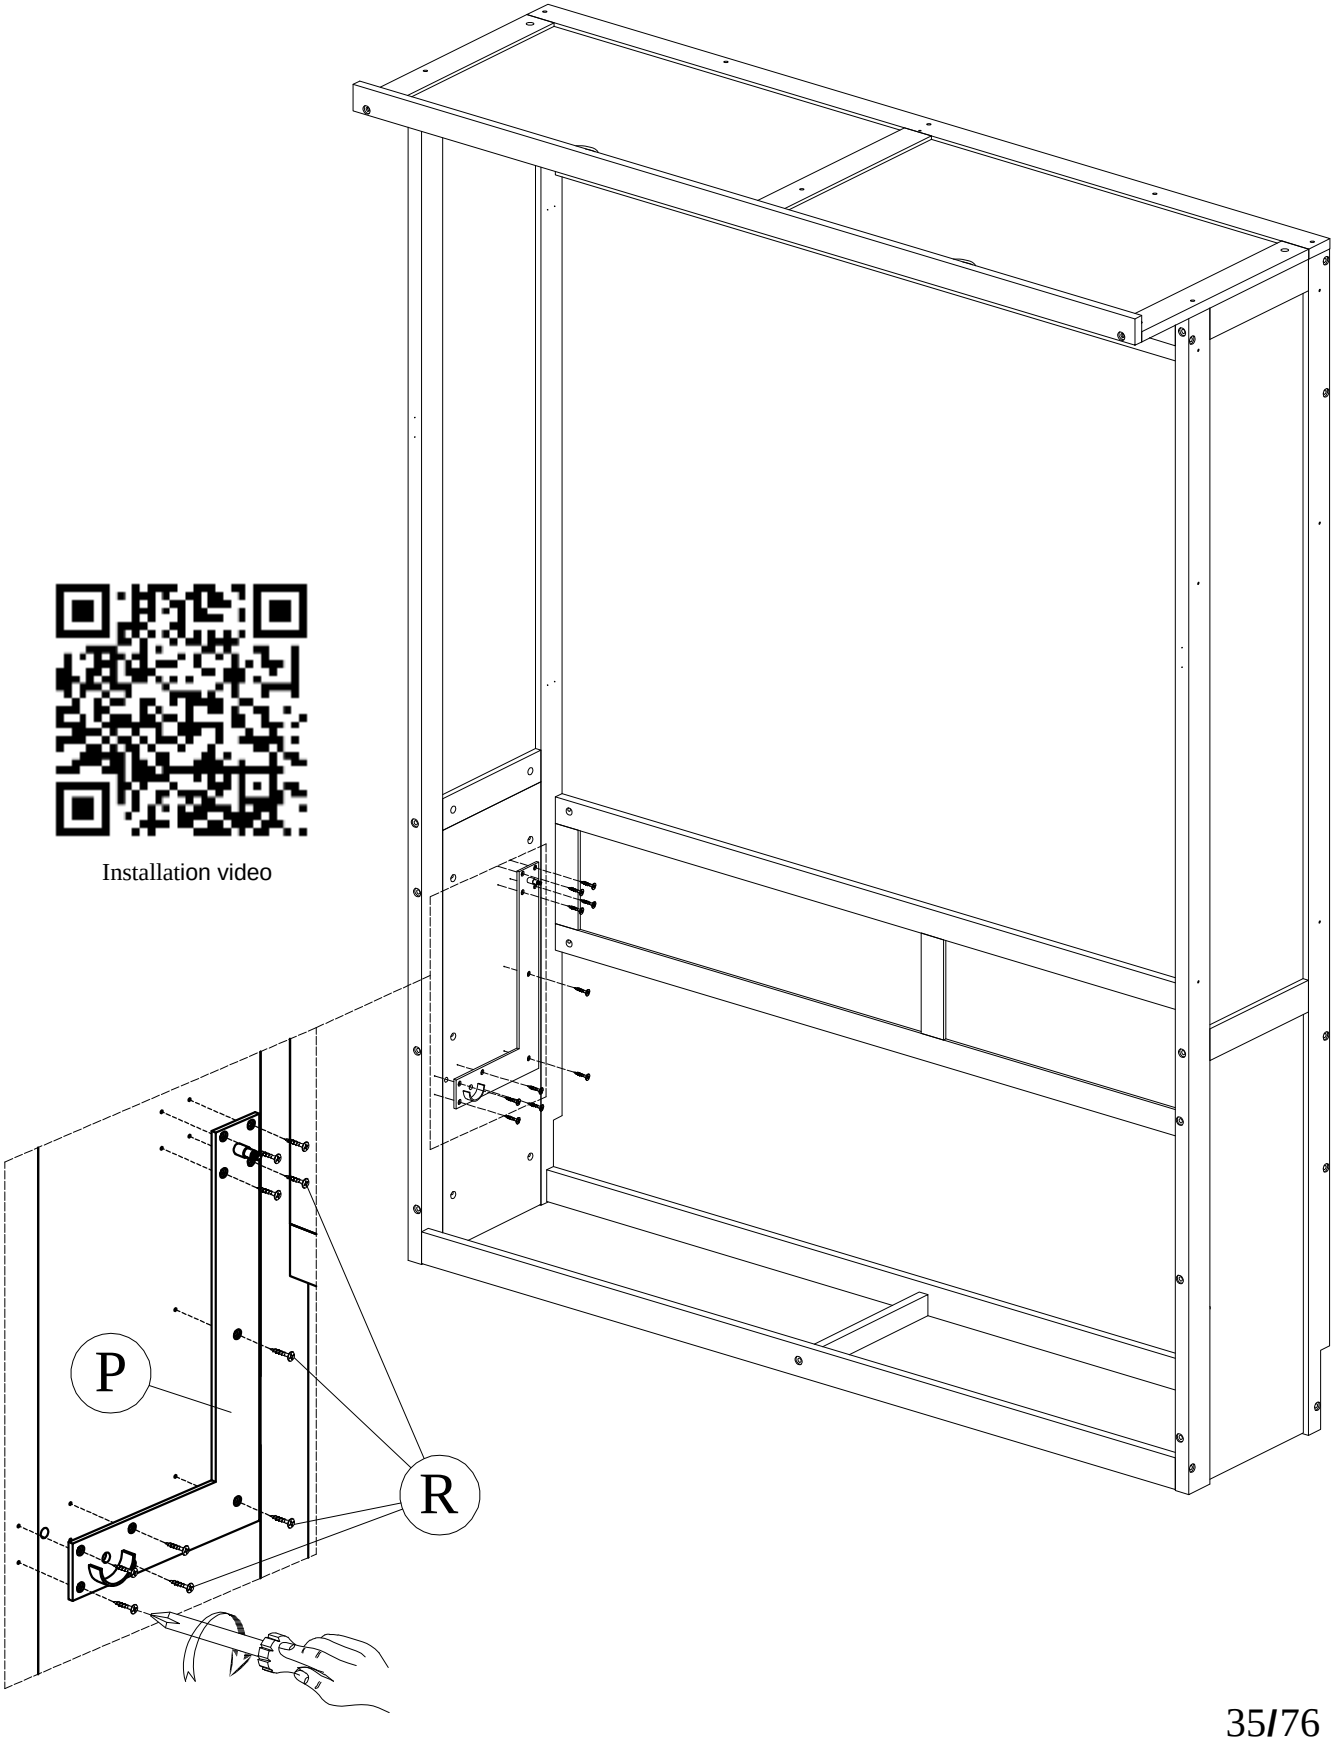Installation video




STEP-ÉTAPE-18


Q	R
	 M4x15
1pc	10pcs

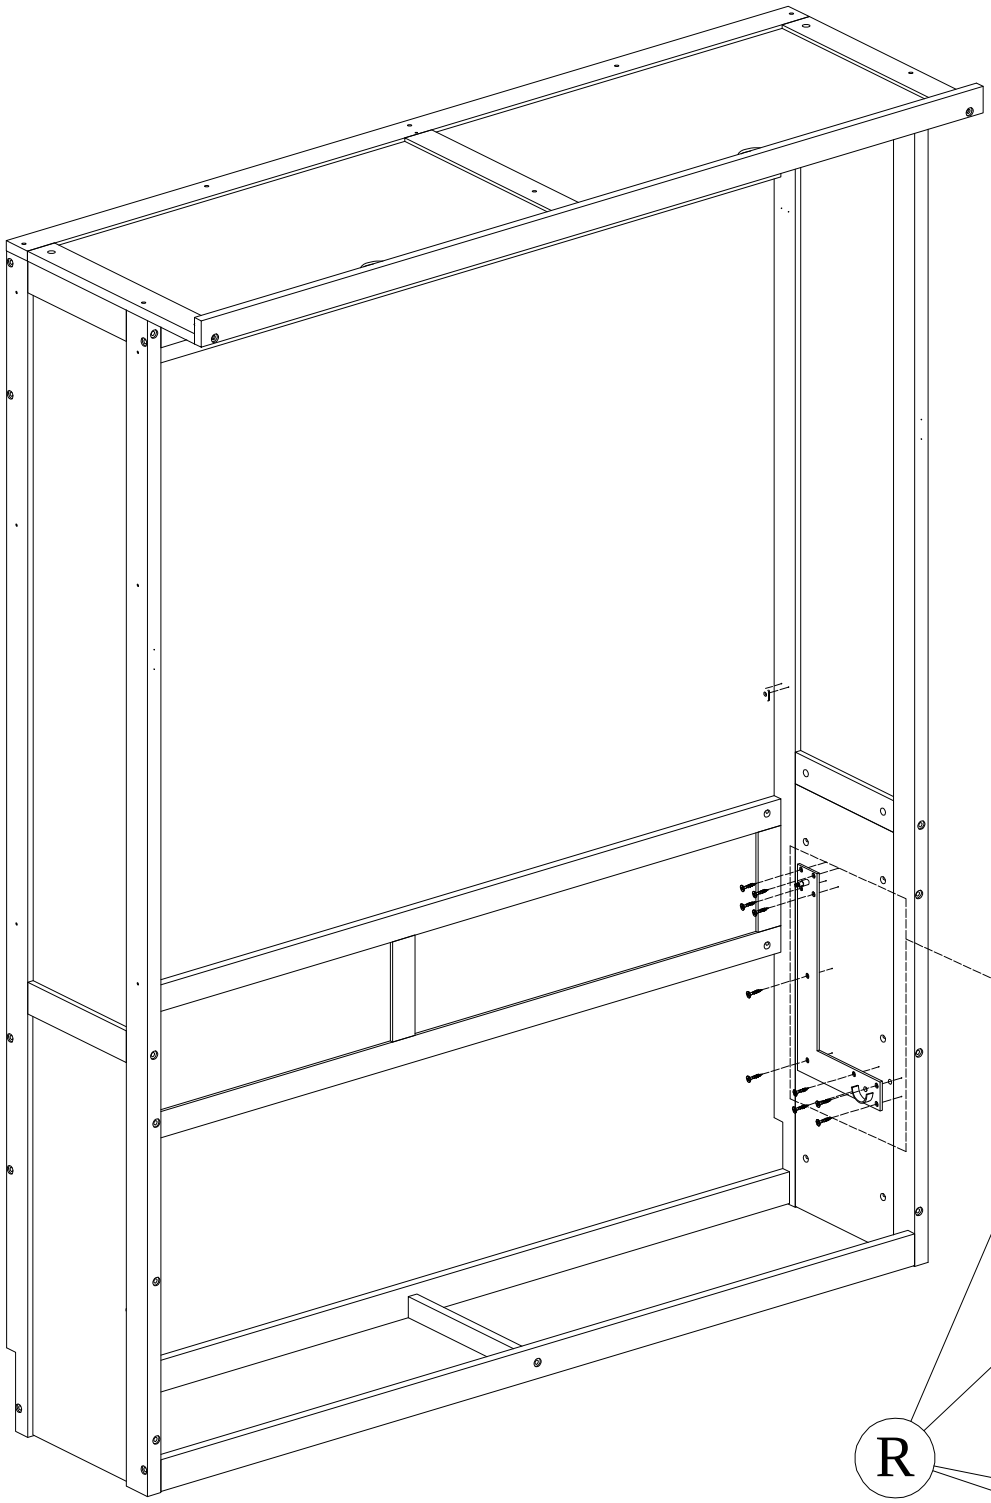


Installation video

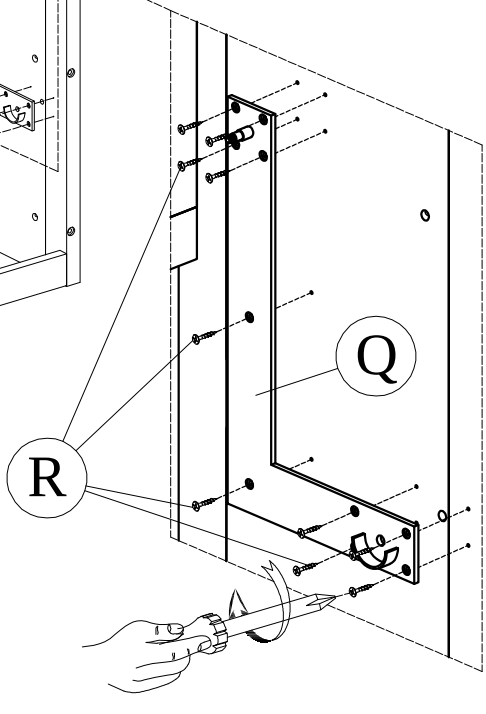

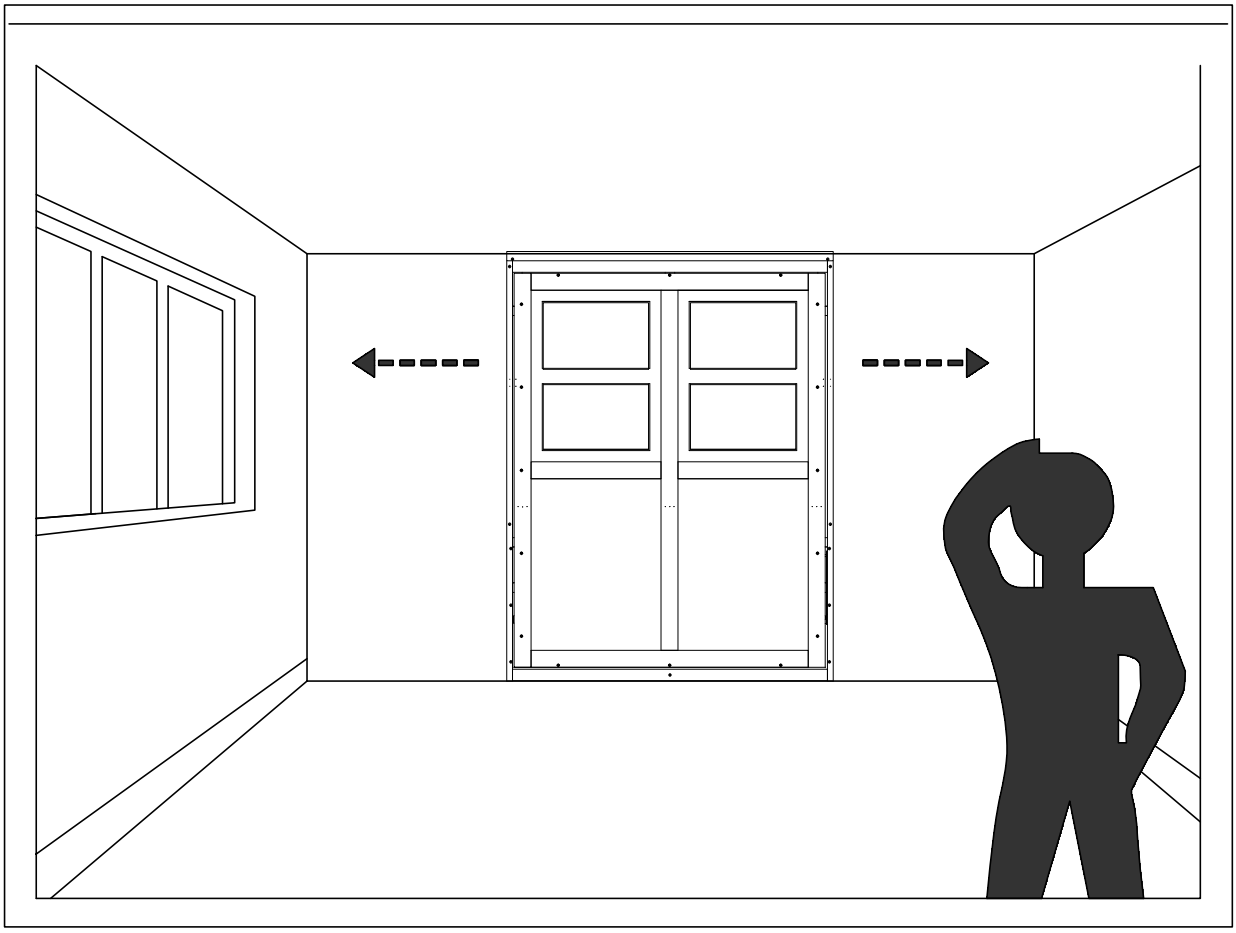
1- Determine the position of the bed in the room.
1- Déterminez la position du lit dans la chambre.



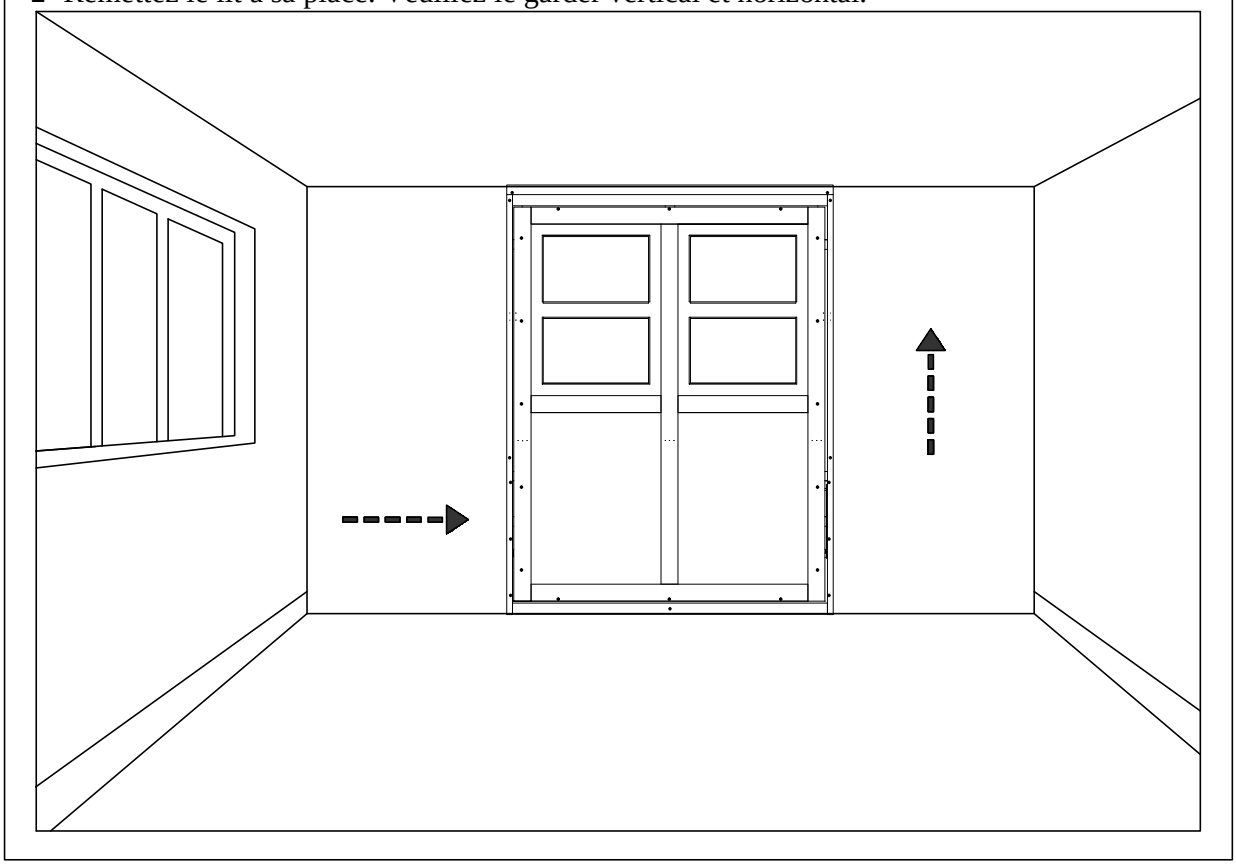
2- Put the bed back in its place. Please keep it vertical and horizontal.
2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.






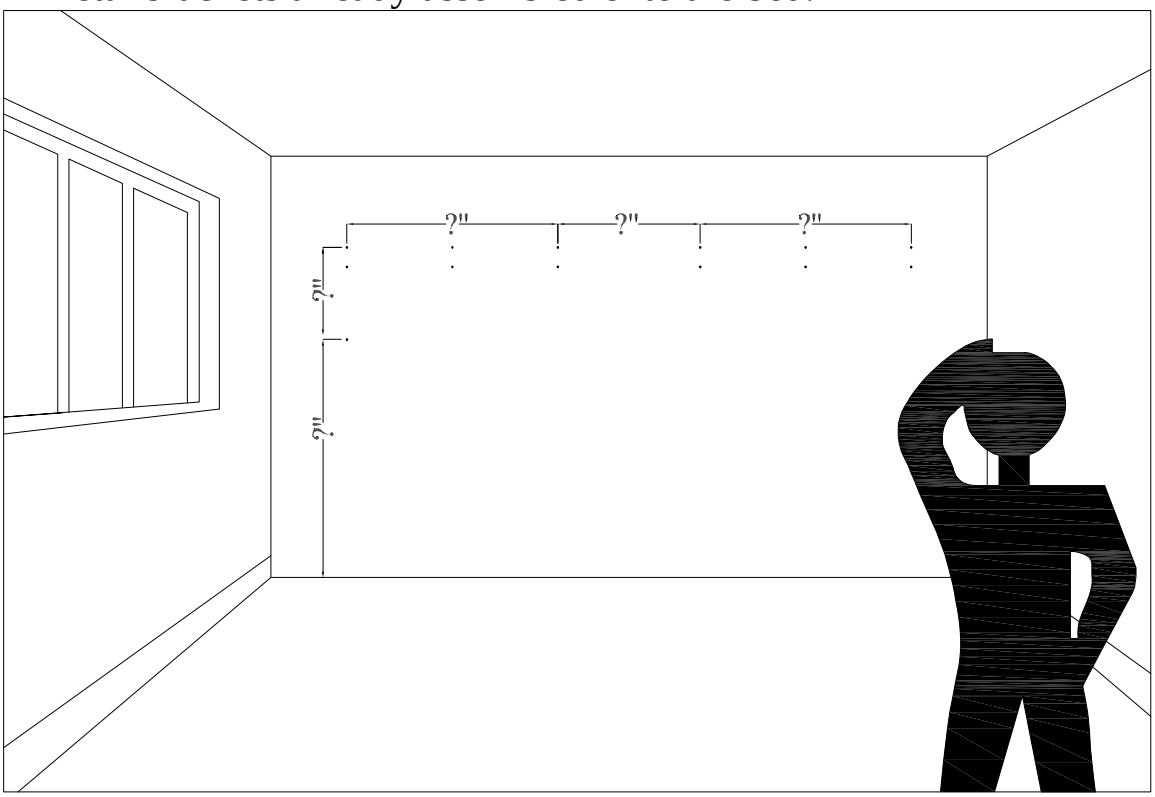
3- Mark the drilling points according to the actual product and the metal brackets already assembled onto the bed.



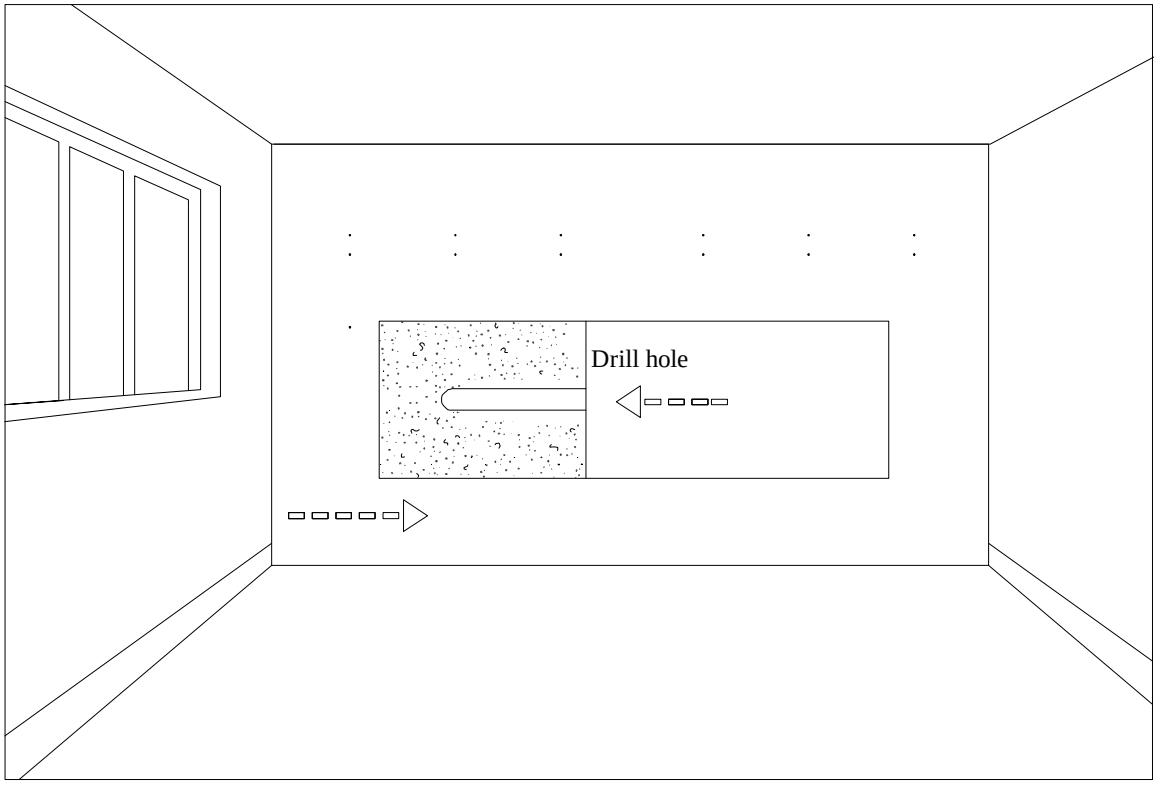
4- Drill holes at the marked points,
the holes must be sized to fit the metal anchors.





STEP-ÉTAPE-19

S	DA
	
4pcs	3pcs
R	T
 M4x15	 M4x20
8pcs	6pcs

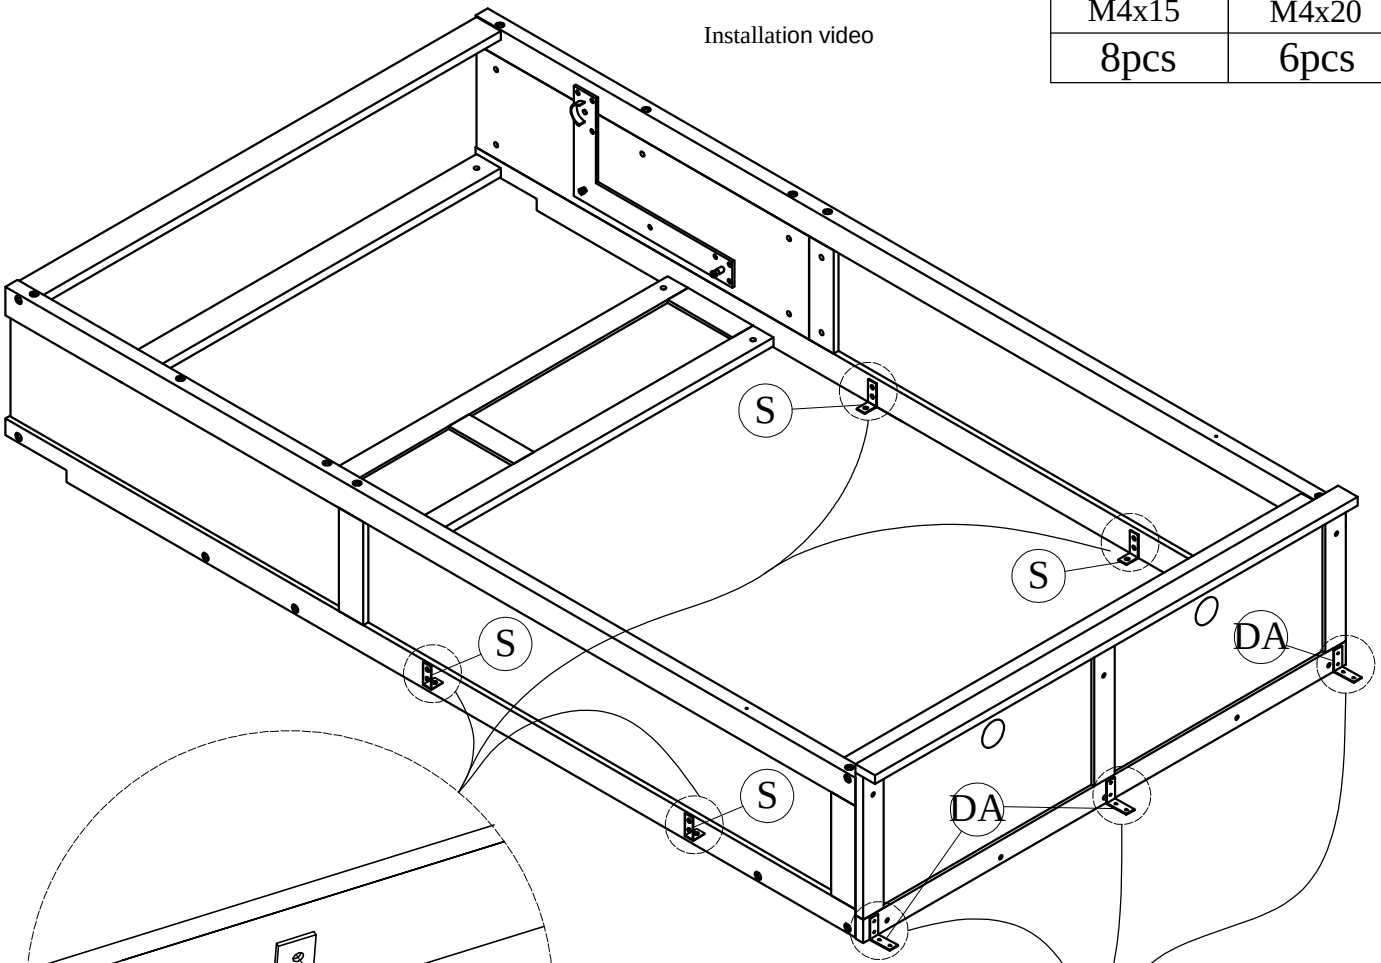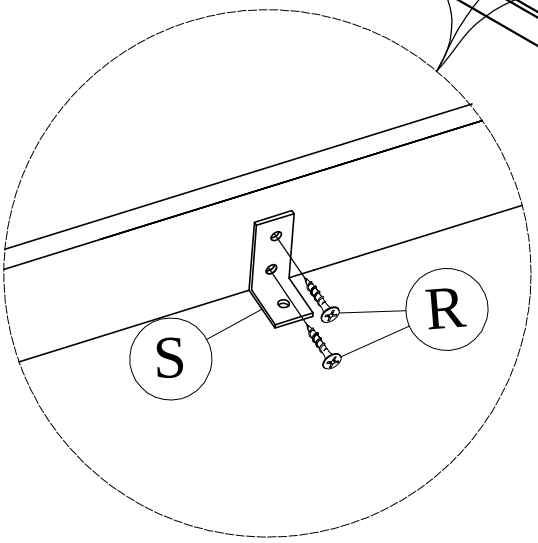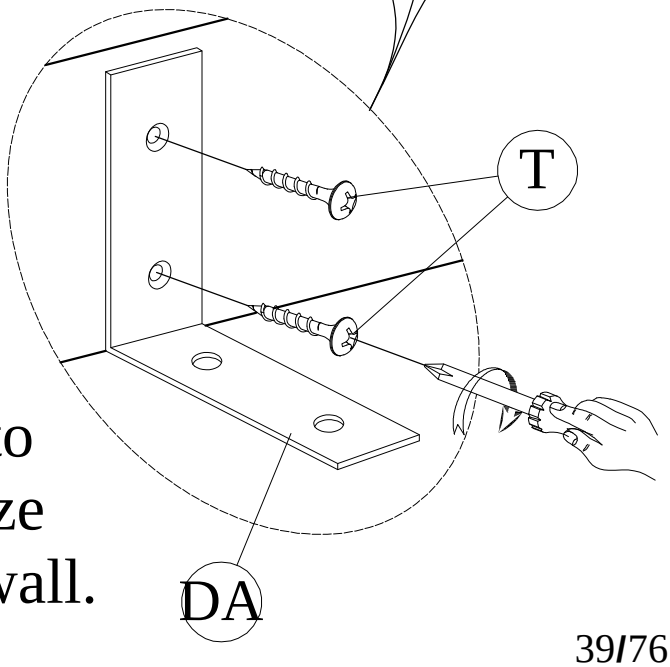Installation video











Attach the metal brackets to the bed according to the size of the drilled holes in the wall.

STEP-ÉTAPE-20

This accessory is for use on brick or concrete walls.

AC	BB
	
1pc	10pcs

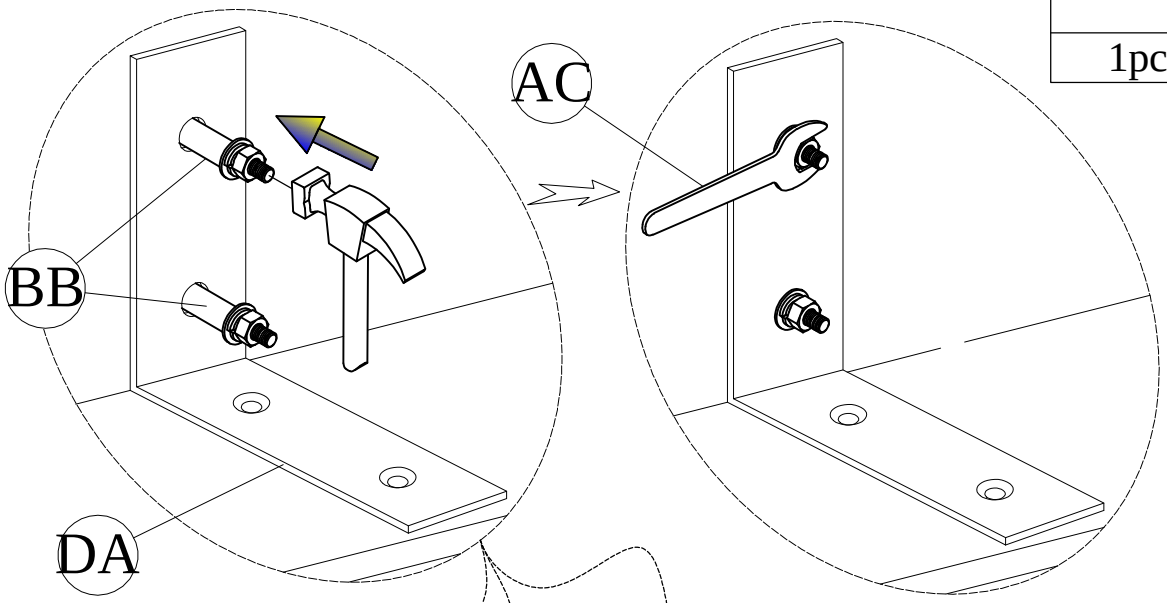

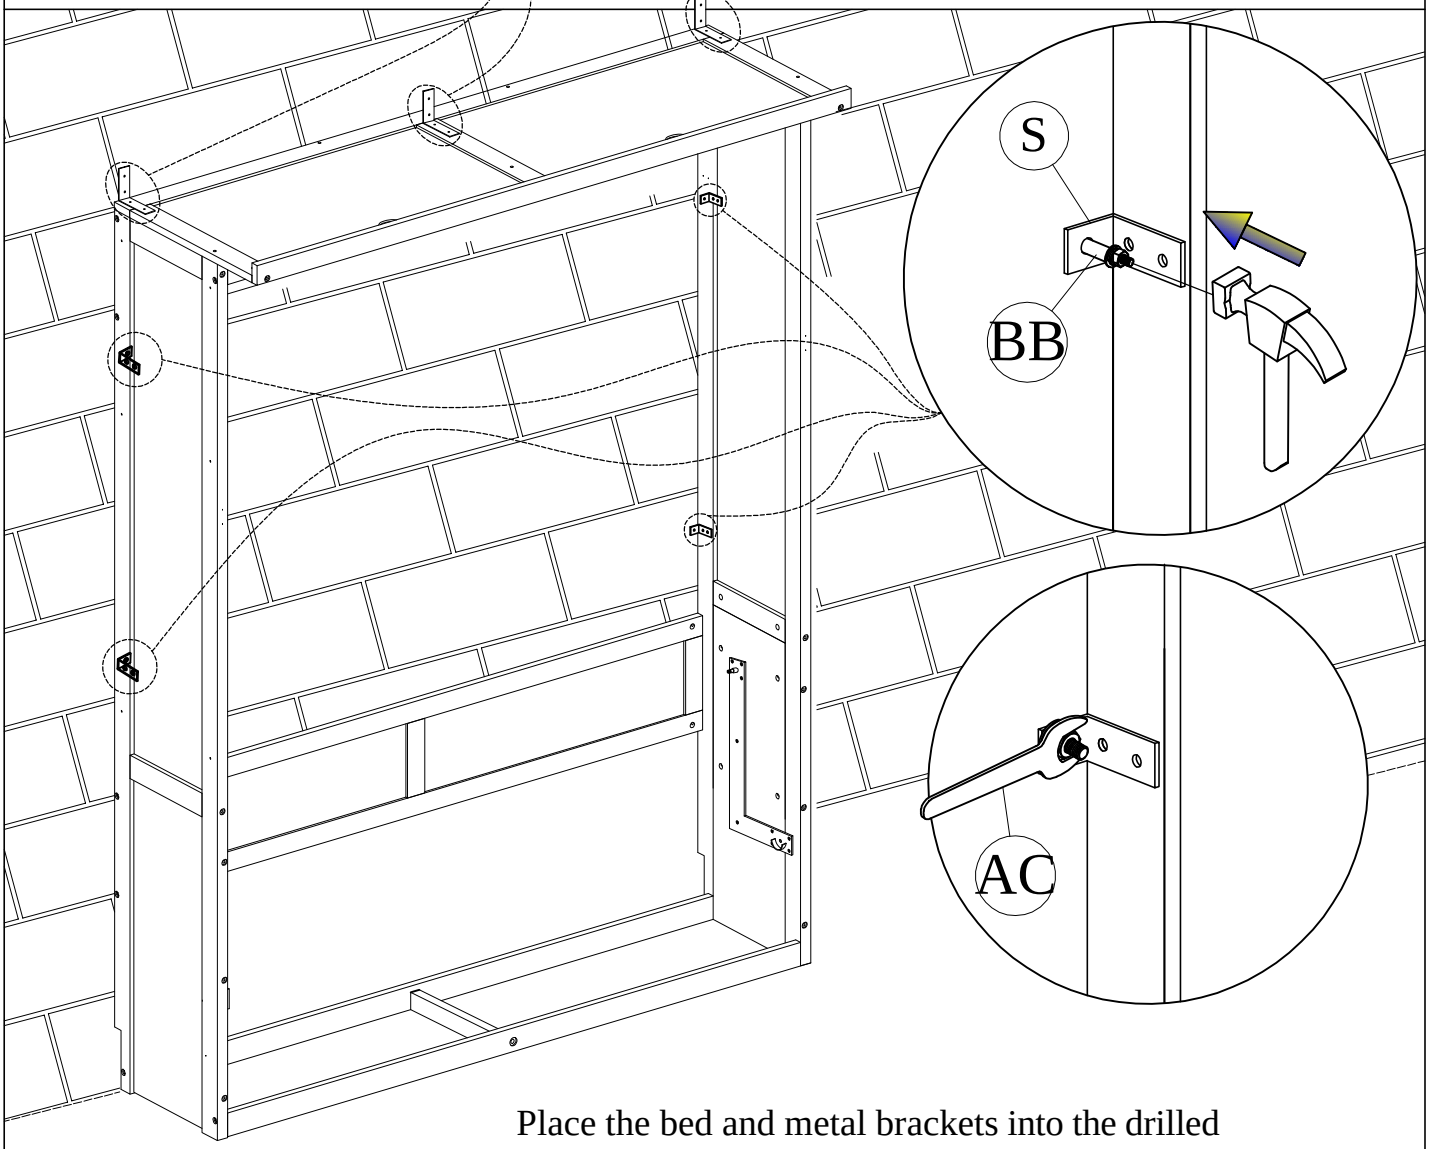



Place the bed and metal brackets into the drilled holes in the wall, then hammer in the metal anchors.

STEP-ÉTAPE-21

This accessory is for wooden walls.



BC	CA
10pcs	10pcs

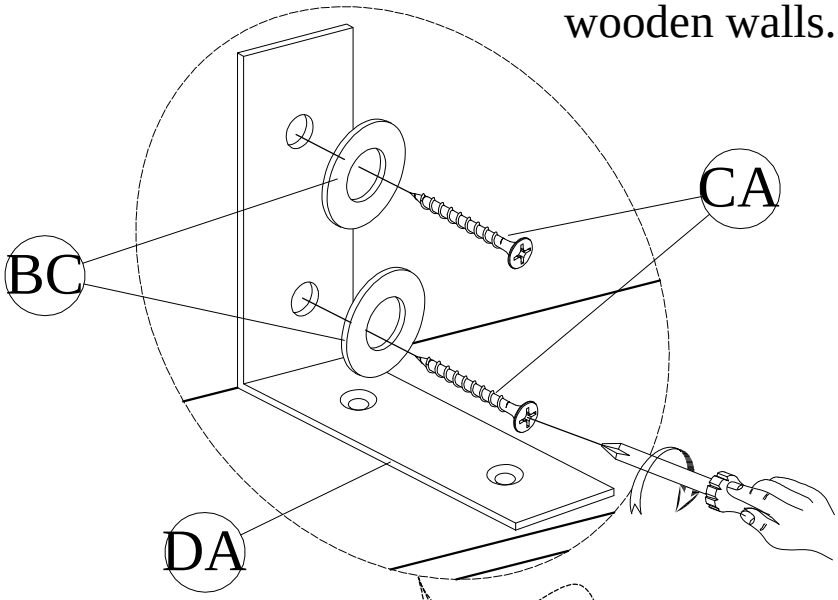


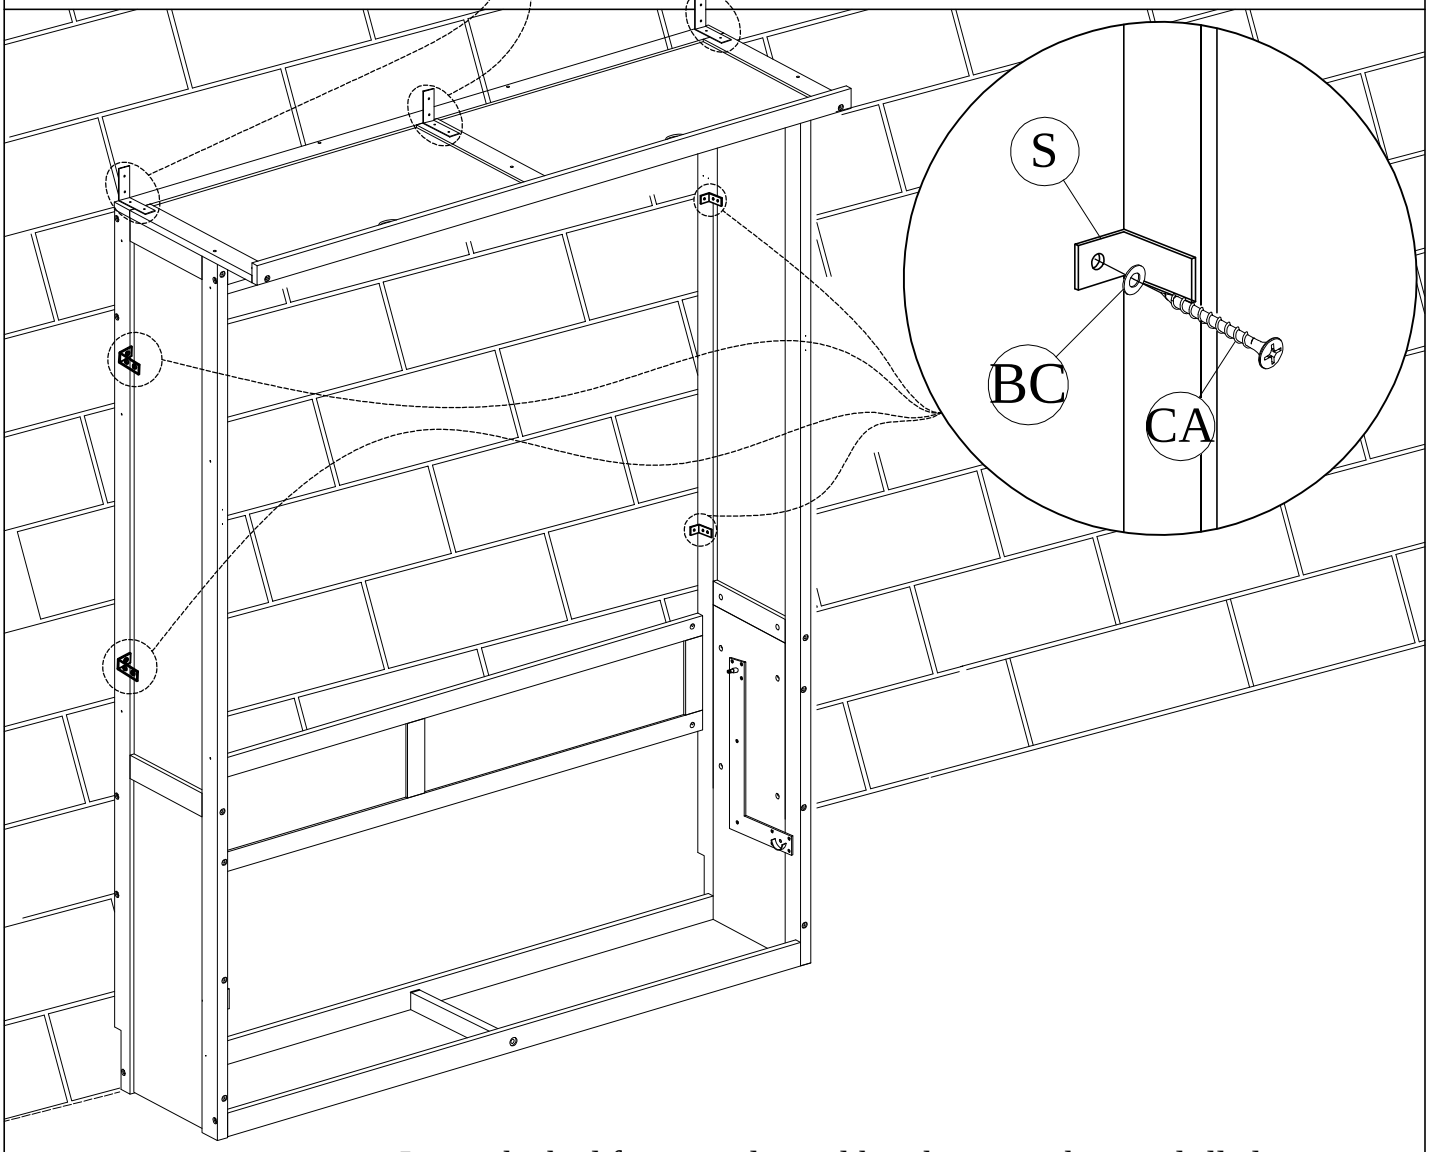


Insert the bed frame and metal brackets into the pre-drilled holes in the wall, then assemble the accessories.

STEP-ÉTAPE-22

KA	L
	 M4x15
2pcs	4pcs

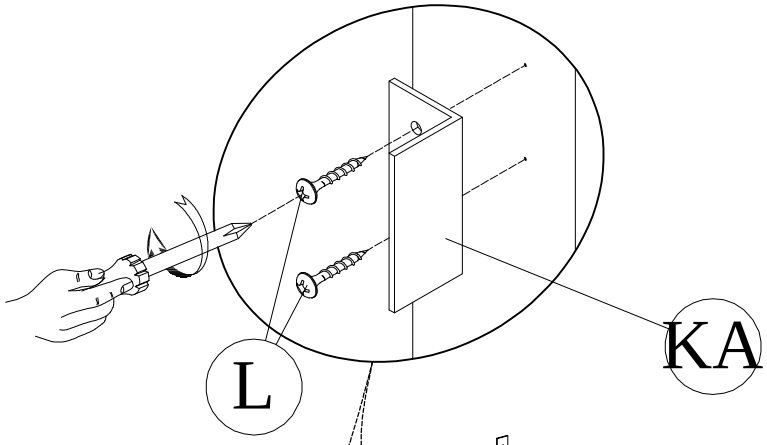

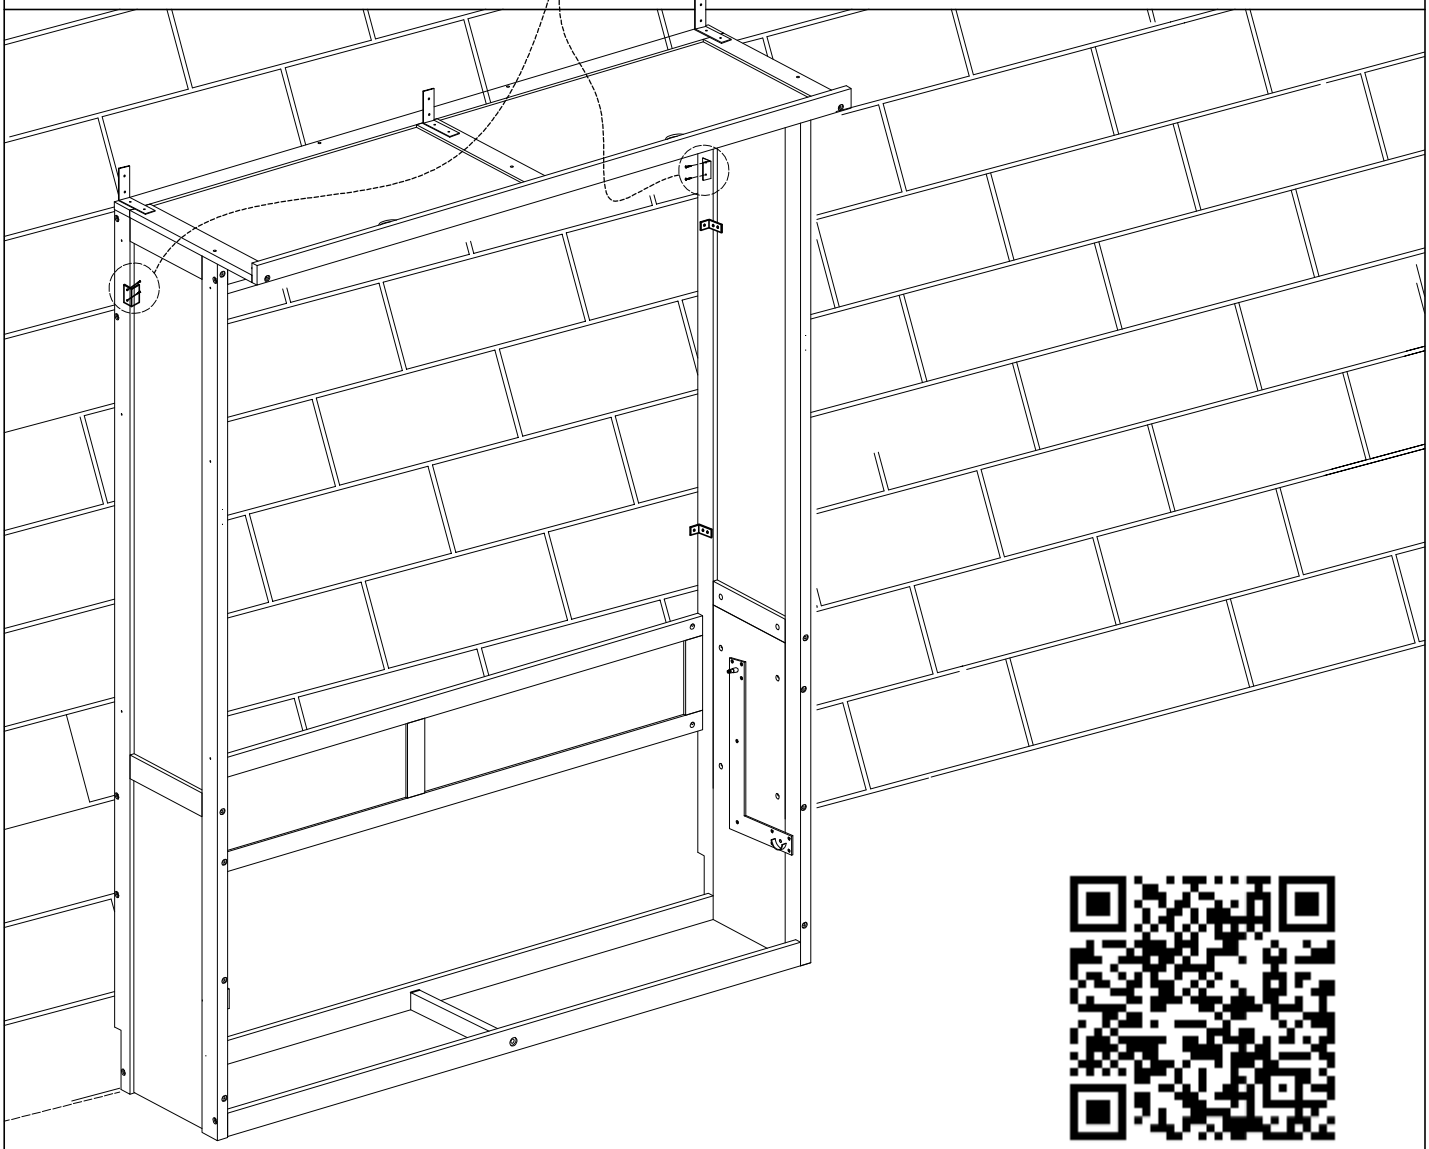



Installation video


STEP-ÉTAPE-23


IA	U
	 Ø1/3"x40
2pcs	2pcs

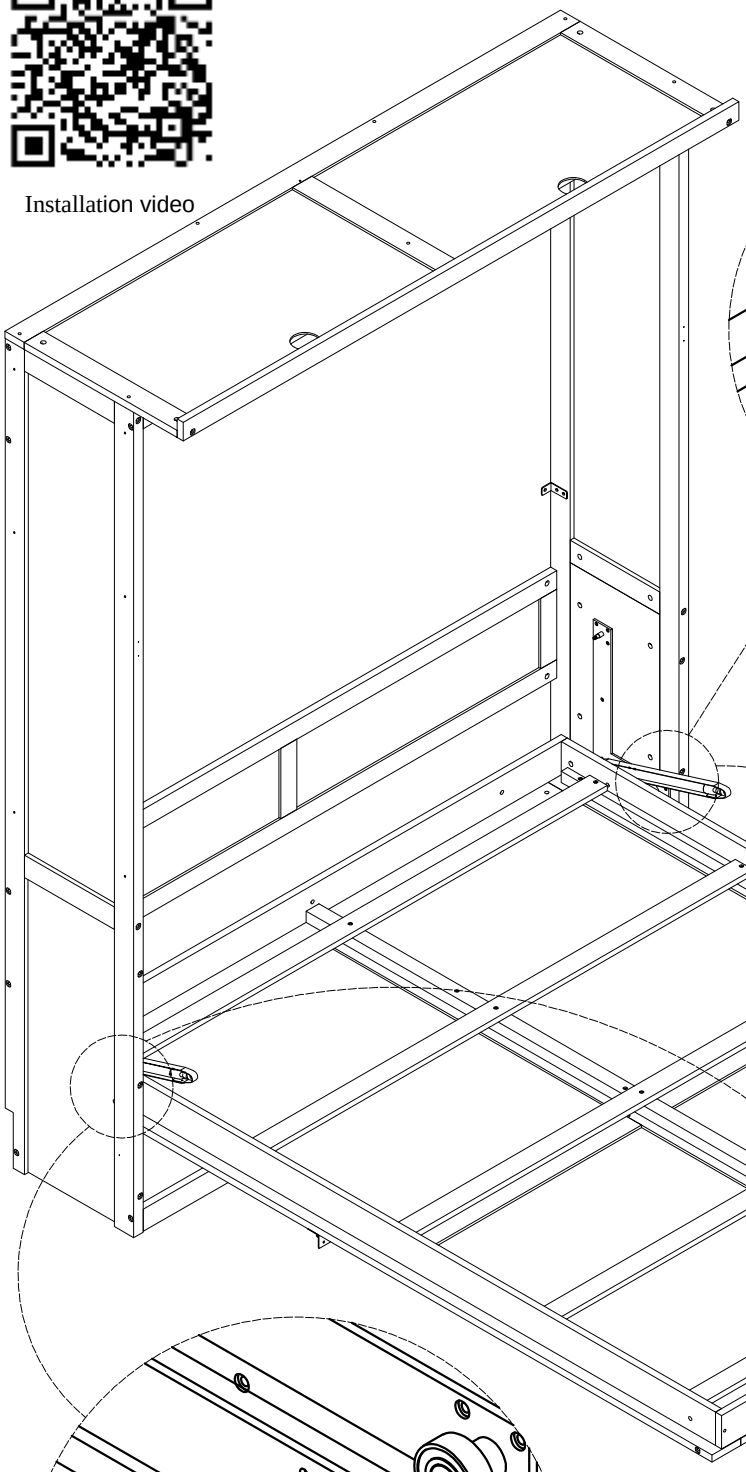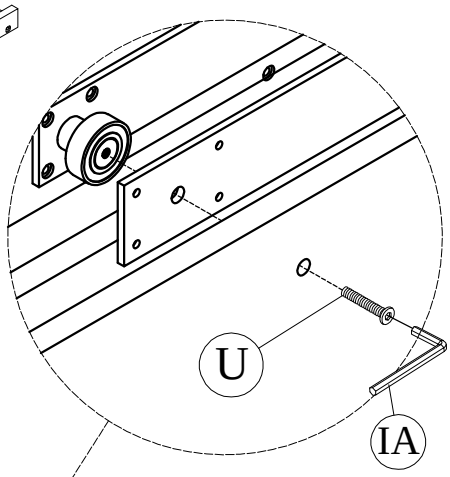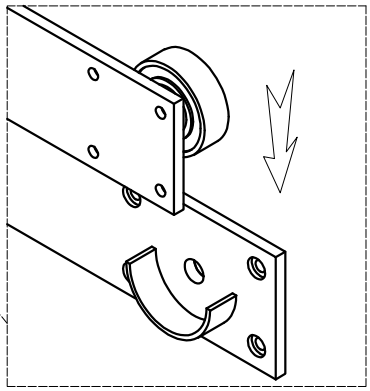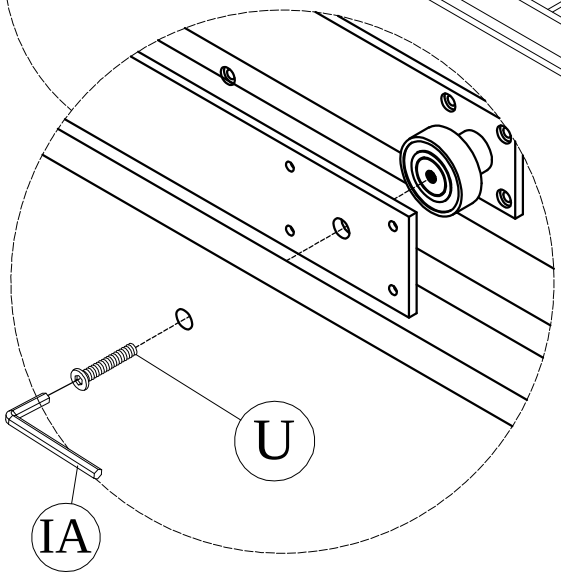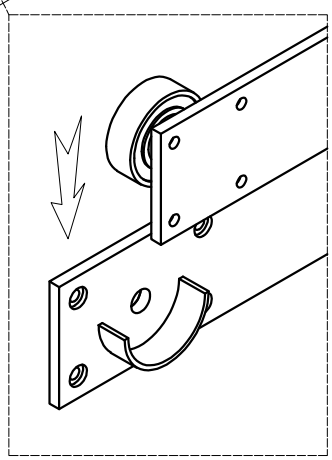
Installation video













STEP-ÉTAPE-24

IA	X	V	W
			 Ø1/4"x40
2pcs	2pcs	2pcs	2pcs


Installation video

STEP-ÉTAPE-25

Y	Z
	 Ø4x25
2pcs	4pcs

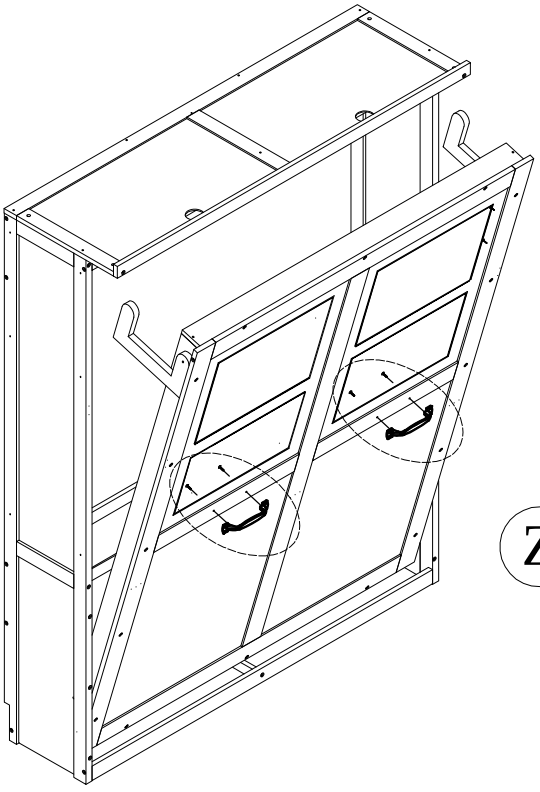


Installation video

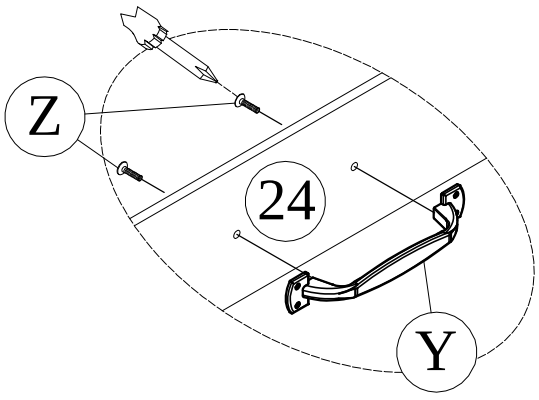

STEP-ÉTAPE-26


CC	O
1pc	2pcs

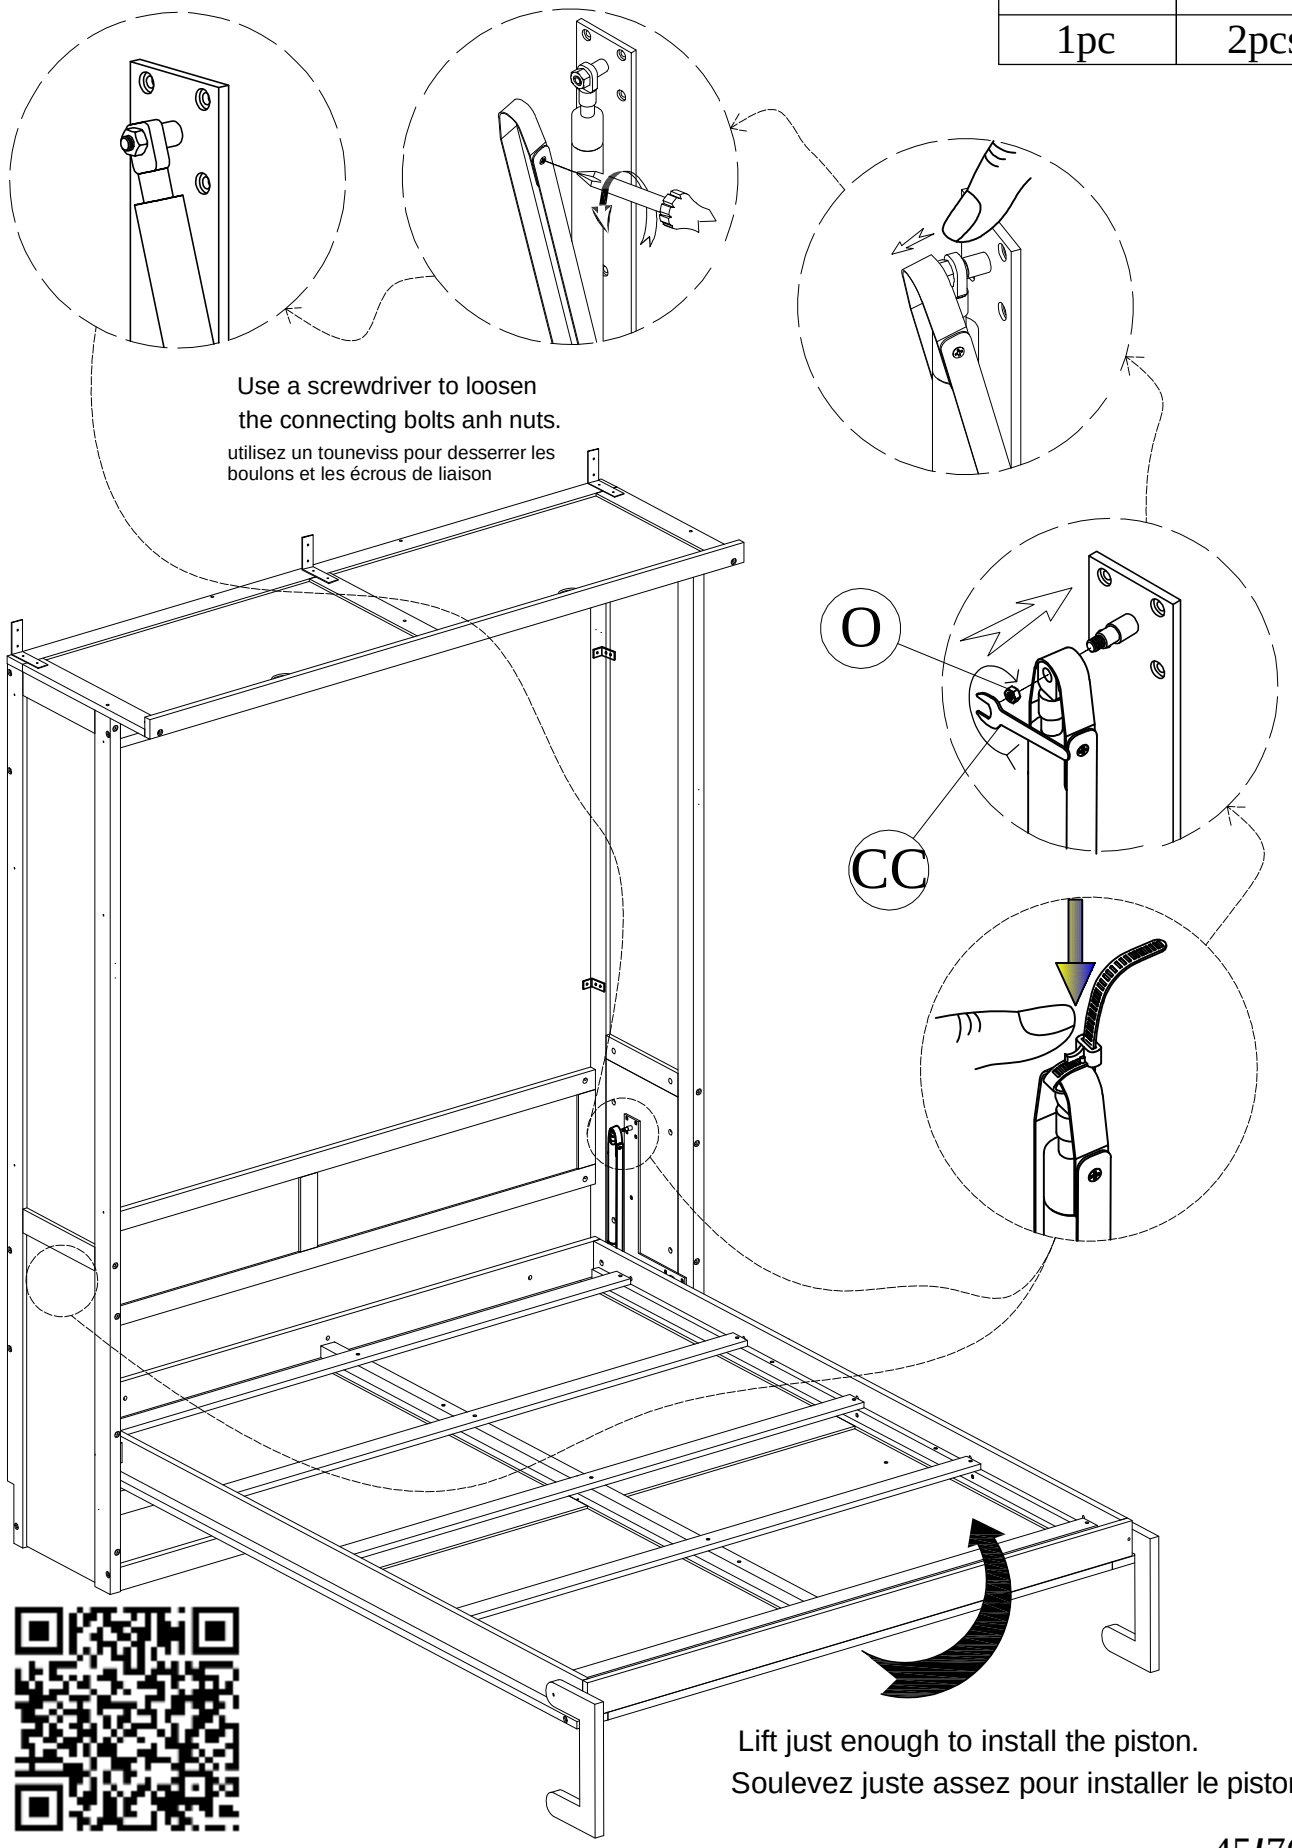

Installation video

Lift just enough to install the piston.
Soulevez juste assez pour installer le piston.

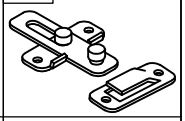STEP-ÉTAPE-27

L	TA
 M4x15	
8pcs	2pcs

Installation video

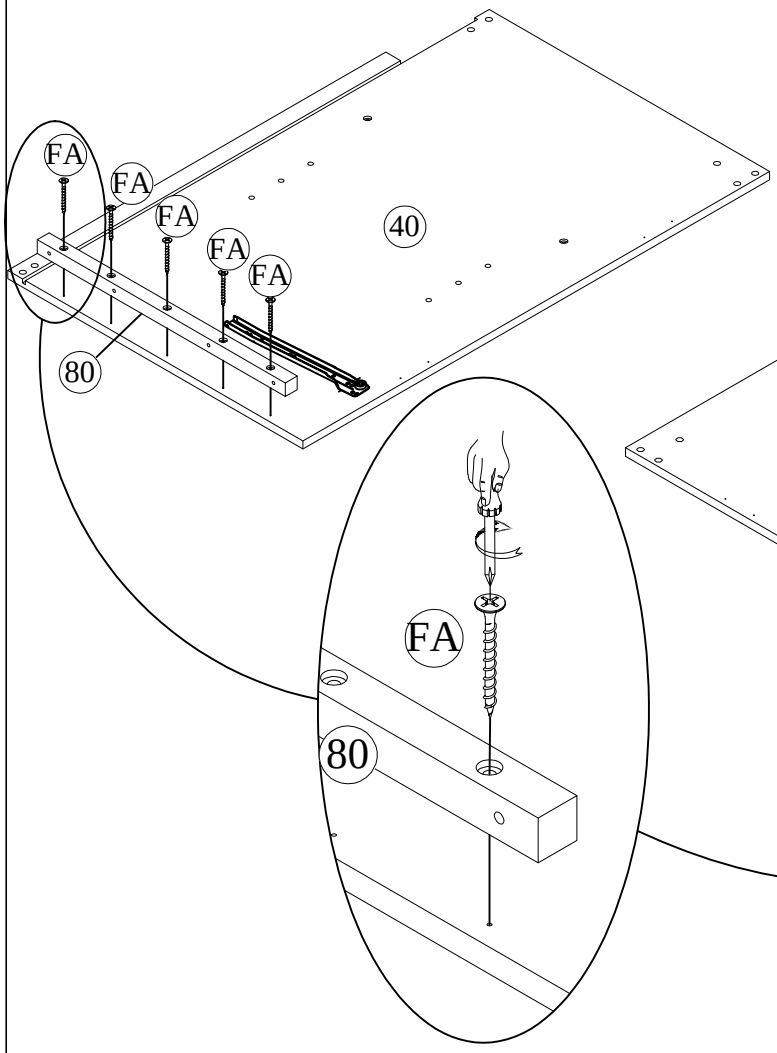
STEP-ÉTAPE-28.1

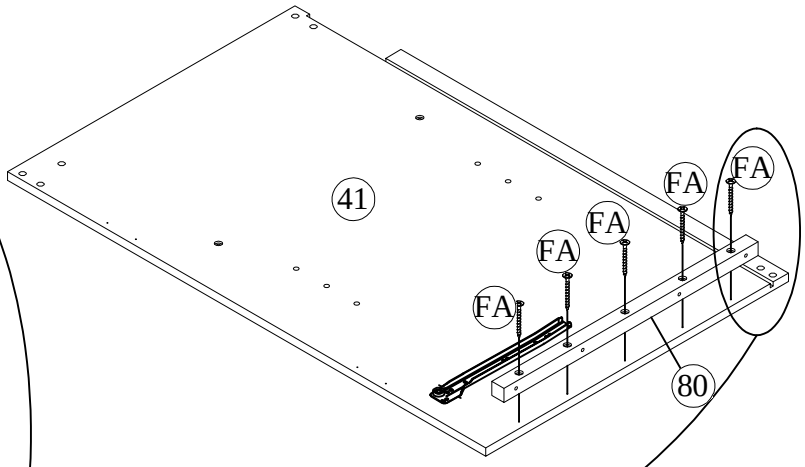
FA

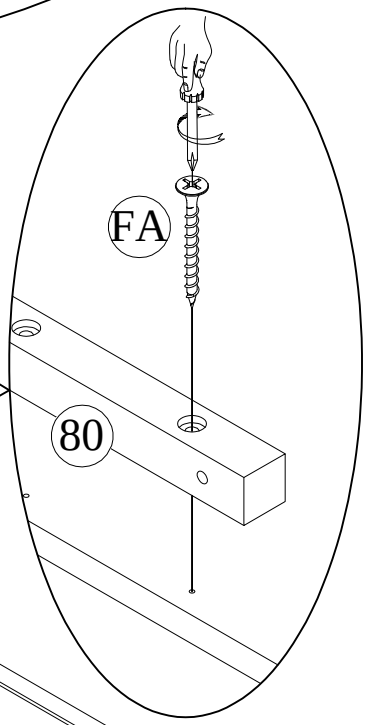


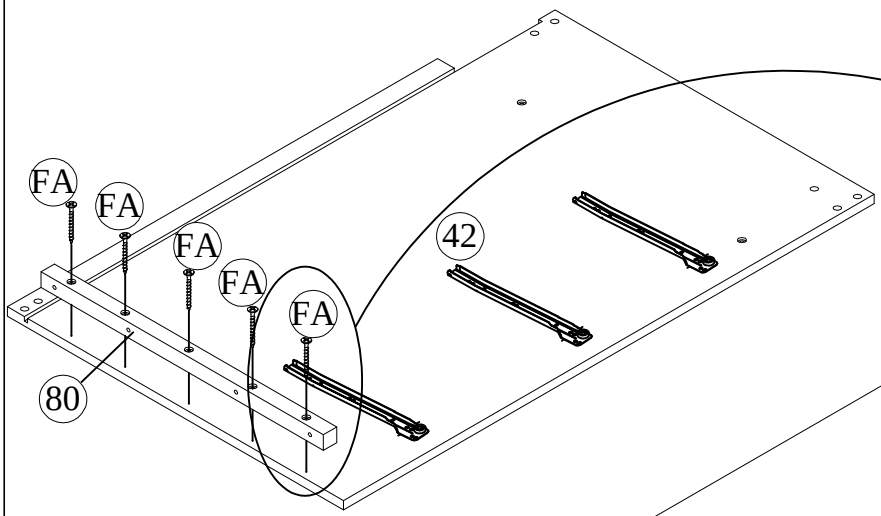
M4x25

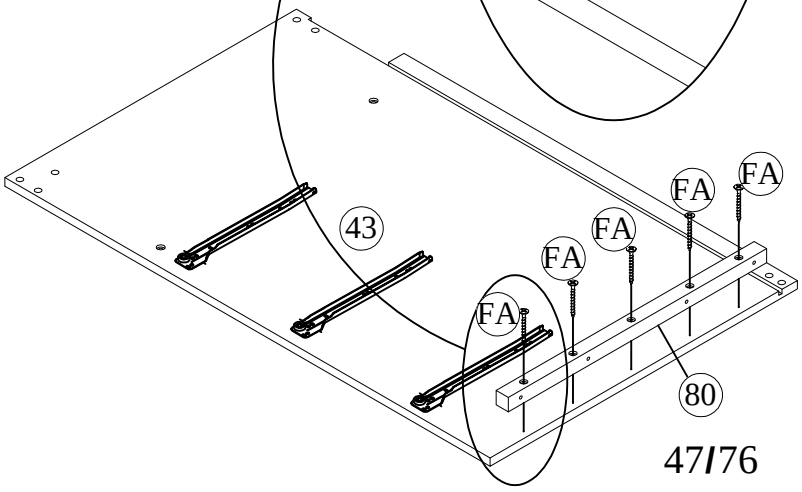
20pcs











Installation video


STEP-ÉTAPE-29


C	B	H
		
Ø8"x30	Ø1/4"x12	Ø1/4"x60
6pcs	6pcs	6pcs

IA


2pcs

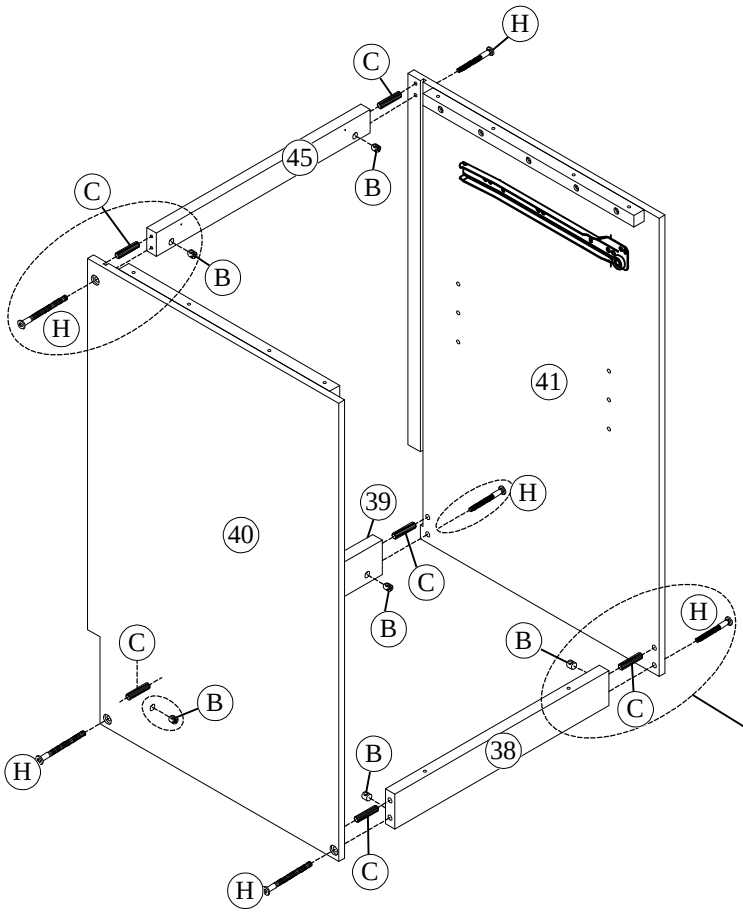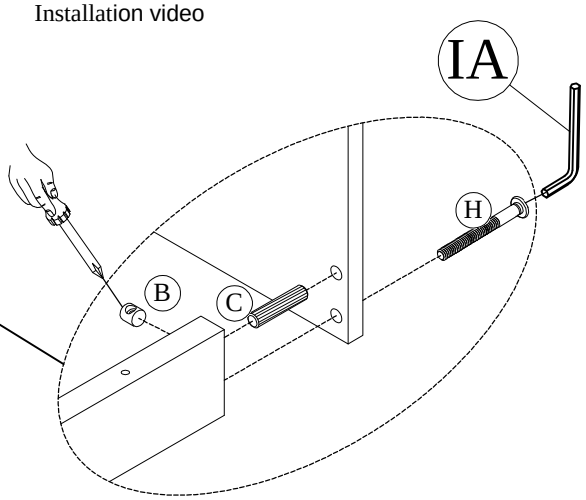Installation video






STEP-ÉTAPE-30

BA

M4x30
4pcs

Installation video

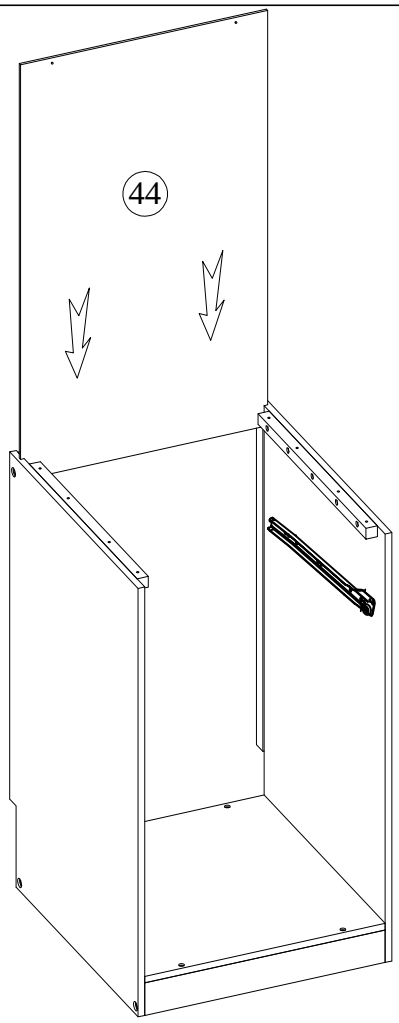
STEP-ÉTAPE-31


Installation video



STEP-ÉTAPE-32

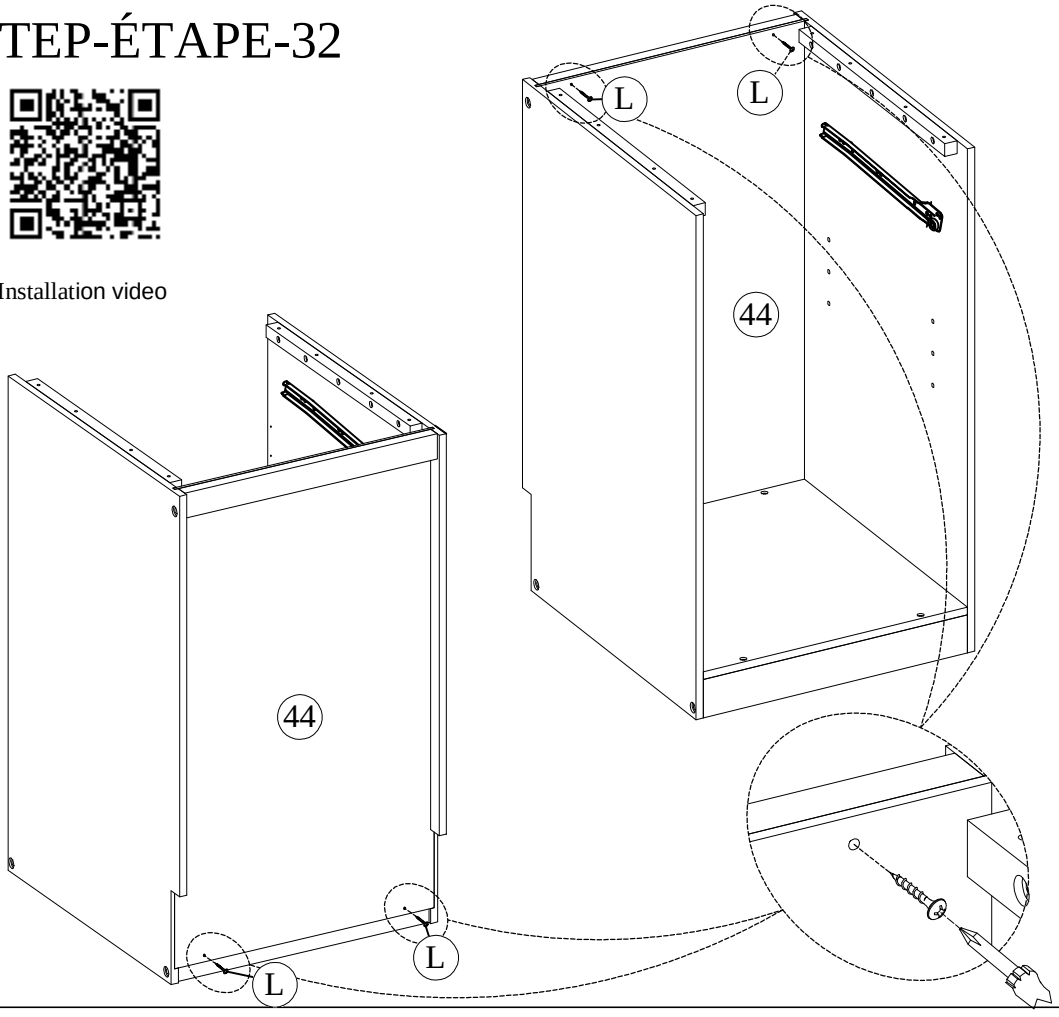Installation video




L

M4x15
4pcs

STEP-ÉTAPE-33

C	B	QA
Ø8"x30	Ø1/4"x12	Ø1/4"x90
4pcs	4pcs	4pcs

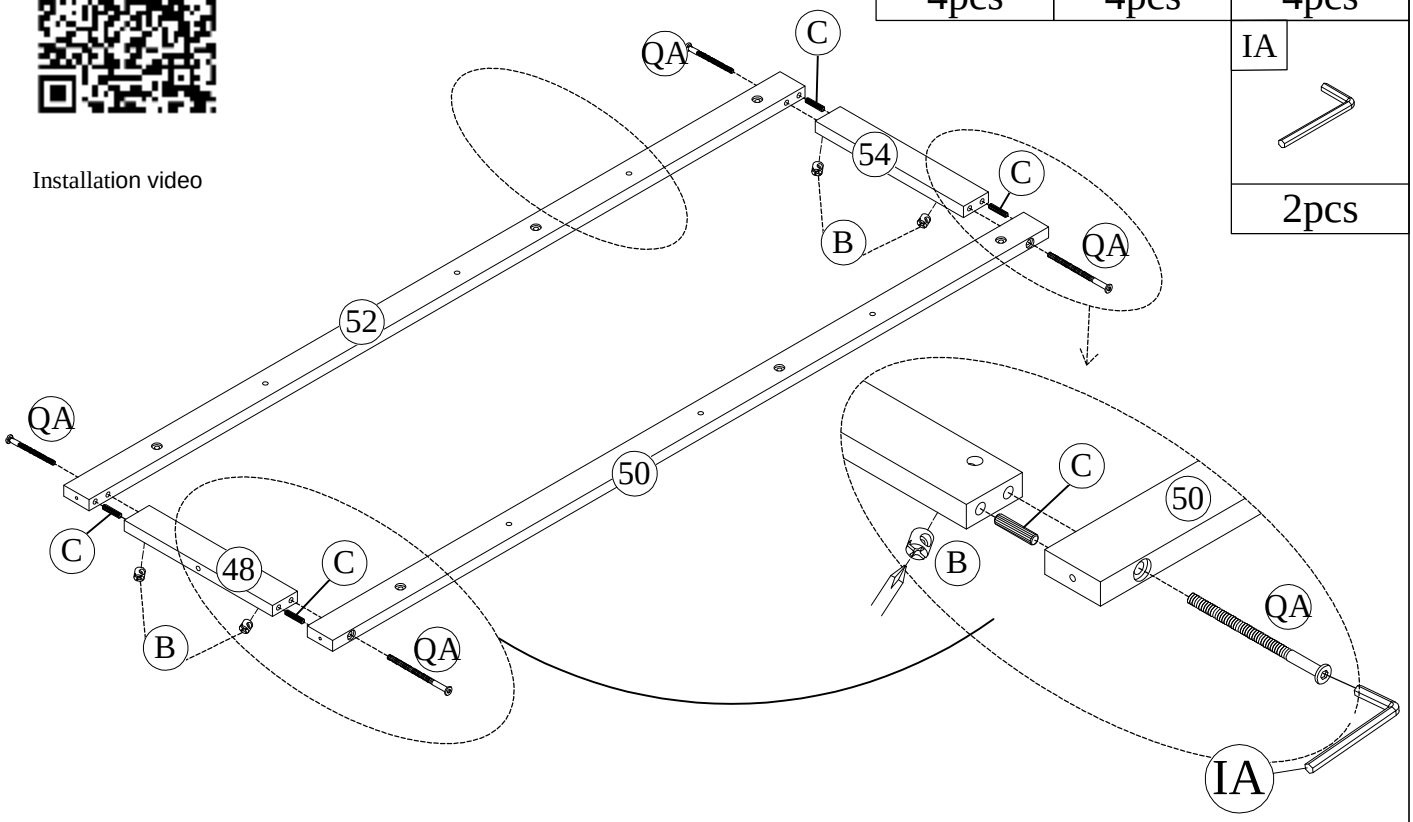IA
2pcs

Installation video




STEP-ÉTAPE-34

EA	C
Ø1/4"x35	Ø8"x30
3pcs	1pc

IA
1pc

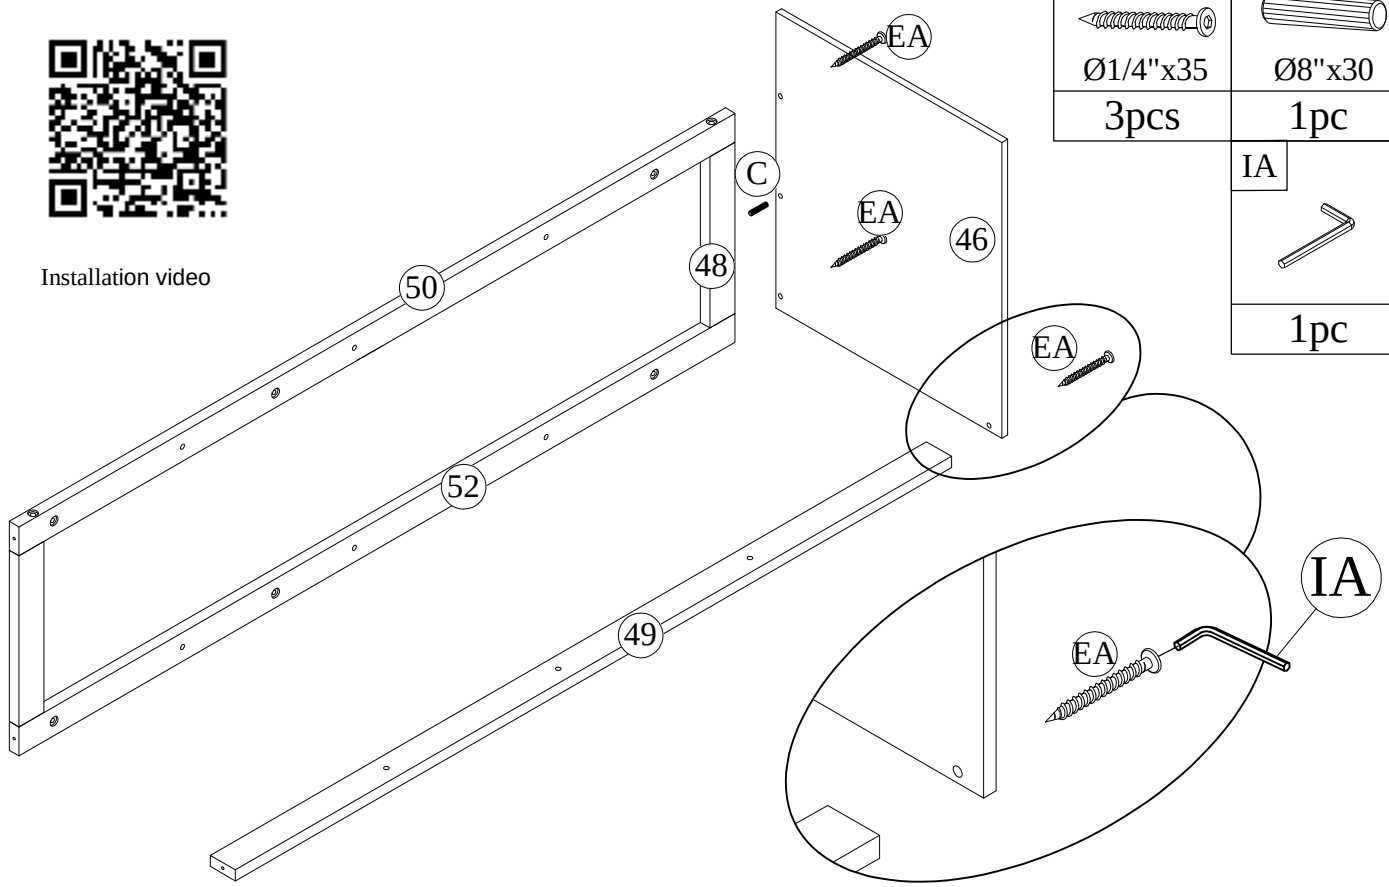Installation video



STEP-ÉTAPE-35

IA	RA
	 Ø1/4"x70
1pc	3pcs

Installation video

STEP-ÉTAPE-36


B	H
 Ø1/4"x12	 Ø1/4"x60
9pcs	9pcs

IA


2pcs

Installation video

STEP-ÉTAPE-37



BA

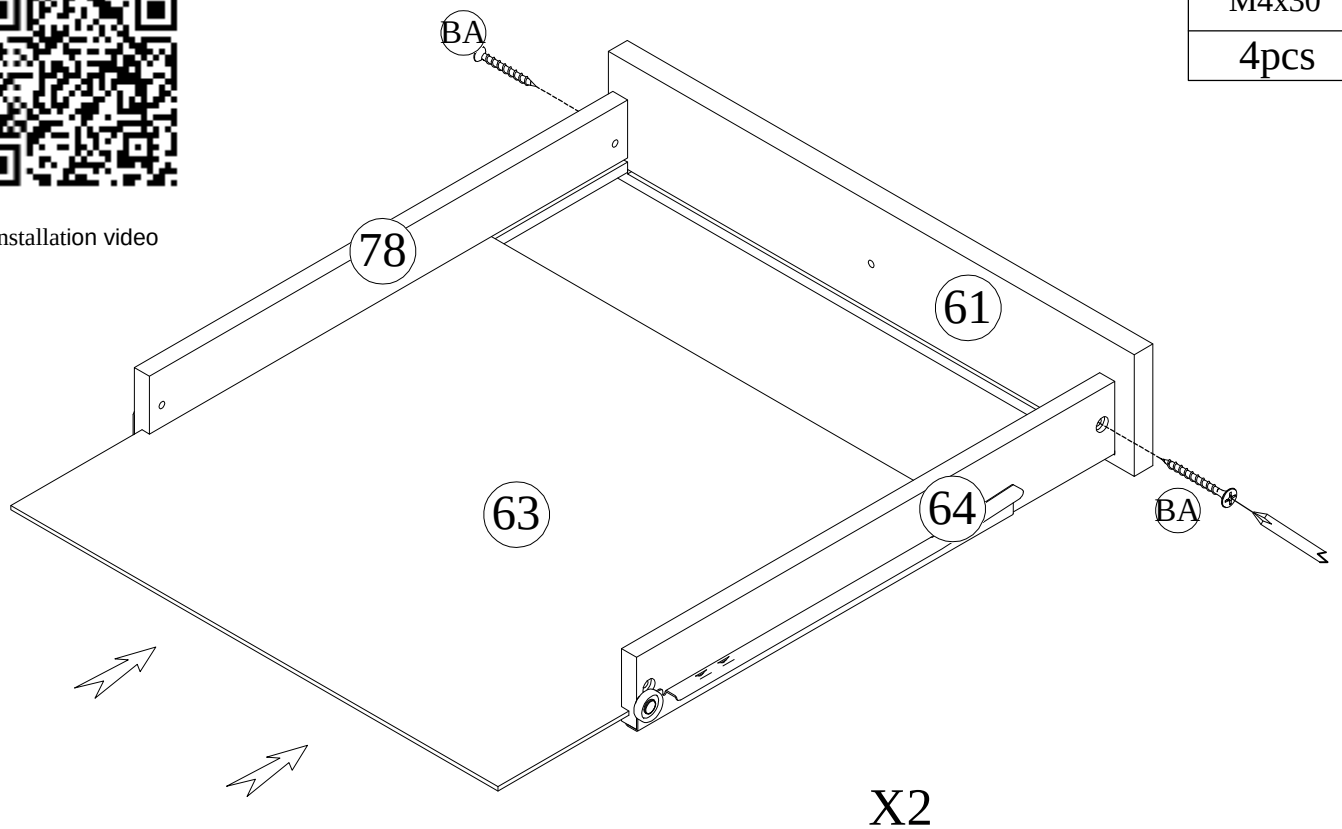M4x30
4pcs

Installation video




X2

STEP-ÉTAPE-38


AA	BA
	
2pcs	M4x30
	4pcs

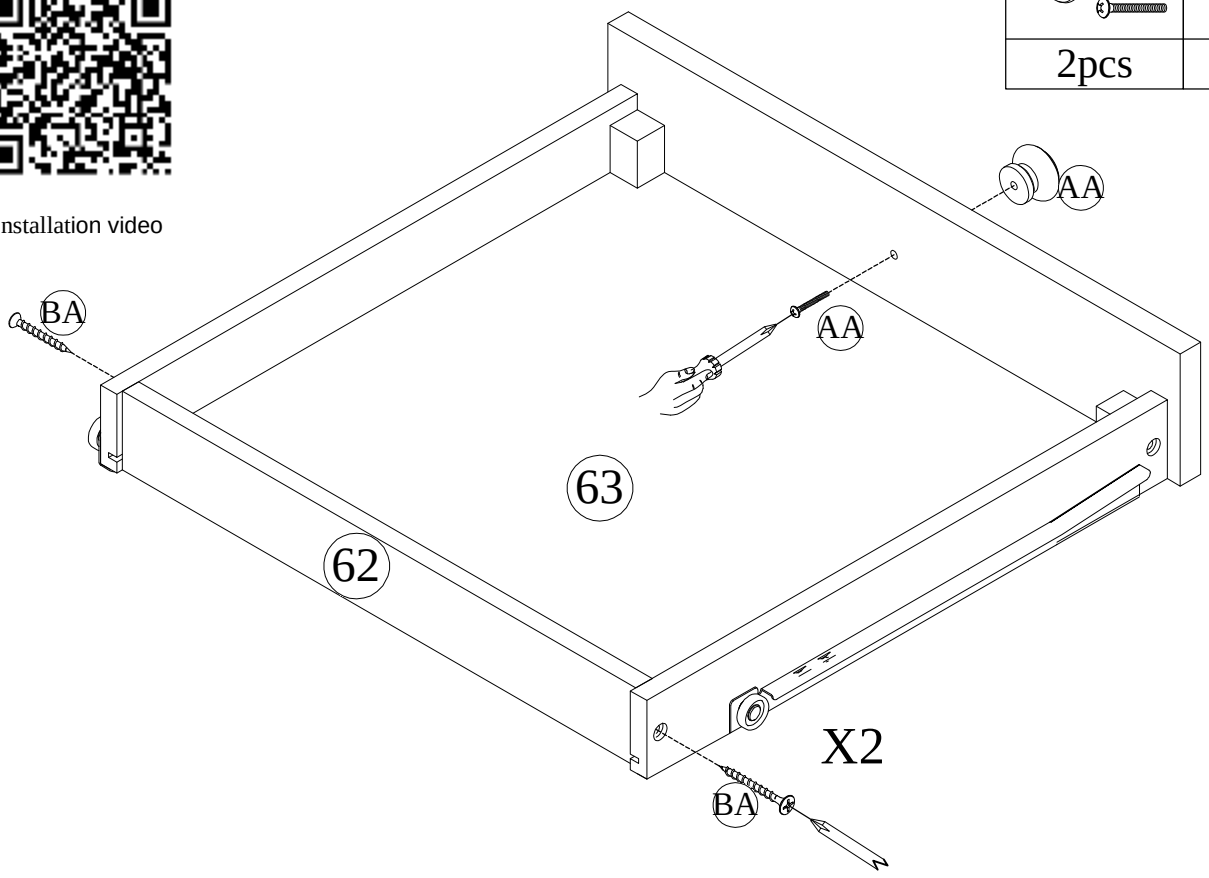Installation video



STEP-ÉTAPE-39

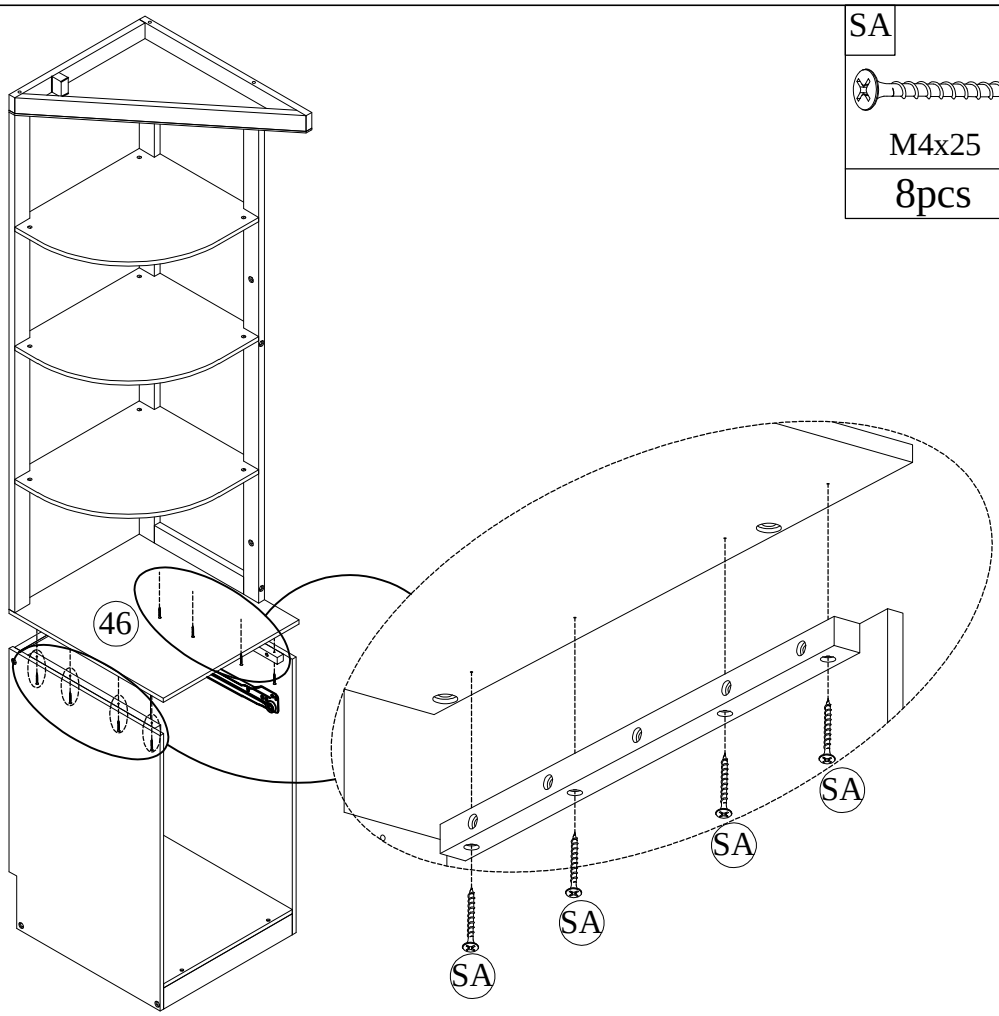Installation video




SA

M4x25

8pcs

STEP-ÉTAPE-40

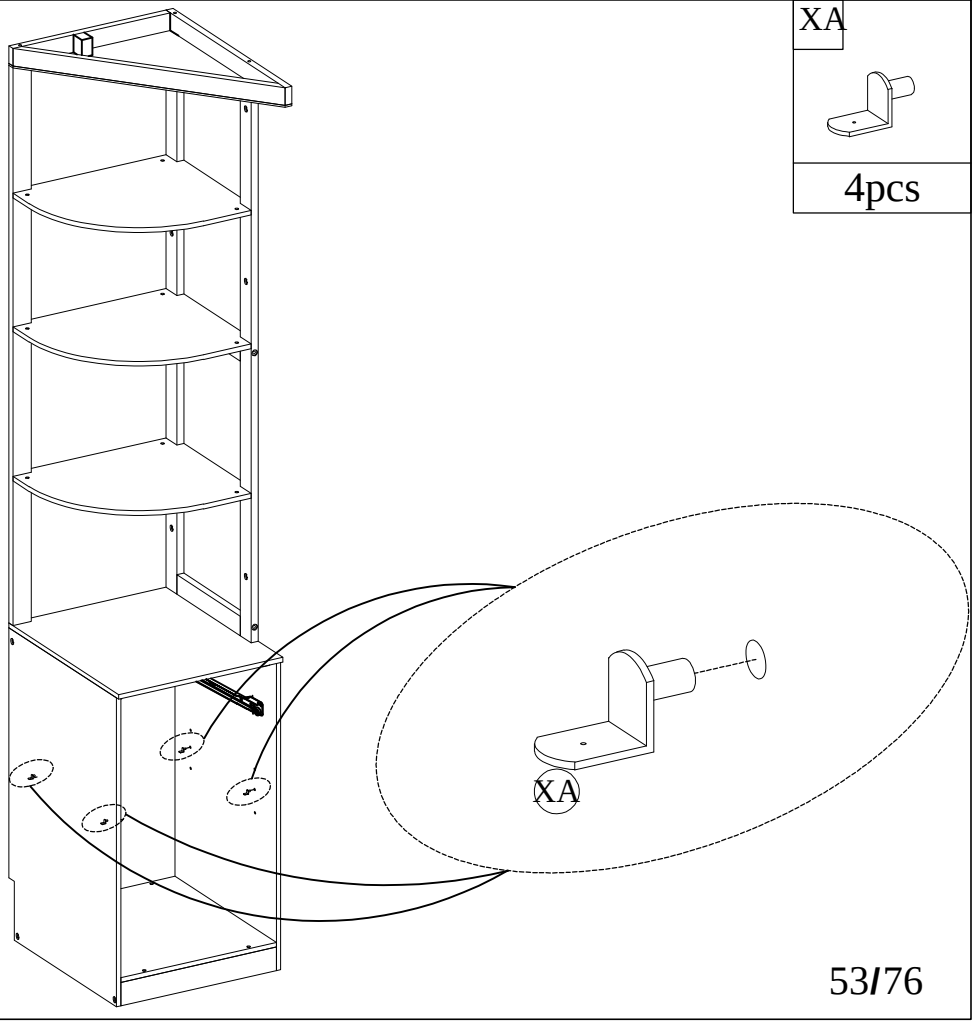Installation video




XA

4pcs

STEP-ÉTAPE-41

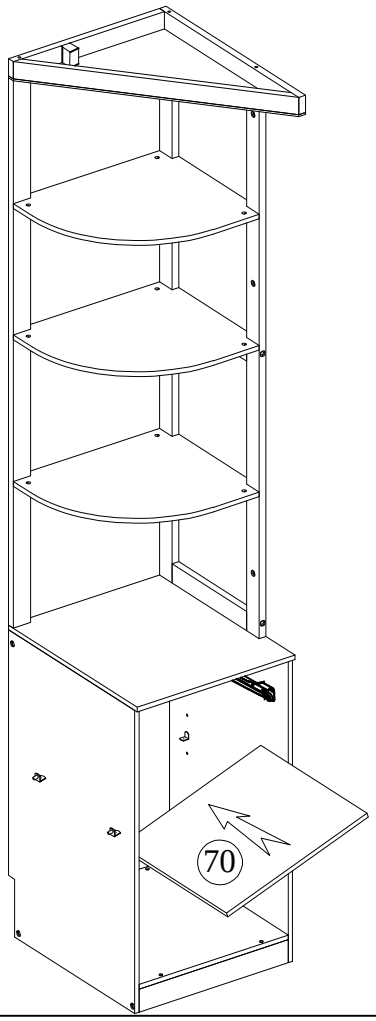Installation video




STEP-ÉTAPE-42

Installation video

K




M3.5x12
4pcs

STEP-ÉTAPE-43


L

M4x15
14pcs

Installation video

STEP-ÉTAPE-44



AA	F	LA
		
1pc	2pcs	M3x15 6pcs

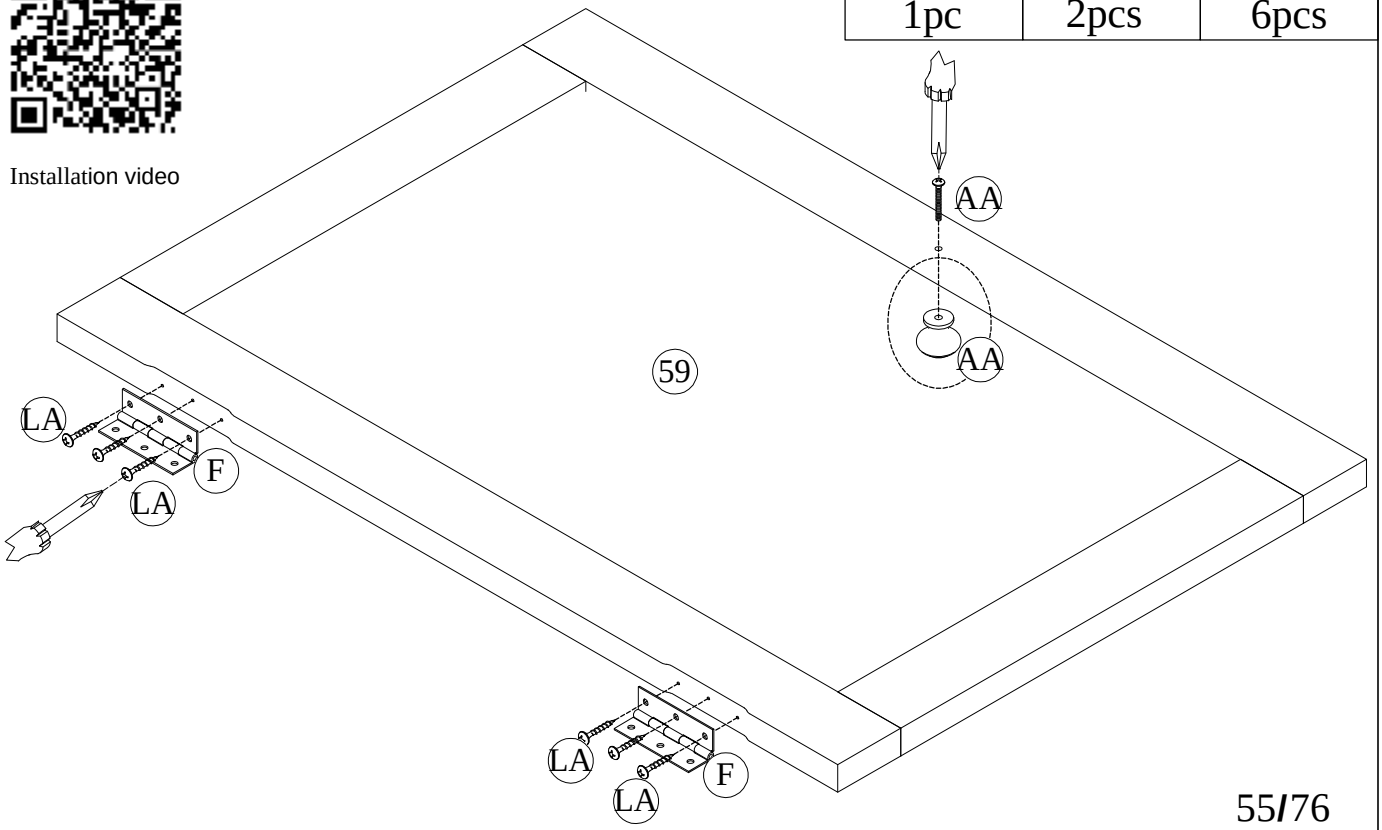Installation video




STEP-ÉTAPE-45


Installation video

GA	LA	ZA
	 M3x15	 M3.5x12
1pc	2pcs	6pcs

STEP-ÉTAPE-46


Installation video

UA
 M4x35
4pcs

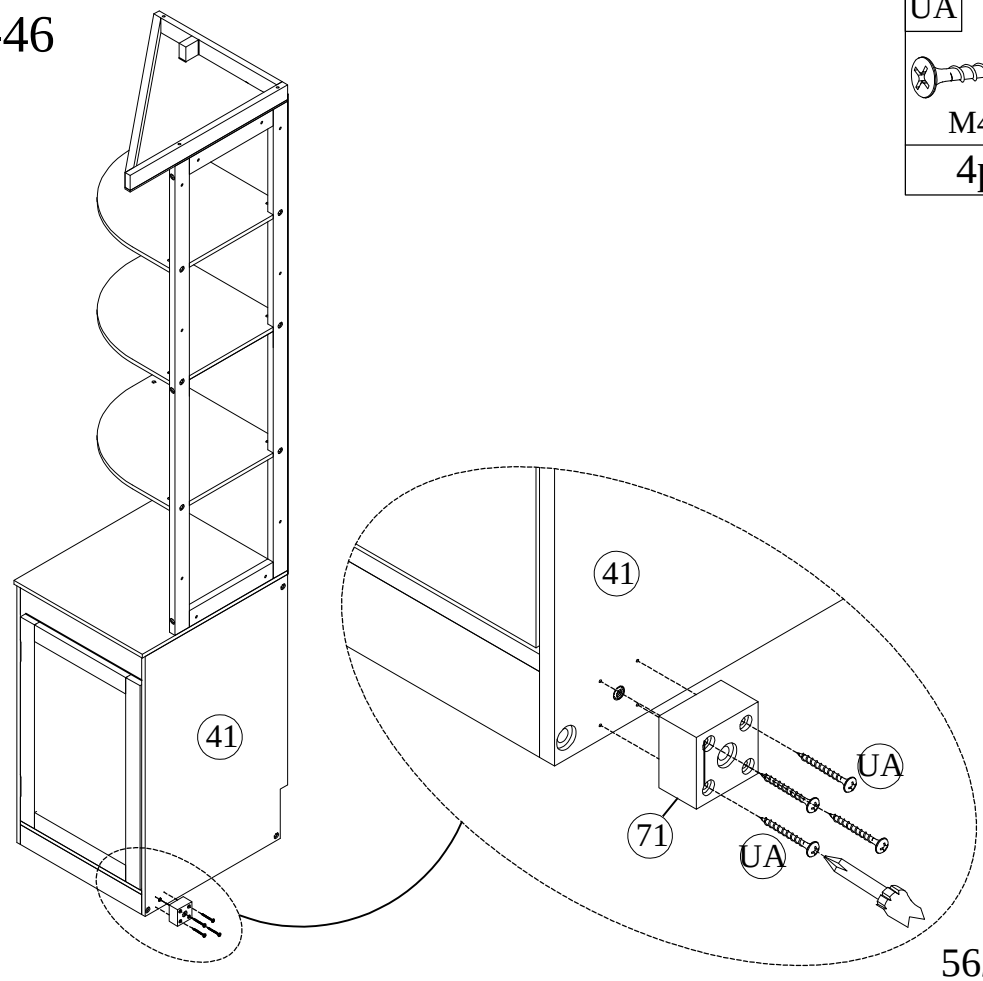


STEP-ÉTAPE-47


IA	H	B	C
	 Ø1/4"x60	 Ø1/4"x12	 Ø8x30
2pcs	6pcs	6pcs	6pcs

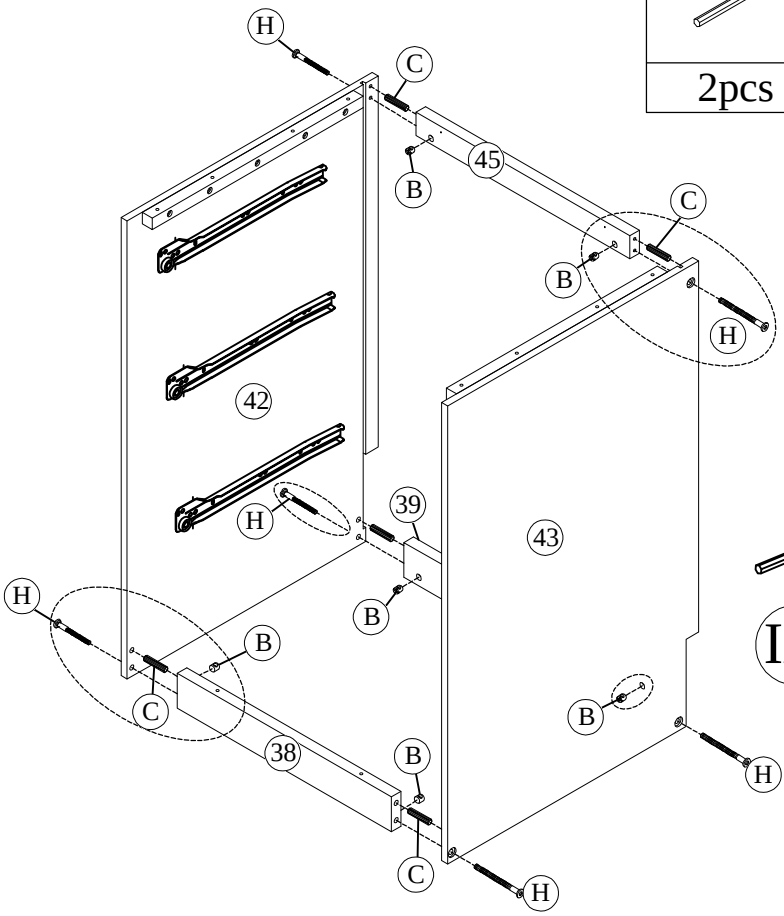


Installation video

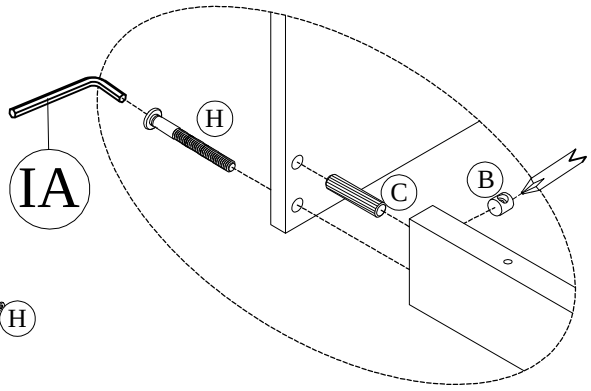

STEP-ÉTAPE-48


BA
 M4x30
4pcs

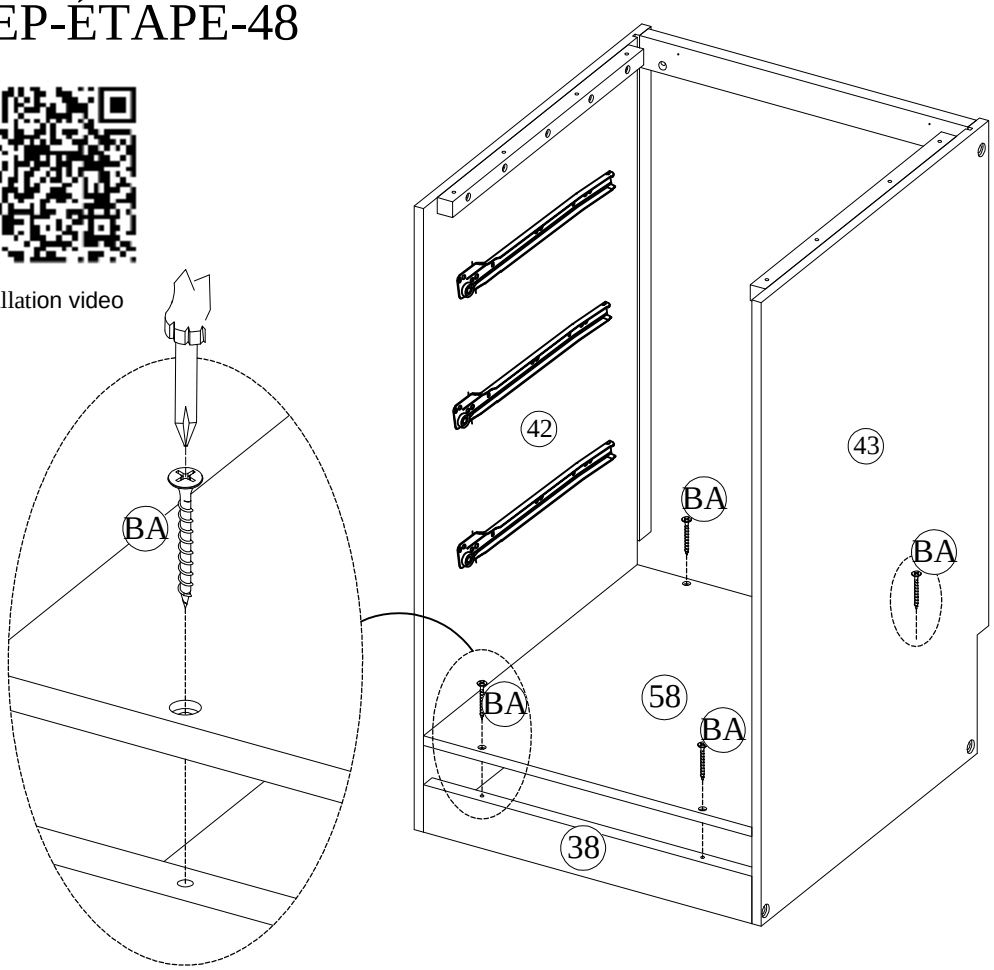Installation video



STEP-ÉTAPE-49

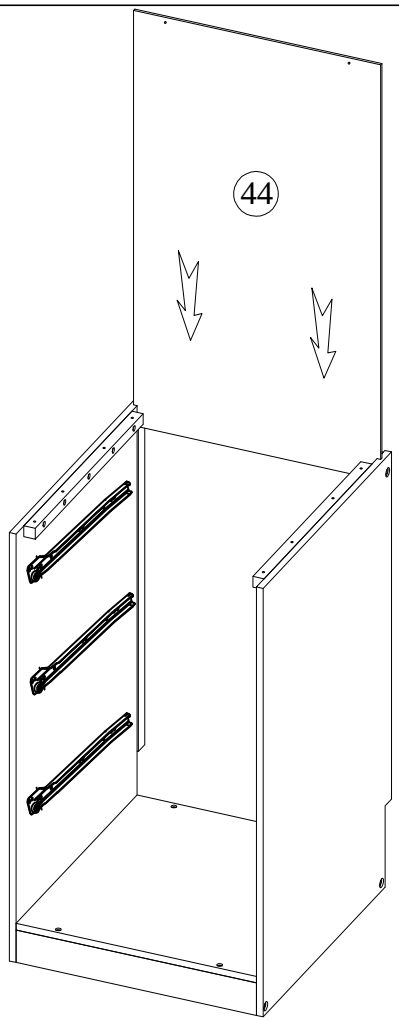Installation video



STEP-ÉTAPE-50

Installation video


L

M4x15
4pcs

STEP-ÉTAPE-51

IA	QA	B	C
	Ø1/4"x90	Ø1/4"x12	Ø8x30
2pcs	4pcs	4pcs	4pcs

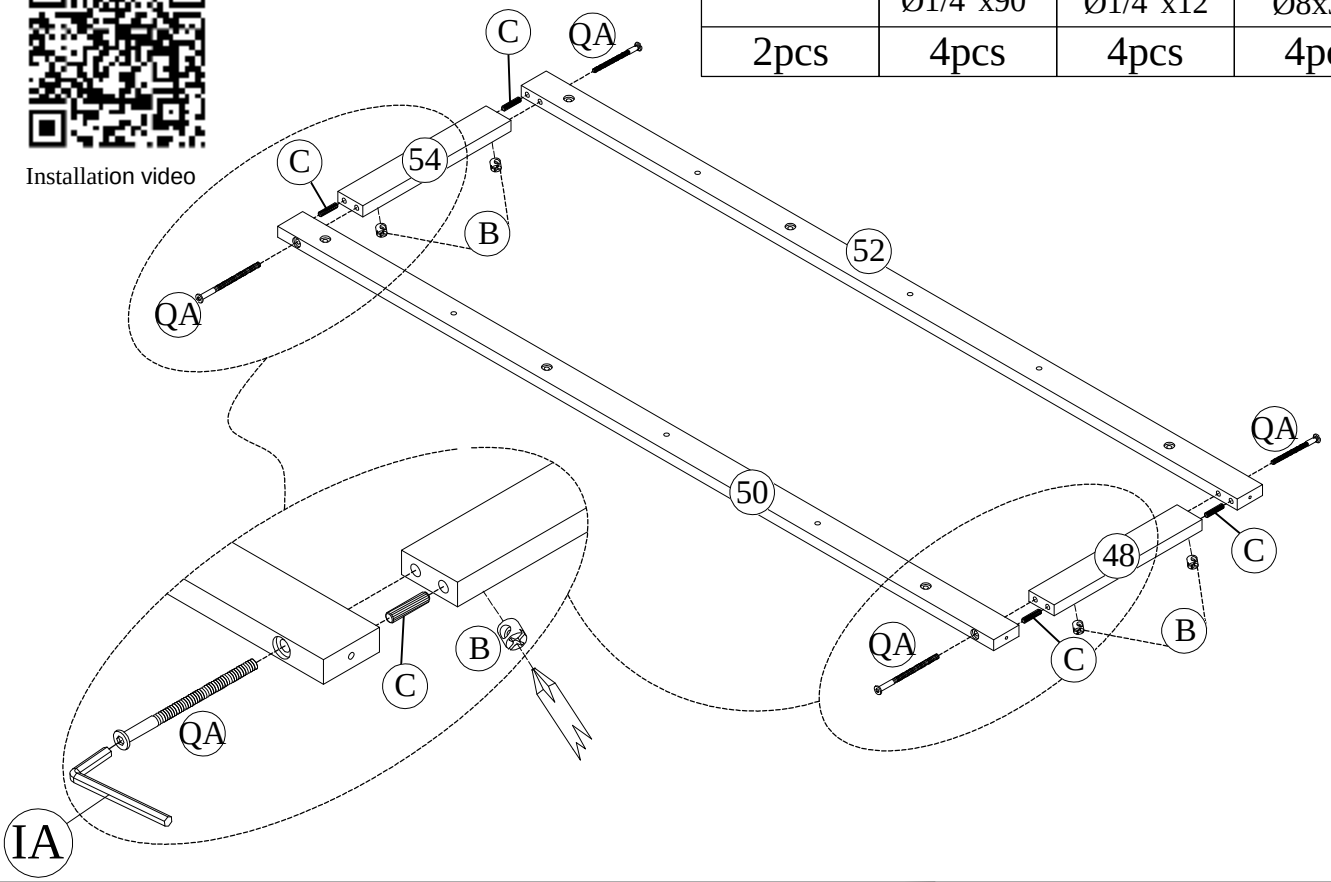
Installation video



STEP-ÉTAPE-52

IA	C	EA
	Ø8x30	Ø1/4"x35
1pc	1pc	3pcs

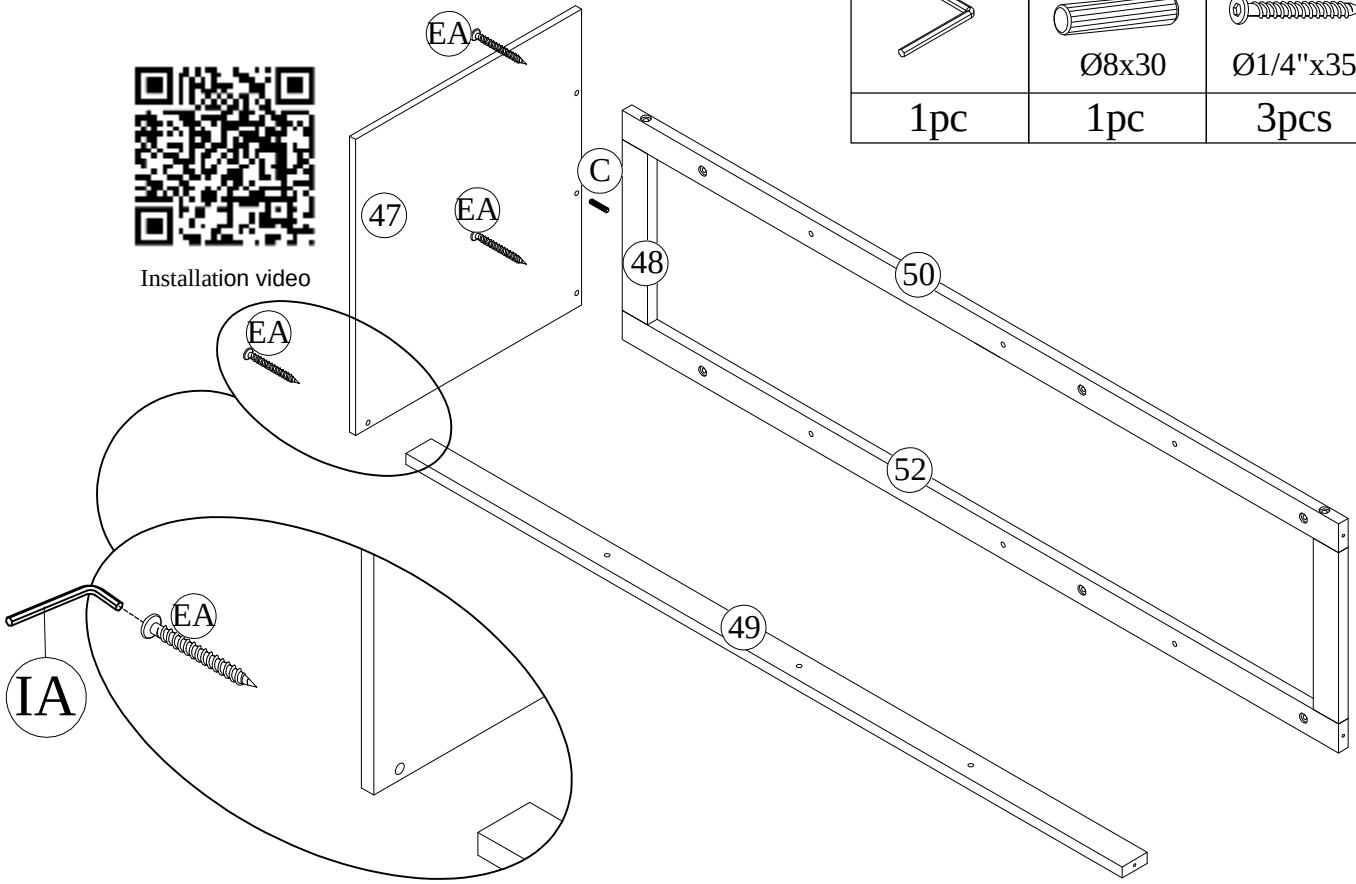Installation video




STEP-ÉTAPE-53

Installation video

IA	RA
	 Ø1/4"x70
1pc	3pcs


STEP-ÉTAPE-54

Installation video

H	B
 Ø1/4"x60	 Ø1/4"x12
9pcs	9pcs


IA

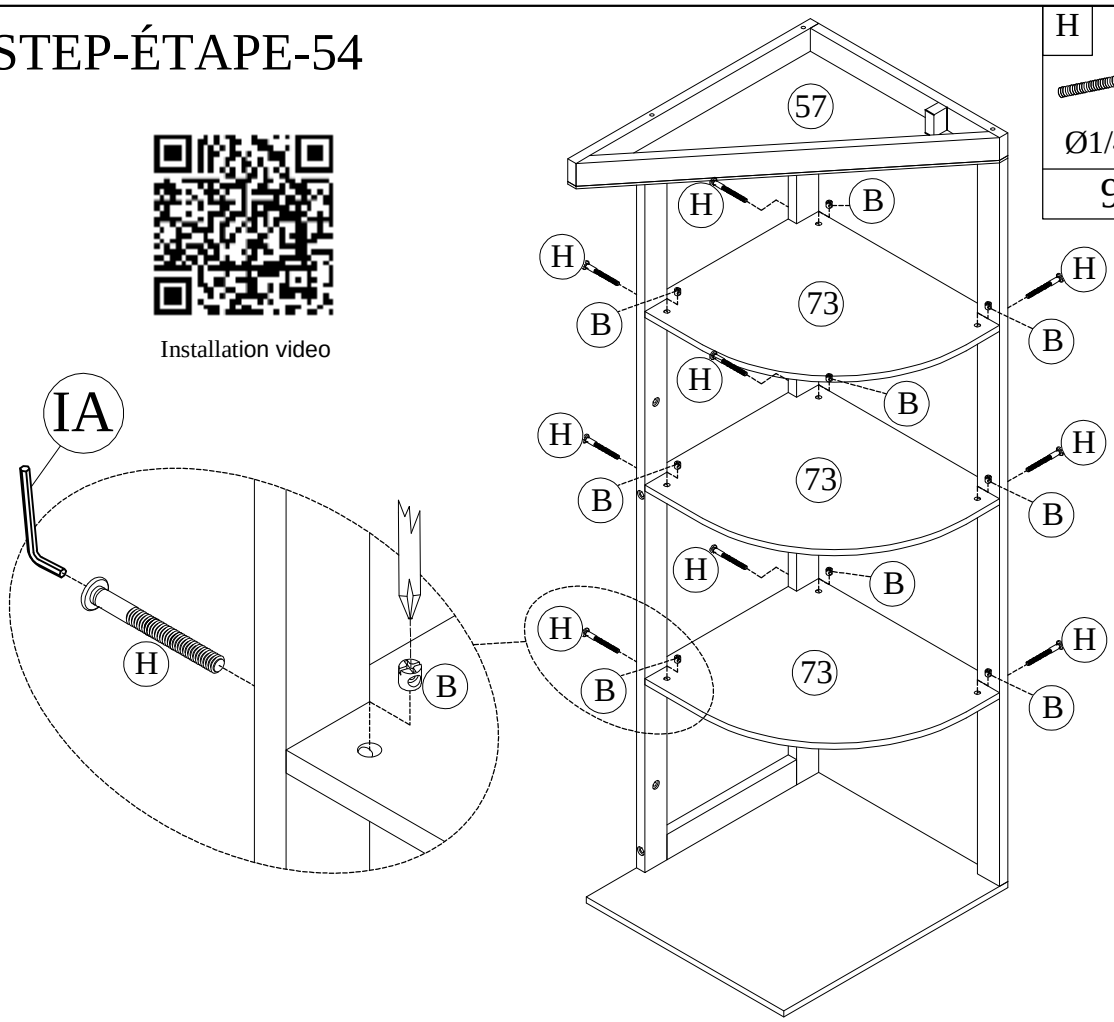2pcs




STEP-ÉTAPE-55

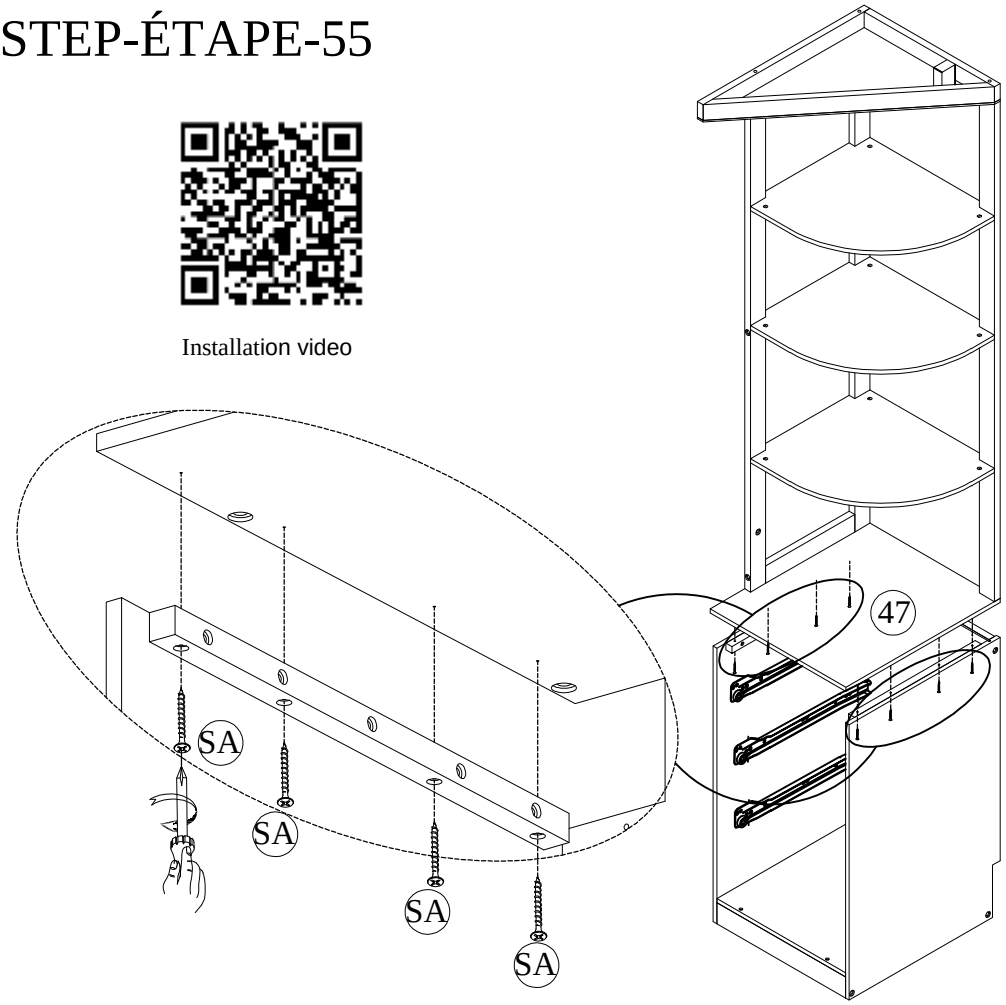Installation video



SA




M4x25


8pcs

STEP-ÉTAPE-56

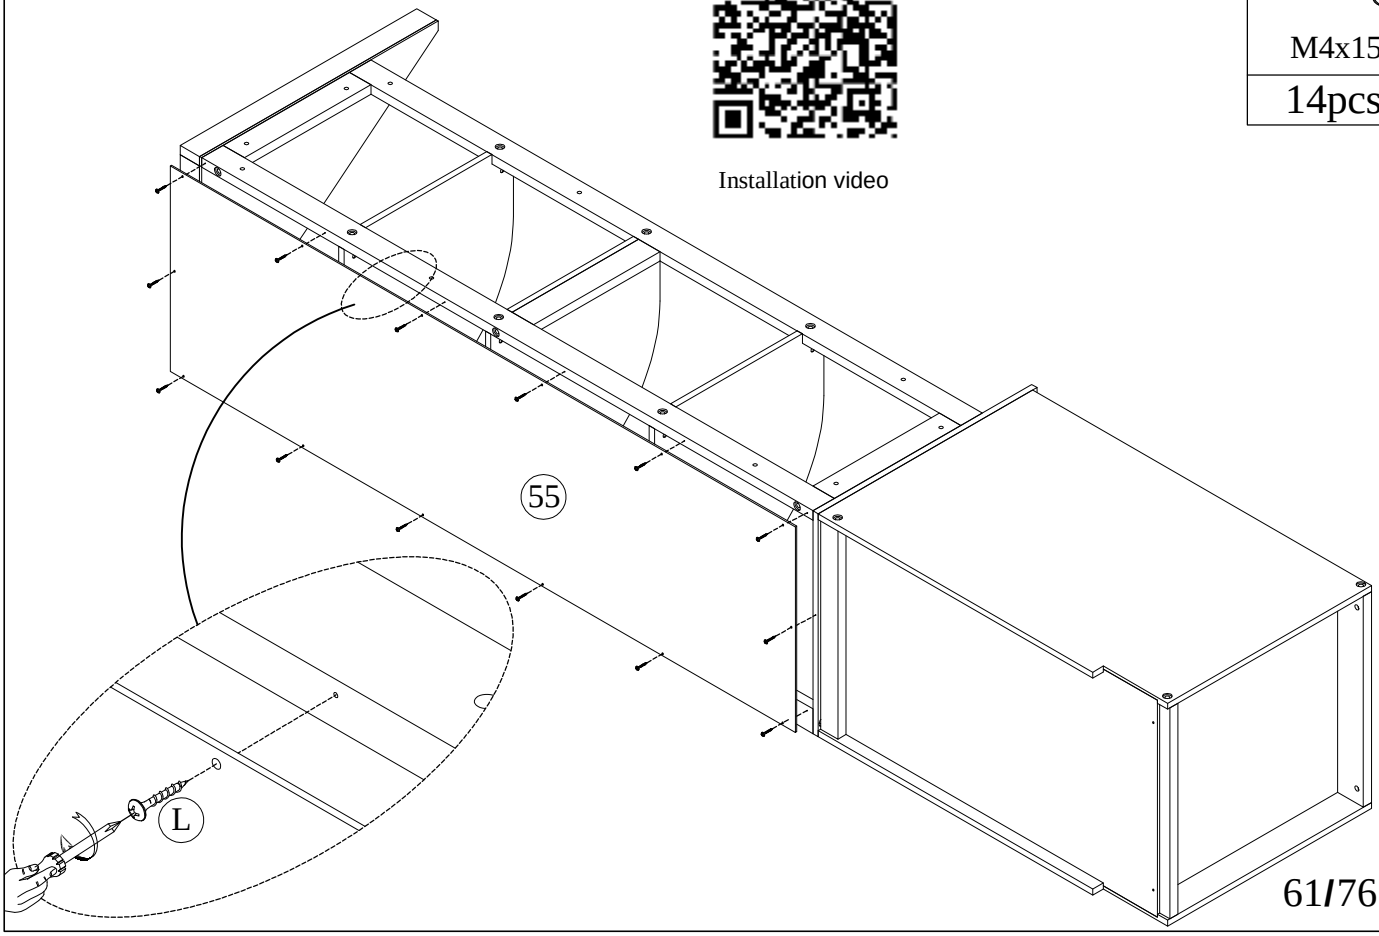Installation video




L




M4x15

14pcs


STEP-ÉTAPE-57

BA

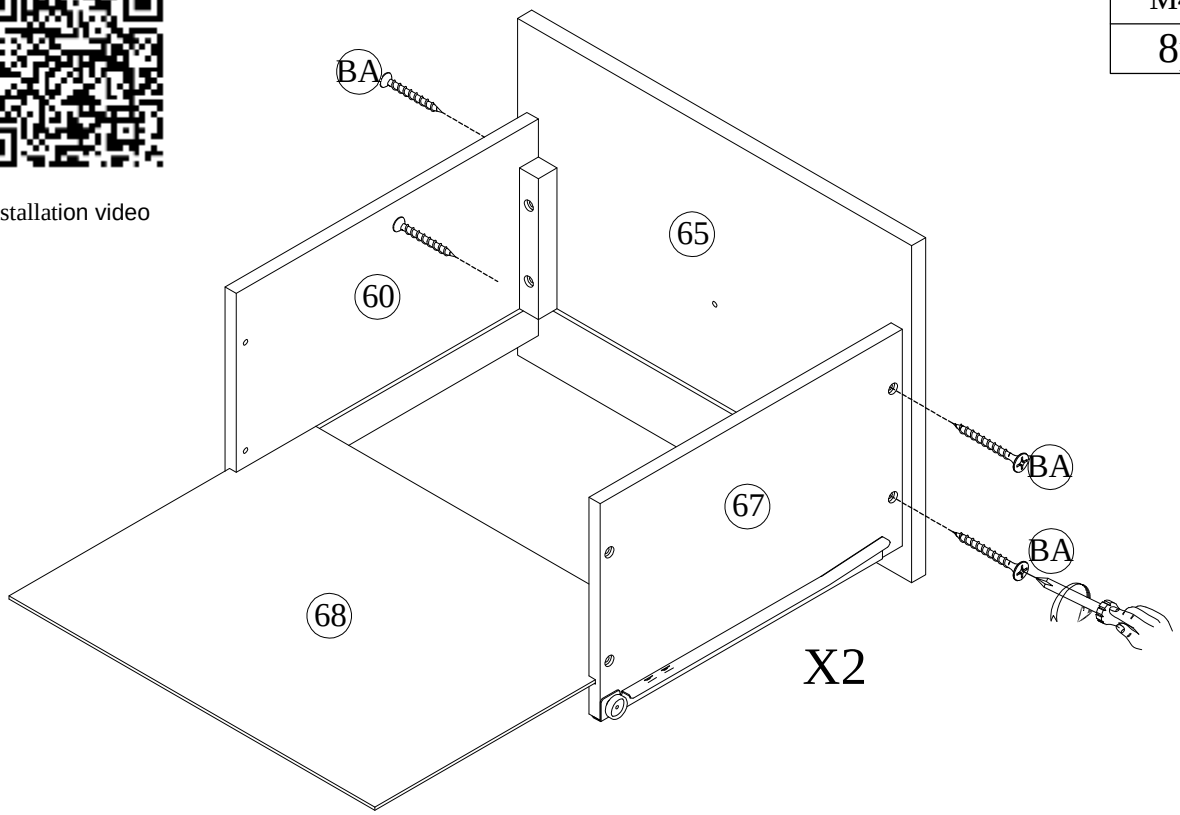M4x30
8pcs


Installation video



STEP-ÉTAPE-58

AA	BA
	
2pcs	M4x30
	8pcs

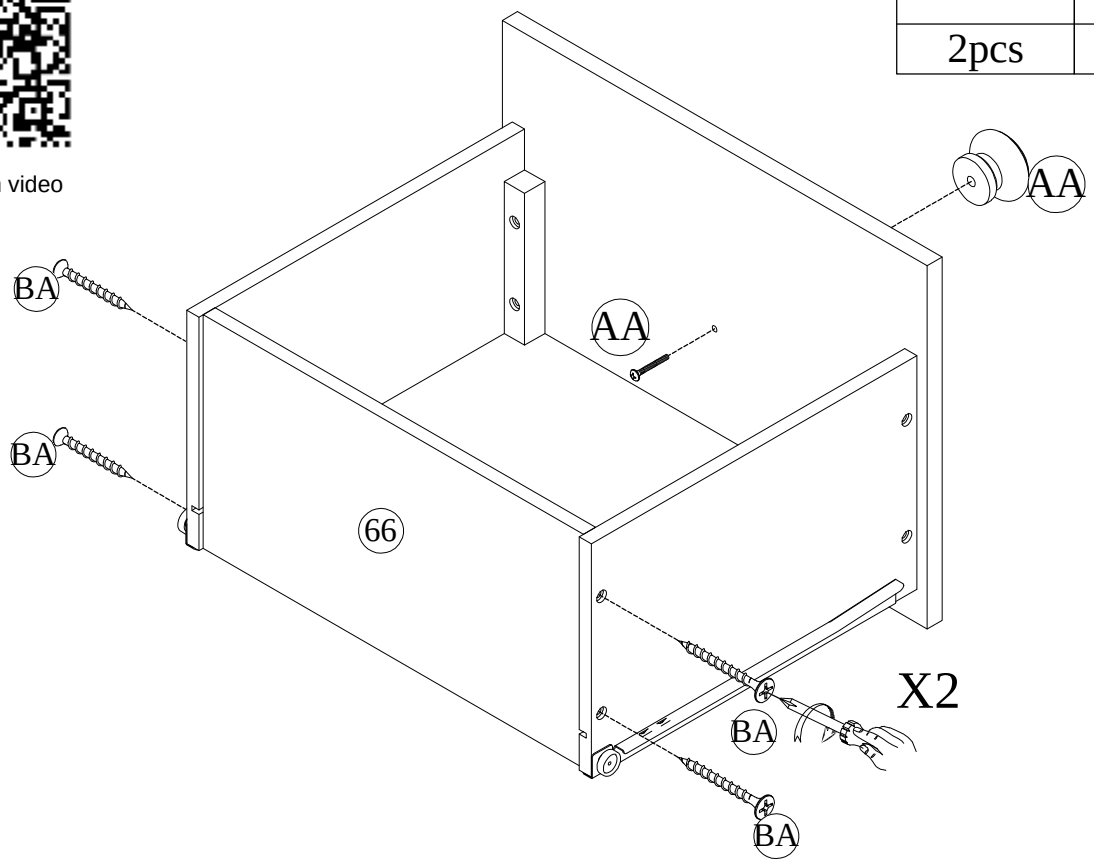Installation video




STEP-ÉTAPE-59

Installation video

UA

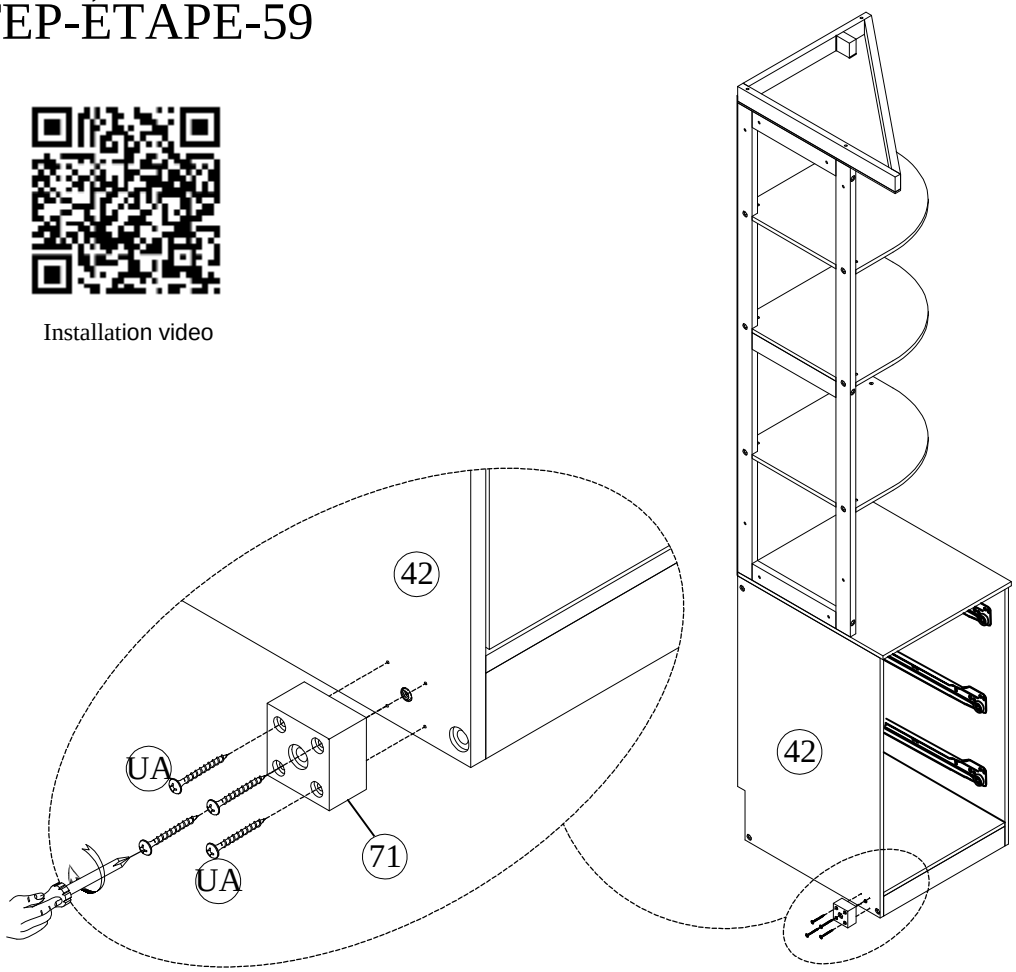M4x35
4pcs




STEP-ÉTAPE-60

Installation video

B	H
	
Ø1/4"x12	Ø1/4"x60
4pcs	4pcs

IA

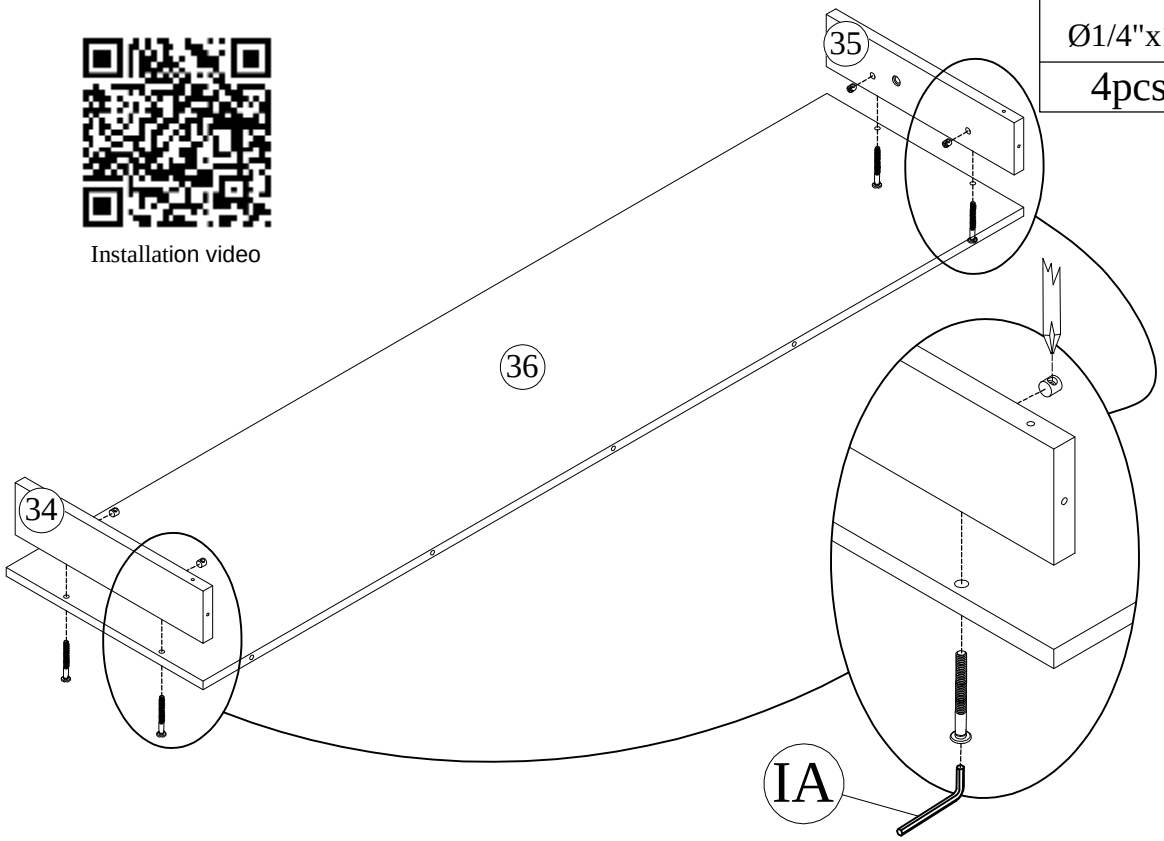2pcs




STEP-ÉTAPE-61

Installation video

EA	B	H
Ø1/4"x35	Ø1/4"x12	Ø1/4"x60
2pcs	5pcs	5pcs

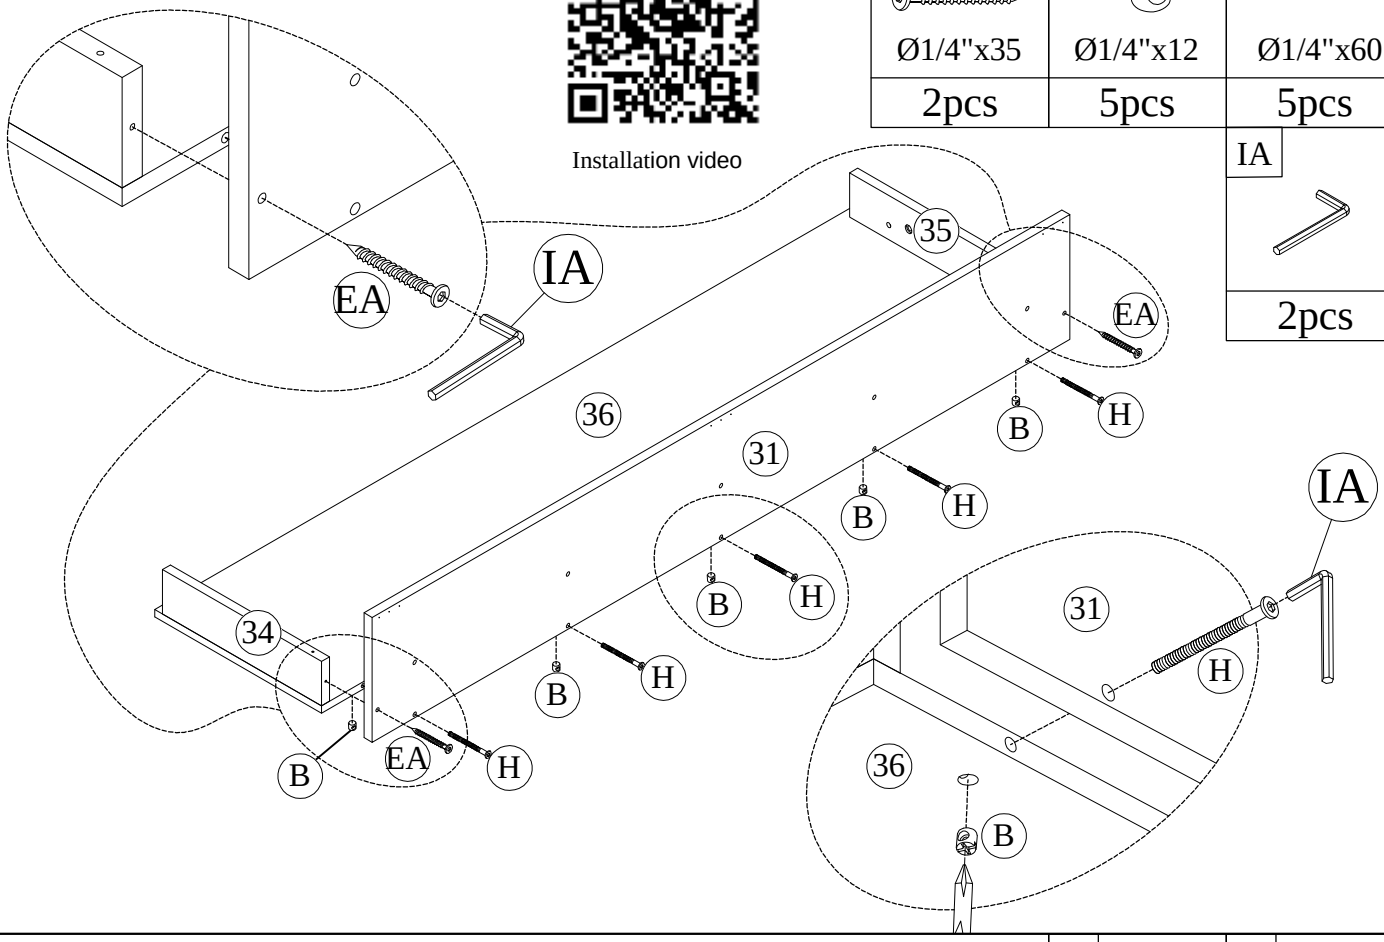
IA
2pcs




STEP-ÉTAPE-62

Installation video


F	LA
	M3x15
3pcs	9pcs

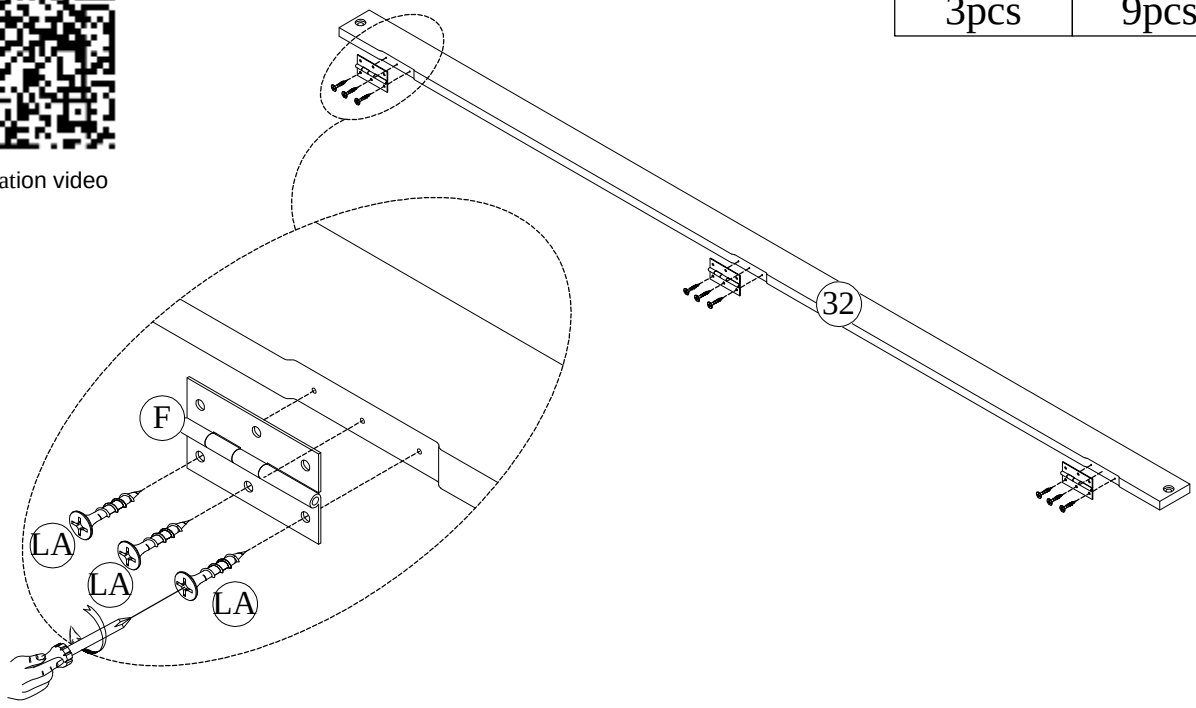




STEP-ÉTAPE-63

LA

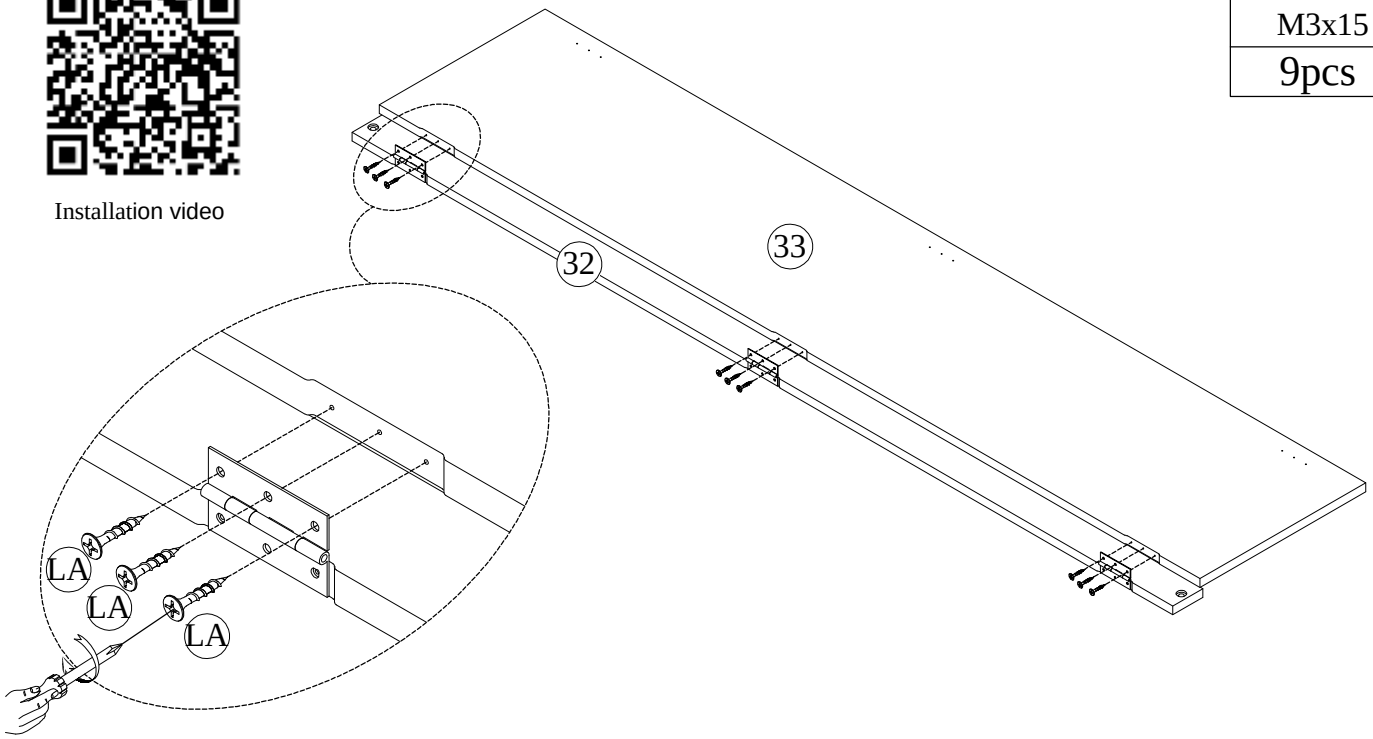M3x15
9pcs


Installation video



STEP-ÉTAPE-64


AA	F	LA
		
		M3x15
3pcs	3pcs	9pcs

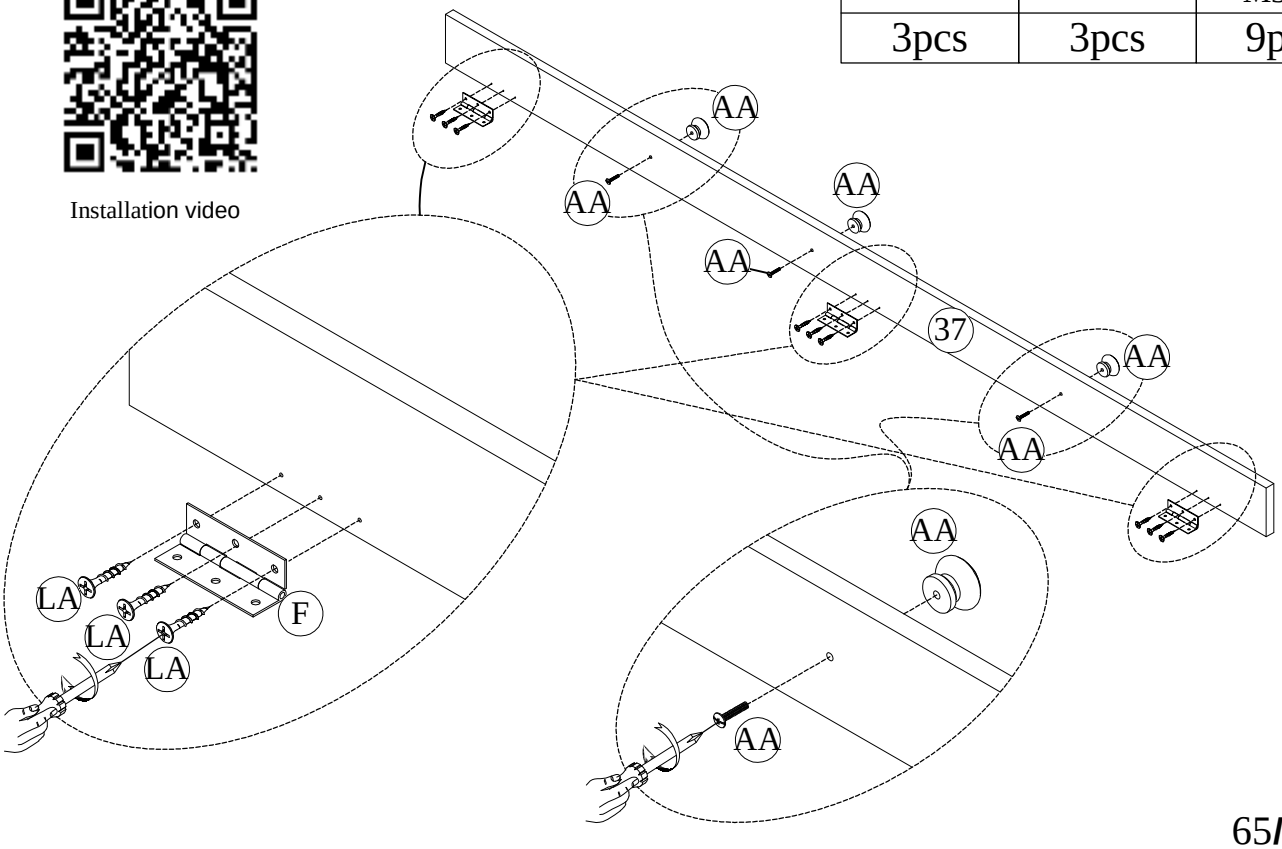
Installation video



STEP-ÉTAPE-65

Installation video


LA

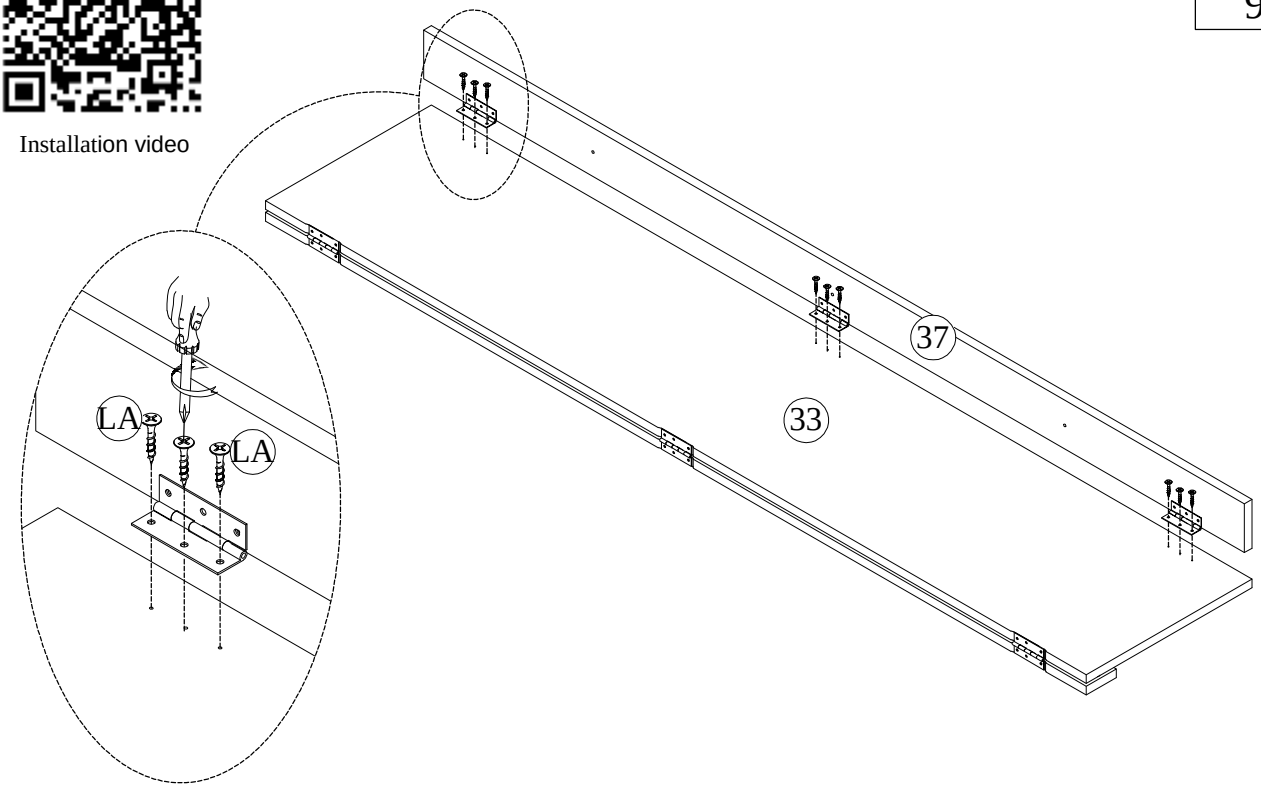M3x15
9pcs



STEP-ÉTAPE-66

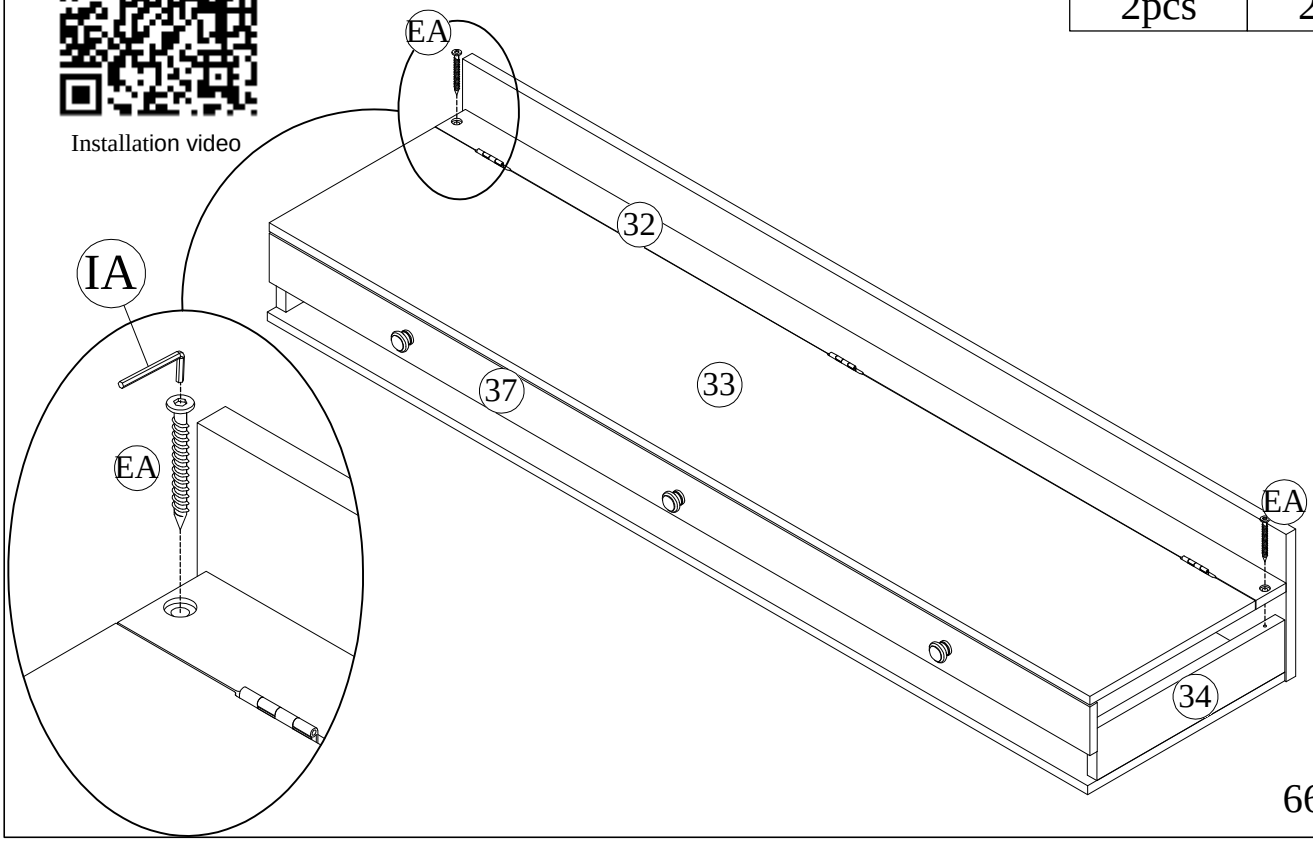Installation video

IA	EA
	
2pcs	Ø1/4"x35
	2pcs




STEP-ÉTAPE-67

Installation video

EA	F	LA
Ø1/4"x35		M3x15
5pcs	3pcs	9pcs

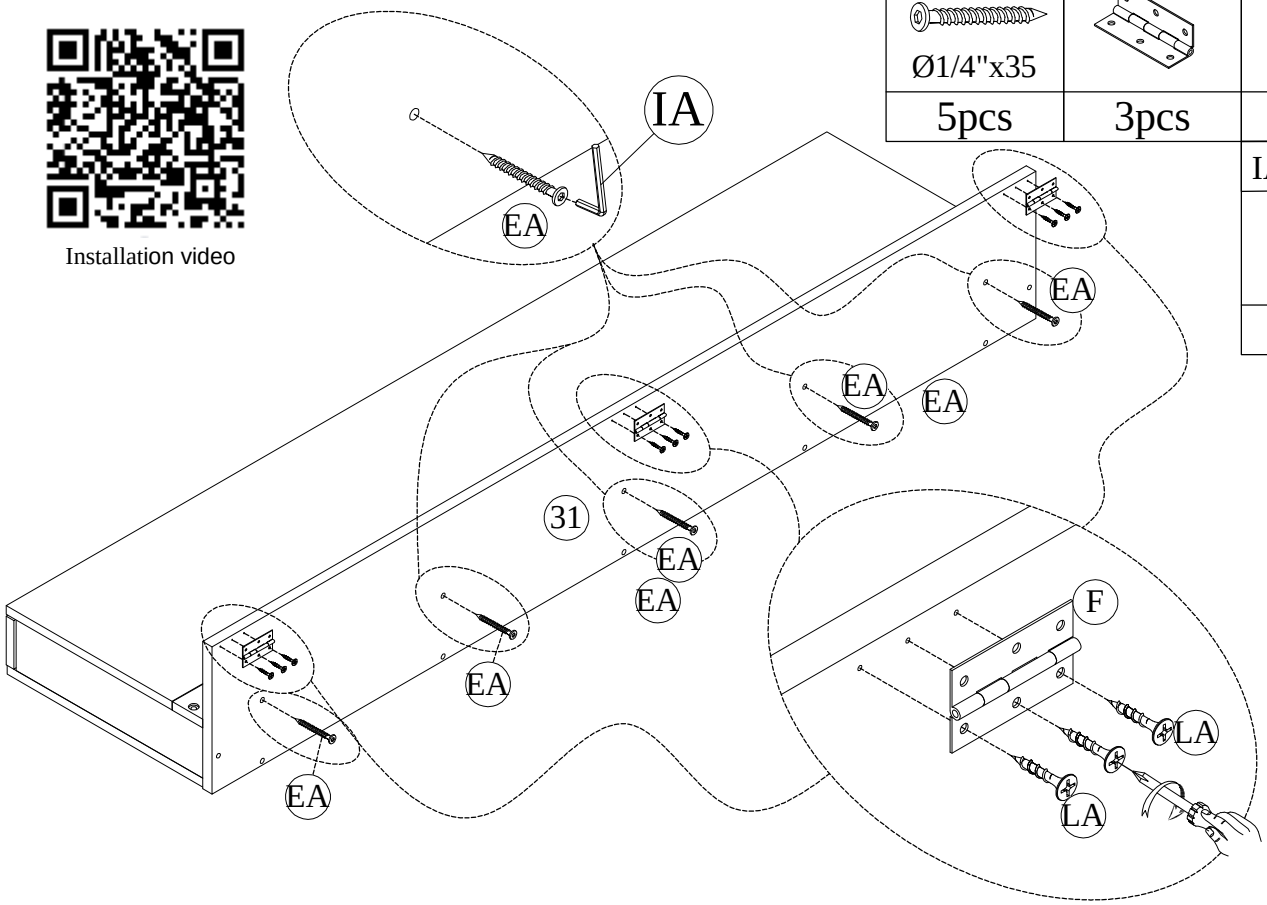
IA
2pcs




STEP-ÉTAPE-68


IA	EA
	Ø1/4"x35
2pcs	12pcs

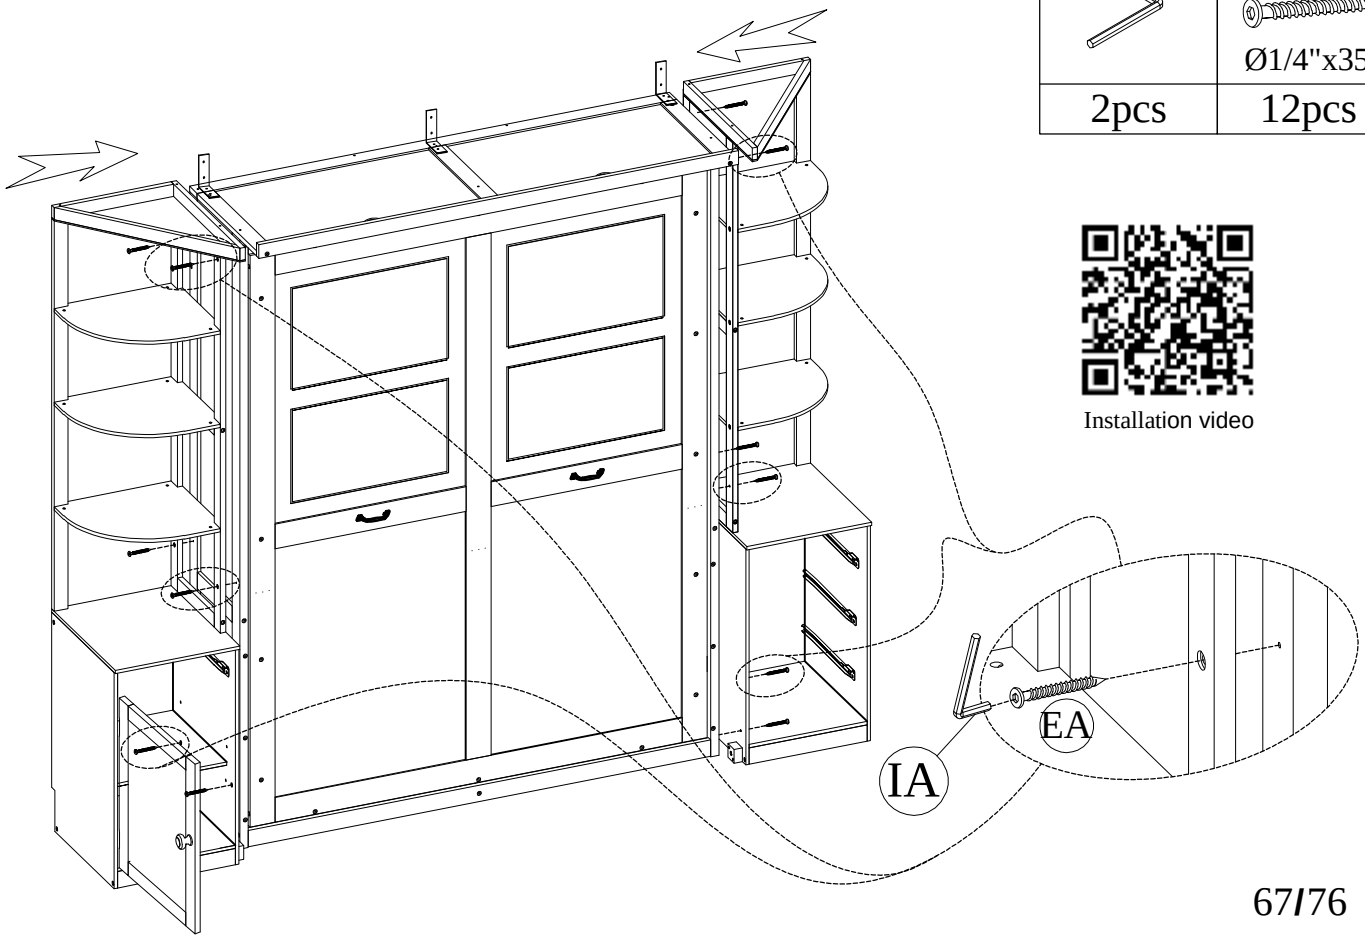
Installation video





STEP-ÉTAPE-69

BA

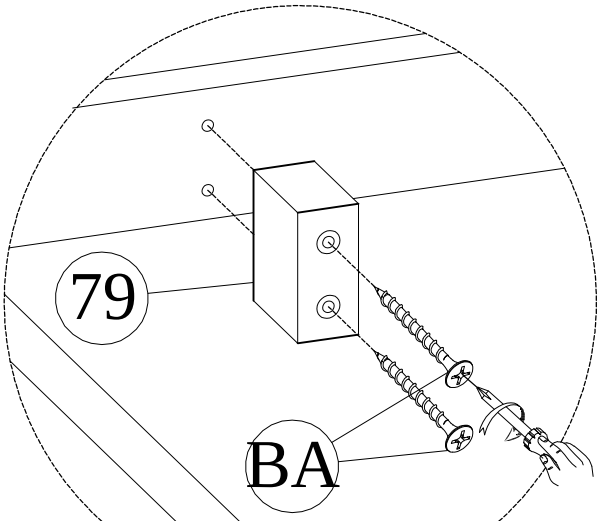M4x30
4pcs

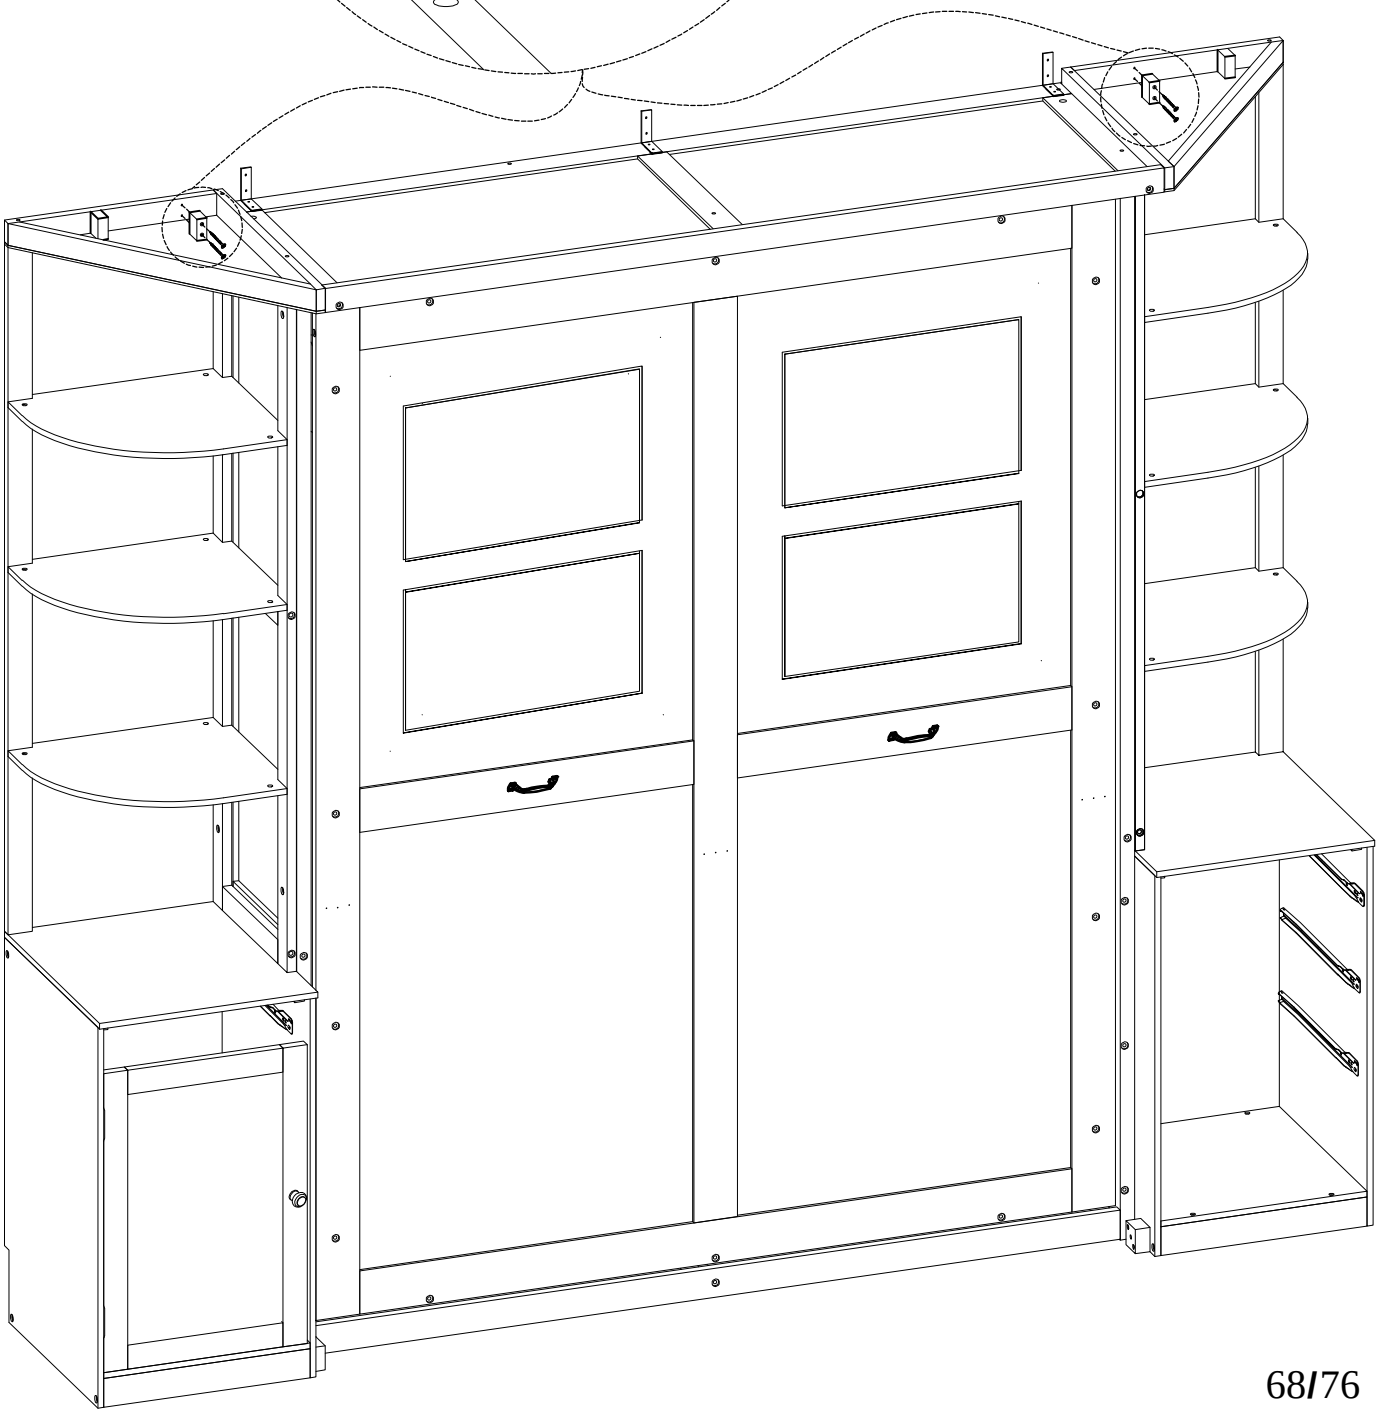






STEP-ÉTAPE-70


T	DA
 M4x20	
4pcs	2pcs

STEP-ÉTAPE-71

This accessory is for use on brick or concrete walls.


AC	BB
	
1pc	4pcs

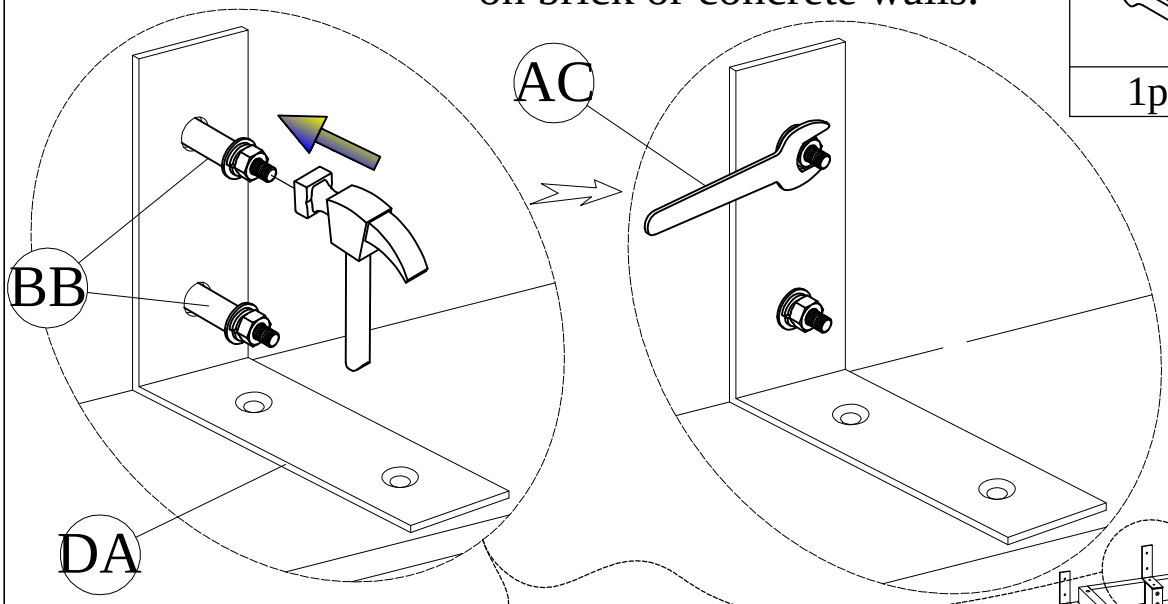


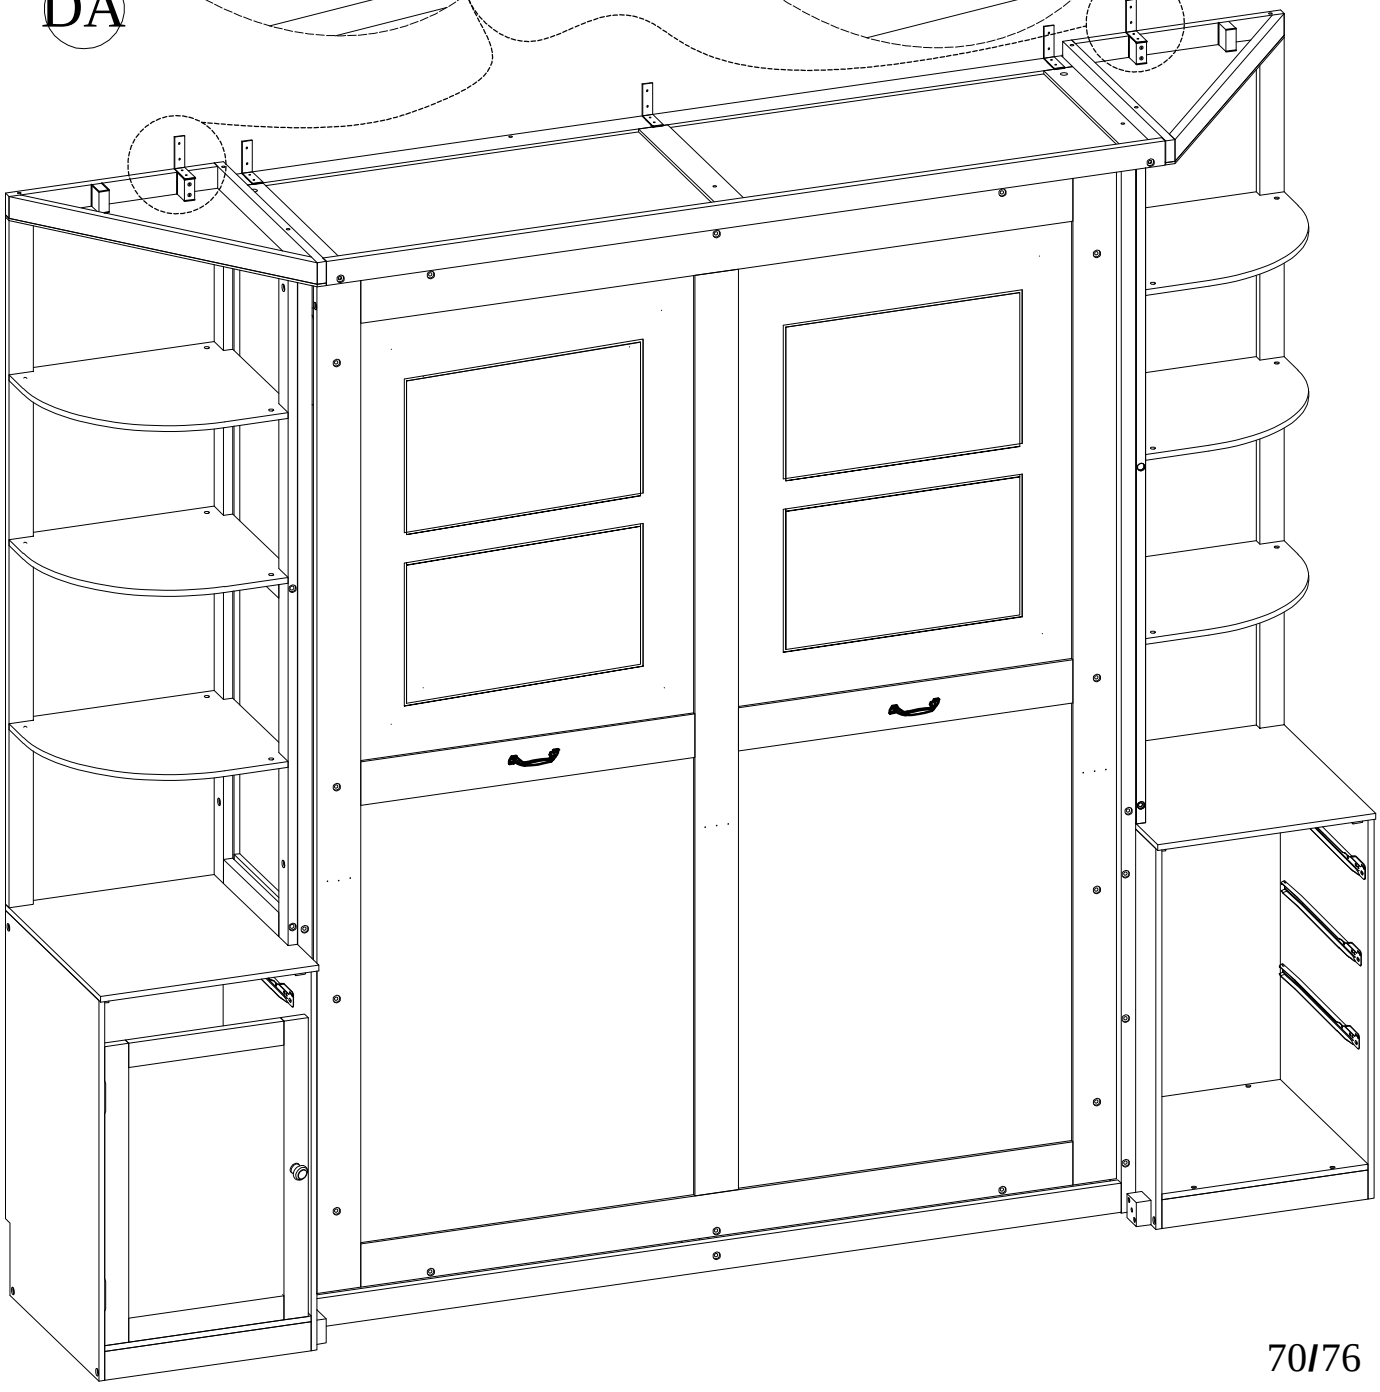


STEP-ÉTAPE-72


This accessory is for wooden walls.


BC	CA
	
4pcs	4pcs

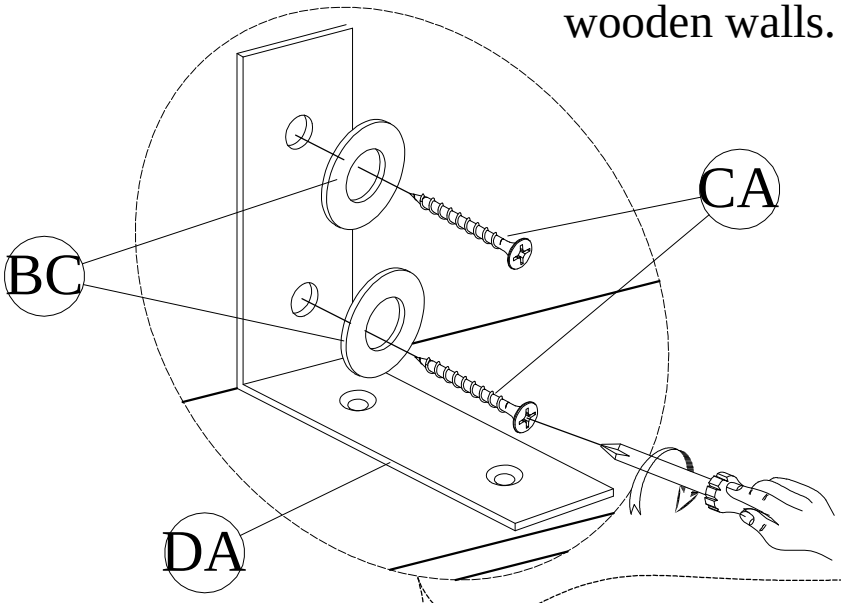


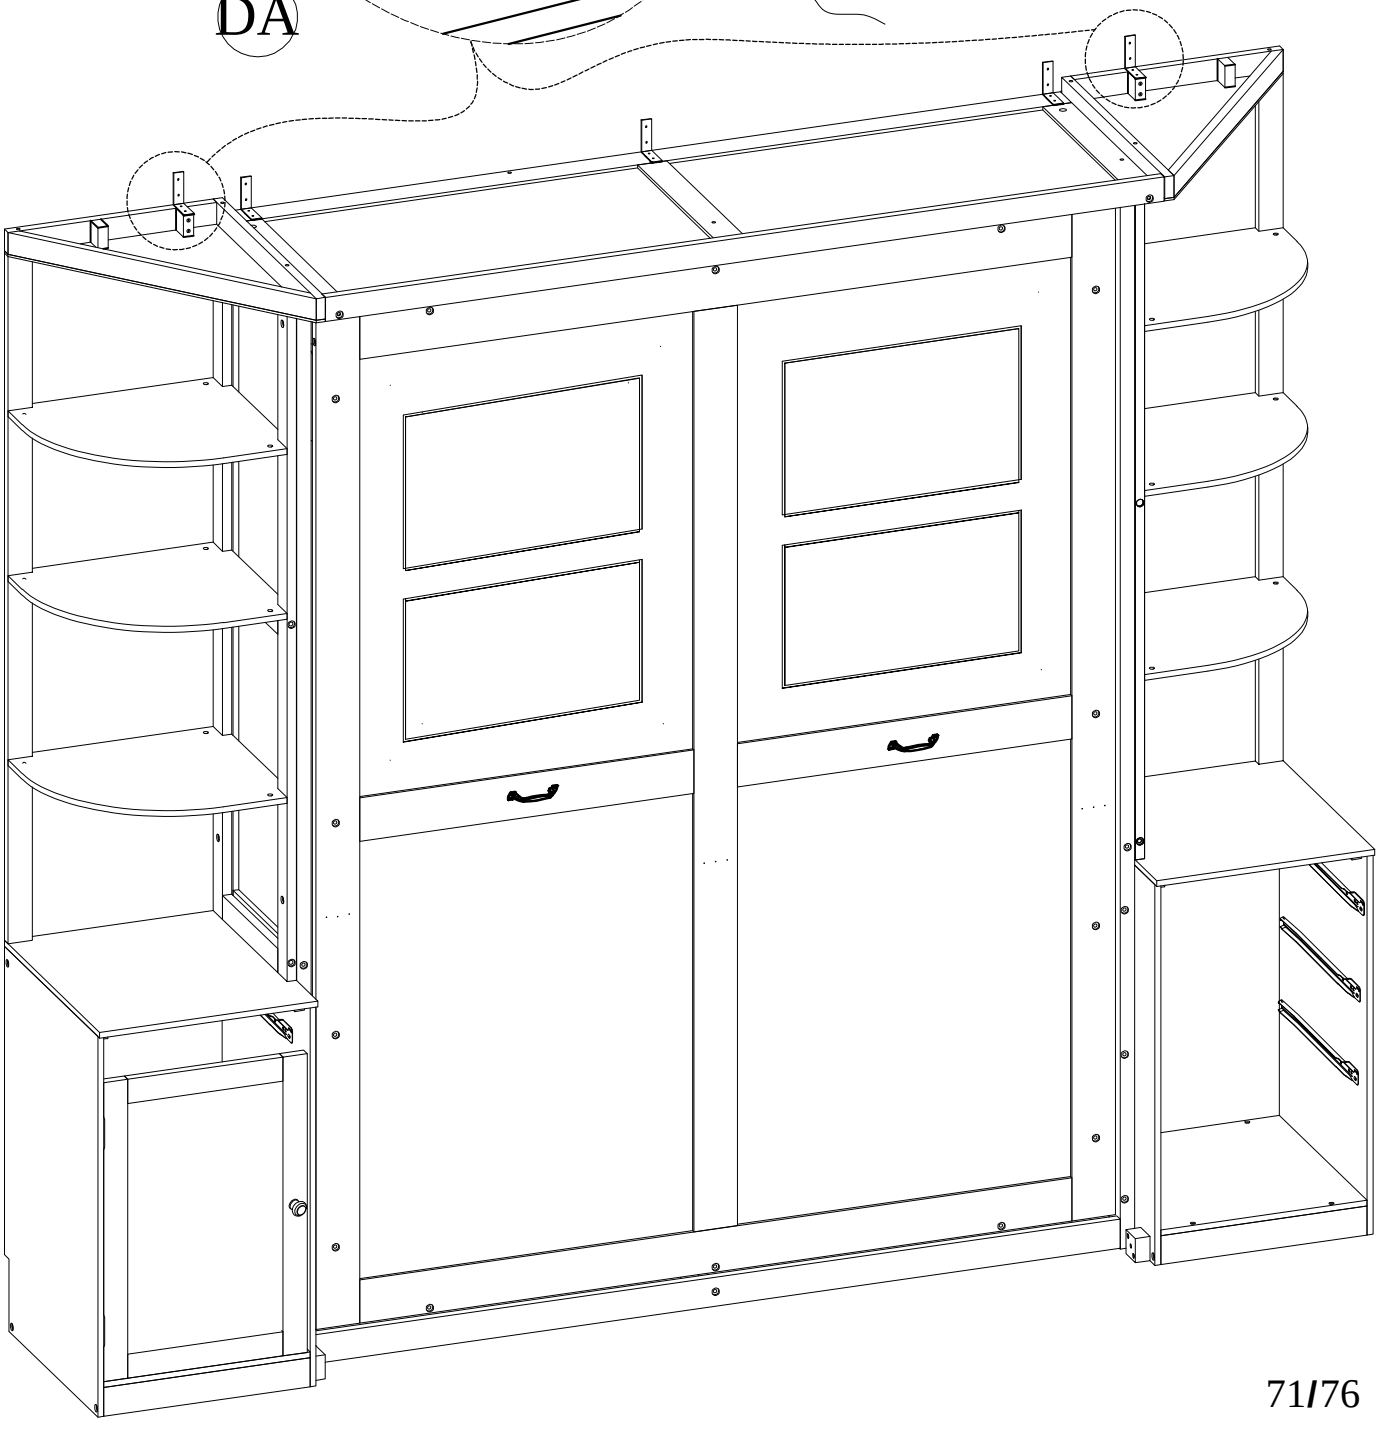

STEP-ÉTAPE-73

LA

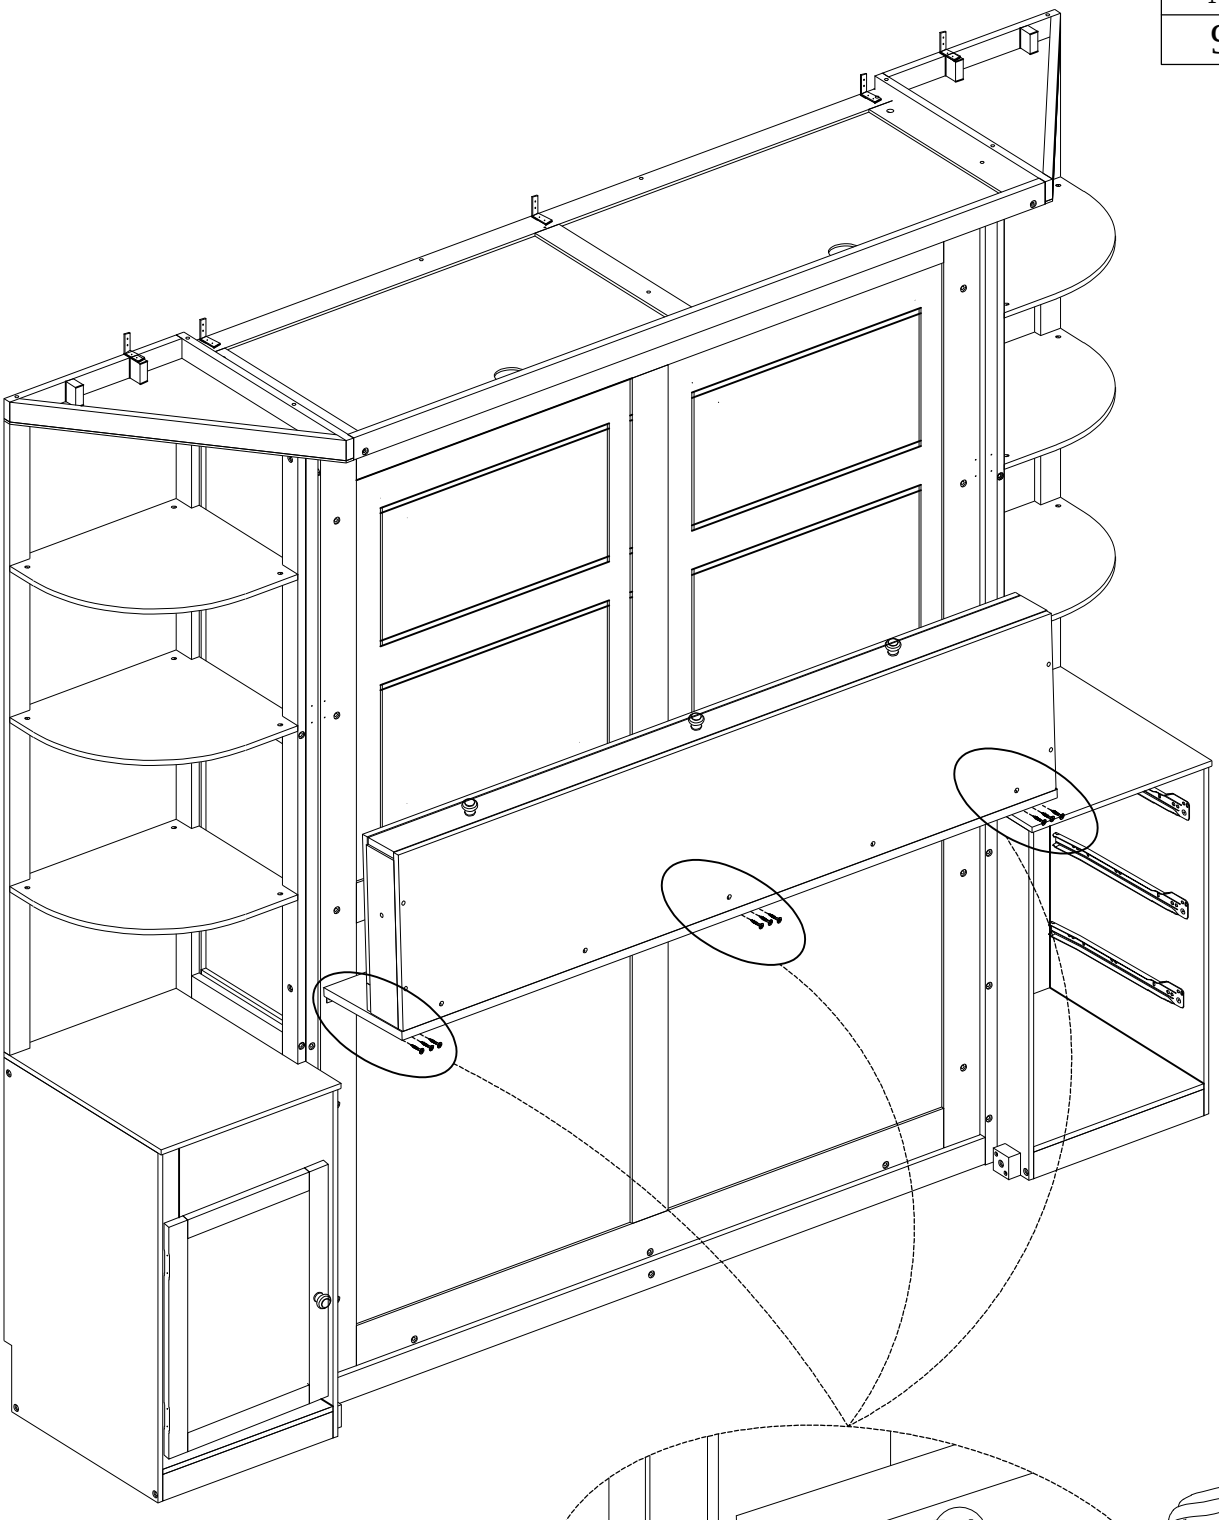M3x15
9pcs

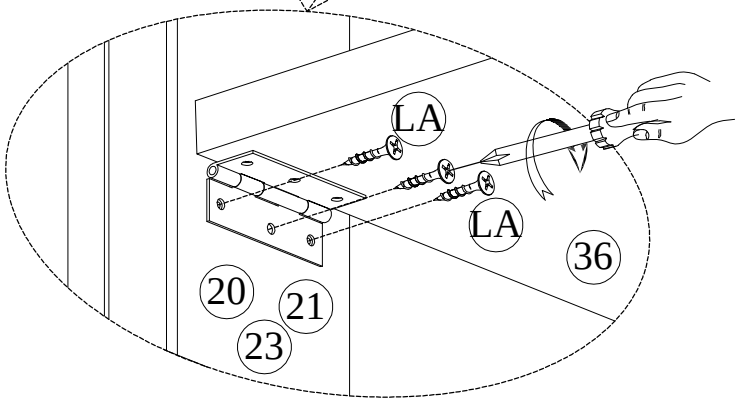



Installation video

STEP-ÉTAPE-74


X	WA	H
	 Ø1/4"x30	 Ø1/4"x60
4pcs	2pcs	2pcs

IA	V
	
2pcs	2pcs




Installation video

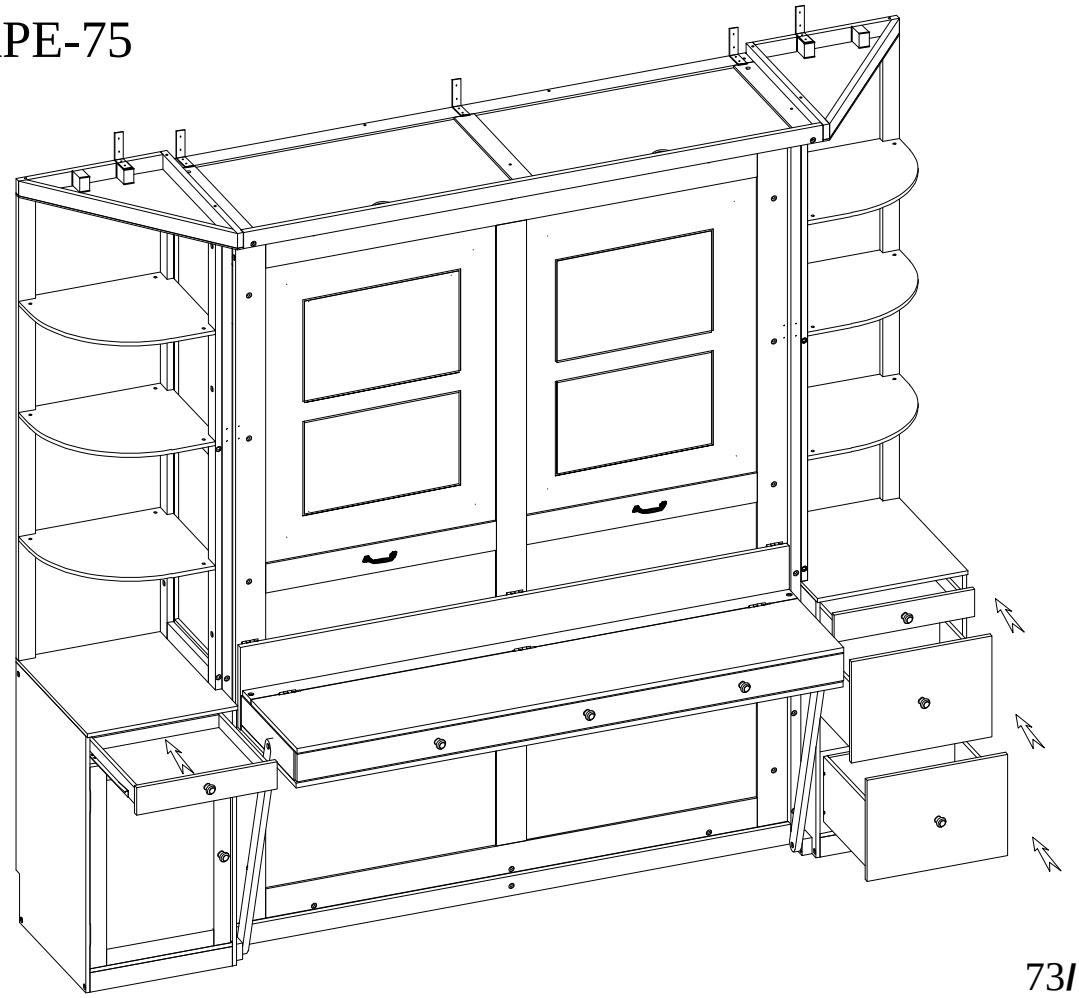
STEP-ÉTAPE-75





STEP-ÉTAPE-76

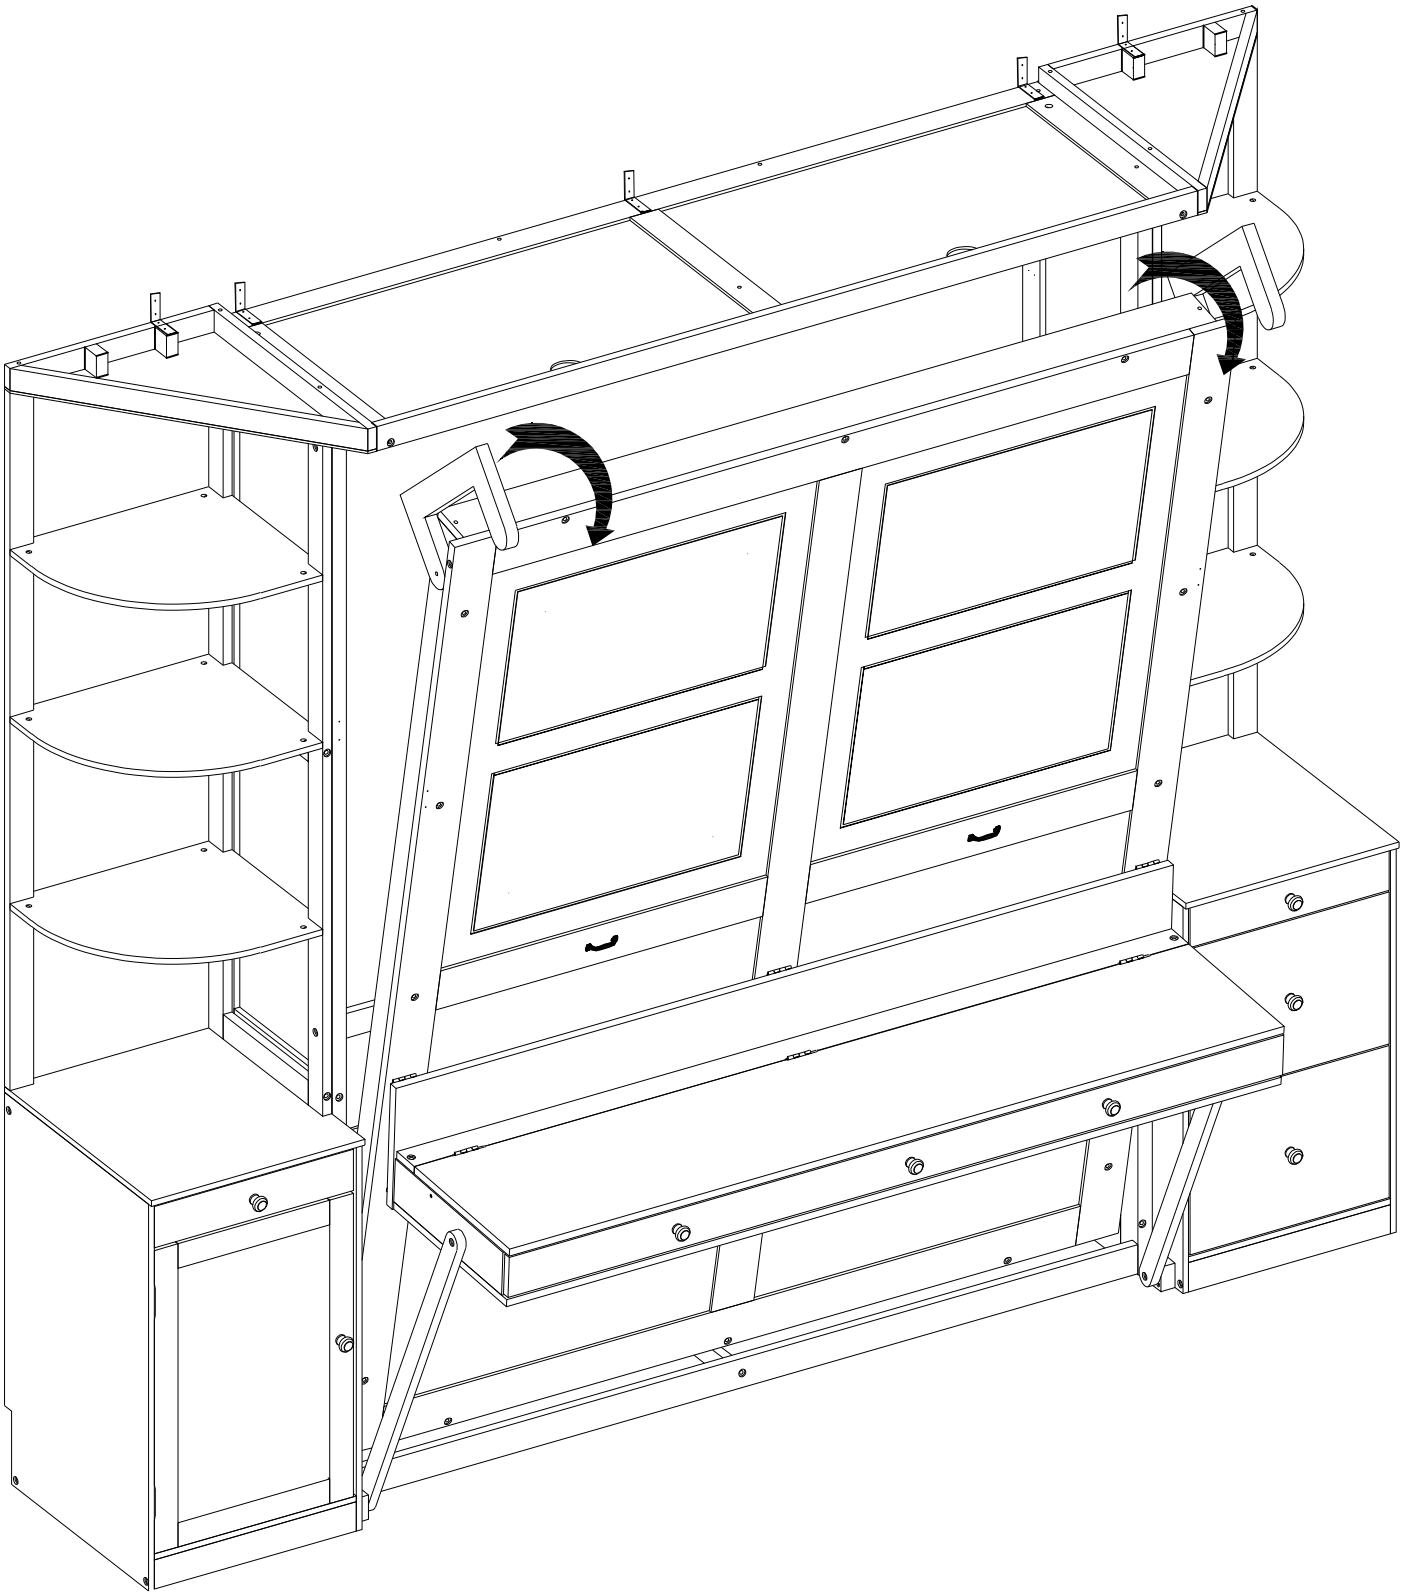


STEP-ÉTAPE-77

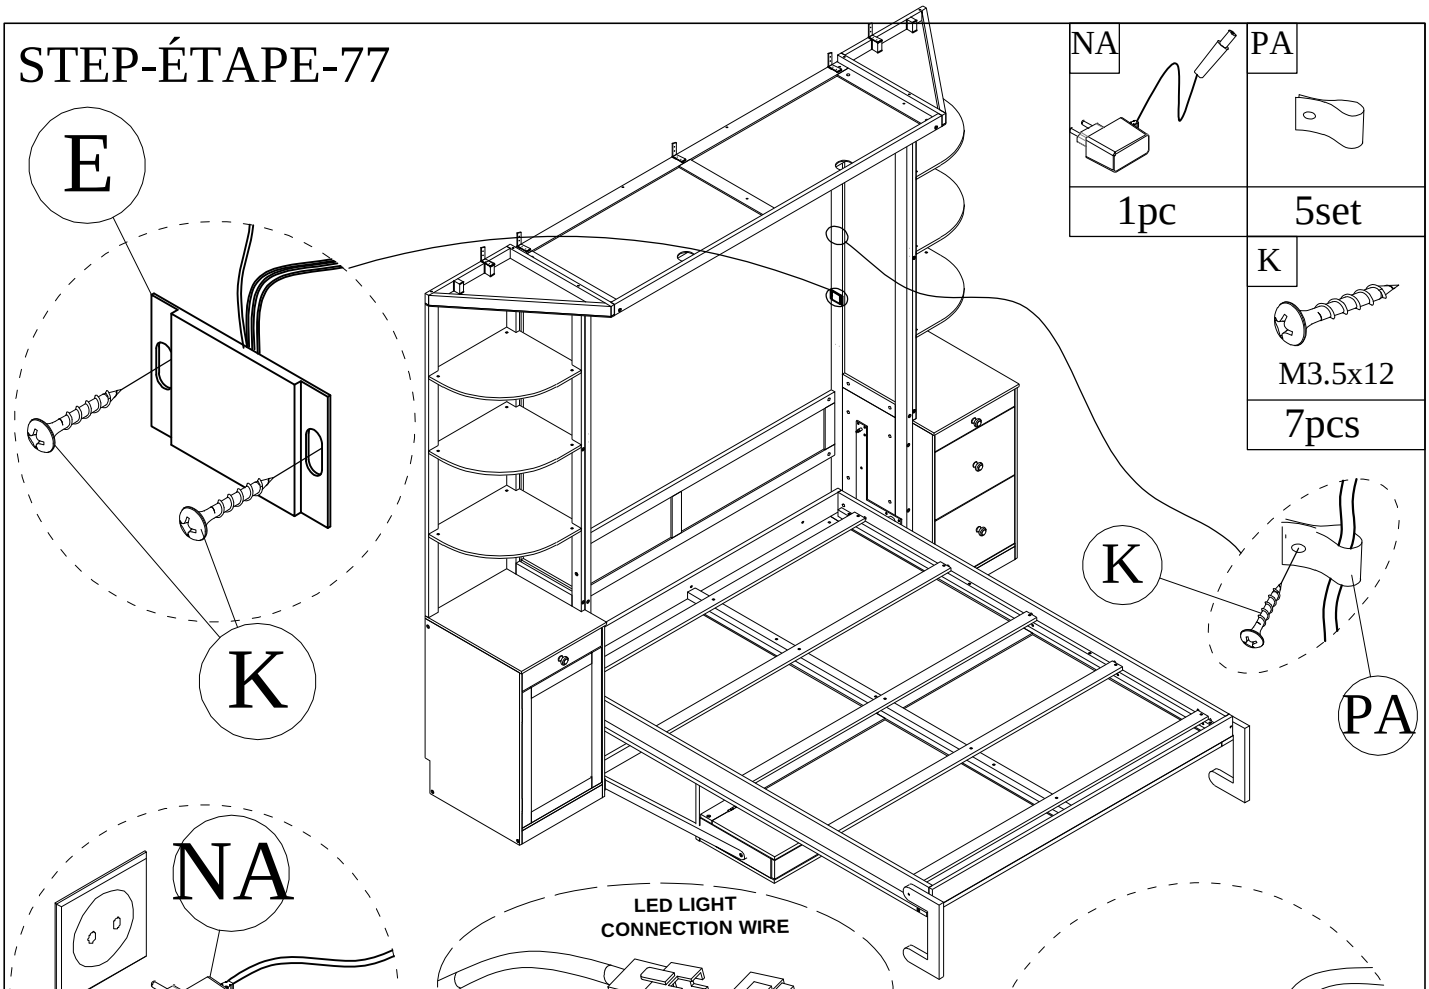


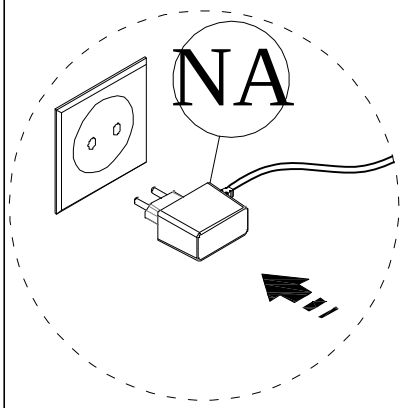


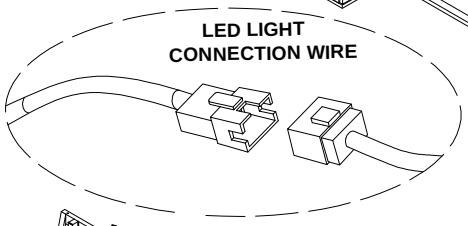

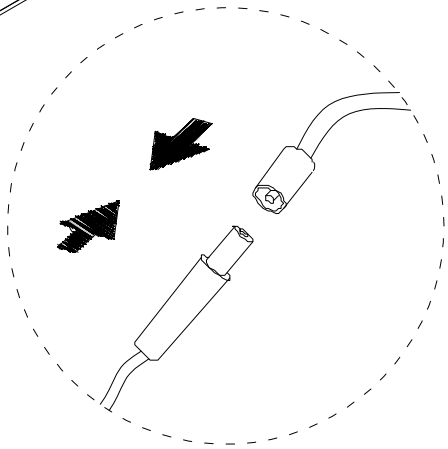

OR - OU

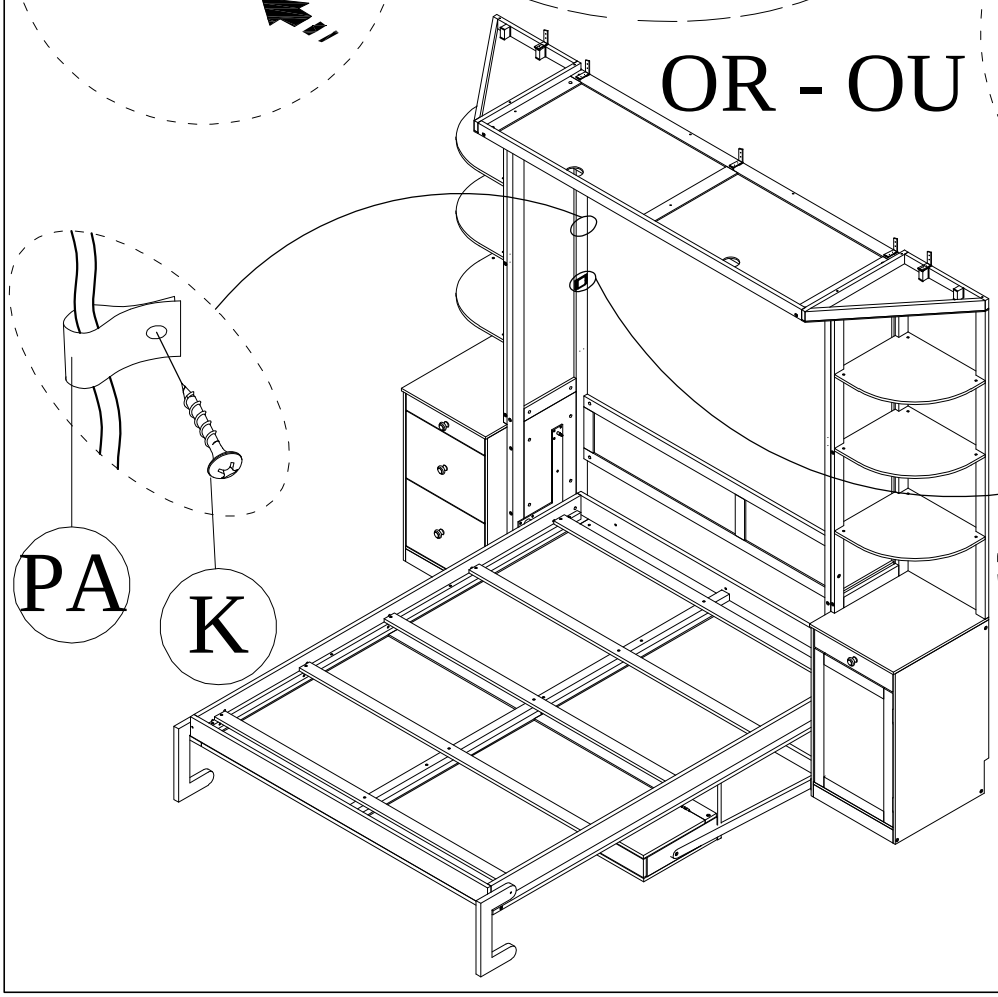

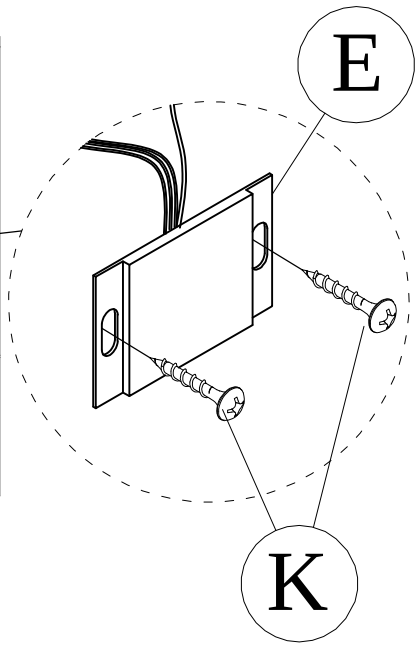

FINISH:

