




Installation instructions

Furniture 5690 Sideboard Rosario White

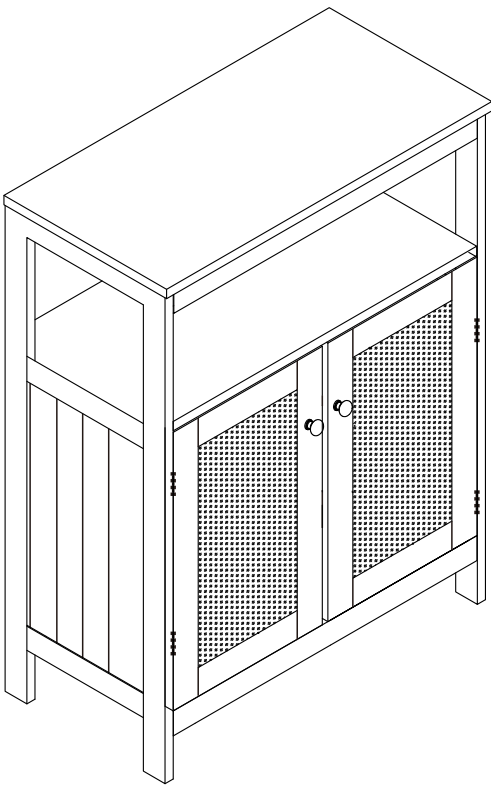


Furniture 5691 Sideboard Riad White

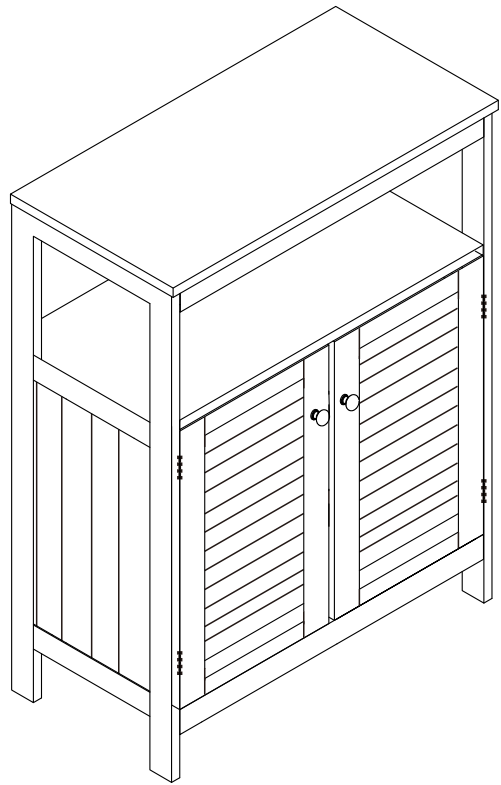

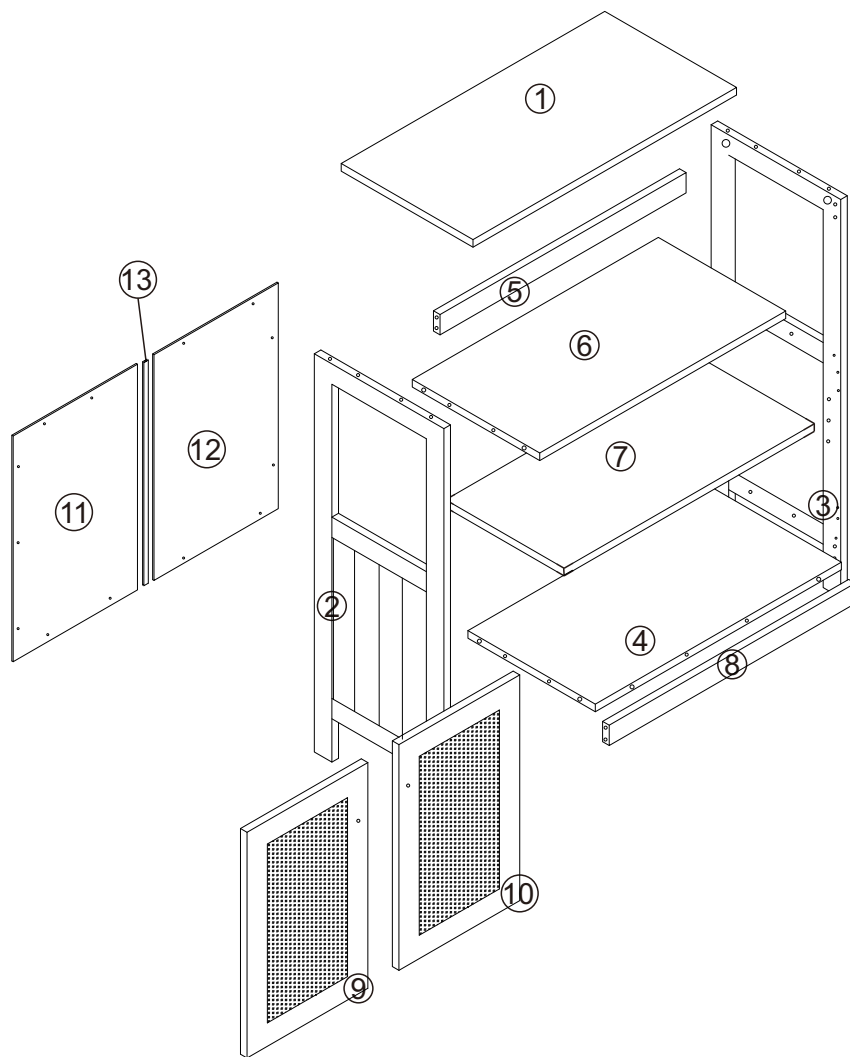

Ax14




Bx1



Cx2



Dx14




Ex24



Fx2



Gx16



Hx4



Ix4



Jx2



Kx2



Lx2



Mx2



Nx14




Ox14



Px4



1.

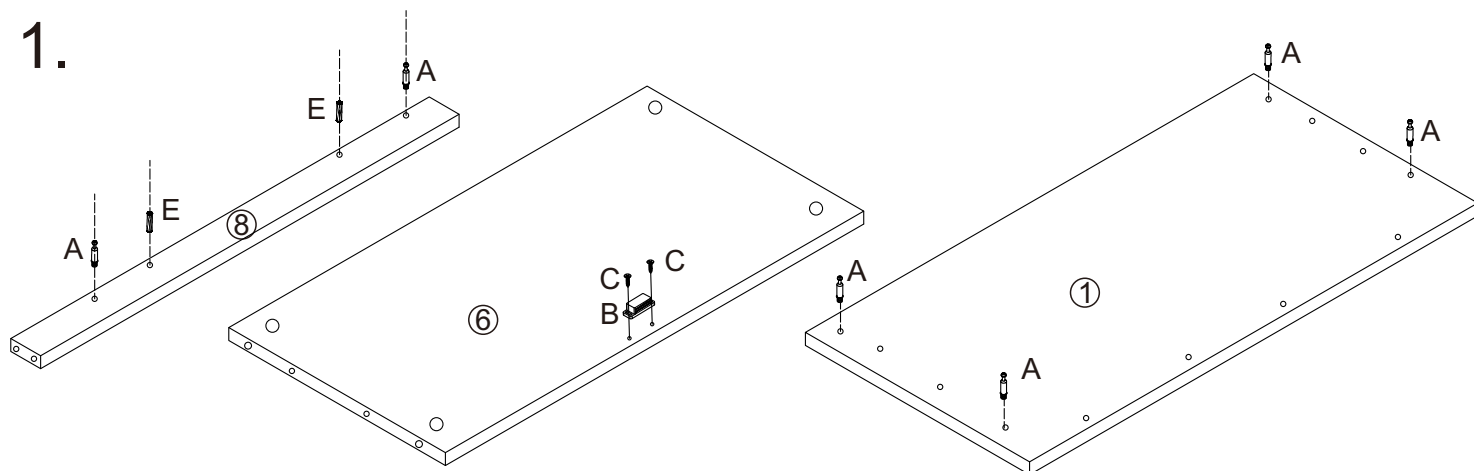



2.

Furniture 5690


Furniture 5691

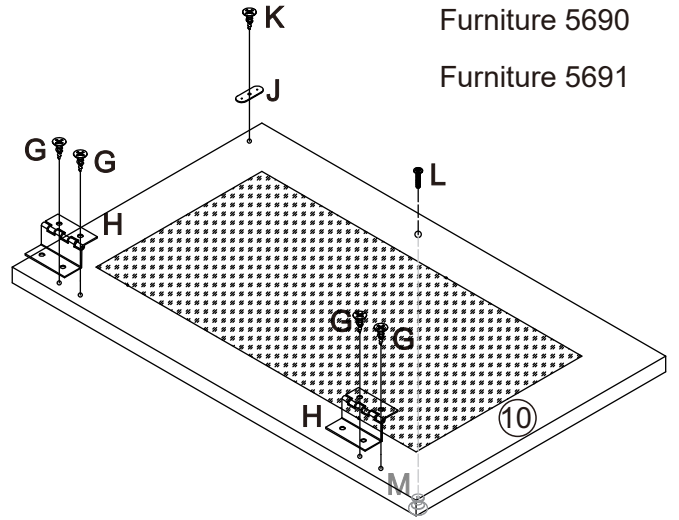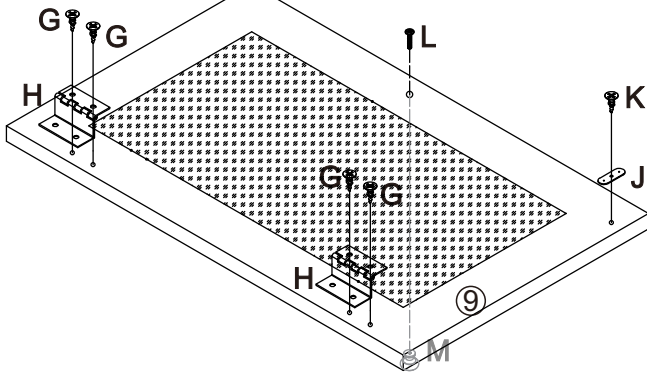


3.

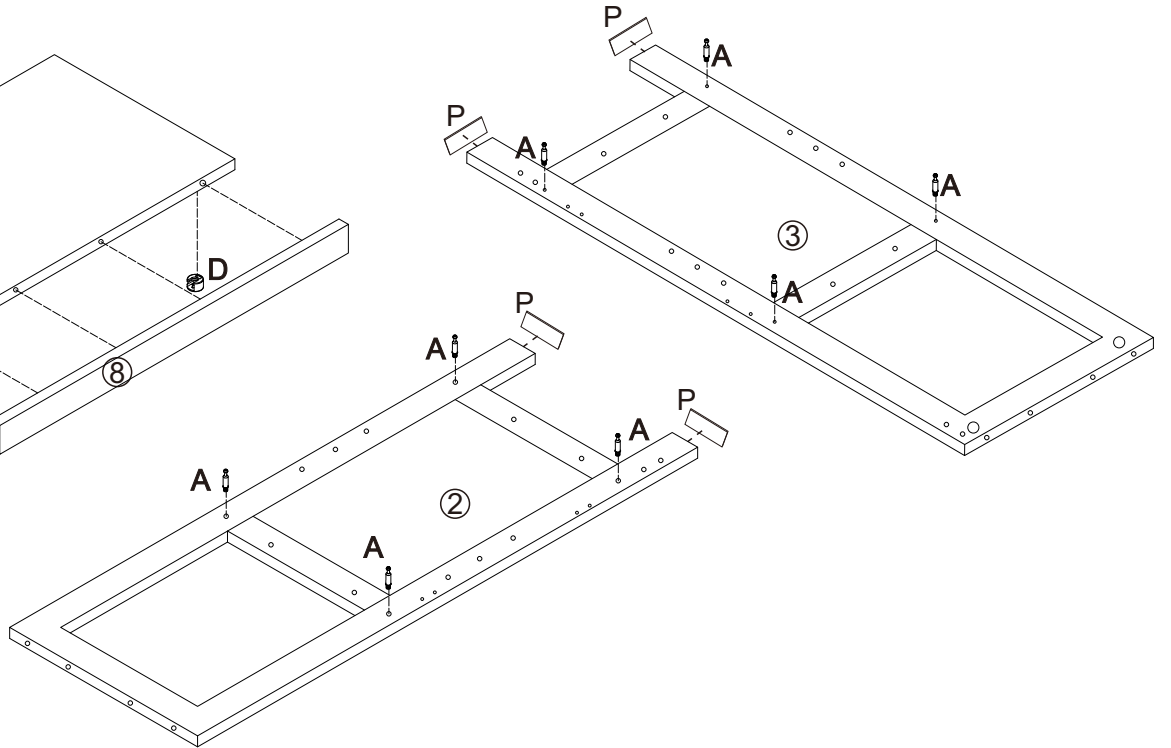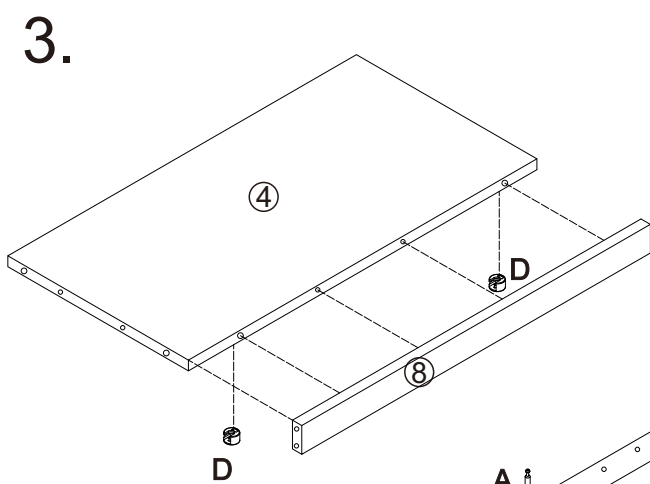

4.

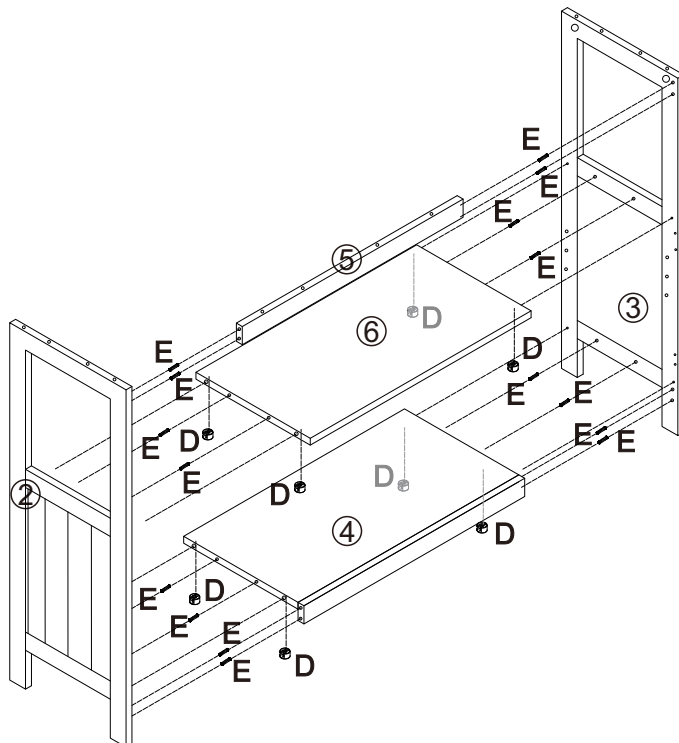


5.

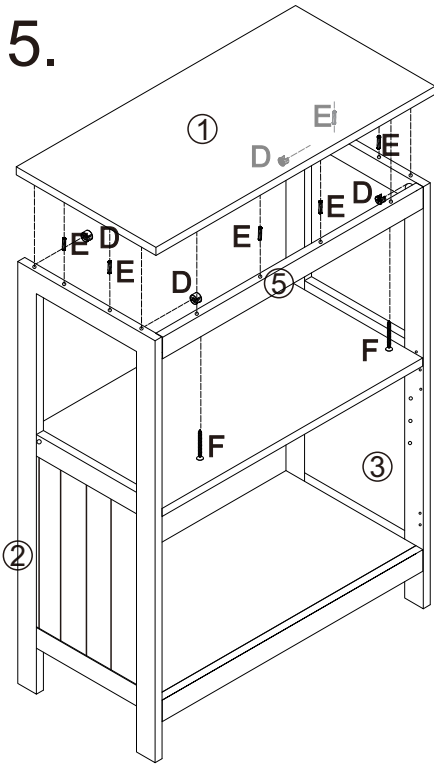

Furniture 5690

Furniture 5691

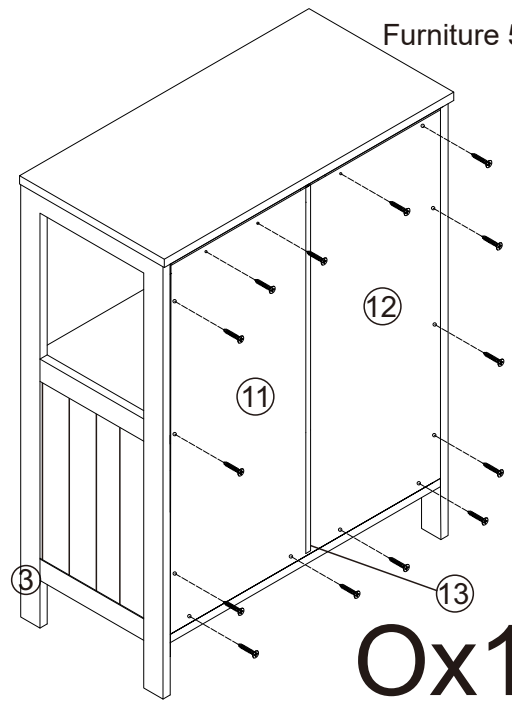

Ox14

6.

