



## BENCH (MOCHA BROWN)



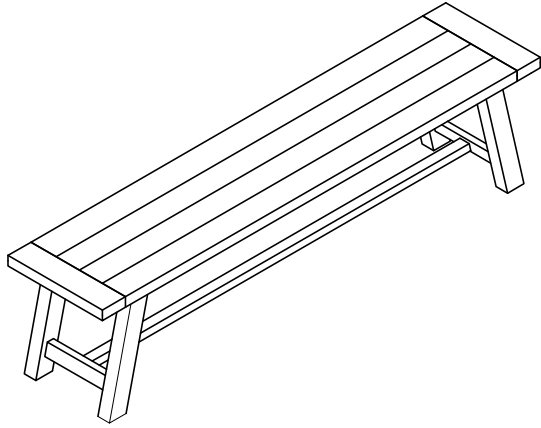


### ASSEMBLY INSTRUCTIONS





**15 MIN**




x2





CODE	PICTURE	SIZE	AMOUNT
A		M8 x 50 mm	6 PCS
B		M6 x 40 mm	2 PCS
C		Ø8/13 mm	8 PCS
D		Ø8/19 mm	8 PCS
E		Ø4	1 PC
F		M13 mm	1 PC

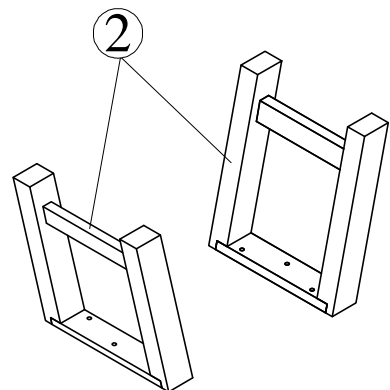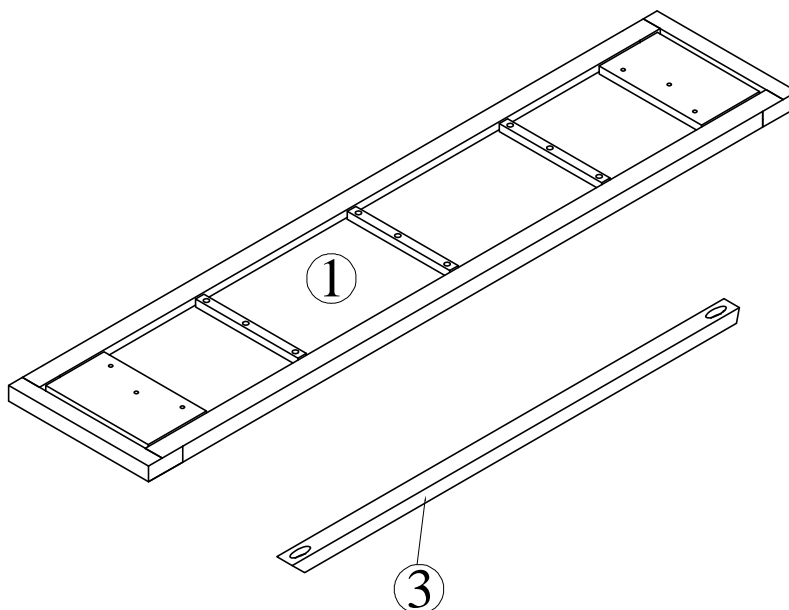**NOTE:** Do not fully tighten all screws and bolts until the entire item is completely assembled




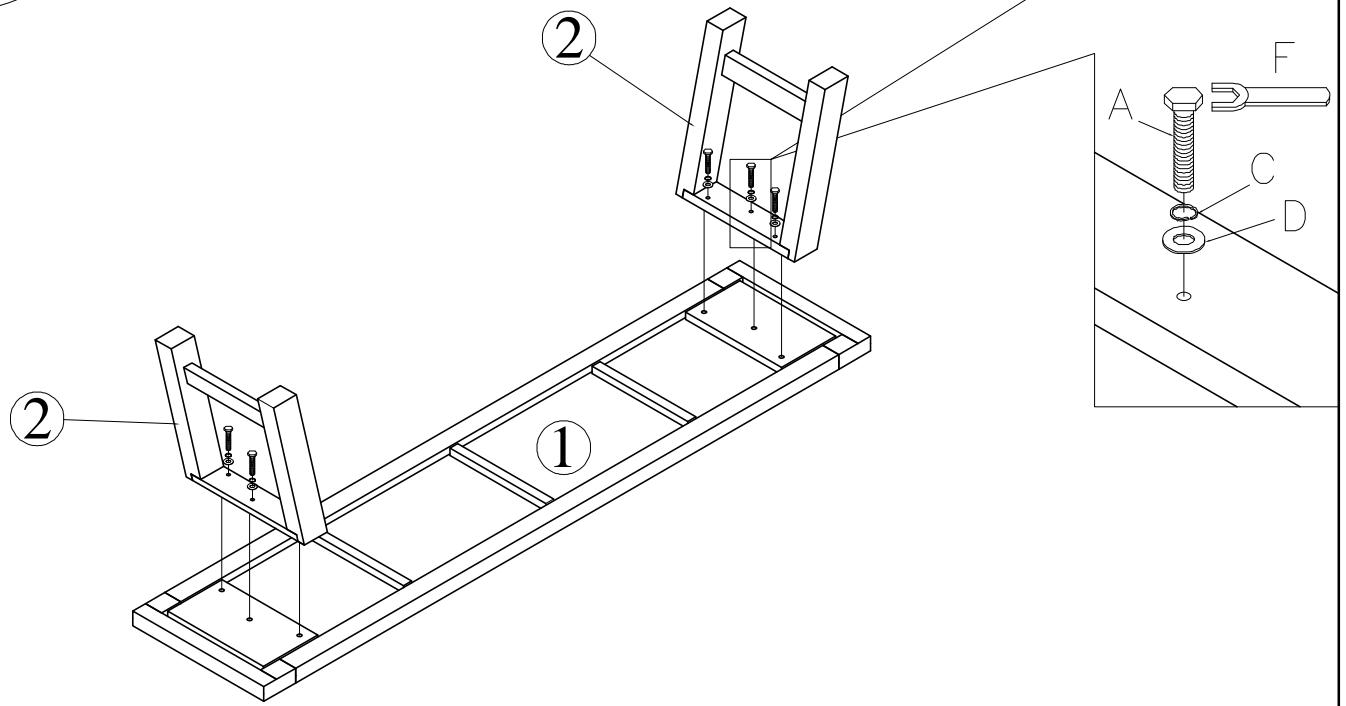



# Step1

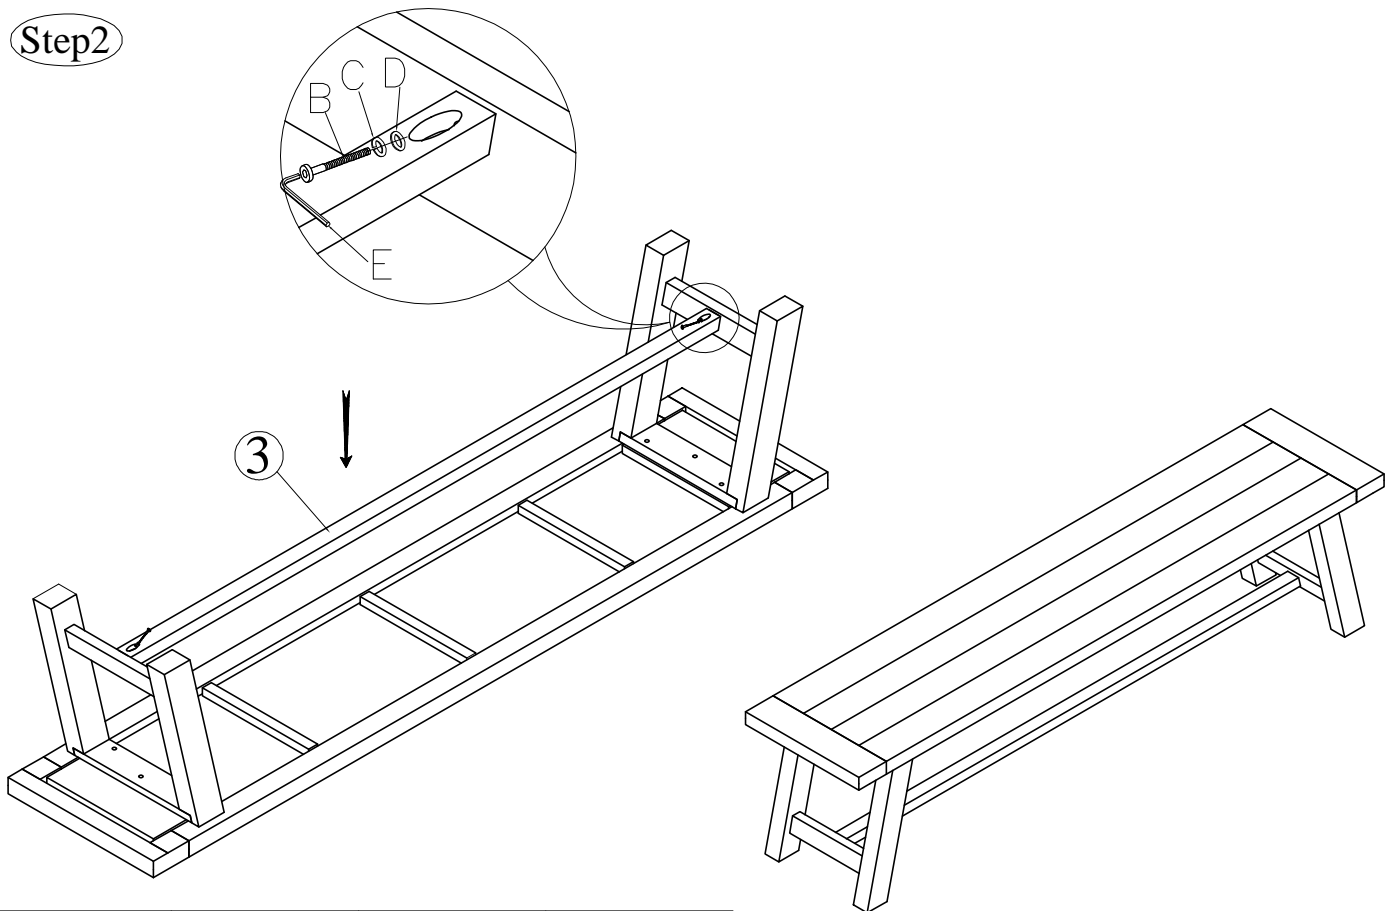

<b>(A)</b> 	<b>(C)</b> 	<b>(D)</b> 	<b>(F)</b> 
M8 x 50mm 6pcs	Ø8/13 mm 6pcs	Ø8/19 mm 6pcs	M13 mm 1pc

# Step2



<b>(B)</b> 	<b>(C)</b> 	<b>(D)</b> 	<b>(E)</b> 
M6 x 40mm 2pcs	Ø8/13 mm 2pcs	Ø8/19 mm 2pcs	Ø4 mm 1pc

**COMPLETE**