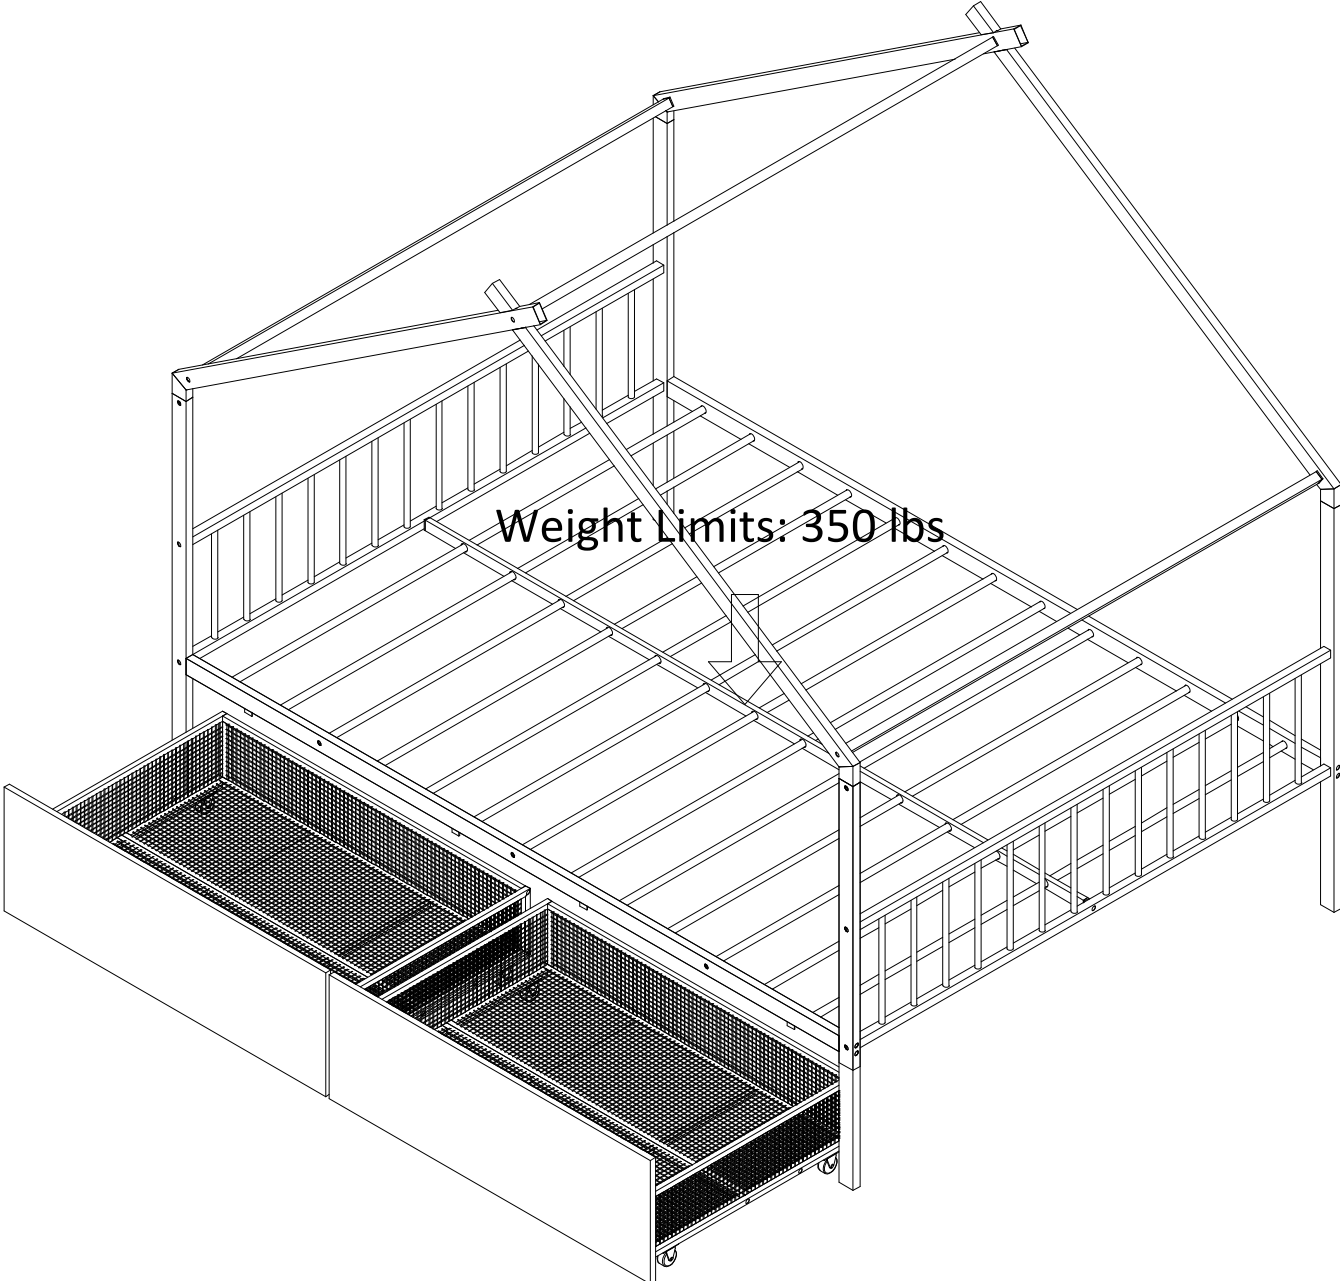


ASSEMBLY INSTRUCTIONS

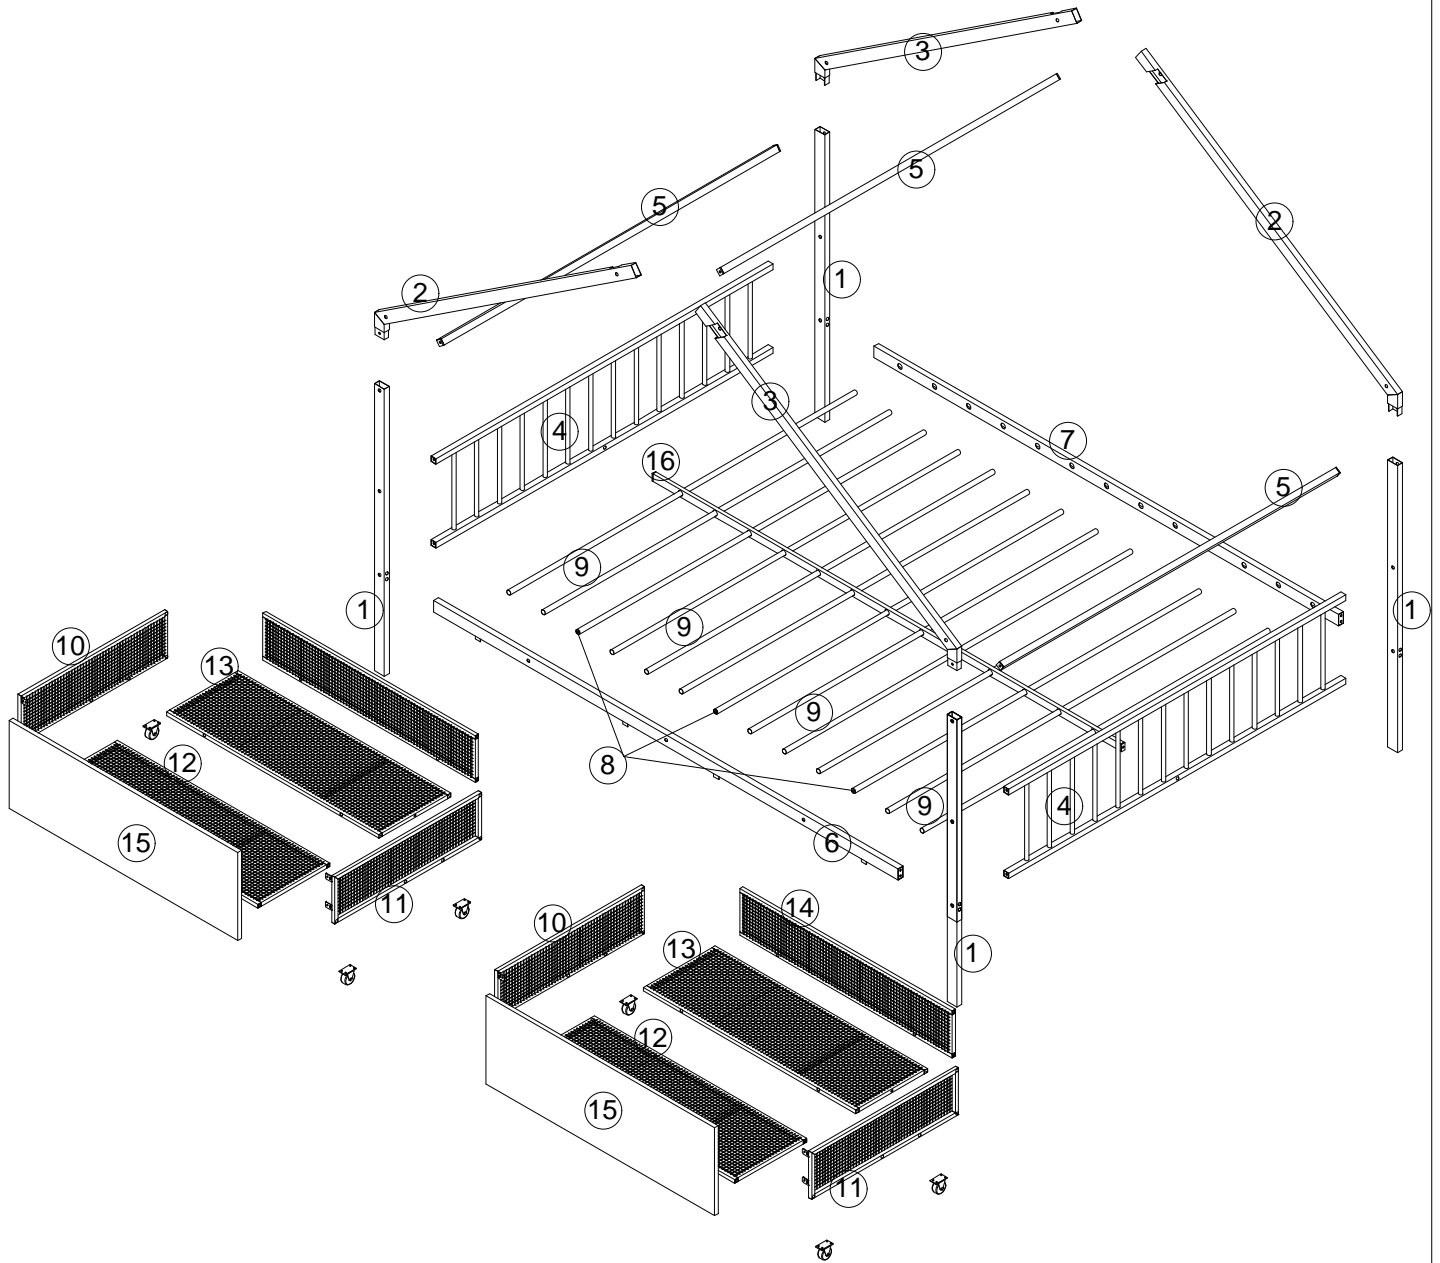
SKU CODE: MF305484



Detail View


BUNK BED

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY



ASSEMBLY INSTRUCTIONS

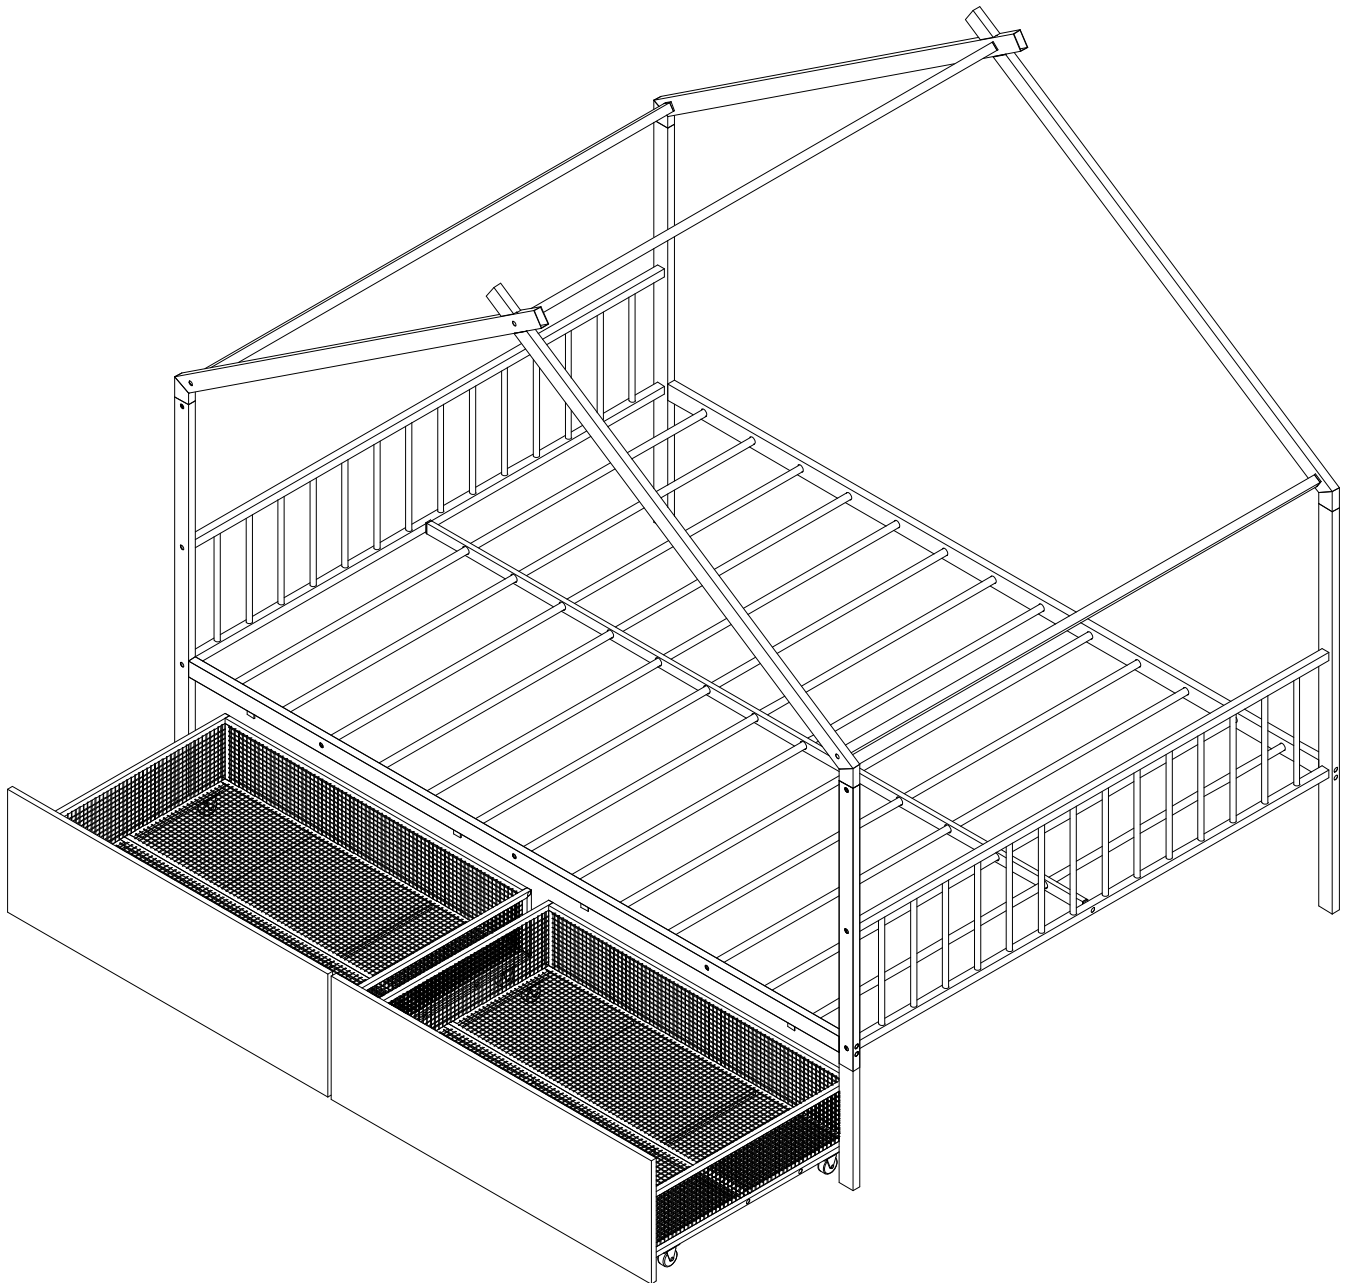BUNK BED


















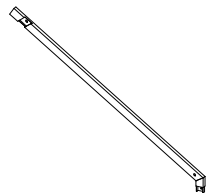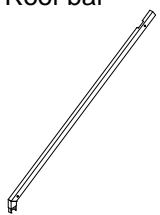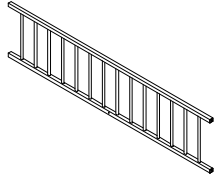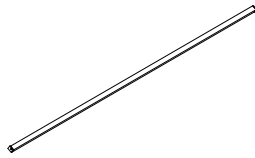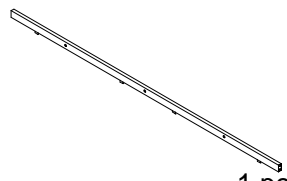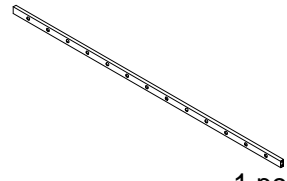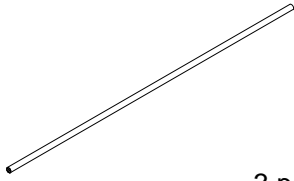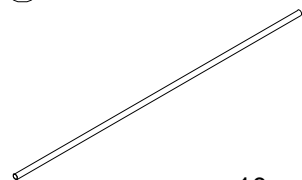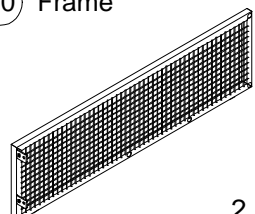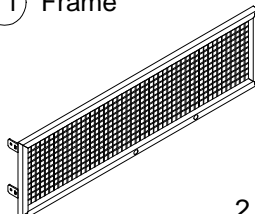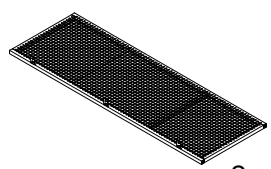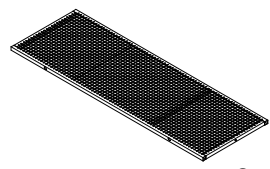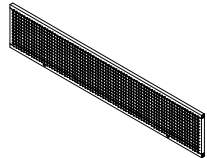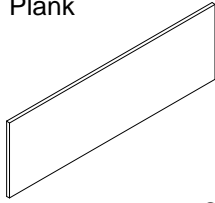
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

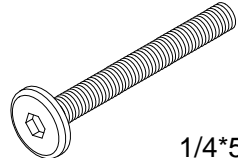
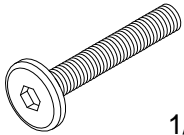






Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

PART LIST MF305484


<p>1 Vertical bar</p>  <p>4 pcs</p>	<p>2 Roof bar</p>  <p>2 pcs</p>	<p>3 Roof bar</p>  <p>2 pcs</p>	<p>4 Headboard</p>  <p>2 pcs</p>
<p>5 Horizontal bar</p>  <p>3 pcs</p>	<p>6 Horizontal bar</p>  <p>1 pc</p>	<p>7 Horizontal bar</p>  <p>1 pc</p>	<p>8 Slats</p>  <p>3 pcs</p>
<p>9 Slats</p>  <p>10 pcs</p>	<p>10 Frame</p>  <p>2 pcs</p>	<p>11 Frame</p>  <p>2 pcs</p>	<p>12 Frame</p>  <p>2 pcs</p>
<p>13 Frame</p>  <p>2 pcs</p>	<p>14 Frame</p>  <p>2 pcs</p>	<p>15 Plank</p>  <p>2 pcs</p>	<p>16 Horizontal bar</p>  <p>1 pc</p>

HARDWARE LIST MF305484

<p>A Bolts</p>  <p>1/4*55 8 pcs</p>	<p>B Bolts</p>  <p>1/4*40 16 pcs</p>	<p>C Bolts</p>  <p>1/4*18 10 pcs</p>	<p>D Bolts</p>  <p>1/4*32 28 pcs</p>
<p>E Screws</p>  <p>#8*10 14 pcs</p>	<p>F Bolts</p>  <p>5/32*10 16 pcs</p>	<p>G Caster</p>  <p>8 pcs</p>	<p>H Allen Key</p>  <p>4*59 1 pc</p>


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF305484

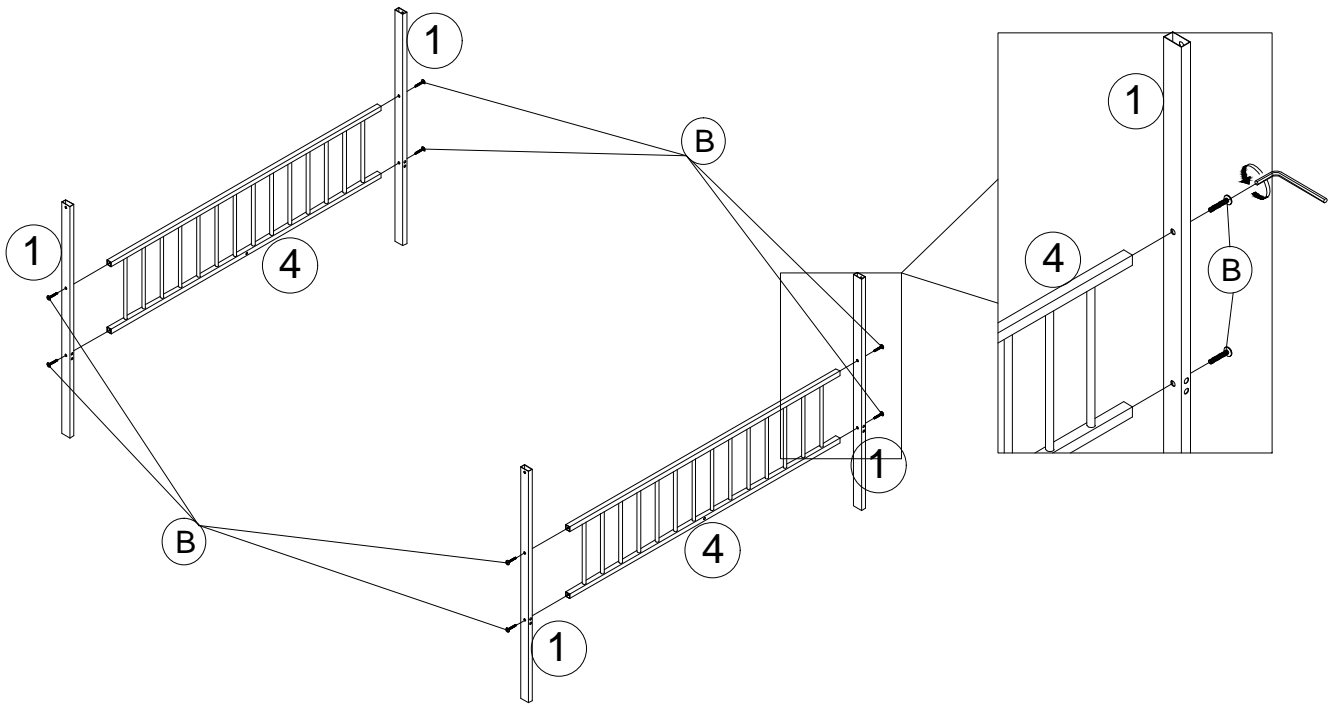
STEP 1



(B)		1/4*40	8 pcs
-----	---	--------	-------

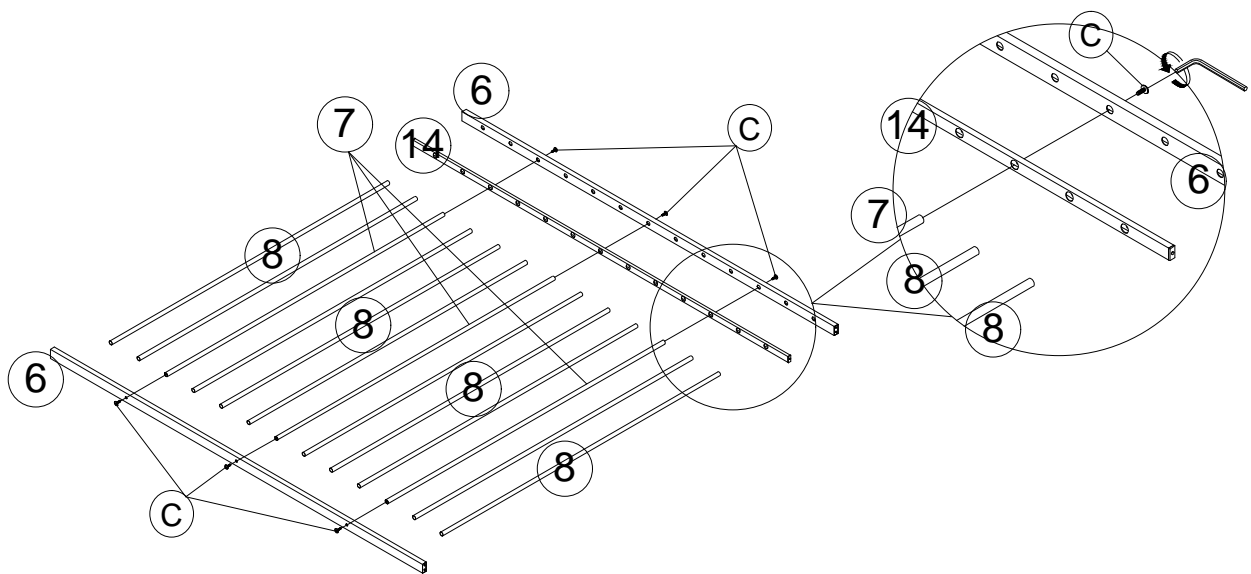
STEP 2





(C)		1/4*18	6 pcs
-----	---	--------	-------


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF305484

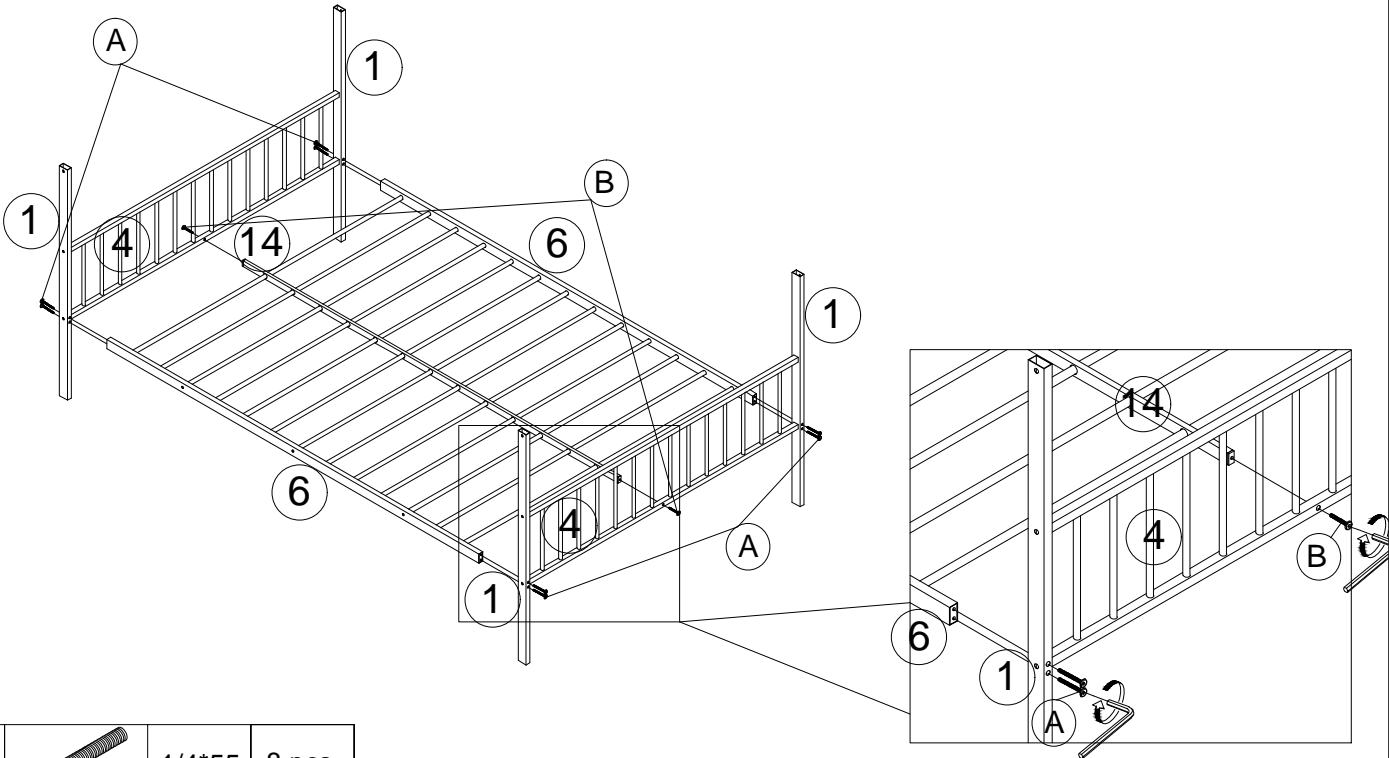
STEP 3



A		1/4*55	8 pcs
B		1/4*40	2 pcs

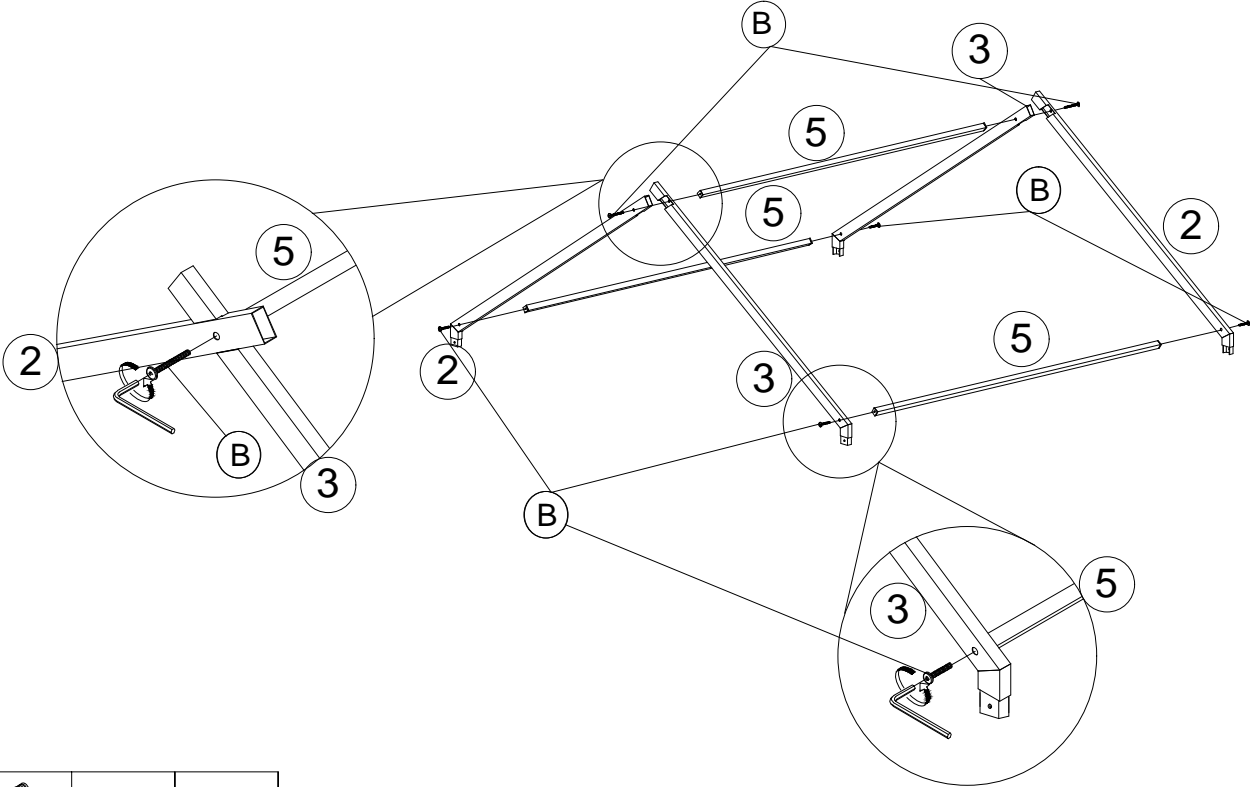
STEP 4




B		1/4*40	6 pcs
---	---	--------	-------


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF305484

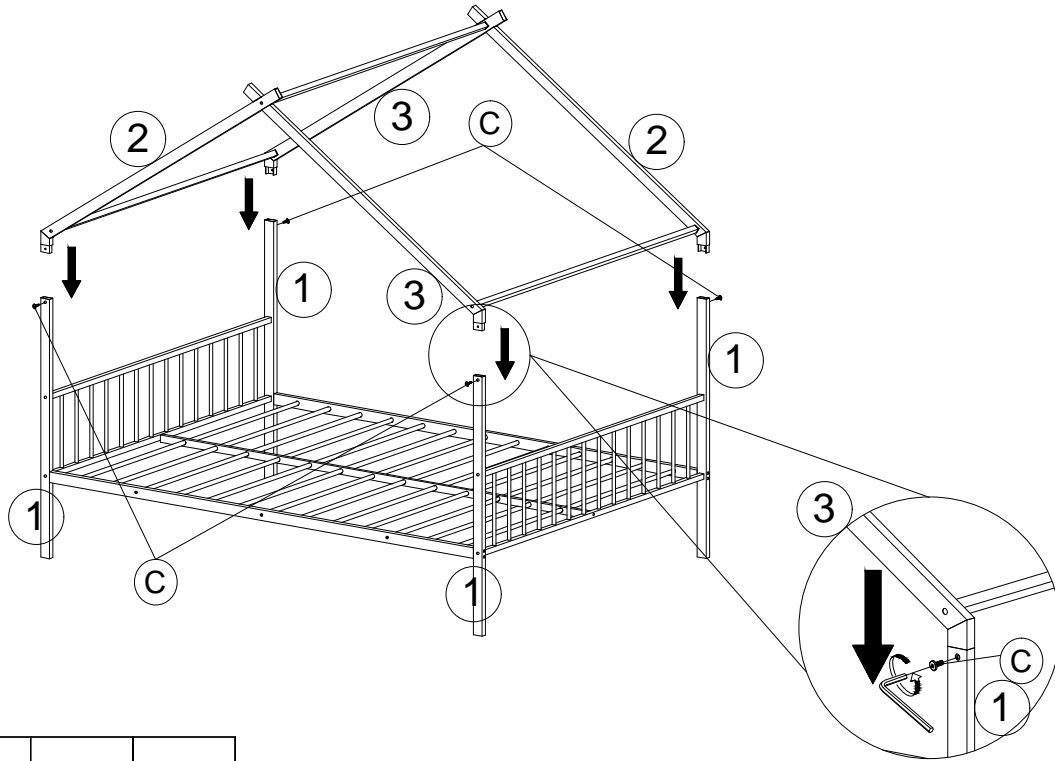
STEP 5



C		1/4*18	4 pcs
---	---	--------	-------

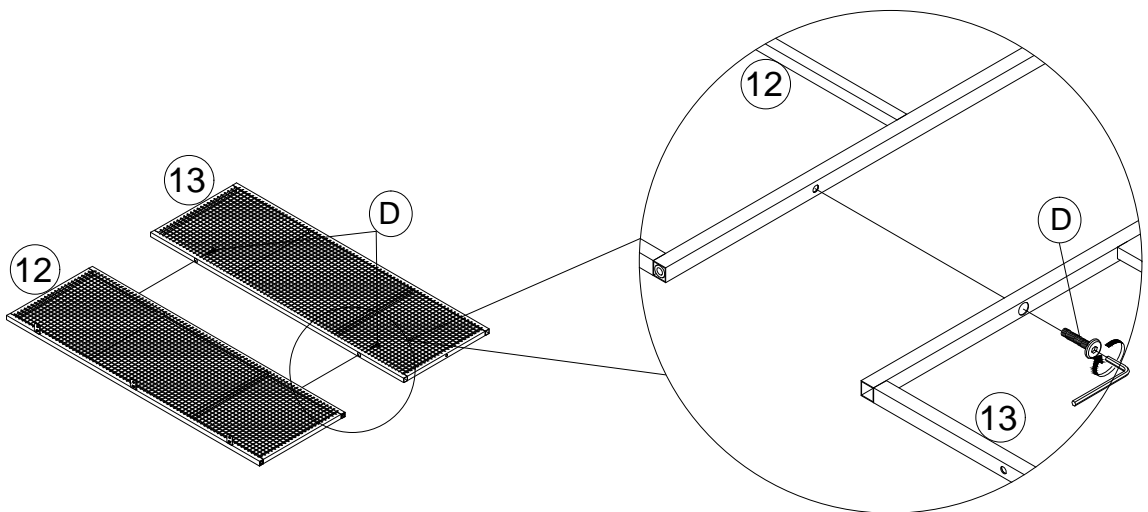
STEP 6 x2




D		1/4*32	2 pcs	x2
---	---	--------	-------	----


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF305484

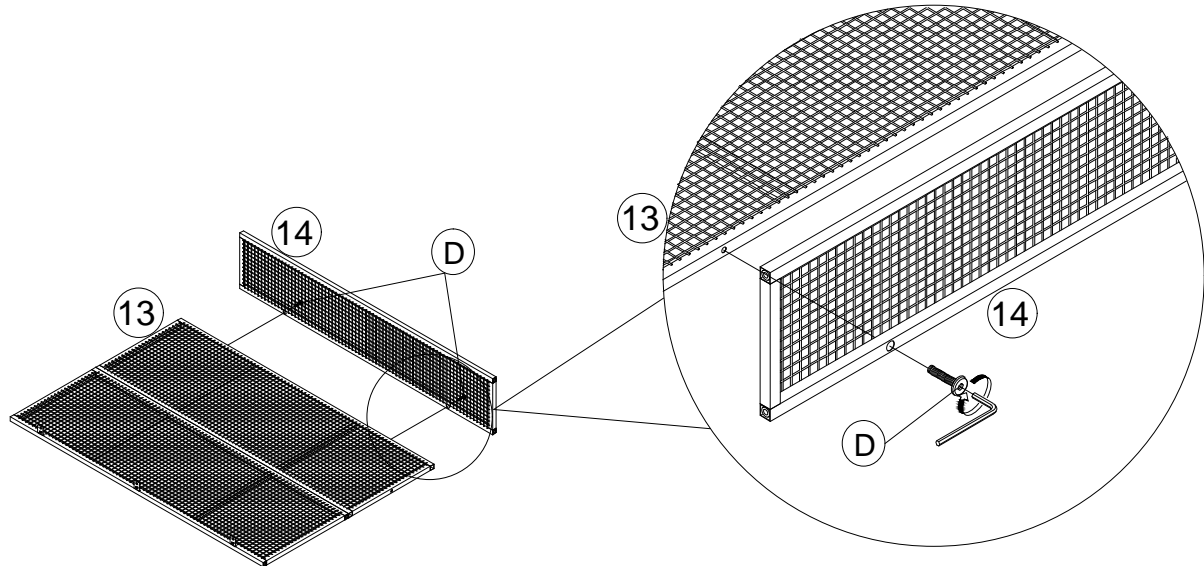
STEP 7 x2



D		1/4*32	2 pcs	x2
---	---	--------	-------	----

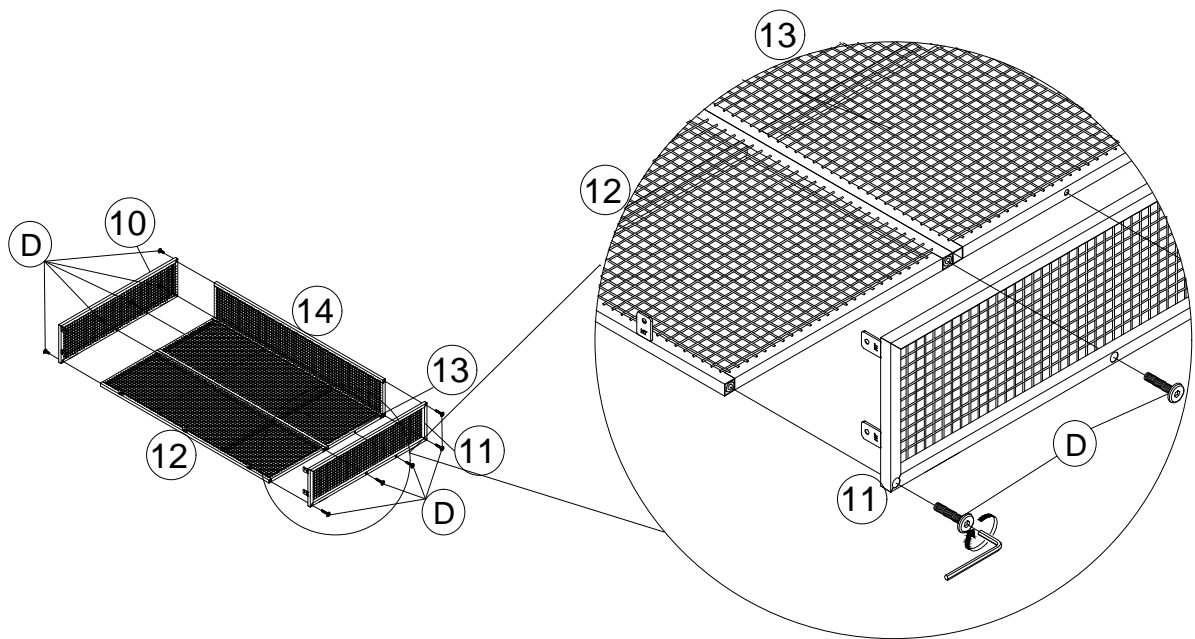
STEP 8 x2




D		1/4*32	10 pcs	x2
---	---	--------	--------	----

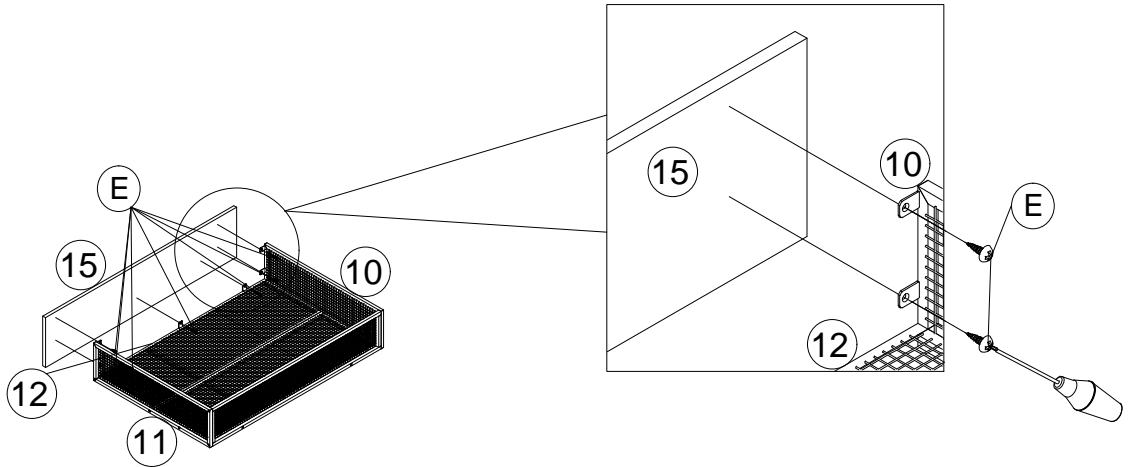
BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF305484



STEP 9 x2



E		#8*10	7 pcs	x2
---	---	-------	-------	----

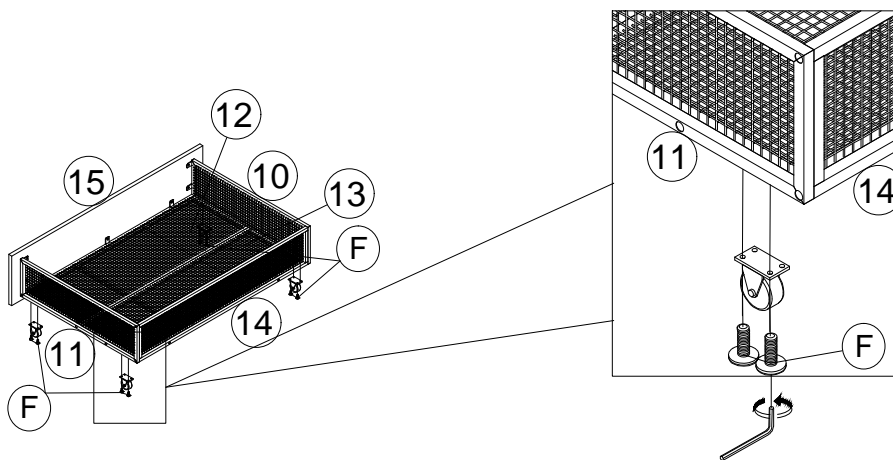STEP 10 x2



F		5/32*10	8 pcs	x2
G			4 pcs	x2

BUNK BED
ASSEMBLY INSTRUCTIONS
ITEM: MF305484

COMPLETE

