


ASSEMBLY INSTRUCTIONS

WF303338

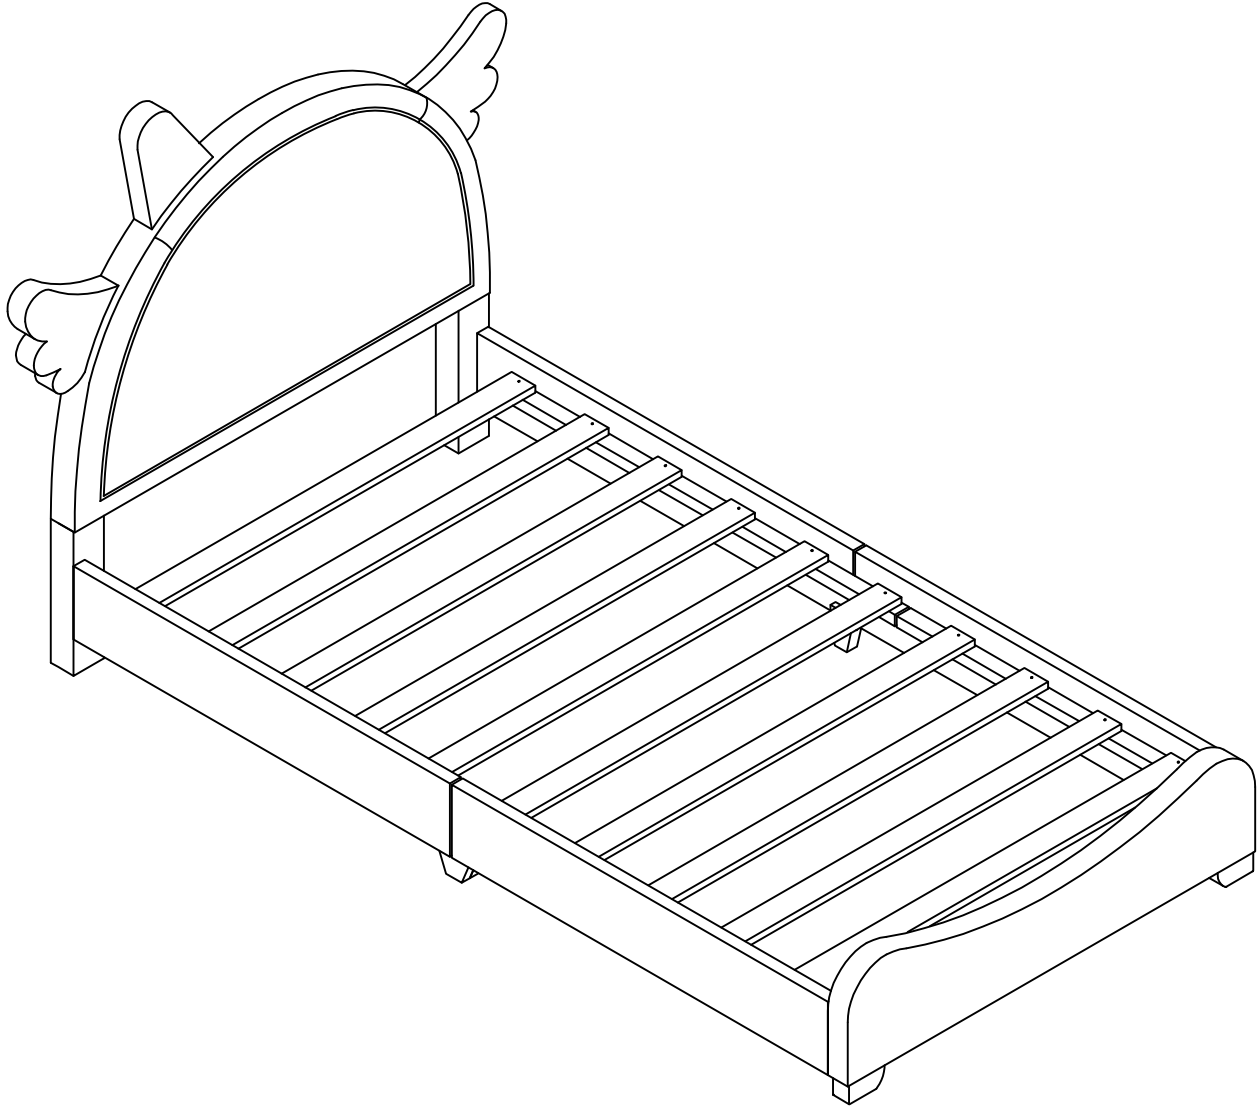

IMPORTANT NOTE


****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**

**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

ASSEMBLY INSTRUCTIONS







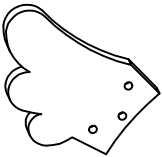
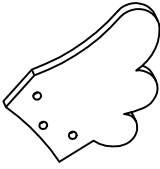
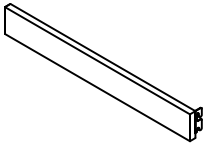
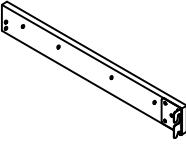

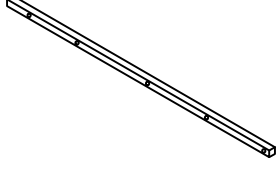
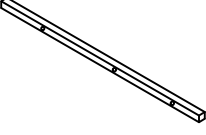

WF303338

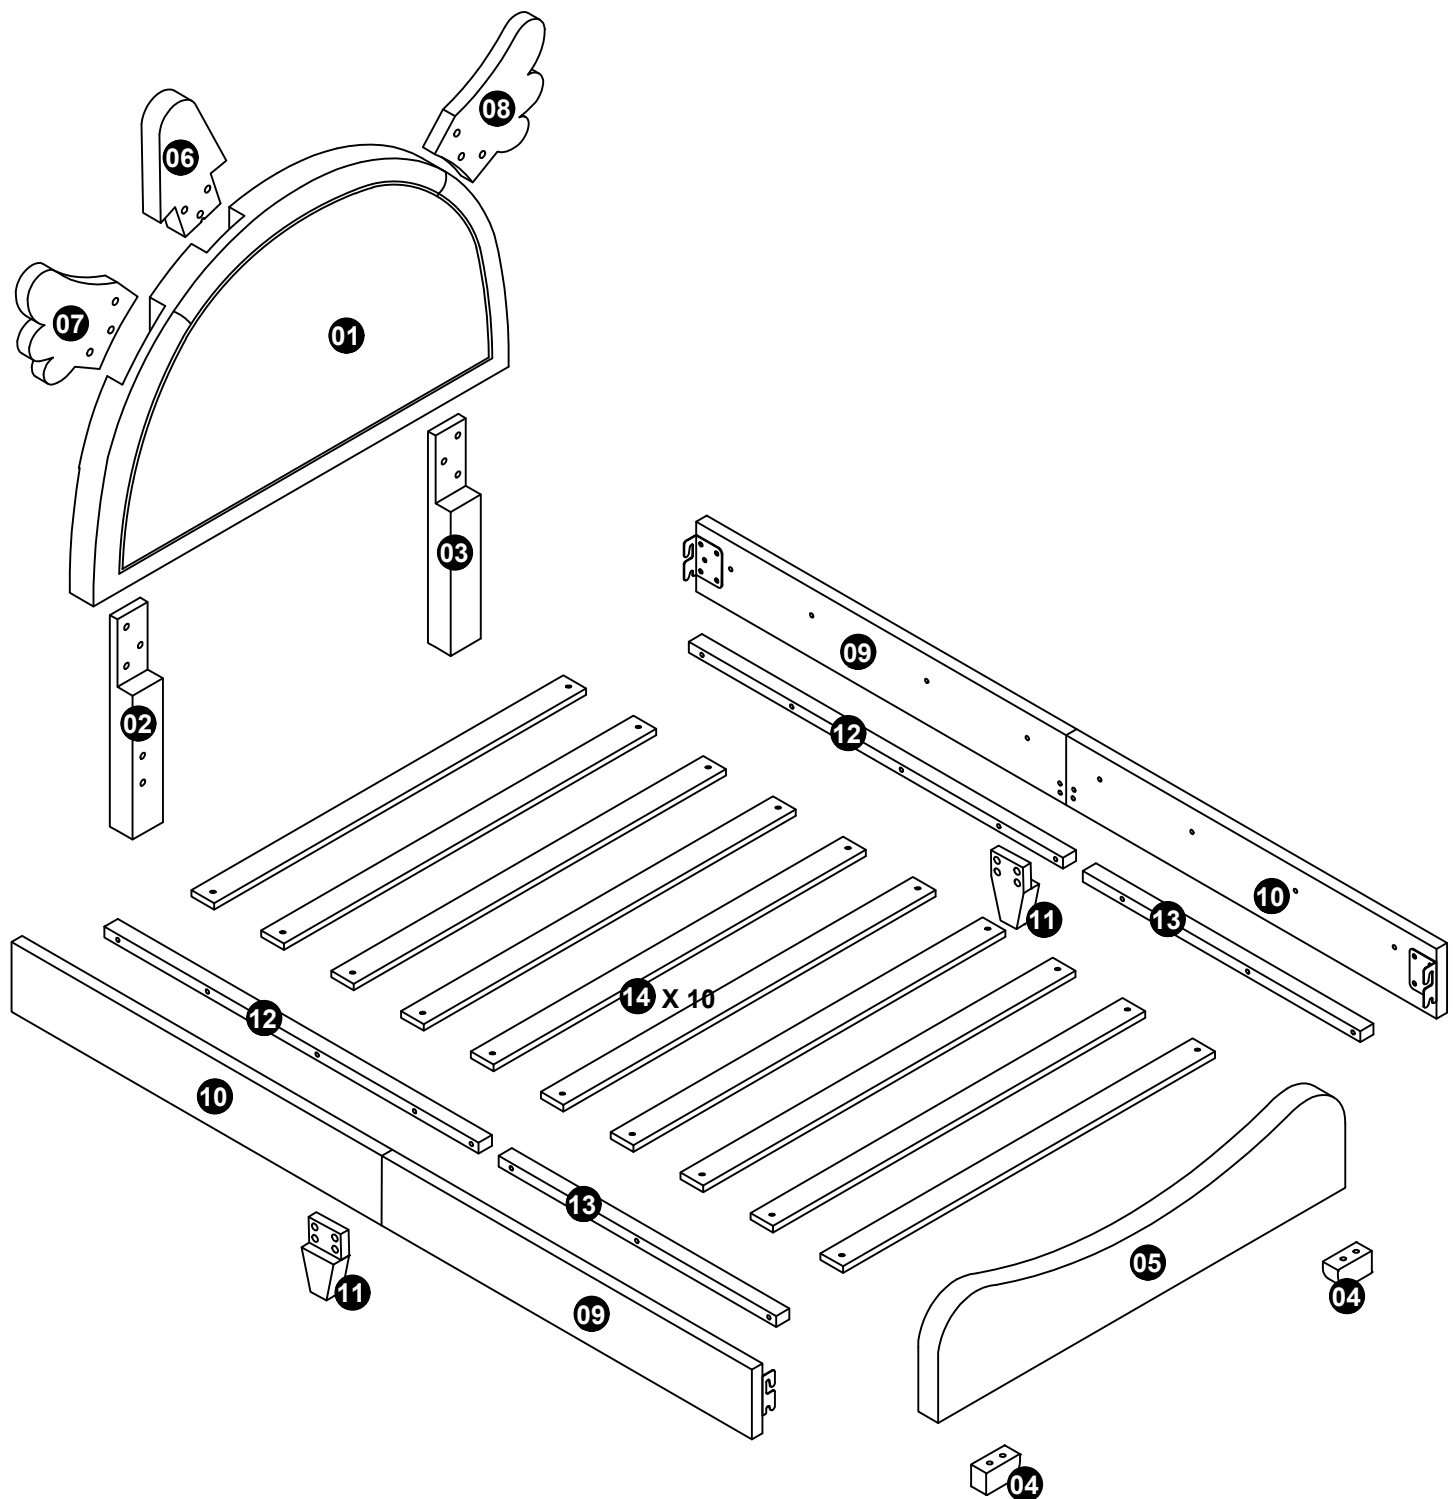

ASSEMBLY INSTRUCTIONS

WF303338

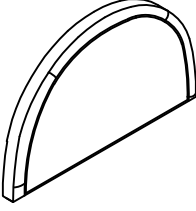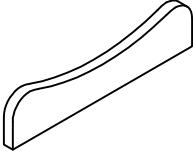








PART LIST BOX 1: 303338

<p>1</p>  <p>Headboard Panel (1 pc)</p>	<p>2</p>  <p>Left Headboard leg(1 pc)</p>	<p>3</p>  <p>Right Headboard Leg(1 pc)</p>
<p>4</p>  <p>Leg (2 pcs)</p>	<p>5</p>  <p>Footboard Panel (1 pc)</p>	<p>6</p>  <p>Unicorn horns (1 pc)</p>
<p>7</p>  <p>Left Headboard Ear (1 pc)</p>	<p>8</p>  <p>Right Headboard Ear (1 pc)</p>	<p>9</p>  <p>Left Lower Rail (2 pcs)</p>
<p>10</p>  <p>Right Lower Rail (2pcs)</p>	<p>11</p>  <p>Rail support legs (2pcs)</p>	<p>12</p>  <p>Bed Support Bar (2 pcs)</p>
<p>13</p>  <p>Bed Support Bar (2 pcs)</p>	<p>14</p>  <p>Roll Slat (10 pcs)</p>	

ASSEMBLY INSTRUCTIONS


WF303338





HARDWARE LIST IN : 303338

A  Short Bolt (8pcs) (Ø 5/16 "X25mm)	B  Long Bolt (9 pcs) (Ø 5/16 "X32mm)	C  Long Bolt (14 pcs) (Ø 5/16 "X38mm)
D  Long Bolt (16pcs) (Ø 5/16 "X45mm)	E  Long Bolt (2pcs) (Ø 5/16 "X50mm)	F  Allen Wrench (1 pc) (M4x75mm x32mm)
G  Flat Washer (49 pcs) (Ø 5/16 "-RBW)	H  Spring Washer (49 pcs) (Ø 5/16 "-RBW)	I  Flat Head Screw (20 pcs) (m4x30mm-RBW)

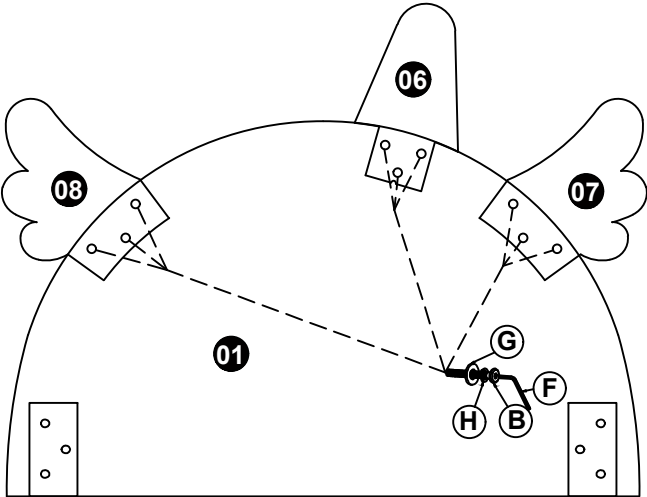
ASSEMBLY INSTRUCTIONS





STEP 1



B	Bolt (Ø 5/16 "X32mm)		9pcs	G	Flat Washer (Ø 5/16 "-RBW)		9pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		9pcs

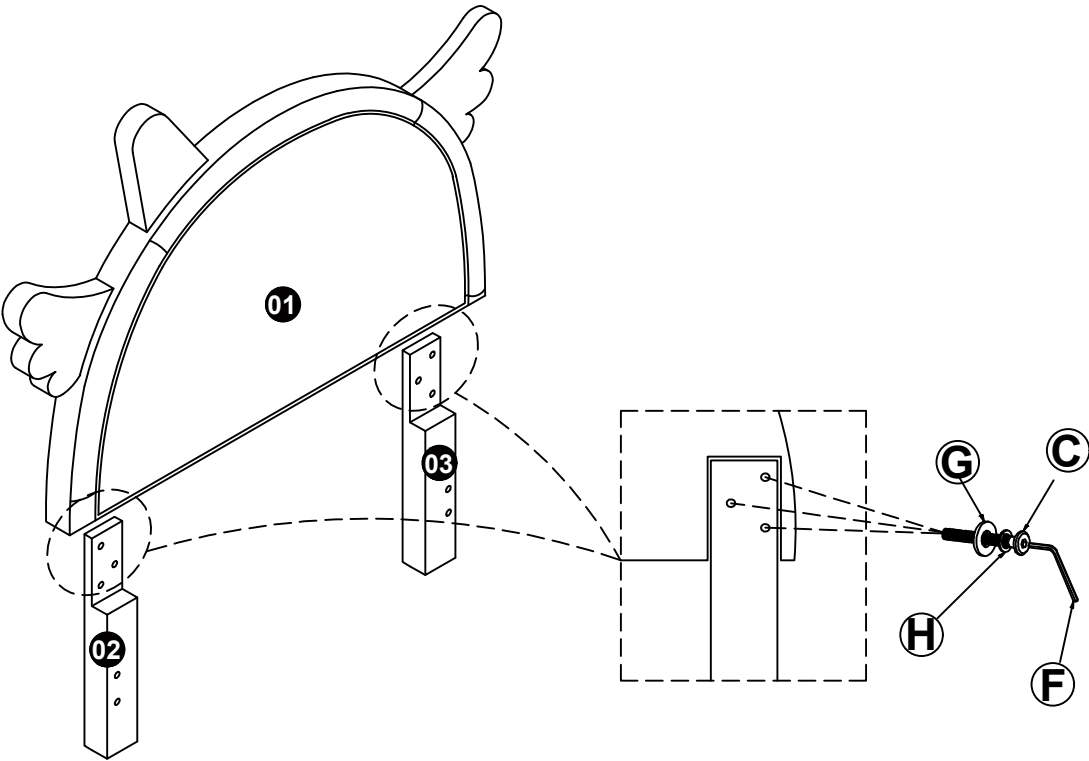
STEP 2







C	Bolt (Ø 5/16 "X38mm)		6pcs	G		(Ø 5/16 "-RBW)	6pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H		(Ø 5/16 "-RBW)	6pcs

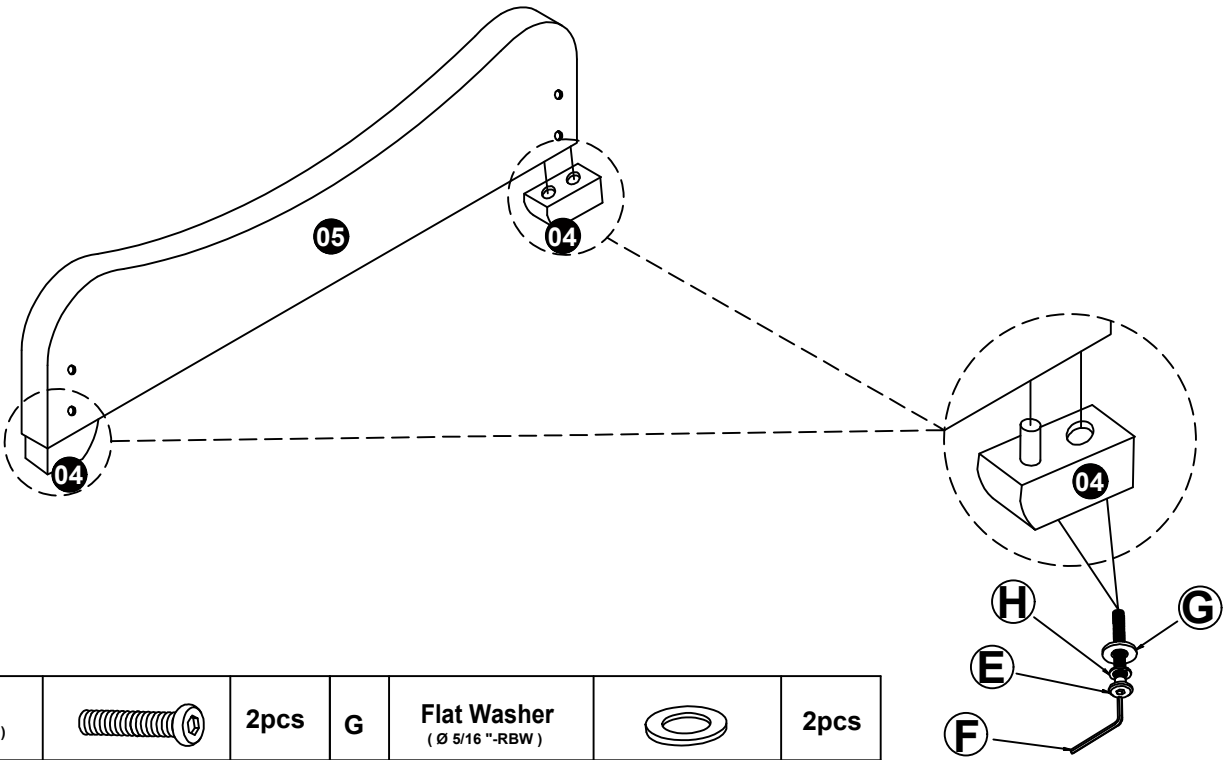
ASSEMBLY INSTRUCTIONS





STEP 3

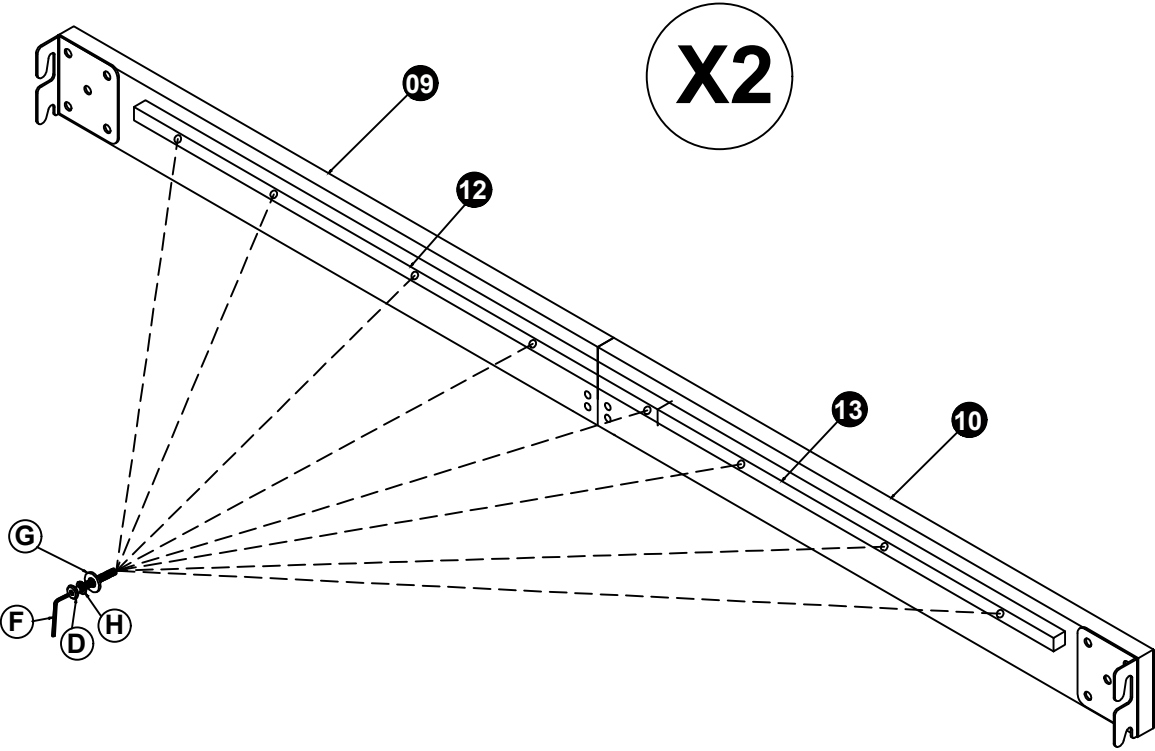

E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs


STEP 4







D	Bolt (Ø 5/16 "X45mm)		16pcs	G	Flat Washer (Ø 5/16 "-RBW)		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		16pcs

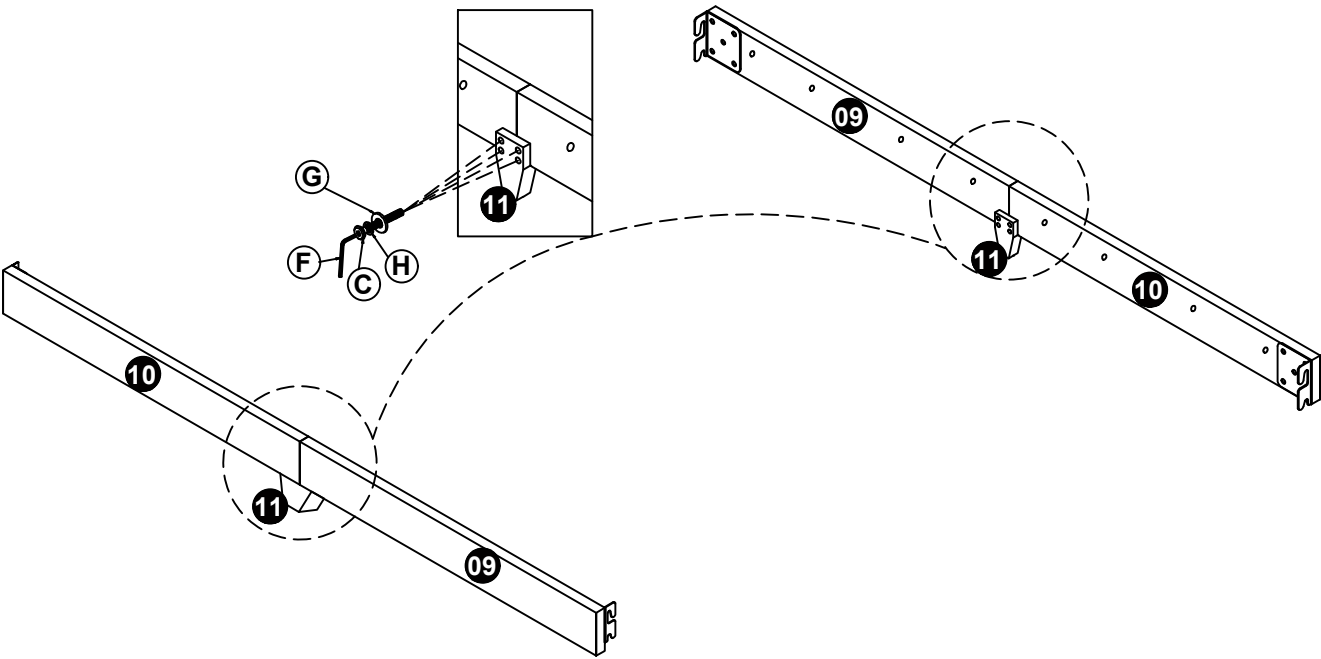
ASSEMBLY INSTRUCTIONS





STEP 5

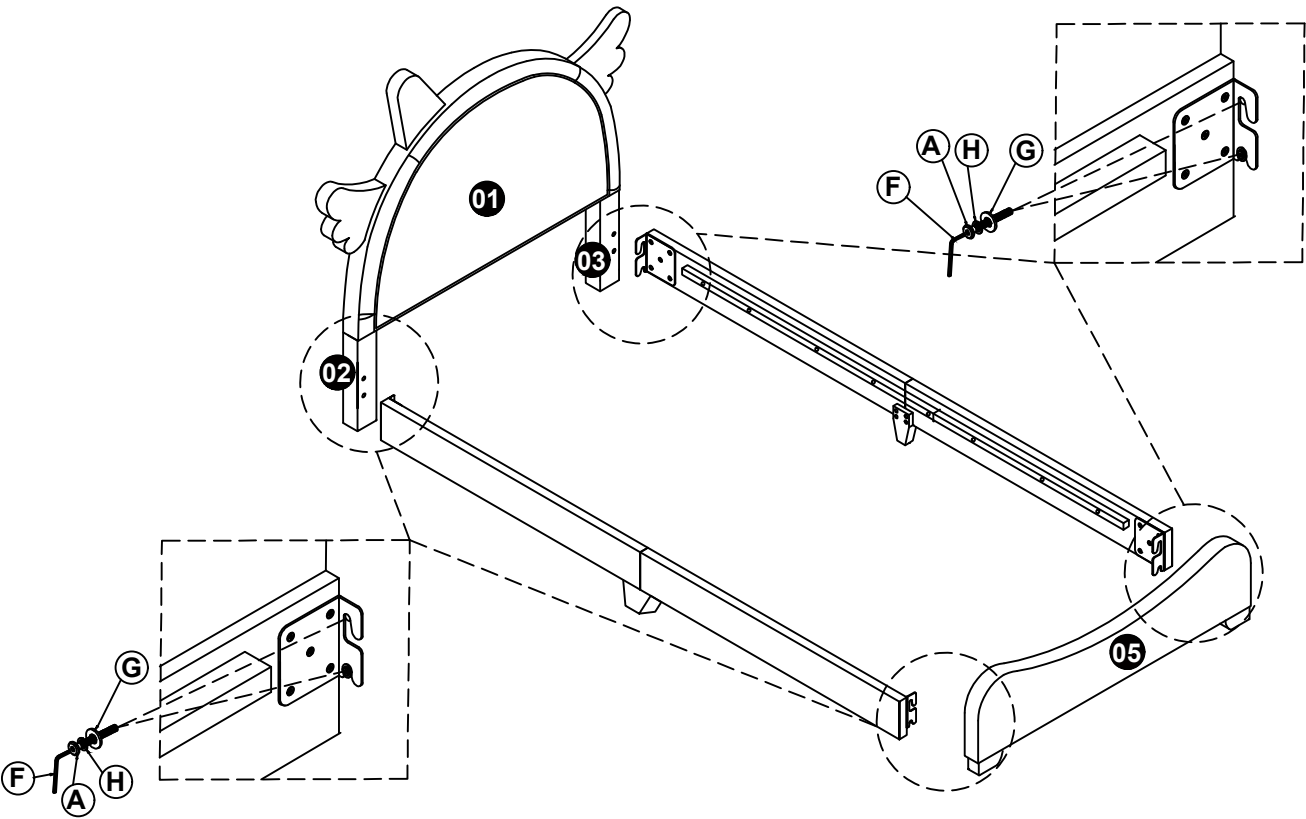

C	Bolt (Ø 5/16 "X38mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs


STEP 6



A	Bolt (Ø 5/16 "X25mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs

ASSEMBLY INSTRUCTIONS

STEP 7

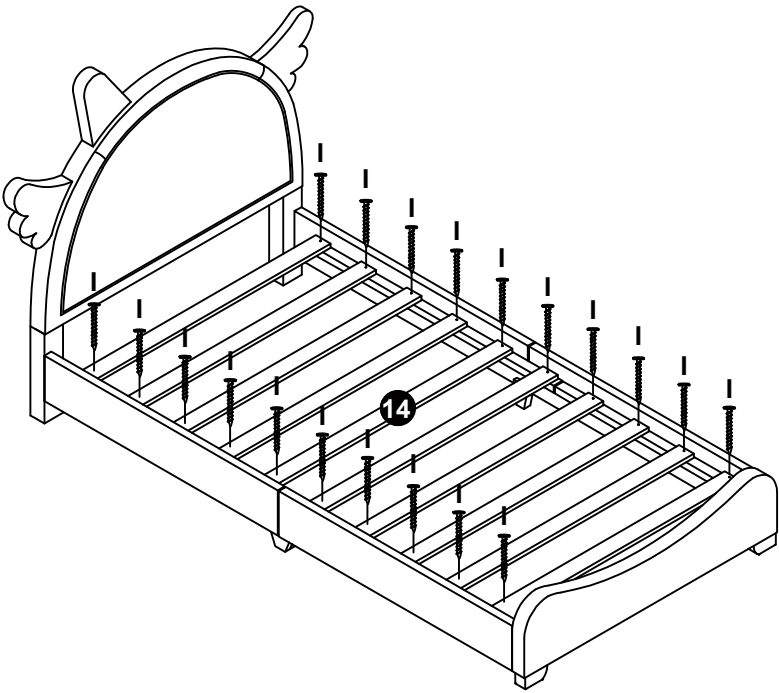

I		(m4x30mm-RBW)	20pcs
---	---	----------------	-------

STEP 8 COMPLETE

