


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

Before You Start


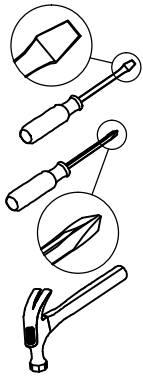


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

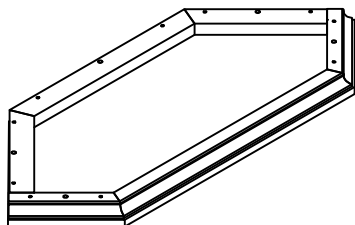


Ⓐ
TOP
Qty:1

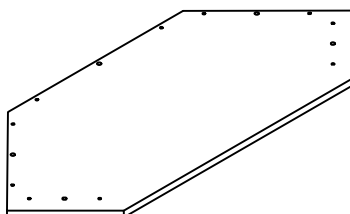


Ⓑ
INTERMEDIATE PLATE
Qty:1

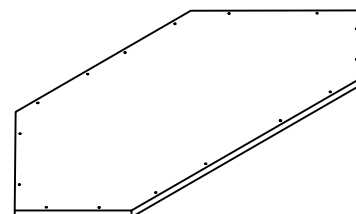


Ⓒ
BOTTOM PLATE
Qty:1

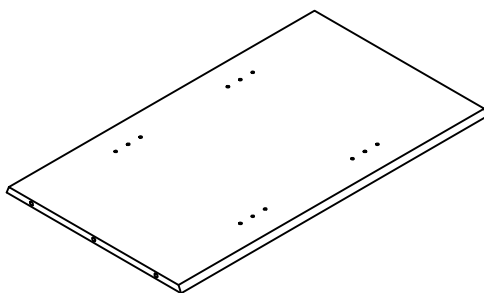


Ⓓ
POSTNOTUM
Qty:2

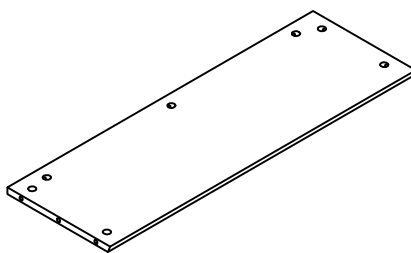


Ⓔ
LEFT POSTERIOR LATERAL PLATE
Qty:2

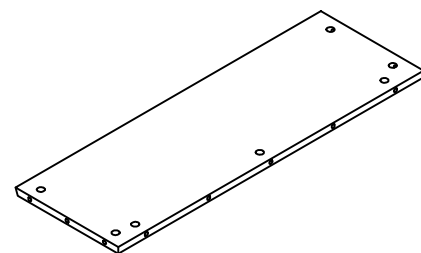

Ⓕ
RIGHT POSTERIOR LATERAL PLATE
Qty:2

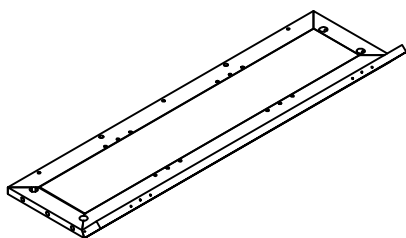

Ⓖ
LEFT SIDE PLATE
Qty:2

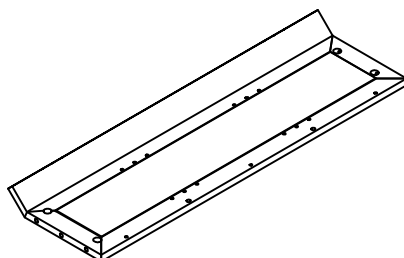


Ⓗ
RIGHT SIDE PLATE
Qty:2



Ⓘ
BACKING PLATE
Qty:1

Board Identification


Not actual size

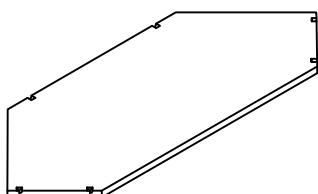

ⓐ

MOVABLE LAMINATE


Qty:4

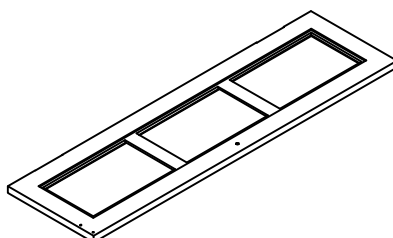

ⓑ

LEFT DOOR PANEL


Qty:2

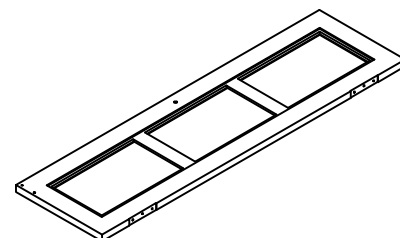

ⓒ

RIGHT DOOR PANEL


Qty:2

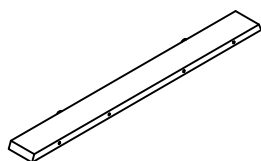

ⓓ

FRONT BRACE


Qty:1

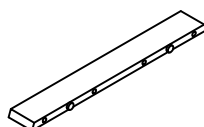

ⓔ

BACK BRACE


Qty:1



ⓕ

LEFT FRONT SIDE BRACE


Qty:1



ⓖ

RIGHT REAR BRACE


Qty:1



ⓗ

LEFT REAR BRACE

Qty:1




ⓘ


RIGHT FRONT SIDE BRACE

Qty:1


Part List

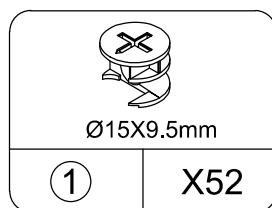


CAM LOCK
spare:3

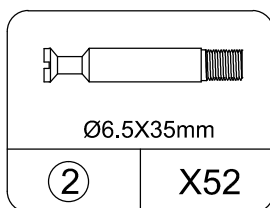


CAM BOLT
spare:3

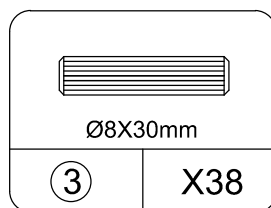


WOOD DOWEL
spare:3

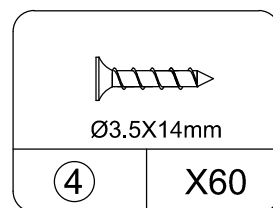


WOOD DOWEL
spare:3

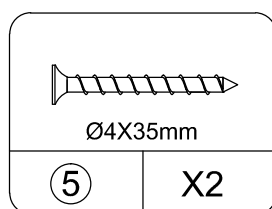


SCREW

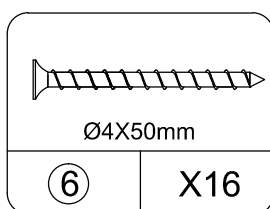


SCREW
spare:1

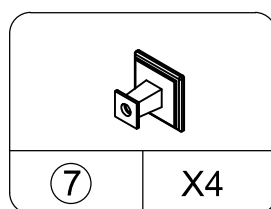


SCREW

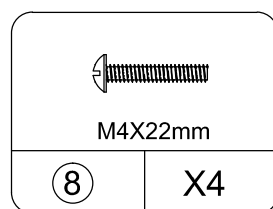


SCREW

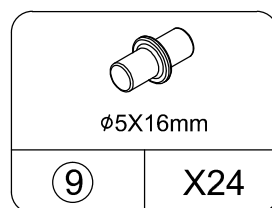


SHELF SUPPORT
spare:1

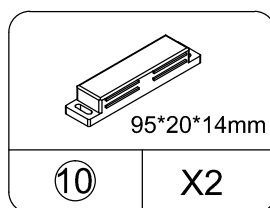


MAGNETIC BUMP

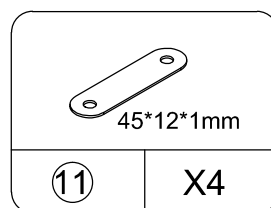

PLECES OF IRON

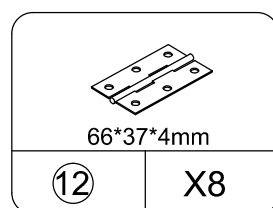


PERFECT STICKERS

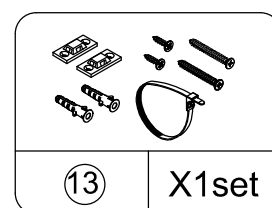

TIPPING RESTRAINT
HARDWARE KIT


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.













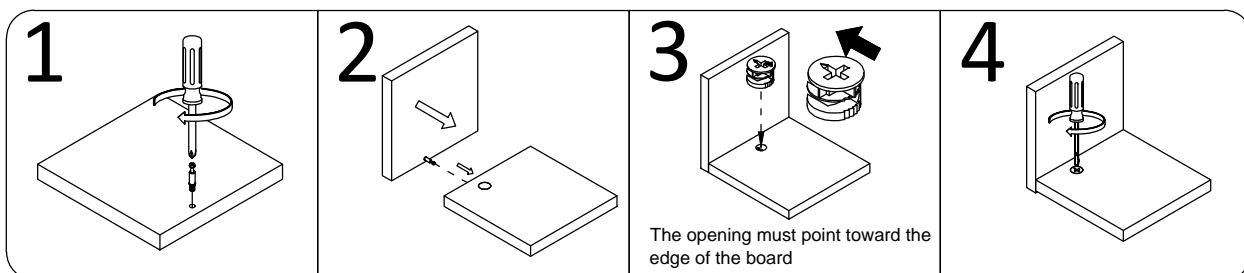


Board Identification







Not actual size

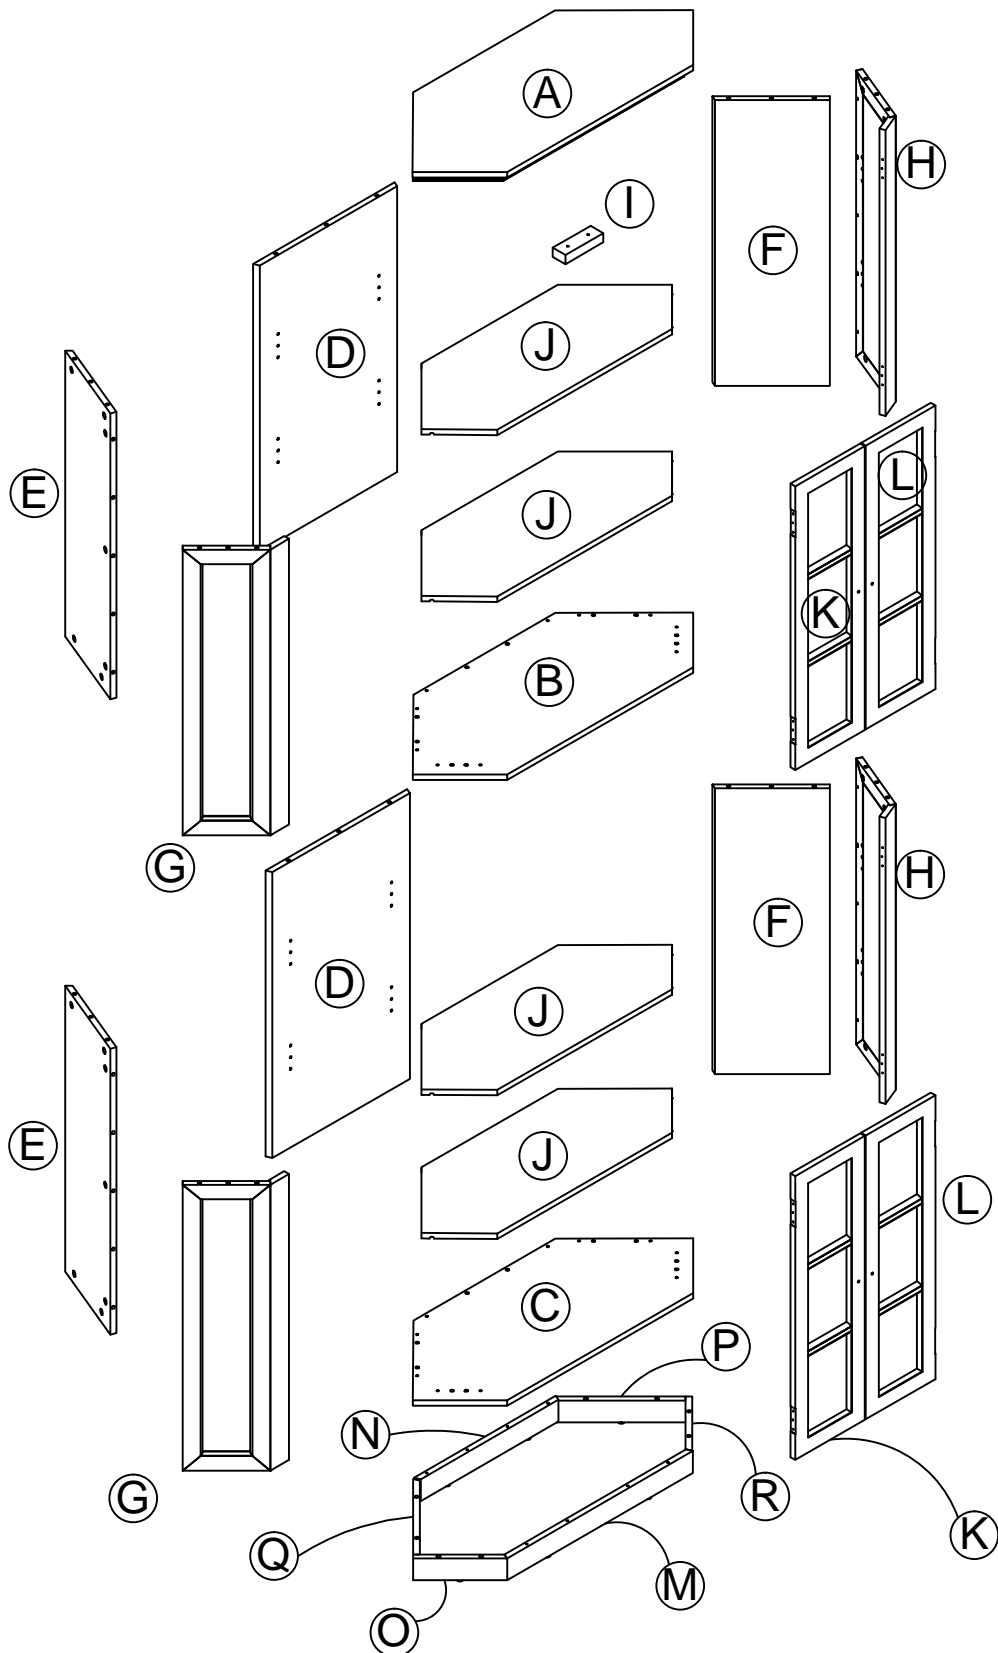



STEP1

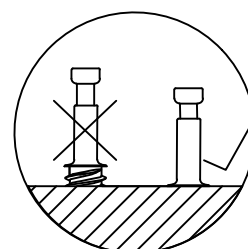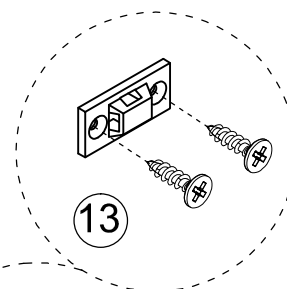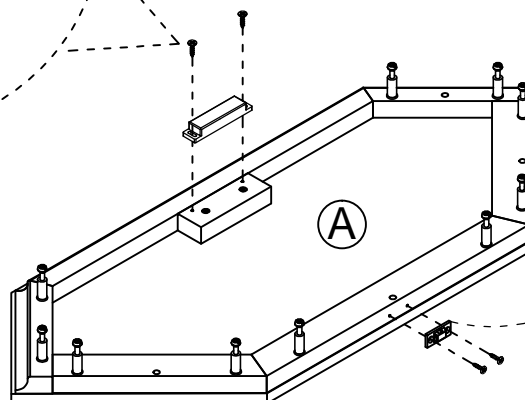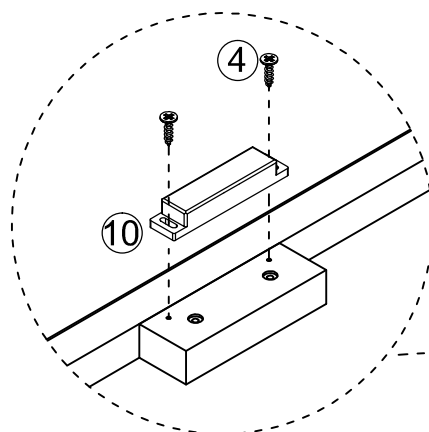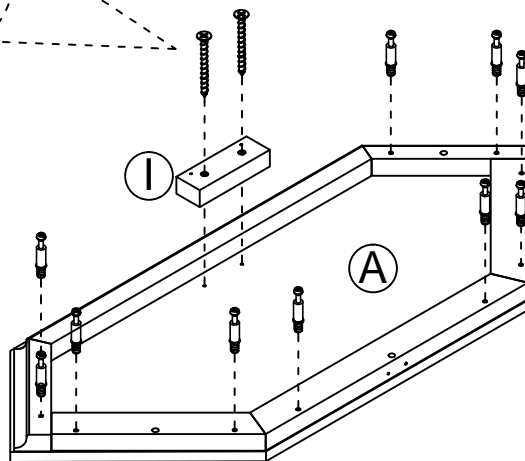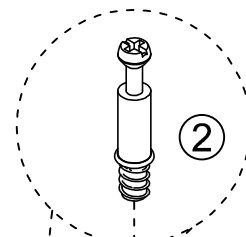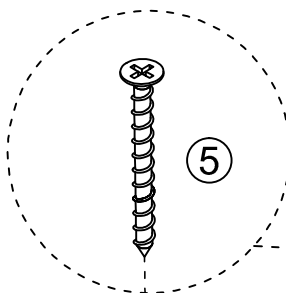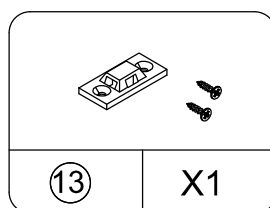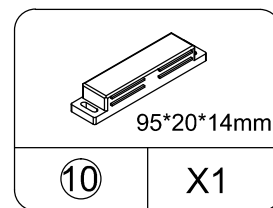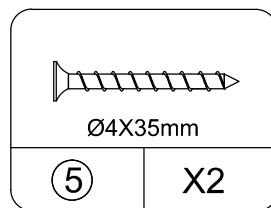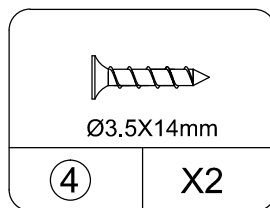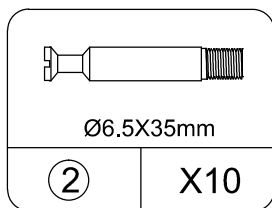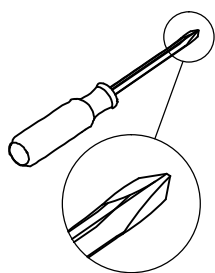






STEP2

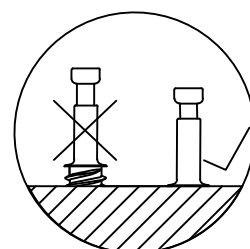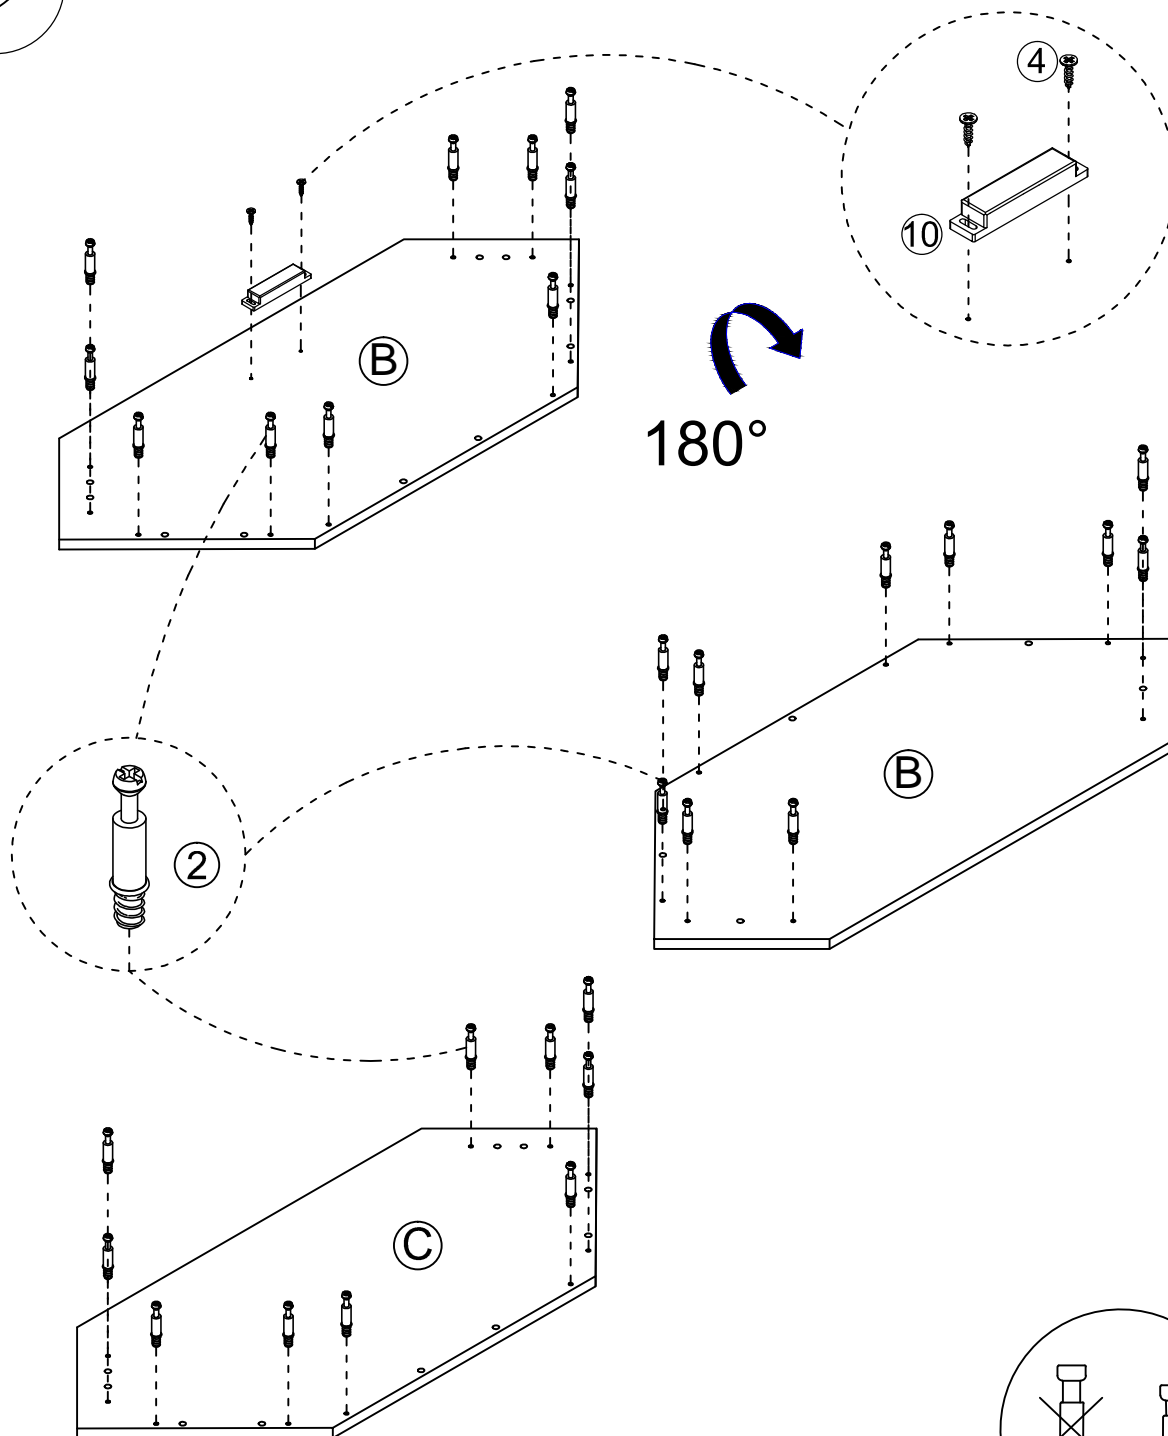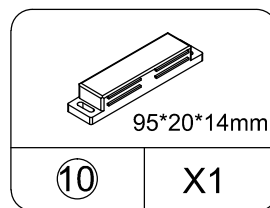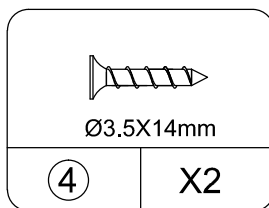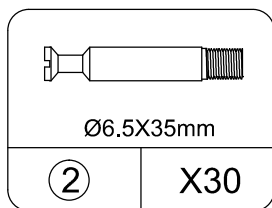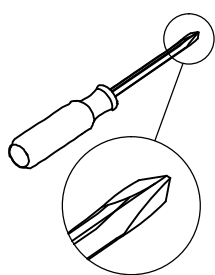




STEP3

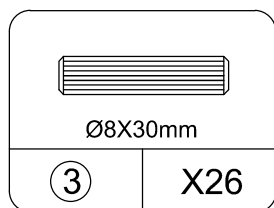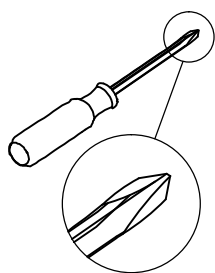






X2

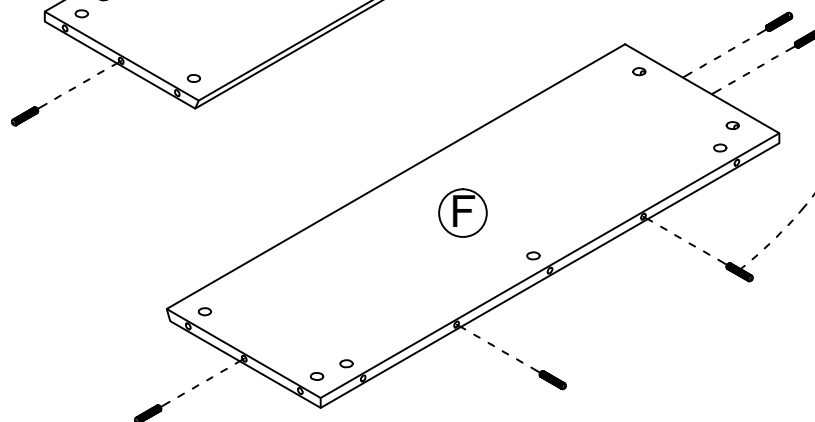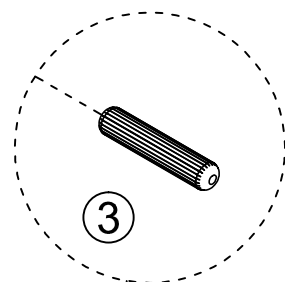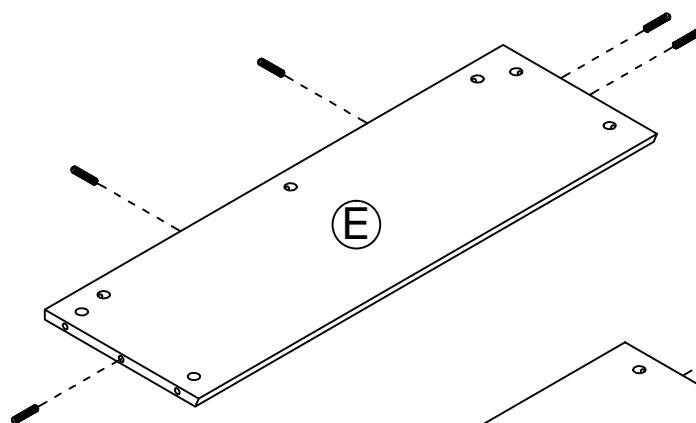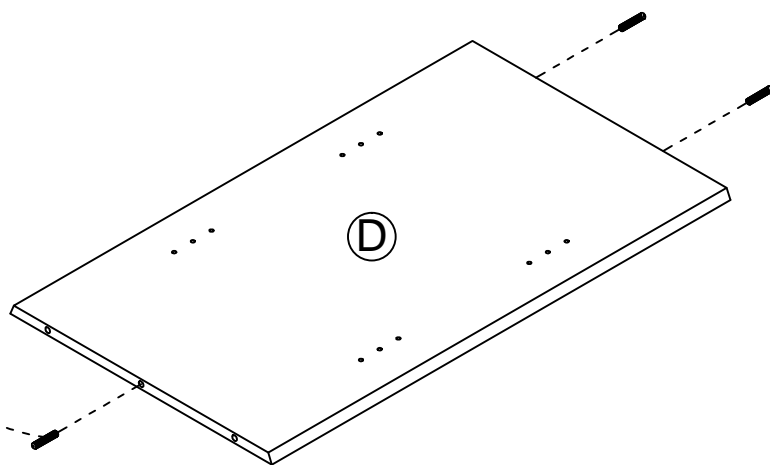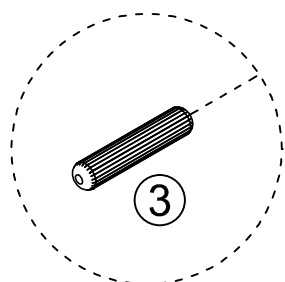


STEP4

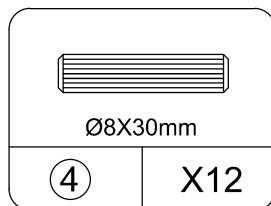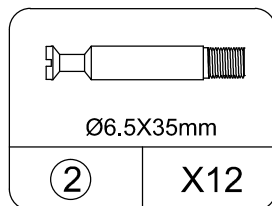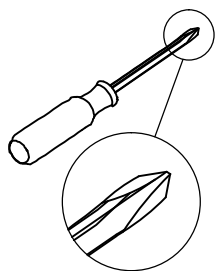


X2

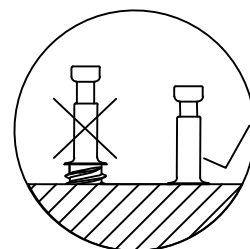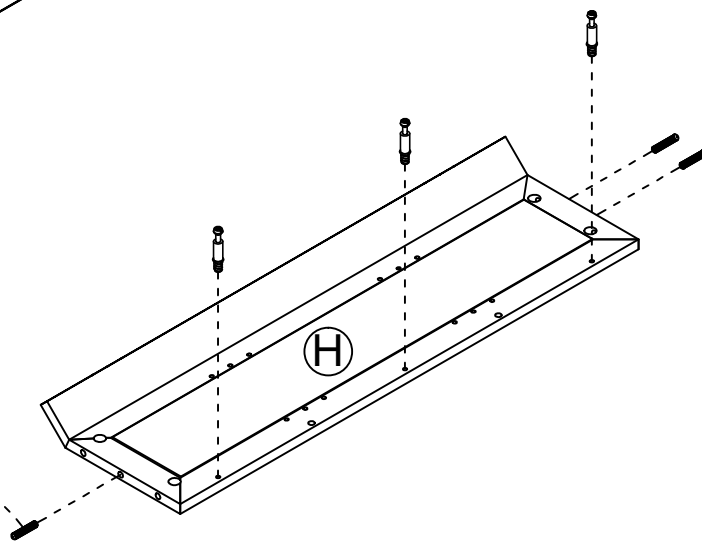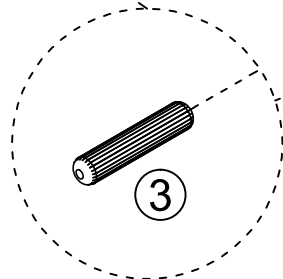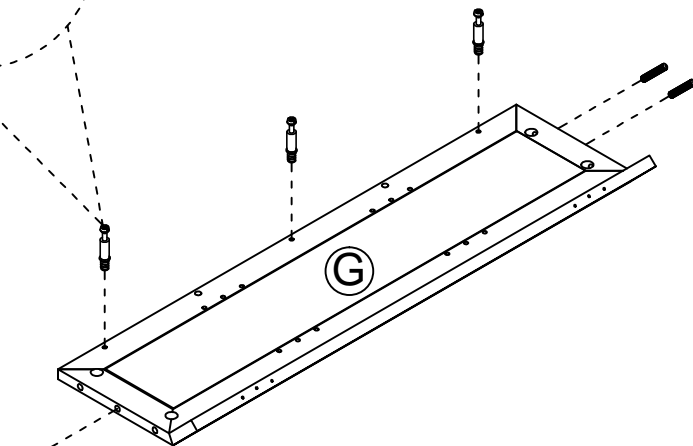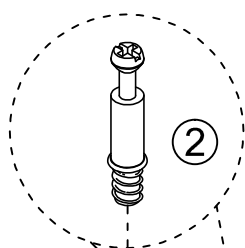


A line drawing of a screwdriver. A circular callout provides a magnified view of the tip, showing a sharp, double-fluted design.

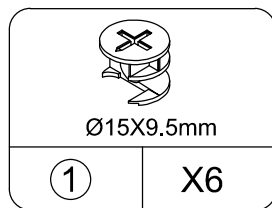




X2

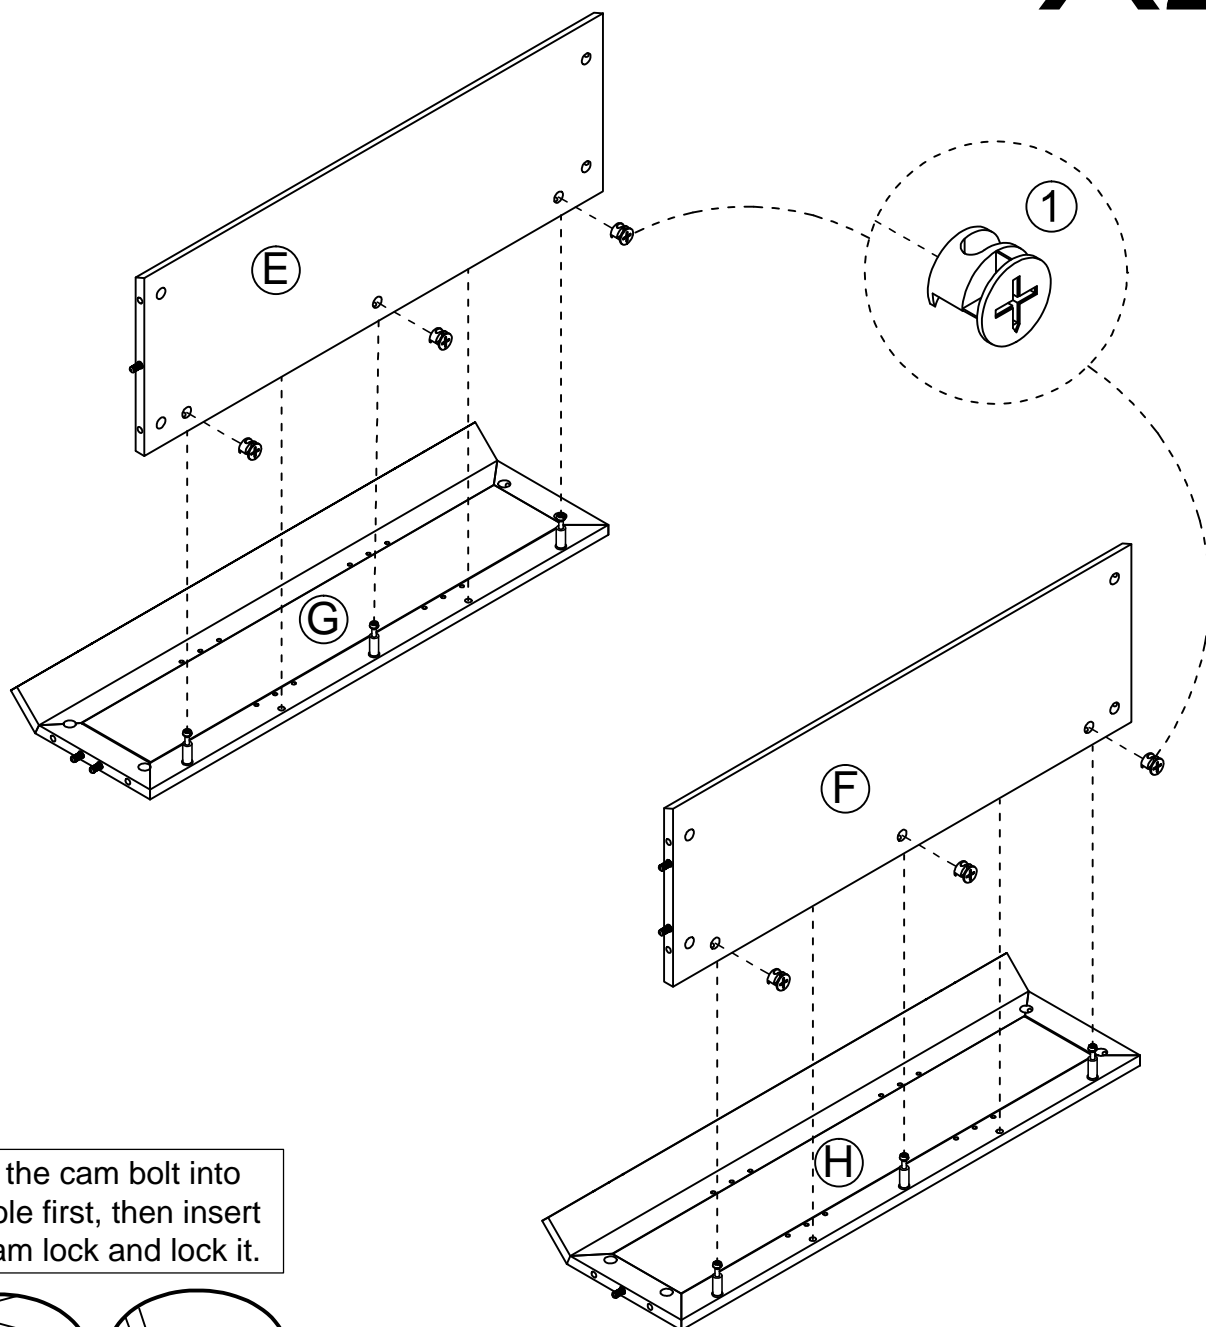


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

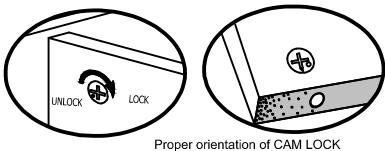





STEP6

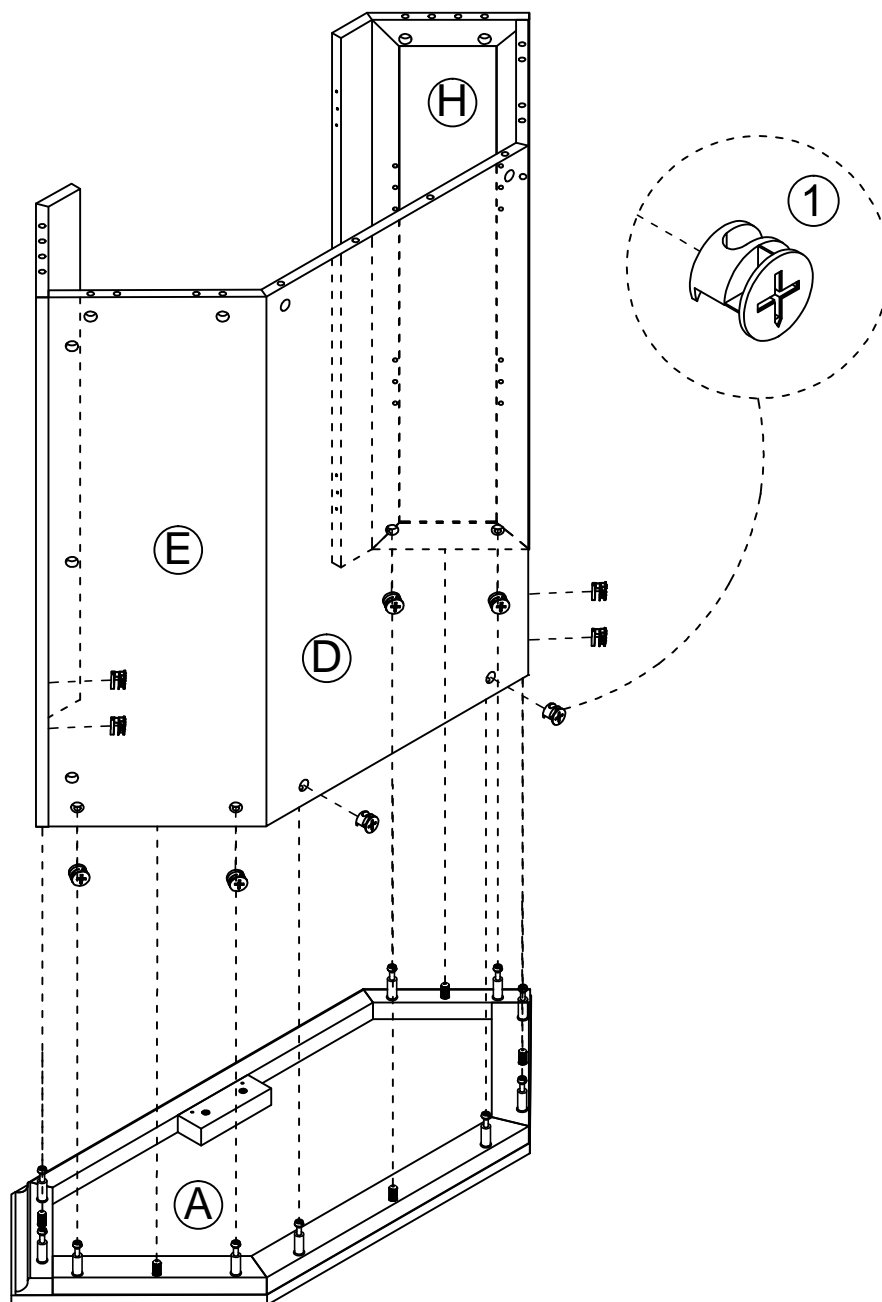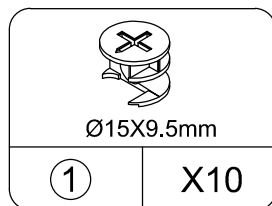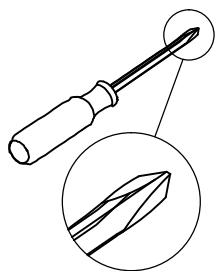


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

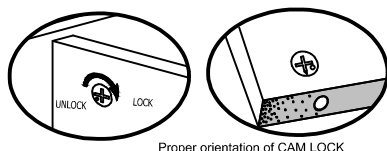

STEP7

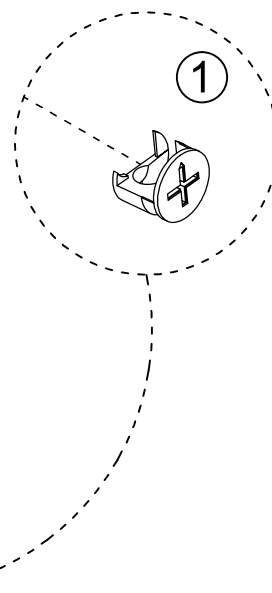
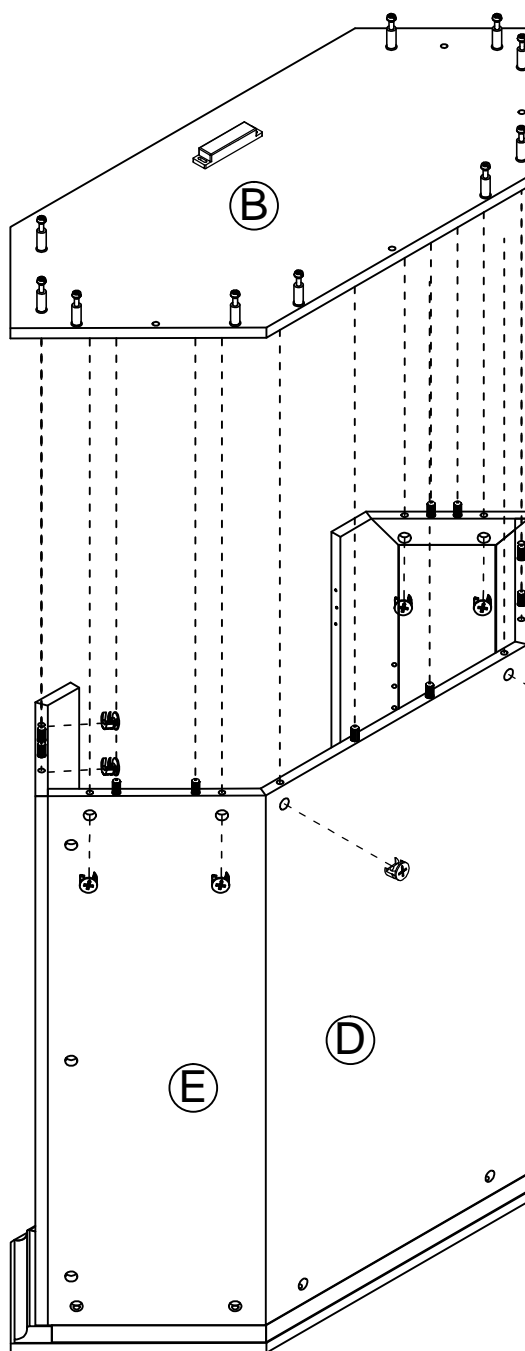
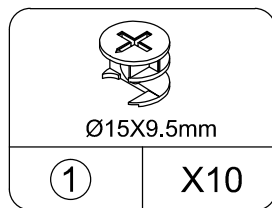
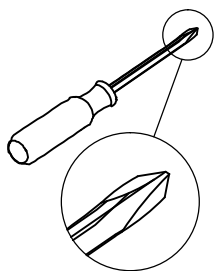


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



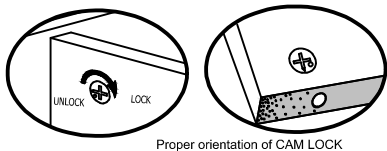


Proper orientation of CAM LOCK


STEP8

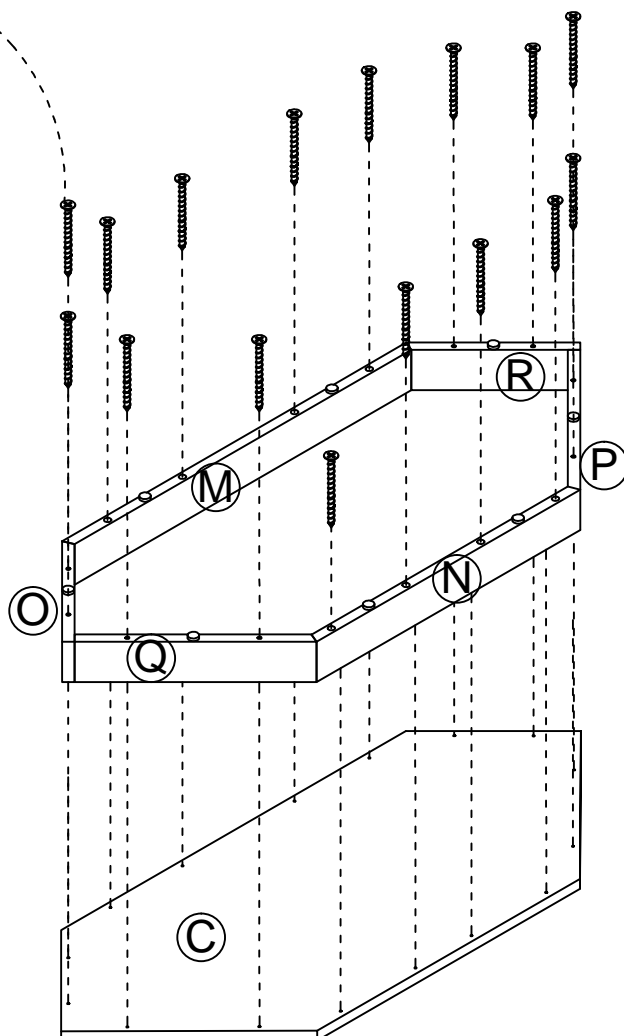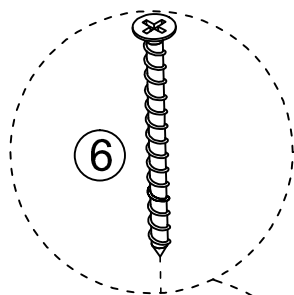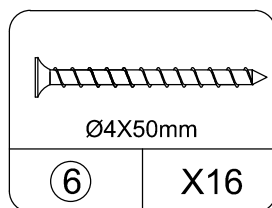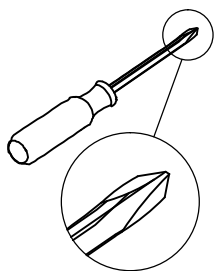

STEP9


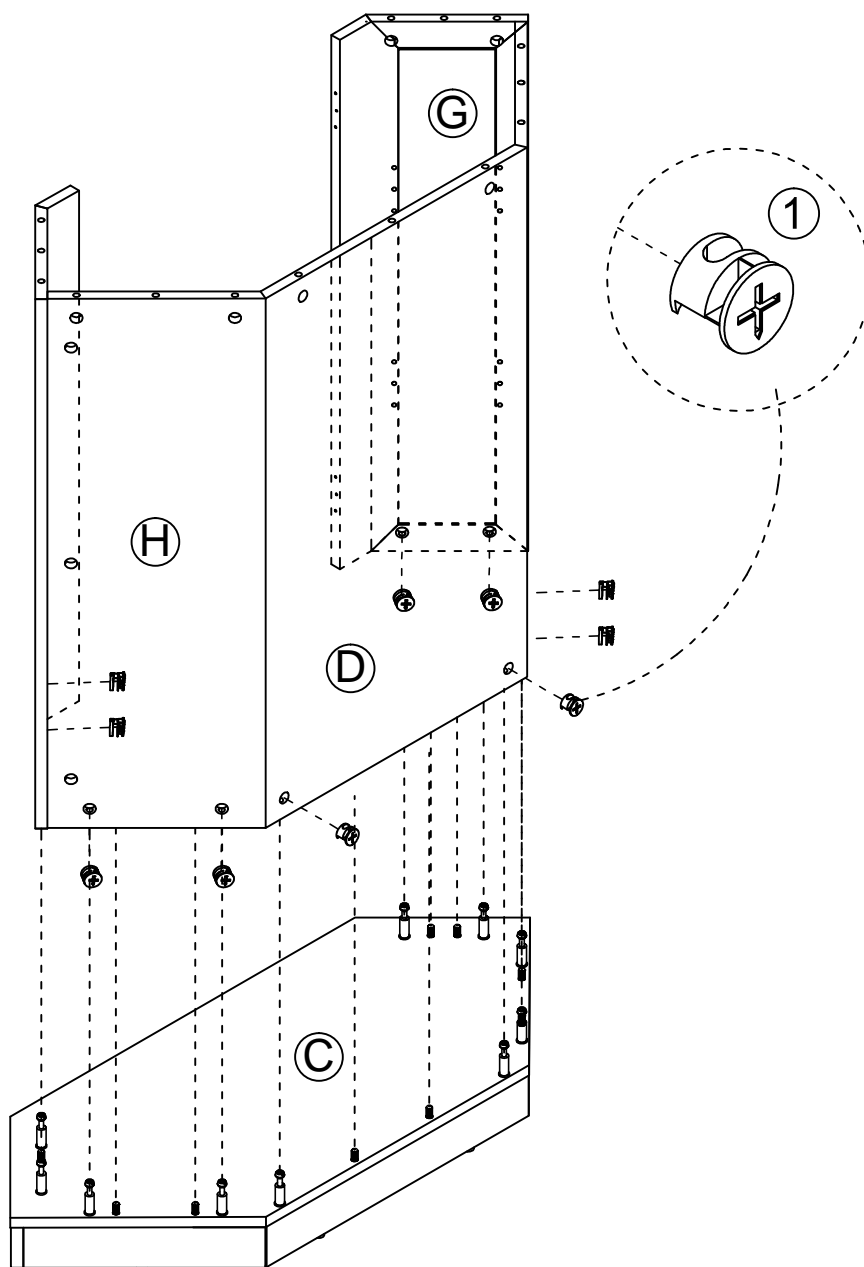
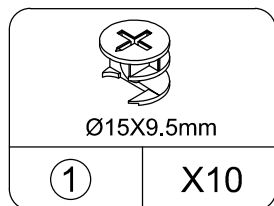
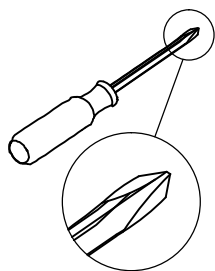


Insert the cam bolt into the hole first, then insert the cam lock and lock it.





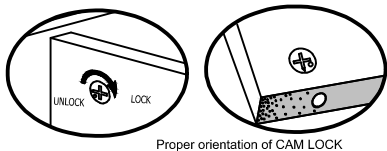


Proper orientation of CAM LOCK


STEP10

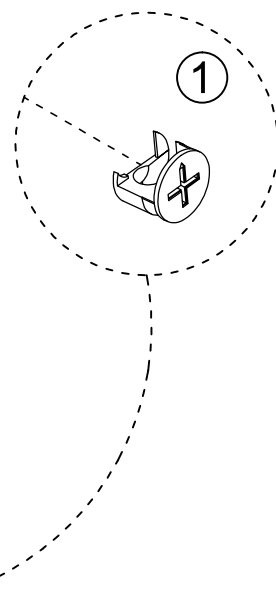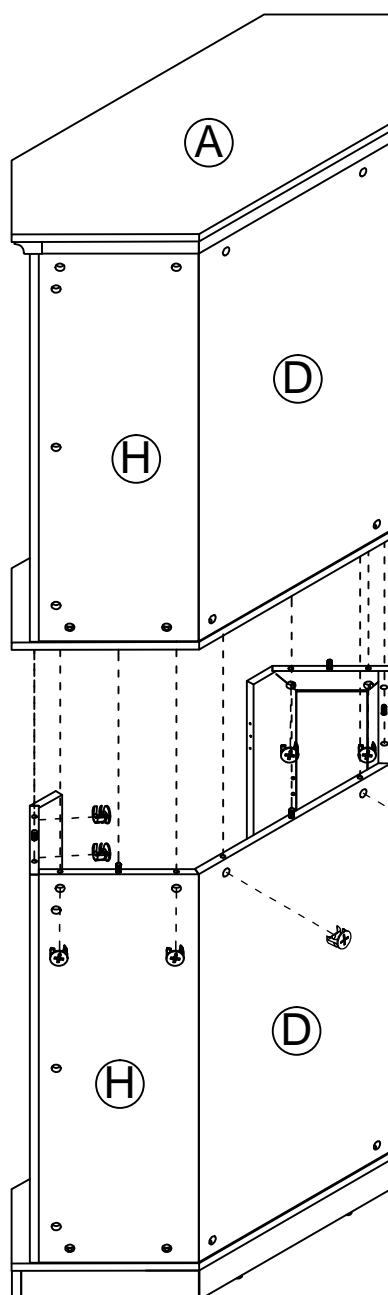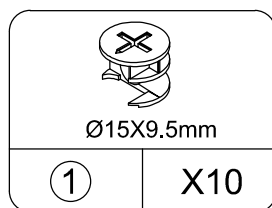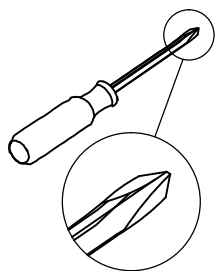

STEP11

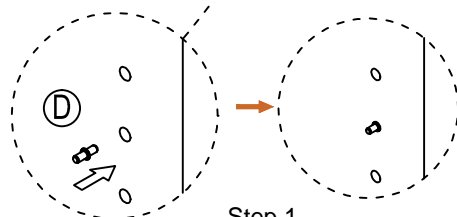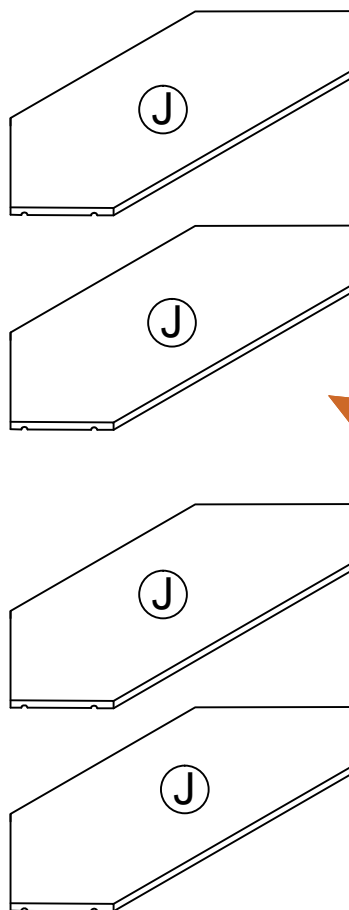
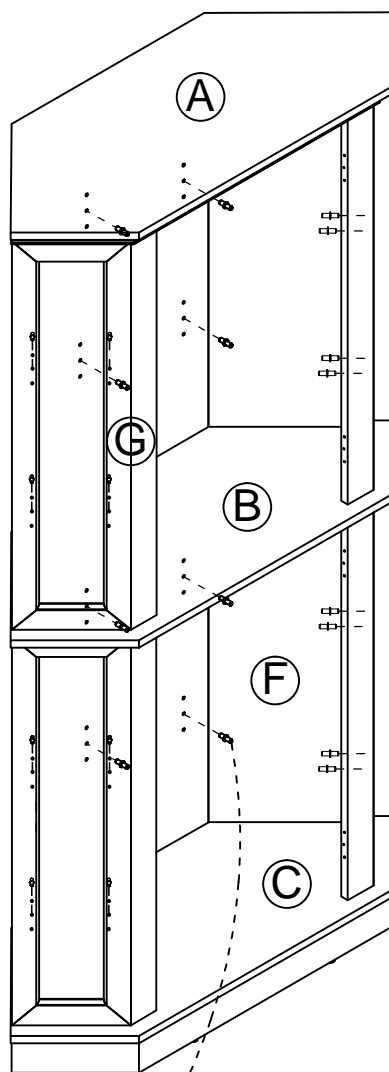
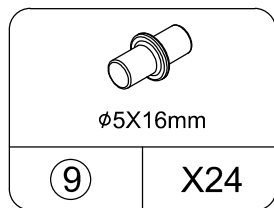
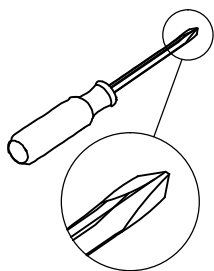


Step 1
 Select the desired height
 and put it in


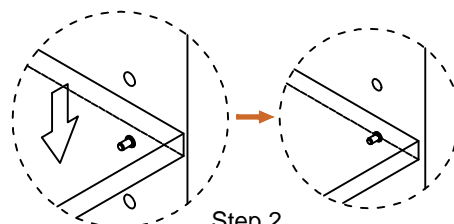


Step 2
 Aim the board gaps down


STEP12

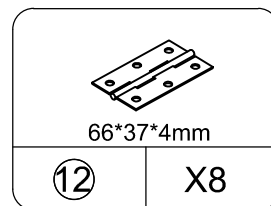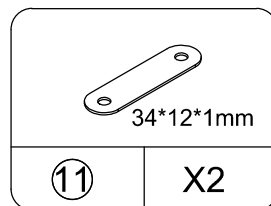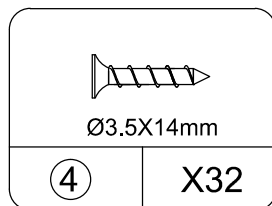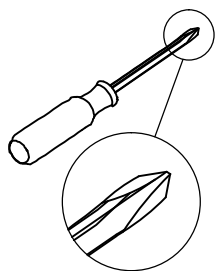

X2




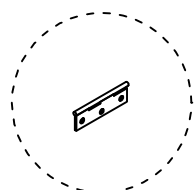
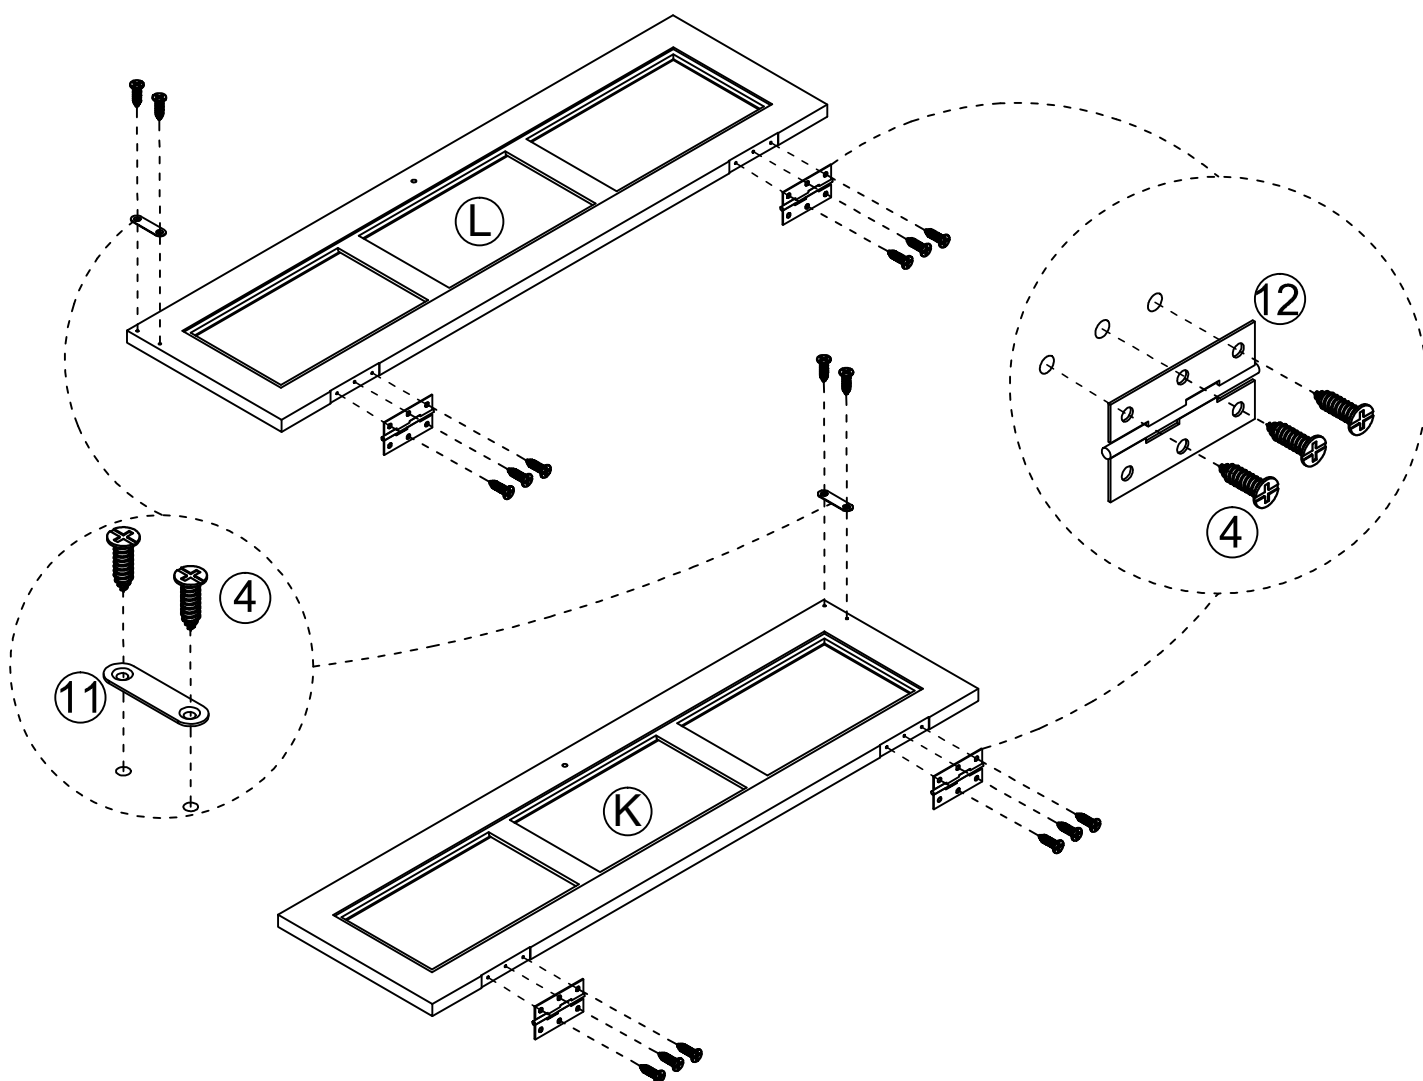


Step 1
Place as shown in the picture





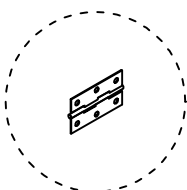


Step 2
Open hinge for installation


STEP13

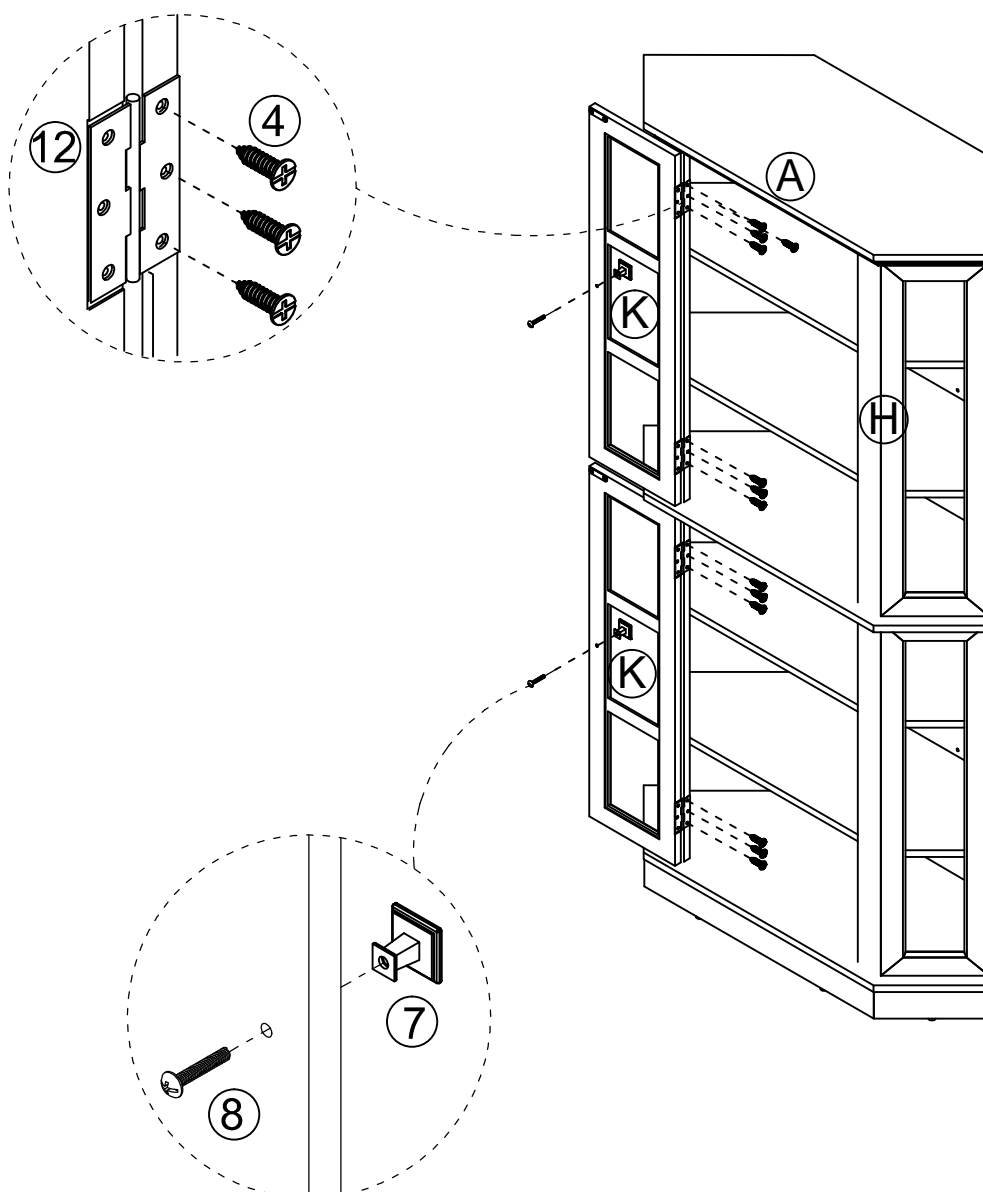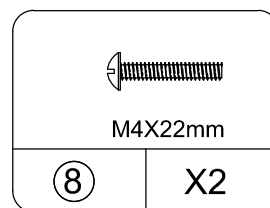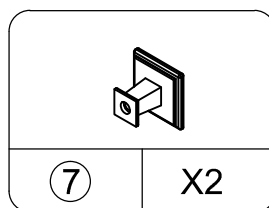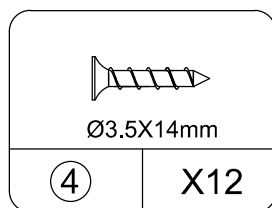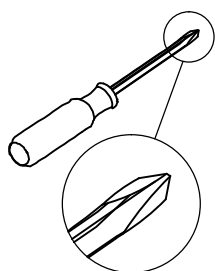

STEP14

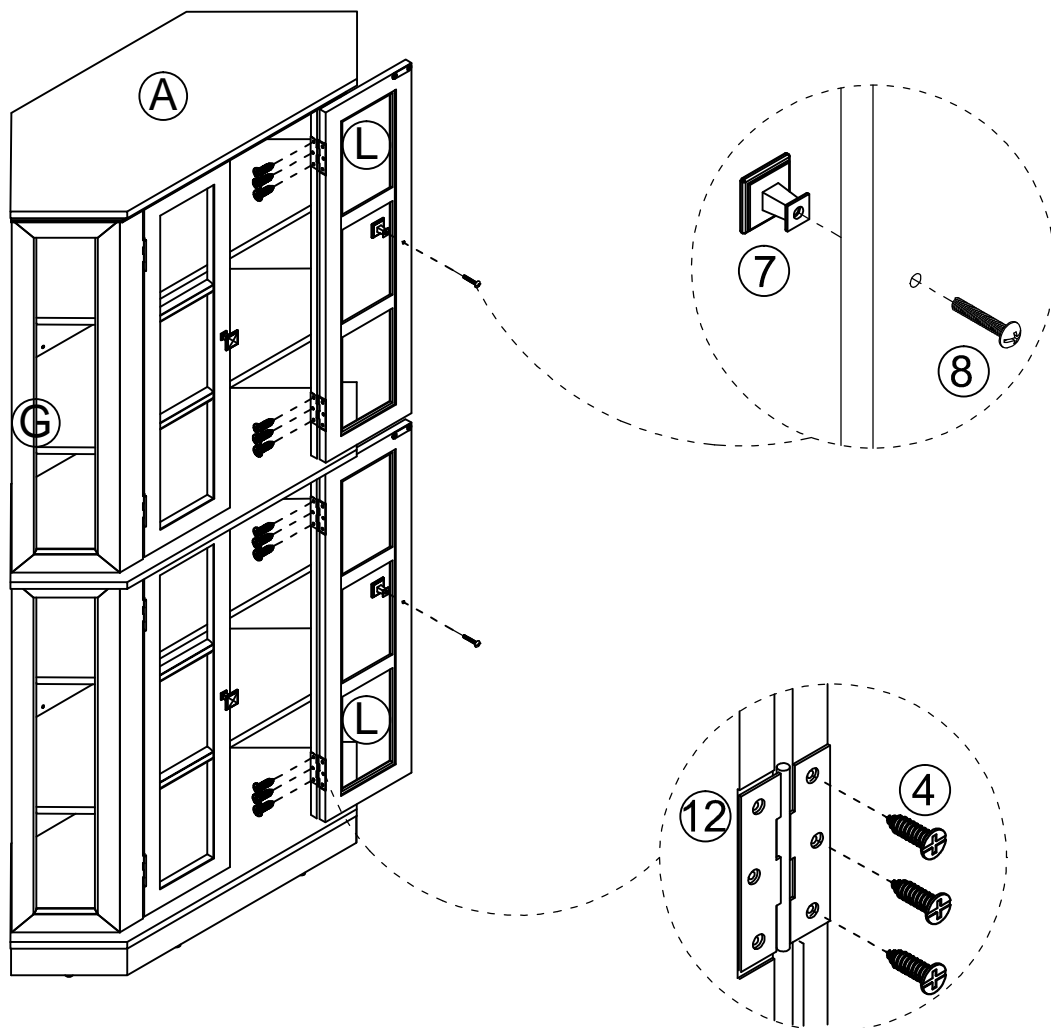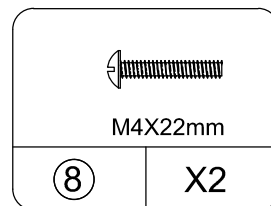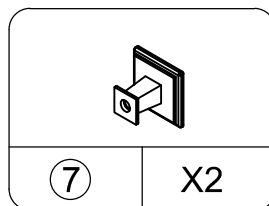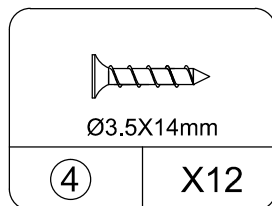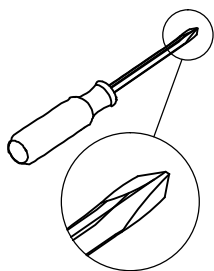


STEP15

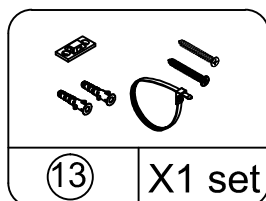


NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


Install the tipping restraint hardware

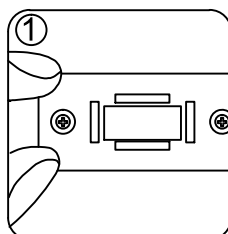


1. make mark on the wall

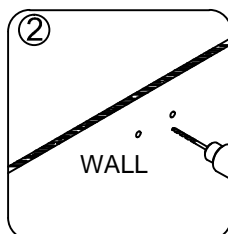


2. drill two Ø6 holes on the wall

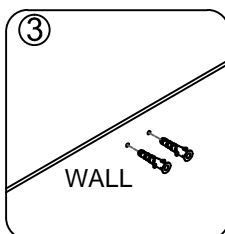

3. put two anchors in the holes

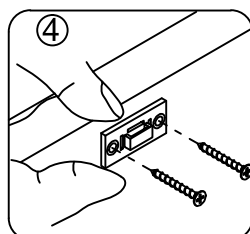

4. fix the device on the wall by the long screws

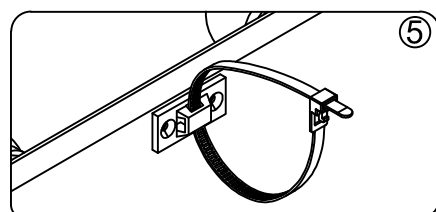

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

